
 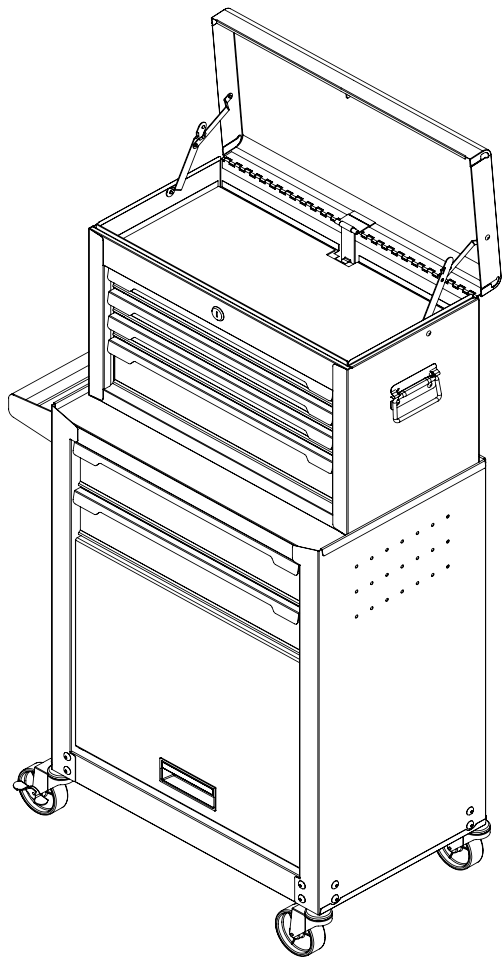
 
 
 
 



6-Drawer Chest & Cabinet



Parts	No.	Qty.
	1	1
	2	1
	3	4
	4	4
	5	4
	6	6
	7	2
	8	1
	9	16
	10	16


Remove Chest

- 1.Place cabinet on a level surface.
 - 2.Remove the screws holding the chest inside the cabinet
 - 3.Slowly take out the chest from the cabinet
- The removed screws are no longer used

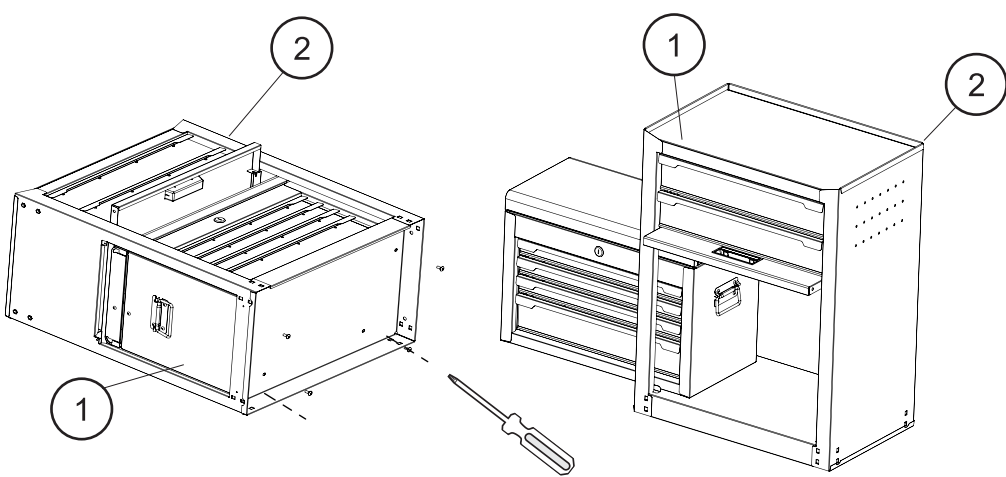


Assemble Side Panel

Assemble the side panel with 4 tapping bolts.

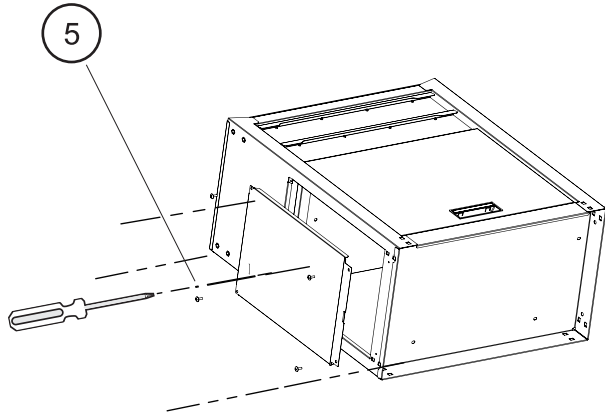


Handle Assembly

Attach the side handle to the cabinet with 4 screws.

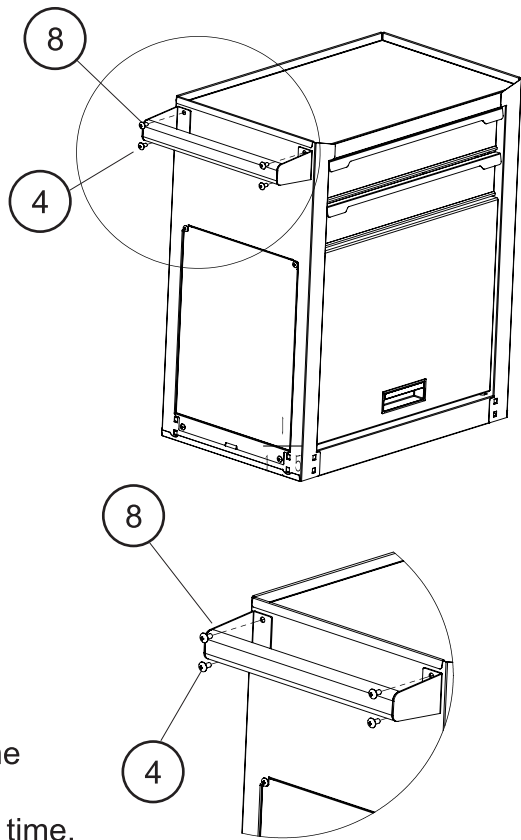

Caster Assembly


Attach the casters to the bottom of the cabinet with 16 square neck screws and 16 nuts. 2 casters with brakes should be on the left side with the handle.

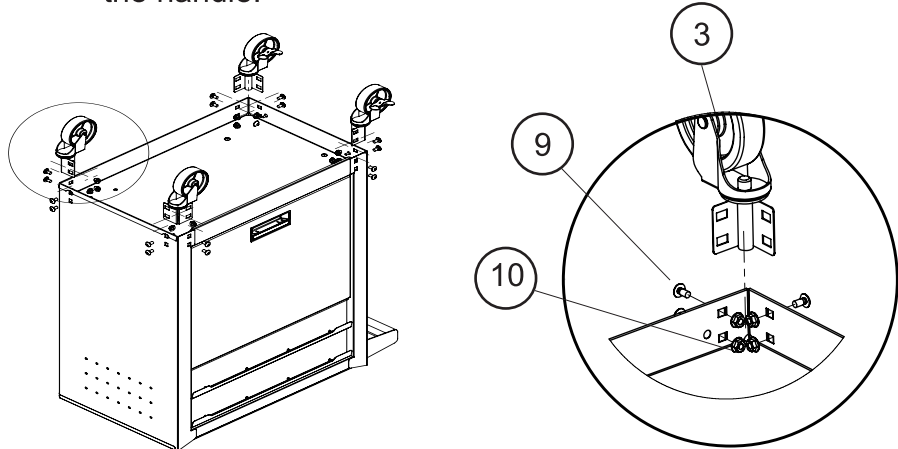

WARNING

- a) Lubricate the top and the bottom channels of the drawer slides at least twice a year.
- b) Do not open more than one loaded drawer at a time.
- c) The maximum loading capacity is 120kgs.

PUSH UP (ONE SIDE)

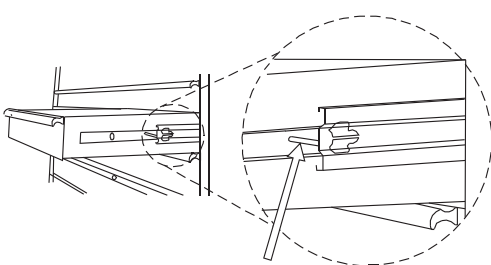

PUSH DOWN (OTHER SIDE)

