
Assembly Installation

110²40V 50Hz/60Hz

MAX:G9

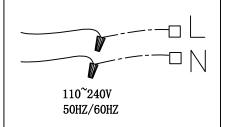

- Only the technical personnel can be allow to fix and maintain
- You must turn off the power before to fix
- A If the glass is breakdown you must change it immediately
- ★ There must keep some space for radiation









