


CARE AND MAINTENANCE

 
 
 
 
 
 
 
 
Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE


- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

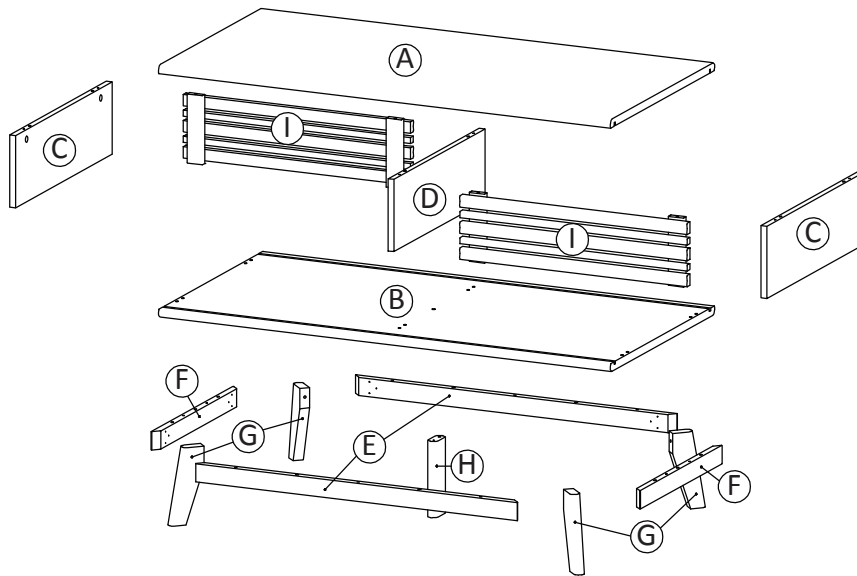

HW1x6  Ø 6 x 35 mm	HW2x6  Ø 15 mm	HW3x23  Ø 8 x 30 mm	HW4x7  M 7 x 50 mm	HW5x1  L 4
HW6x24  M 4 x 16 mm	HW7x4  Ø 15 mm	HW8x4  Ø 8 mm	HW9x4  Ø 15 mm	HW10x4  Ø 15 mm
HW11x4  Ø 15 mm	HW12x10  M 6.4 x 53 mm	HW13x4  Ø 8 mm	HW14x6  Ø 15 mm	HW15x1  Ø 15 mm
HW16x5  25 x 25 mm				

Product Dimensions: 46.5"W×23.2"D×16"H

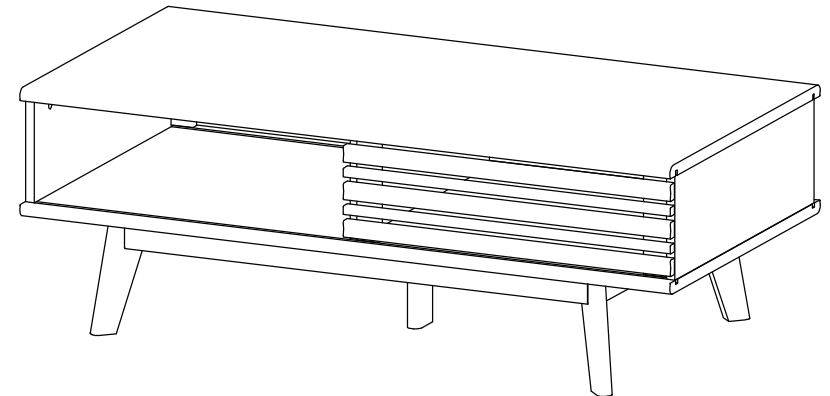


 **WARNING :**
WEIGHT CAPACITY: 75 LBS.
DO NOT STAND ON TV STAND

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 60 minutes.

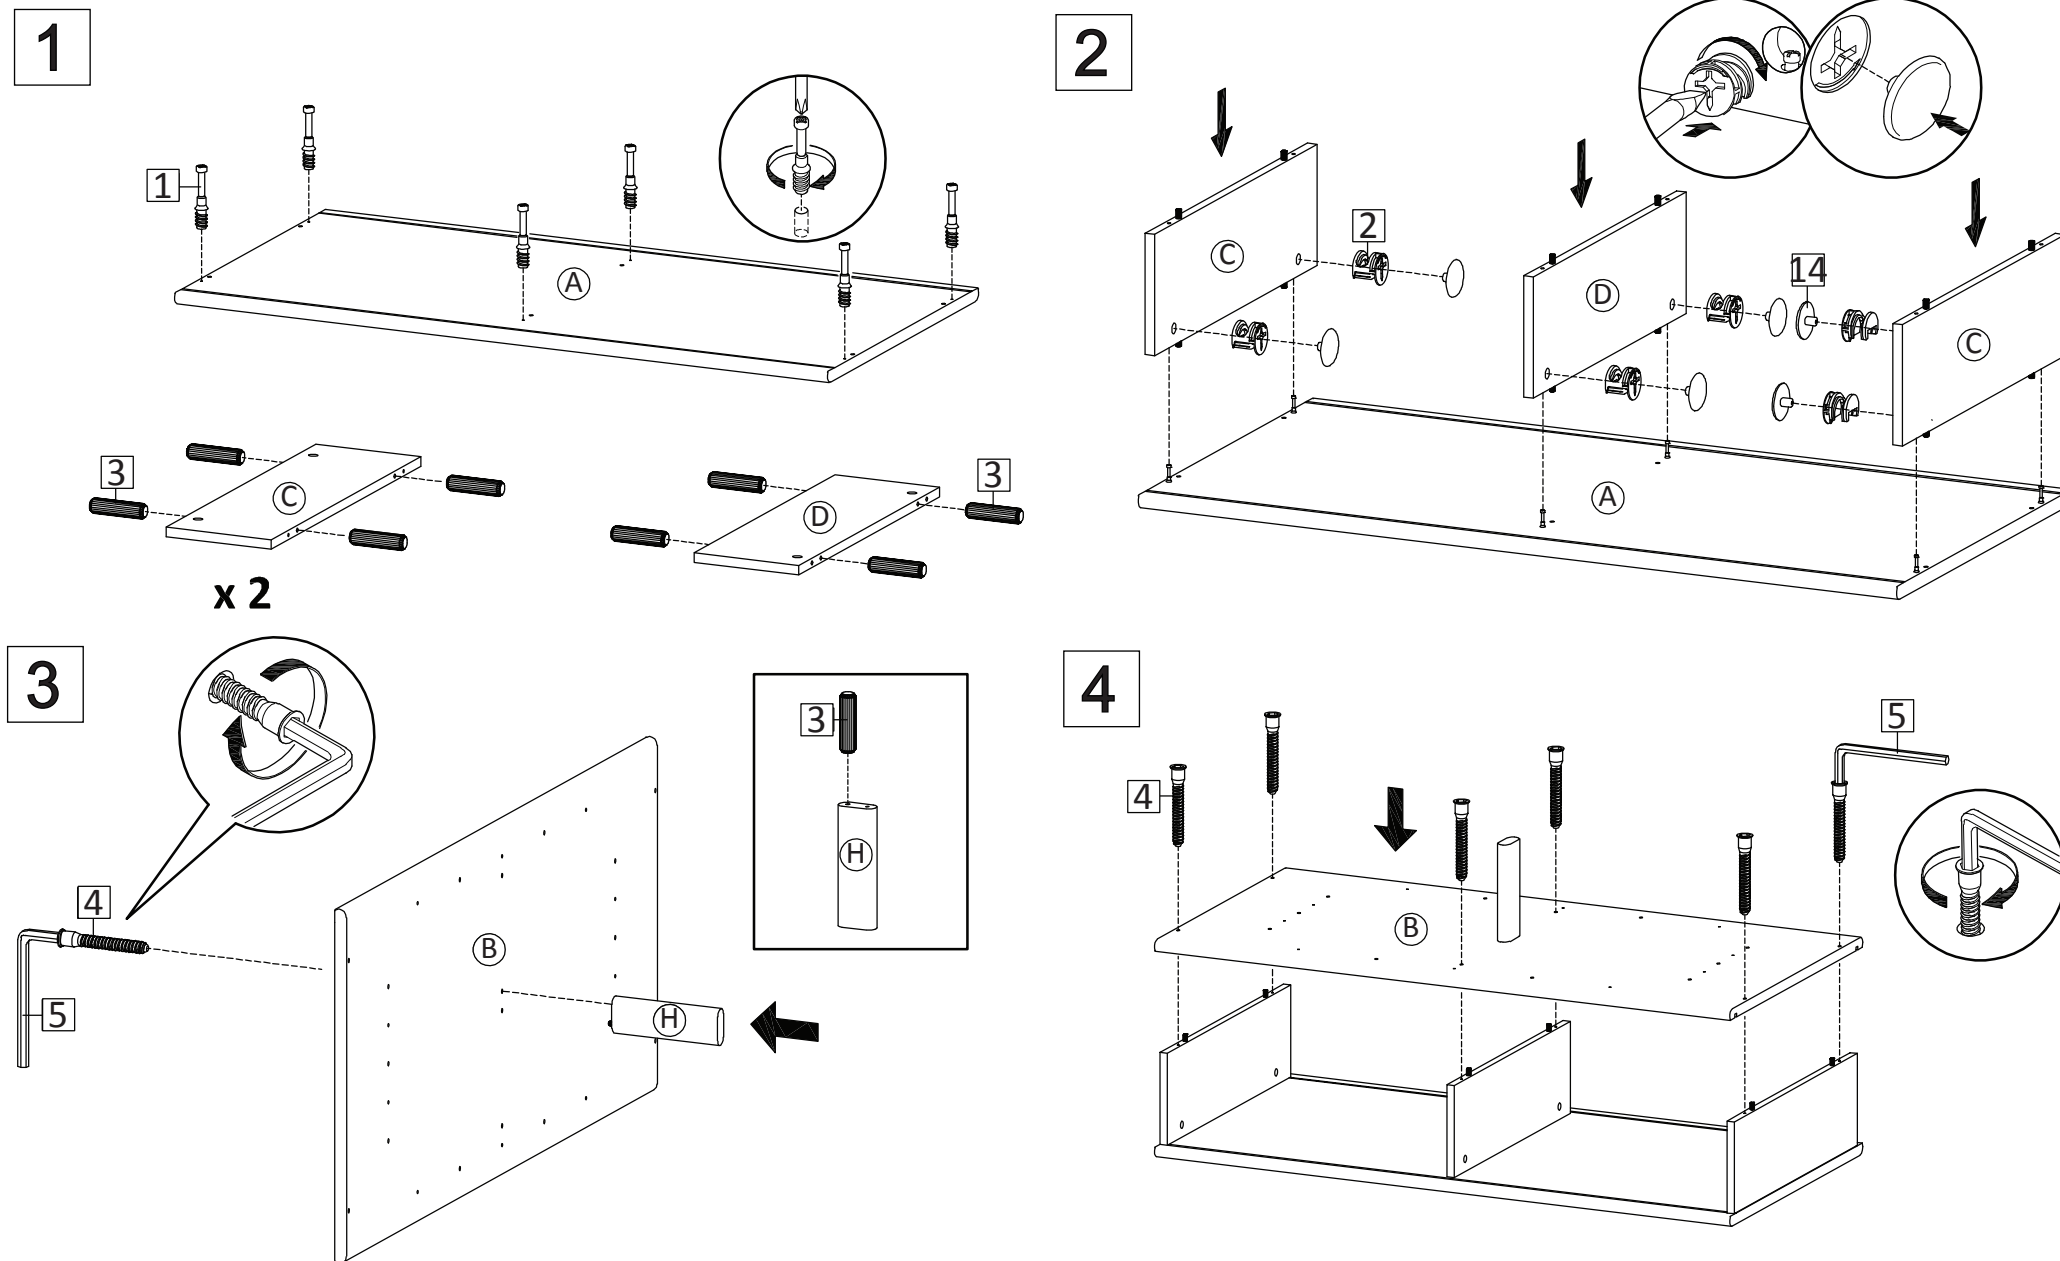


5

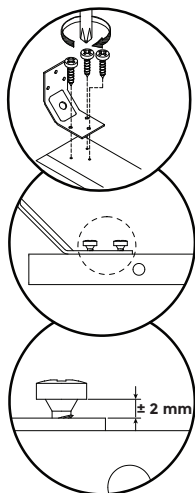


Do not tighten screw yet

6

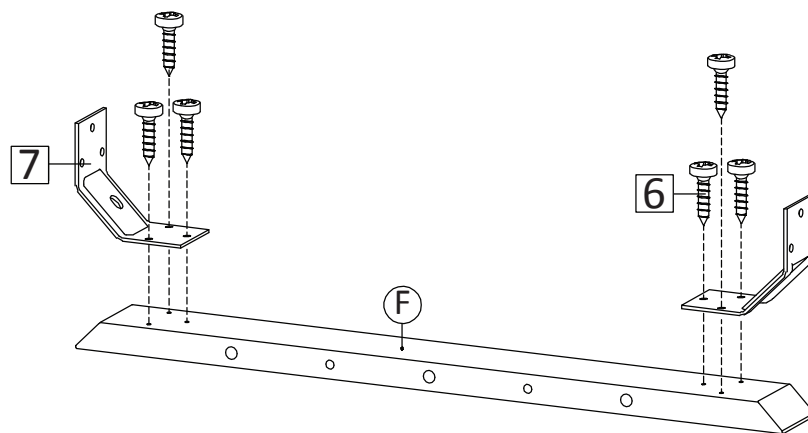


x 2


7

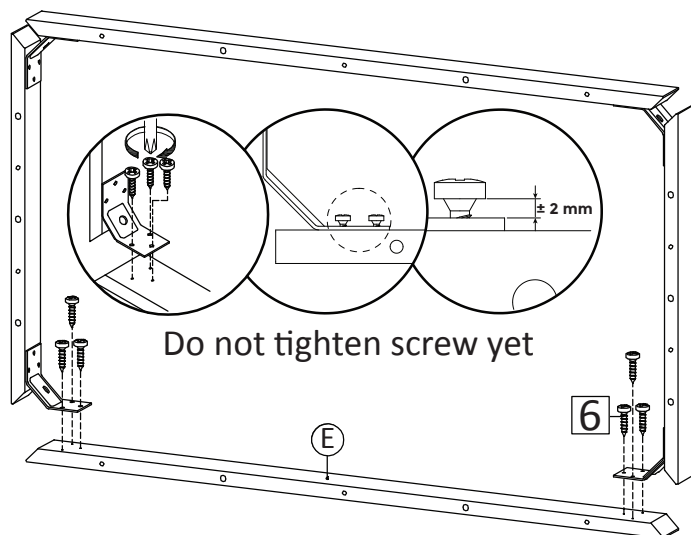

8

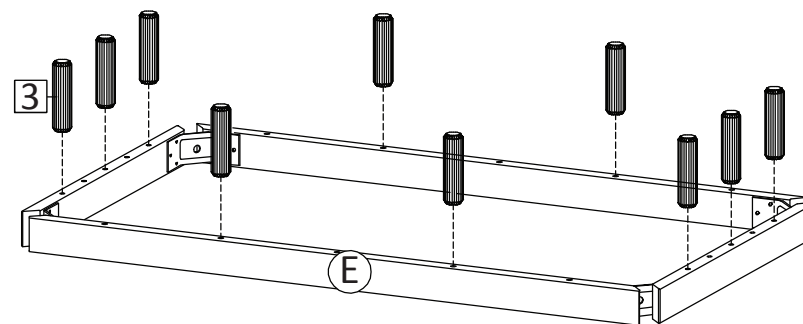


9

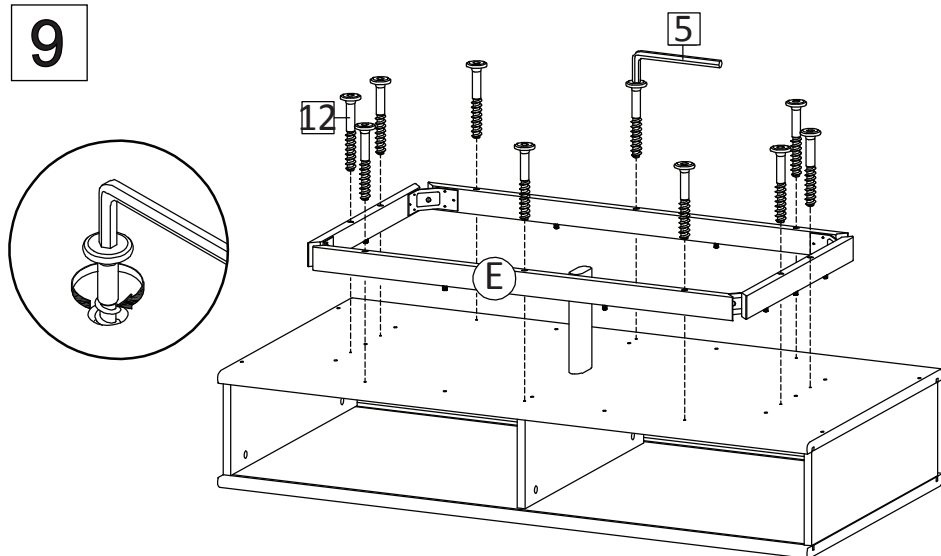


10

1 Fixing The Legs

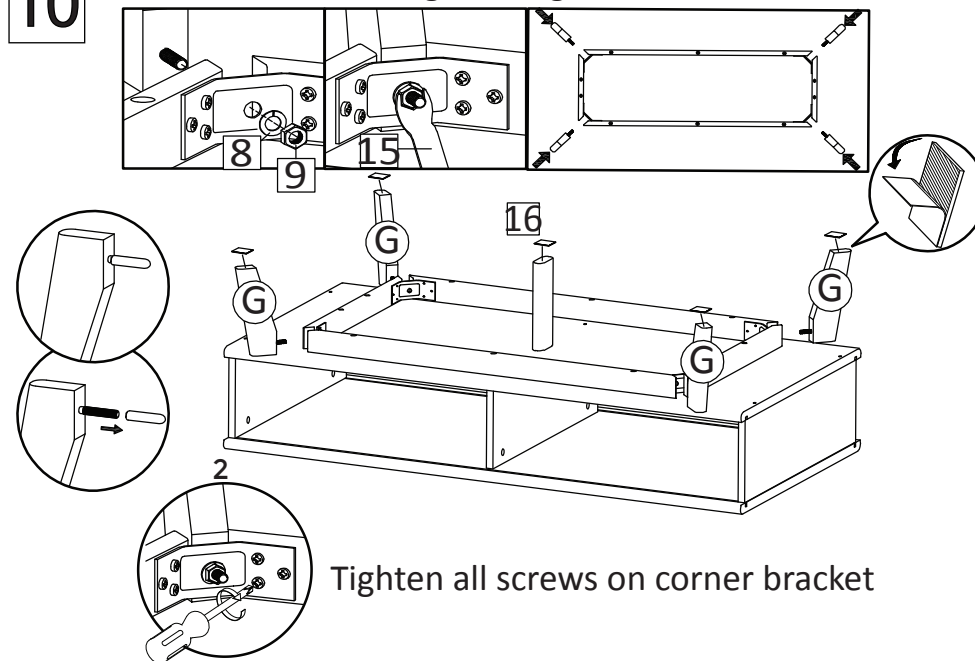

11

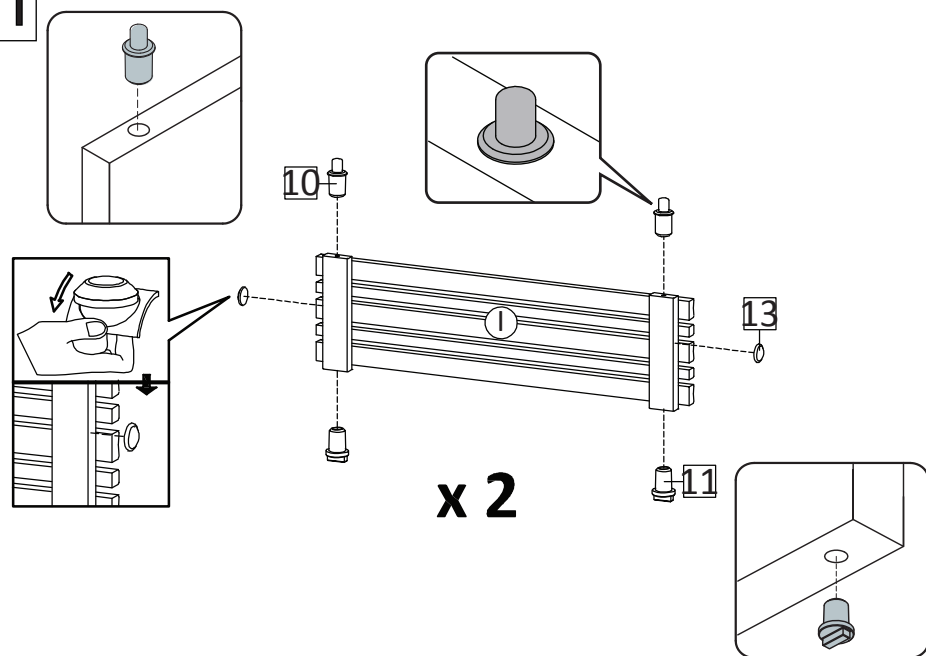

12

