



For your child's safety please use this pad on a flat surface area that is no smaller than 16"x32".

Securing Your Changing Pad to Dresser

1. Position Changing pad on dresser top with tabs hanging over the back of dresser.
2. Secure the two tabs to the dresser back with the two screws provided.