 

DINING TABLE

Instruction manual

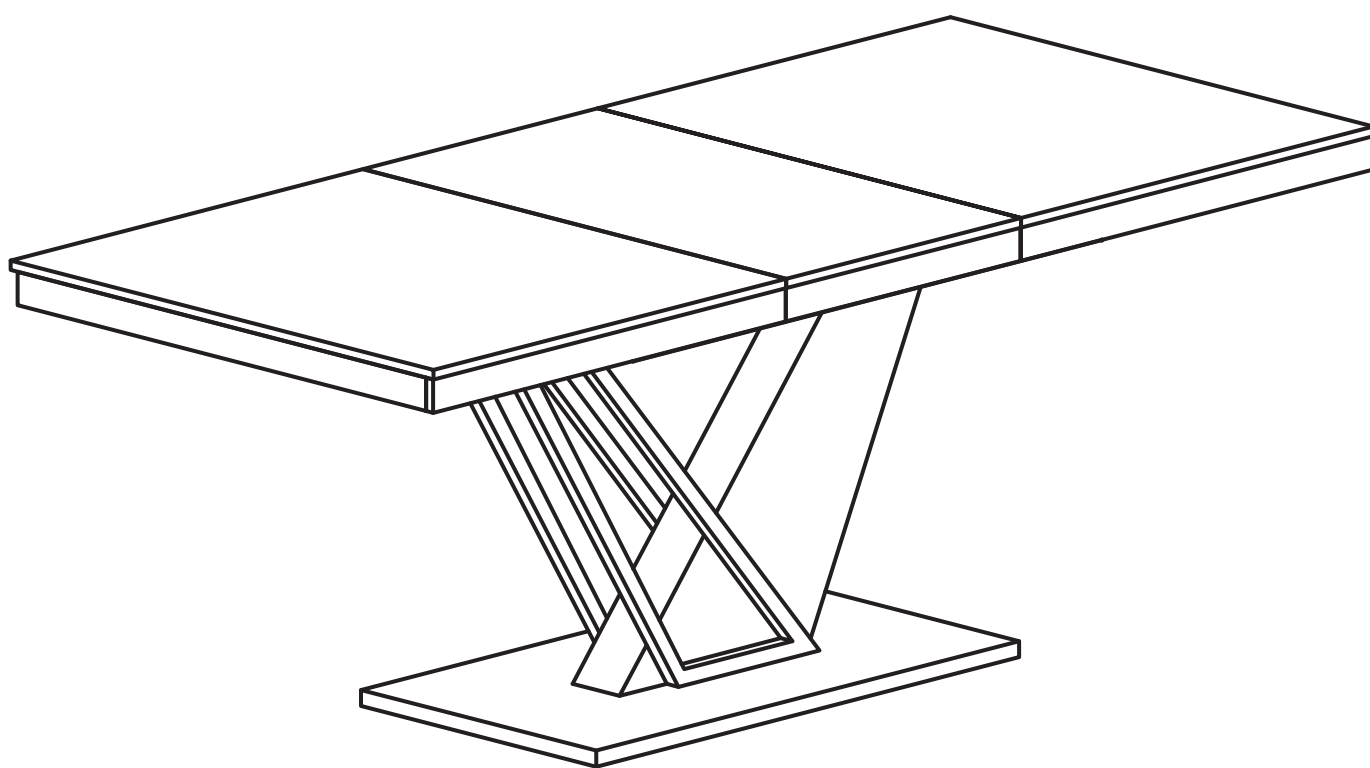

Contact Information

For assistance or support, please contact our customer service team. We're committed to resolving your concerns promptly.

✉ **help@icosiest.com** [24/7]
☎ **(909)312-3668** [9AM-5PM(PT) Monday to Friday]

As a valued customer, your satisfaction is our TOP priority!

Assembly Instructions

BEFORE YOU BEGIN:

 
 
- Please read all instructions thoroughly before starting assembly
- Keep these instructions for future reference
- Verify all components and hardware against the parts list
- Follow each step in sequence for proper assembly



IMPORTANT SAFETY NOTES:

- Assemble the product close to its intended location to avoid unnecessary moving
- Place the product only on flat, stable surfaces
- WARNING: Keep small parts and packaging materials away from children - choking hazard

SKU NO.
B330100001


Packing List

NO.	PICTURE	QTY
A	 M6x12mm	8
B	 M6x12mm	16
C	 M6x35mm	10
D	 M6x35mm	8
E		4
F	 M6x30mm	8
G	 Ø3x14mm	16
H	 Φ4x14mm	16
I	 Ø30mm	4
J	 Ø6x35mm	28
K	 Ø15mm	28
L		4
M	 4mm	2
N	 Ø22mm	6

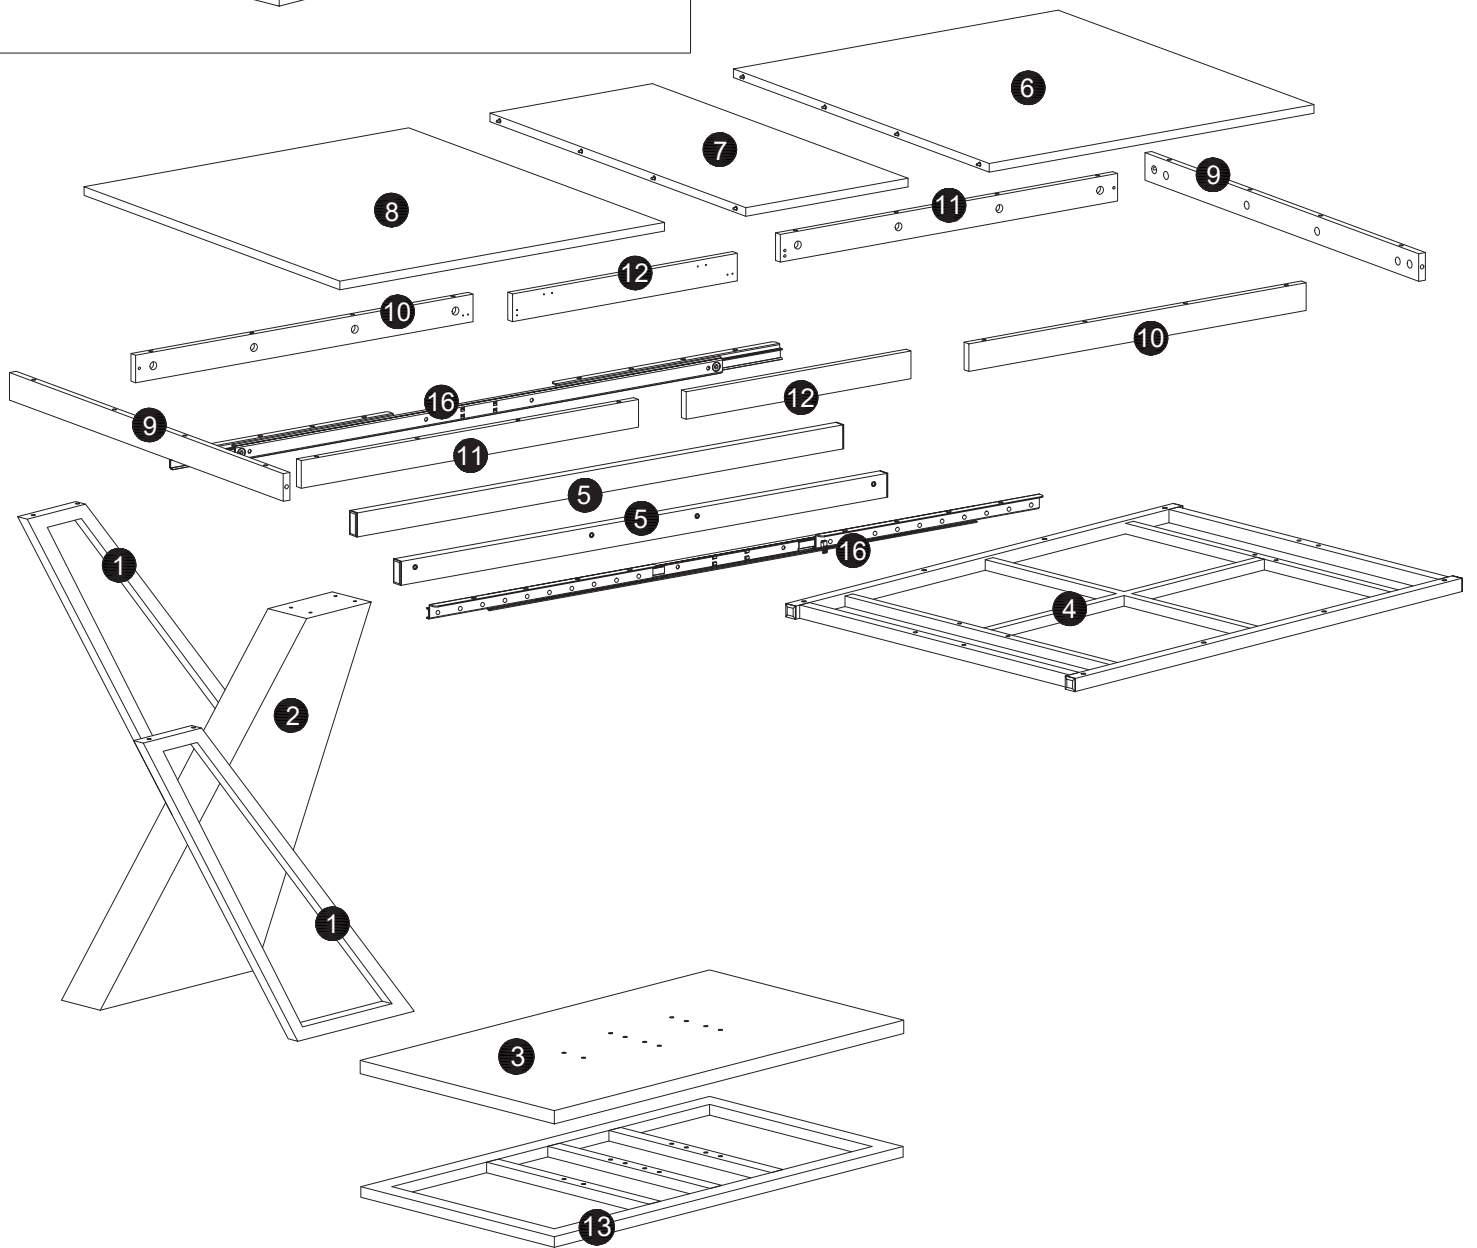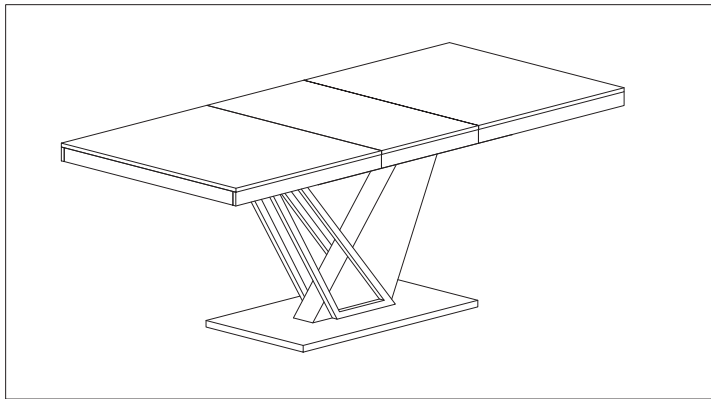  


01

N	x 6
	
Ø22mm	

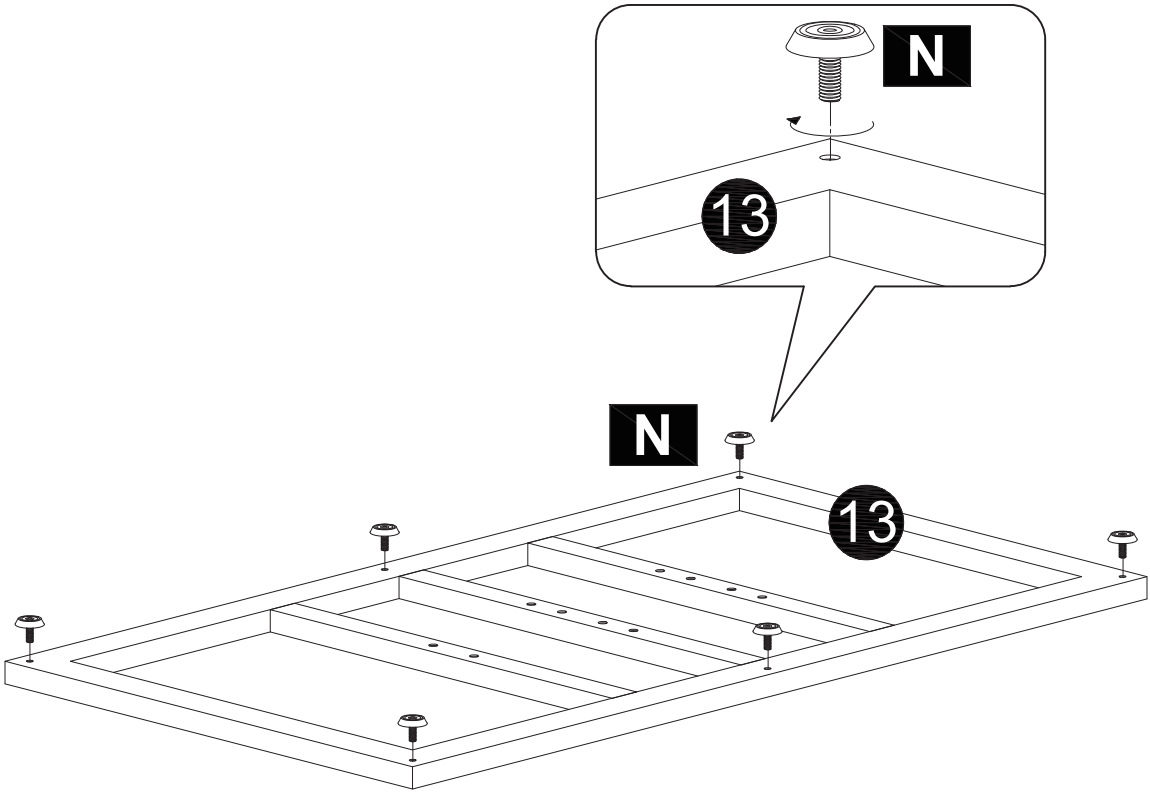 


02

C	x 10
	
M6x35mm	

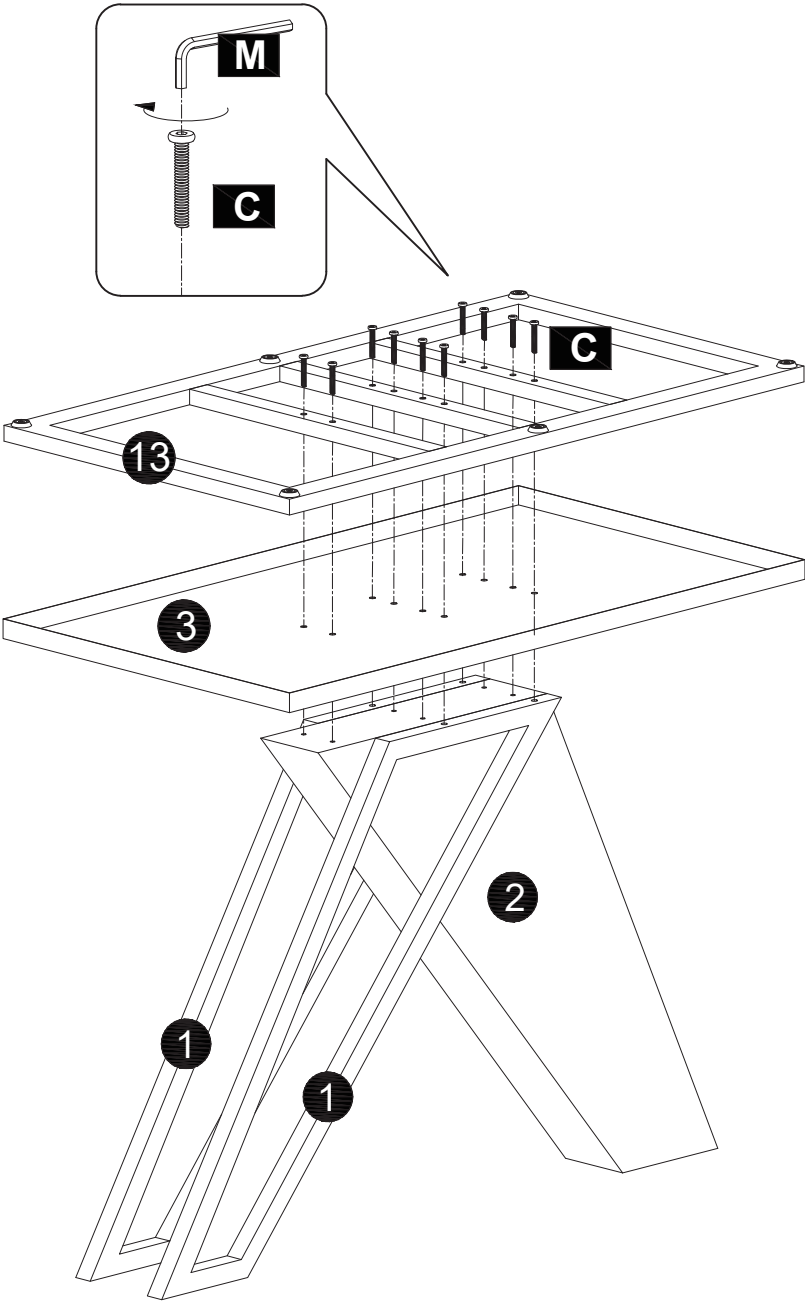 


03

F	x 8
	
M6x30mm	

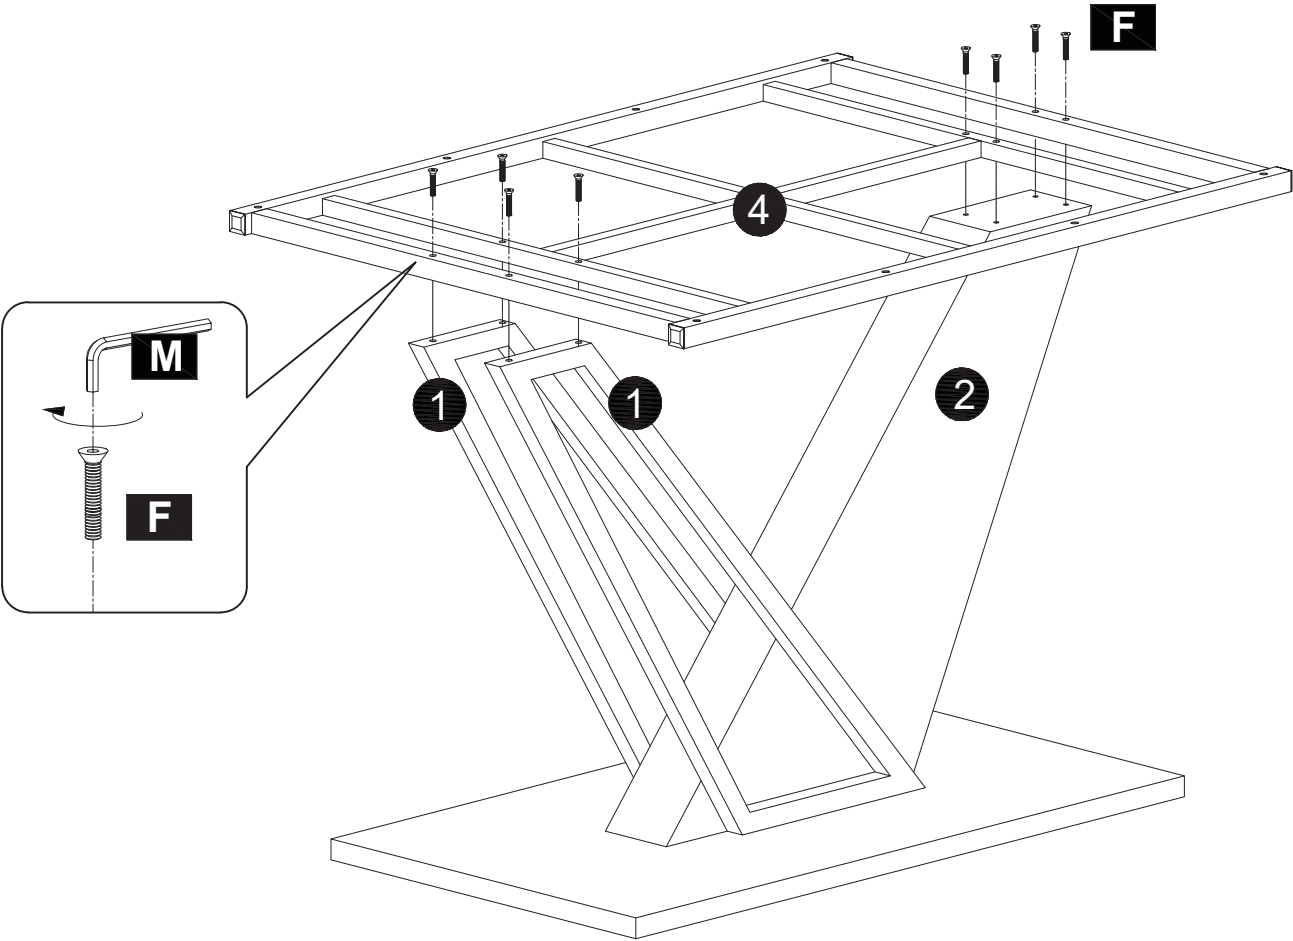 


04

D	x 8
	
M6x35mm	

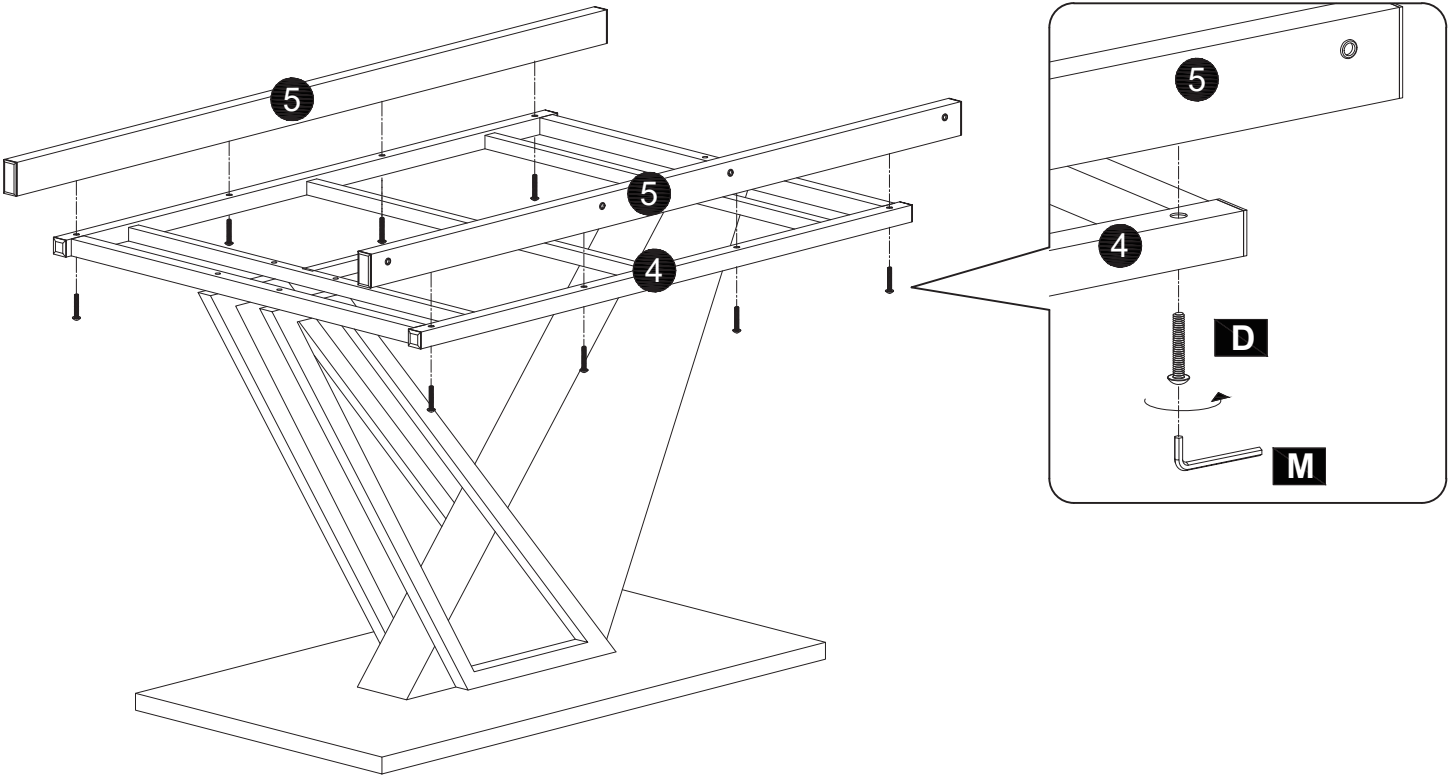 



05


A	x 8
	
M6x12mm	

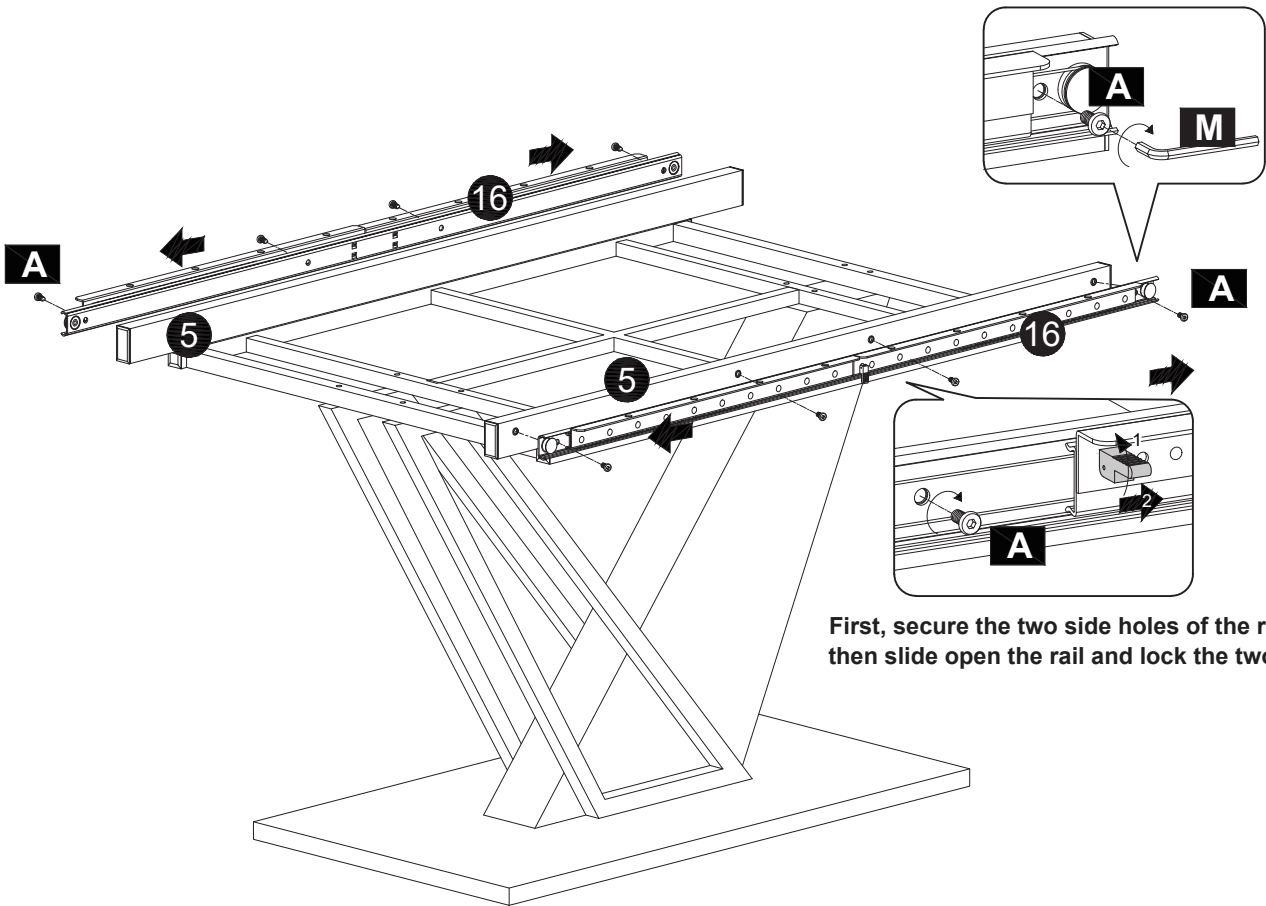 

First, secure the two side holes of the rail,
then slide open the rail and lock the two middle holes.

  06


G	x 16	J	x 28	L	x 4	H	x 8	E	x 4
									
Ø3x14mm		Ø6x35mm				Φ4x14mm			

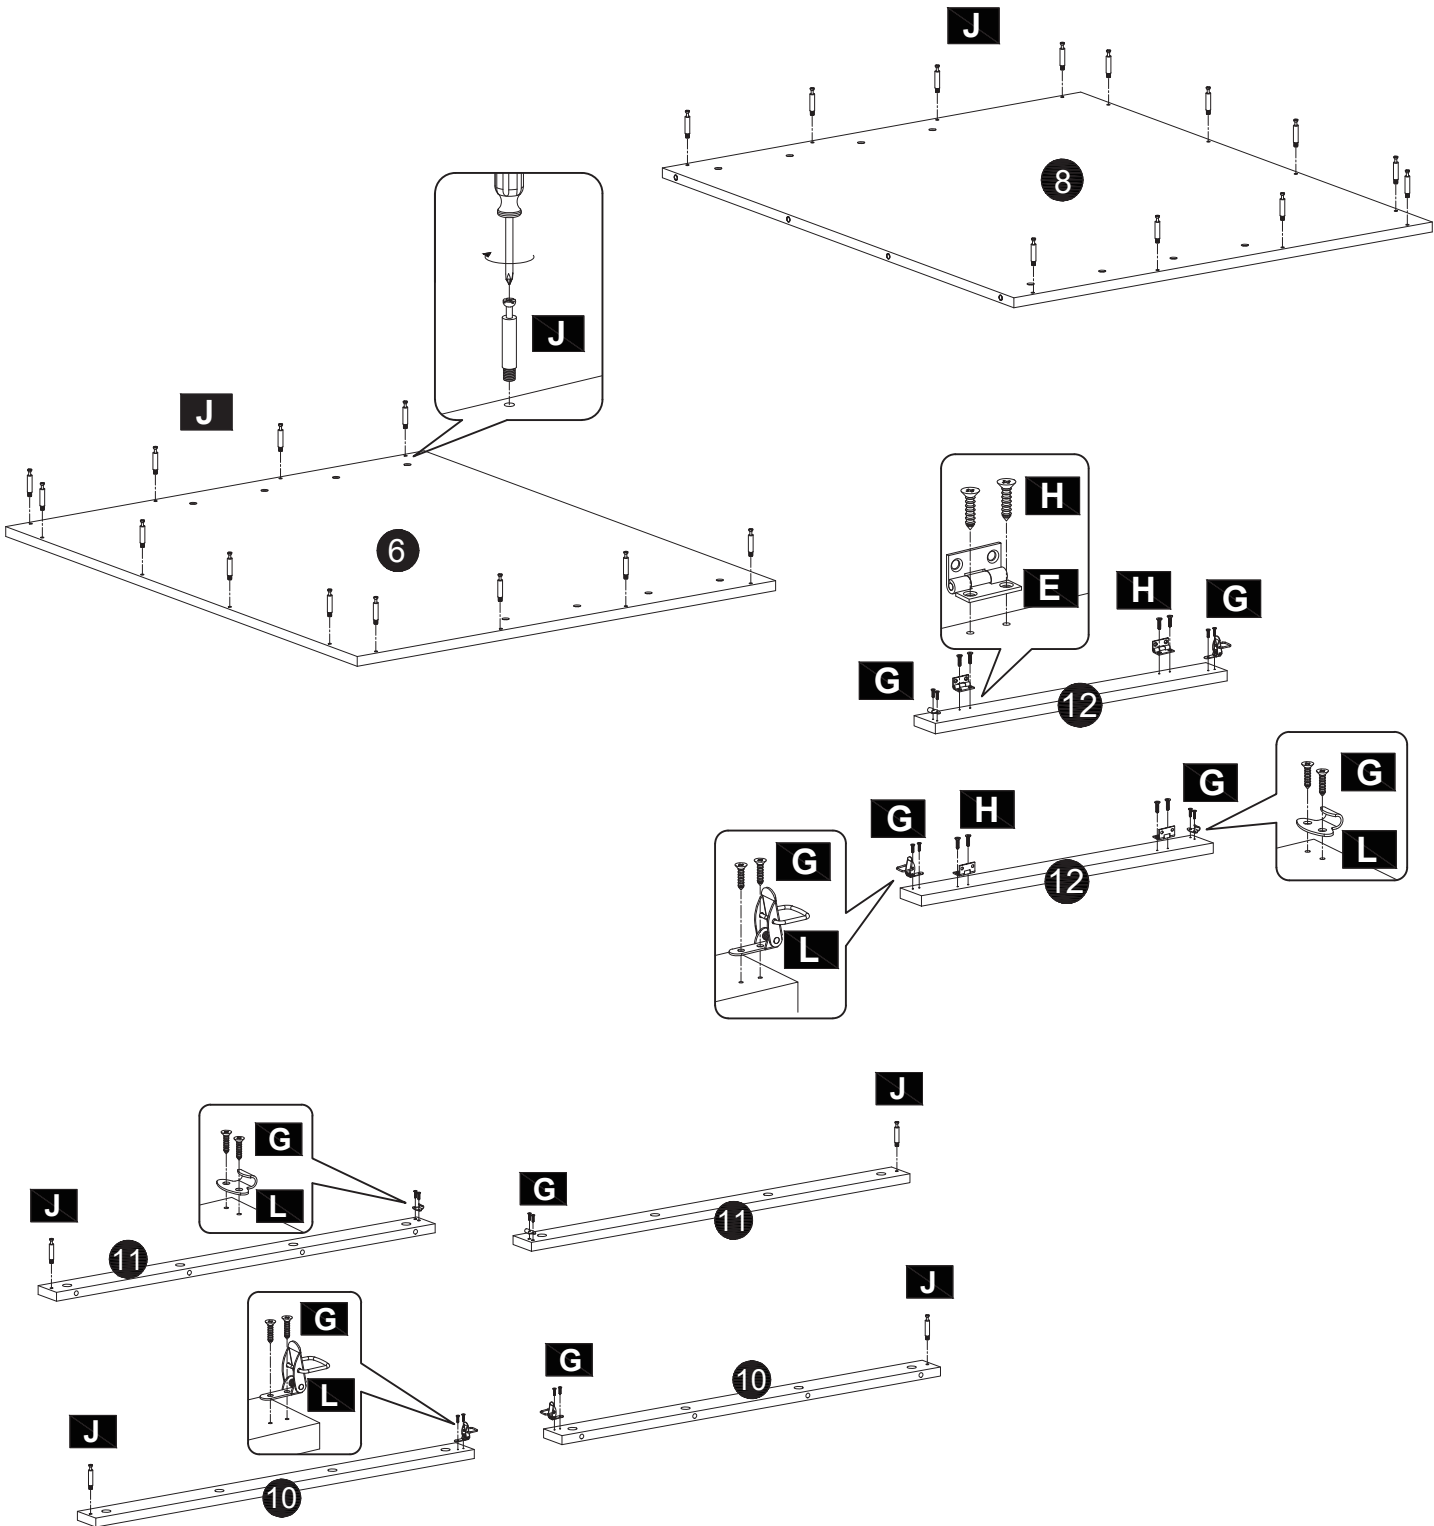 



07

K	x 28
	
Ø15mm	

H	x 8
	
Φ4x14mm	

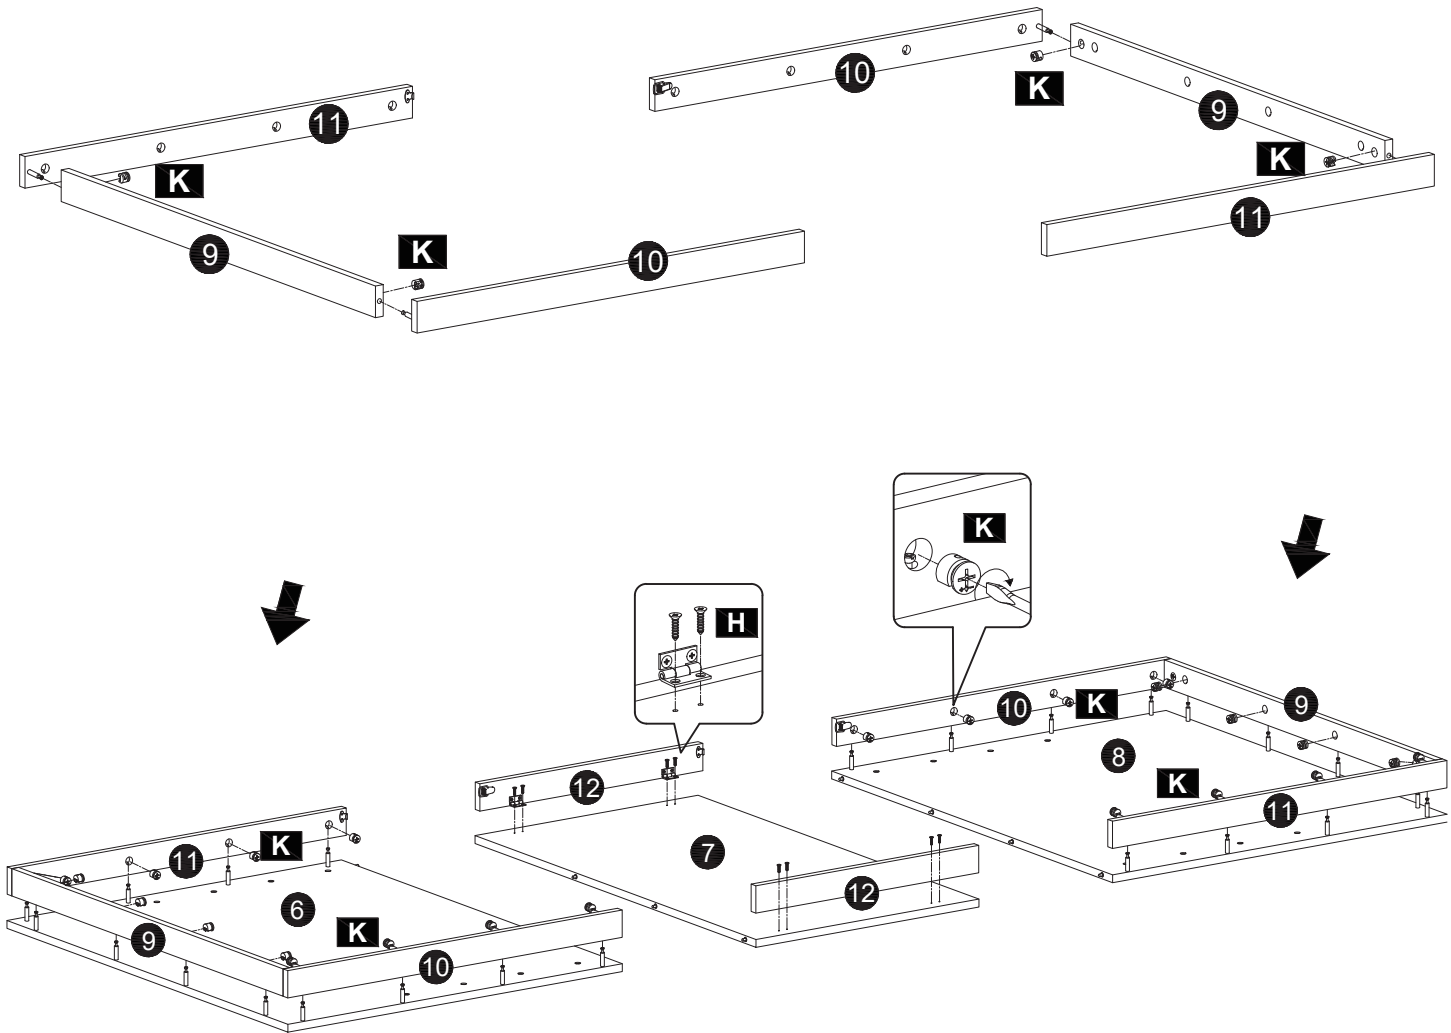 


08

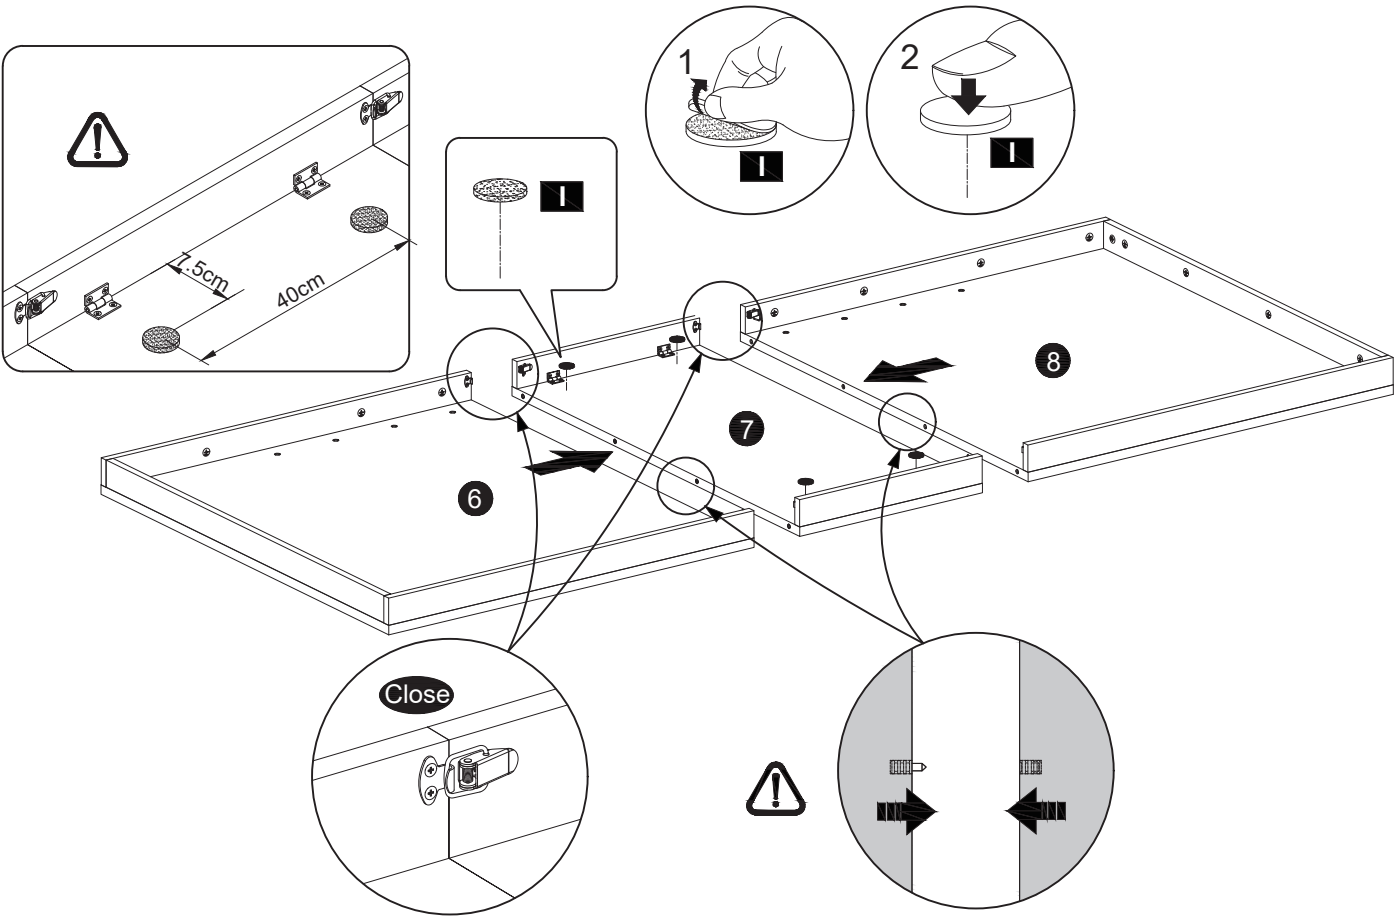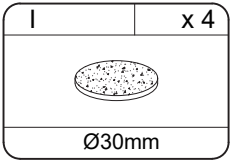  



09

B	x 16
	
M6x12mm	

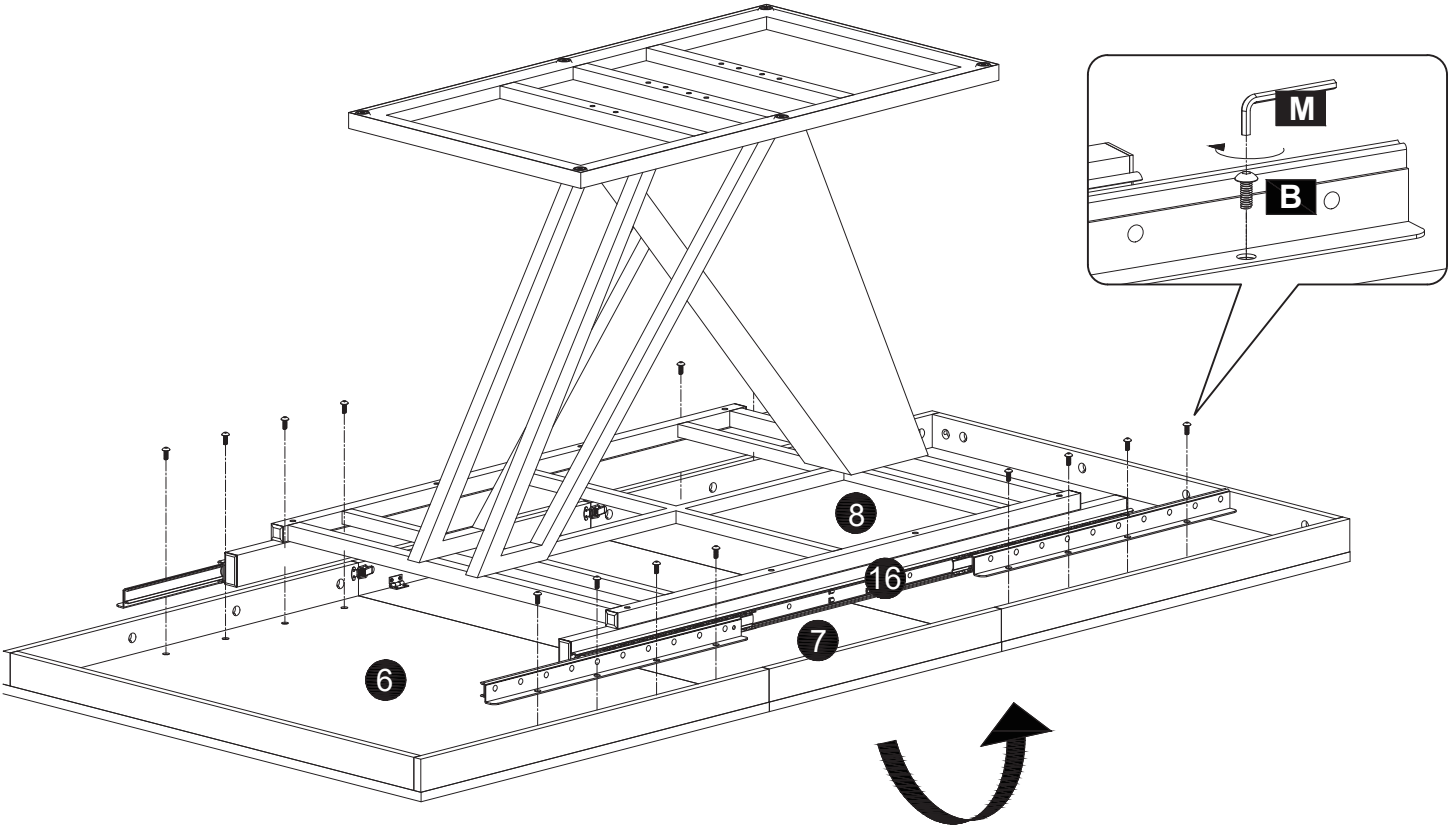 



11

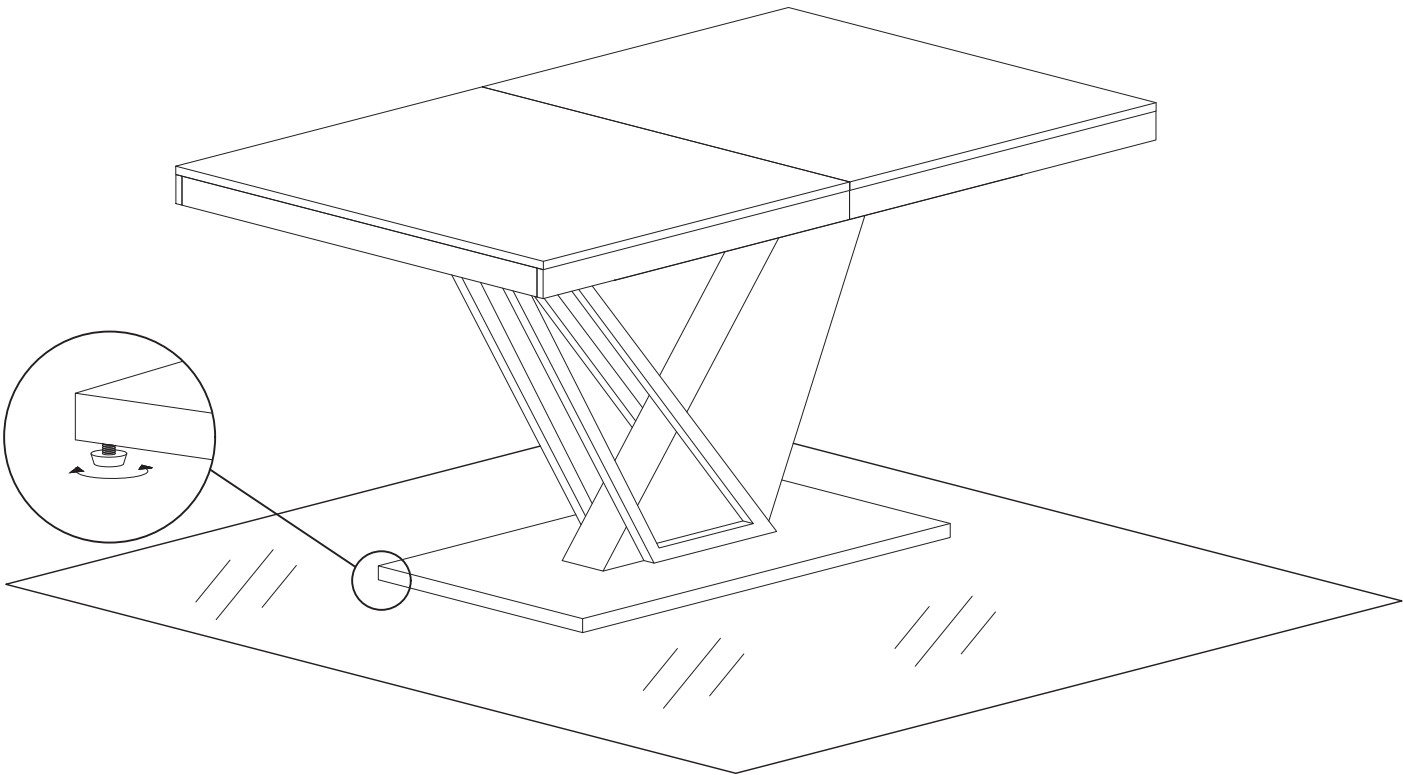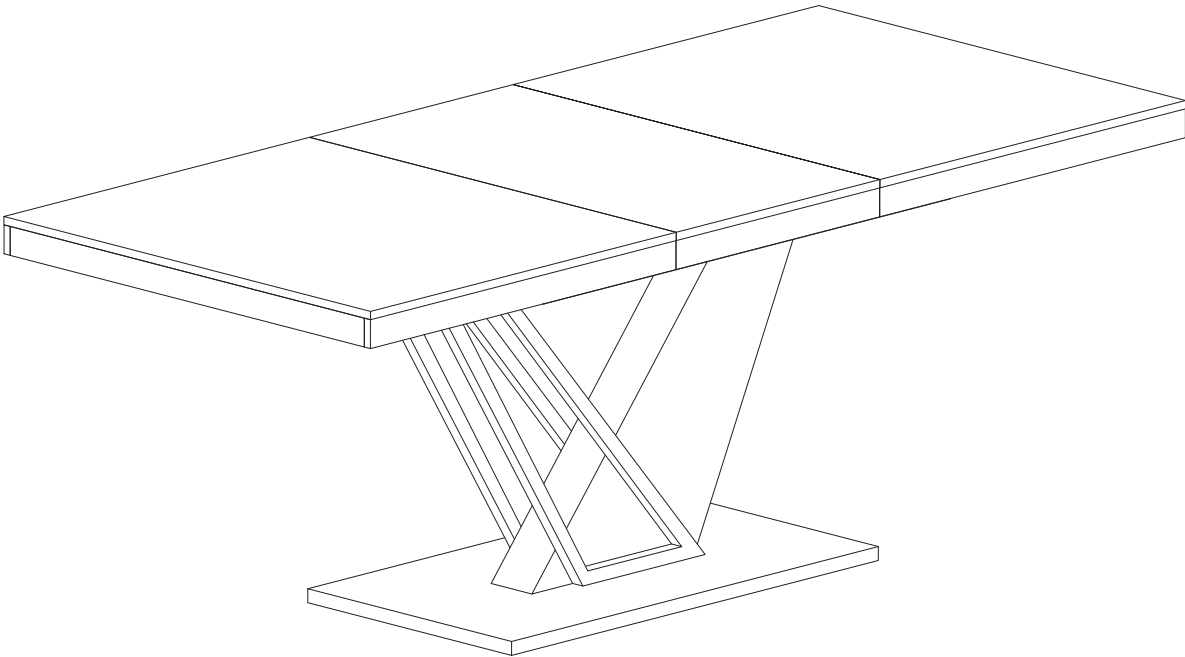  

Return / Damage Claim Instructions

- **DO NOT discard the box / original packaging.**

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

- **Take a photo of the box markings.**

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

- **Take a photo of the damaged part (if applicable).**

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

- **Send us an email with the images requested.**

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

How satisfied are you with our products? Your comments mean a lot to us!

Find more awesome deals on **<http://www.icosiest.com>**

For latest information, follow us on **[facebook.com/icosiest](https://www.facebook.com/icosiest)**

For daily design inspirations, like us on **[instagram.com/icosiest_furniture/](https://www.instagram.com/icosiest_furniture/)**