


# F20

## Spot Cleaner

### Instruction Manual

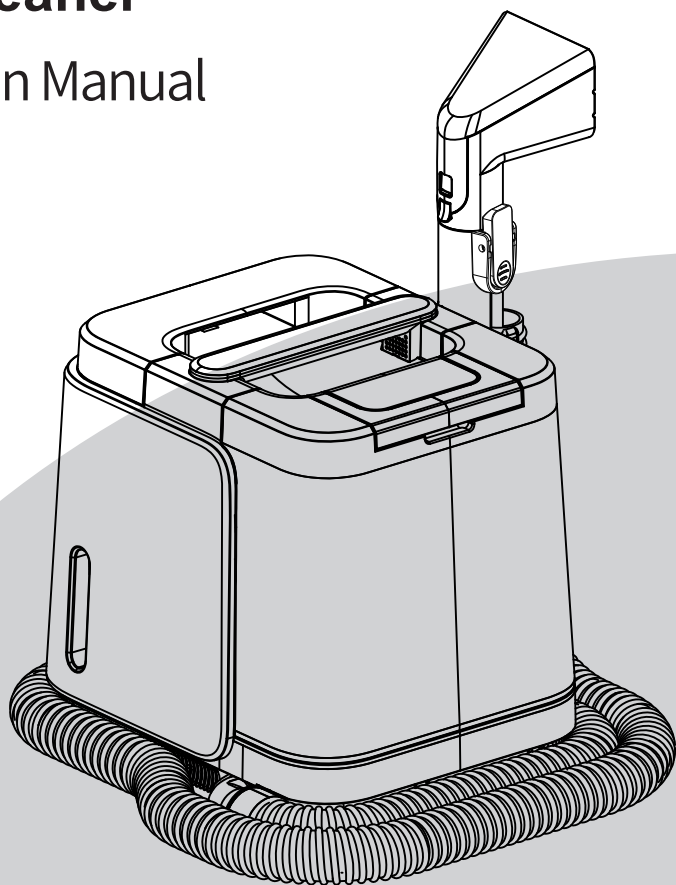

## IMPORTANT SAFEGUARDS



### Safety Warning

Before you use your appliance for the first time, please read this user manual carefully.

Store it carefully so that you can refer to it in the future, if necessary.

To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions.

- This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning the safe use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a children's toy. Children shall not play with the appliance.
- Keep the device and its cable out of the reach of children under 8 years old.
- The children should be monitored to ensure they do not operate this machine.
- The cleaning and maintenance by the user should not be made by children without supervision.
- In order to ensure your children's safety, please keep all packaging out of their reach.
- This appliance is intended to be used in household and similar applications.
- Never use the appliance outdoors. Use it indoors only.
- Do not use the cleaner outdoors or let it come in contact with any liquid. Liquid must not be directed towards equipment containing electrical components.
- Use only as instructed in this manual.
- Always connect to a properly earthed electrical socket. Do not modify earthed plug.
- Make sure the power supply corresponds to one on the rating label.
- Before each use, make sure the power cord is in perfect condition.
- Do not operate any appliance with a damaged cord or plug or after appliance has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- Never use a damaged machine.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent.
- Do not pinch, bend or twist the cable excessively. The core lines may be bare or cut causing a short-circuit which may in fire or




# IMPORTANT SAFEGUARDS

- Do not leave the appliance plugged in when not in use.
- Always unplug the power cord from the appliance in the following cases:
  - After use.
  - Before cleaning or maintenance.
  - In case of malfunction.
- Keep appliance on a level surface.
- Do not use the cleaner to wash people or animals.
- Use on dry surfaces or only on surfaces moistened by the cleaning process.
- To protect against a risk of electric shock, do not immerse the apparatus in water or any other liquids.

<b>Product Name</b>	Spot Cleaner
<b>Model</b>	F20
<b>Input</b>	110V AC 50/60HZ
<b>Power</b>	450W

**Only applicable to 110V 50/60Hz AC power  
Indoor use only**

# Components Description

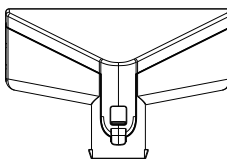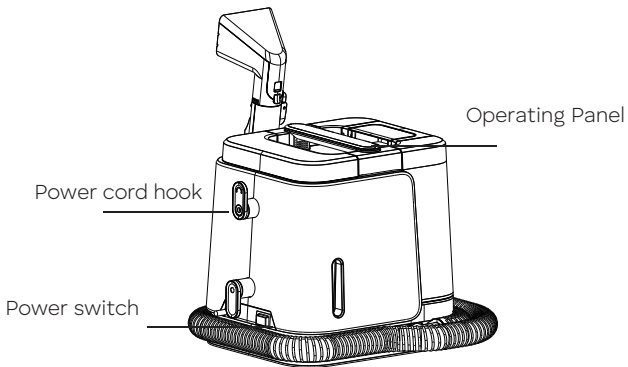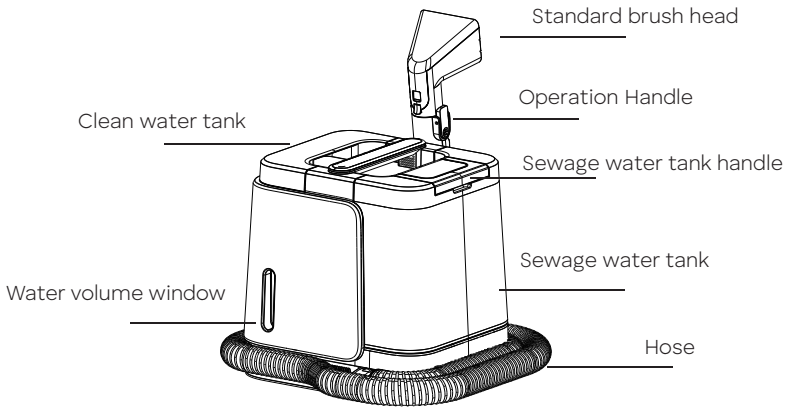

Wide Nozzle

# Operate Panel




Display Panel:

1:Mode switch button

2:Eco mode


3:Max mode

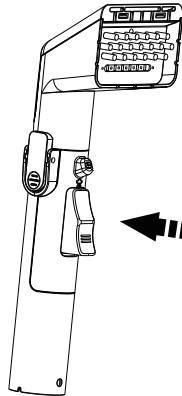


Handle:

Press the trigger to control the water spray


## Add Clean Water

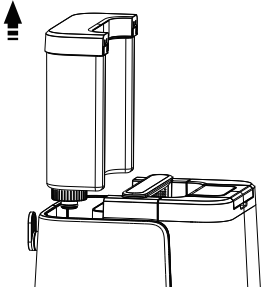


1.Remove the clean water tank

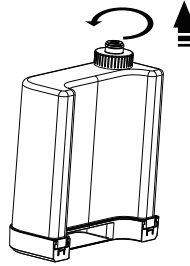


2.Open the screw cap

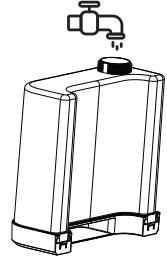

3.Add clean water

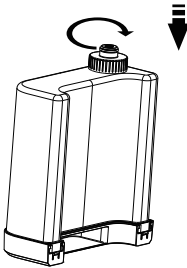


4.Open the screw cap

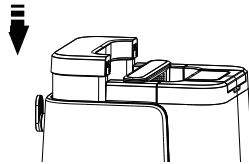


5. Install the clean water tank


## Waste Water Tank

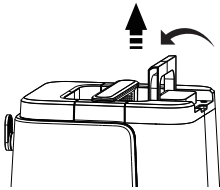


1.Rotating handle and remove the waste water tank

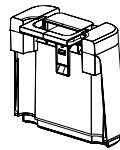


2.Rotating handle and remove the cover plate

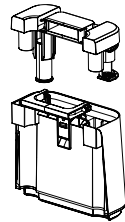

# Insert Brush Head

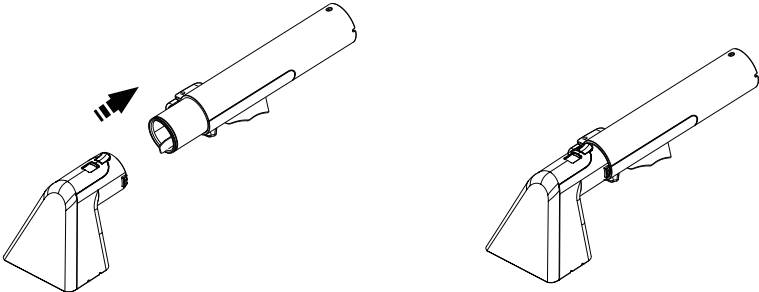

1.Insert standard brush head

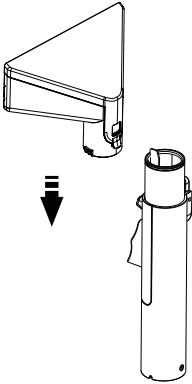

2.Insert widened brush head

# Trouble Shooting

<b>Common Issues</b>	<b>Possible Causes</b>	<b>Solutions</b>
Abnormal high motor sound and no suction	The sewage tank is full	Empty the sewage tank
Weak suction power	The brush or nozzle is clogged with dirt or debris	Remove the brush/nozzle, clean it, and clear any blockages
No clean water come out	The clear water has been used up	Add water
Brush (water or spray model) does not dispense water consistently or not at all	Water hole or sprayer is clogged with dirt or debris	Clean the water hole or use a needle to clear the blockage

## Warranty Information

After-Sales Service:

Thank you very much for choosing us, your support is our greatest motivation! May it create a comfortable and cozy home environment for you.

If you need anything, feel free to contact us, wish you a happy life.

[weeqee\\_team@outlook.com](mailto:weeqee_team@outlook.com)

Mailbox QR Code:

