


POWER CONTROL OPERATING INSTRUCTIONS

Below are the instructions to how each button operates on your power recline with power headrest furniture

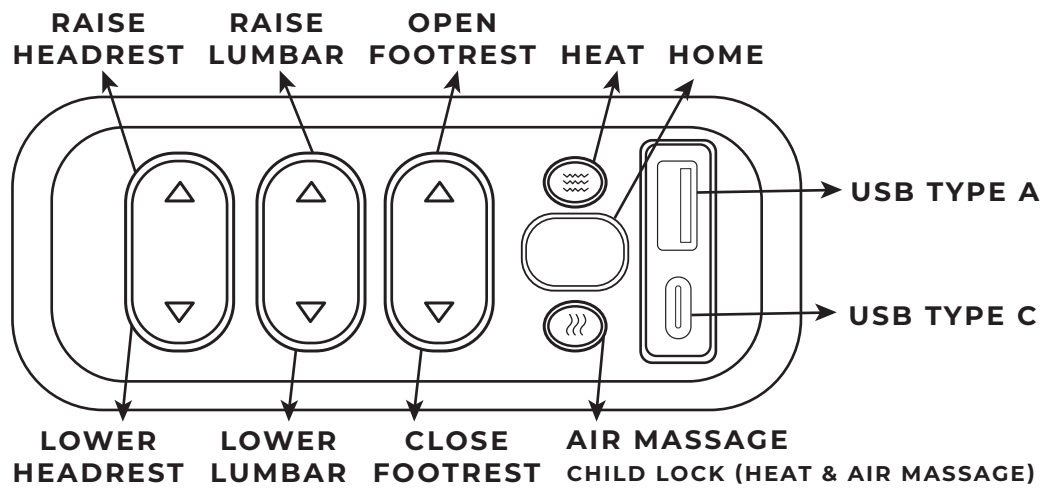

CONTROL PHL-3C

To recline:

Sit on the furniture, and press the top of the button second closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the bottom of the button closest to the footrest.

To adjust headrest:

Press the top of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the bottom of the button closest to the backrest.

To adjust lumbar support:

Press the top of the center button to smoothly raise and adjust the lumbar support to any position. To lower the lumbar support and return it to its original position, press the bottom of the center button.

To close all:

To simultaneously return the footrest, headrest and lumbar to their original positions, press the Home button.

To adjust heat:

Press the heat button to turn on. Once on, pressing the button cycles between three intensities: Low (Green Light), Medium (Yellow Light) & High (Red Light).

To turn off heat function, press the 'Home' button with one touch, or press the 'Heat' button until the light turns red, then press again to manually turn off. For safety, the function will automatically turn off after 30 minutes of operation.

To adjust air massage:

Press the air massage button to turn on. Once on, pressing the button cycles between three intensities: Low (Green Light), Medium (Yellow Light) & High (Red Light).

To turn off the air massage function, press the 'Home' button with one touch or press the 'Air Massage' button until the light turns red, then press again to manually turn off. For safety, the function will automatically turn off after 45 minutes of operation.

To control child lock:

Press and hold the heating and massage buttons simultaneously for more than 5 seconds to engage and disengage the child lock function. When the child lock is engaged, pressing any button will cause the heating and massage indicator light to flash red light.

USB power note:

USB port(s) are for charging mobile devices only. (Total output 10W (5V/2A)) Do not use USB splitters/extenders or charge multiple devices at one time, damages could occur.

HELPFUL INFORMATION

Power is not working:

Check that the furniture is plugged in.

Child lock note:

Child lock feature locks out all motion of the furniture when pressed. To turn off, press the buttons again.

WARNING

Do not operate where aerosol (spray) products are being used, or where oxygen is being administered.

Do not allow water to enter the button crevices or charging ports of the switch.