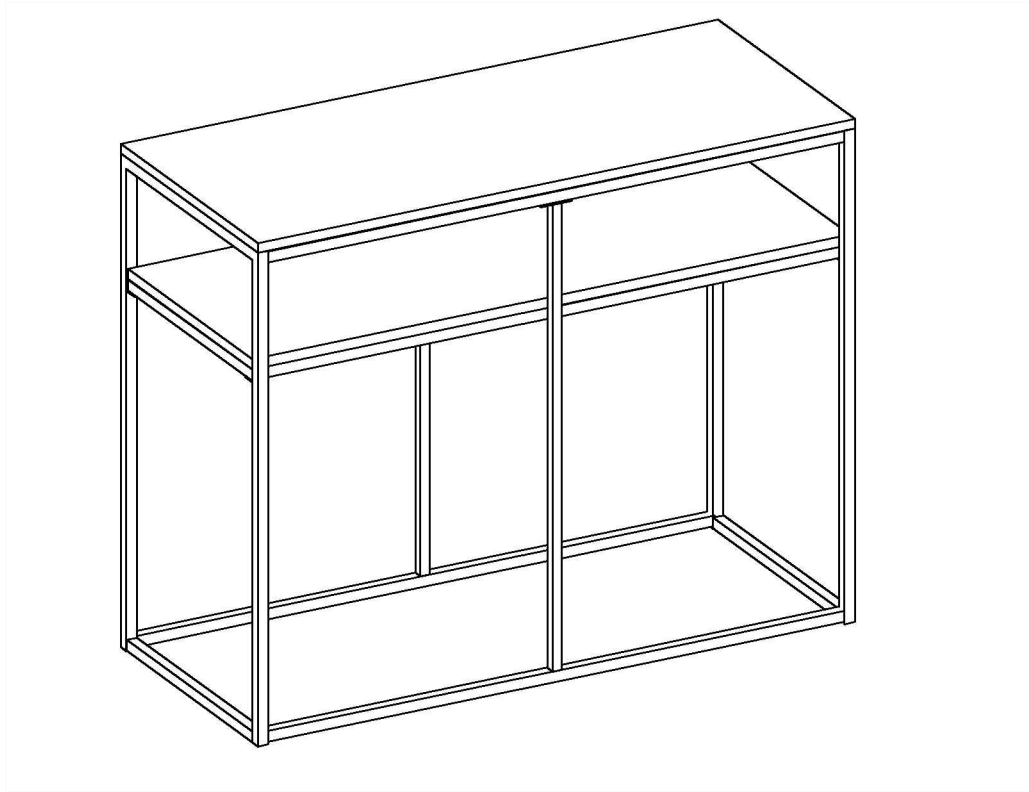



 
 







 


Assembly Instructions



Thank you for purchasing our product!

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware.



We appreciate your business!

A		Frame	2PCS	F		Wooden Board	1PC
B		Connecting bar	2PCS	G		Wooden Board	1PC
C		Connecting bar	2PCS	H	 12mm	Bolt	16PCS
D		Frame	1PC	I	 25mm	Bolt	2PCS
E		Connecting bar	2PCS	J	 30mm	Bolt	2PCS
				K	 15mm	Screw	12PCS
				L		FLAT WASHER	8PCS
				M		Allen Wrench	1PC

NOTE:

- 1)Please be advise to have at least 2 persons to assemble this unit
- 2) Tools not included,but essential for assembling this unit:

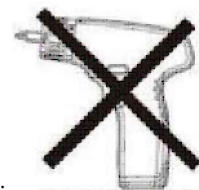 
"Philips"Screwdriver




- 3)Place a large cloth or blanket on the floor or flat surface to protect parts from scratching
- 4)Before assembling this unit ,please check that all parts and hardware are present

DO NOT USE
POWER TOOLS

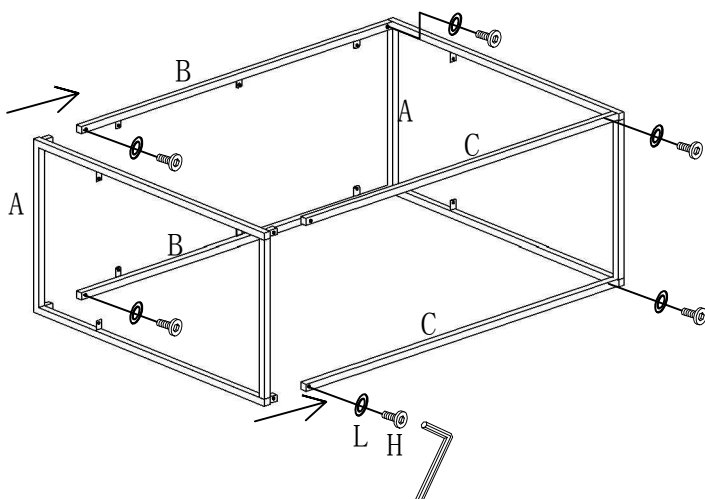
STEP 1



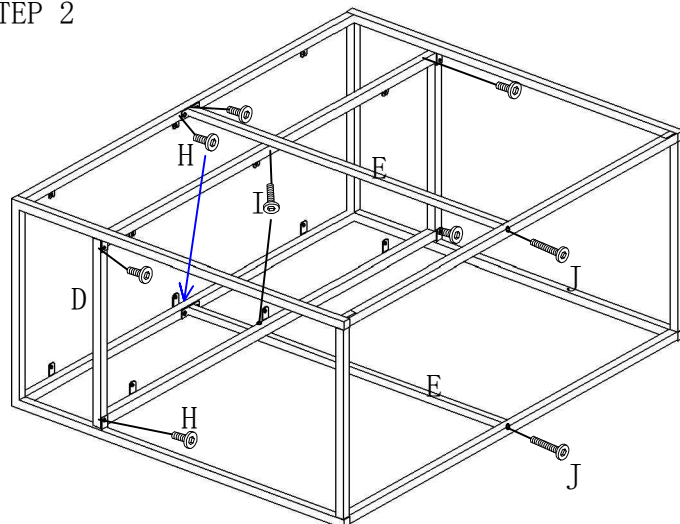STEP 2



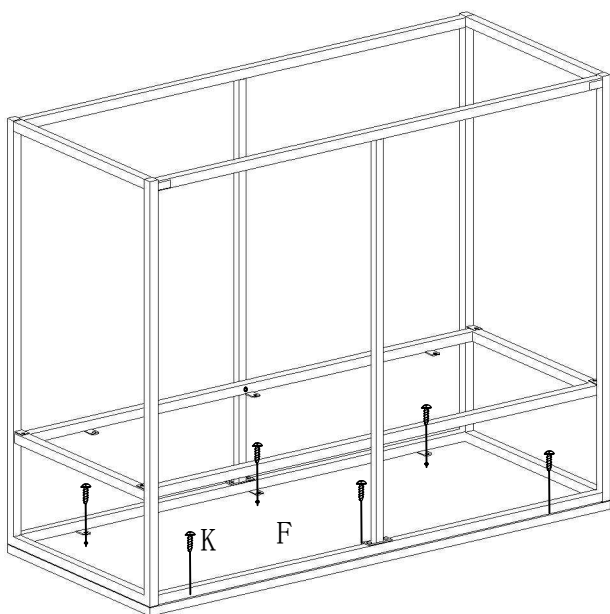STEP 3



STEP 4

