# FlOOr Lamp

This Lamp uses a 150W 3-WAY maximum

Type A (bulb not included).



#### Note:


Please read the Instruction sheet carefully before proceeding. Carefully unpack and identify all parts prior to building the unit. Each part is identified on the line drawing for reference. DO NOT DISCARD THE ORIGINAL PACKAGING. If after careful inspection you must return the item for any reason, please repack the unit using the original carton and inserts.

## Safety Instructions:

- 1.To reduce the risk of electric shock, this lamp has a polarized plug (one blade is wider than the other). The plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use an extension cord unless the plug can be fully inserted. Do not alter the plug.
- 2.To reduce the risk of fire, use the specified bulb type and do not exceed the specified lamp wattage identified on the product.
- 3.Turn off and unplug the unit to change bulbs. Allow the bulb to cool before touching.
- 4.Avoid laying objects directly over the power supply cord to avoid cutting or damaging the wire.

### Cleaning Instructions:

Do not use polish or cleaners. Wipe clean with a soft cloth.

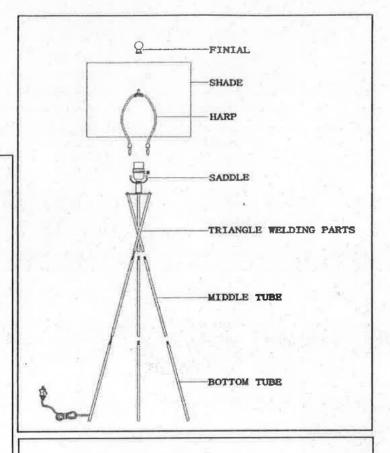

## **Assembly Instructions**

- 1.Fasten middle tube onto bottom tube. Becareful not to twist the power cord.
- 2.Fasten triangle welding parts onto middle tube .
- 3. Place harp onto saddle.
- 4. Place shade onto harp and tighten finial.
- 5. Screw a light bulb into the lamp socket and make sure it does not exceed the maximum wattage specified on the lamp wattage rating label, MAXIMUM 150 WATT.