


Solar lamps usage

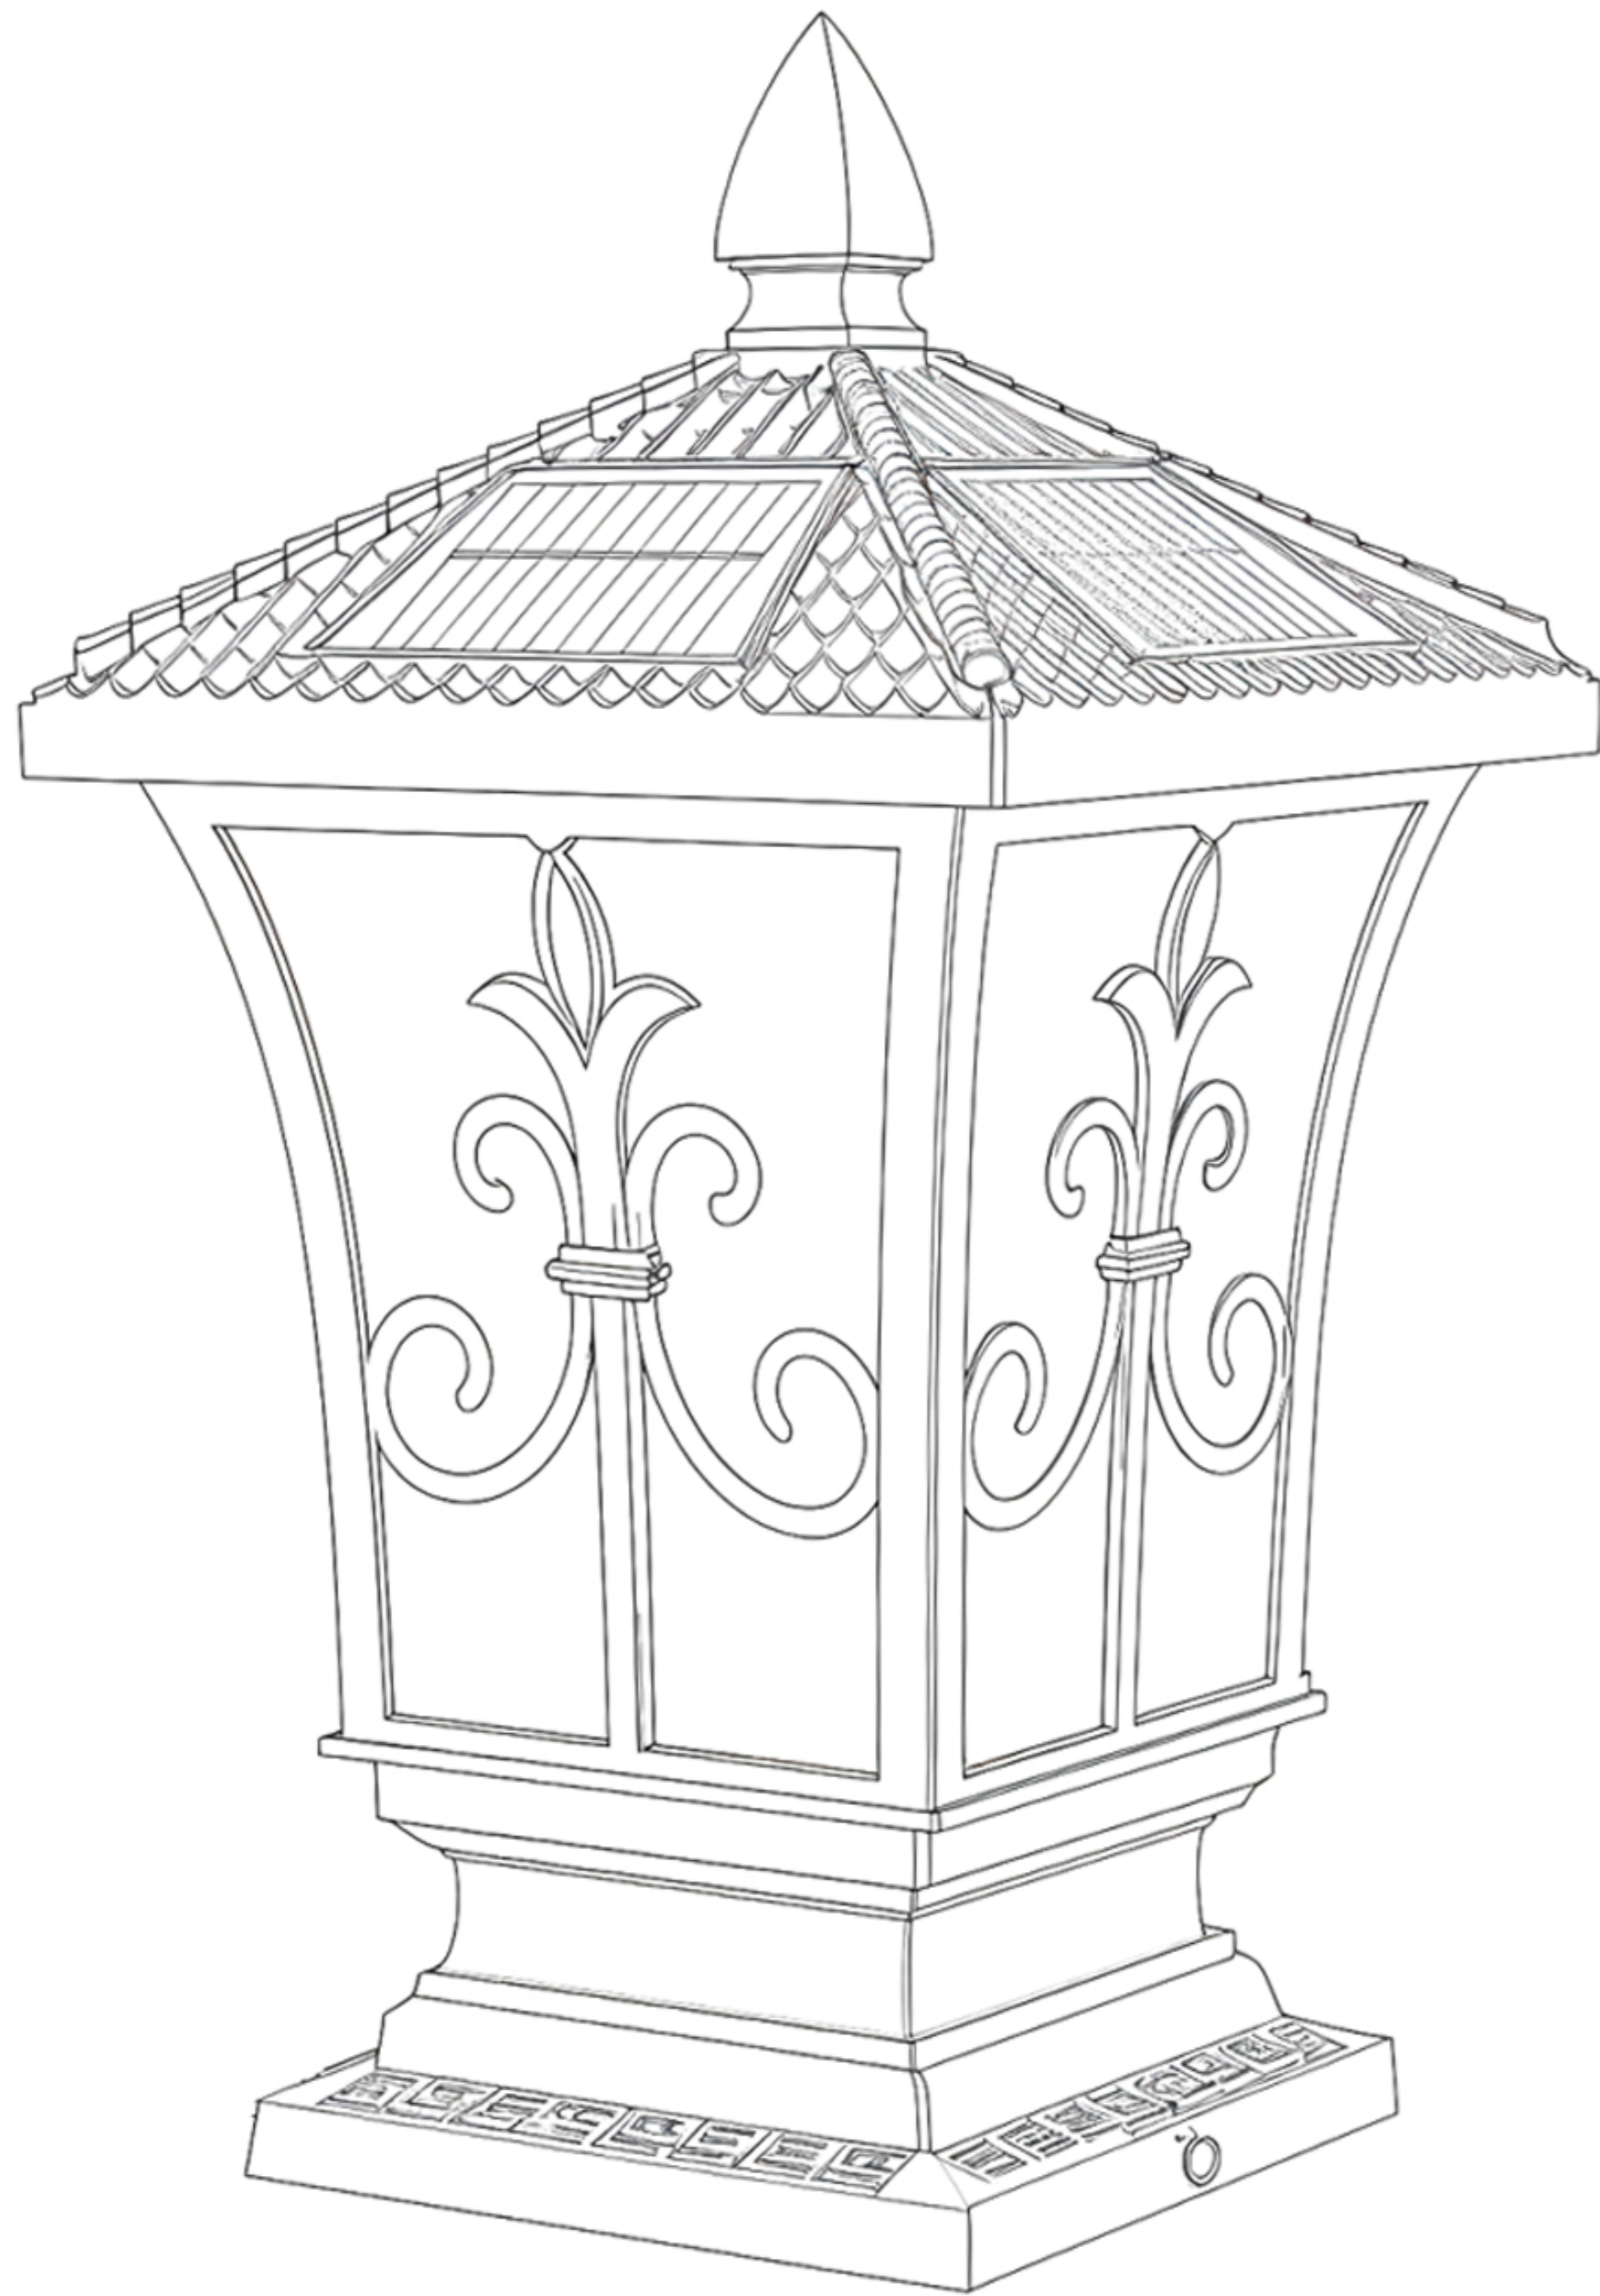

- ON Turn on
- OFF Turn off
- AOUT Auto Light Control Mode
- 1~3 Adjustment (Three Colors)
- 3H Auto Turn Off After 3H
- 5H Auto Turn Off After 5H
- 8H Auto Turn Off After 8H
- ☼ Reduce Light
- ○ Increase Light

Power connection usage method

Remove the screws on this side and the opposite side, take off the roof light cover, and then install the bulb. Before installing the bulb, please turn off the power first.

