

ASSEMBLY INSTRUCTION

- 1) Locate the part of the Cord(1) that the plug is on. It can be found on the back of the Lamp Base(2), close to the bottom.
- 2) Pull the Cord(1) (with the plug) away from the Lamp Base Bottom(2) until the Neck(3) reaches the top of the Base(2).
- 3) Screw the Neck(3) of the lamp into the Base(2), Pull the cord taut and screw in the neck until it becomes secure.
- 4) Add the Harp(4) onto the saddle located on the Neck(3).
- 5) Add the Shade(5) onto the Harp(4).
- 6) Add the Finial(6) onto the Harp(4).

*Please note that the screw, that attaches the Finial(6) to the Harp(4), is movable. If the shade appears to be askew, check this screw and adjust it- if needed- so it points straight up.


CAUTION – Refer to the wattage caution label located near the lamp holder for recommended maximum wattage - Do not exceed recommended wattage.

WARNING – Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp

has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

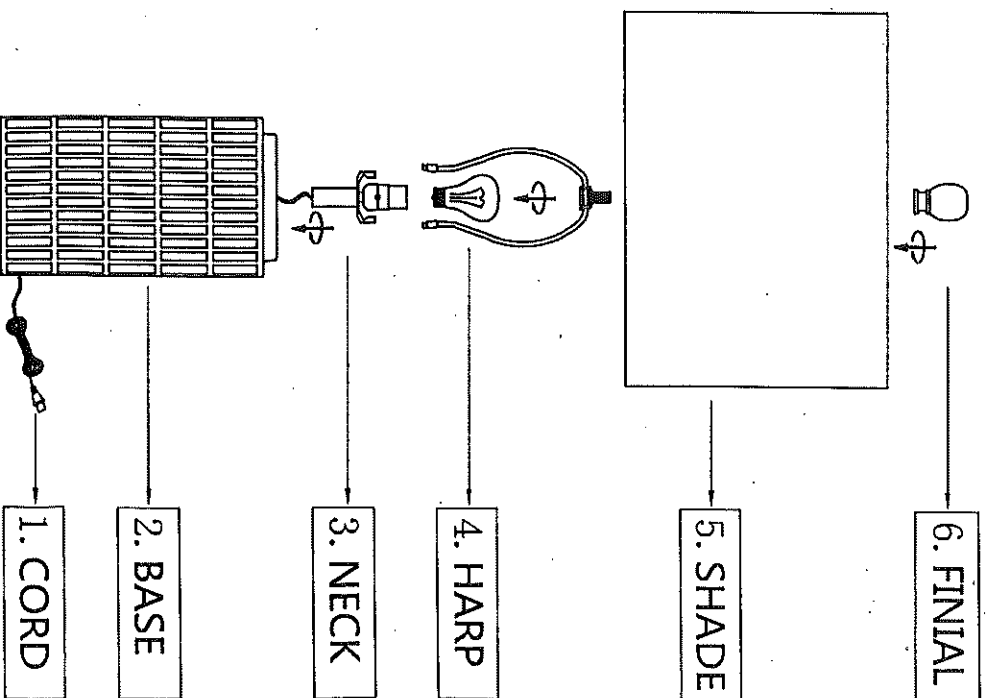

E26, Type A, ON/OFF 60W (NOT INCLUDE)