 
 


# ASSEMBLY INSTRUCTIONS

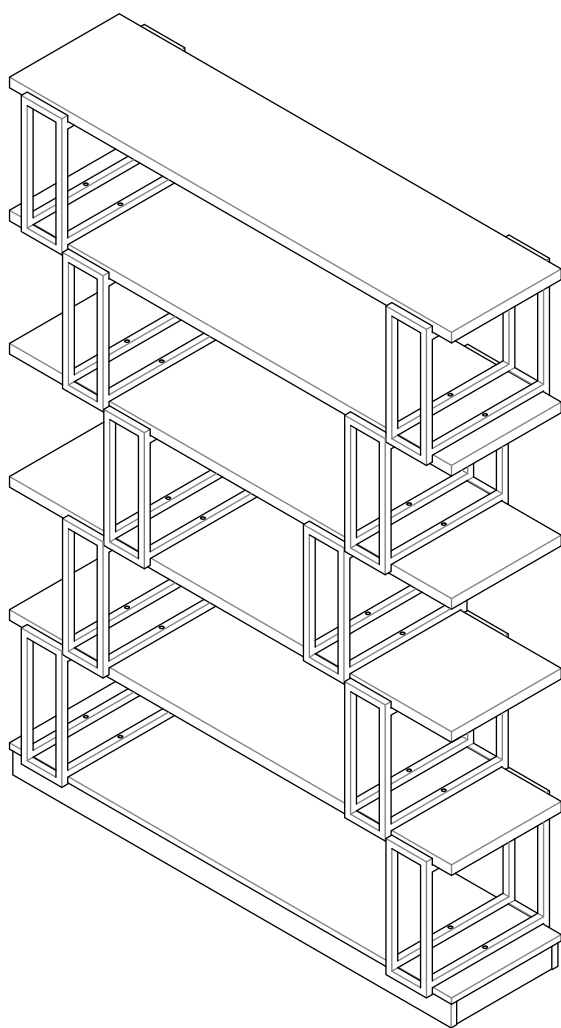

# BOOKCASE

# BOOKCASE

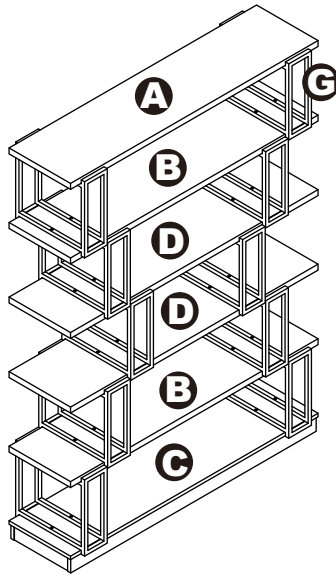 


## DIMENSIONS


Width - 47.24"  
Depth - 13.15"  
Height - 64.57"

## PARTS LIST


**A** X1

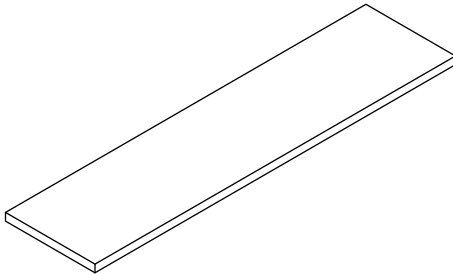


**D** X2

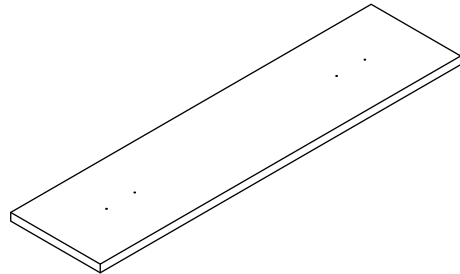 


**B** X2

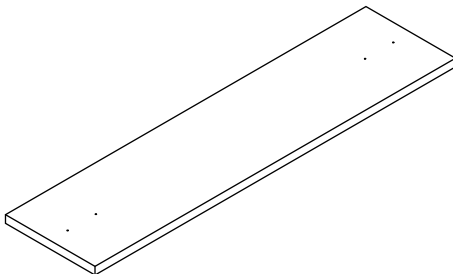 


**E** X2

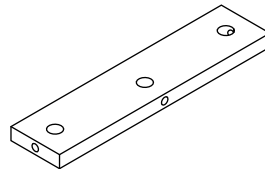 


**G** X10

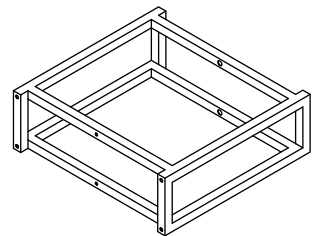 

**C** X1

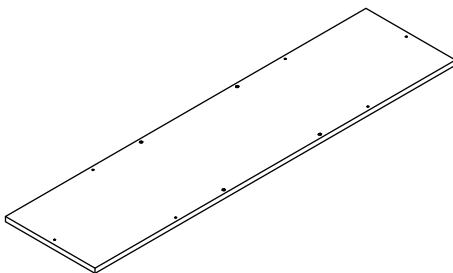 


**F** X2

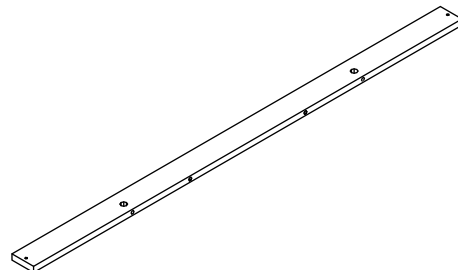 

## HARDWARE LIST

 **①** X10



**②** X10



**③** X4



**④** X40



 
**⑤** X6



**⑥** X1



**⑦** X1




**⑧** X1





# ASSEMBLY INSTRUCTIONS
 
## Step 1.

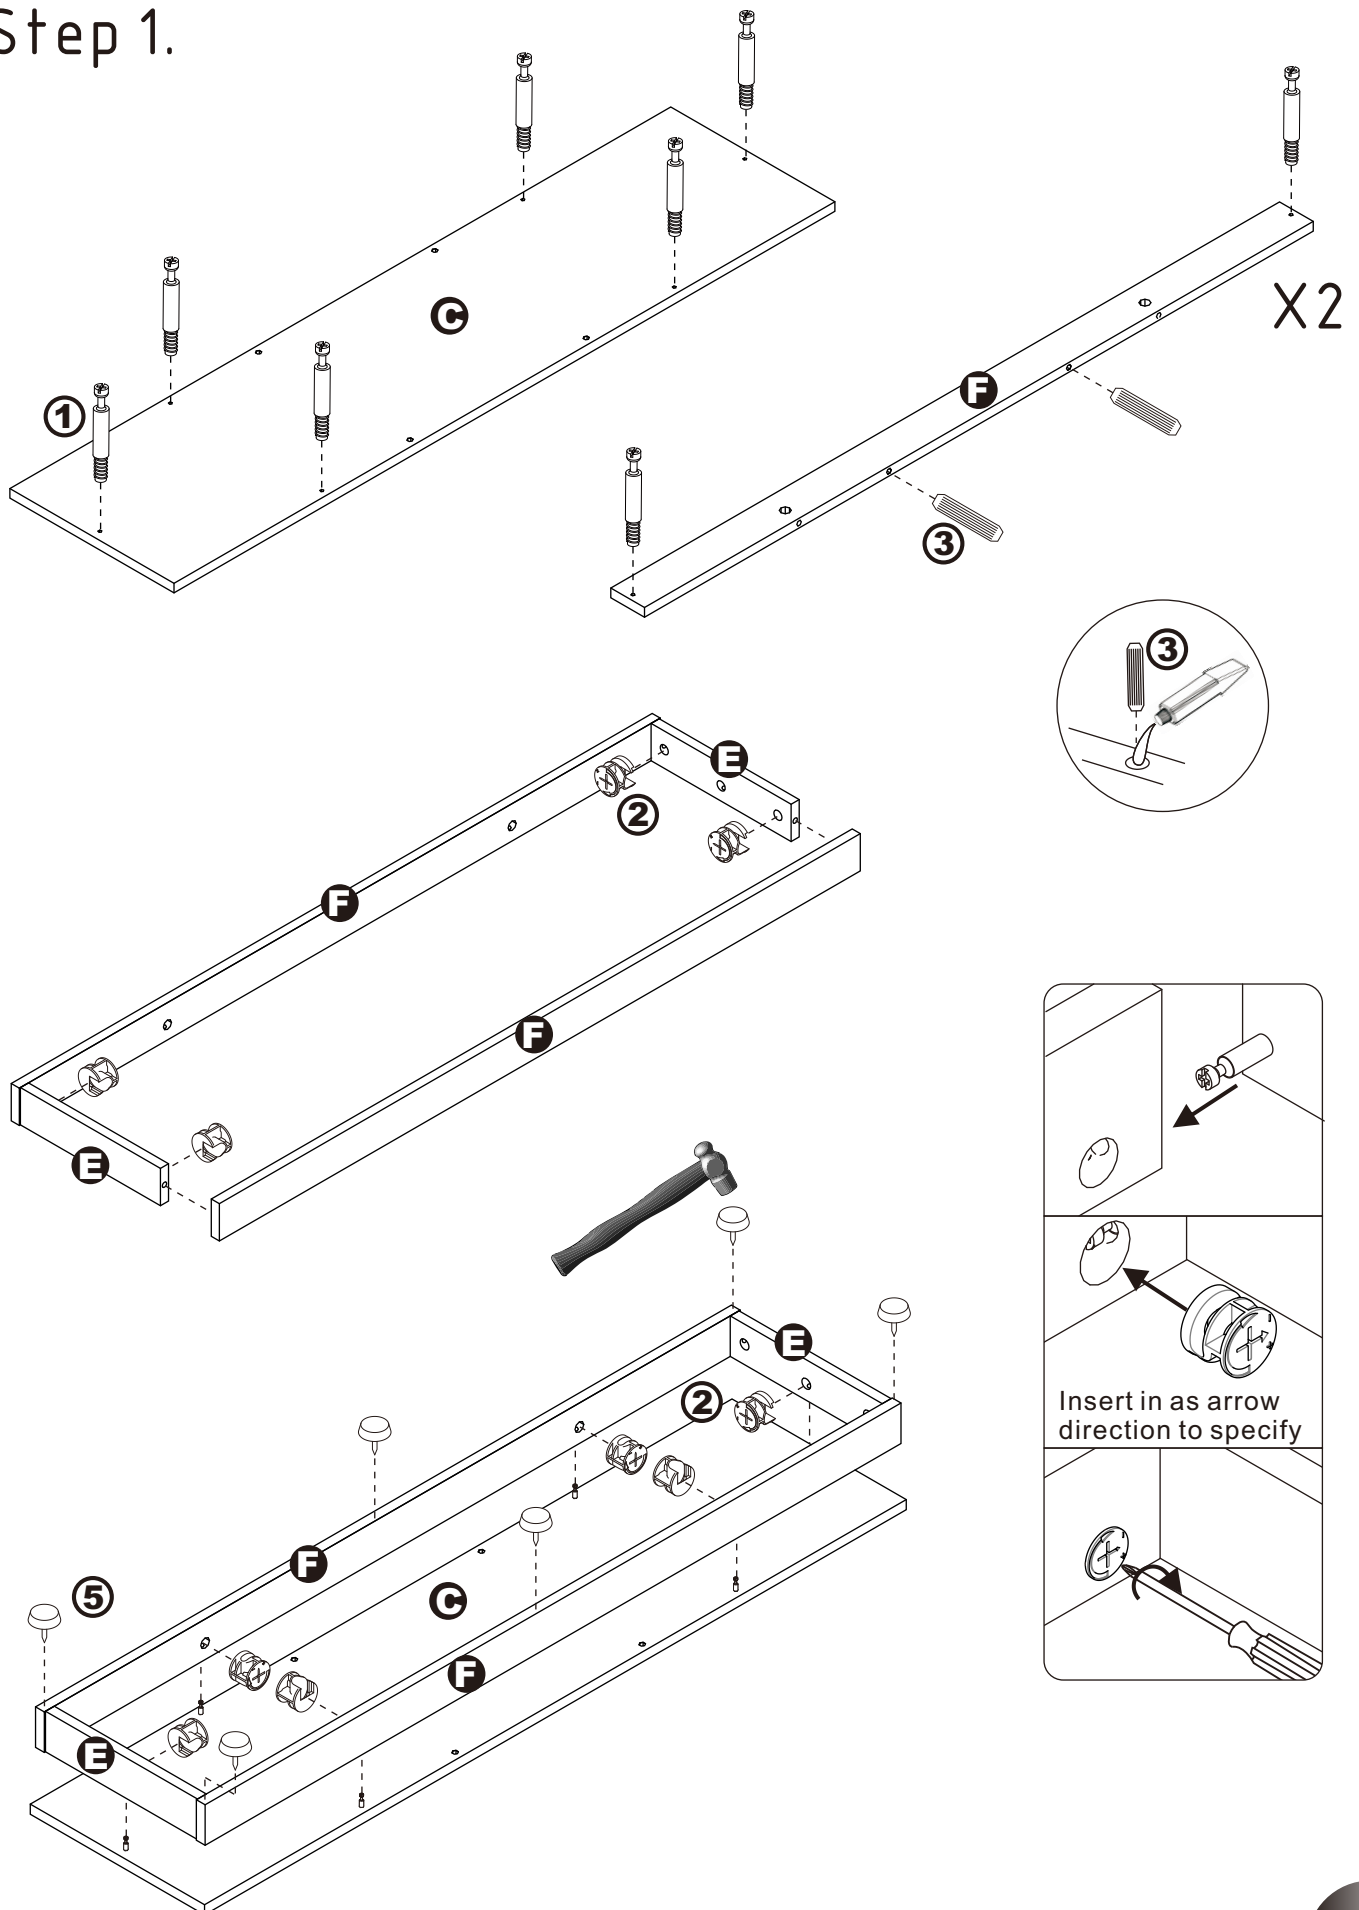



# ASSEMBLY INSTRUCTIONS
  
## Step 2.

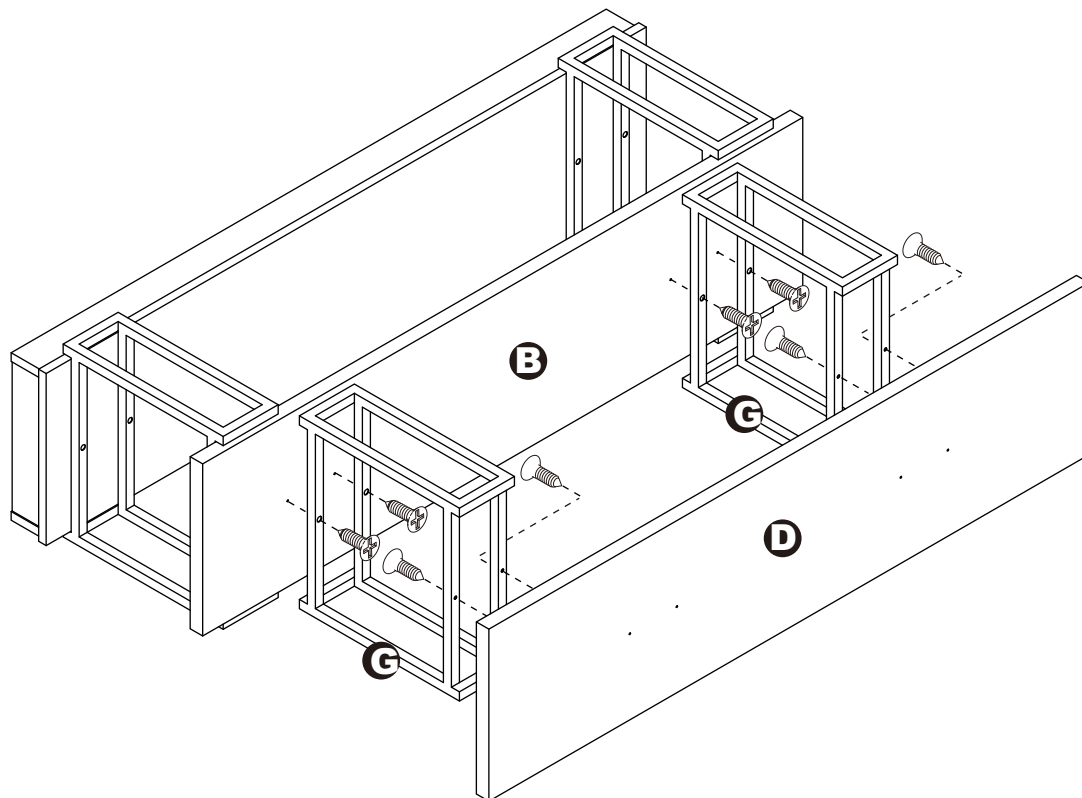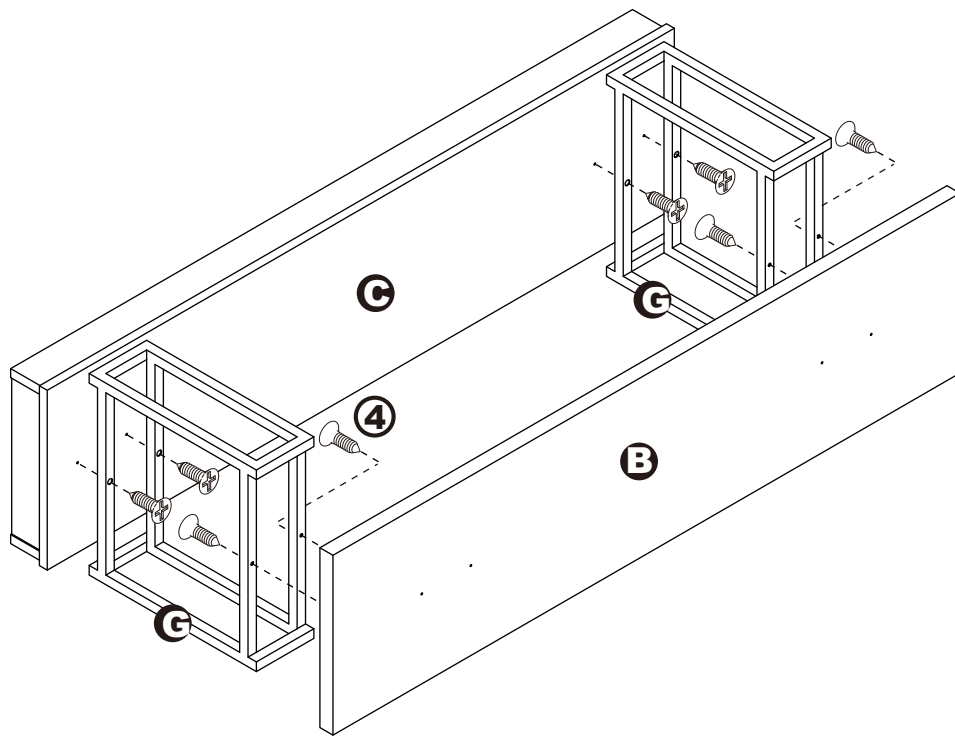




# ASSEMBLY INSTRUCTIONS
  
## Step 3.

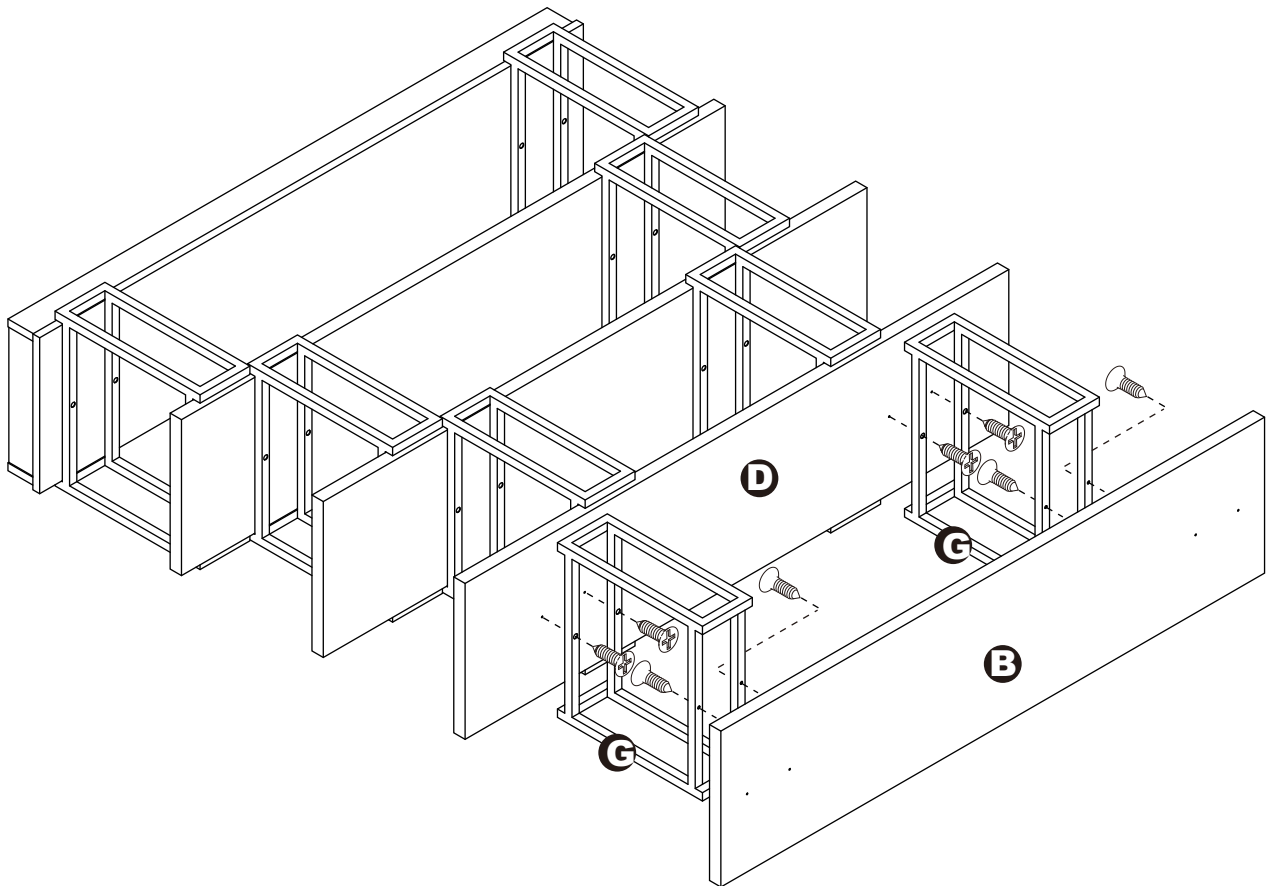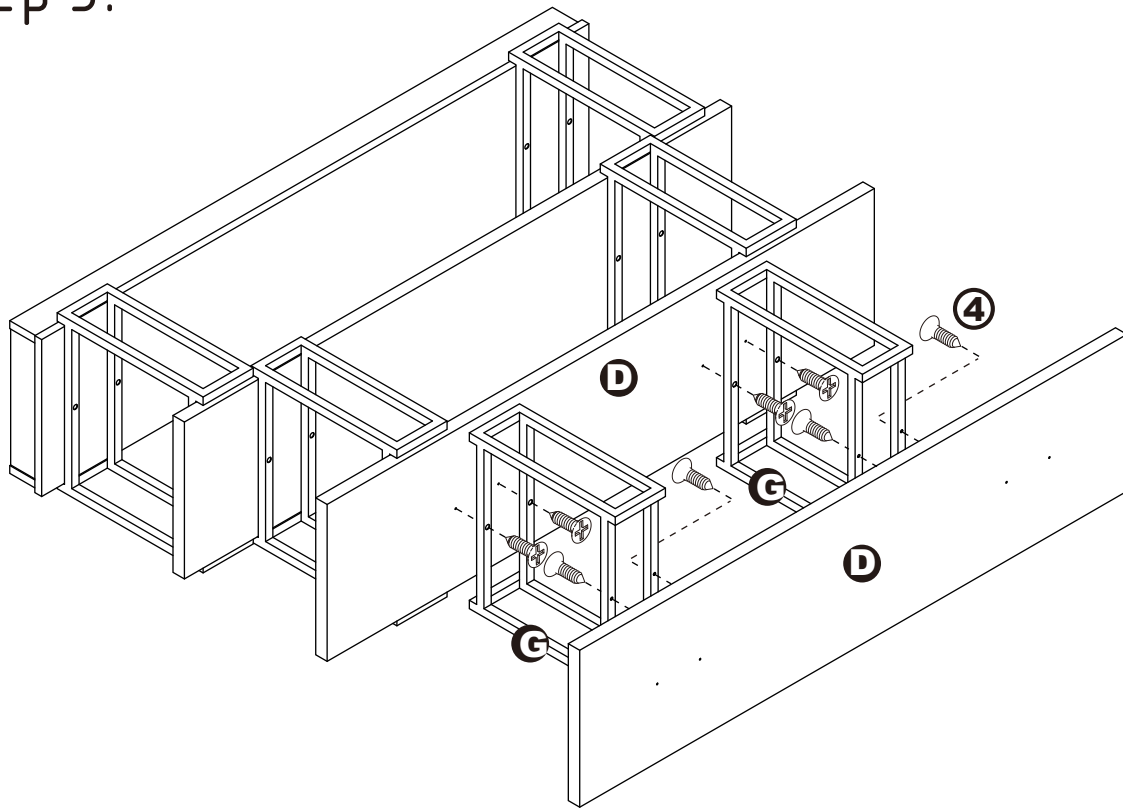

# ASSEMBLY INSTRUCTIONS
   
## Step 4.

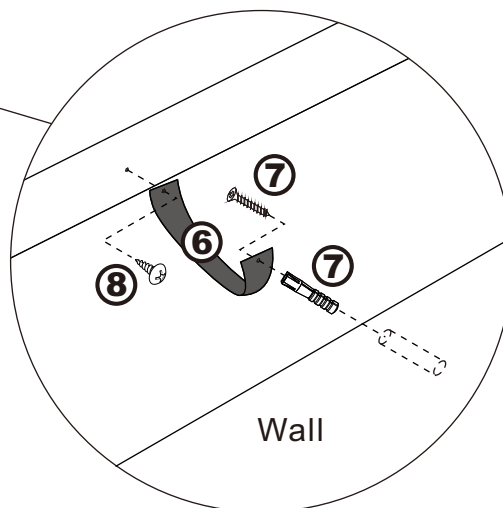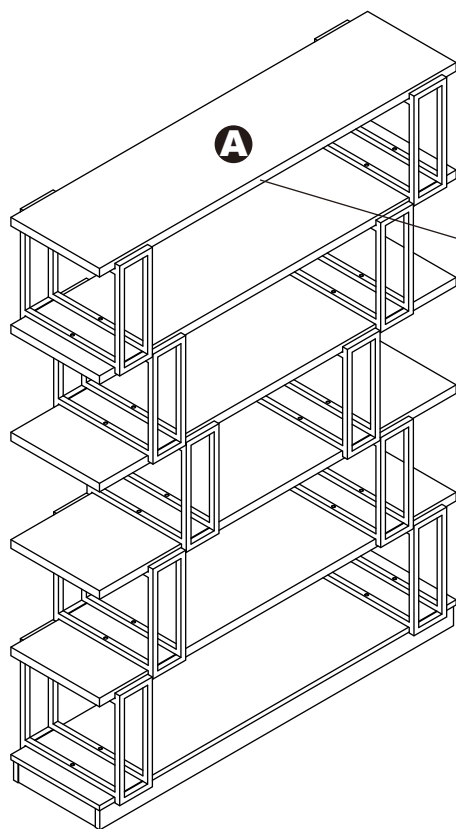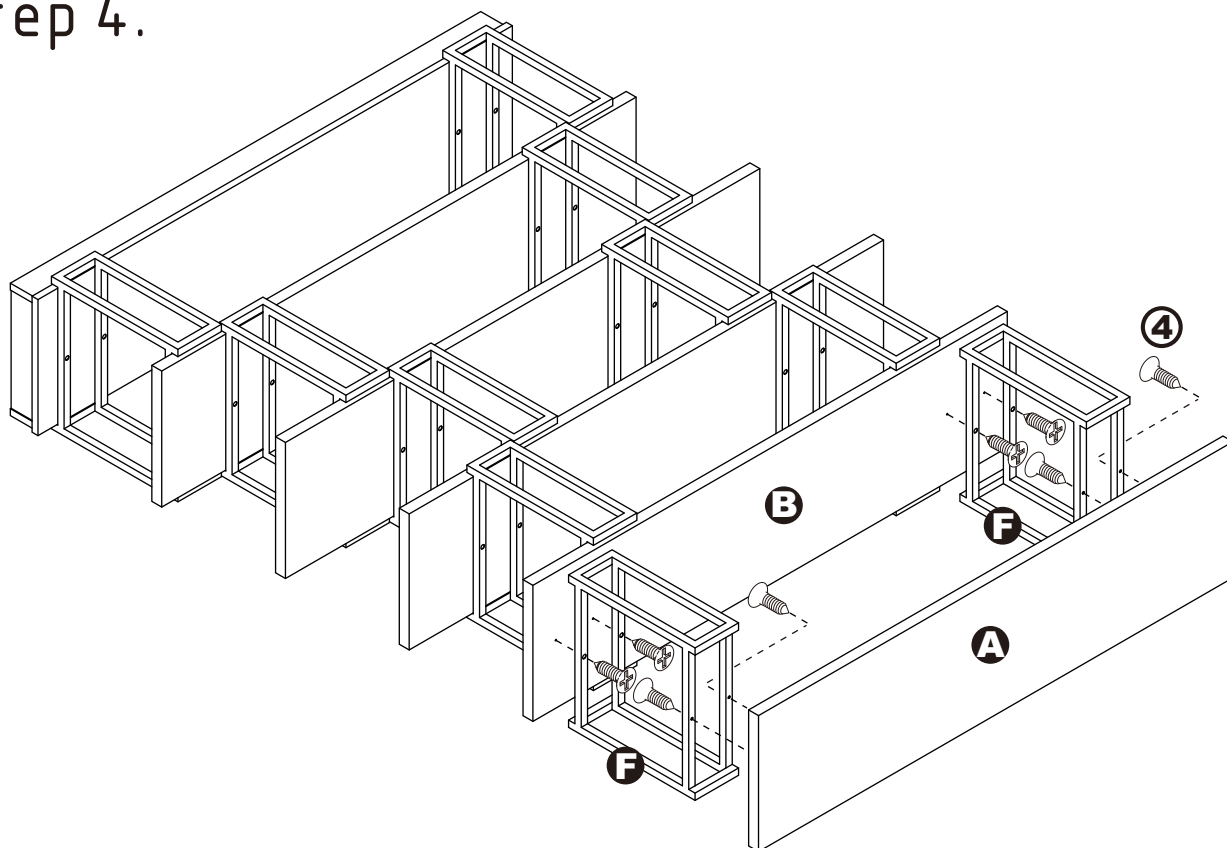

For safety, please use the strap to secure the unit on the wall

## ASSEMBLY IS COMPLETED

Make sure the product is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.