

# ASSEMBLY AND INSTALLATION INSTRUCTIONS

**WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.**

## Hardware Package (included):



Mounting Strap



Mounting Screw



Wire Nut



Expansion screw pipe



Ball Nut




Lock Washer



Lock Nut



Sloped Ceiling Adapter

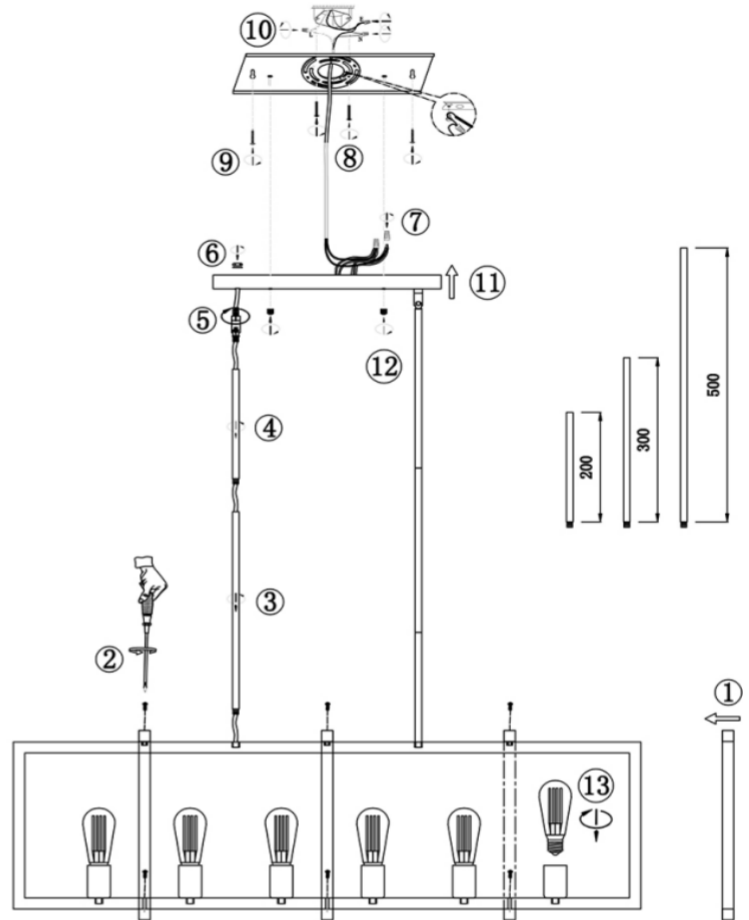

## Installation Steps

**Turn off the power at fuse or circuit box**

- 1-2. Use black screws to mount the frame in place.
- 3-5. Decide the hanging height, then attach the booms. (If you have a sloped ceiling, please use the sloped ceiling adapter to connect the boom to the canopy.)
6. Pass the boom wire through the canopy and tighten the boom with the lock nut and lowck washer.
7. Connect wires of the same color as follows:
  - Connect the white wires from the two booms to the short white wires provided and twist them into the wire nut.
  - Connect the black wires from the two booms to the short black wires provided and twist them into the wire nut.
- 8-9. Attach the mounting strap to the outlet box using the mounting screws. And mark the screw position, drill the holes, insert the expansion screw pipe into the hole, fix the mounting strap on the ceiling with screws.
10. Make wire connections using wire nuts as follows:
  - Connect the white wire from the fixture to the white wire from the power source.
  - Connect the black wire from the fixture to the black wire from the power source.
  - Connect the ground wire from the canopy to the house grounding wire.
- 11-12. Attach the fixture onto the outlet box and screw two ball nuts.
13. Install the bulbs. (not included)