 


# Assembly Instructions

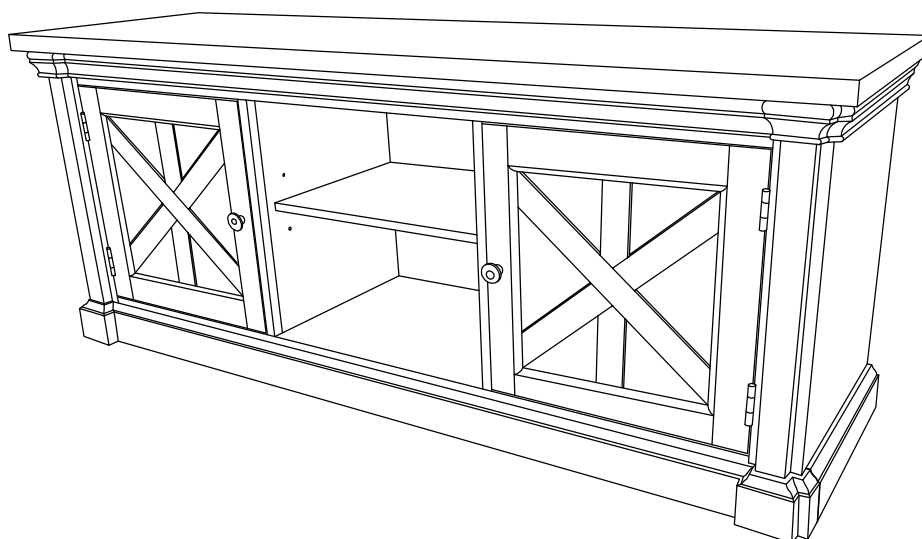

 
 
## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

## Tools Required For Assembly:

Allen Wrench

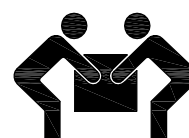

2 PERSONS RECOMMENDED

# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

## BASIC ASSEMBLY TECHNIQUES



When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.



Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.



Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

 


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.




Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

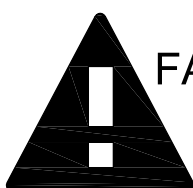


**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

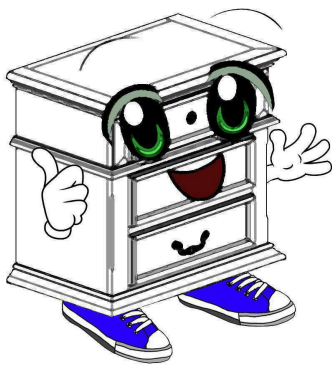 

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

## Parts List

 


#1 x 1pc  
Top Frame




#2 x 1pc  
Right Medium Panel


 
#3 x 1pc  
Left Medium Panel




#4 x 1pc  
Front Frame

 


#5 x 2pcs  
Side Back Panel



 
#6 x 1pc  
Medium Back Panel




#7 x 1pc  
Bottom Panel

 

#8 x 2pcs  
Support Wood

 


#9 x 1pc  
Medium Shelf

 

#10 x 2pcs  
Side Shelf
 
## Hardware List



#A x 1pc  
Allen Wrench M4



 
#B x 8pcs  
Bolt Ø1/4"X1-1/4"



#C x 8pcs  
Lock Washer Ø1/4"



#D x 8pcs  
Flat Washer Ø1/4"



#E x 12pcs  
Shelf Support



#F x 2pcs  
Pull

 


#G x 2pcs  
Screw Ø5/32"X1-1/4"




#H x 2pcs  
Wood Screw Ø8X1"

# Exploded View

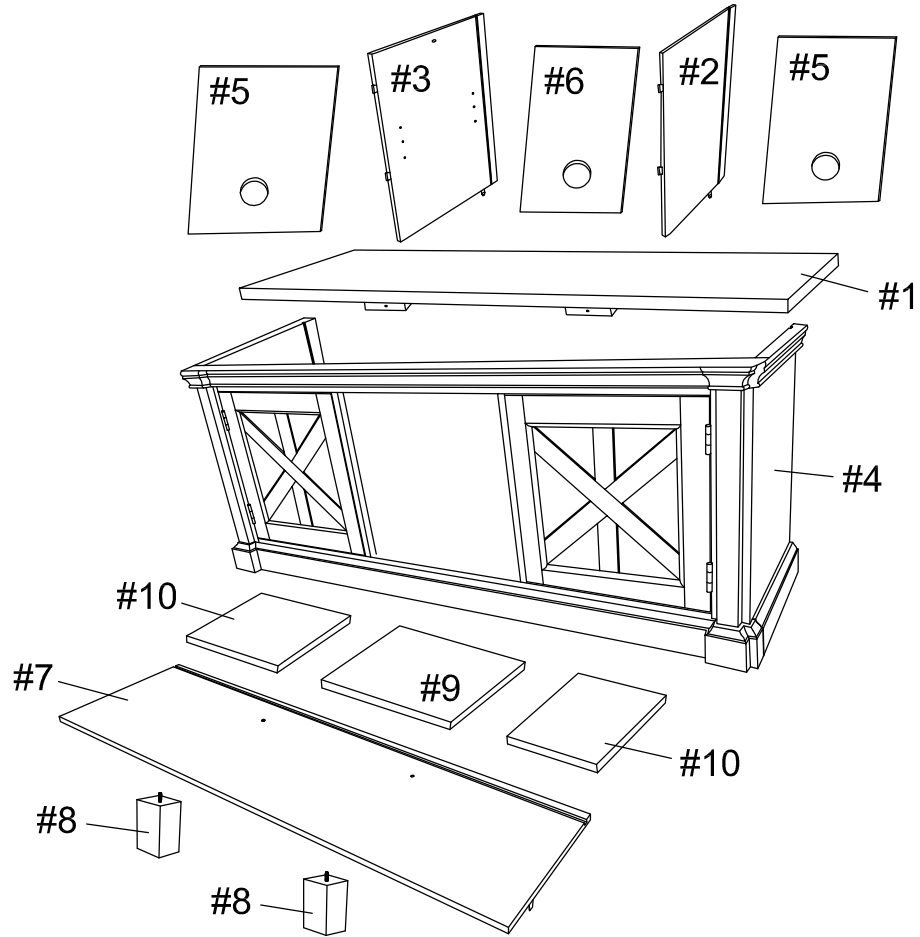


Unfold front frame (#4).

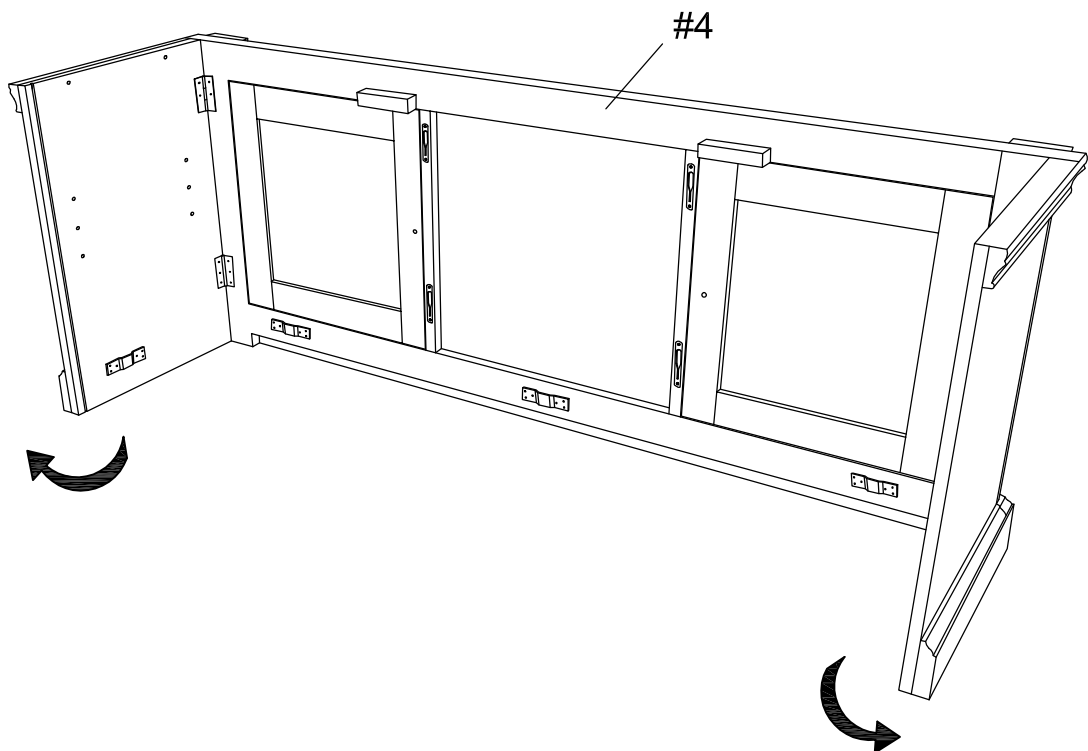 




 Attach support woods (#8) to the holes of the bottom panel (#7).

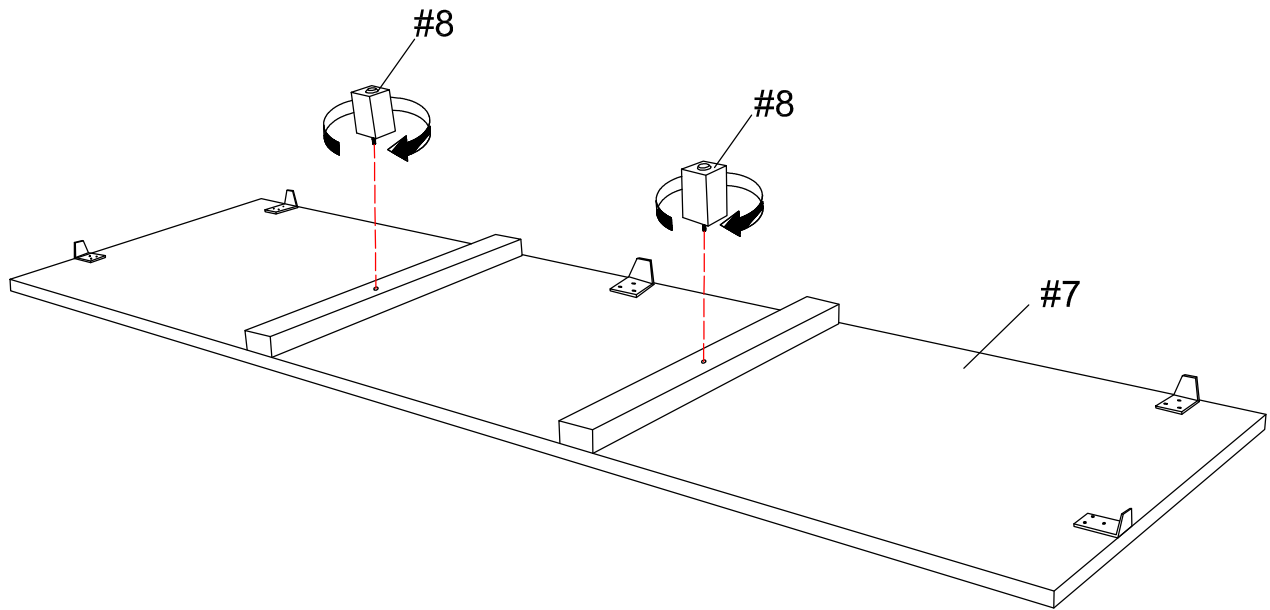

 
Align and insert bottom panel (#7) to the brackets of the front frame (#4).  
Make sure the bottom panel (#7) is in place.

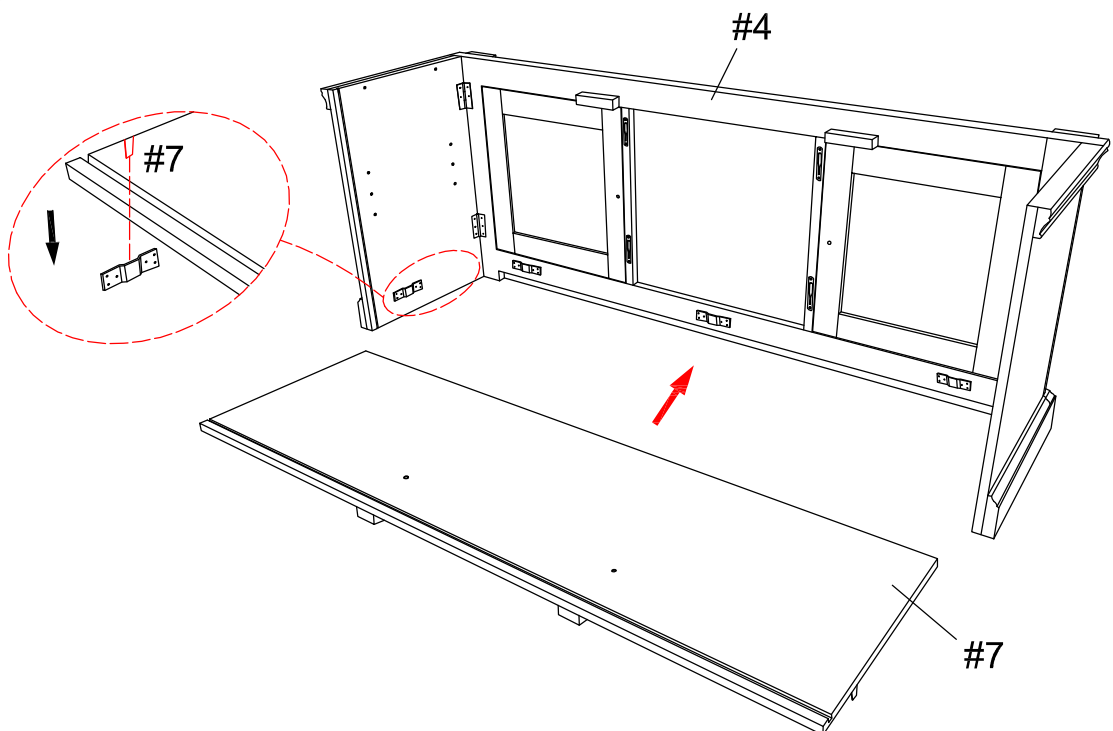




#5

 Attach right and left panels (#2,3) to the bottom and front frames (#7,4).

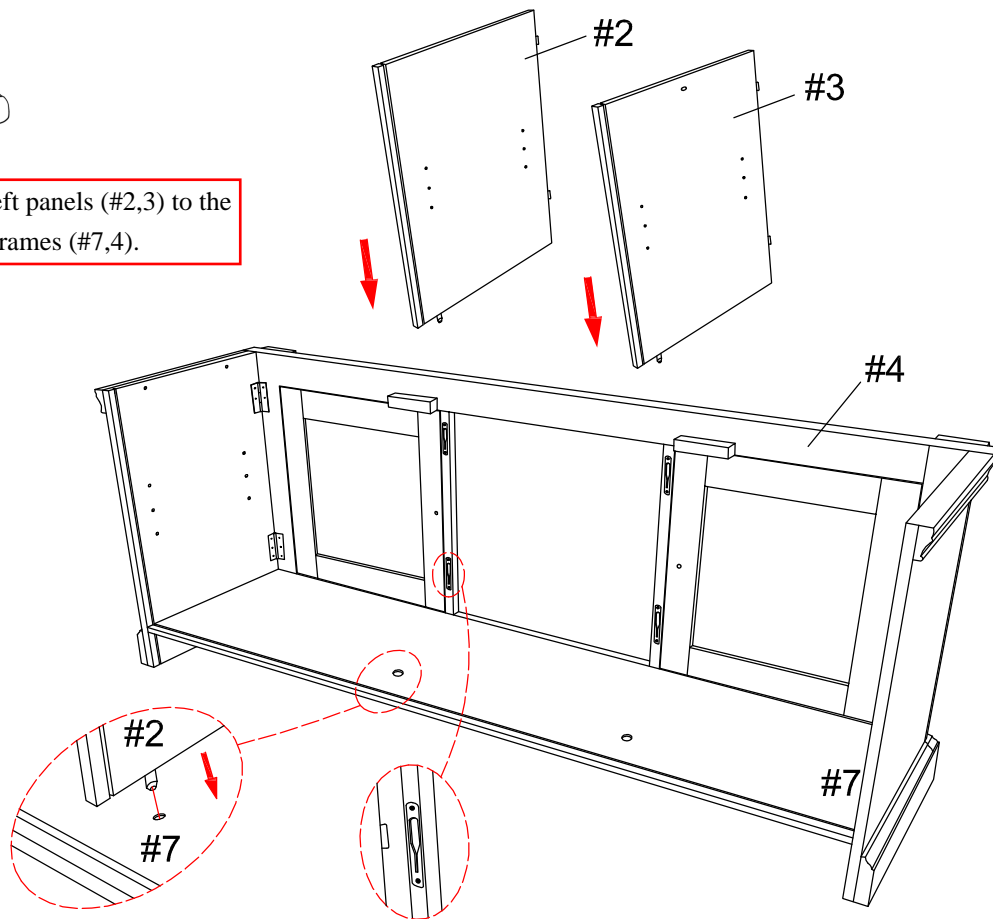

#6

 
Slide back panels (#5,6) through the thin lined gaps of the TV-Stand.

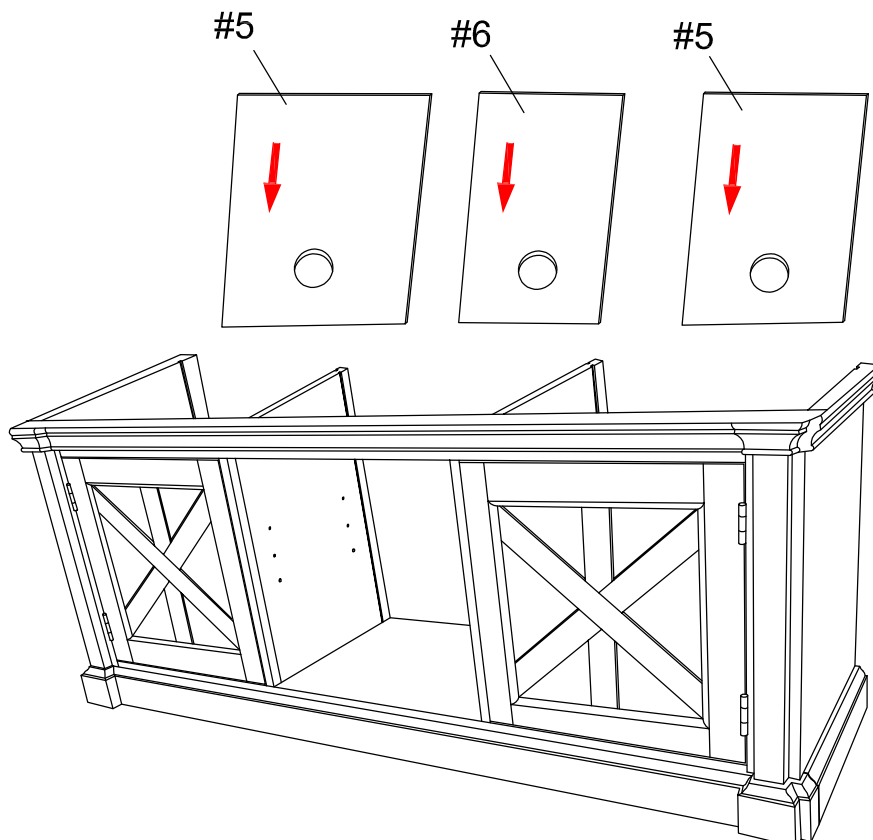




#7
 
#B x 8pcs  
#C x 8pcs  
#D x 8pcs

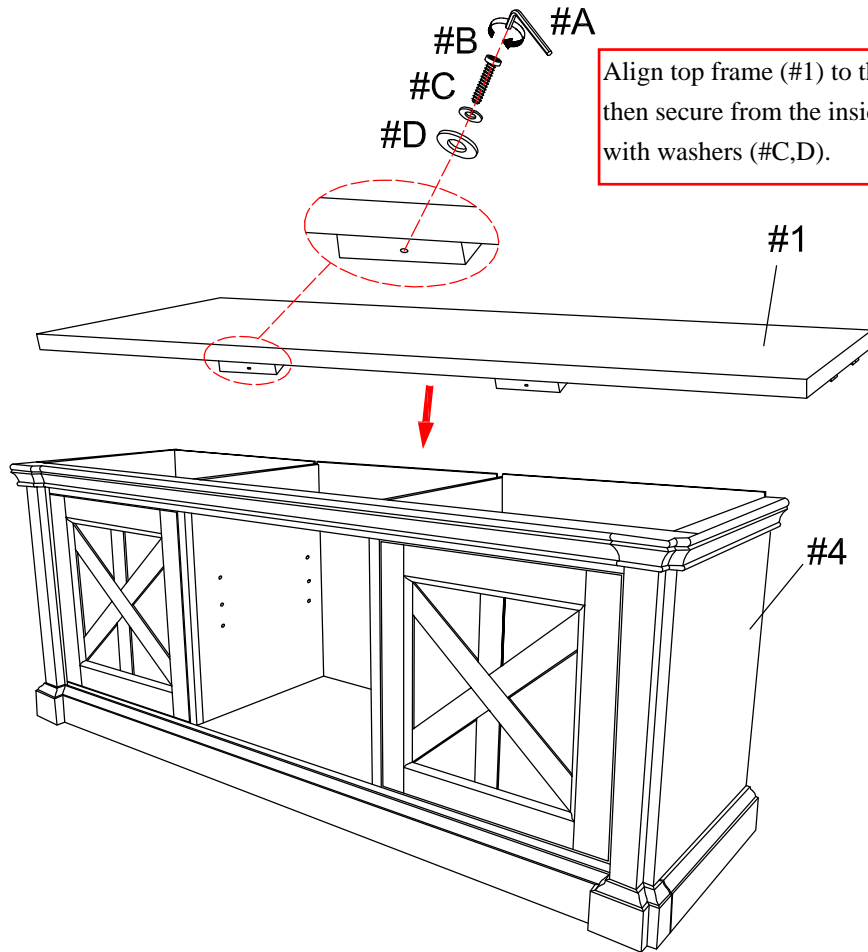

#8
 
#E x 12pcs

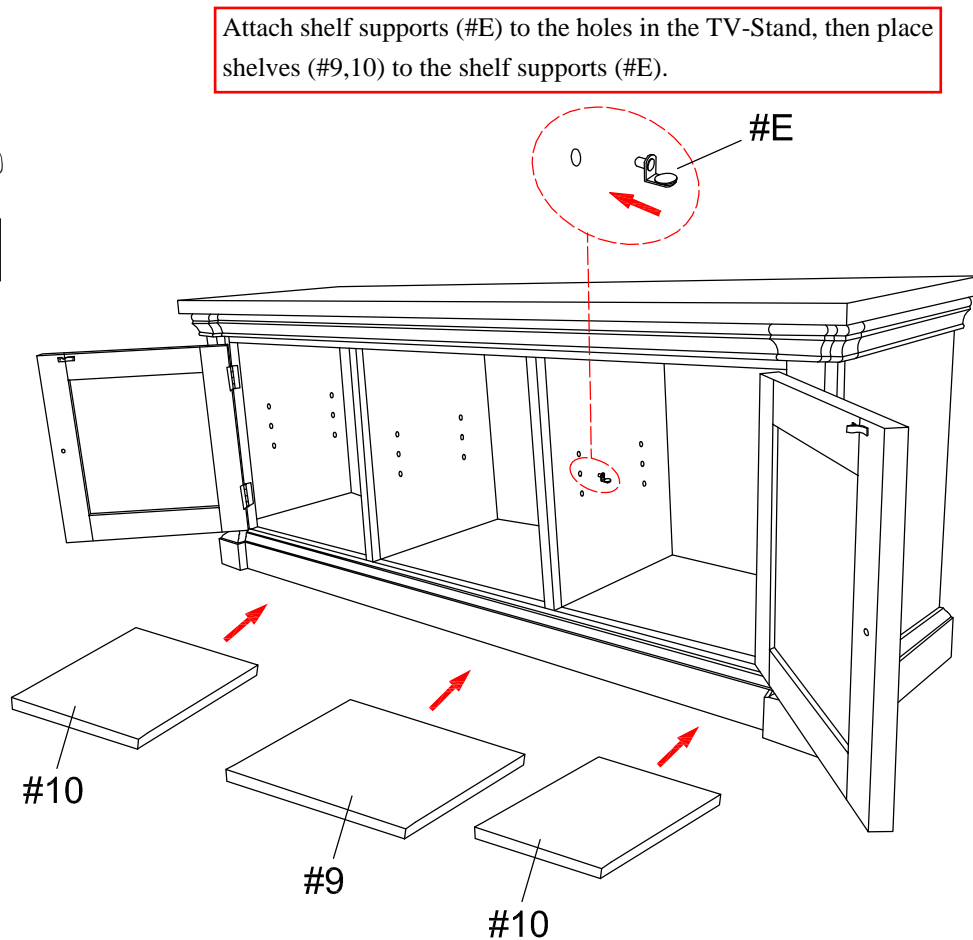




#9

Align and secure knobs (#F) to the doors by using bolts (#G).
 
#F x 2pcs  
#G x 2pcs

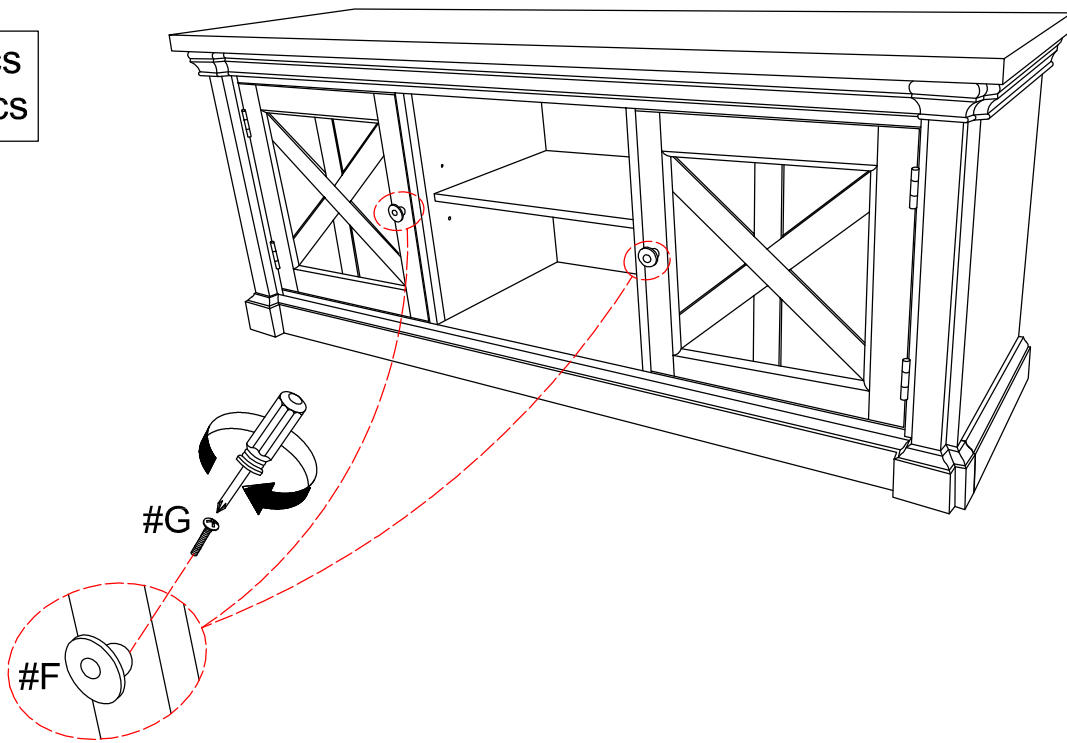

#10

If the guest buy pier cabinet, can put the TV stand on the back of the top panel flat iron, secure a wood screw , connect the TV stand and 2 pier cabinets.

#H x 2pcs

