

# 6 Lights Industrial Chandeliers

NOTE: ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES!

## ■ Specification

Voltage: 110-130V

Material: Metal

Color: Black

Lamp holder: E12

Bulb info: MAX 60W TYPE-CA10

Fixtures Dimensions: 20in/510mm(D)\*20in/510mm(H)

Installation Dimensions: 23~71in/585~1805mm(H)

Wire Length: 59in/1500mm

Usage: Indoor use only

## ■ Easy Installation

1. Adjust the arm Angle so that the arm is in the correct position.
  2. Pass **Supply Wires** and **Ground Wire** through the **Fixture Loop** onto the **Fixture Nipple**. Hand tighten until snug
  3. Secure the **Crossbar** onto the **Outlet Box** with **Outlet Box Screws** (Non inclus), Tighten until snug.
  4. Thread one **Hex Nut** onto top end of the **Nipple**.
  5. Place one **Lock Washer** over the top end of the **Nipple** and then thread the **Nipple** into the center lock hole of the **Crossbar**.
  6. Using pliers, thread the **Hex Nut** against the **crossbar** and hand tighten until snug. the Fixture according to your
  7. Thread another **Hex Nut** onto the bottom end of the **Nipple**. hanging height. Nut. Hand tighten until snug.
  8. Adjust the **Fixture Chain** to your desired length by removing the links if needed.
- \* Please note that depends on chain material thickness, you might be required to use chain pliers to spread links open.
9. Pass **Supply Wires** and **Ground Wire** through the **Fixture Loop** onto the **Fixture Nipple**. Hand tighten until snug
  10. Pull the supply wires through the **Fixture Chain** alternating links. **And then pull the wires through the following components in turn: Canopy Lock Ring, Ceiling Canopy, Canopy Chain Loop, Lock Washer, and Nipple.**
  11. Place **Lock Washer** over the end of the **Nipple** and thread the **Canopy Chain Loop** onto the end of the **Nipple**.
  12. Using plier, thread the **Hex Nut** against the **Canopy Chain Loop** and tighten until snug.
  13. Attach one end of the **Fixture Chain** onto the **Fixture Loop** and attach the another end of the **chain** onto the **Canopy Chain Loop** with the **Climbing Chain Loop**.
  14. Using wire connectors not supplied connect the **House Ground Wire** to the **Fixture Ground Wire** connect the now Restore electricity Retain this sheet for future reference. **House White Wire** to the **Fixture Supply Wire White Ribbed Side** connect the **House Black or Red Wire** to the **Fixture Supply Wire Black or Smooth Side** Wrap each connection with approved electrical tape.
  15. Push the **Ceiling Canopy** upward over the **Outlet Box**.
  16. Thread the **Canopy Lock Ring** onto the **Canopy Chain Loop** and tighten until snug to secure the **Ceiling Canopy**.
  17. Install Bulb (Non inclus) .
- \* **Install correct bulbs referring to fixture markings and or labels for maximum wattage. Your installation is completed now Restore electricity Retain this sheet for future reference.**

## ■ Package Include

1x 48" Fixture Chain

1 x Fixture Loop


1 x Ceiling Canopy

1 x User Manual

1x Fixture


1 x Crossbar with Nipple

1 x Canopy Chain Loop

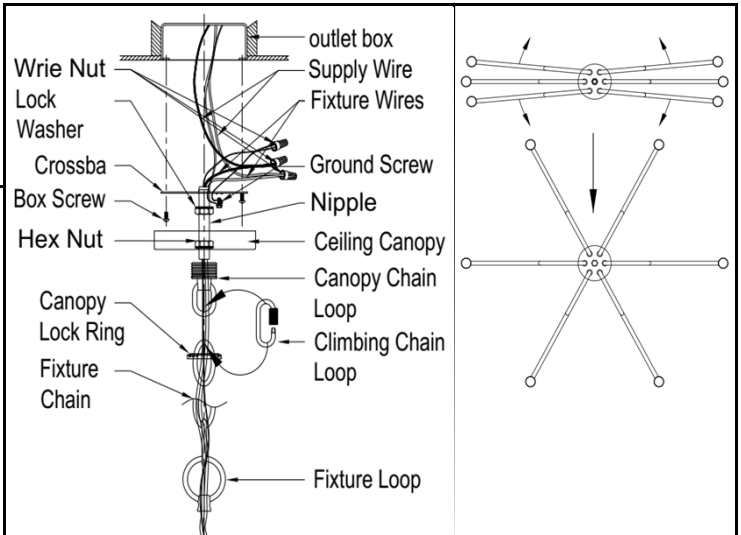

### Wiring Instructions

### Adjust the Arm

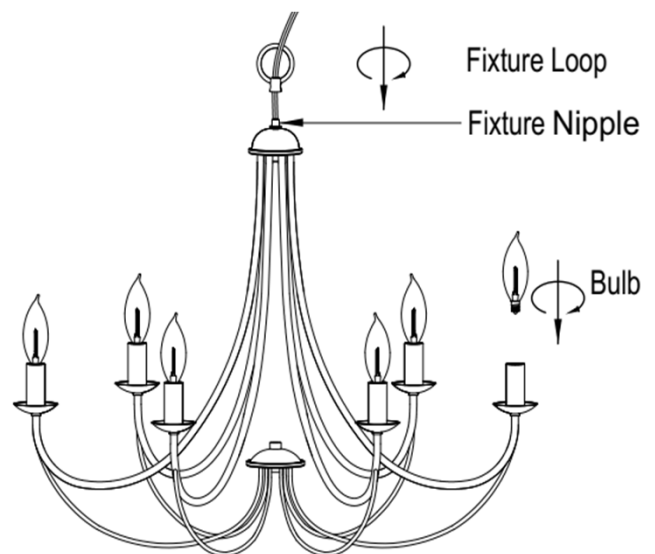

### Fixture Installation