

DIY Curtain Track Assembly User Manual




Finish Curtain track

Curtain model:

Finish lenght= wall to wall-(1 to 4)CM

Wall mounting finish lenght= window size + 20CM

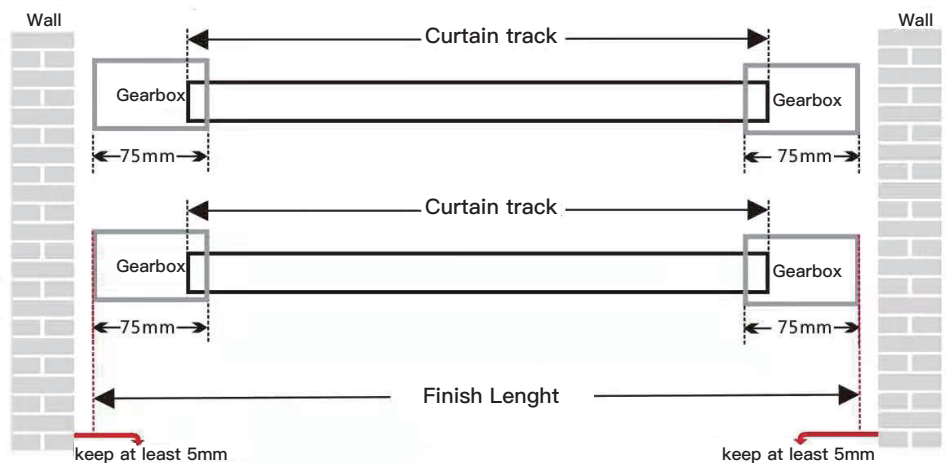

Step 1:

The belt passes through the main gear box and the track completely.
Please note that the track cannot be inserted into the main gear box.




Step 2:

Both of the end belt divide to show 4 tooth of the track.
Then cut it.
Please note that the track cannot be inserted into the main gear box.



Step 3:

Press on gear box, take out the belt, line up the end, make the mark.

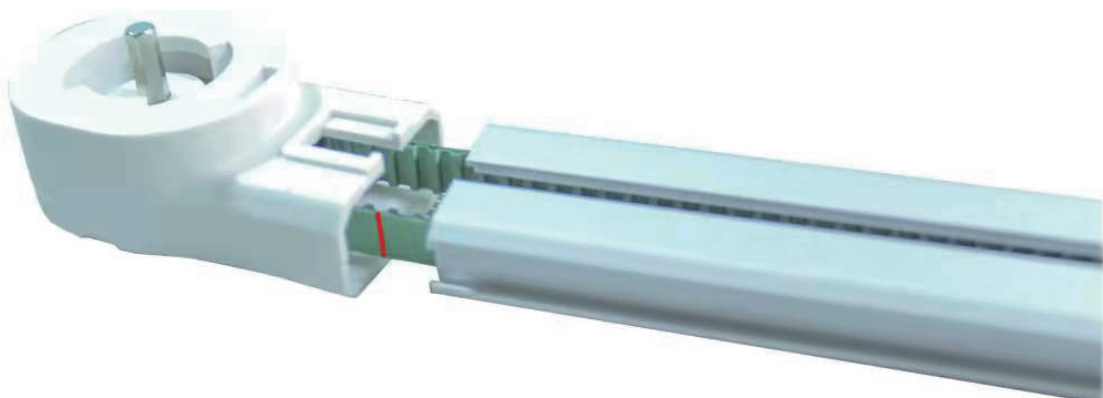

Step 4:

At the end of belt, install the belt clamp.



Step 5:

After installing the belt clamp, install the first carrier assembly. Please note that the carrier assembly direction.




Step 6:

After the assembly of the carrier, slide it into the track.



Step 7:

Pull out the belt about 10–15cm from main gear box side, make the second mark with 8 tooth space from the first mark.

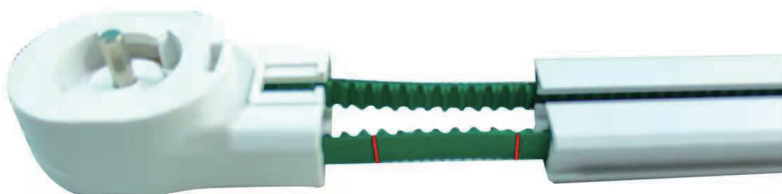

Step 8:

Install the belt clamp and carrier assembly. Please note that the carrier assembly direction.



Step 9:

Assemble the corresponding accessories: runners, buffers and track locker. Standard quantity of runners: 8 pcs/1meter, and so on.



Step 10:

After the accessories are put in, tighten the screws of the track locker.
The part of main gear box is assembled.



Step 11:

Pass the belt through vice gear box then install clamp and second carrier assembly.
Please note that the direction of the first carrier must be consistent.



Step 12:

After install the second carrier, please be sure to insert the pin to fix.




Step 13:


Install carrier arm and other components, then tighten the carrier screw.
Put into track locker and tighten the screw.



Step 14:

Install top mount bracket.
Standrad quantity of top mount bracket: 2pcs/1meter, and so on.

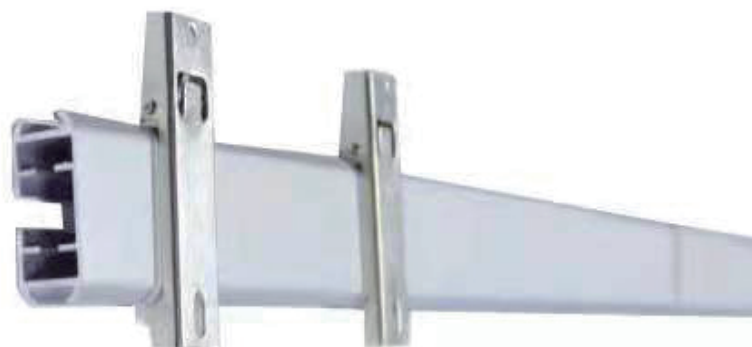

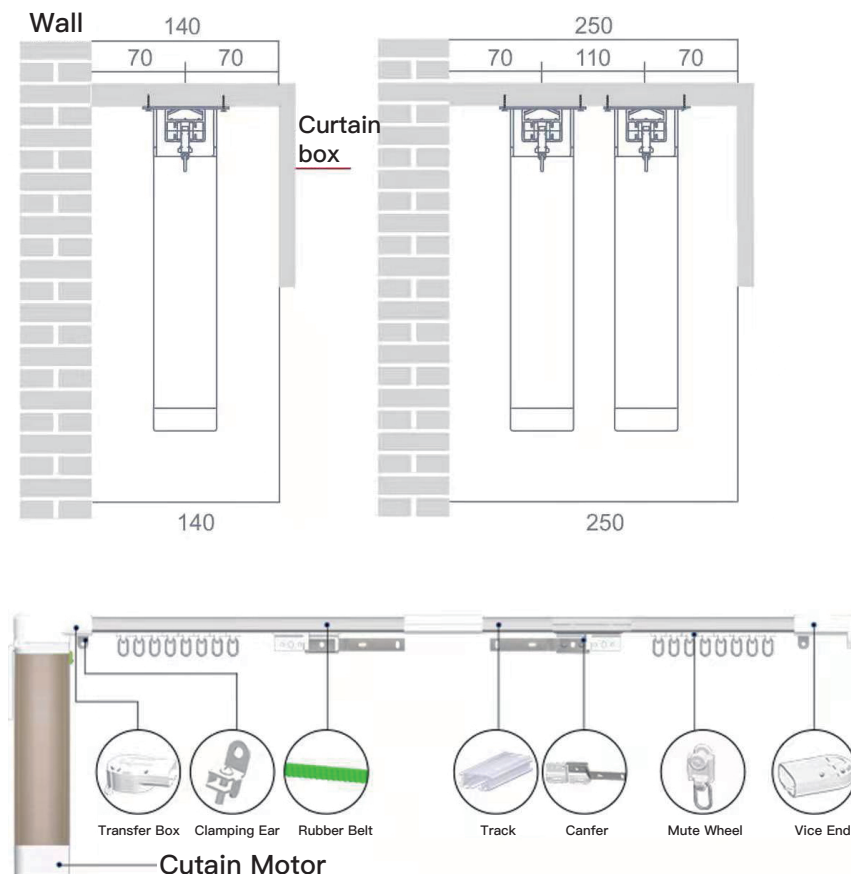


SERVICE

1. During the free warranty period, if the product breaks down during normal use, we will offer free maintenance for the product.
2. Natural disasters/man-made equipment failures, disassembly and repair without the permission of our company, no warranty card, products beyond the free warranty period, etc., are not within the scope of free warranty.
3. Any commitment (oral or written) made by the third party (including the dealer/service provider) to the user beyond the warranty scope shall be executed by the third party.
4. Please keep this warranty card to ensure your rights.
5. Our company may update or change the products without notice. Please refer to the official website for the updates.

RECYCLING INFORMATION

 All products marked with the symbol for separate collection of waste electrical and electronic equipment (WEEE Directive 2012/19 / EU) must be disposed of separately from unsorted municipal waste. To protect your health and the environment, this equipment must be disposed of at designated collection points for electrical and electronic equipment designated by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences for the environment and human health. To find out where these collection points are and how they work, contact the installer or your local authority.



WARRANTY CARD

Product Information

Product Name _____
 Product Type _____
 Purchase Date _____
 Warranty Period _____
 Dealer Information _____
 Customer's Name _____
 Customer Phone _____
 Customer Address _____

Maintenance Records

Failure date	Cause Of Issue	Fault Content	Principal

[Subscribe here](#)

Please read the instruction manual carefully before using the product