

ASSEMBLY INSTRUCTIONS

 
TV STAND

ASSEMBLY
REQUIREMENTS

2 – Person
Assembly

2.5Hour
Assembly Time
(Approximate)

Tool Required
(Not Provided)



Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware.
Replacement parts are normally shipped within 2 or 3days.

We appreciate your business!

ASSEMBLY PREPARATION:

1. Remove all packaging materials ,staples and packing straps from the carton.
2. Refer to Part List and Hardware List and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on clean, flat and soft surface (e.g .carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION:

1. Keep ALL HARDWARE PART OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS

TIPS FOR ASSEMBLY:

 
1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product ;only use the product for which it is intended.

CARE AND MAINTENANCE:


- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquids to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g hot drinks)directly onto the wood surface.
- Do not drag and pull your furniture.

This product is for indoor and household use only –not for commercial or industrial use.

INSTRUCTION FOR CAM-BOLT & CAM-LOCK


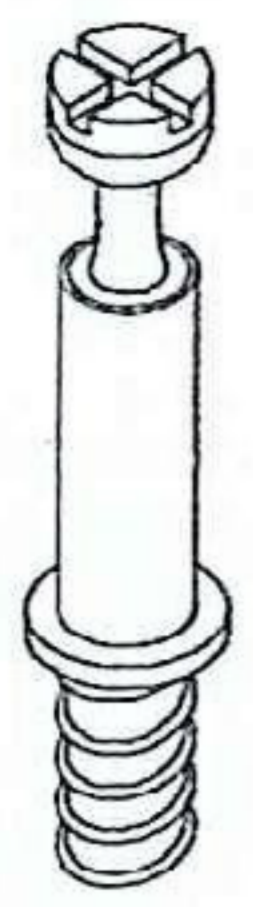


CAM-BOLT

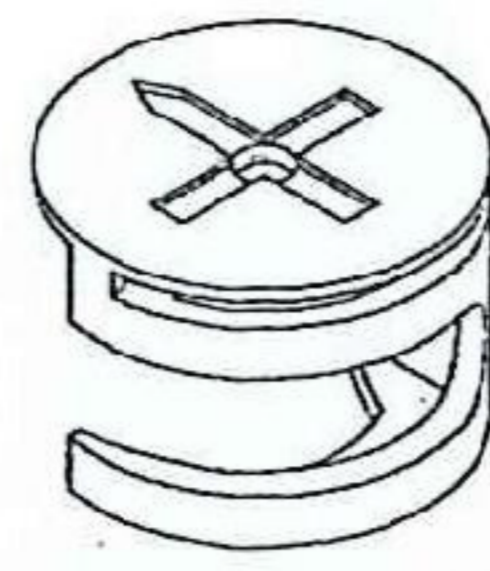 


CAM-LOCK

  
Tools Required

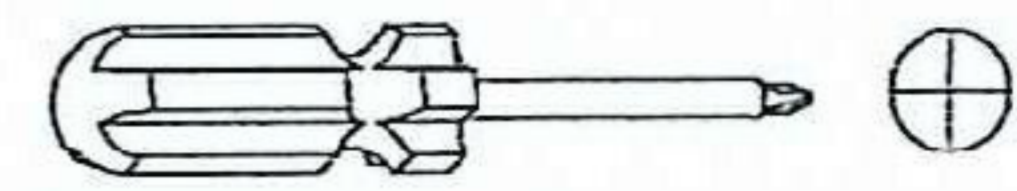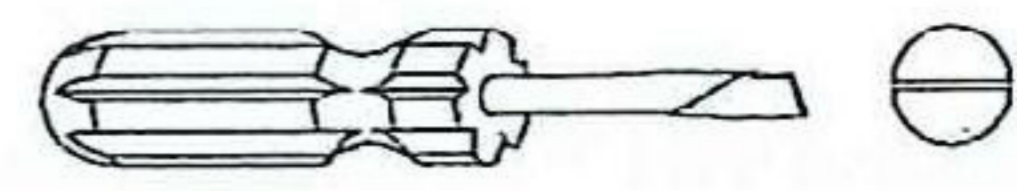


INSERTING AND TIGHTENING CAM-BOLT

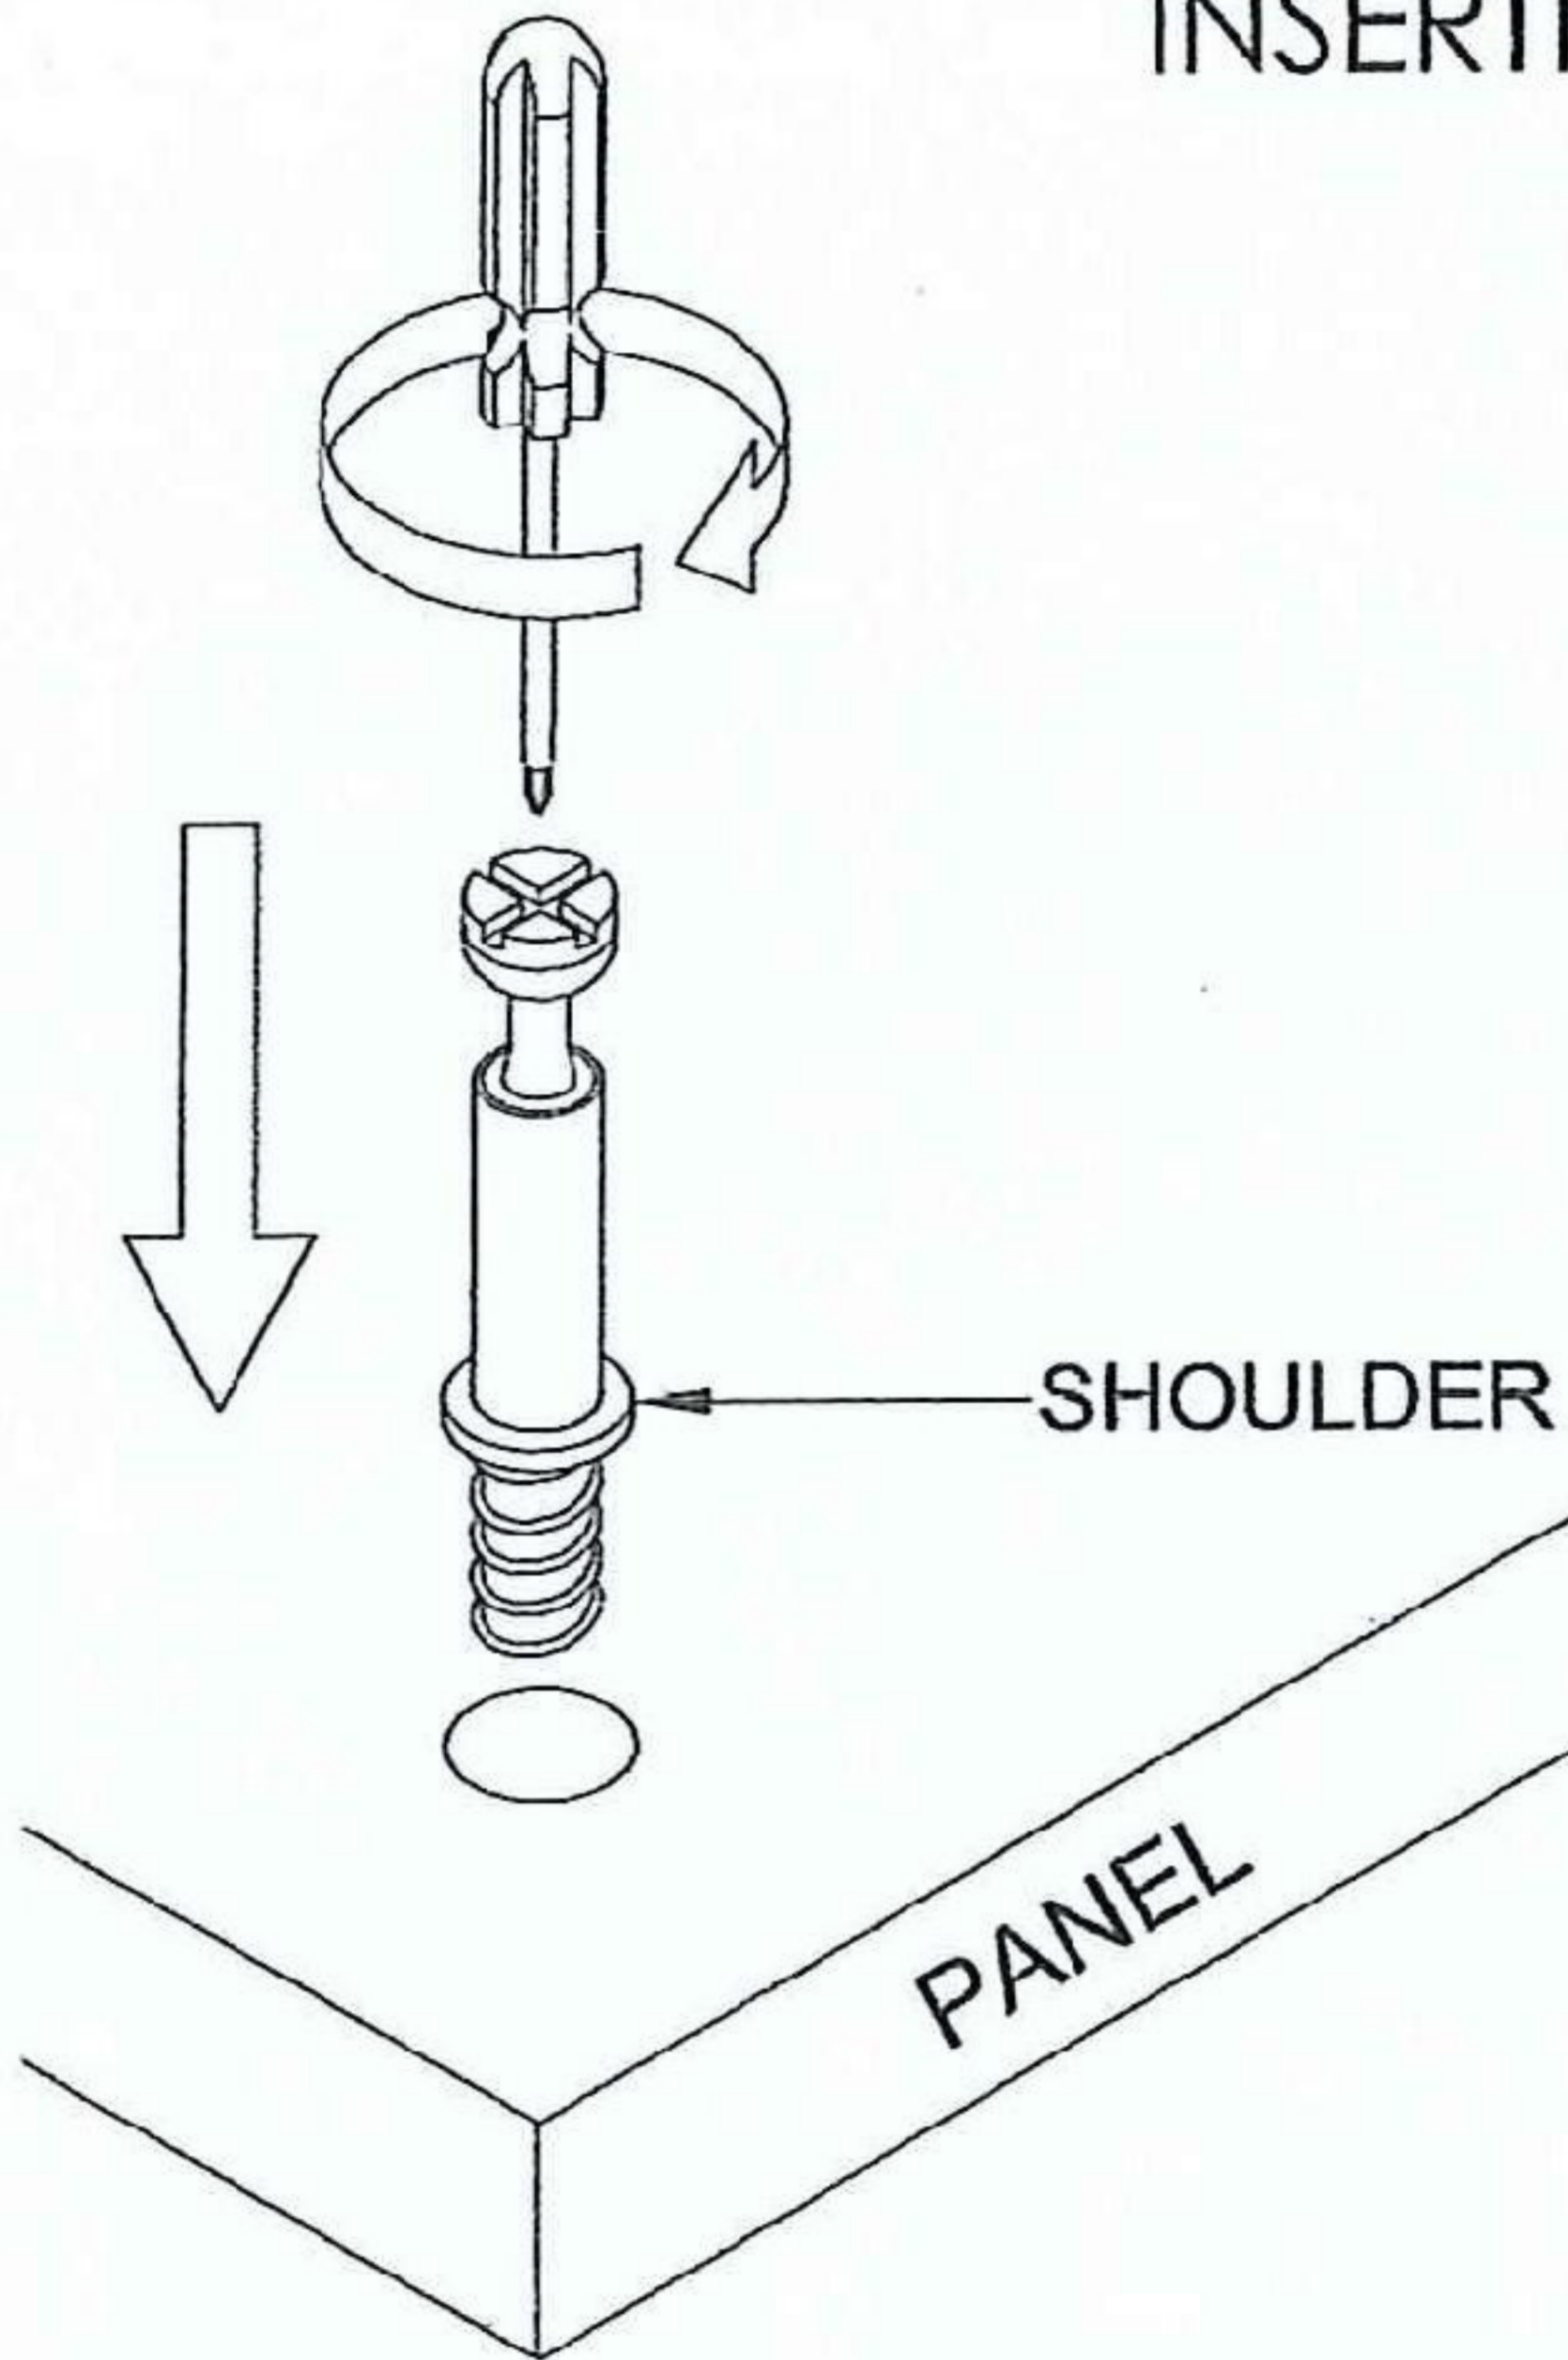 

 Place Cam-bolt on pre-drilled hole and screw in vertically

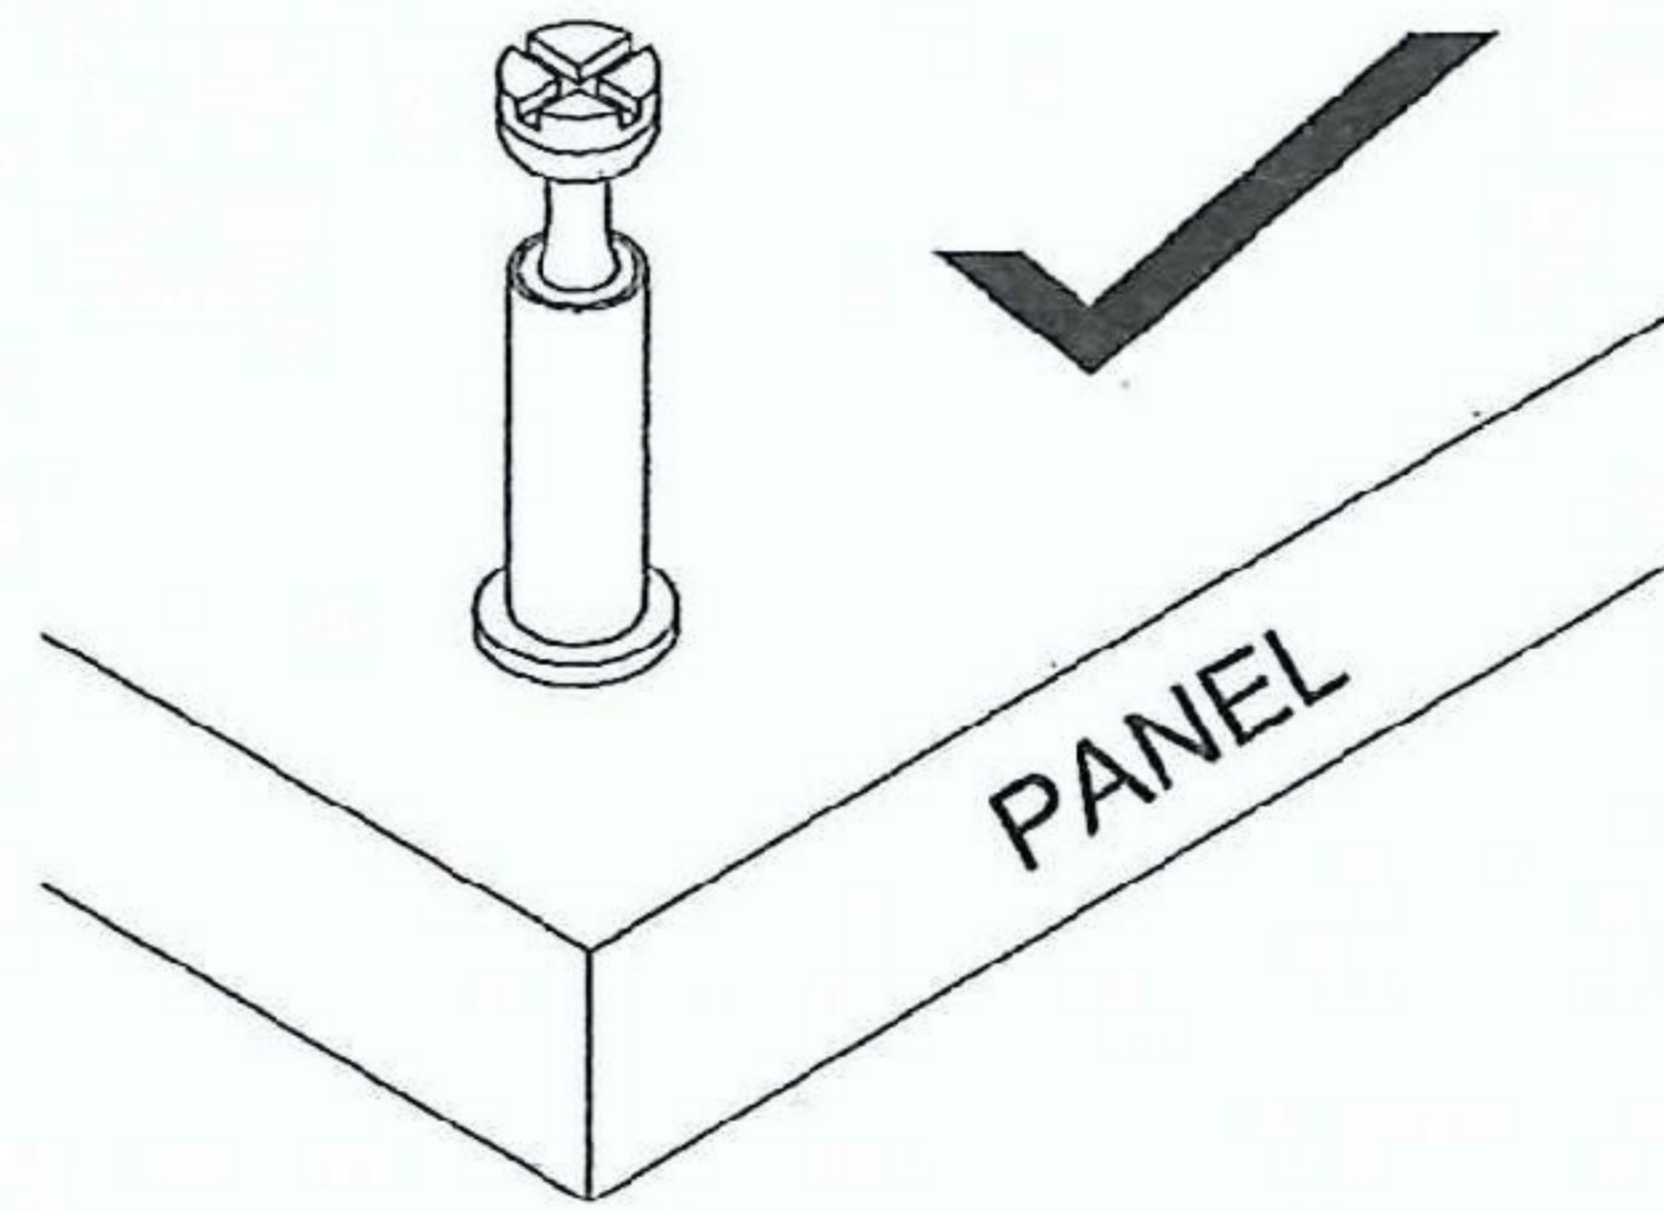

 
Shoulder is flushed (on the same level) with the panel.

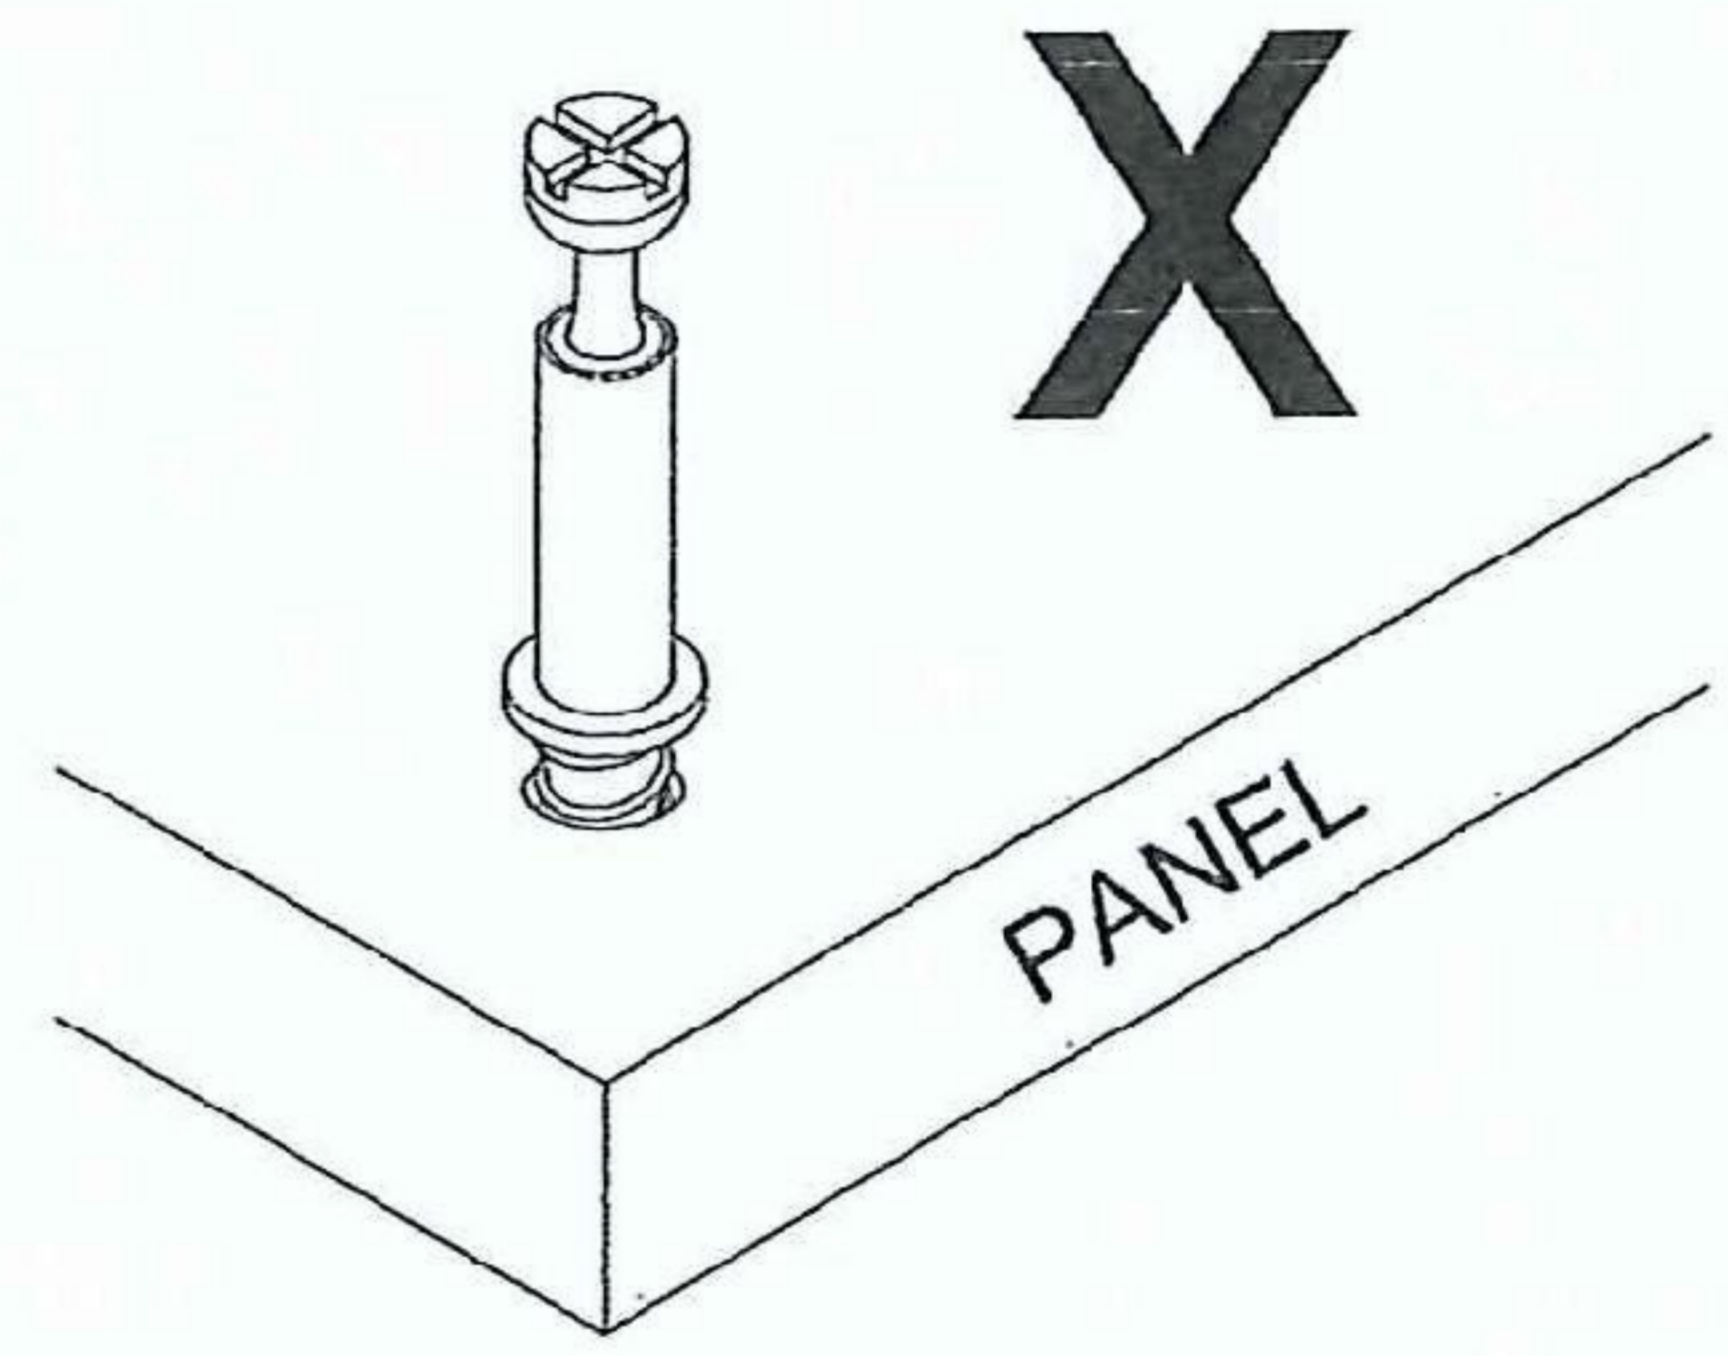

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 INSERTING CAM-LOCK

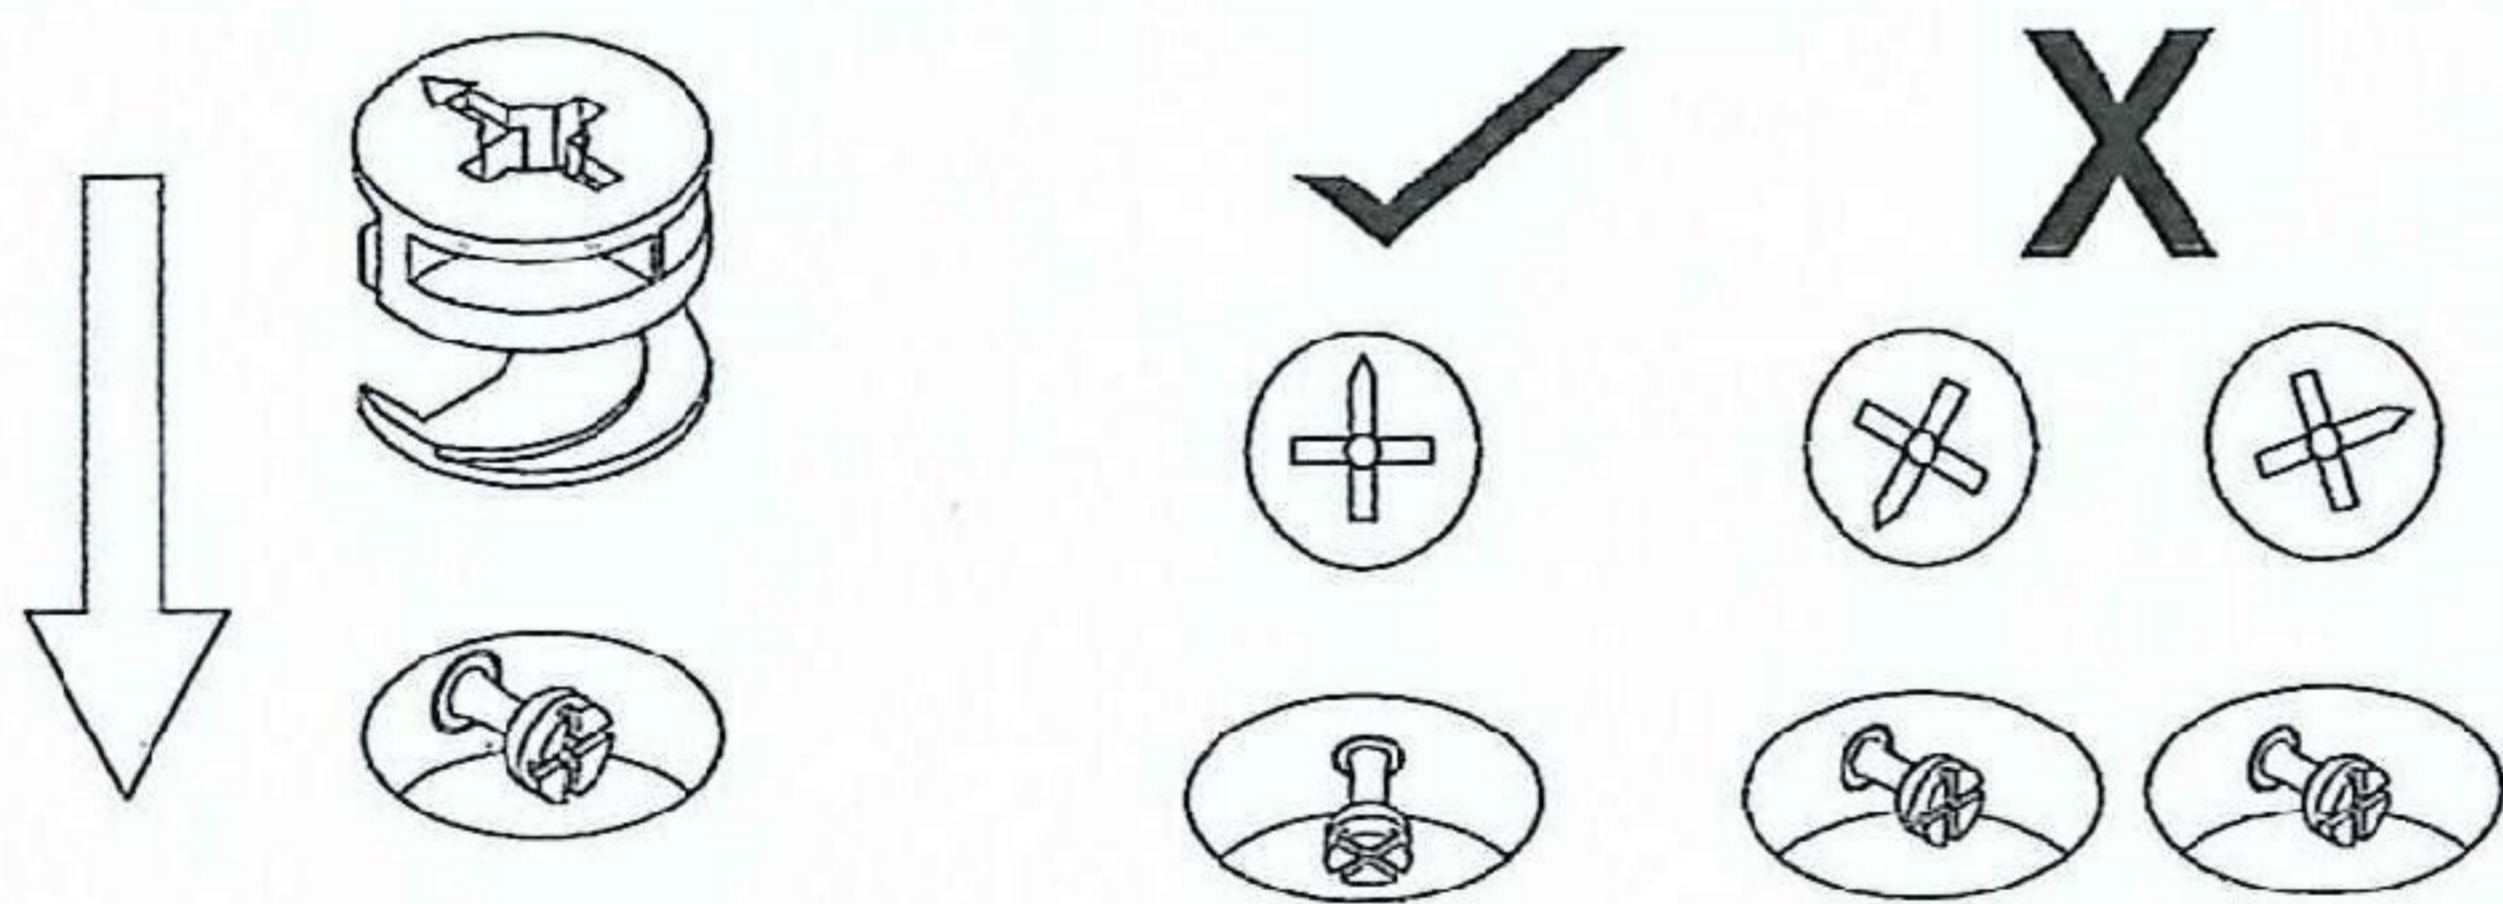


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG

 
TIGHTENING CAM-LOCK

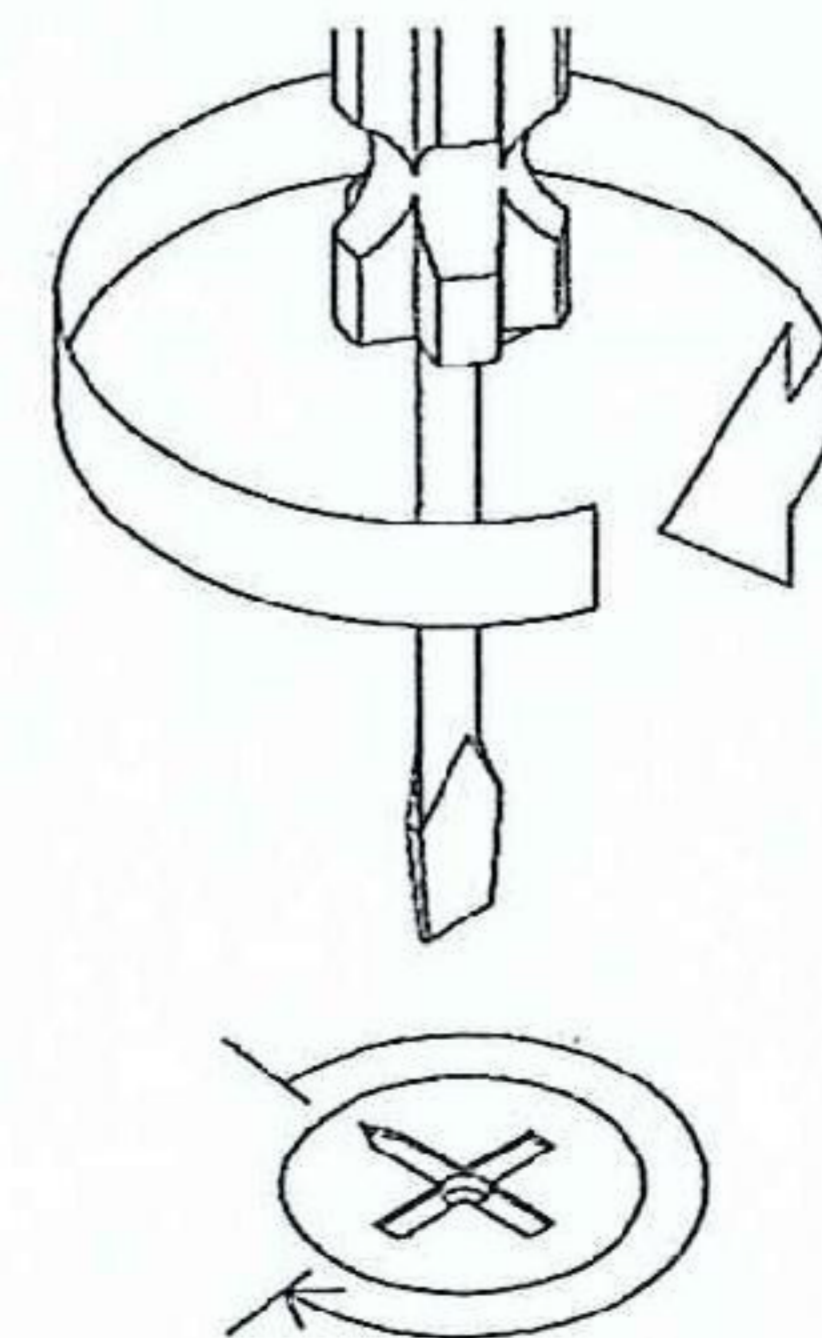


Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

CAM-LOCK

 
Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

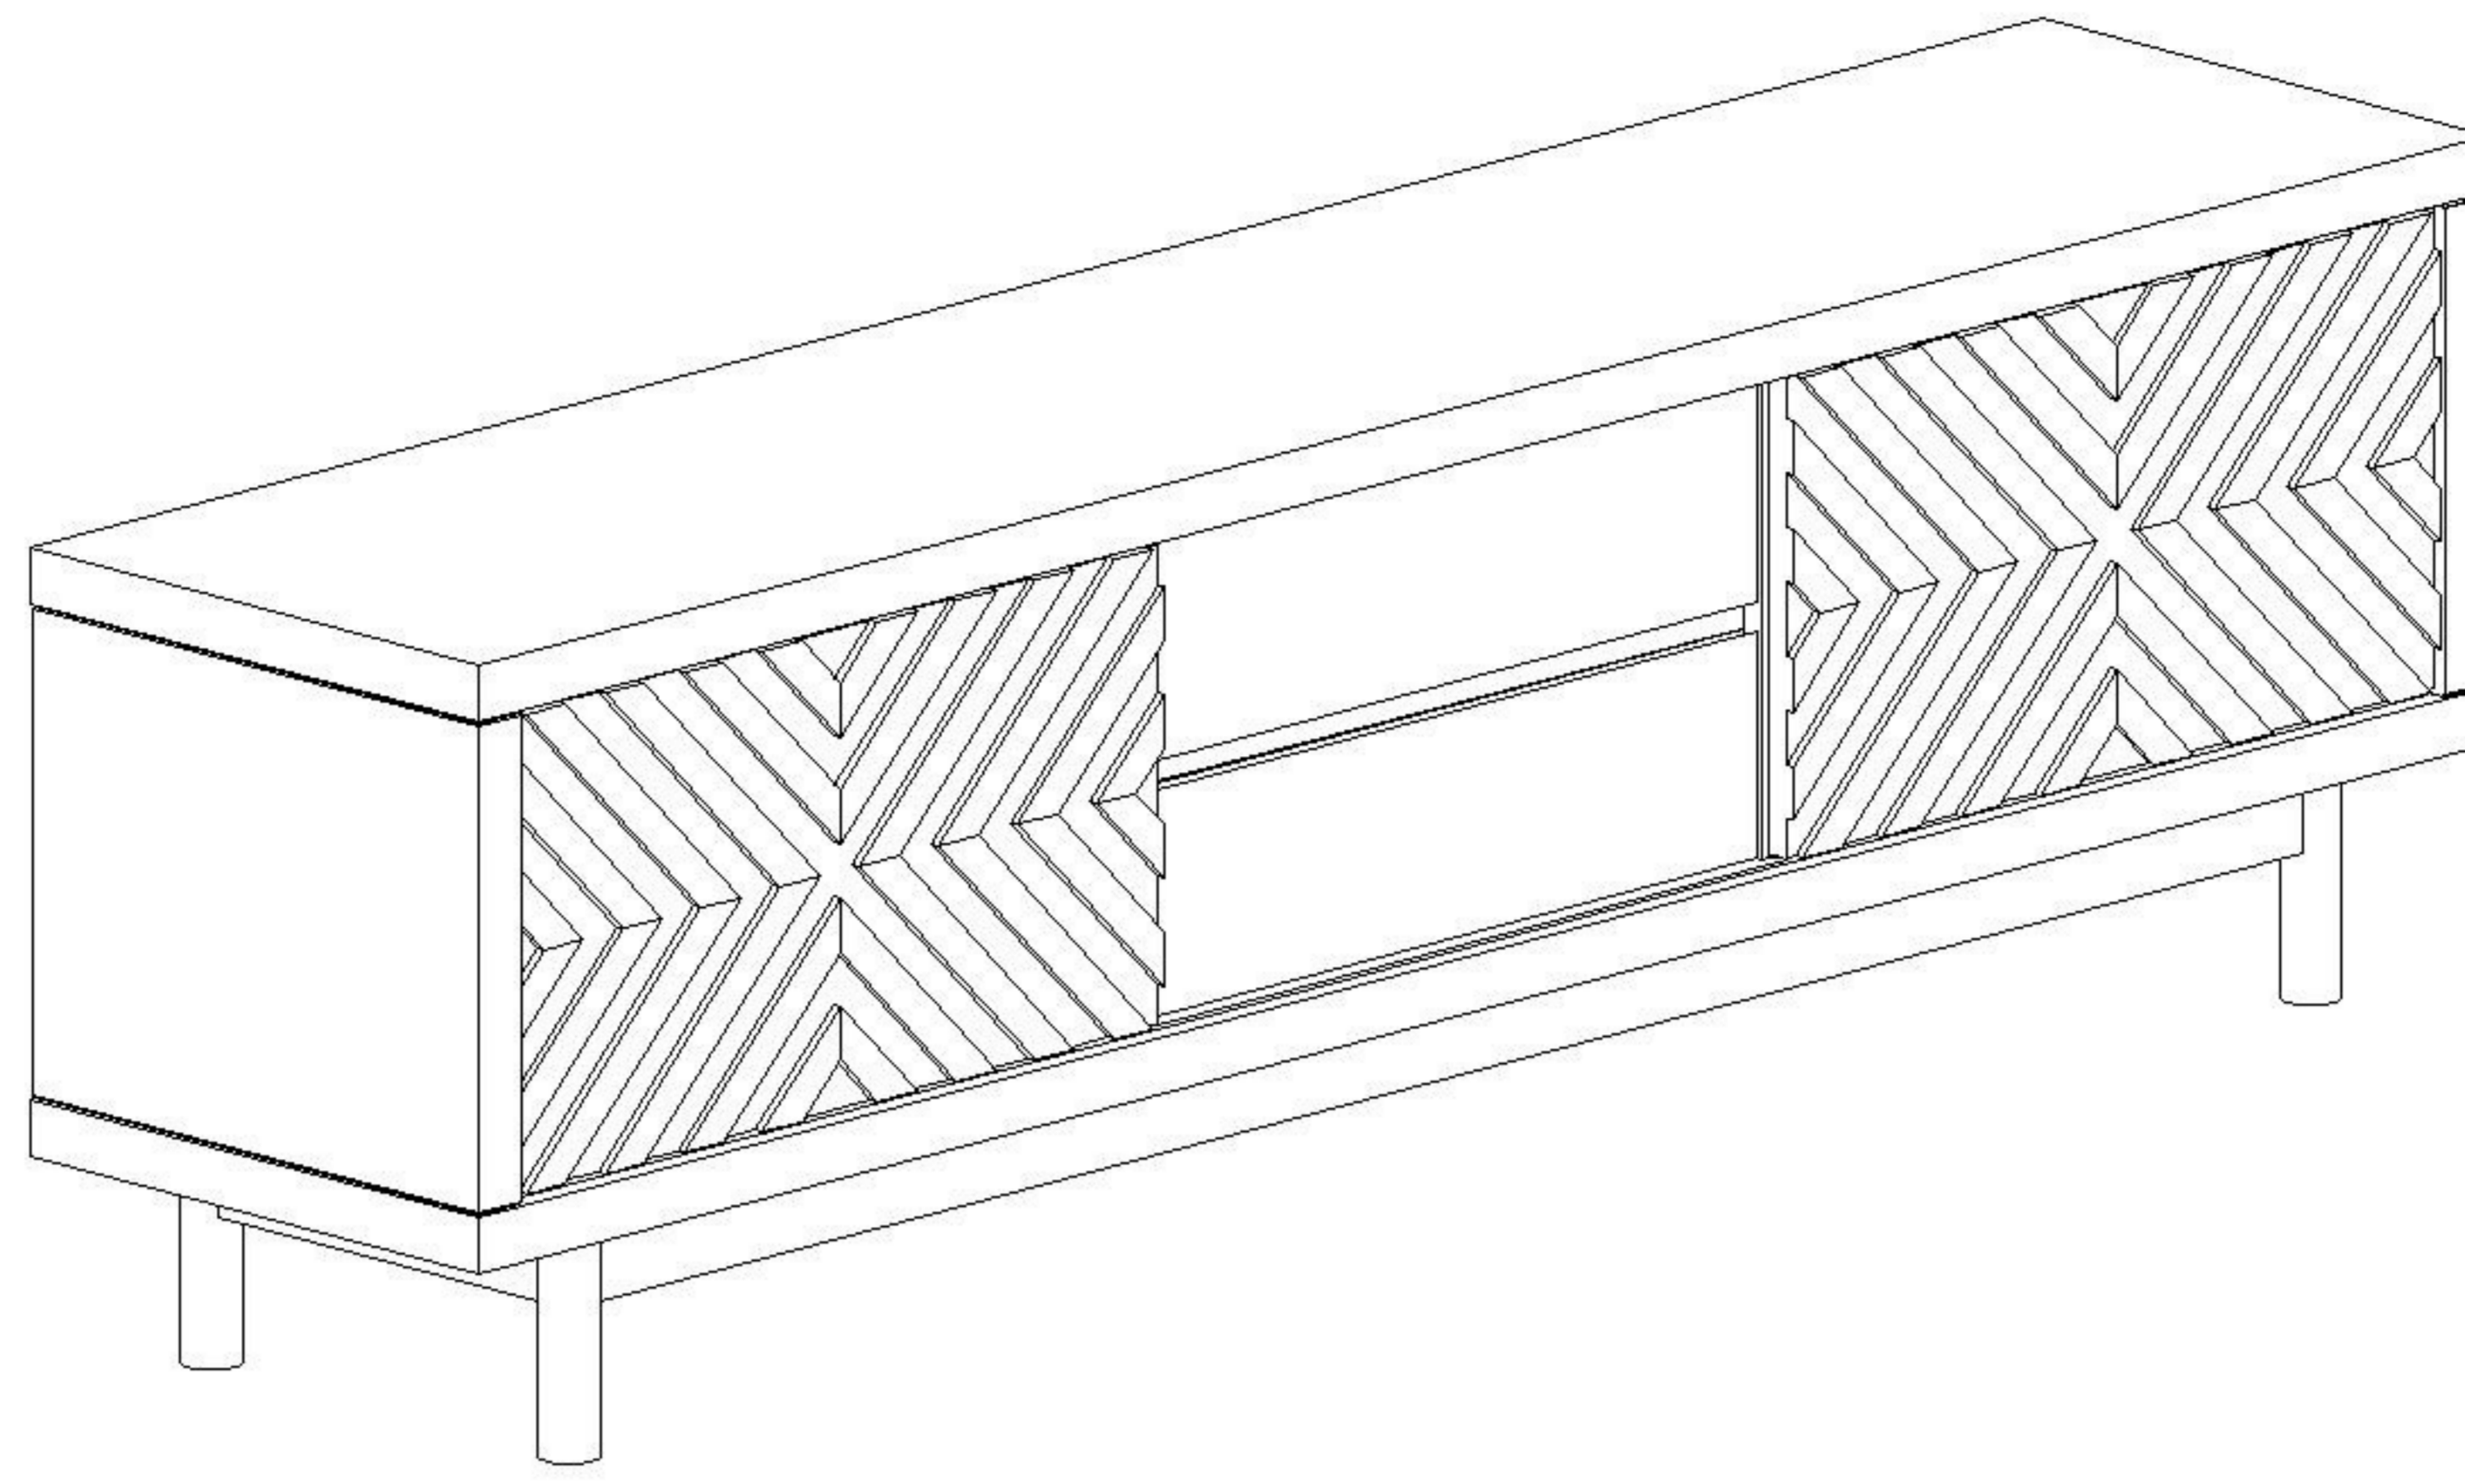


PARTS LIST

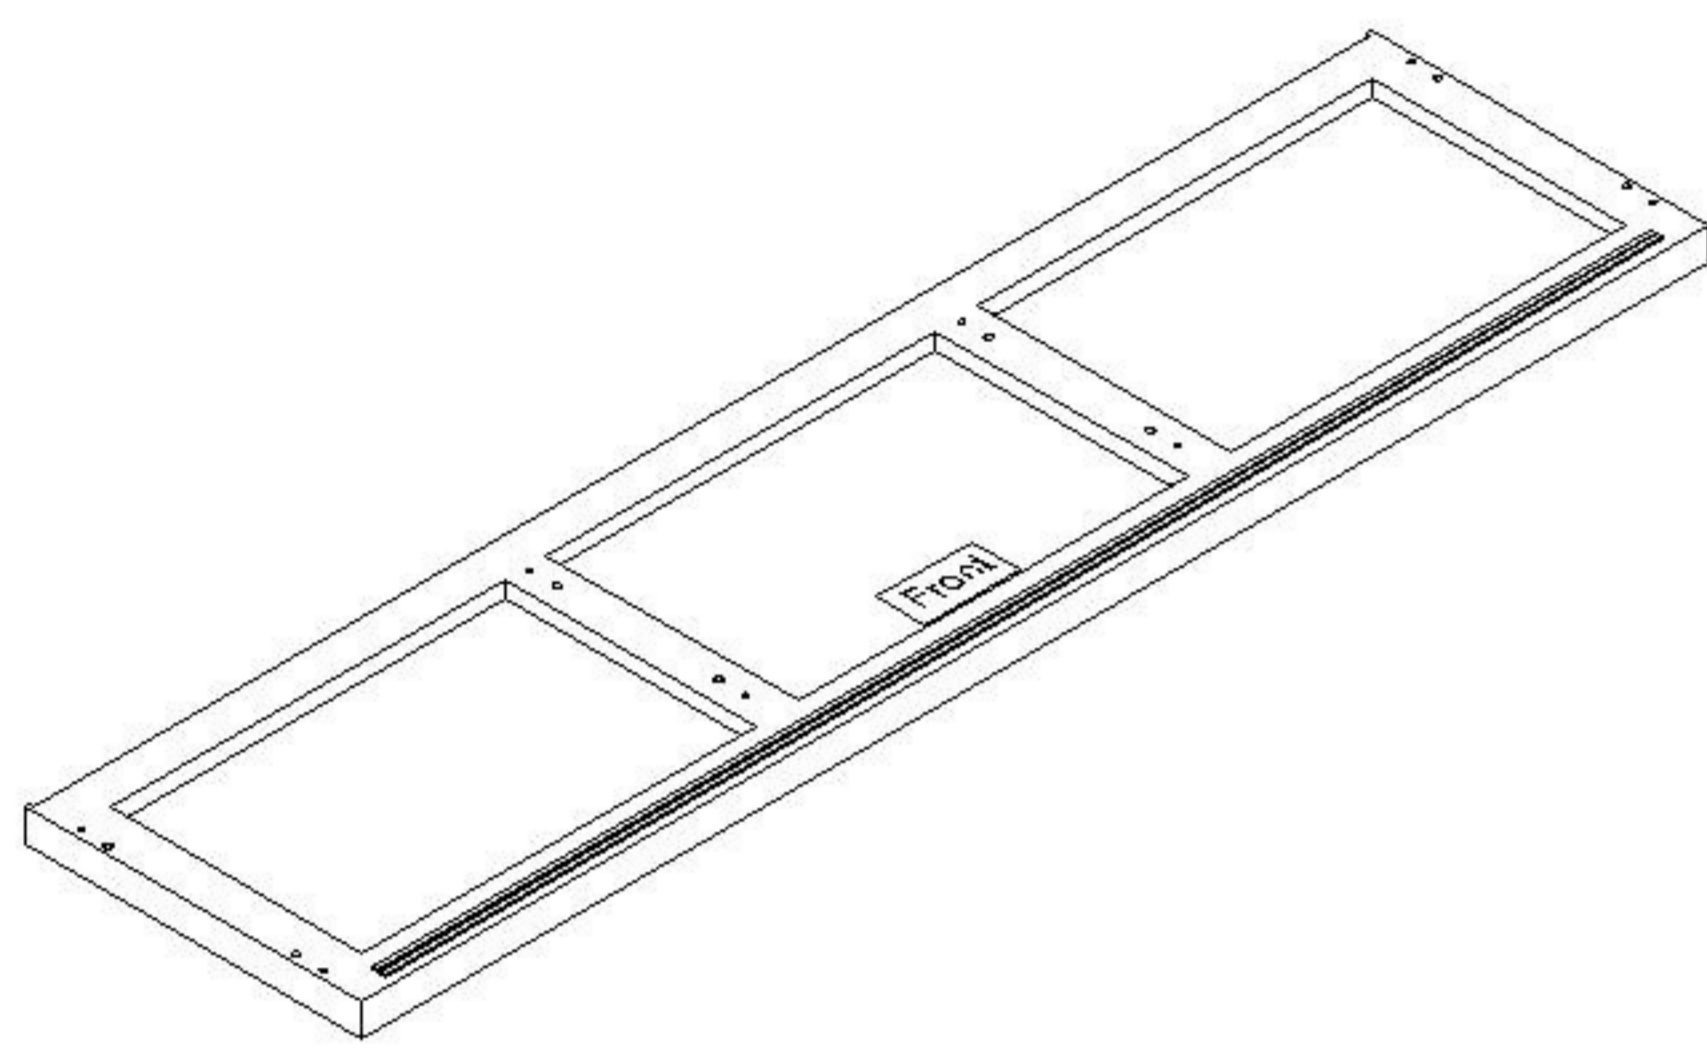 


NAME: TOP PANEL
CODE: 1
QTY: 1Pc

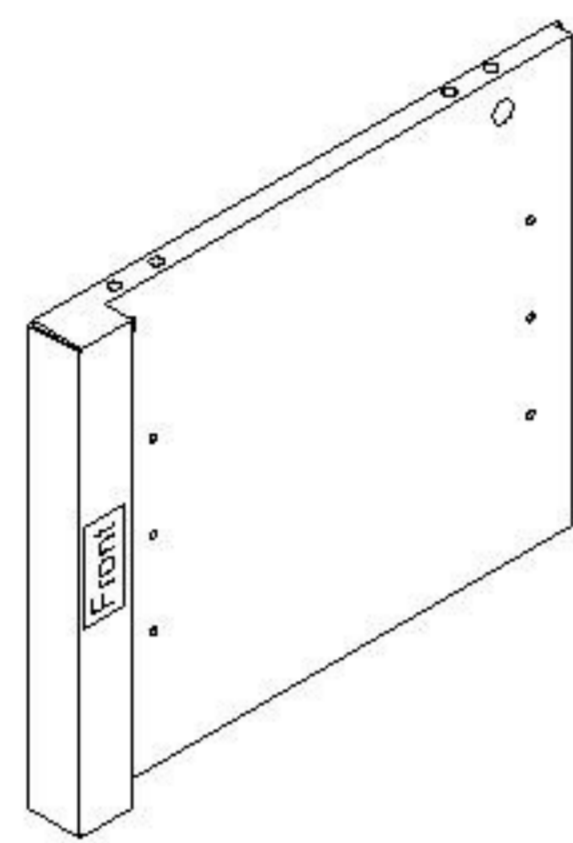 


NAME: SIDE PANEL(LEFT)
CODE: 2
QTY: 1Pc

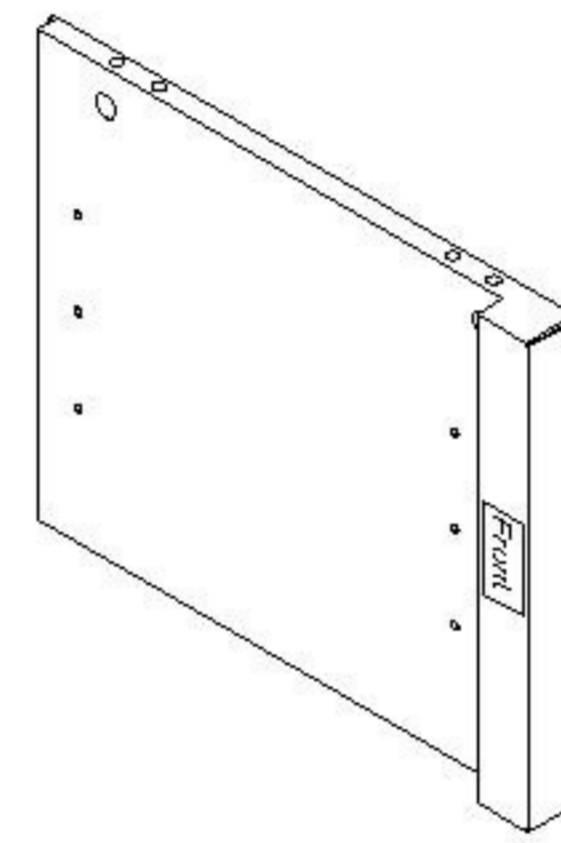 

 
NAME: SIDE PANEL(RIGHT)
CODE: 3
QTY: 1Pc

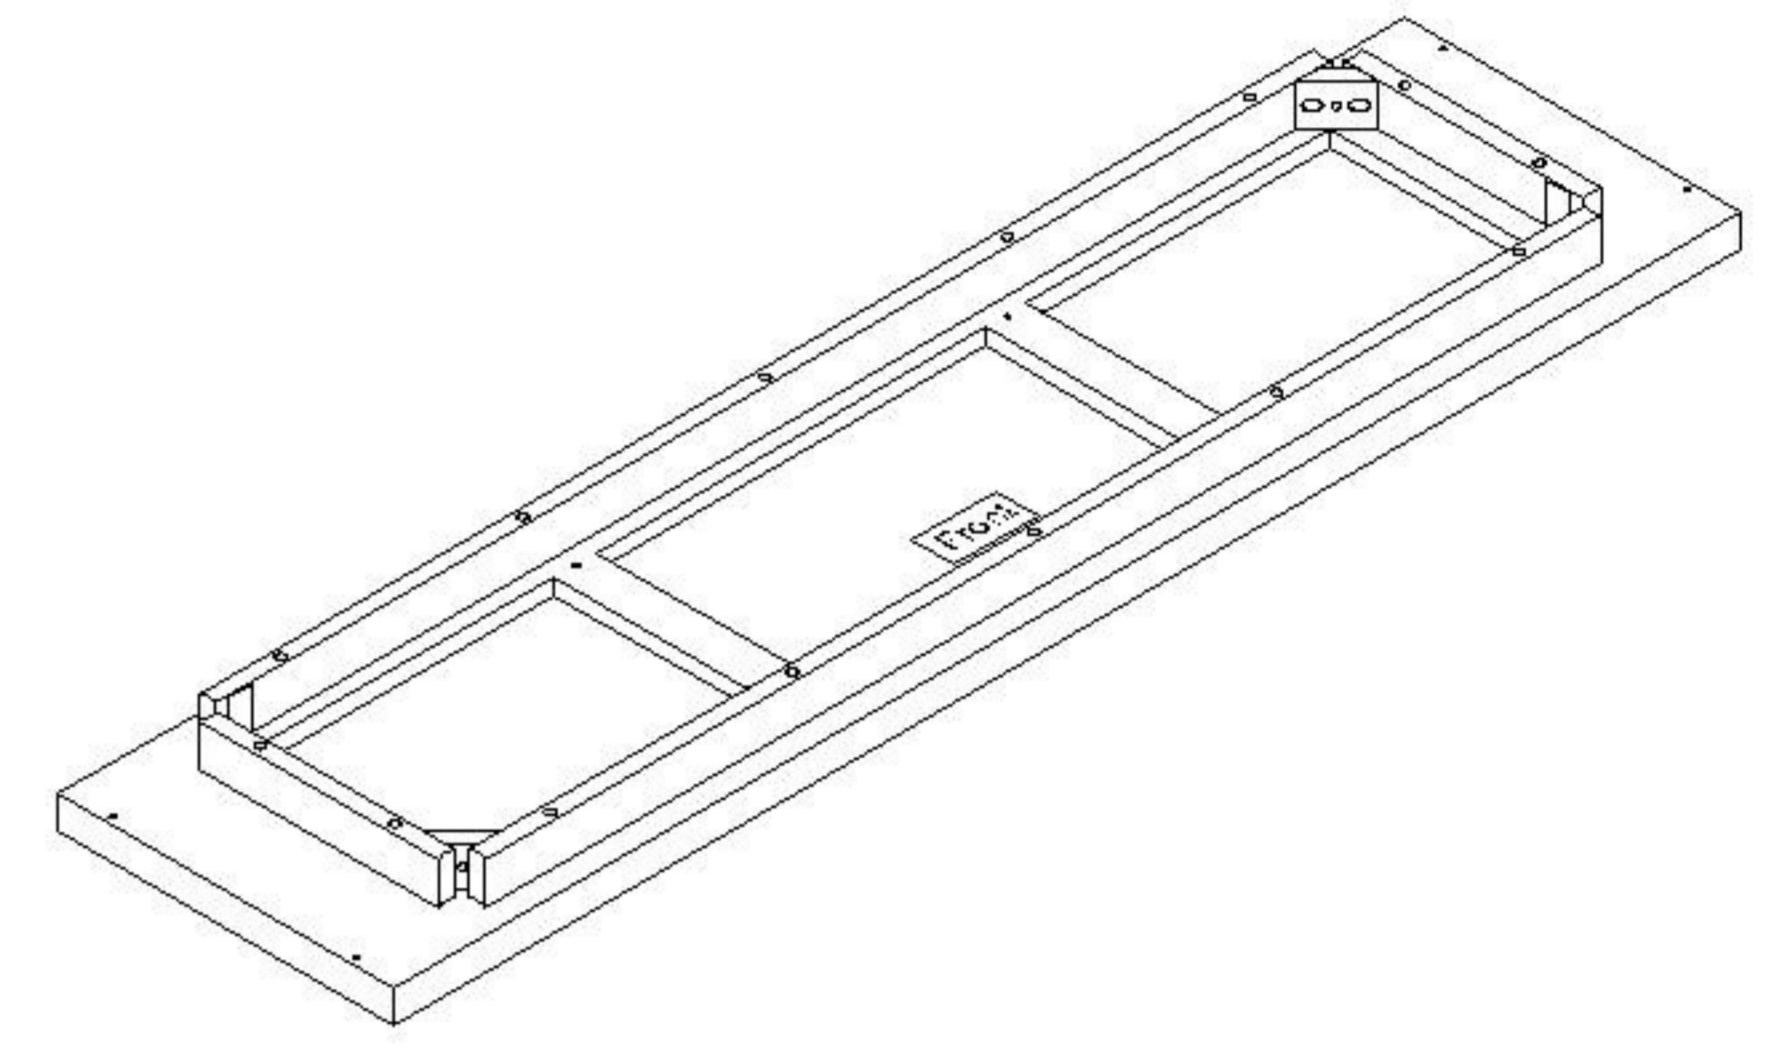


NAME: BOTTOM PANEL
CODE: 4
QTY: 1Pc

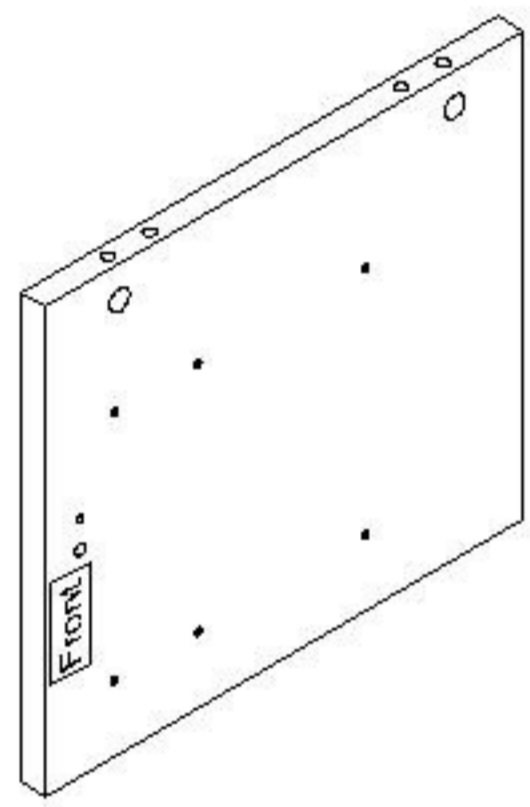 


NAME: PARTITION(LEFT)
CODE: 5
QTY: 1Pc

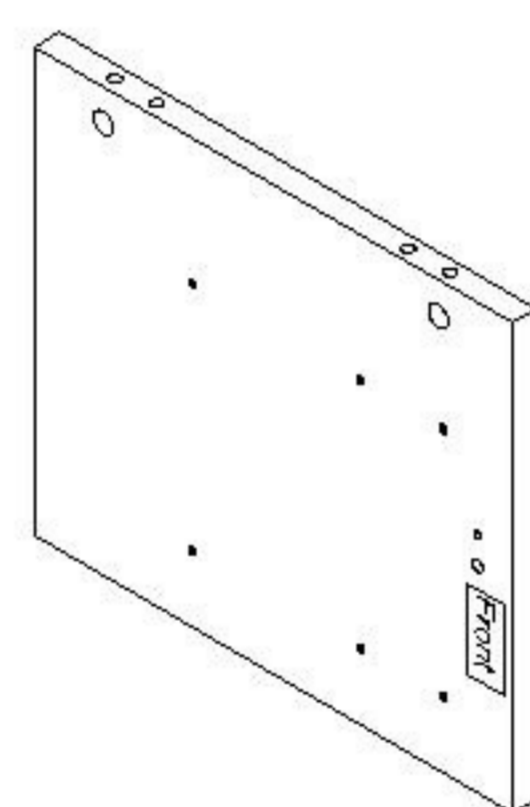 


NAME: PARTITION(RIGHT)
CODE: 6
QTY: 1Pc

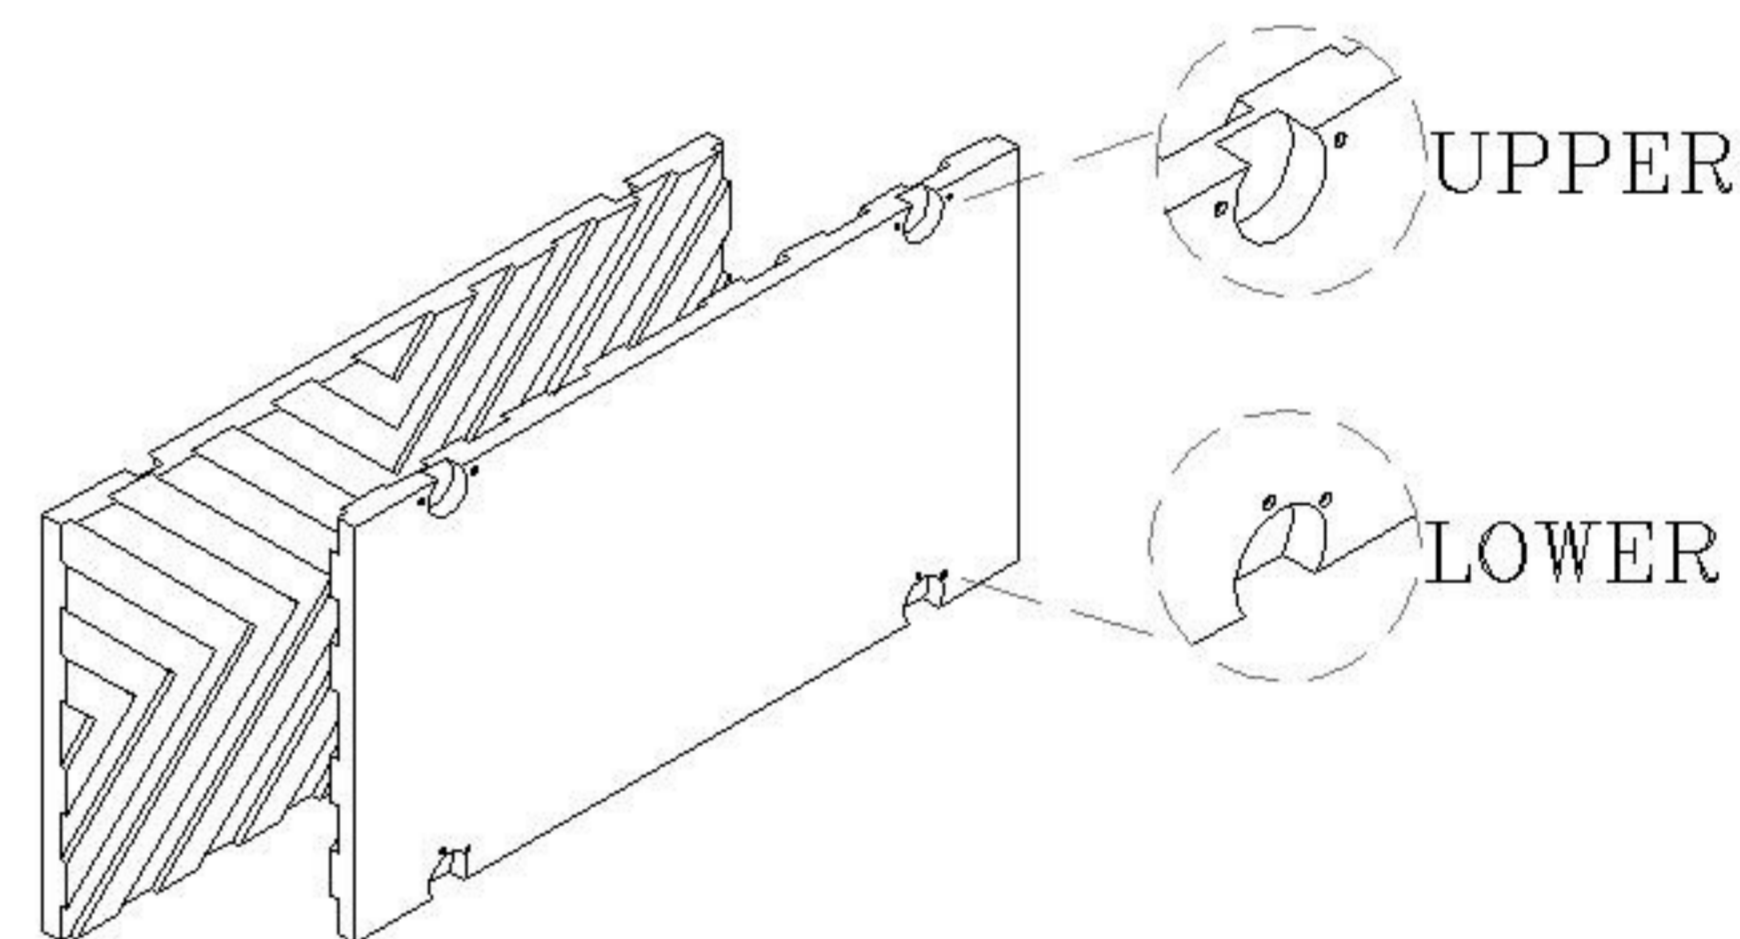 


NAME: DOOR
CODE: 7
QTY: 2Pcs

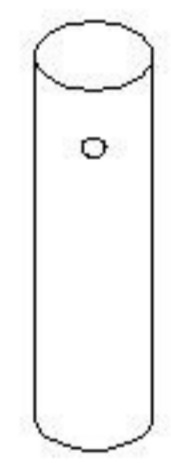 


NAME: POST
CODE: 8
QTY: 4Pcs

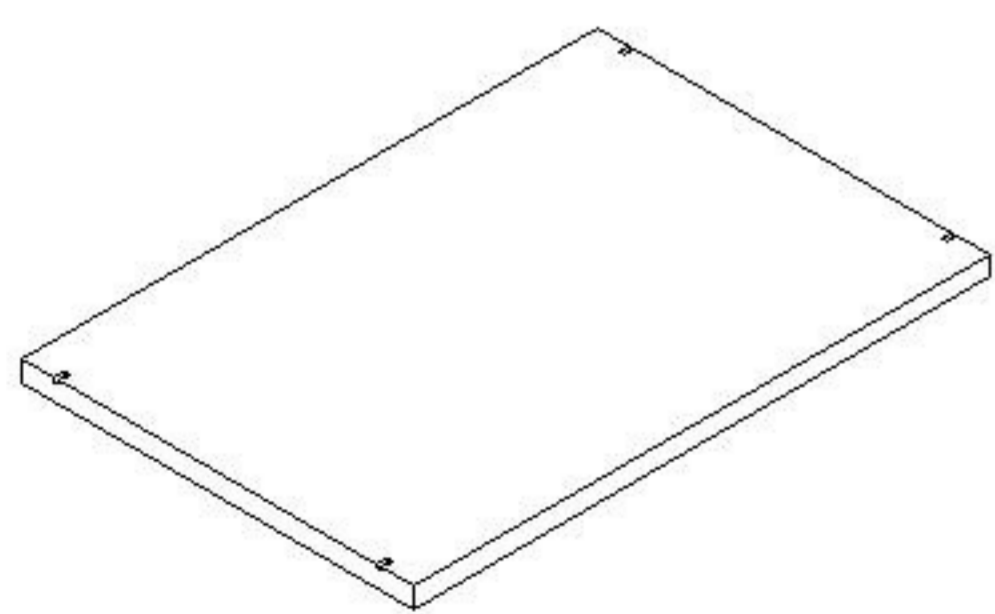 


NAME: SHELVING
CODE: 9
QTY: 2Pcs

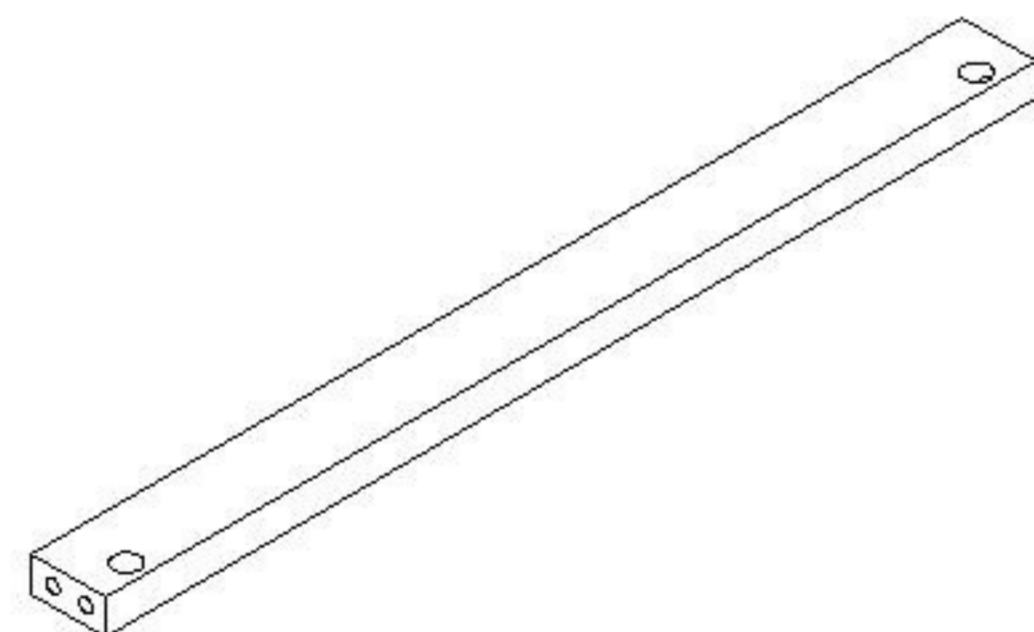 


NAME: CENTER BAR
CODE: 10
QTY: 1Pc

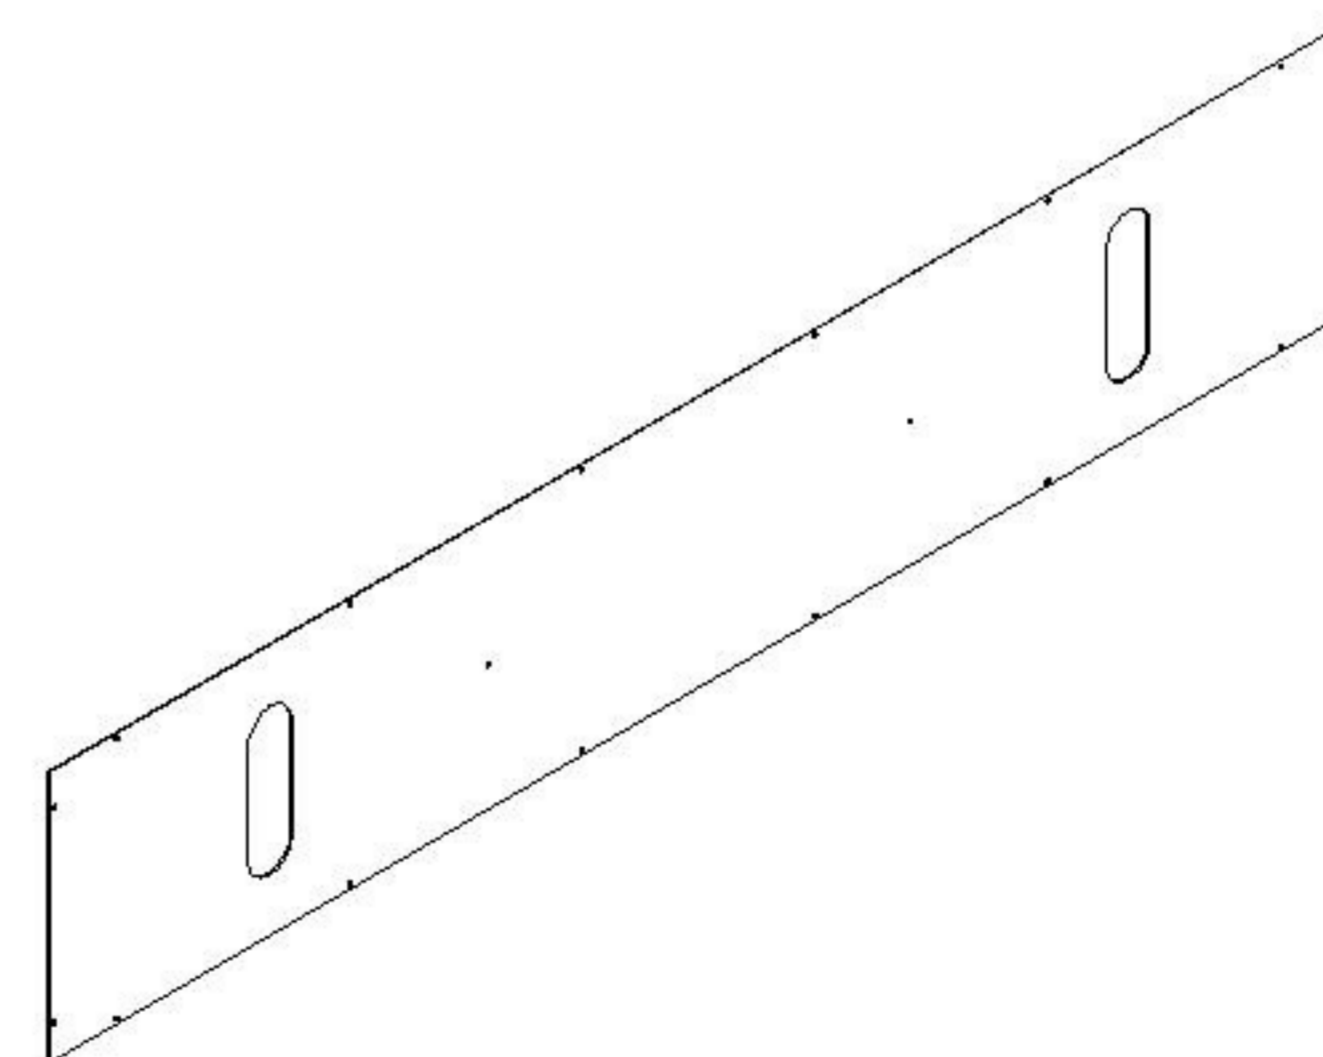 


NAME: BACK PLY
CODE: 11
QTY: 1Pc

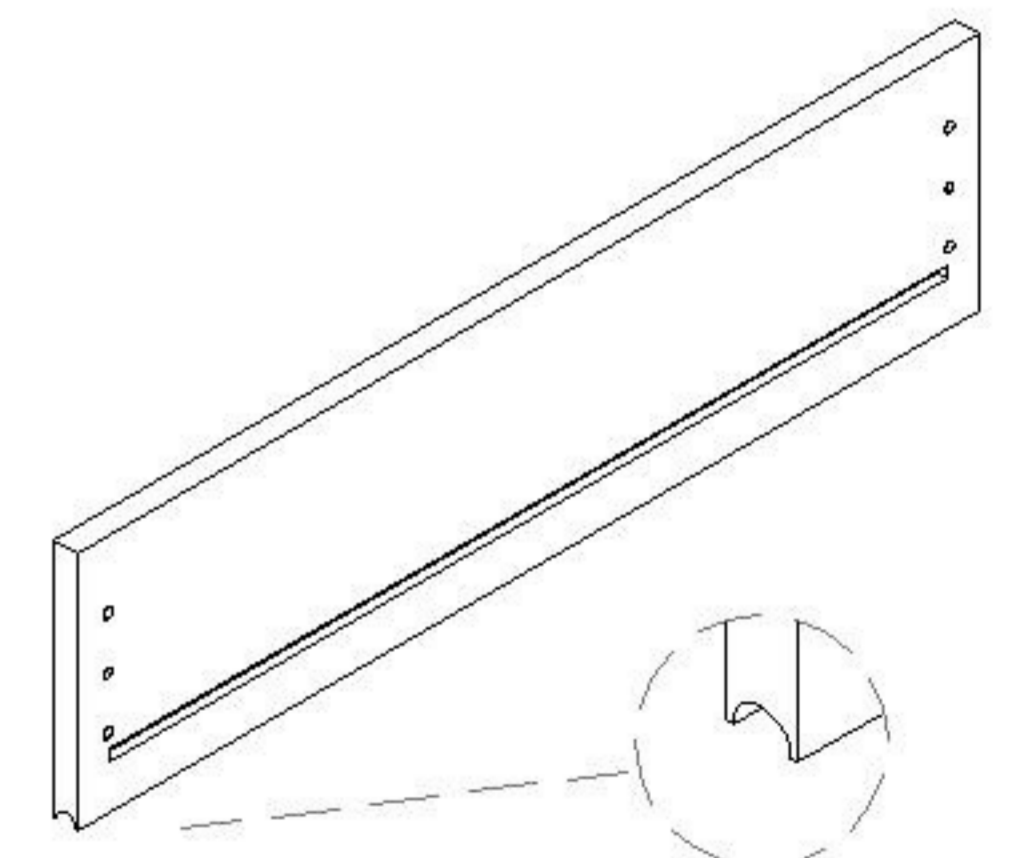 

 
NAME: DRAWER FRONT(TOP)
CODE: 101
QTY: 1Pc

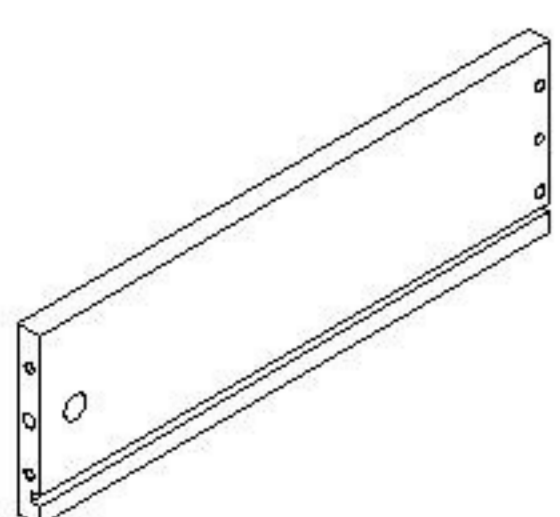

 
NAME: DRAWER SIDE(LEFT)
CODE: 102
QTY: 2Pcs

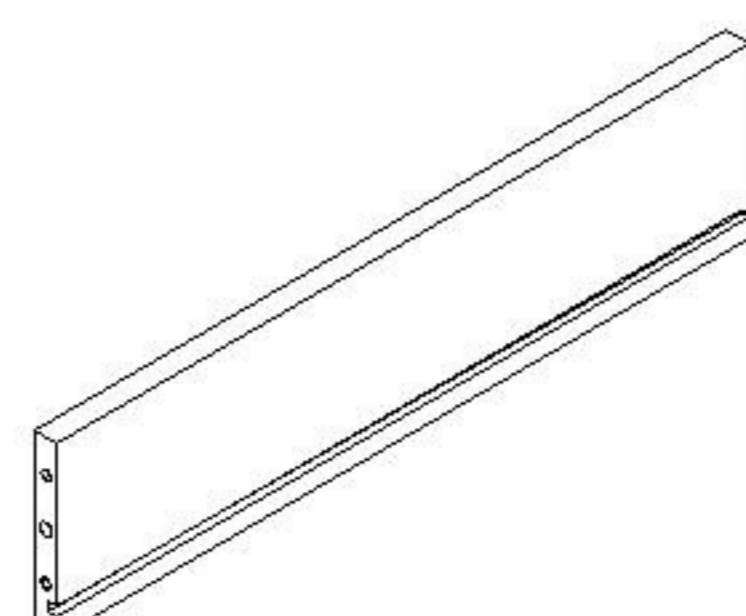


NAME: DRAWER BACK
CODE: 103
QTY: 2Pcs

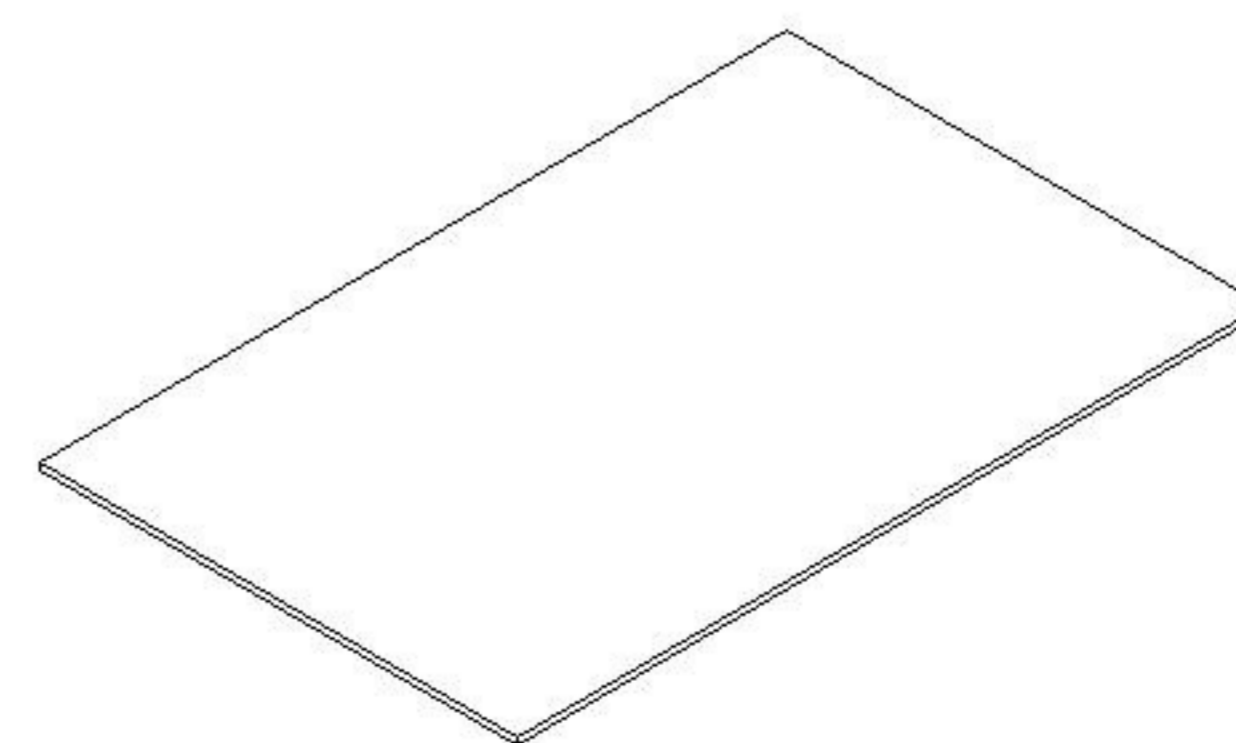 

NAME: DRAWER BASE
CODE: 104
QTY: 2Pcs

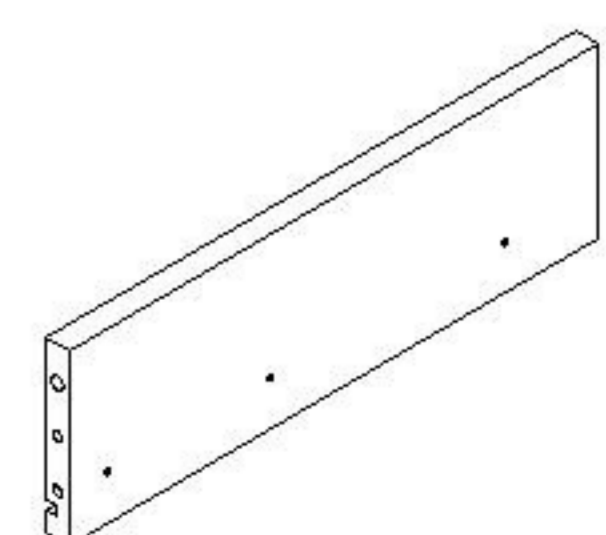 

 NAME: DRAWER SIDE(RIGHT)
CODE: 105
QTY: 2Pcs

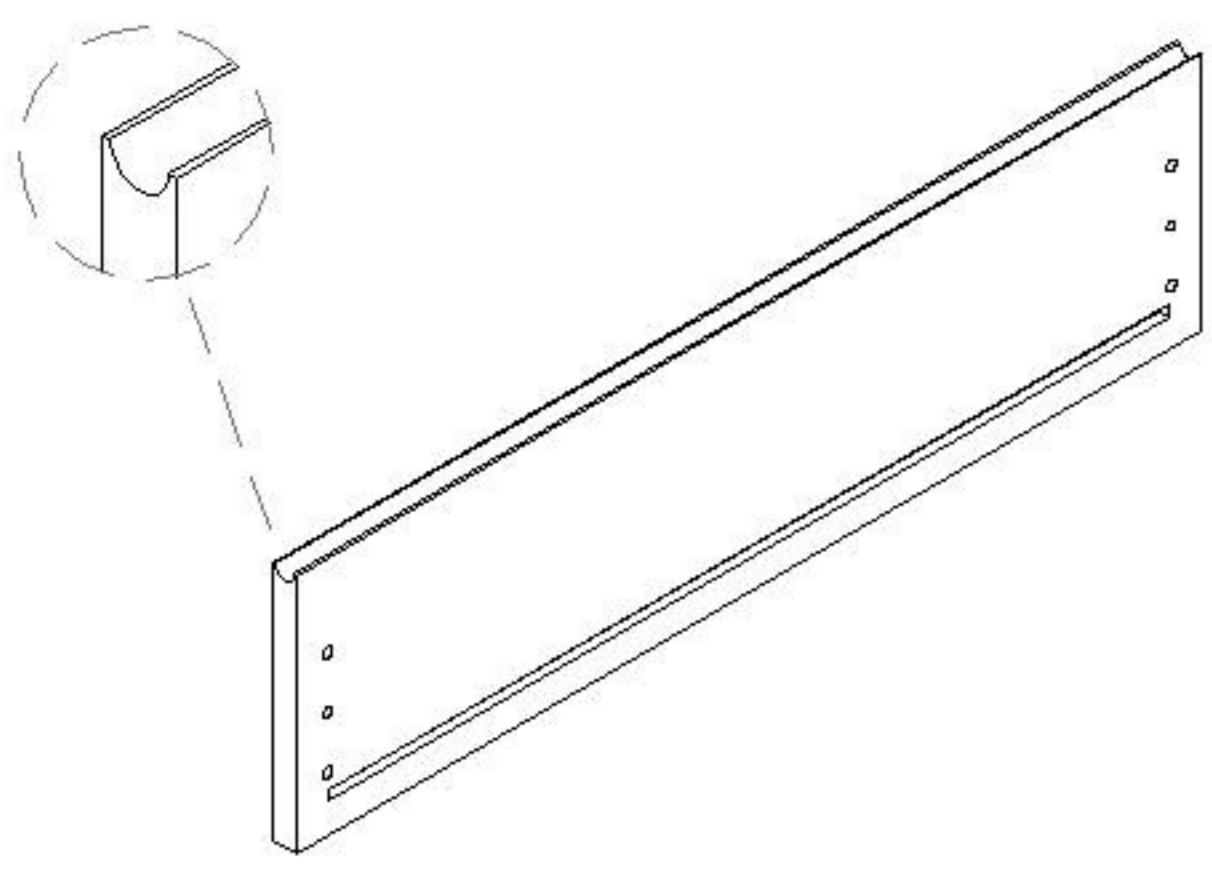

NAME: DRAWER FRONT(BOTTOM)
CODE: 106
QTY: 1Pc


PARTS IN BOX 1

NAME: SIDE PANEL(LEFT)	QTY: 1Pc	CODE: 2
NAME: SIDE PANEL(RIGHT)	QTY: 1Pc	CODE: 3
NAME: PARTITION(LEFT)	QTY: 1Pc	CODE: 5
NAME: PARTITION(RIGHT)	QTY: 1Pc	CODE: 6
NAME: DOOR	QTY: 2Pcs	CODE: 7
NAME: SHELVING	QTY: 2Pcs	CODE: 9
NAME: CENTER BAR	QTY: 1Pc	CODE: 10
NAME: DRAWER FRONT(TOP)	QTY: 1Pc	CODE: 101
NAME: DRAWER SIDE(LEFT)	QTY: 2Pcs	CODE: 102
NAME: DRAWER BACK	QTY: 2Pcs	CODE: 103
NAME: DRAWER BASE	QTY: 2Pcs	CODE: 104
NAME: DRAWER SIDE(RIGHT)	QTY: 2Pcs	CODE: 105
NAME: DRAWER FRONT(BOTTOM)	QTY: 1Pc	CODE: 106
NAME: EXTENSION RUNNER	QTY: 1 PACK	
NAME: HARDWARE + AI	QTY: 1 PACK	
NAME: SLIDING ROLLER	QTY: 1 PACK	


PARTS IN BOX 2

NAME: TOP PANEL	QTY: 1Pc	CODE: 1
NAME: BOTTOM PANEL	QTY: 1Pc	CODE: 4
NAME: POST	QTY: 4Pcs	CODE: 8
NAME: BACK PLY	QTY: 1Pc	CODE: 11

 
HARDWARE LIST

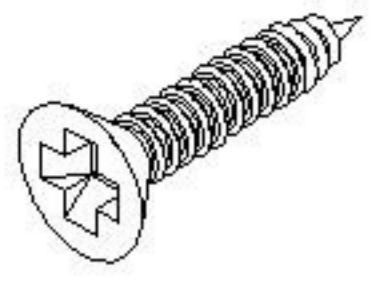

 
NAME: CHIPBOARD SCREW M3X16mm
CODE: A
QTY: 40Pcs

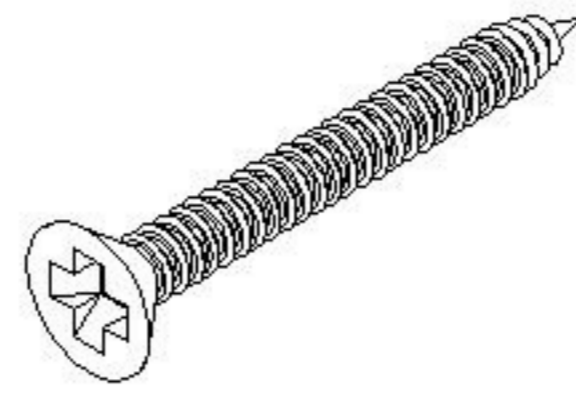

 
NAME: CHIPBOARD SCREW M4X38mm
CODE: B
QTY: 8Pcs

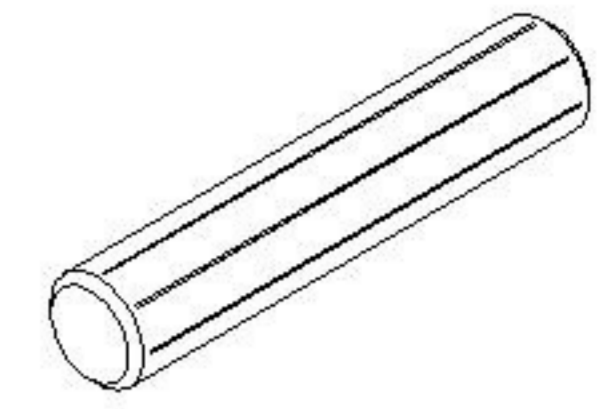

 
NAME: WOOD DOWEL M8X35mm
CODE: C
QTY: 18Pcs

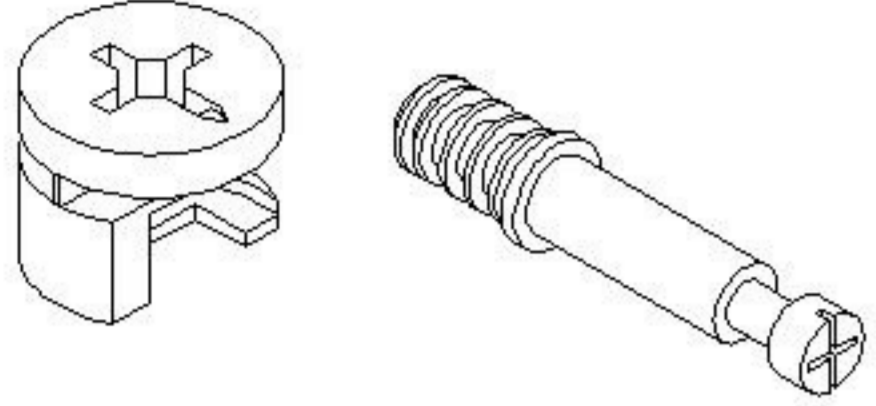

 
NAME: CAM LOCK & CAM BOLT
CODE: D
QTY: 18Sets

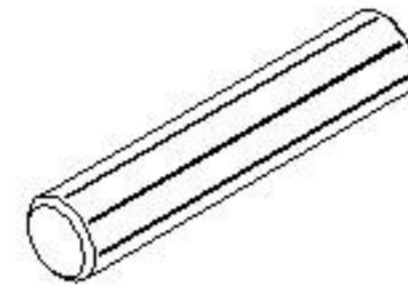

 
NAME: WOOD DOWEL M6X30mm
CODE: E
QTY: 16Pcs

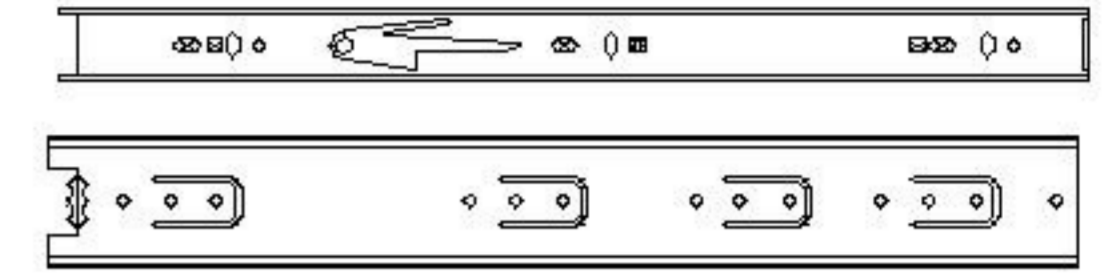

 
NAME: EXTENSION RUNNER 300mm
CODE: F
QTY: 2Sets

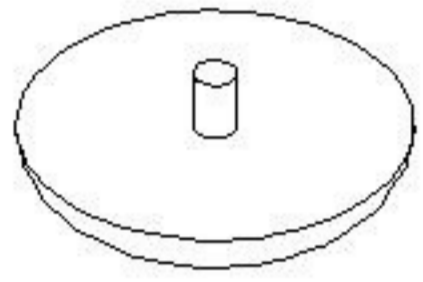


NAME: CAM LOCK COVER
CODE: G
QTY: 18Pcs

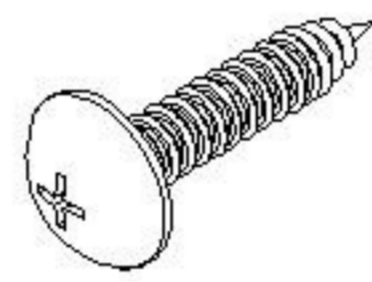 

 
NAME: PANHEAD CHIPBOARD SCREW M4X16mm(BLACK)
CODE: H
QTY: 18Pcs

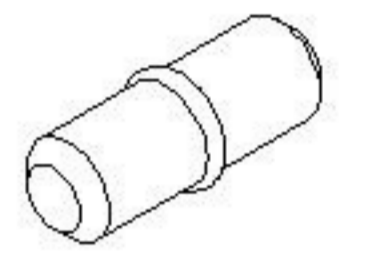

 
NAME: SHELVING SUPPORT
CODE: I
QTY: 8Pcs

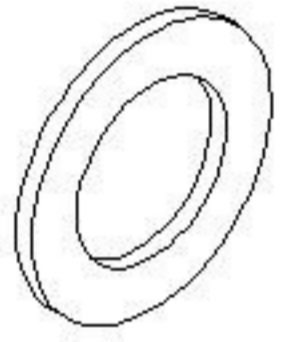


NAME: FLAT WASHER M6
CODE: J
QTY: 4Pcs

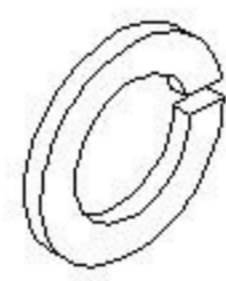 

 
NAME: SPRING WASHER M6
CODE: K
QTY: 4Pcs

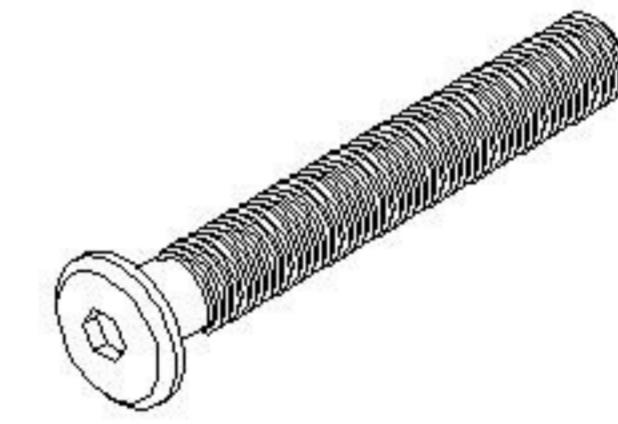


NAME: JCBC M6x45mm
CODE: L
QTY: 4Pcs

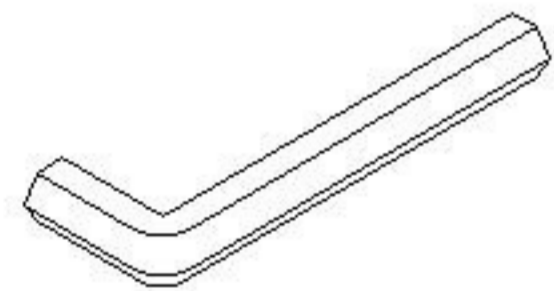 


NAME: ALLEN KEY M4
CODE: M
QTY: 1Pc

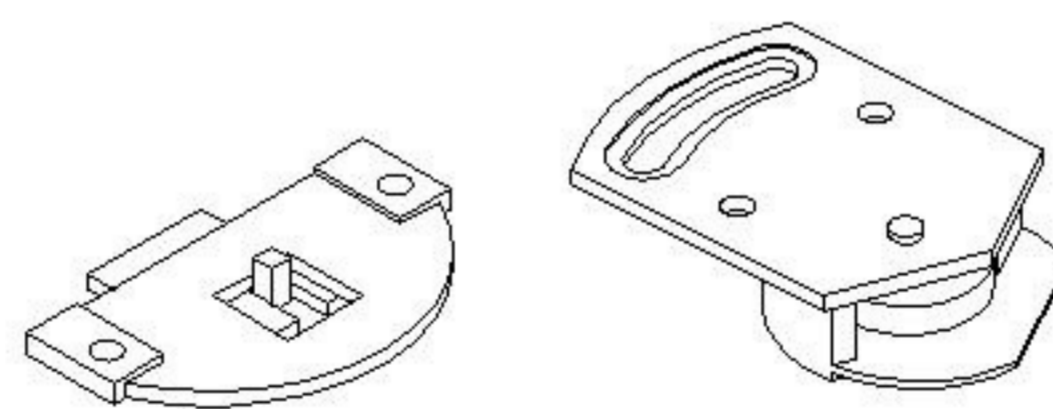 

 
NAME: LD SLIDING ROLLER
CODE: N
QTY: 4Sets

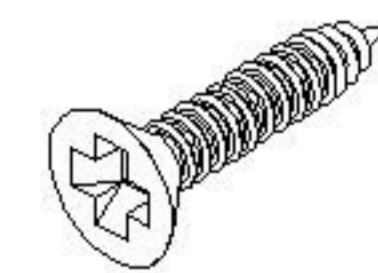

 
NAME: CHIPBOARD SCREW M4X25mm
CODE: W
QTY: 4Pcs

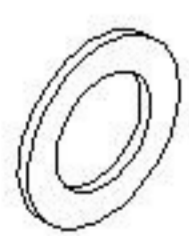

NAME: FLAT WASHER M4
CODE: X
QTY: 2Pcs

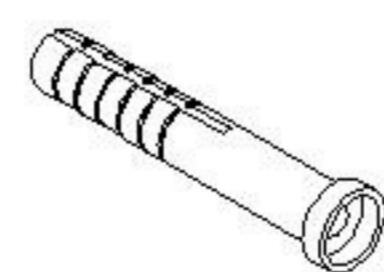 


NAME: SCREW PLUG
CODE: Y
QTY: 2Pcs

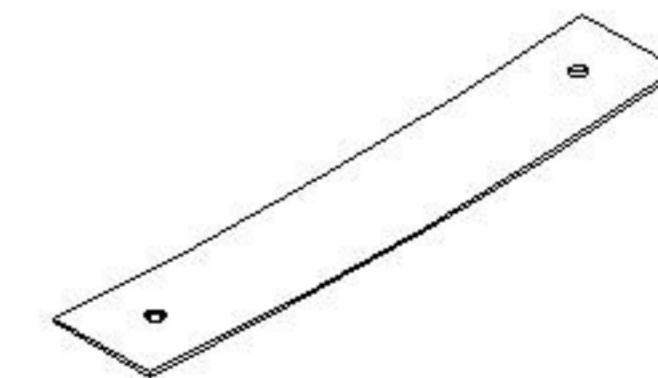 

NAME: SAFETY BELT (150mm)
CODE: Z
QTY: 2Pcs

STEP 1

 
- A) Insert and secure Cam Bolt(D) to Top Panel(1)

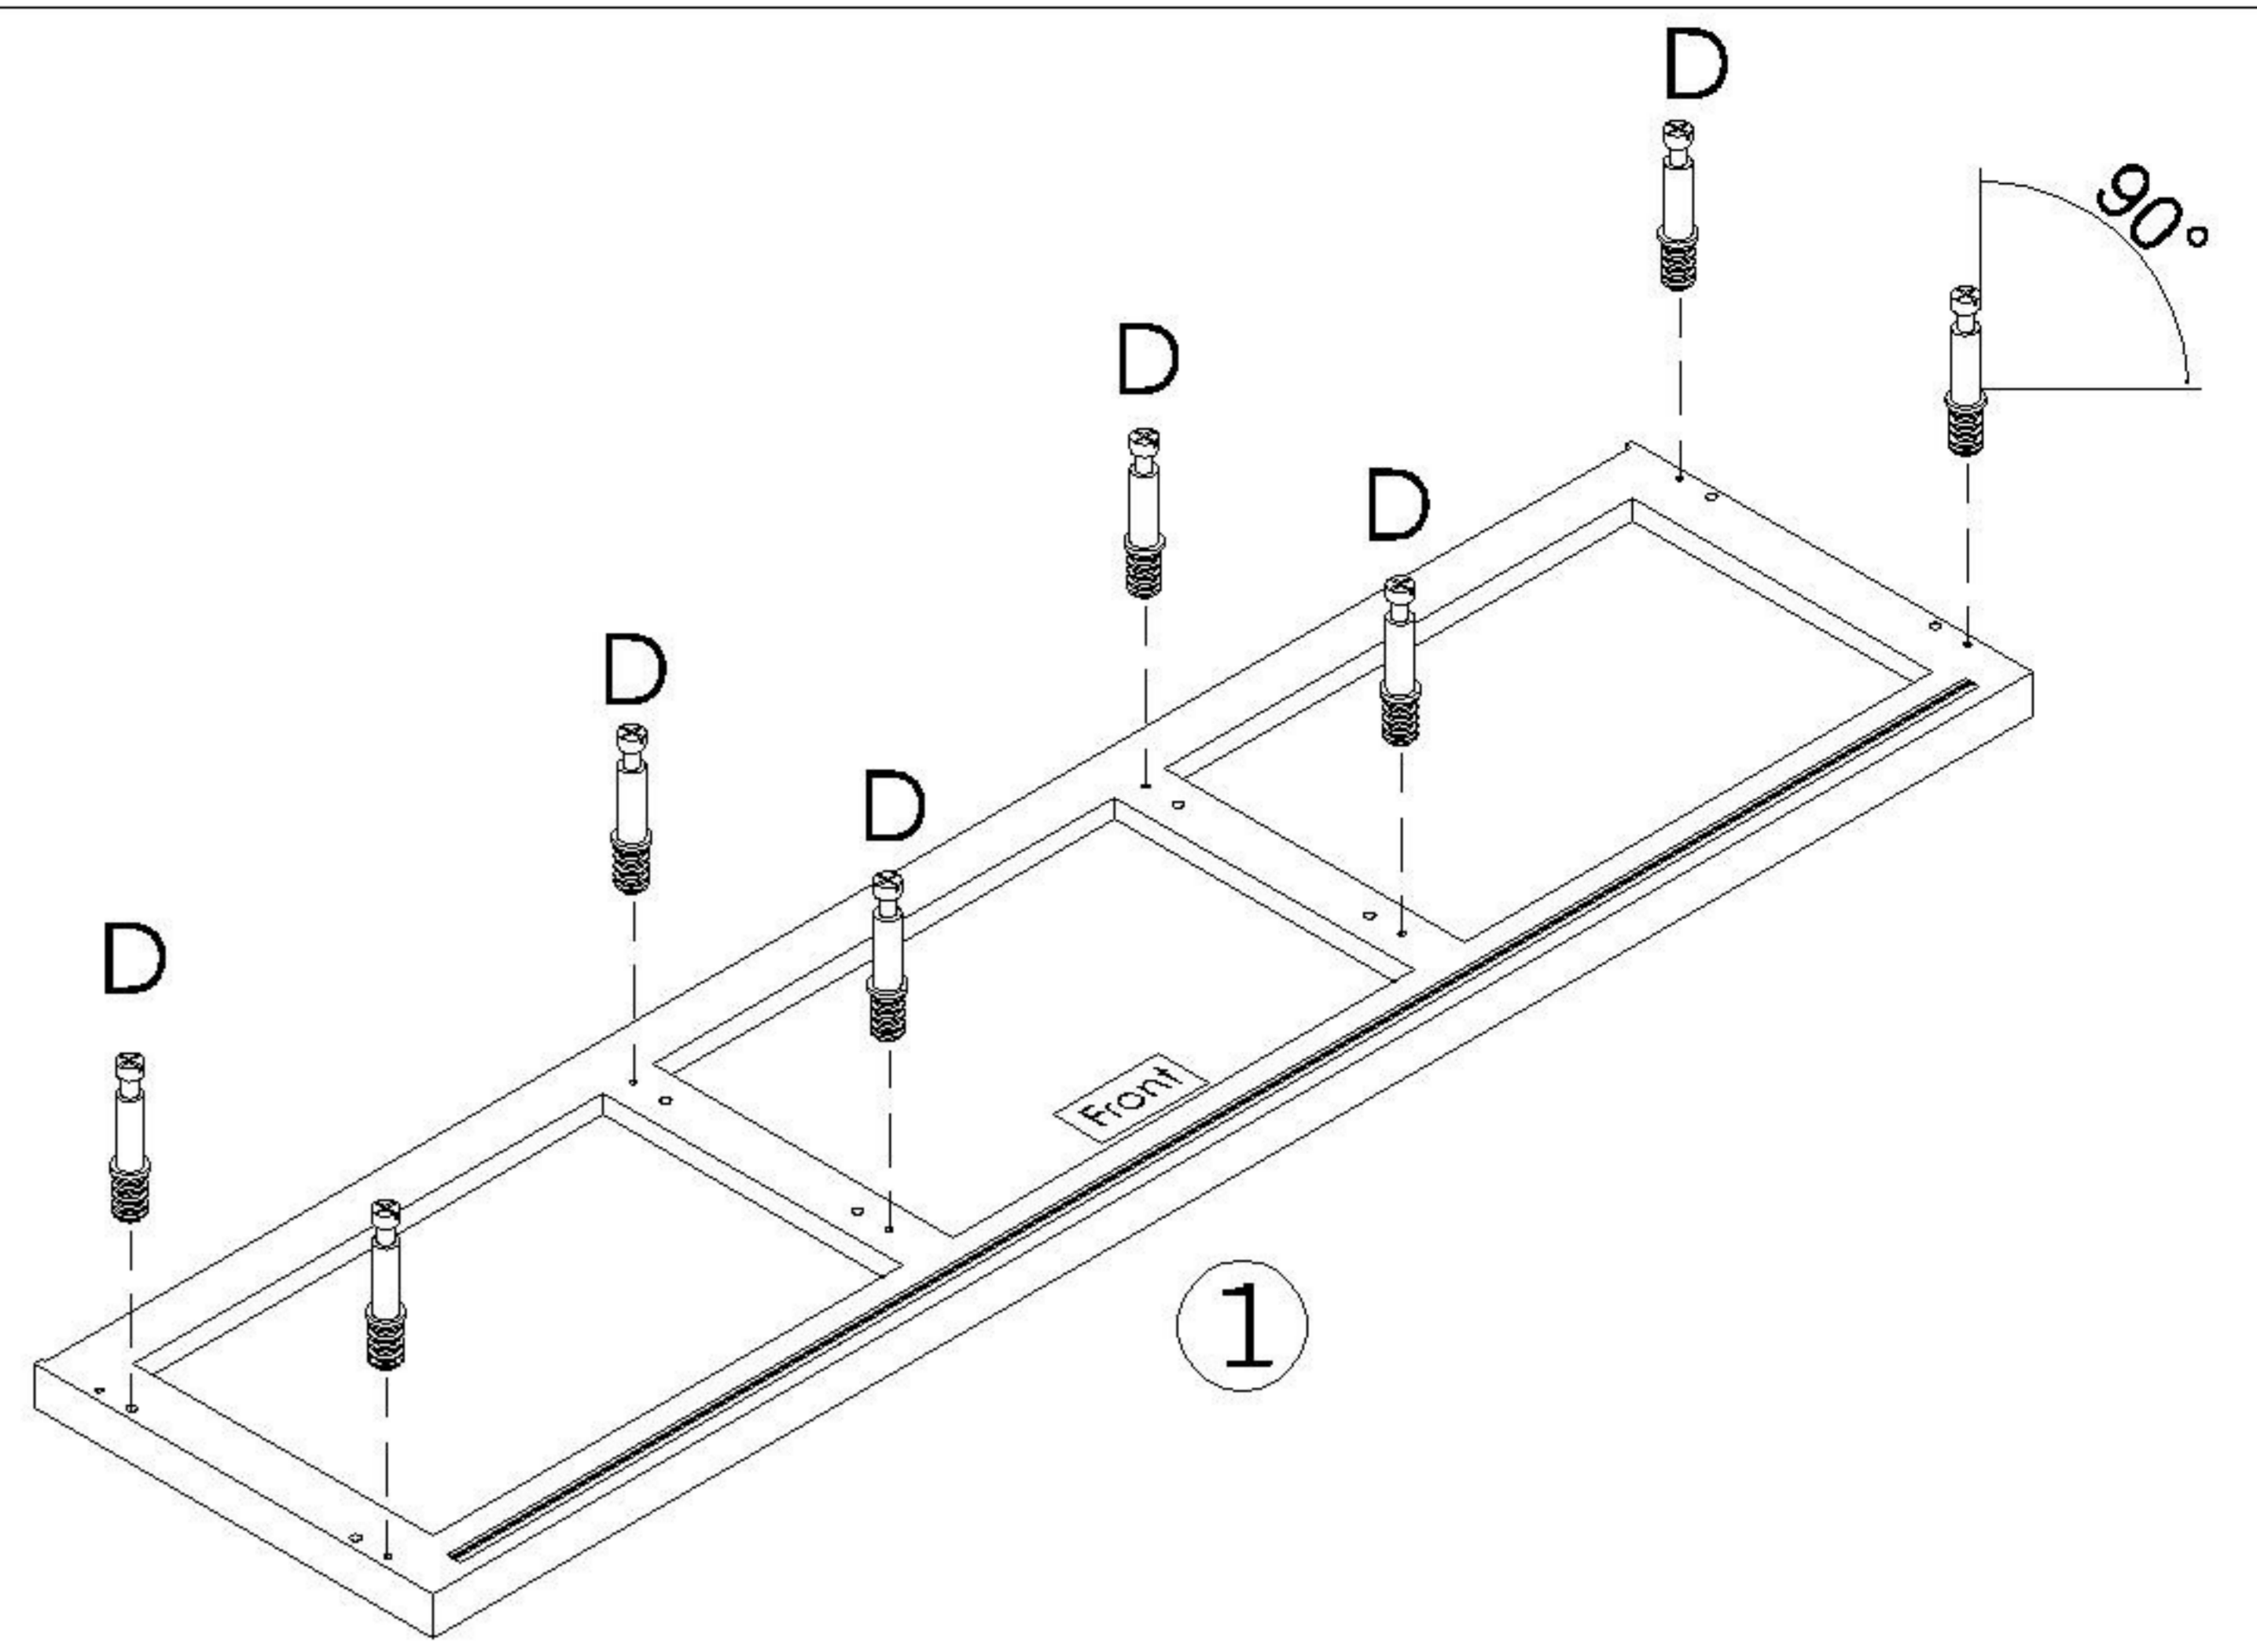

STEP 2

- A) Insert Wood Dowel(C) to Center Bar(10)
- B) Attach Cam Lock(D) to Center Bar(10)

 
Note: Make sure arrows on each Cam Lock point towards nearest edge with holes

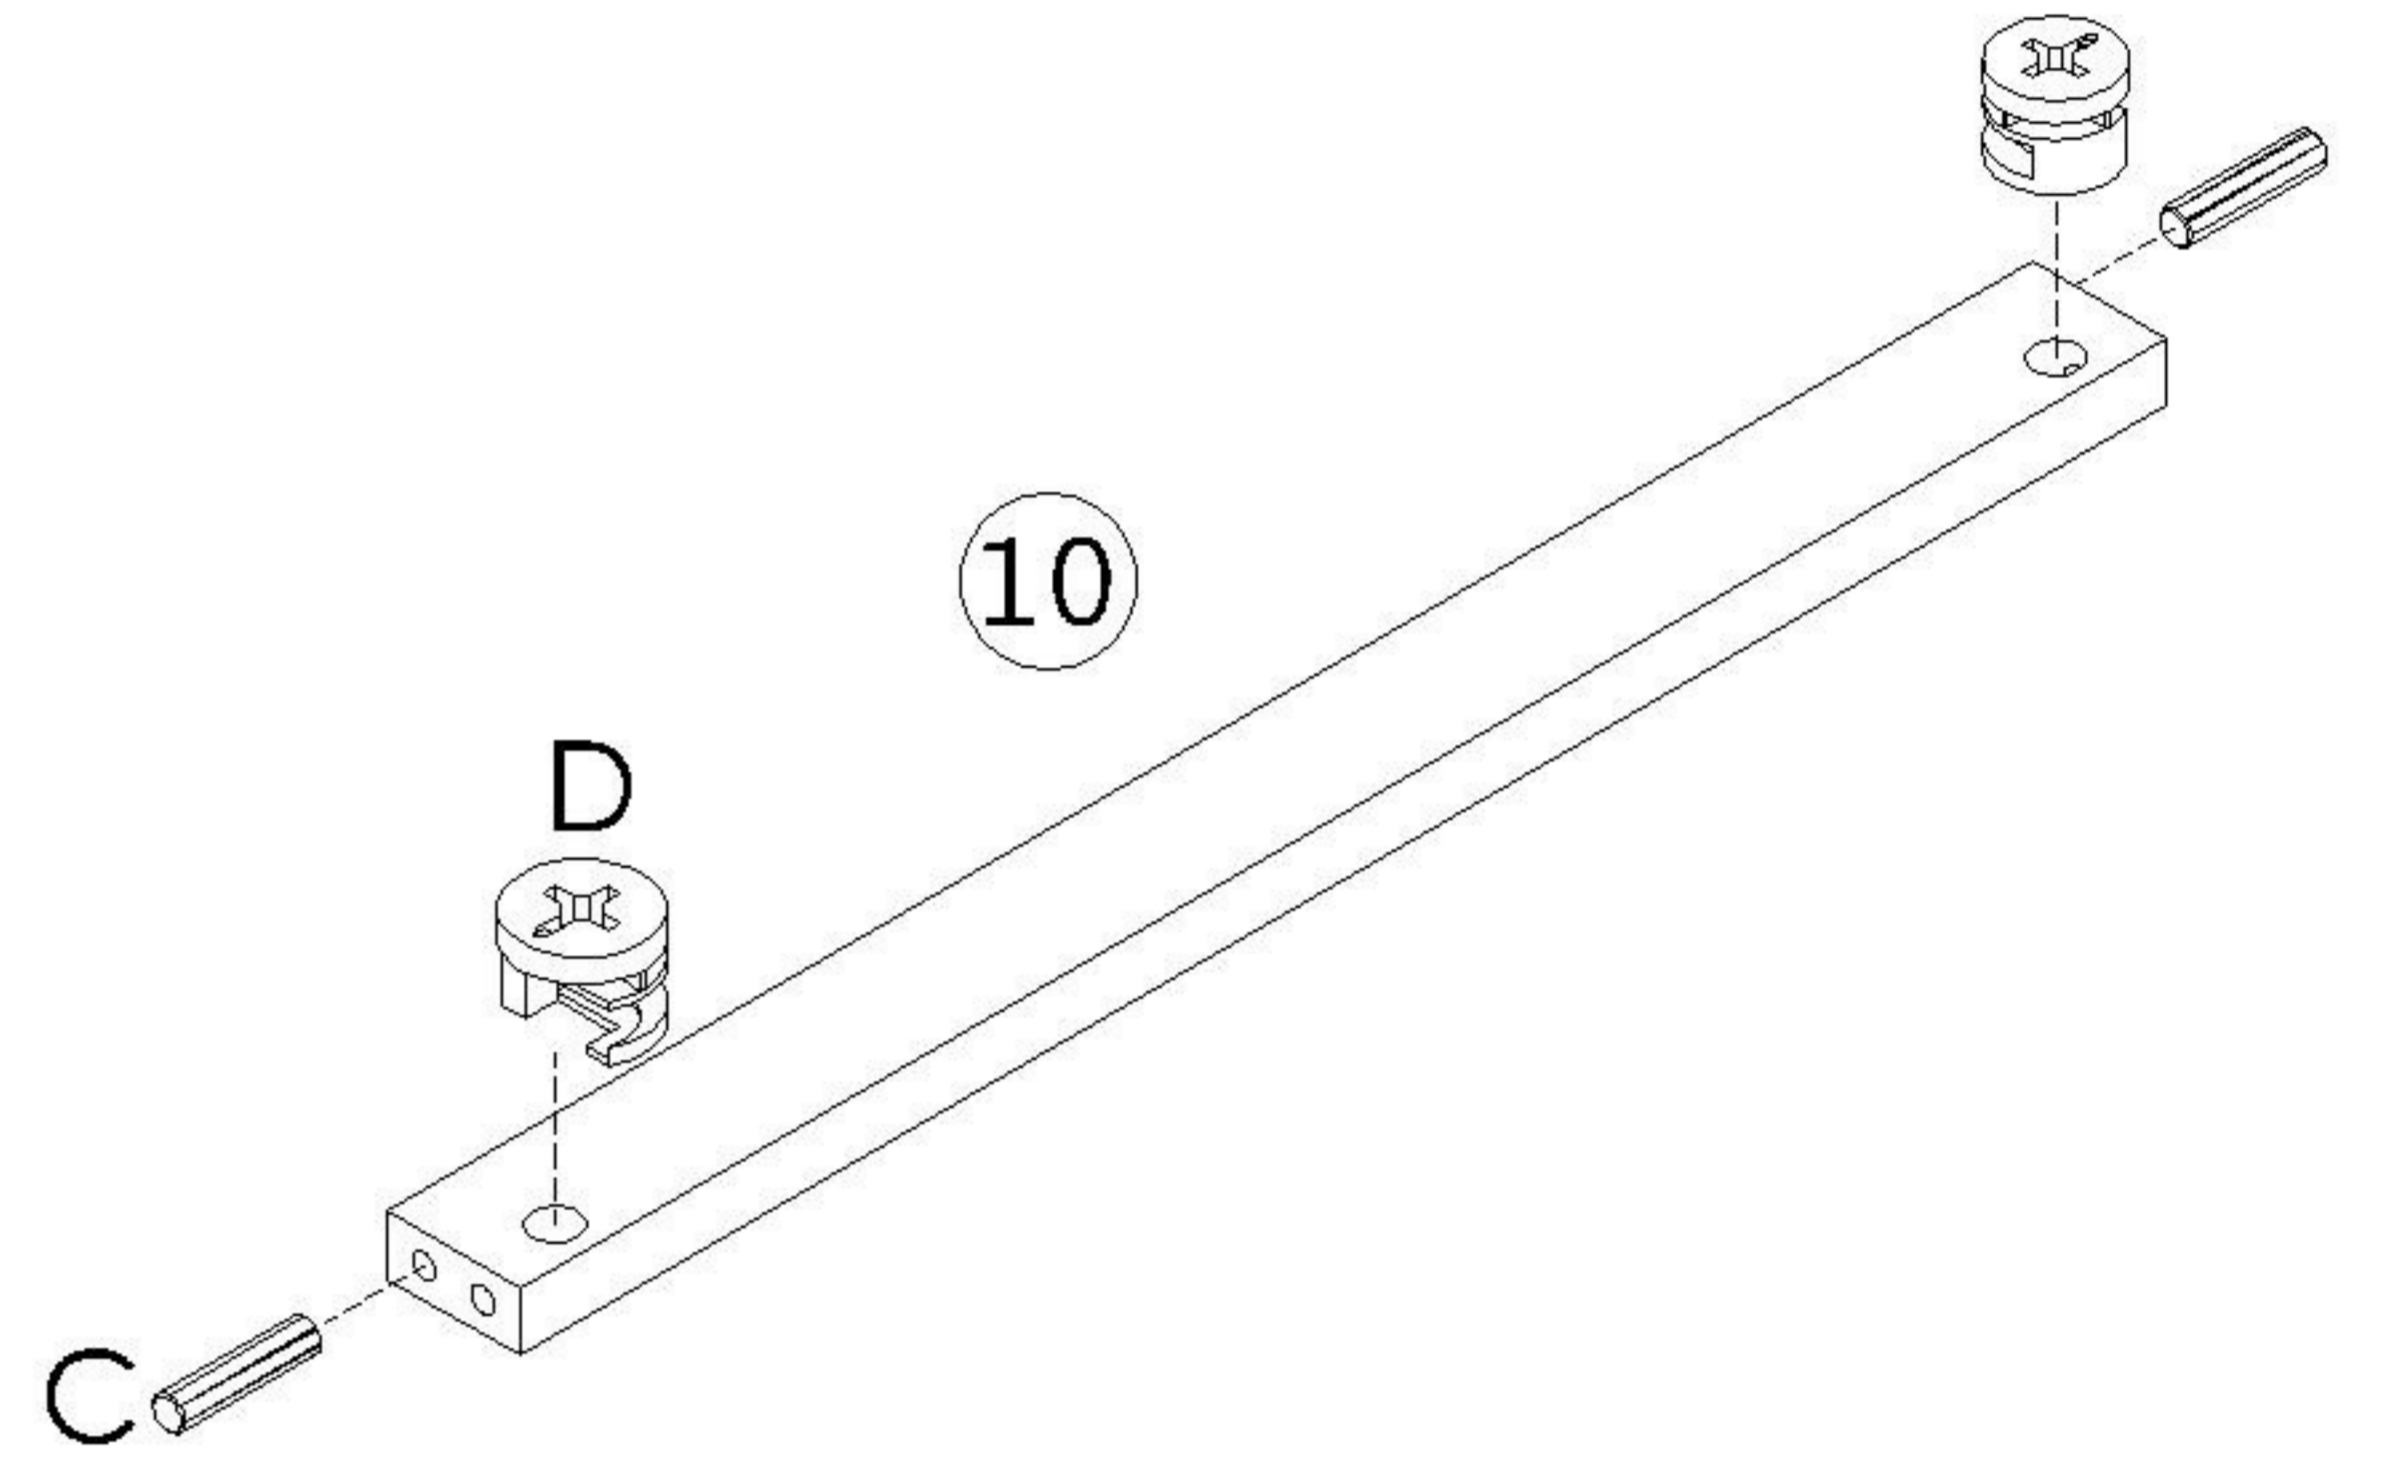

STEP 3

- A) Insert Wood Dowel(C) to Left,Right Side Panel(2,3)
- B) Attach Cam Lock(D) to Left,Right Side Panel(2,3)

 
NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

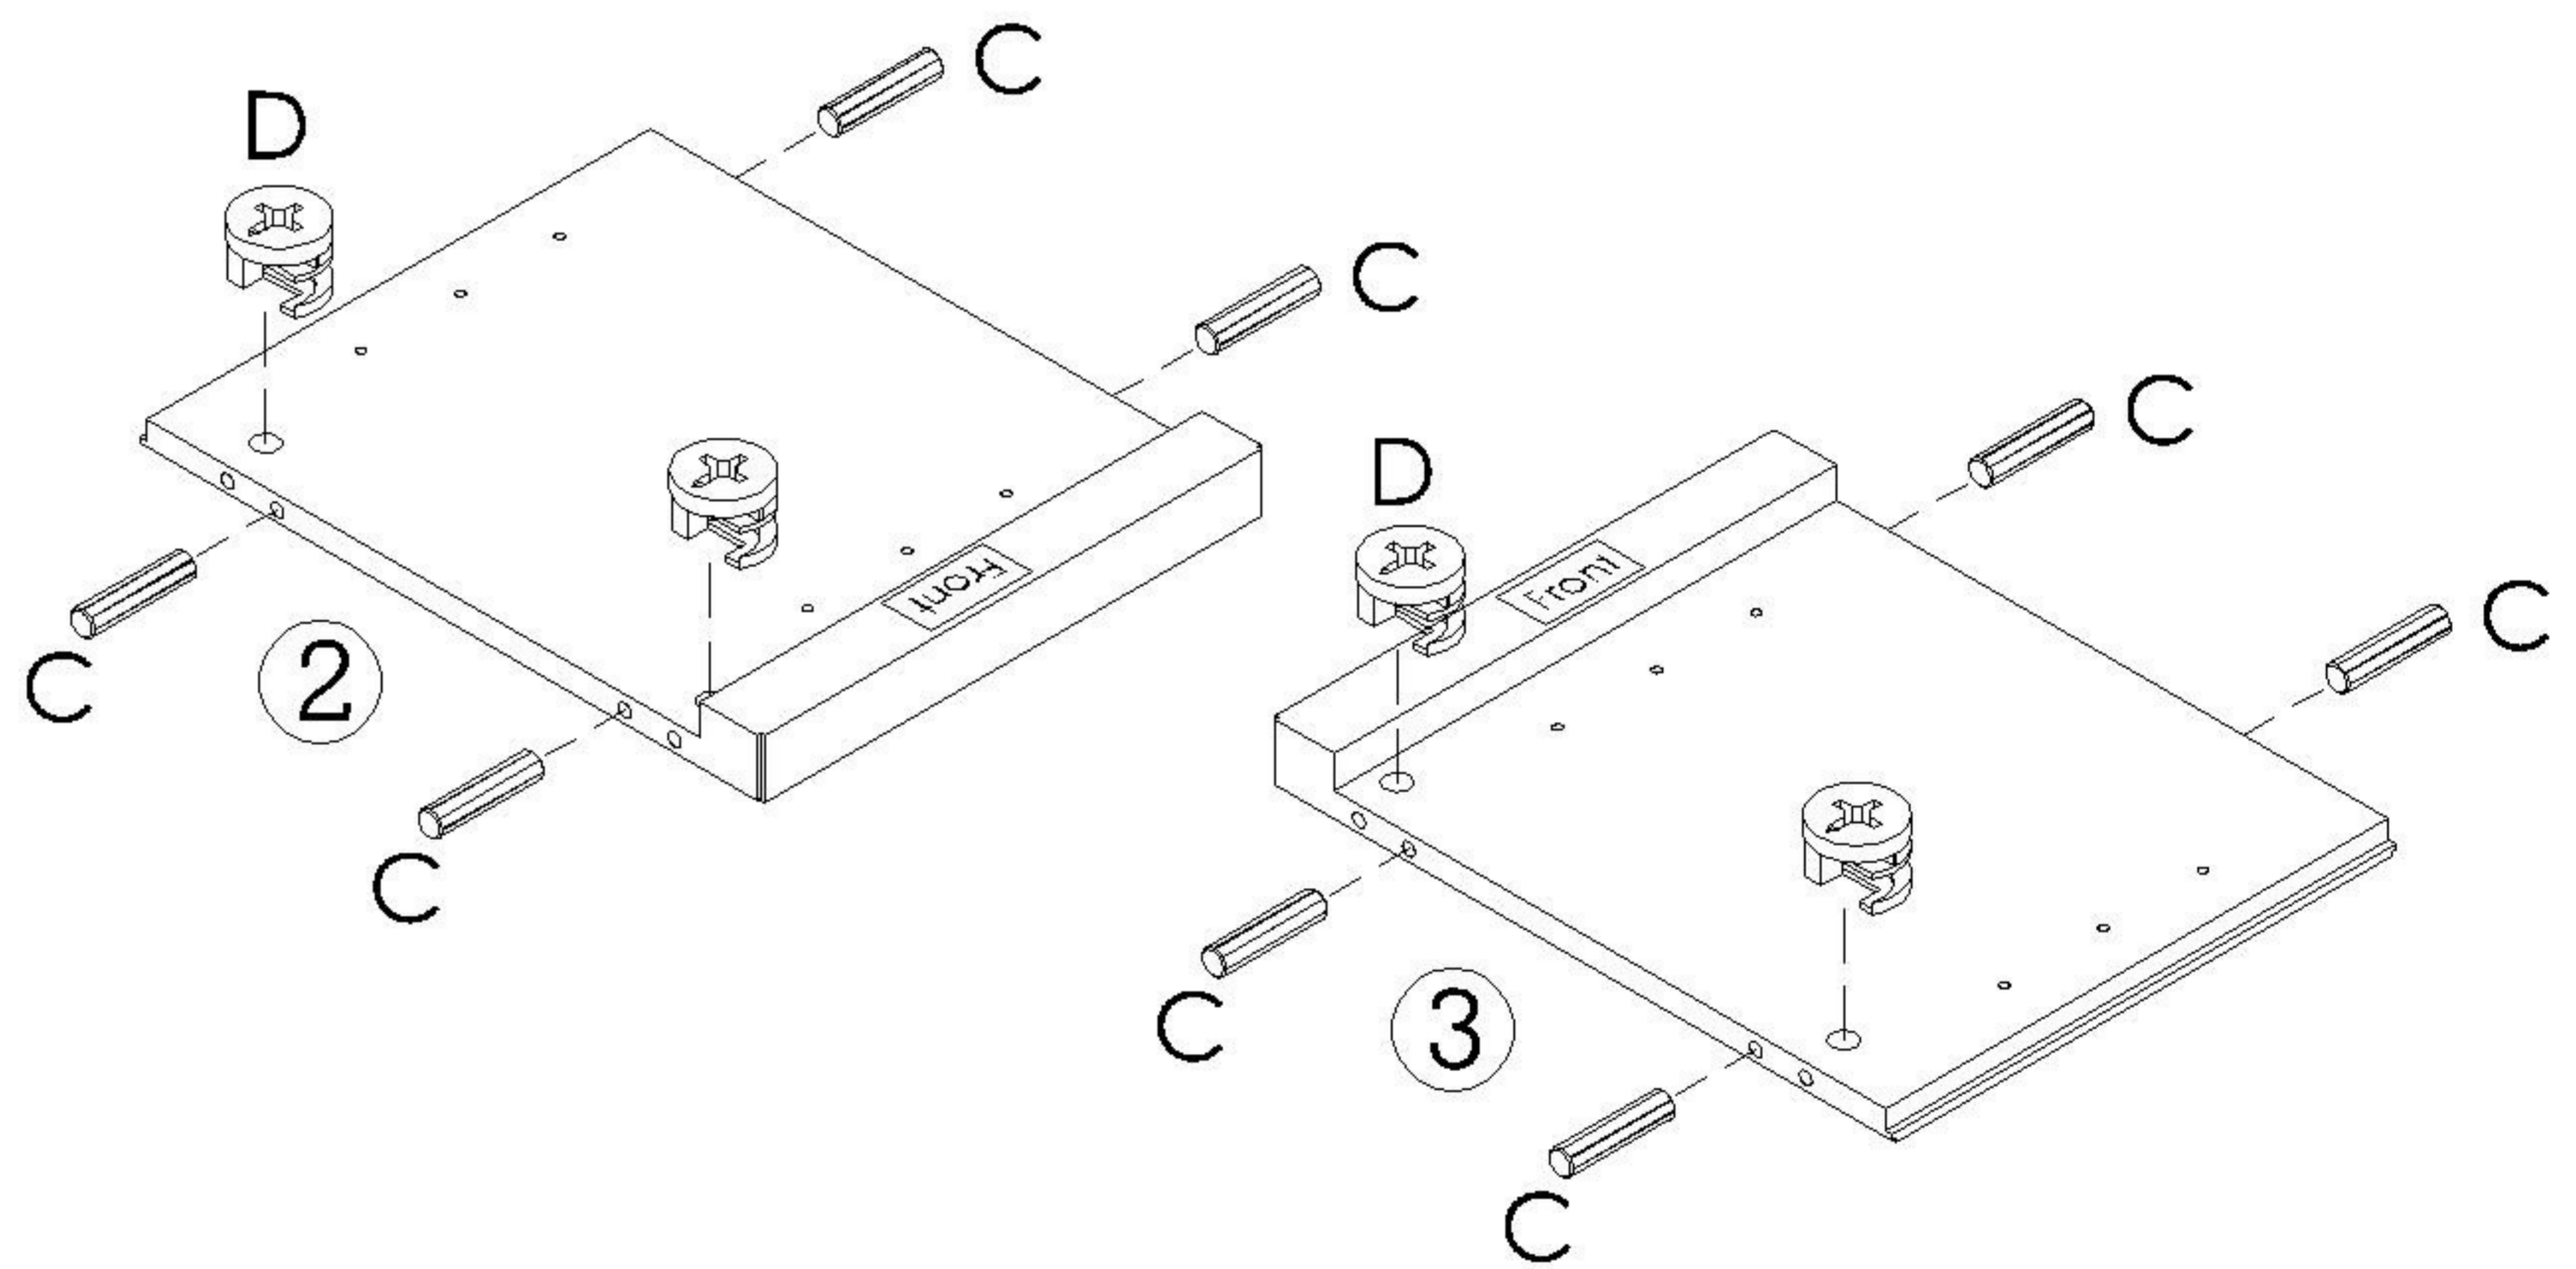

STEP 4

- A) Insert Wood Dowel(C) to Left,Right Partition(5,6)
- B) Attach Cam Lock(D) to Left,Right Partition(5,6)
- C) Attach Cam Bolt(D) to Left,Right Partition(5,6)

 NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes



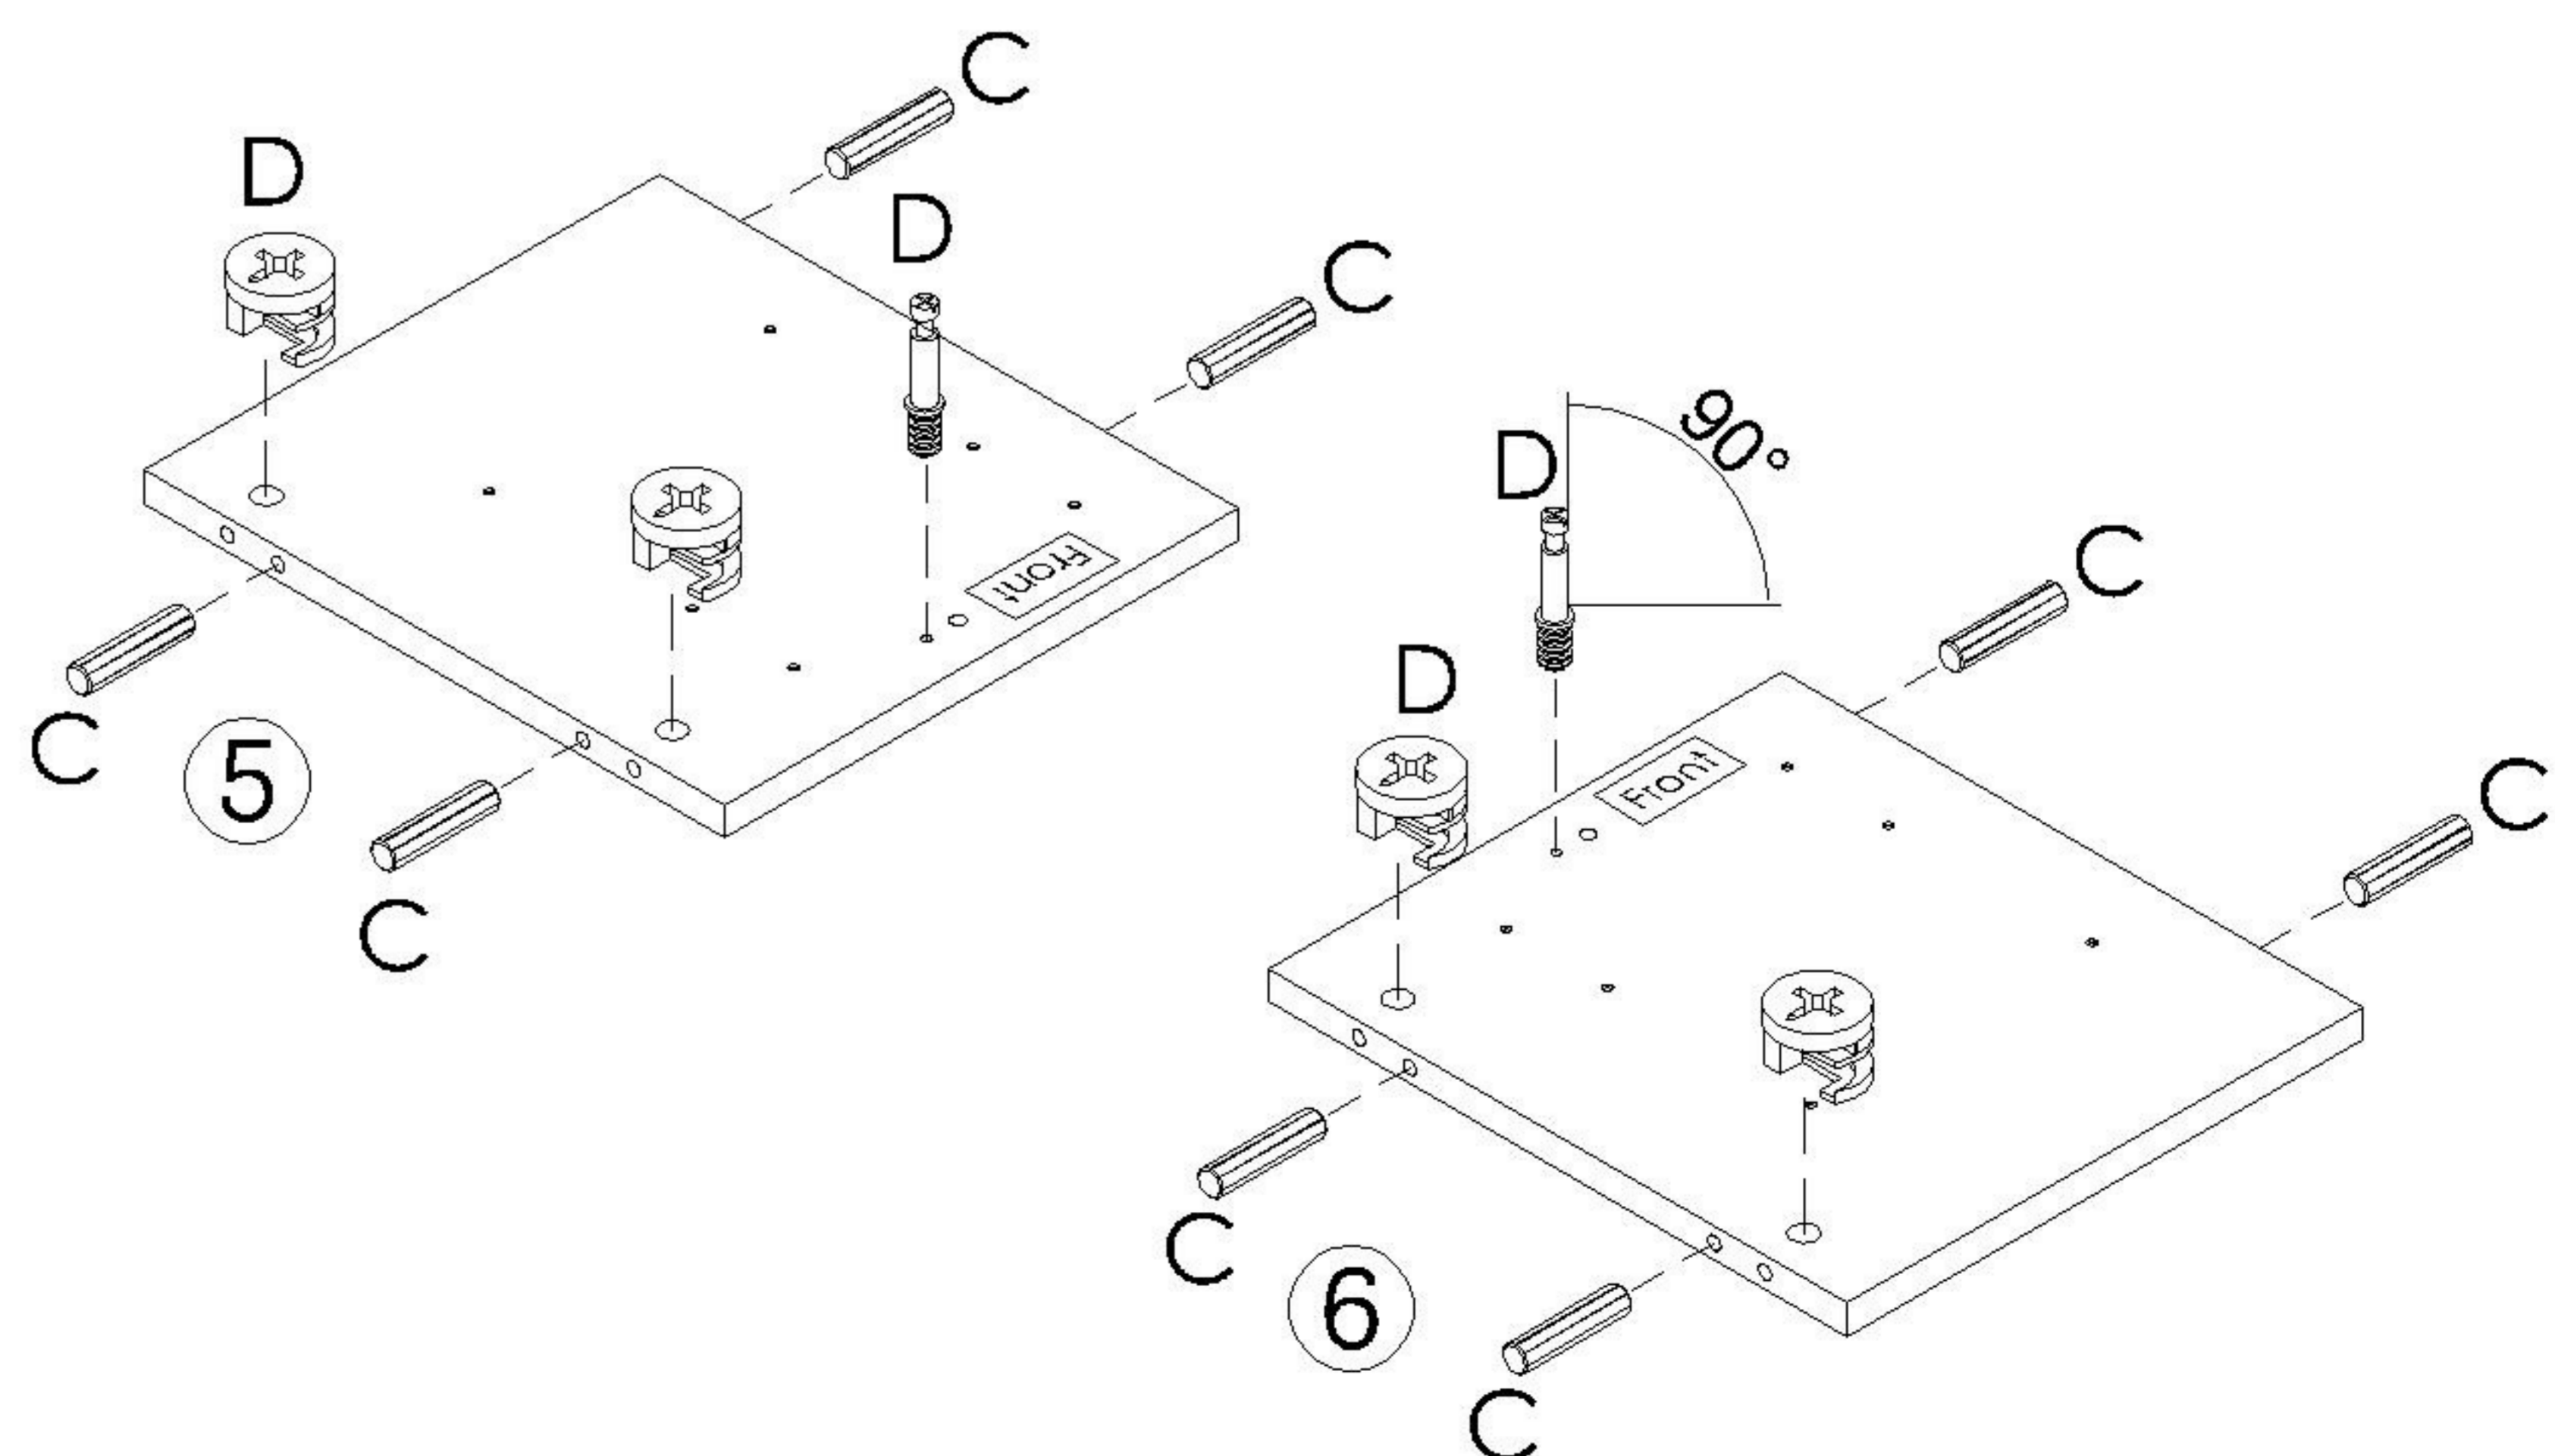


STEP 5


- A) Attach Extension Runner(F) to Left,Right Partition(5,6) using Chipboard Screw(A) to secure

NOTE : Chipboard Screw(A) should be assembled from the front of the runner in the order of A¹, A² then A³

   NOTE : Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole

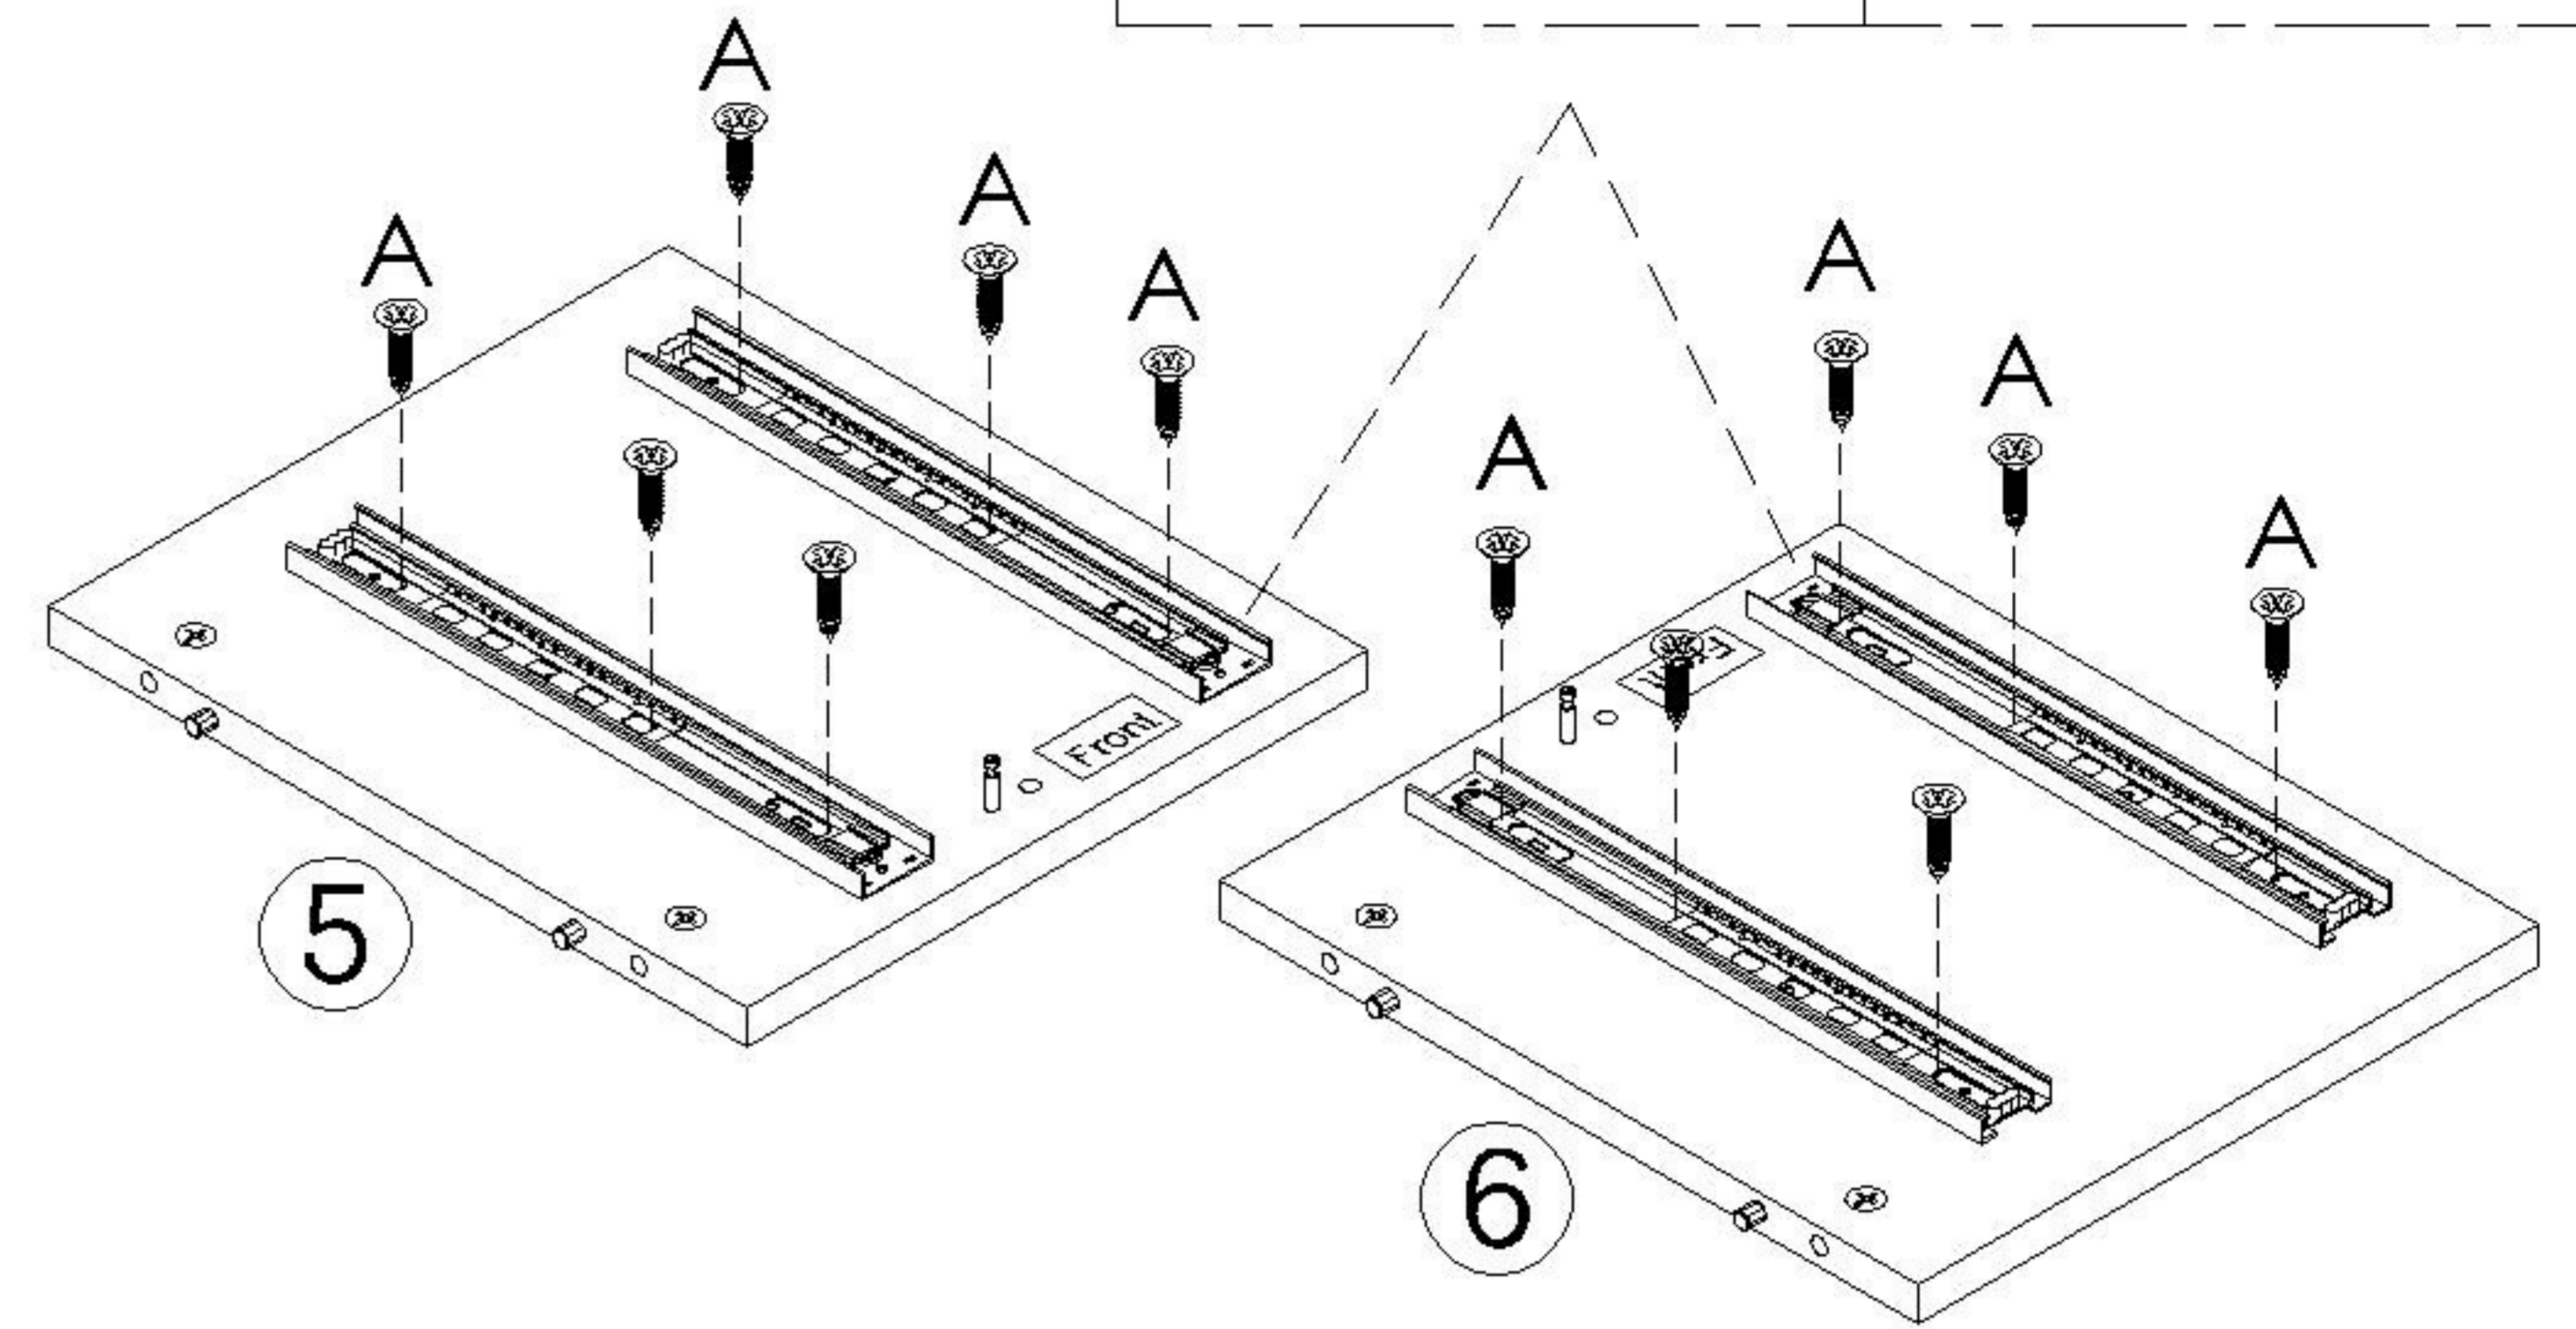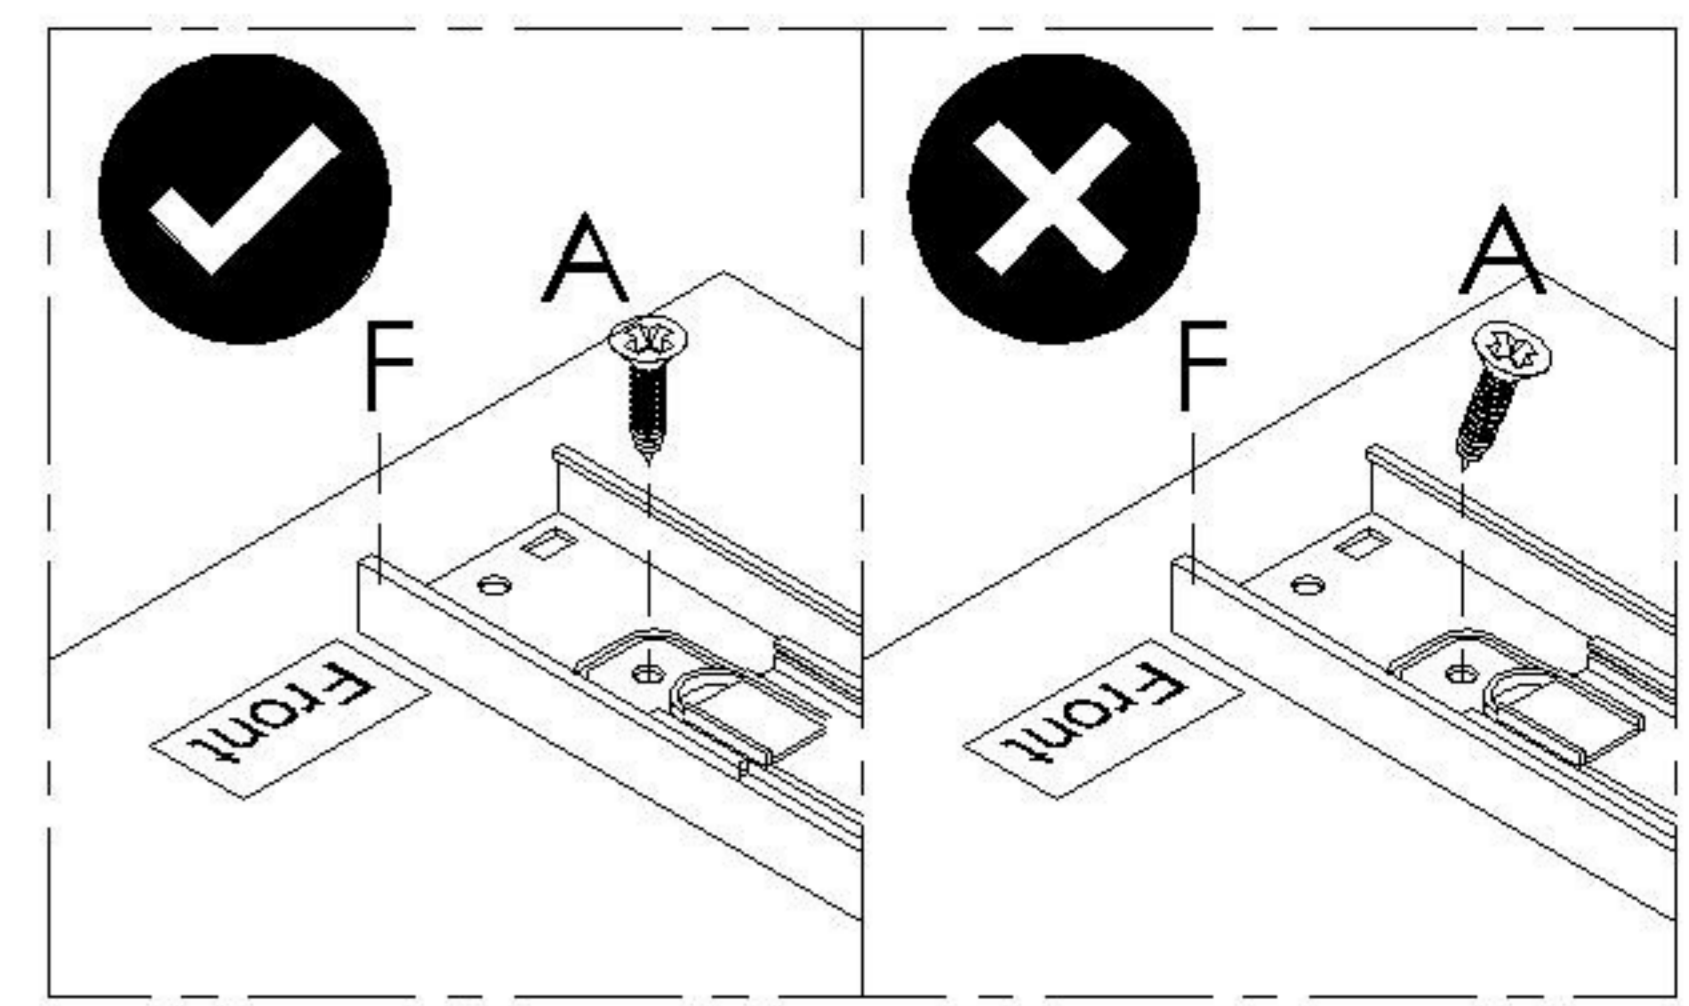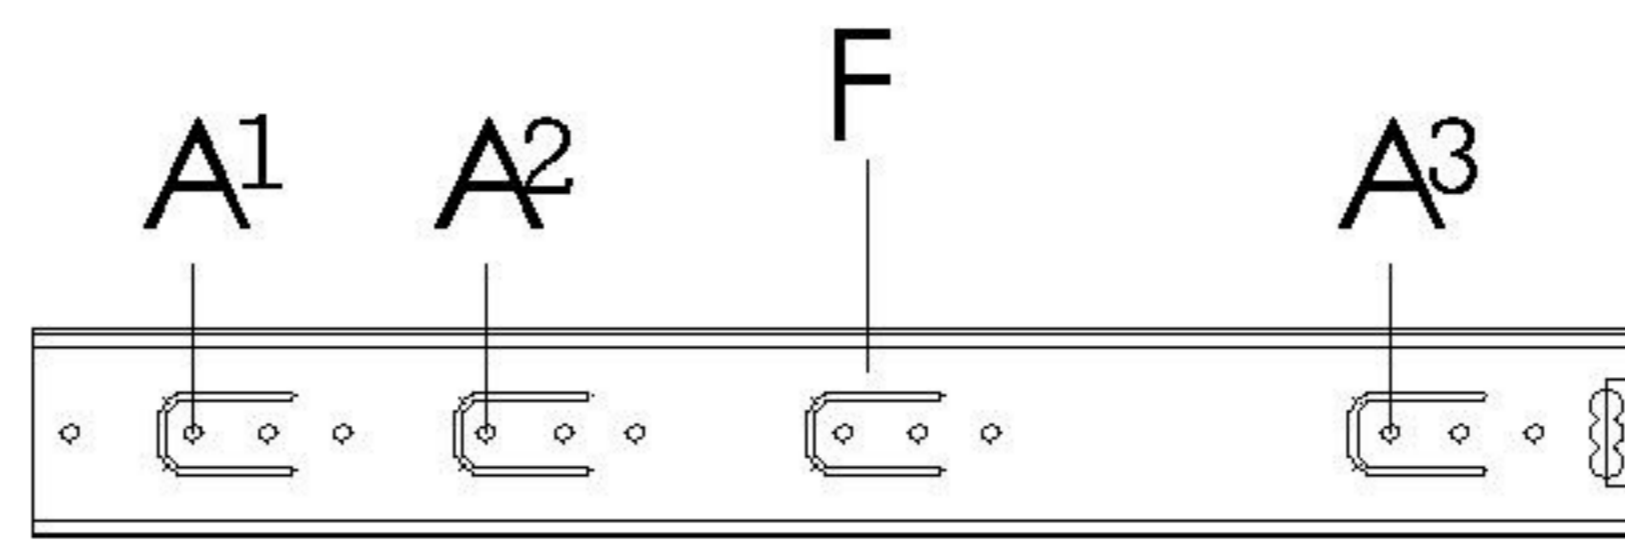


EXTENSION RUNNER DISASSEMBLE STEPS:

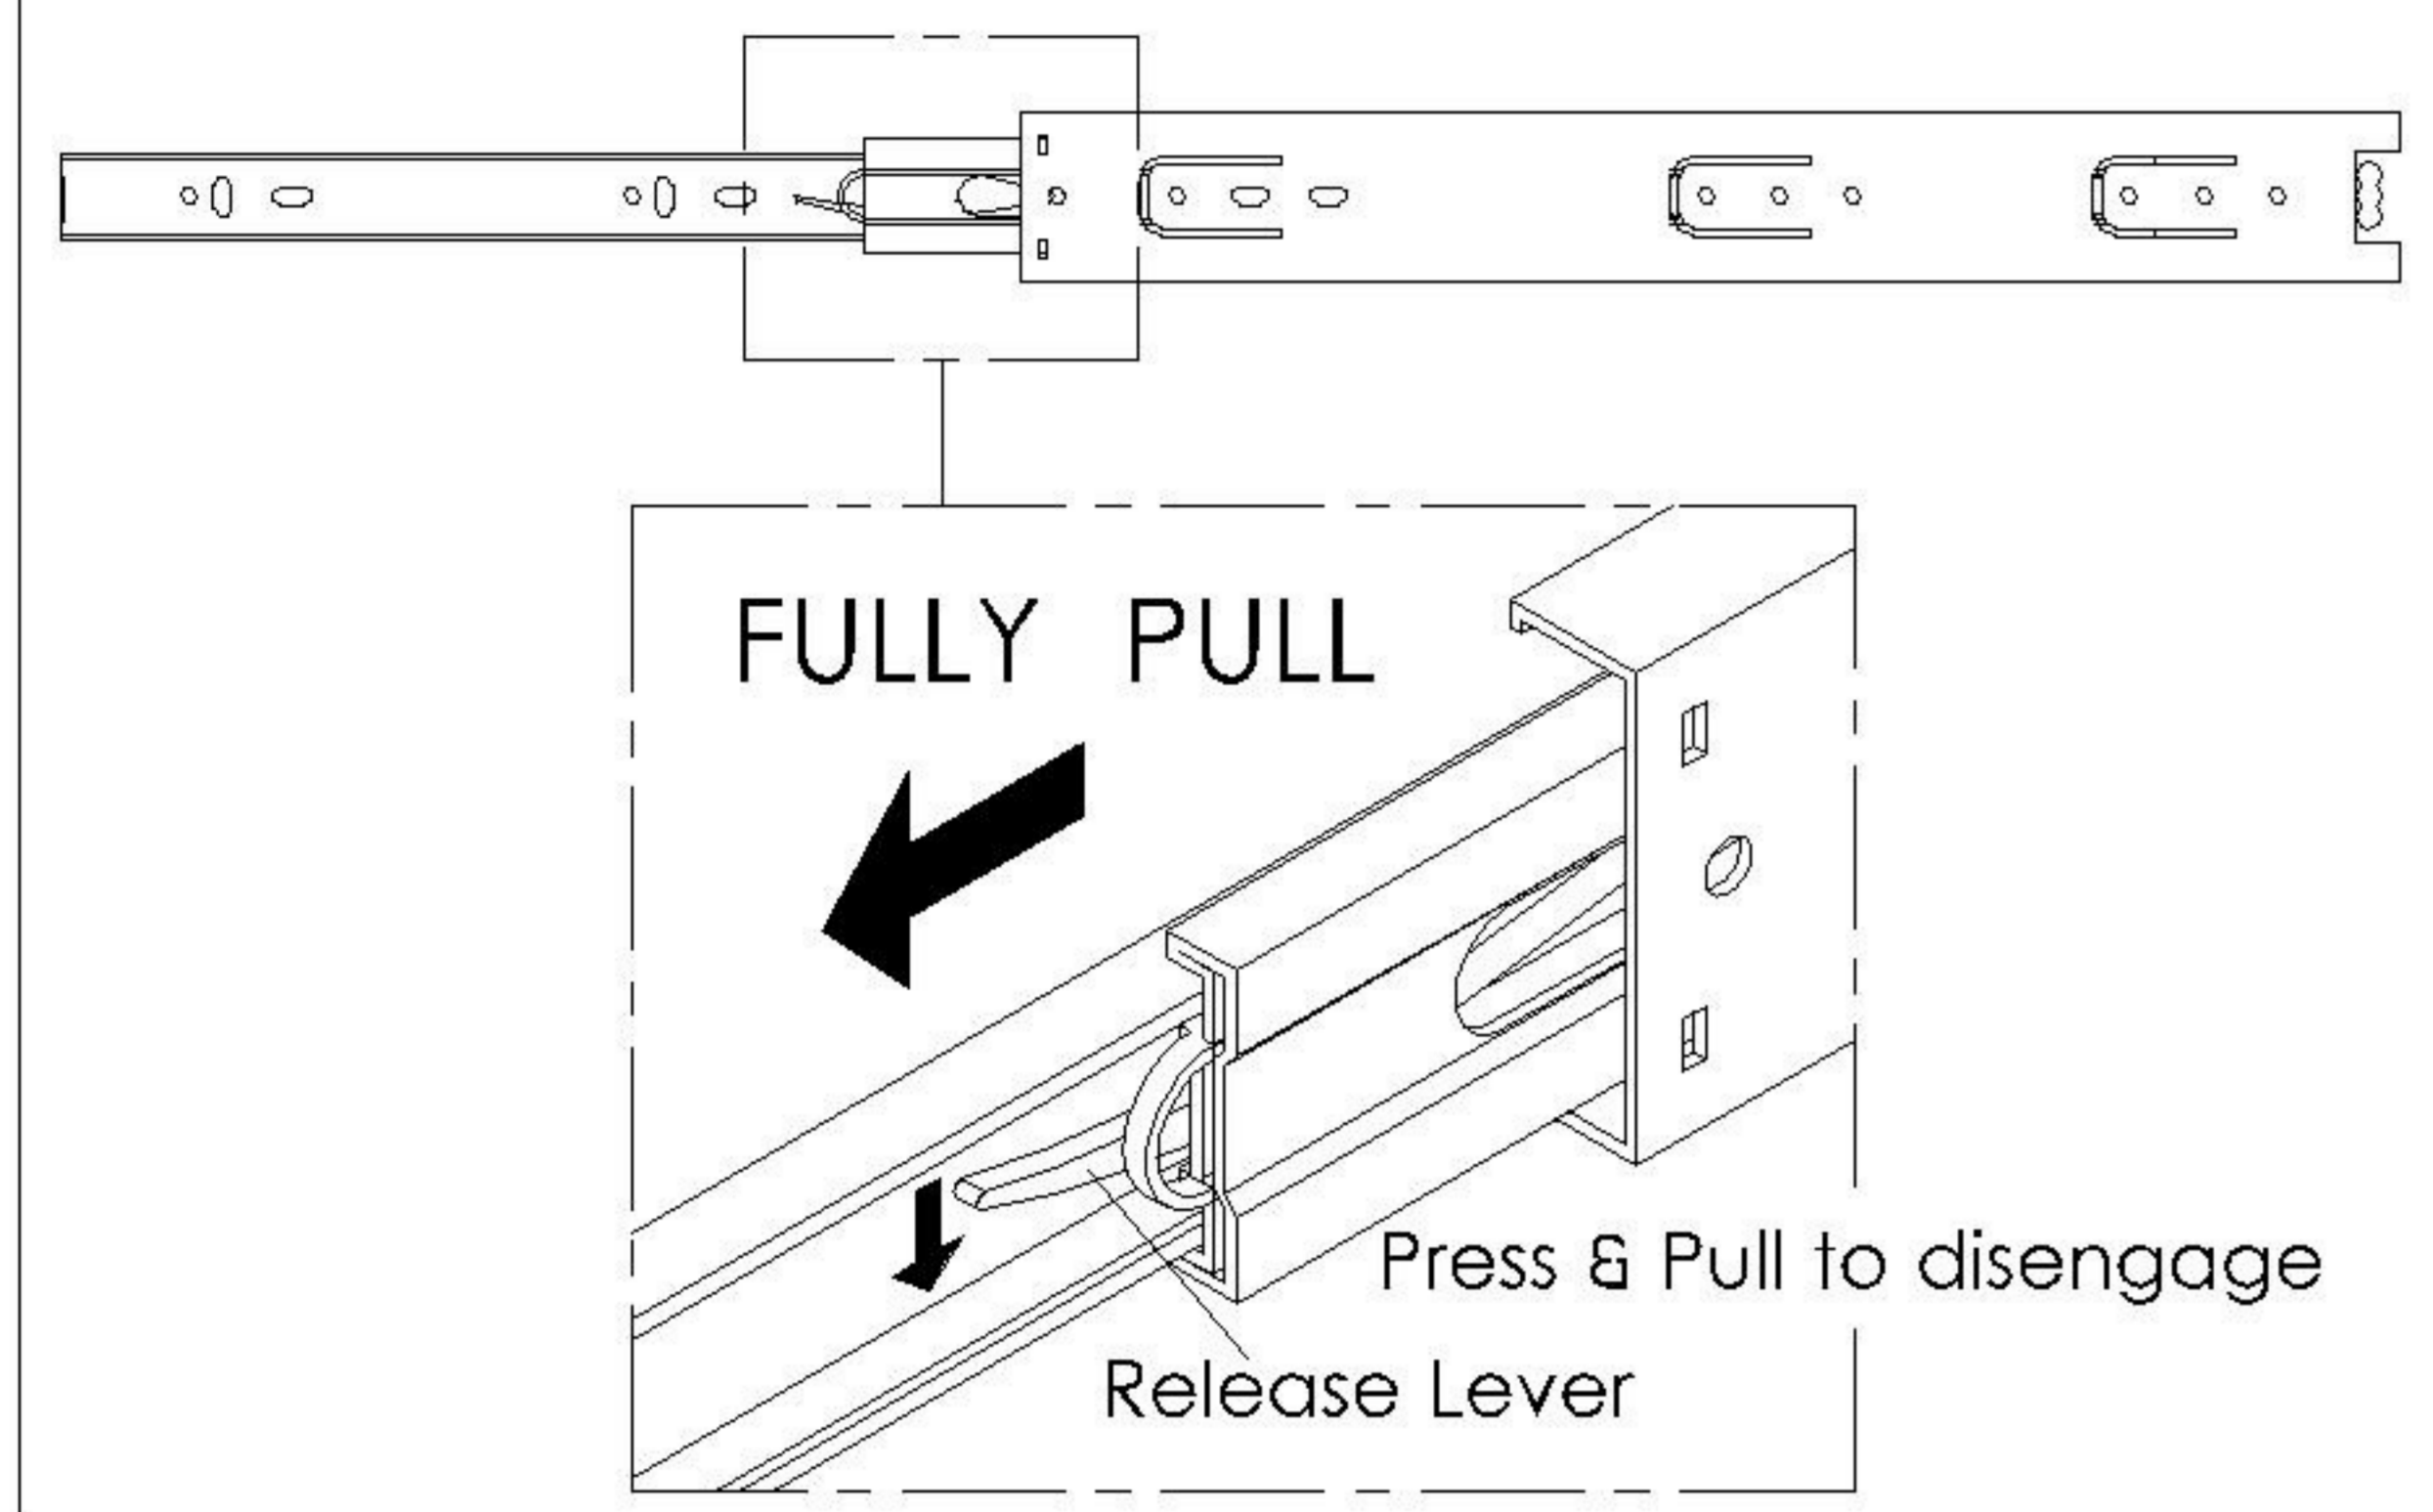 


STEP 6

 - A) Attach Roller (N) to both Door(7) using Chipboard Screw(A) to secure

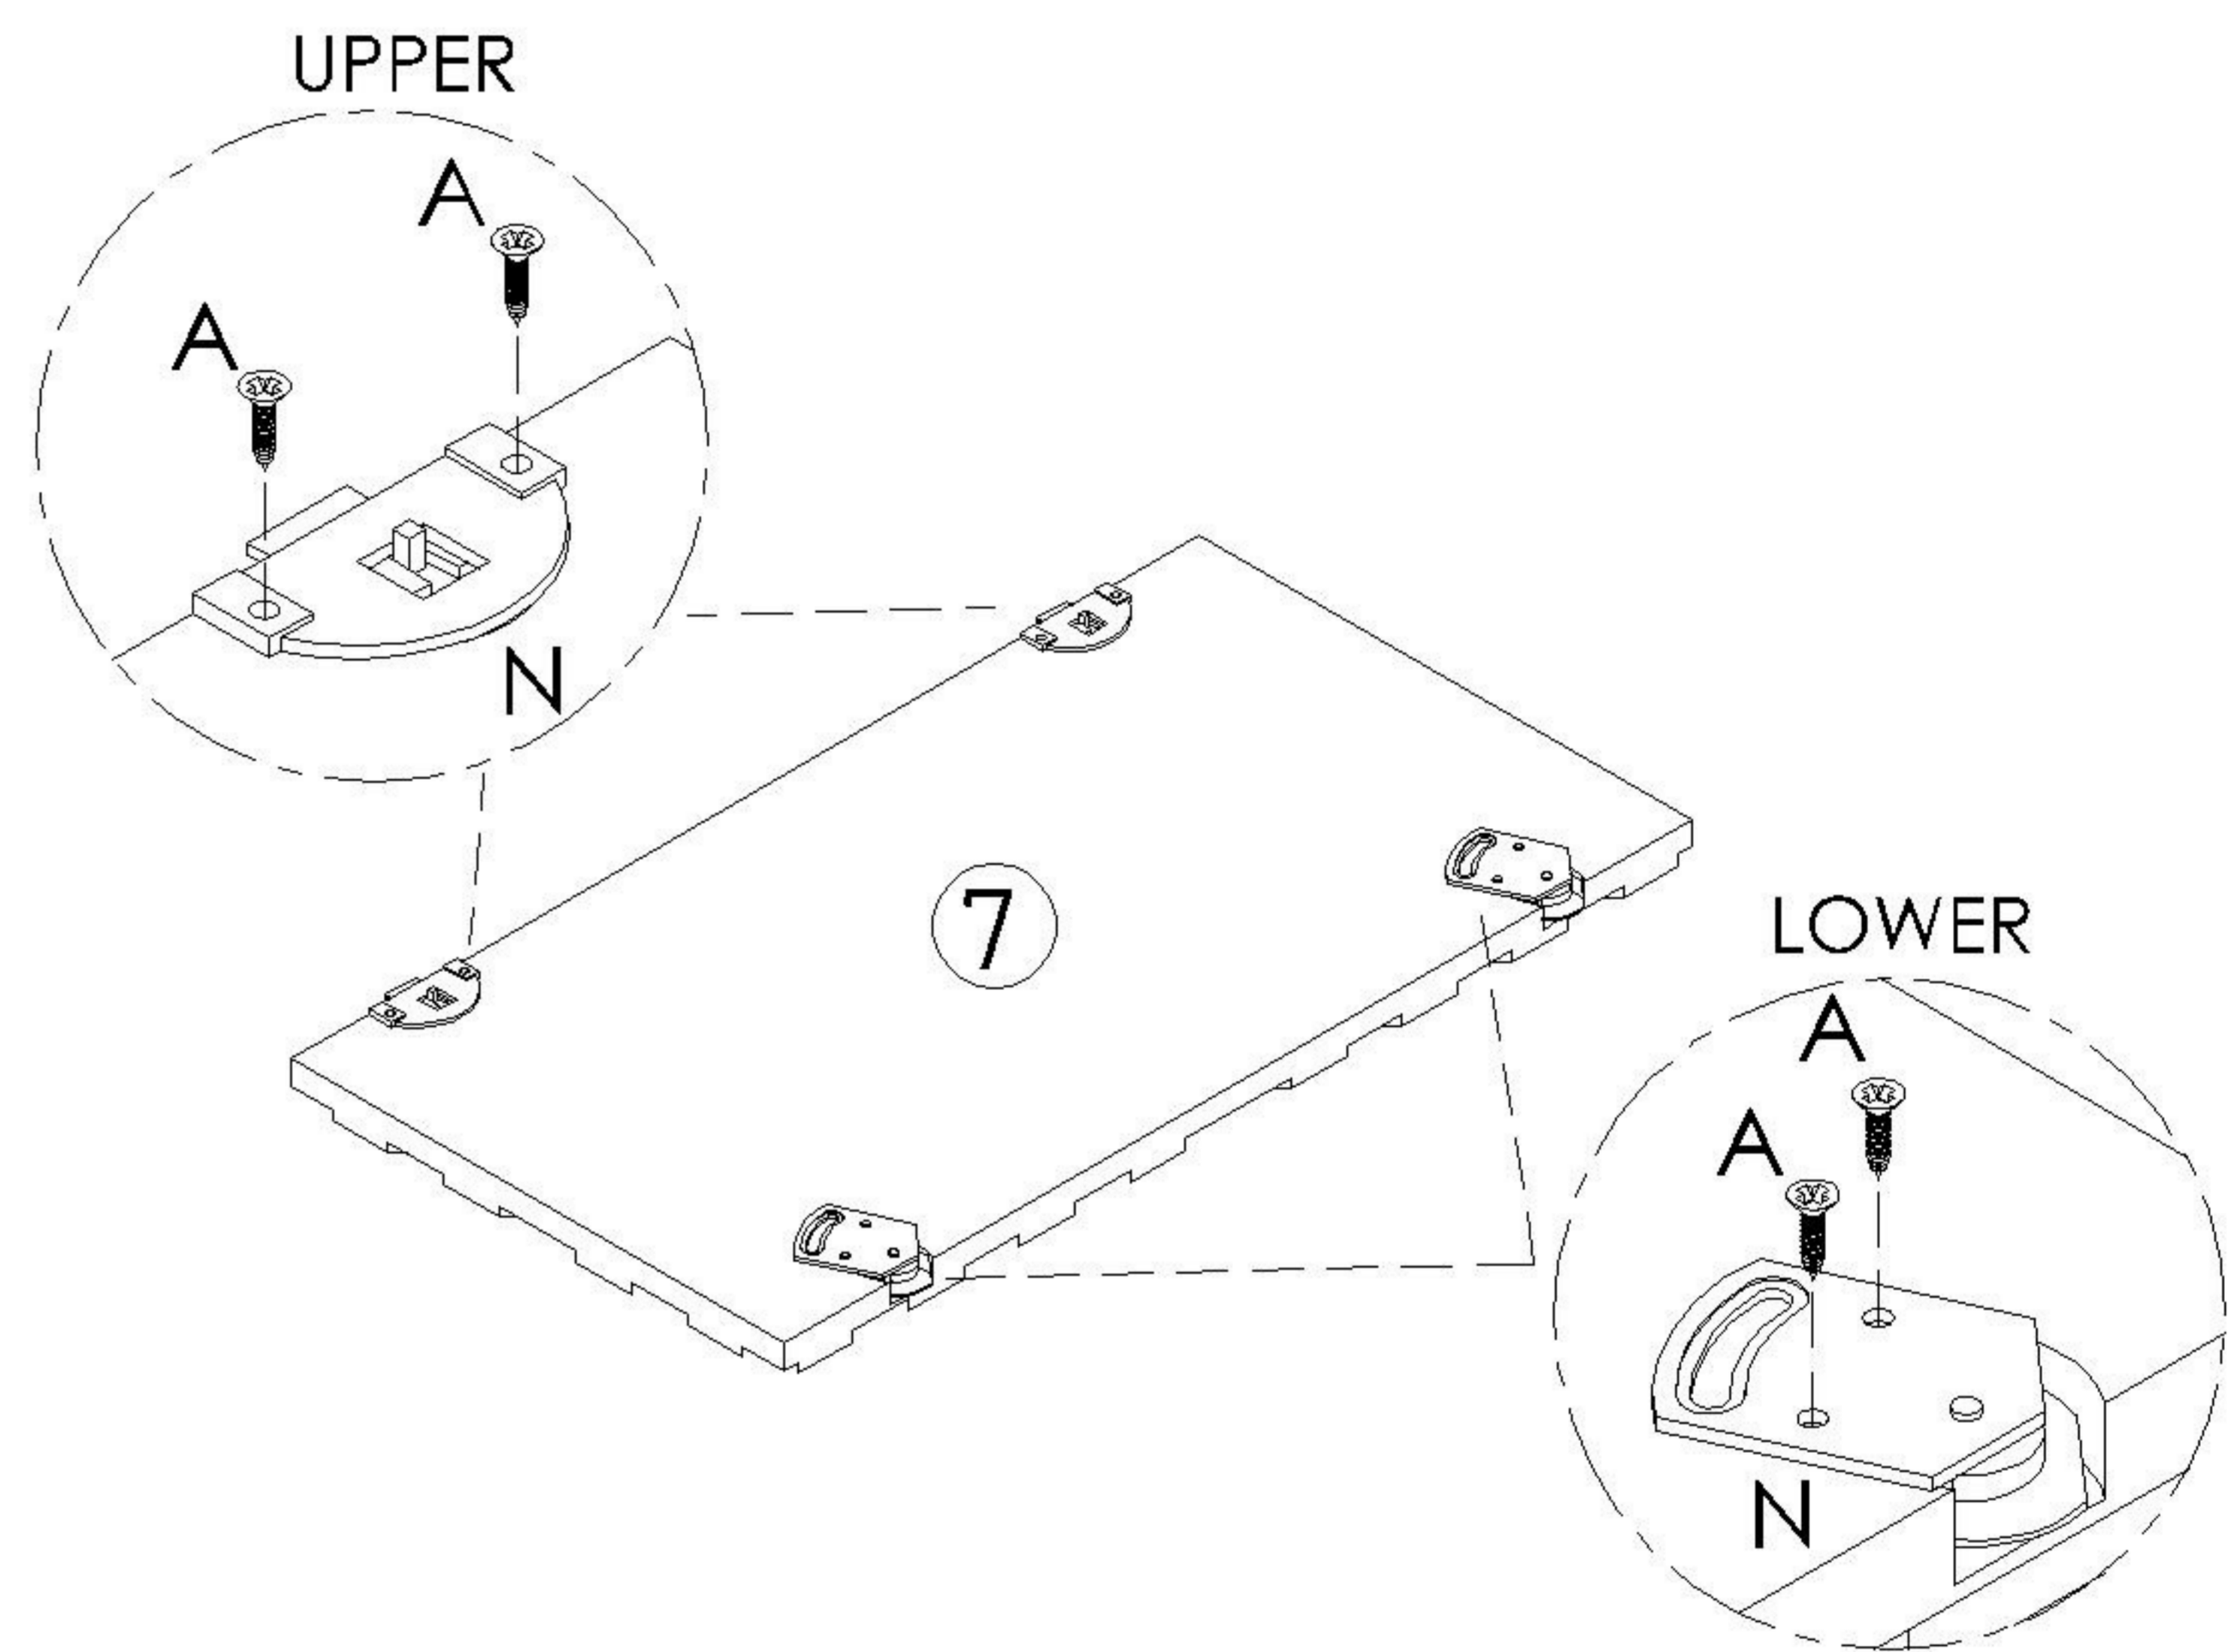


STEP 7

 - A) Attach Post(8) to Bottom Panel(4) and secure with JCBC Screw(L), Spring Washer(K) & Flat Washer(J) tighten with Allen Key(M) clockwise

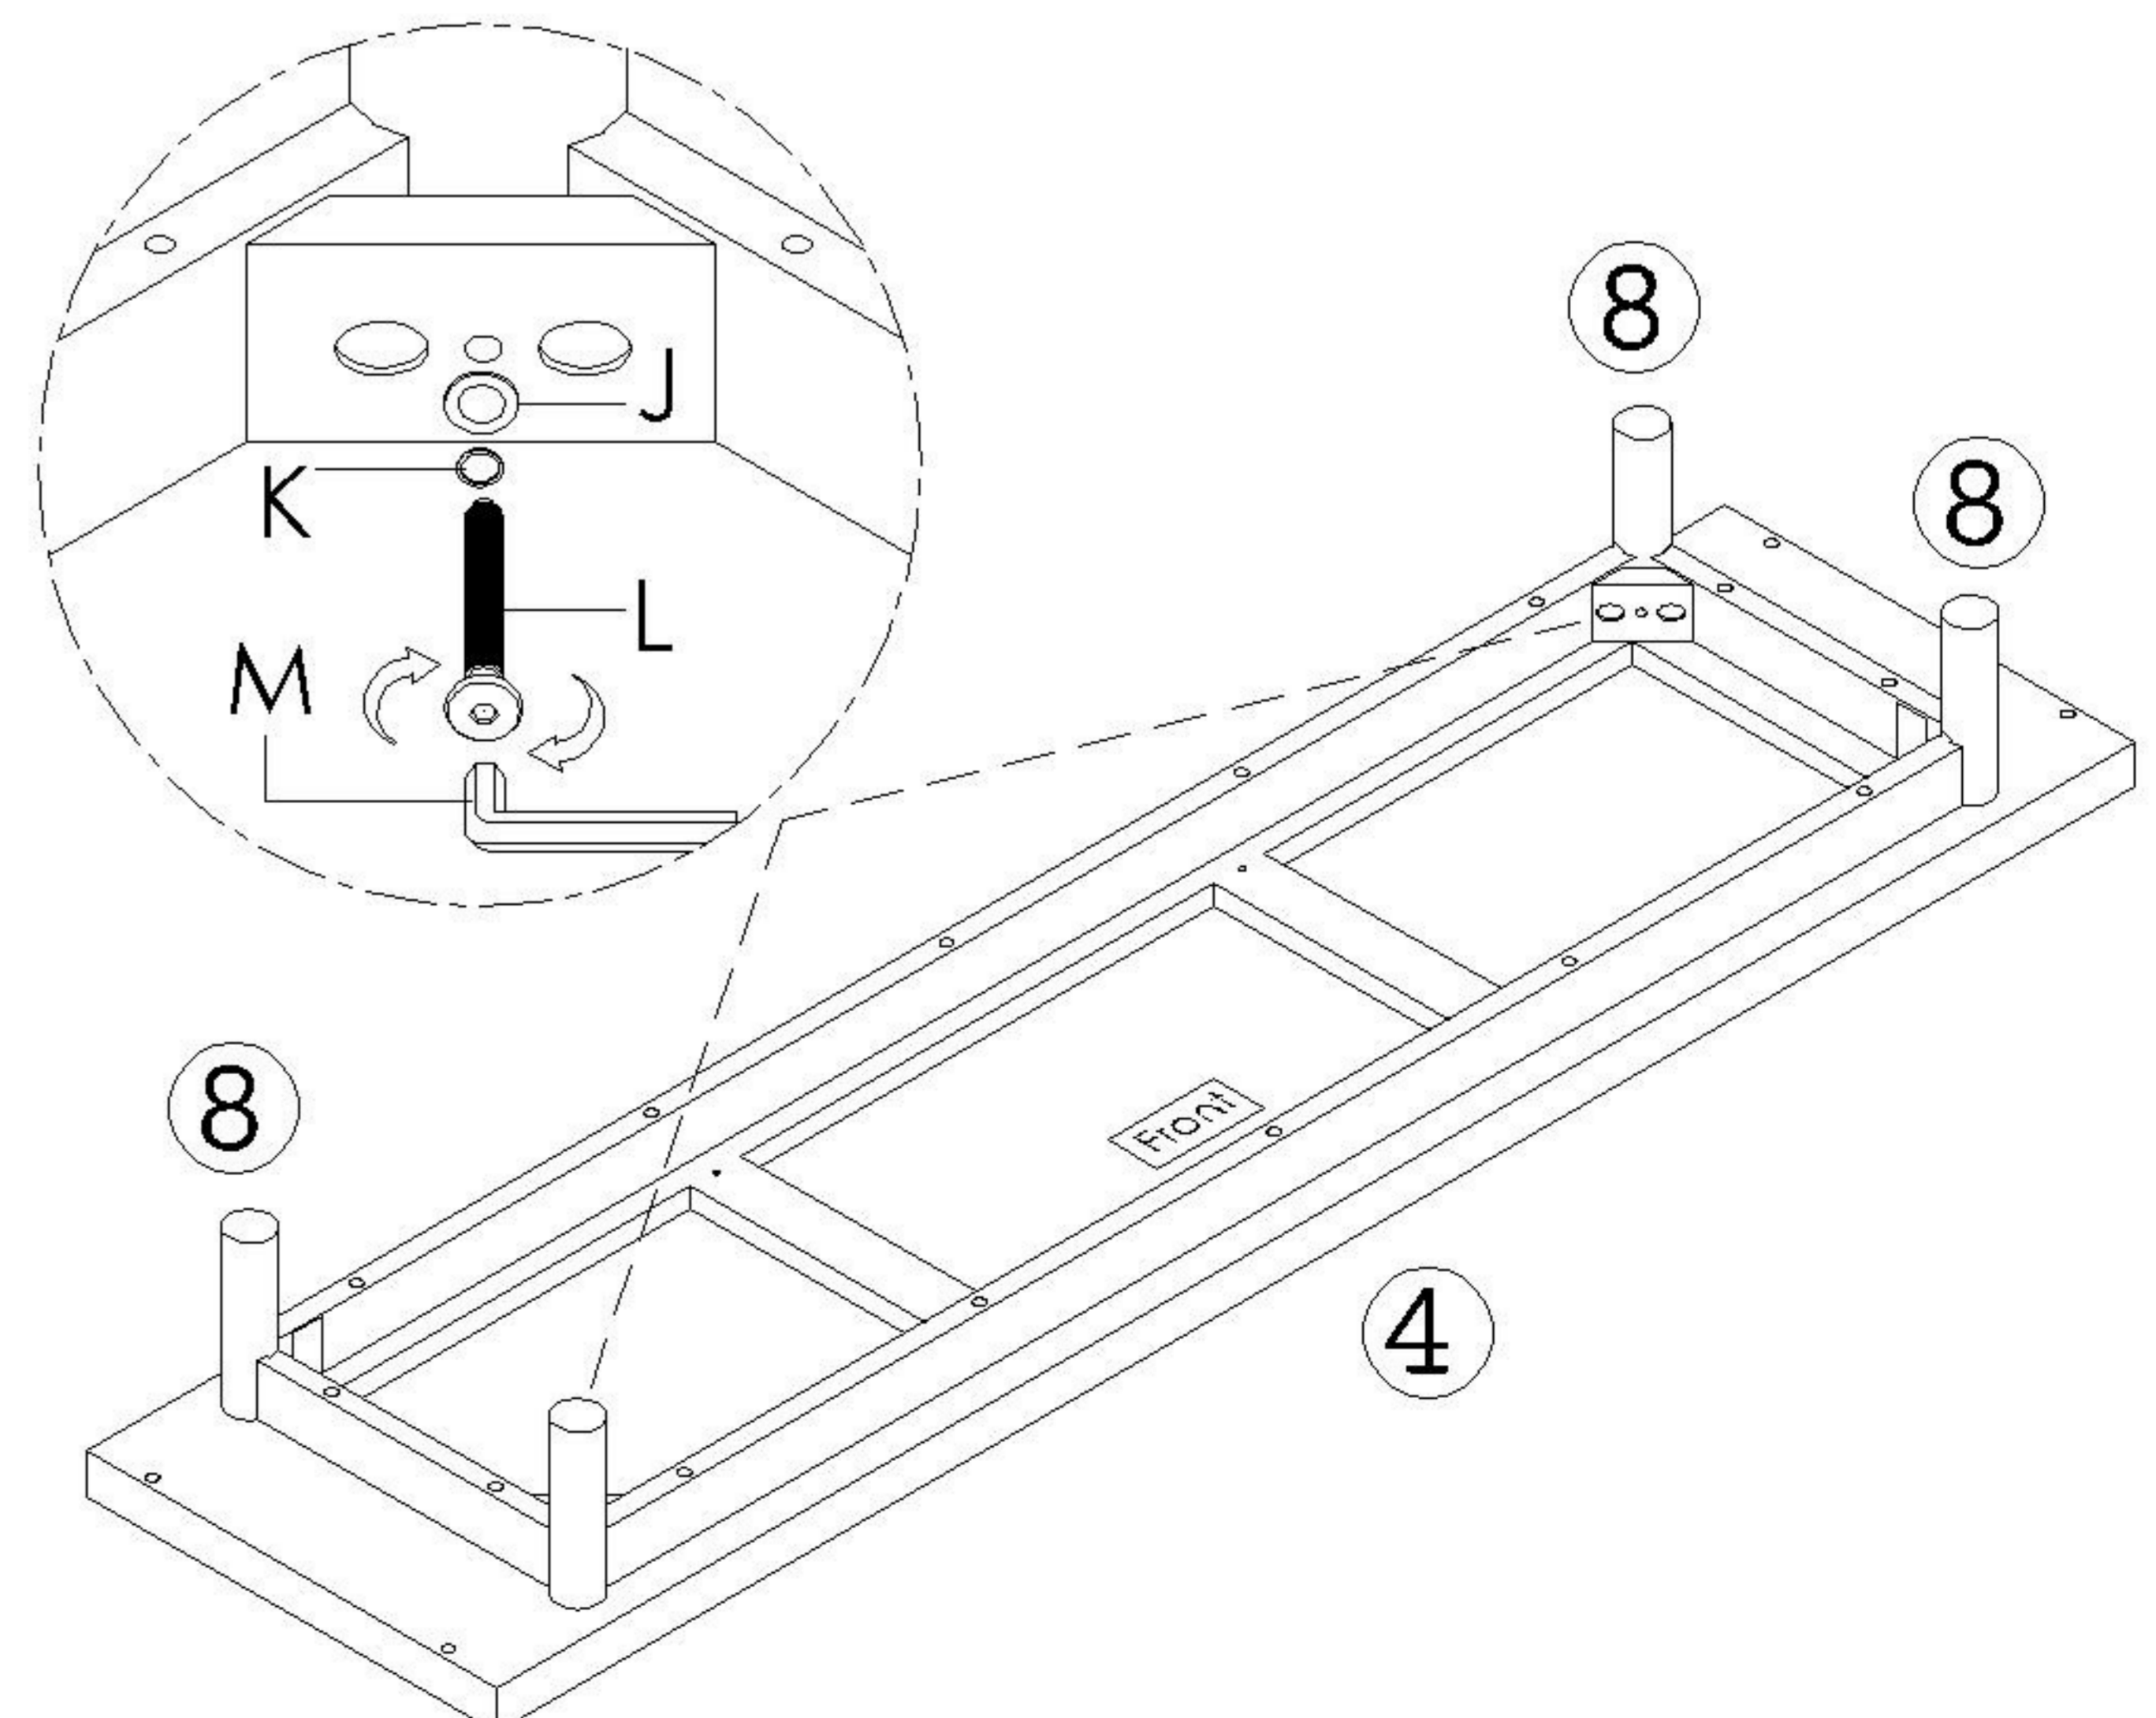


STEP 8

 - A) Attach Center Bar(10) to Left&Right Partition(5,6) and secure with Cam Lock(D)
- B) Cover Cam Lock with Cam Lock Cover(G)

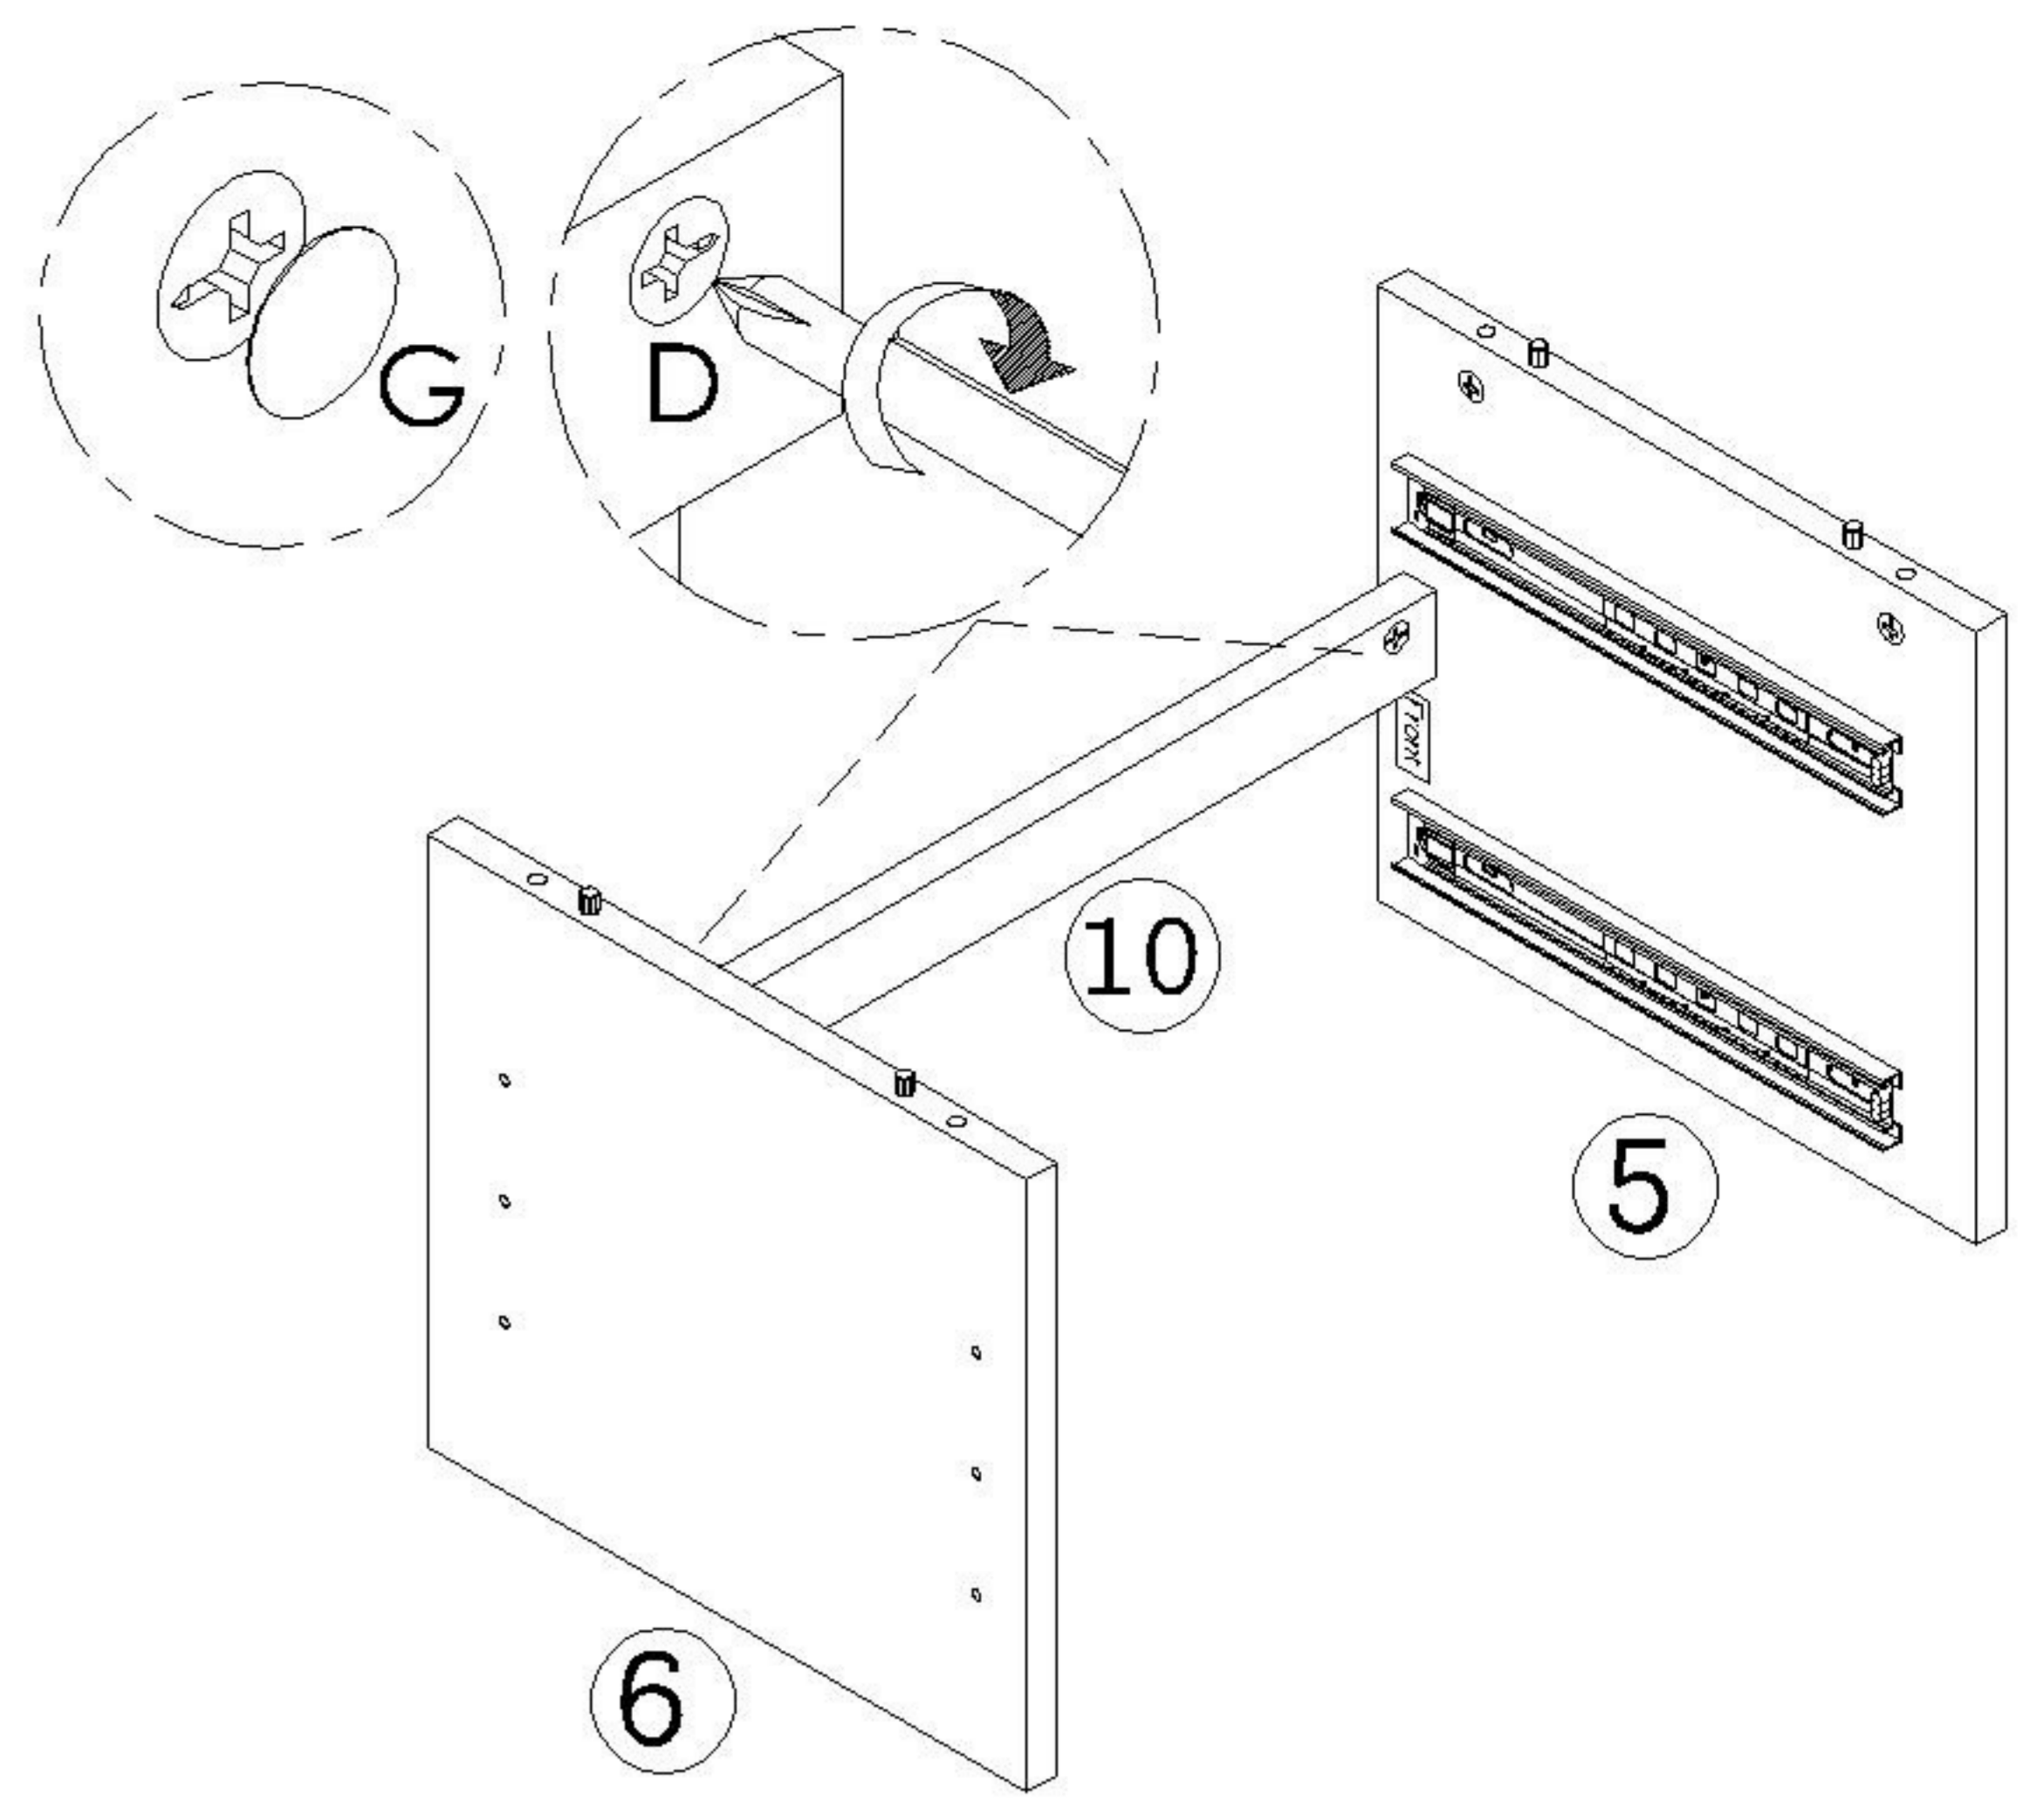


STEP 9

 - A) Attach Bottom Panel(4) to underneath of Left,Right Side Panel(2,3) and Left,Right Partition(5,6) secure with Chipboard Screw(B)

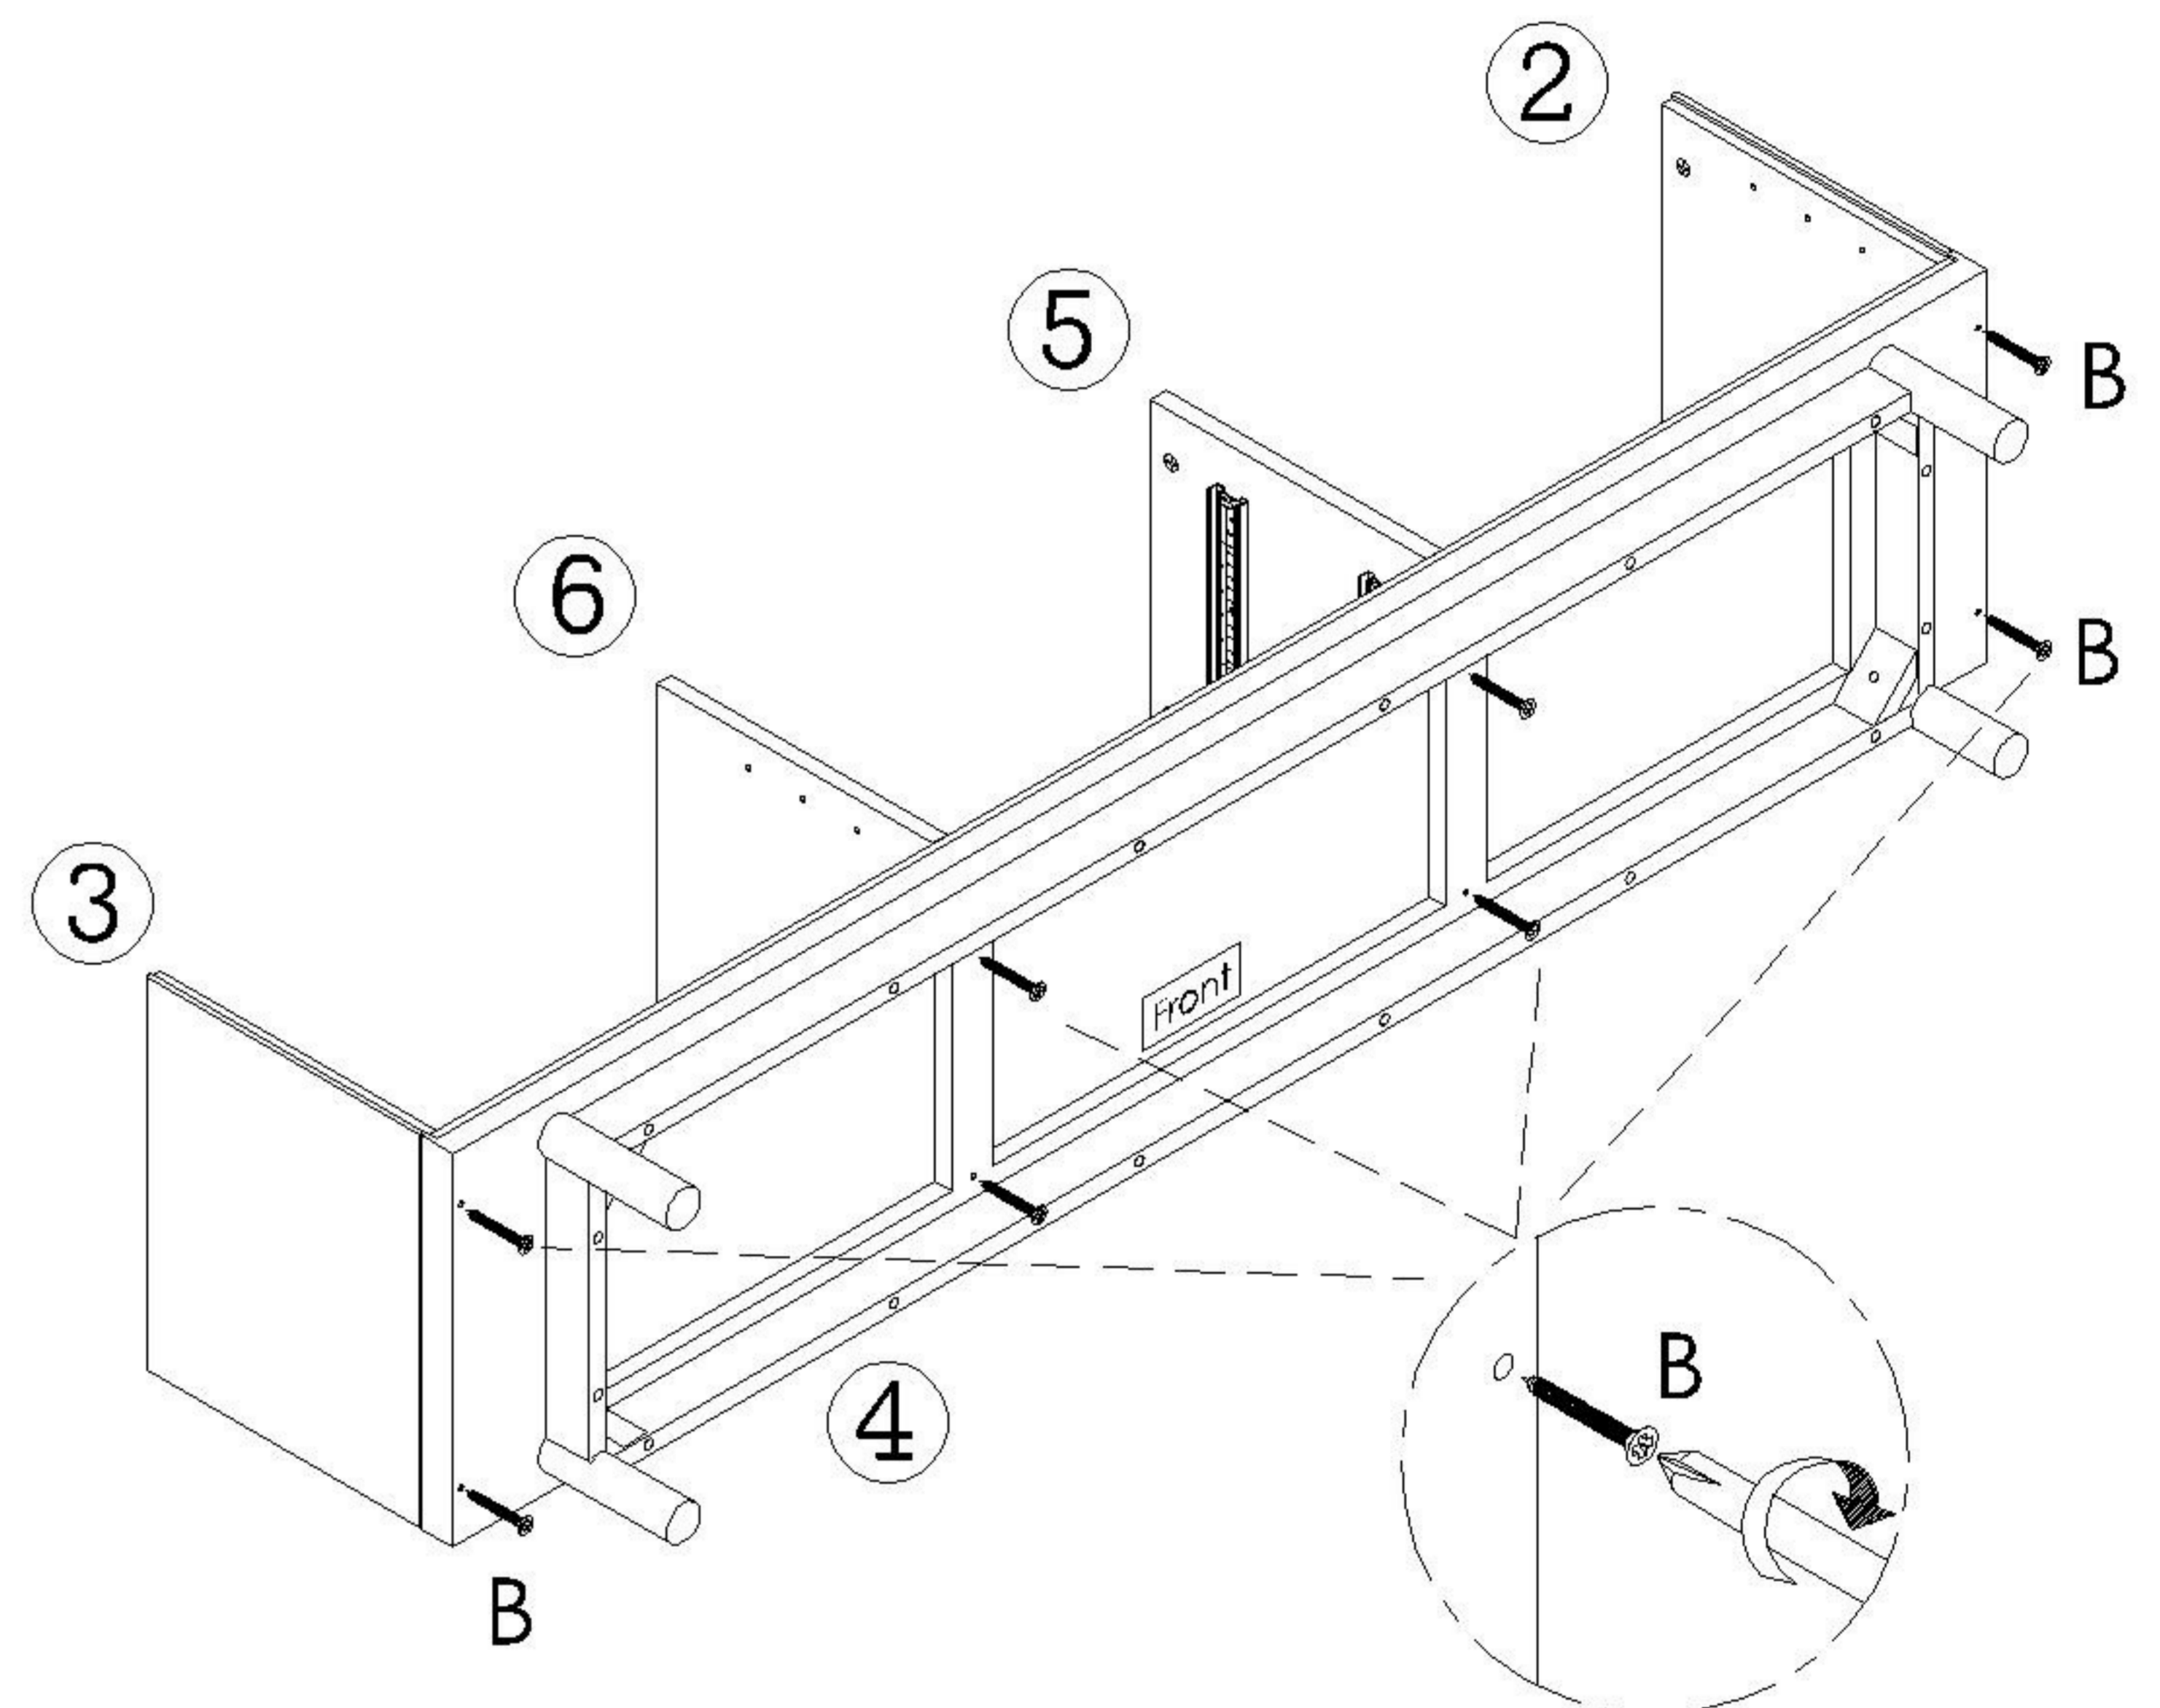


STEP 10

 - A) Attach Top Panel(1) to Left,Right Side Panel(2,3) and Left,Right Partition(5,6) secure with Cam Lock(D)
- B) Cover Cam Lock with Cam Lock Cover(G)

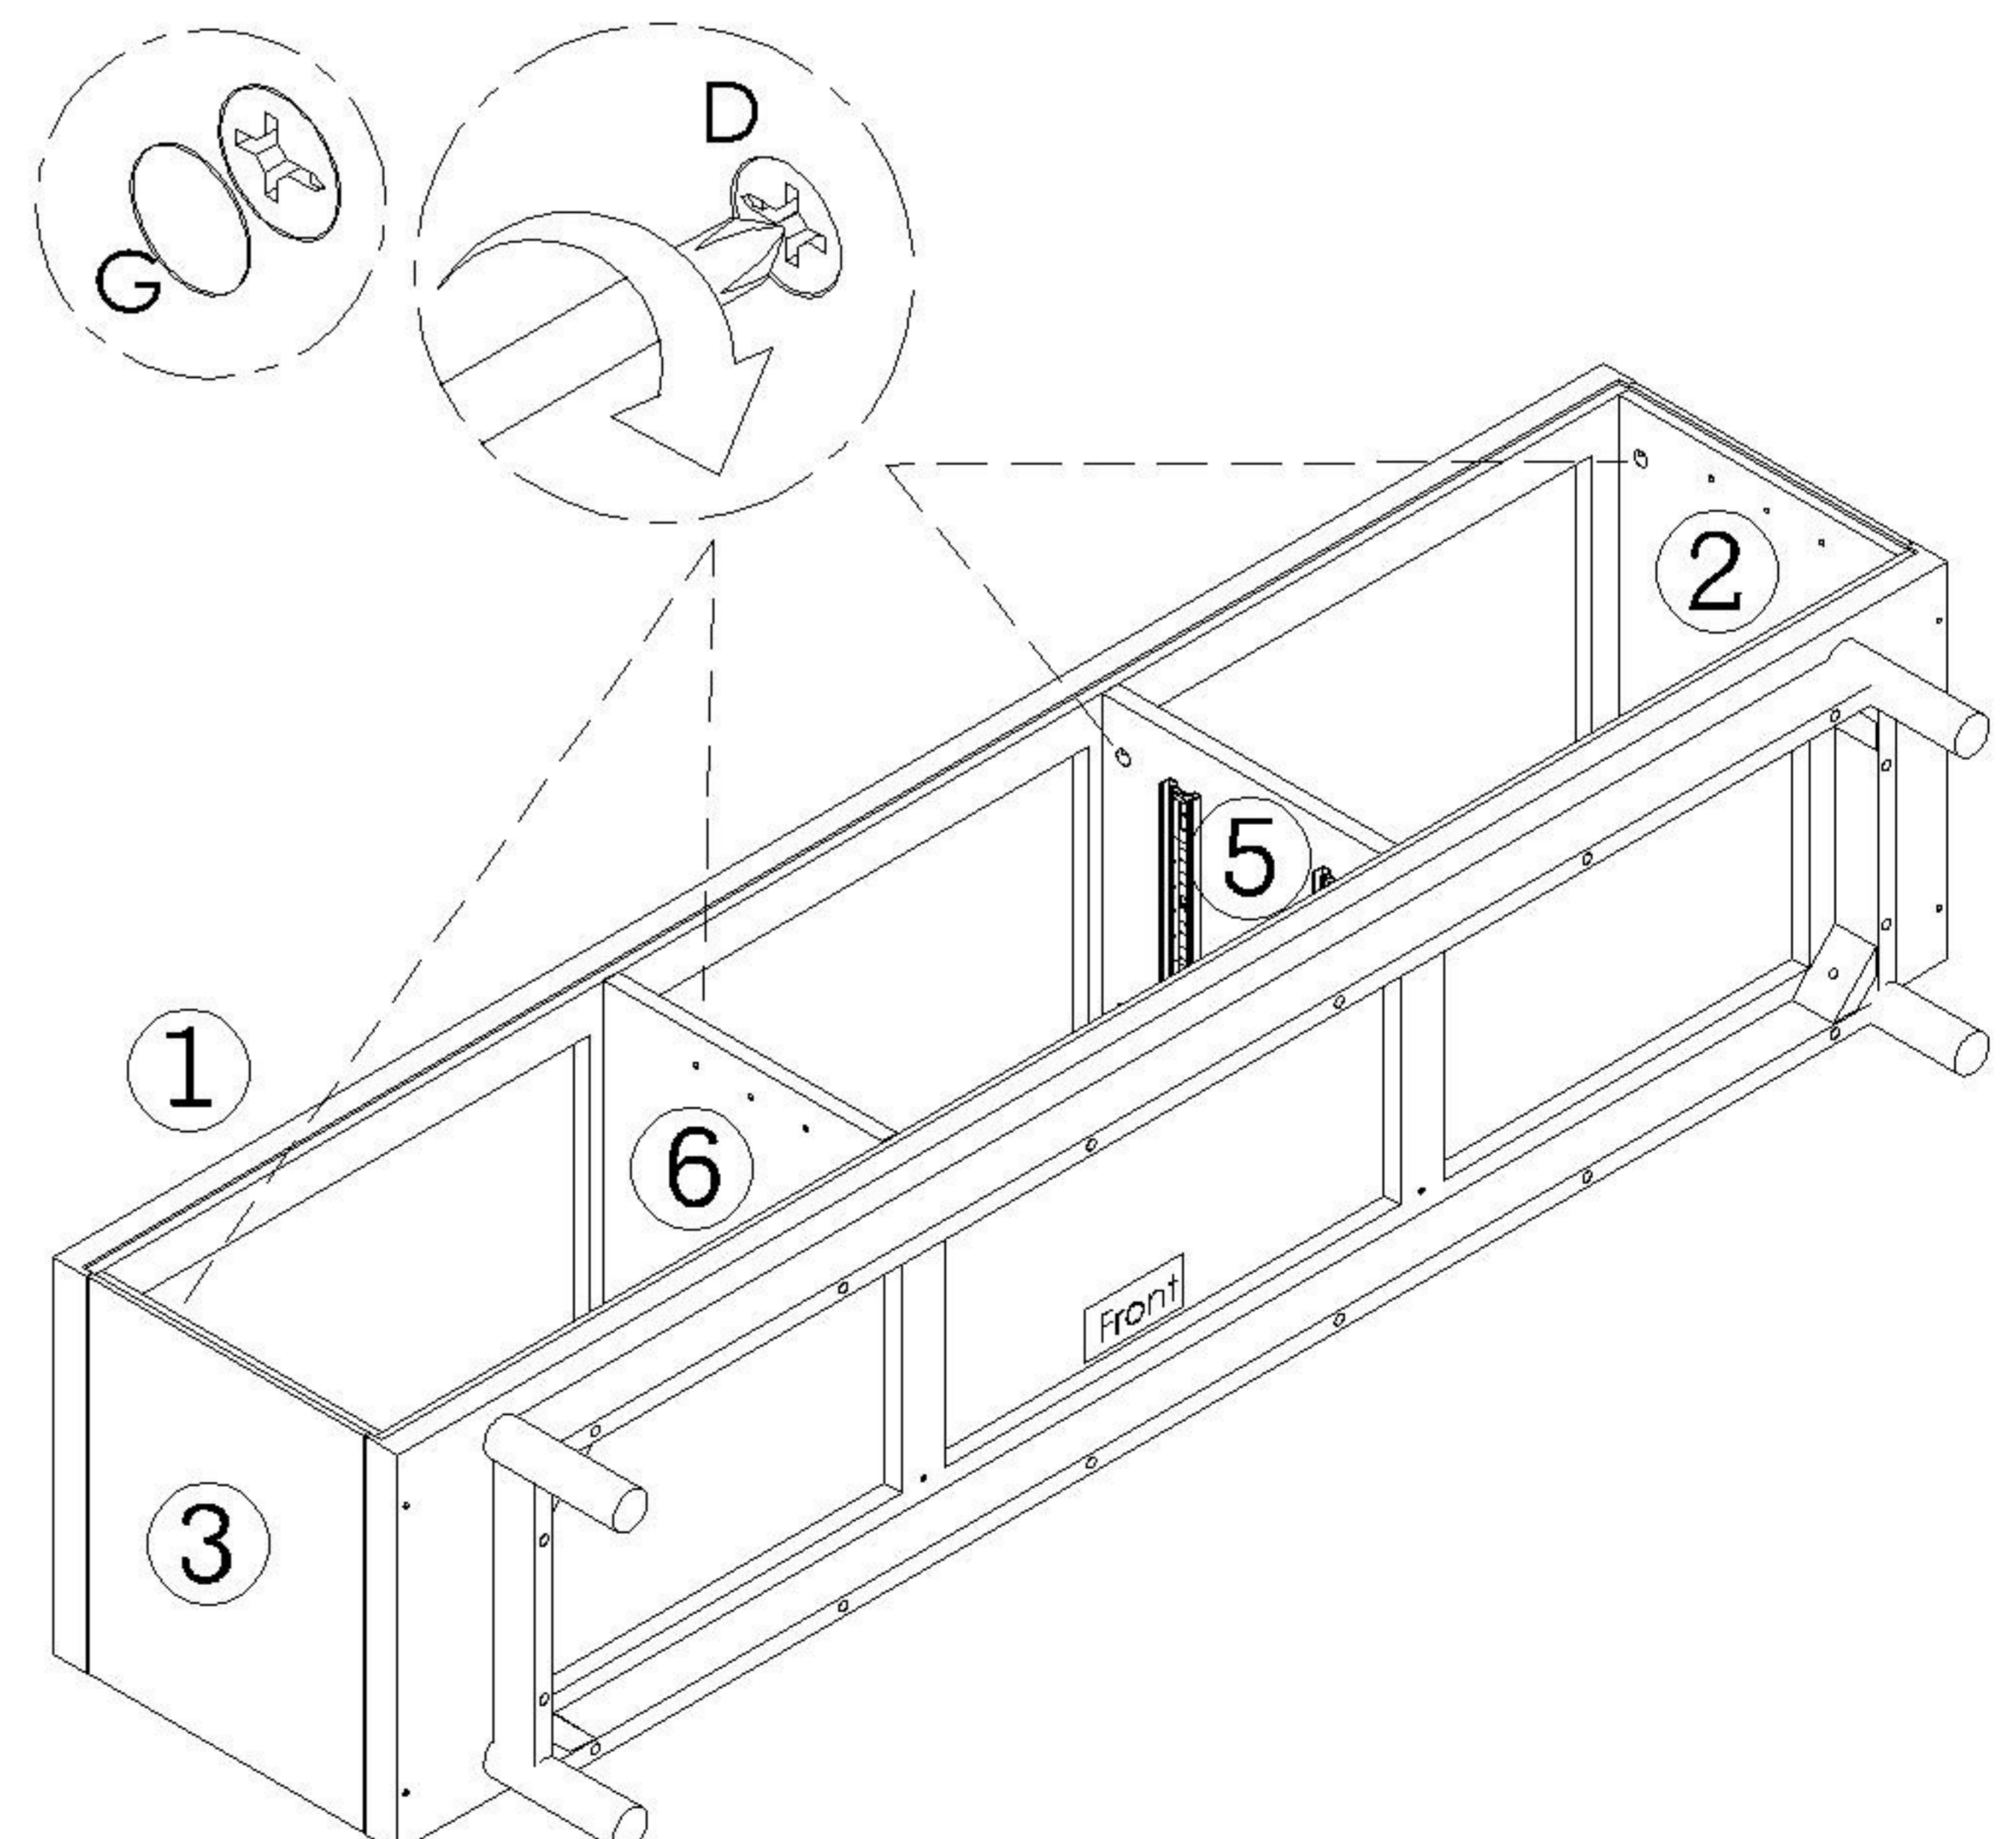


STEP 11

 - A) Attach Back Plywood(11) to assembled unit using Panhead Chipboard Screw(Black)(H) to secure

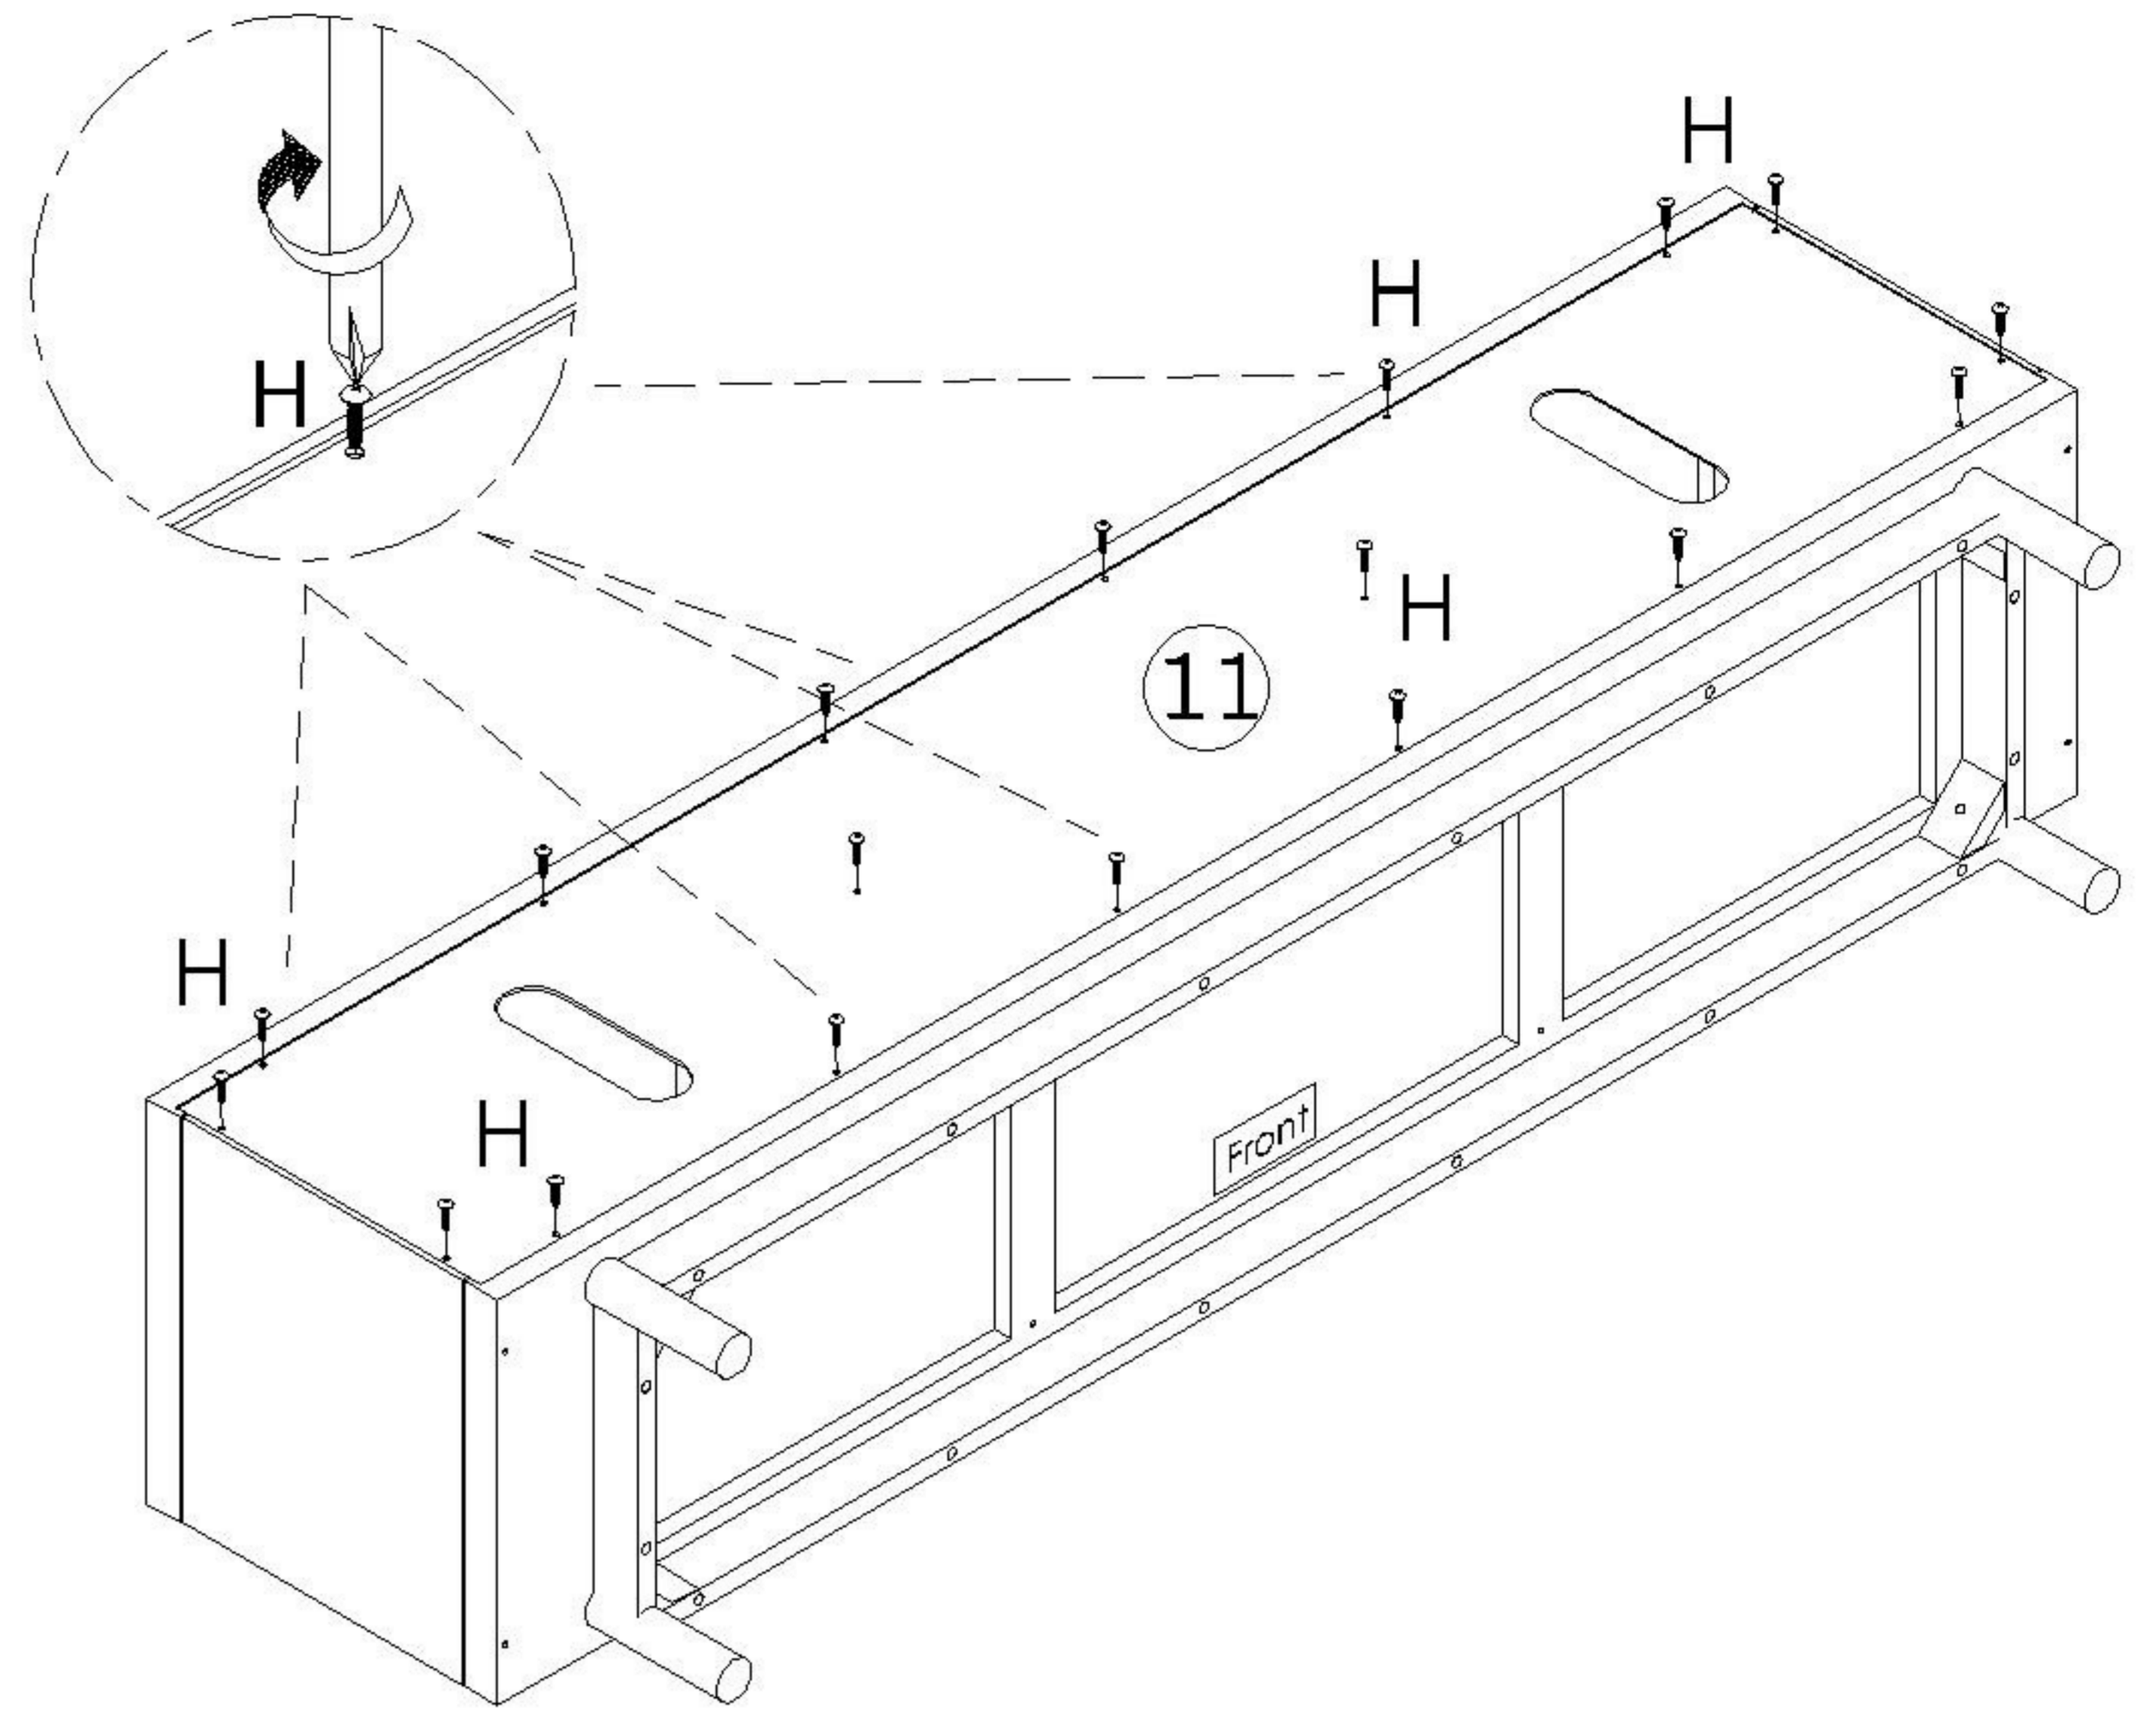


STEP 12

 - A) Insert Shelving Support(I) into Left,Right Side Panel (2,3) and Left,Right Partition(5,6) at desired shelf heights
B) Slot in Shelving(9)


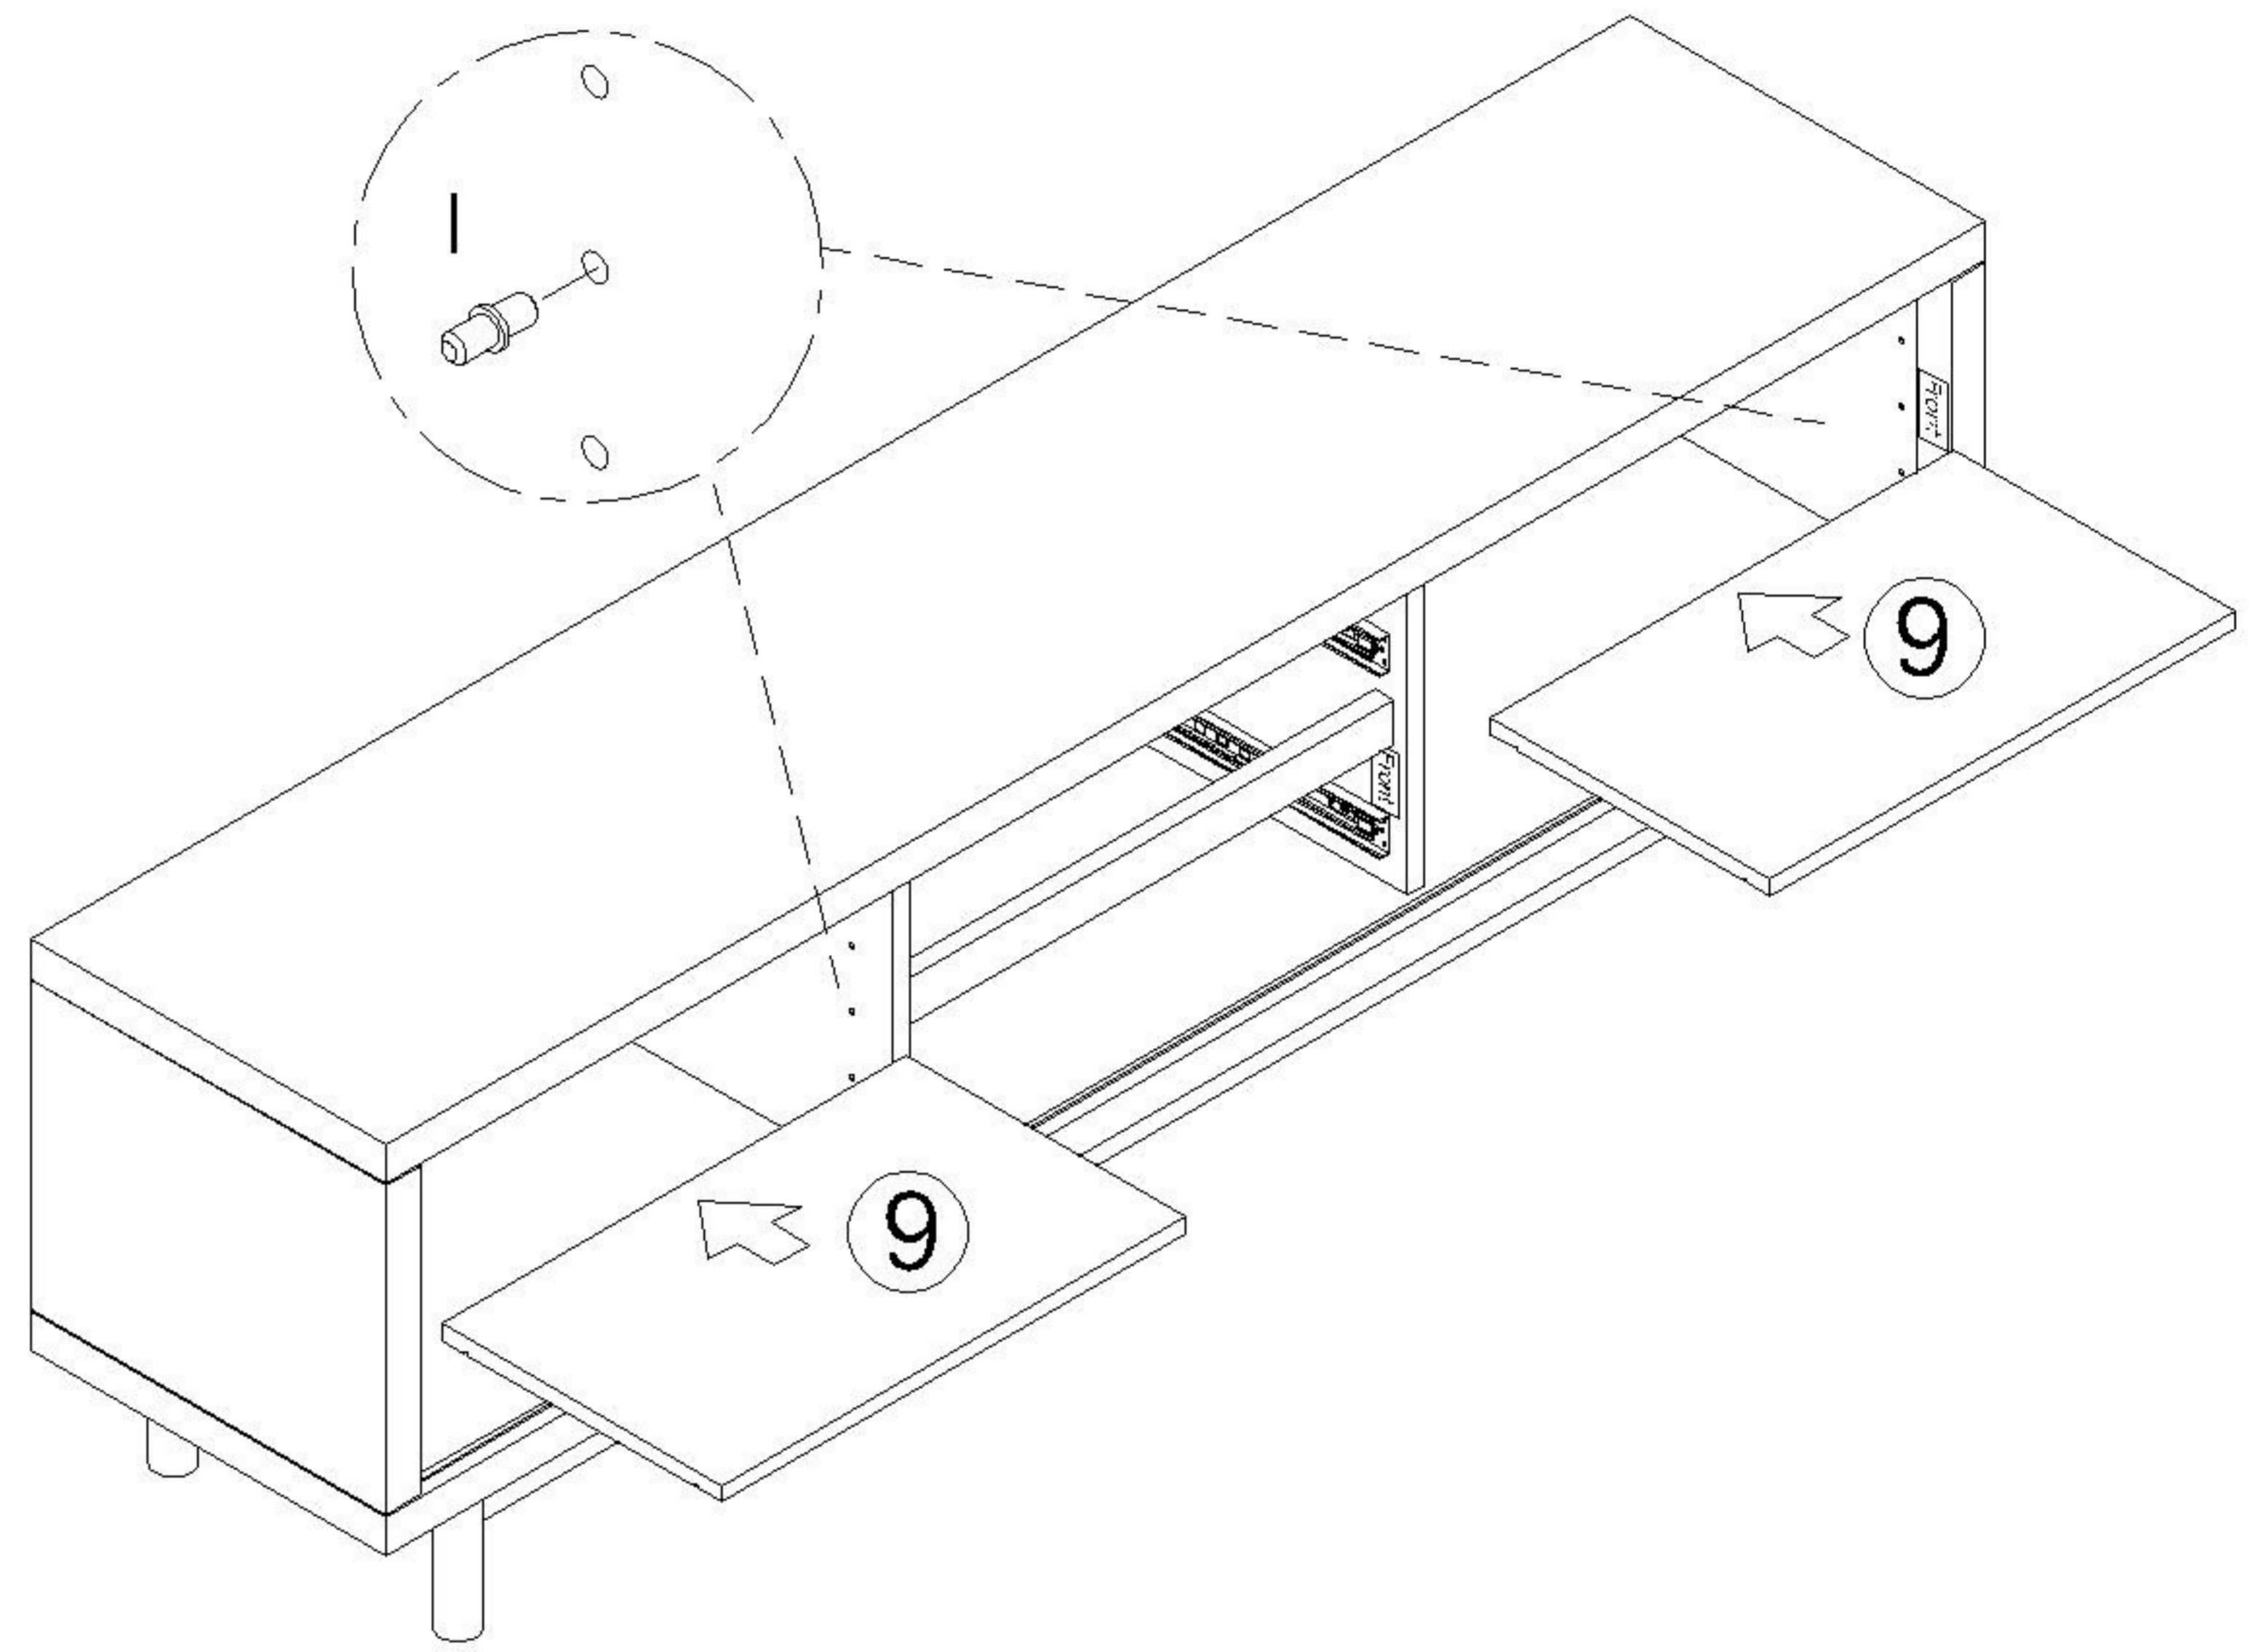


STEP 13

 
- A) Attach Door(7) to assembled unit
- i) Sit door on Bottom Panel(4). Make sure wheels sit onto the track
 - ii) Push pin to unlocked position to allow door to align with track at the top. Release pin, catch will spring back and falls into the track

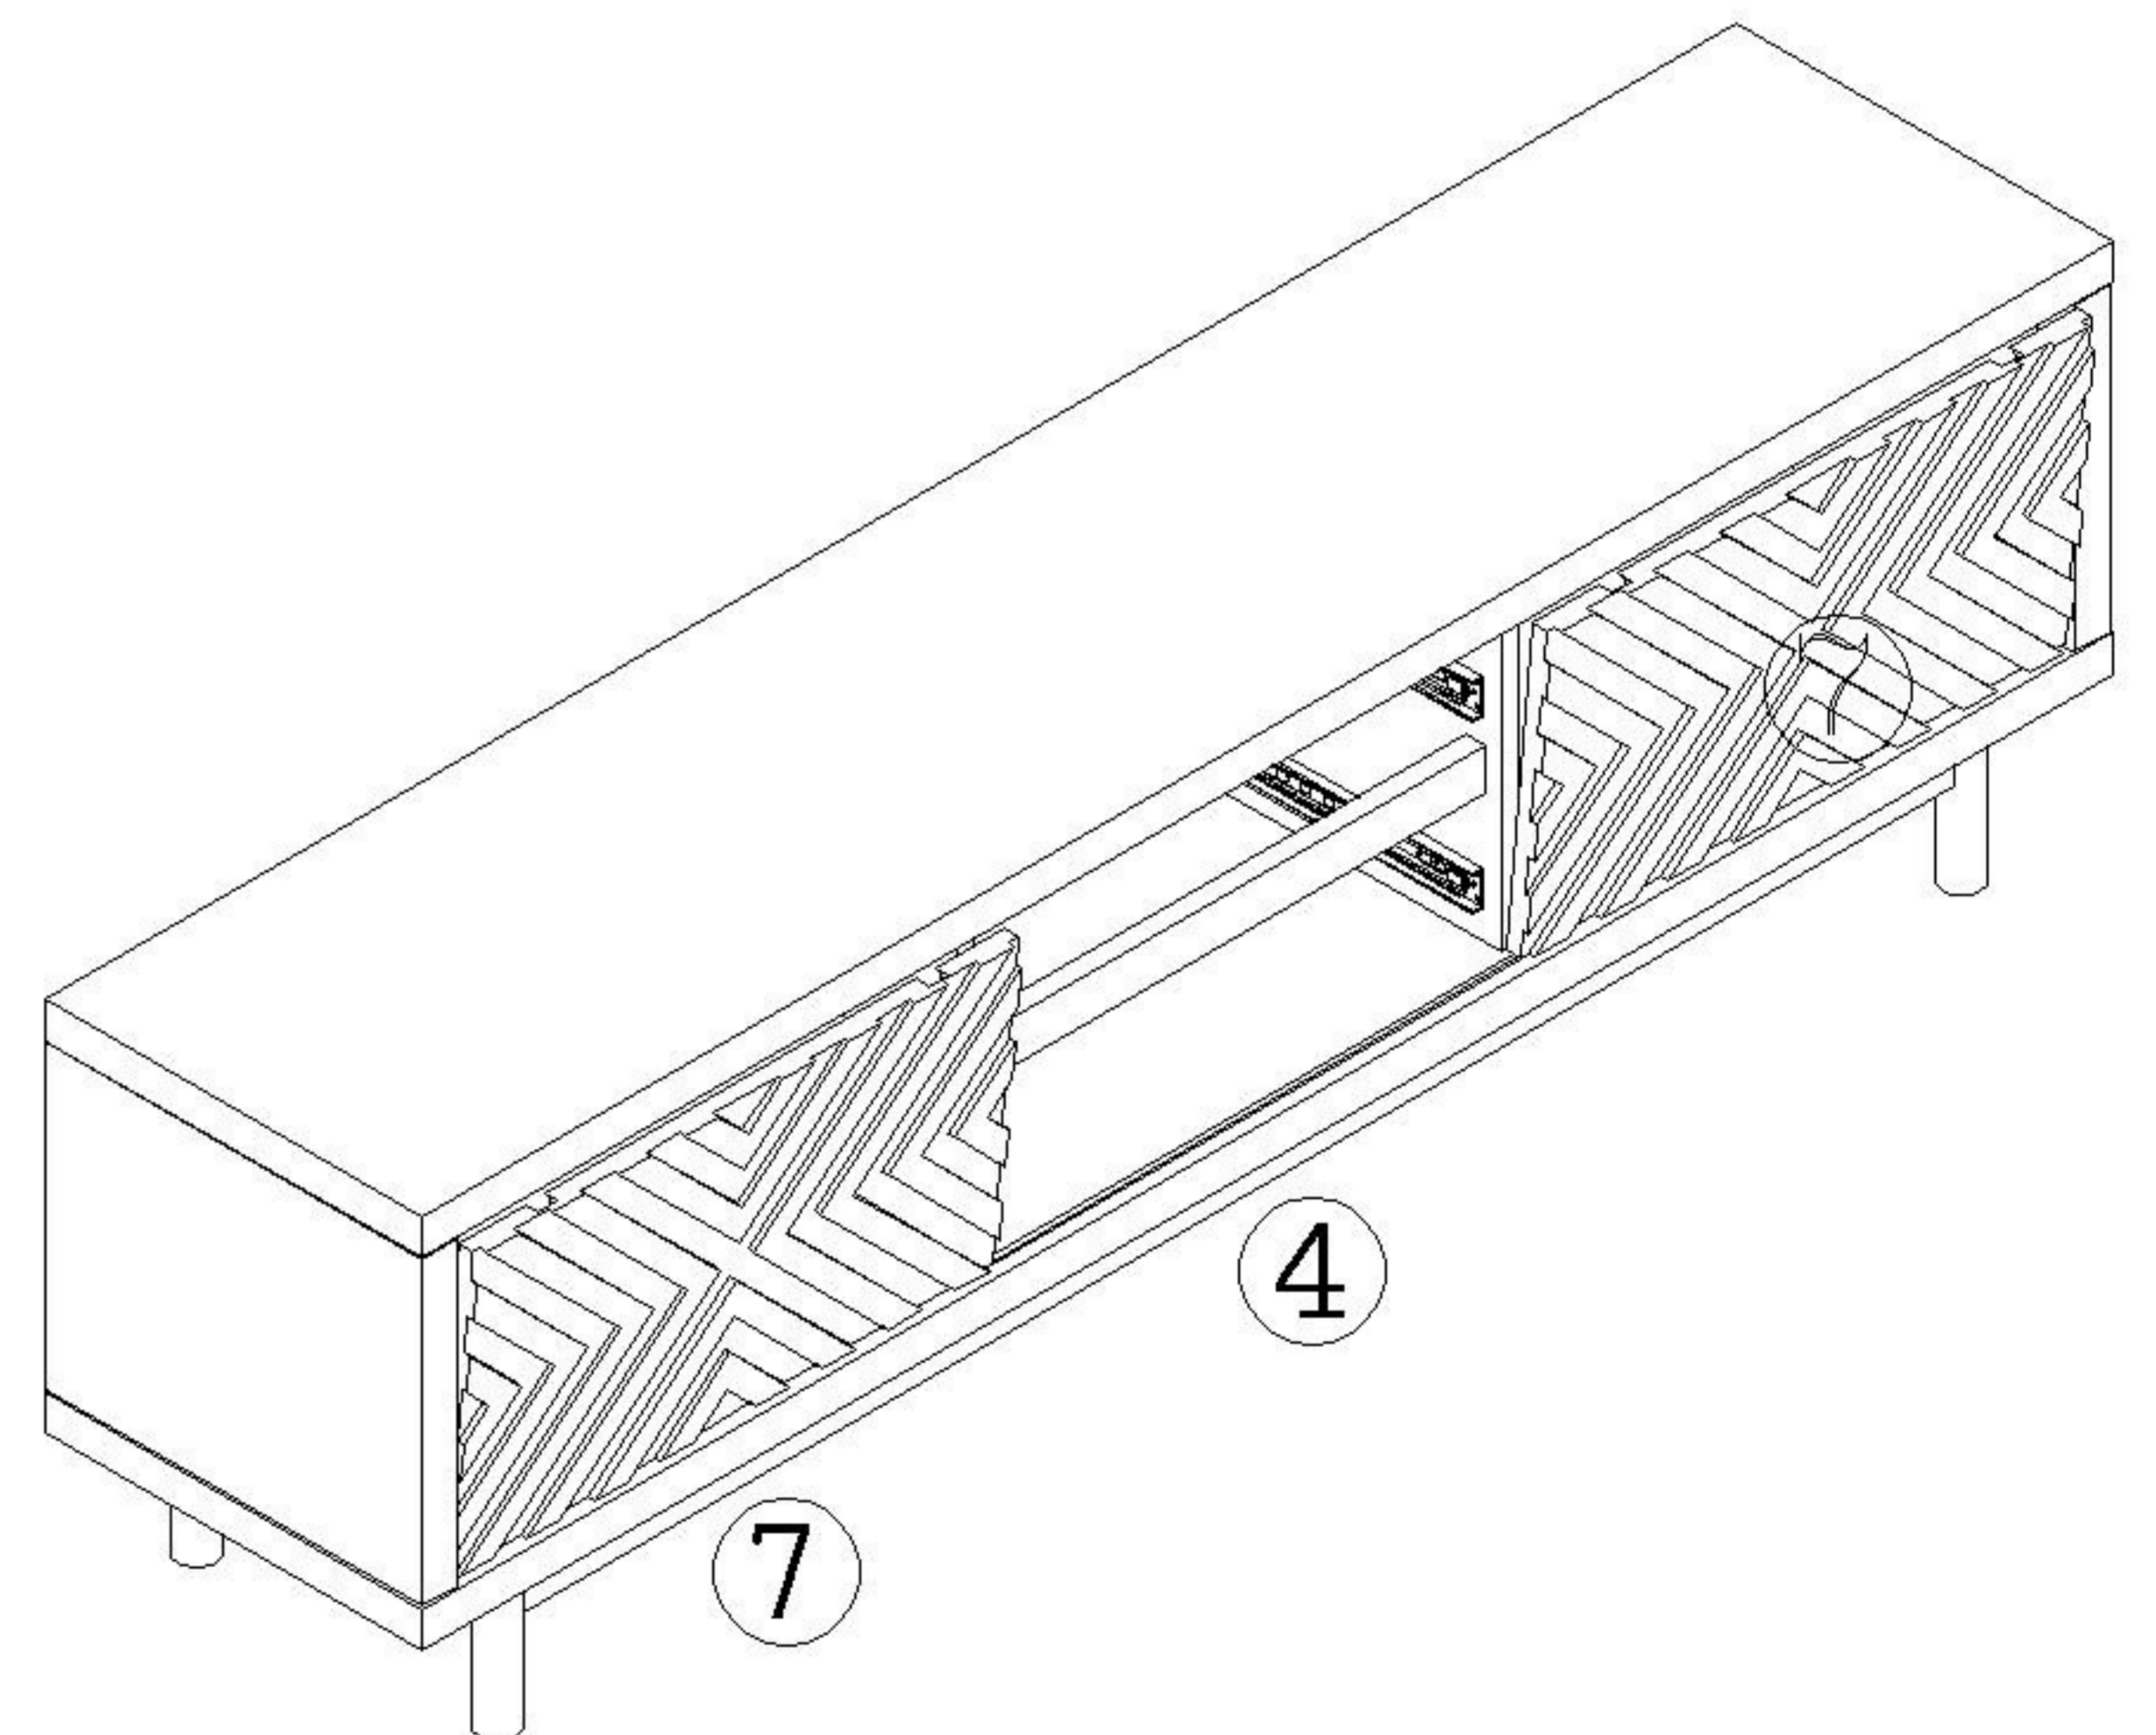

(i)Bottom of Door

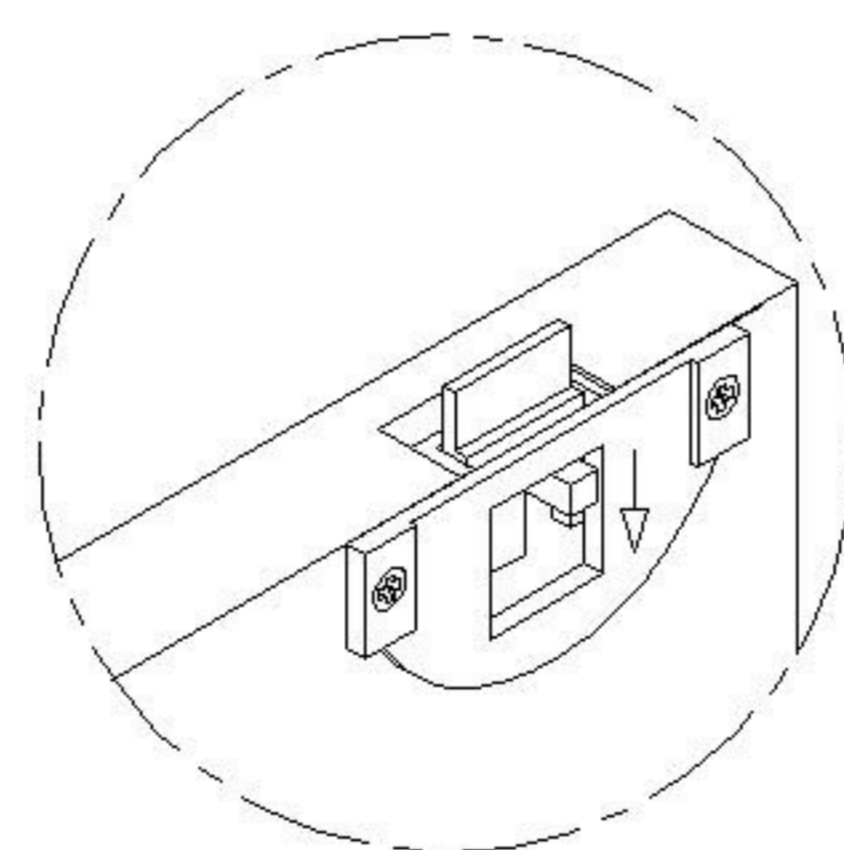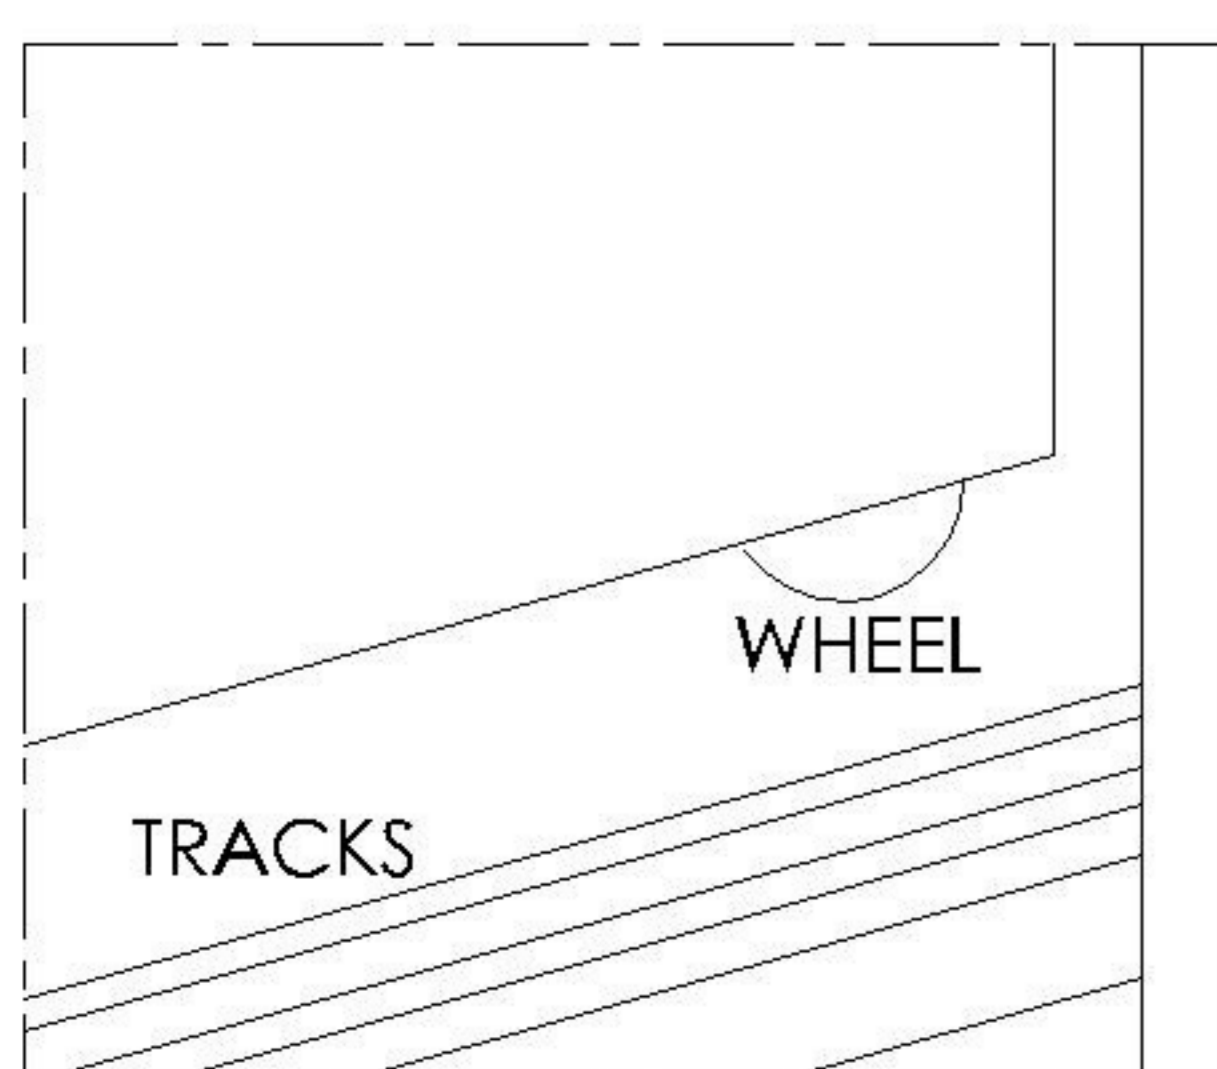  


LOCKED POSITION

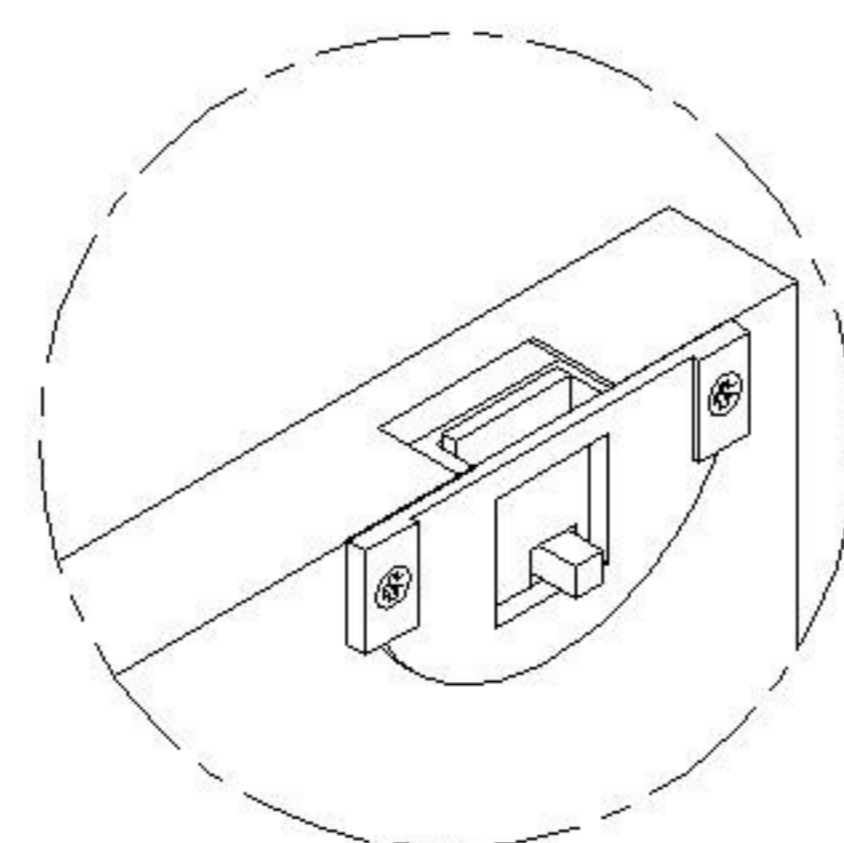 

UNLOCKED POSITION

 
(ii)Top of Door

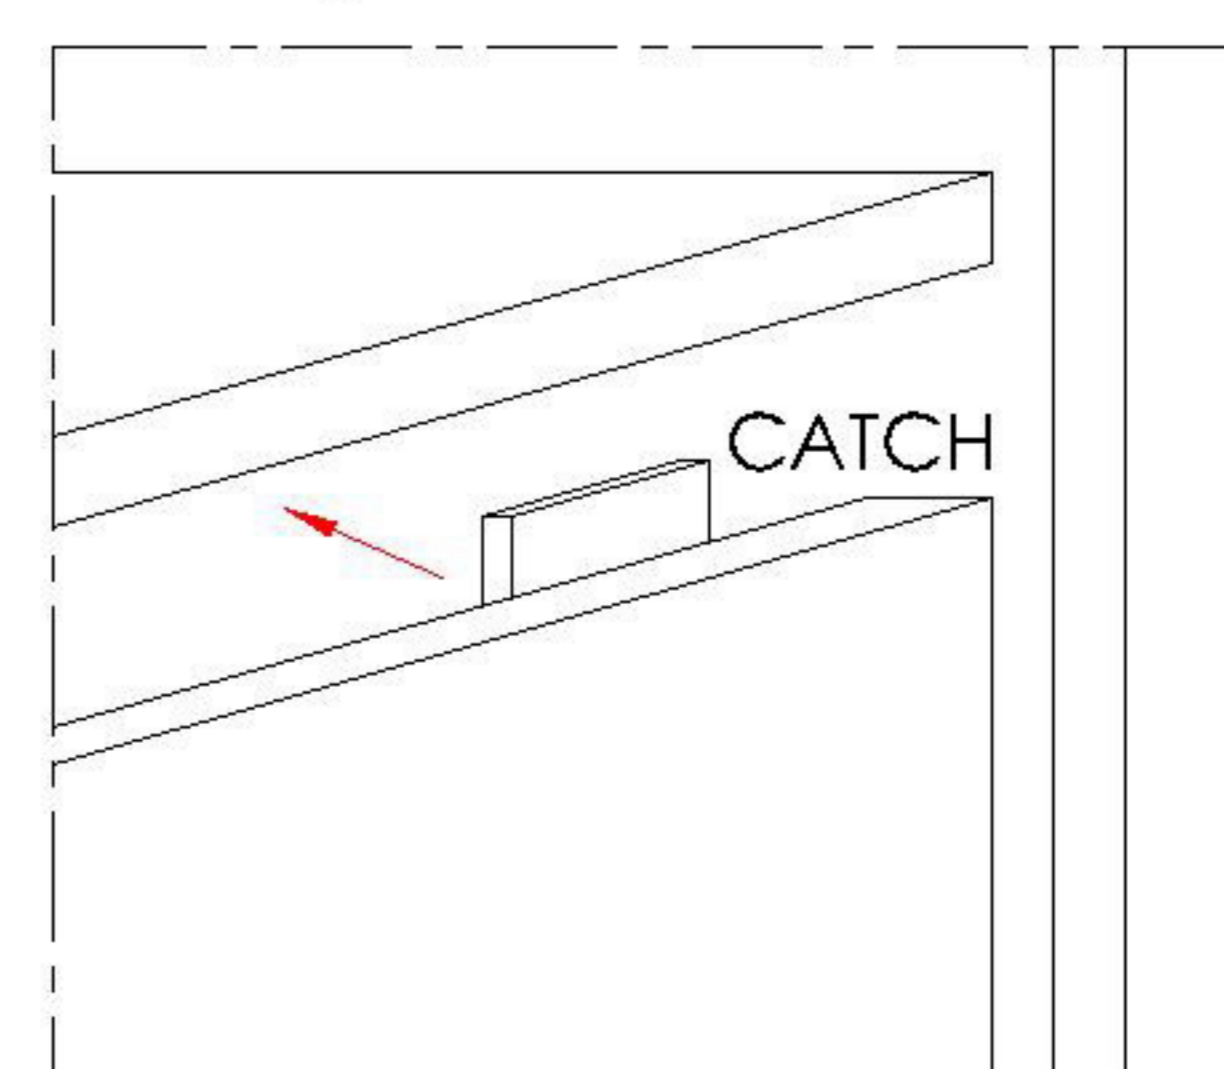

EXTENSION RUNNER ASSEMBLE STEPS:

STEP 14A

 
- i) Pull Out Metal Chrome Plate on both sides of runner

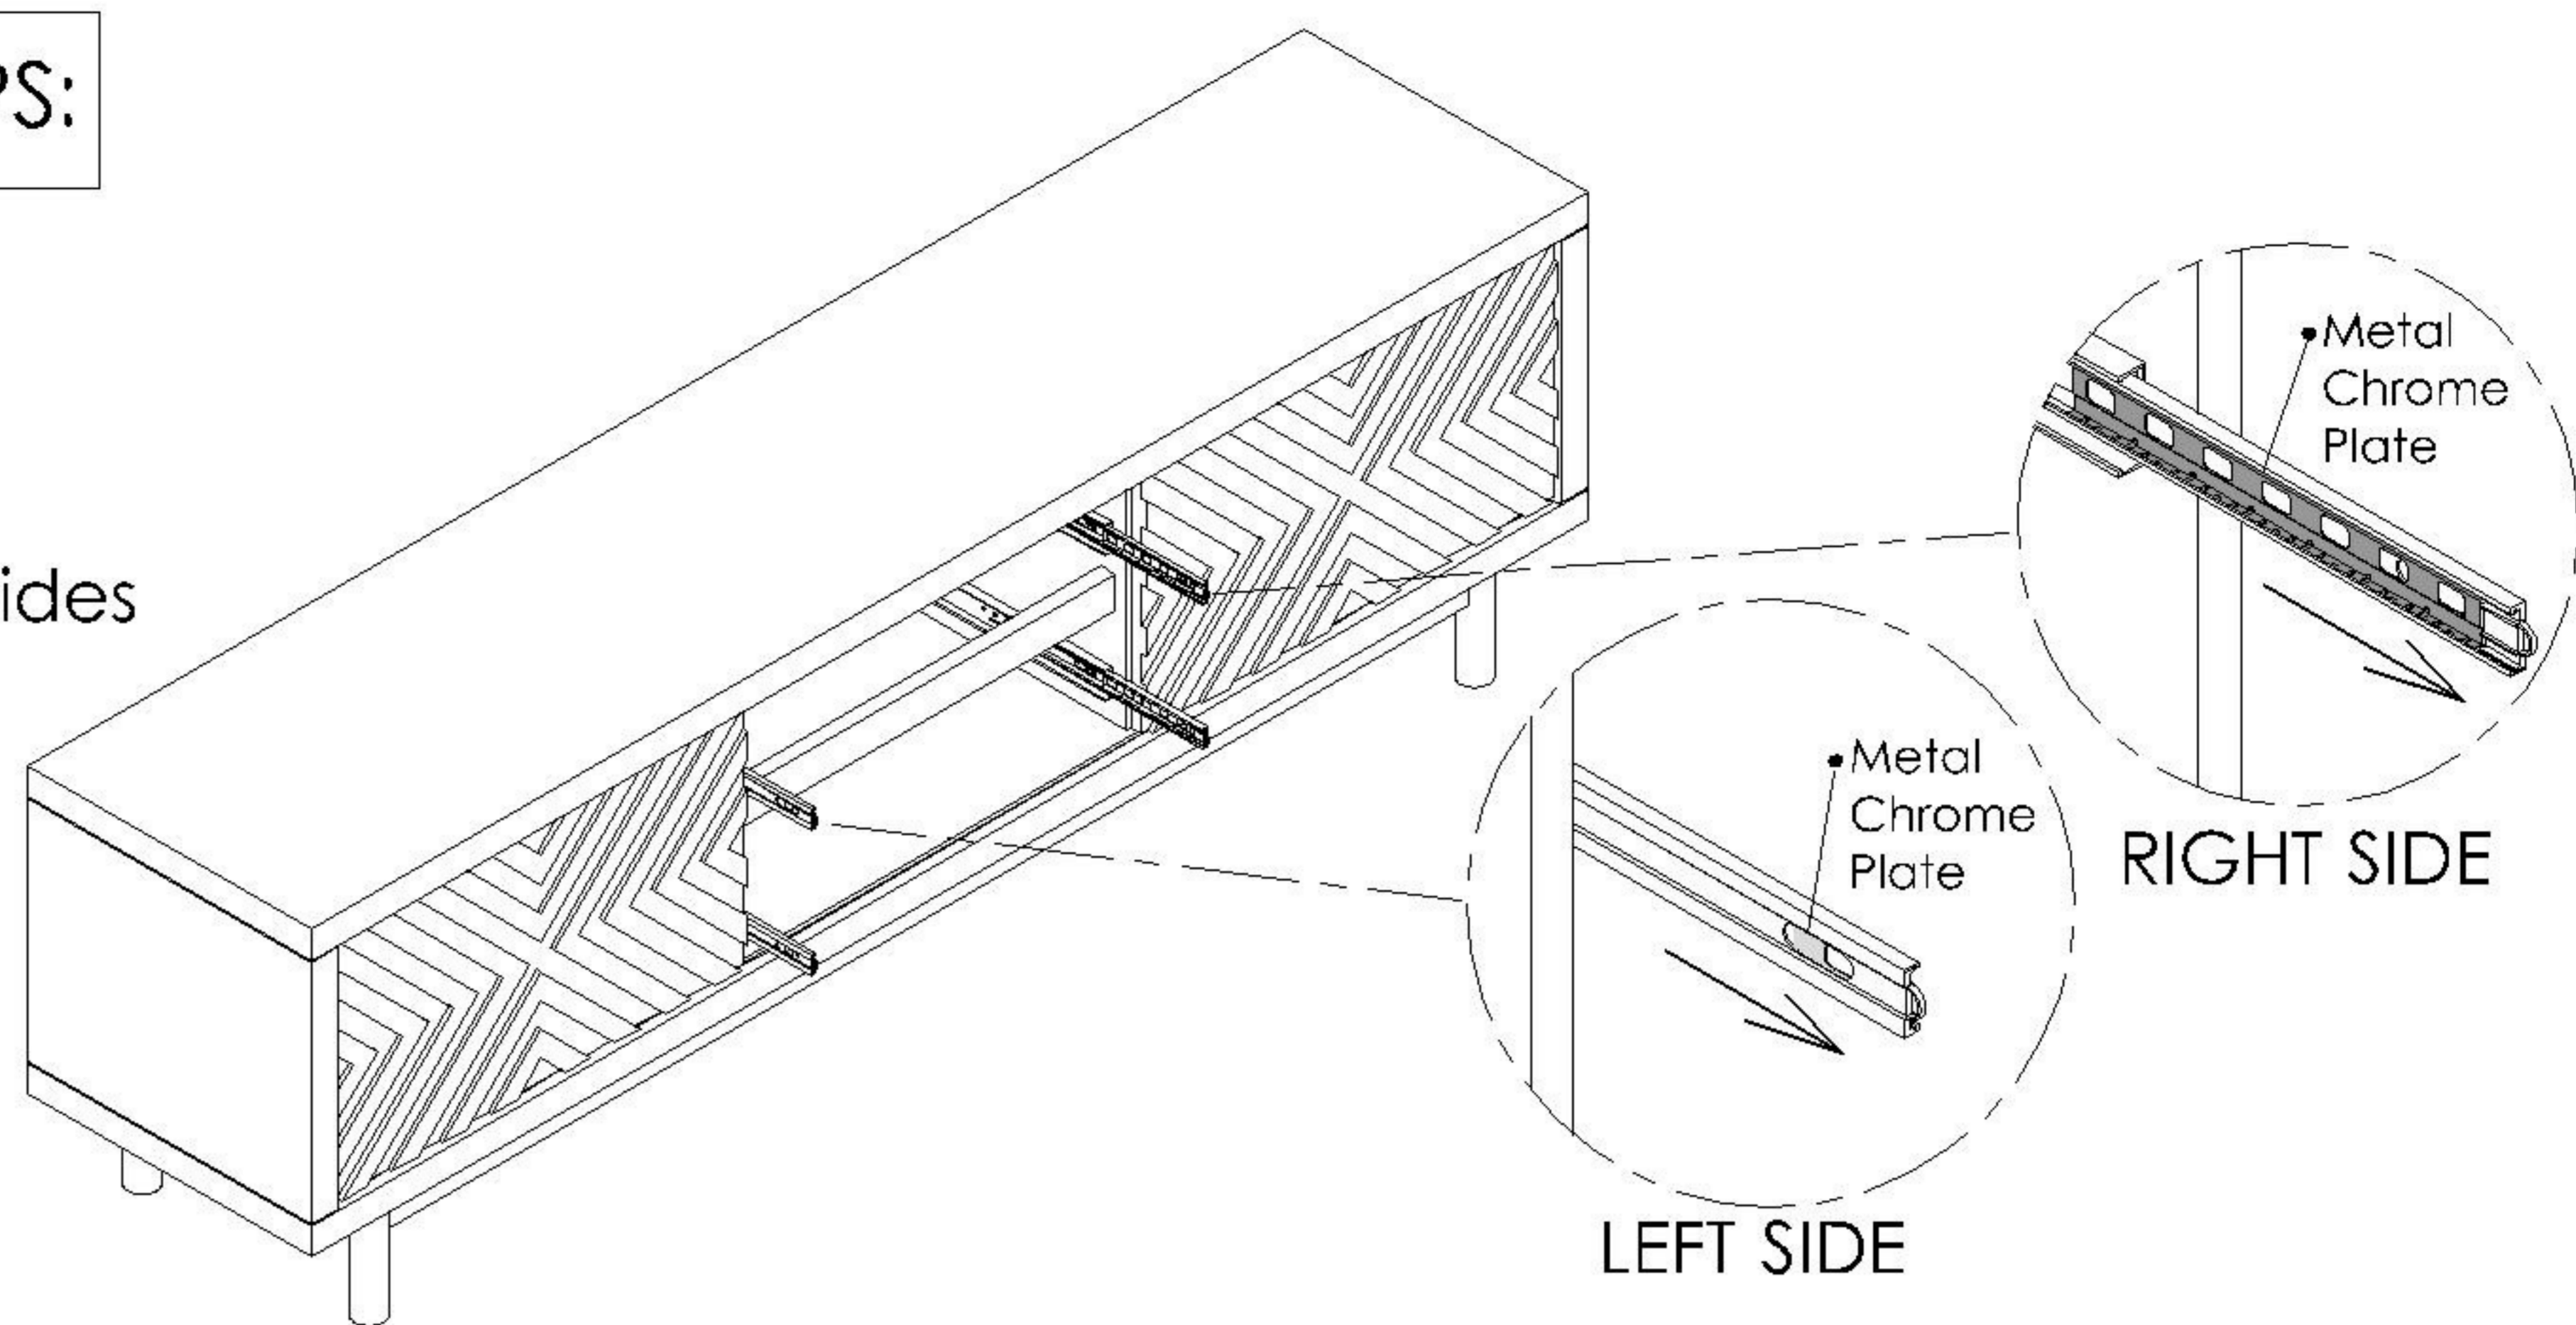

STEP 14B


- i) Align Metal Chrome Plate and Inner Slide on one side first and thereafter on the other side. Remove & repeat if it is not aligned properly
- ii) Slowly push the drawer box into the metal track on interior side of Side Panel

 Notes : If runner is stuck on track, slightly pull/push drawer box

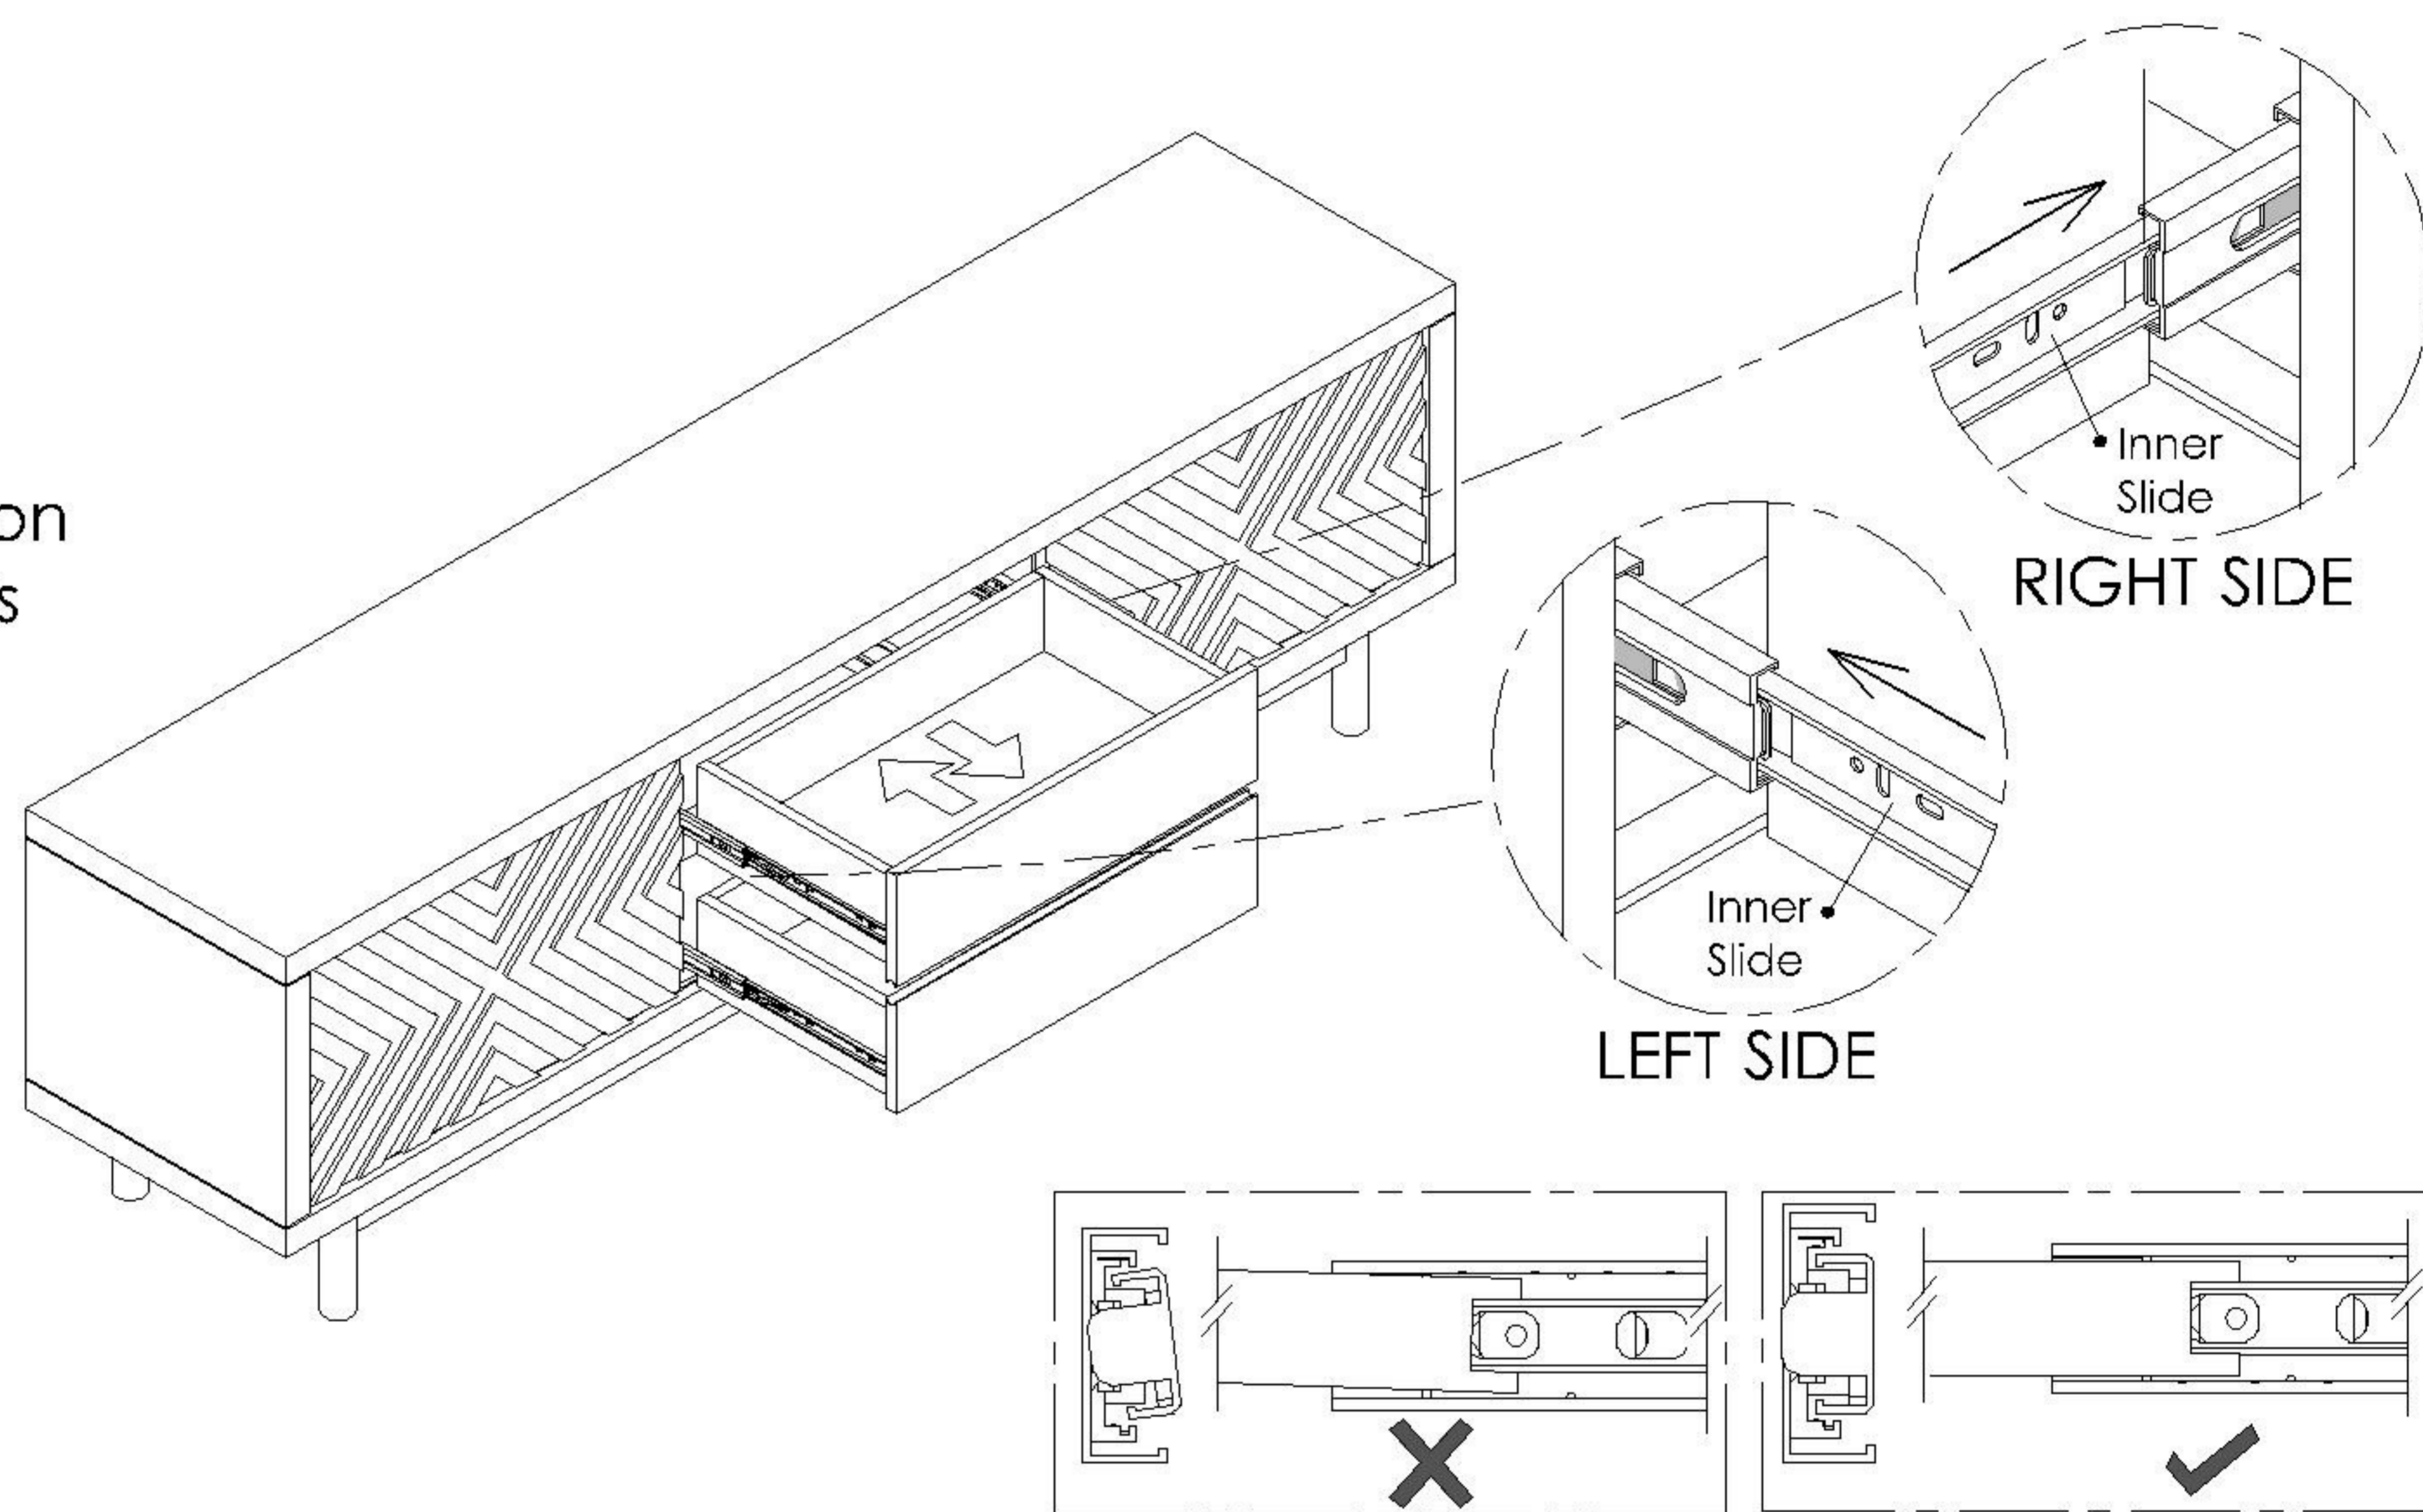


STEP 14C

 - i) When both tracks are aligned properly, push the drawer box all the way in.

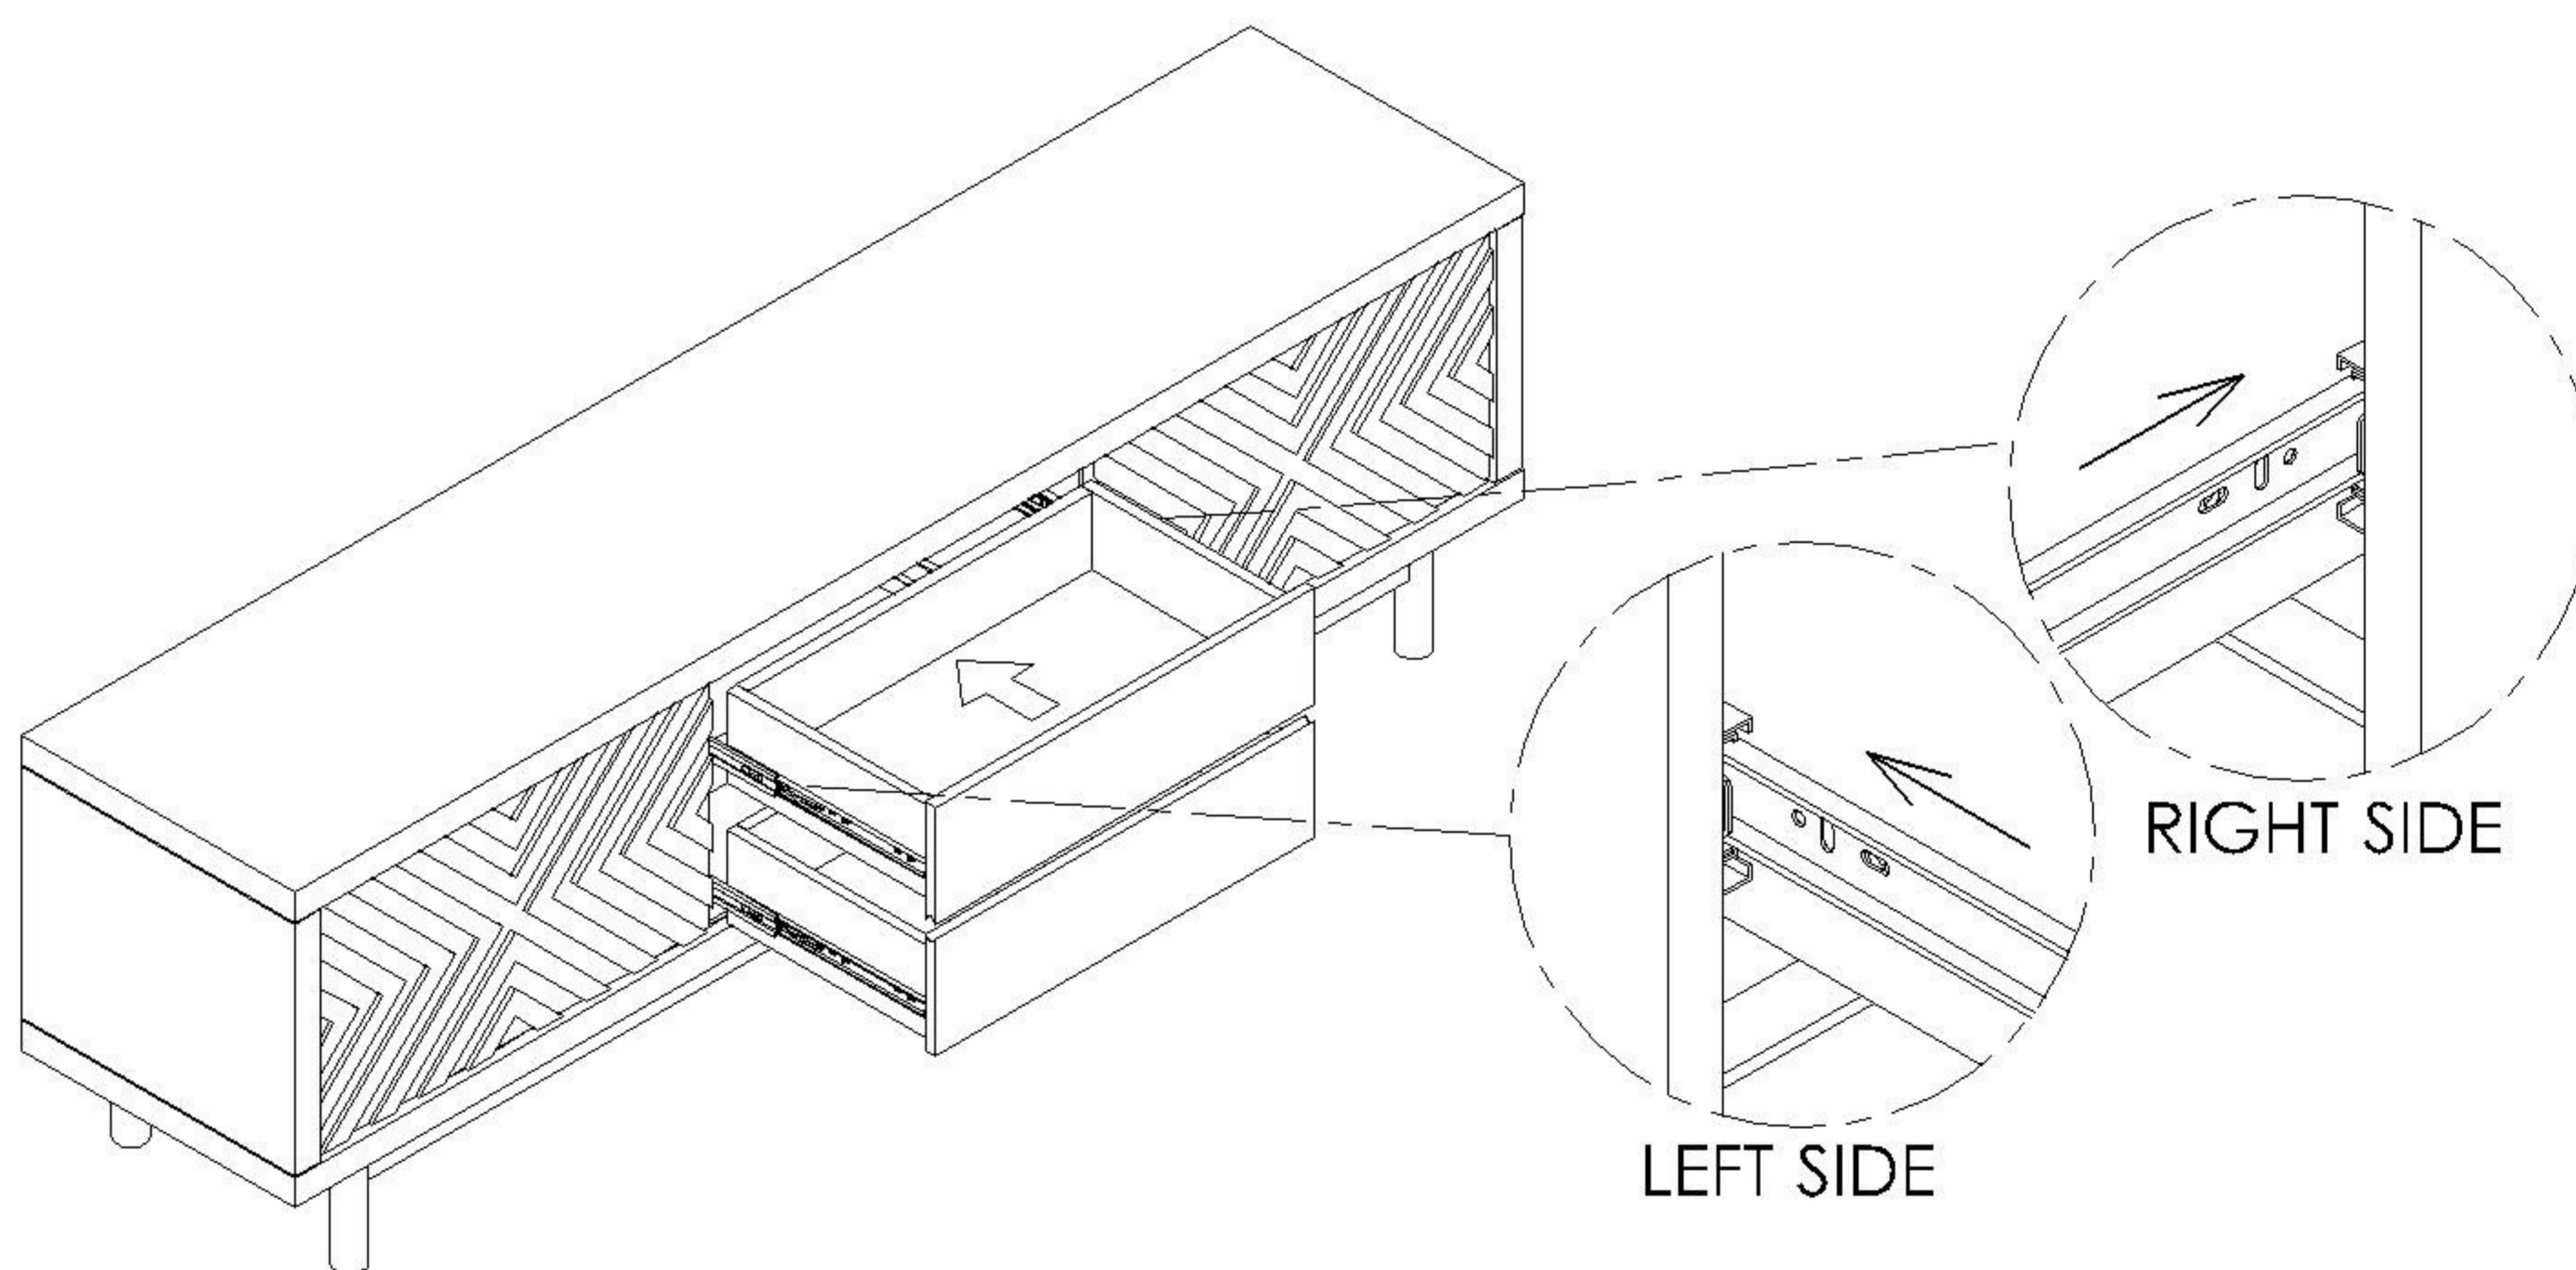

STEP 14D

 
- i) Drawers should assembled as follows

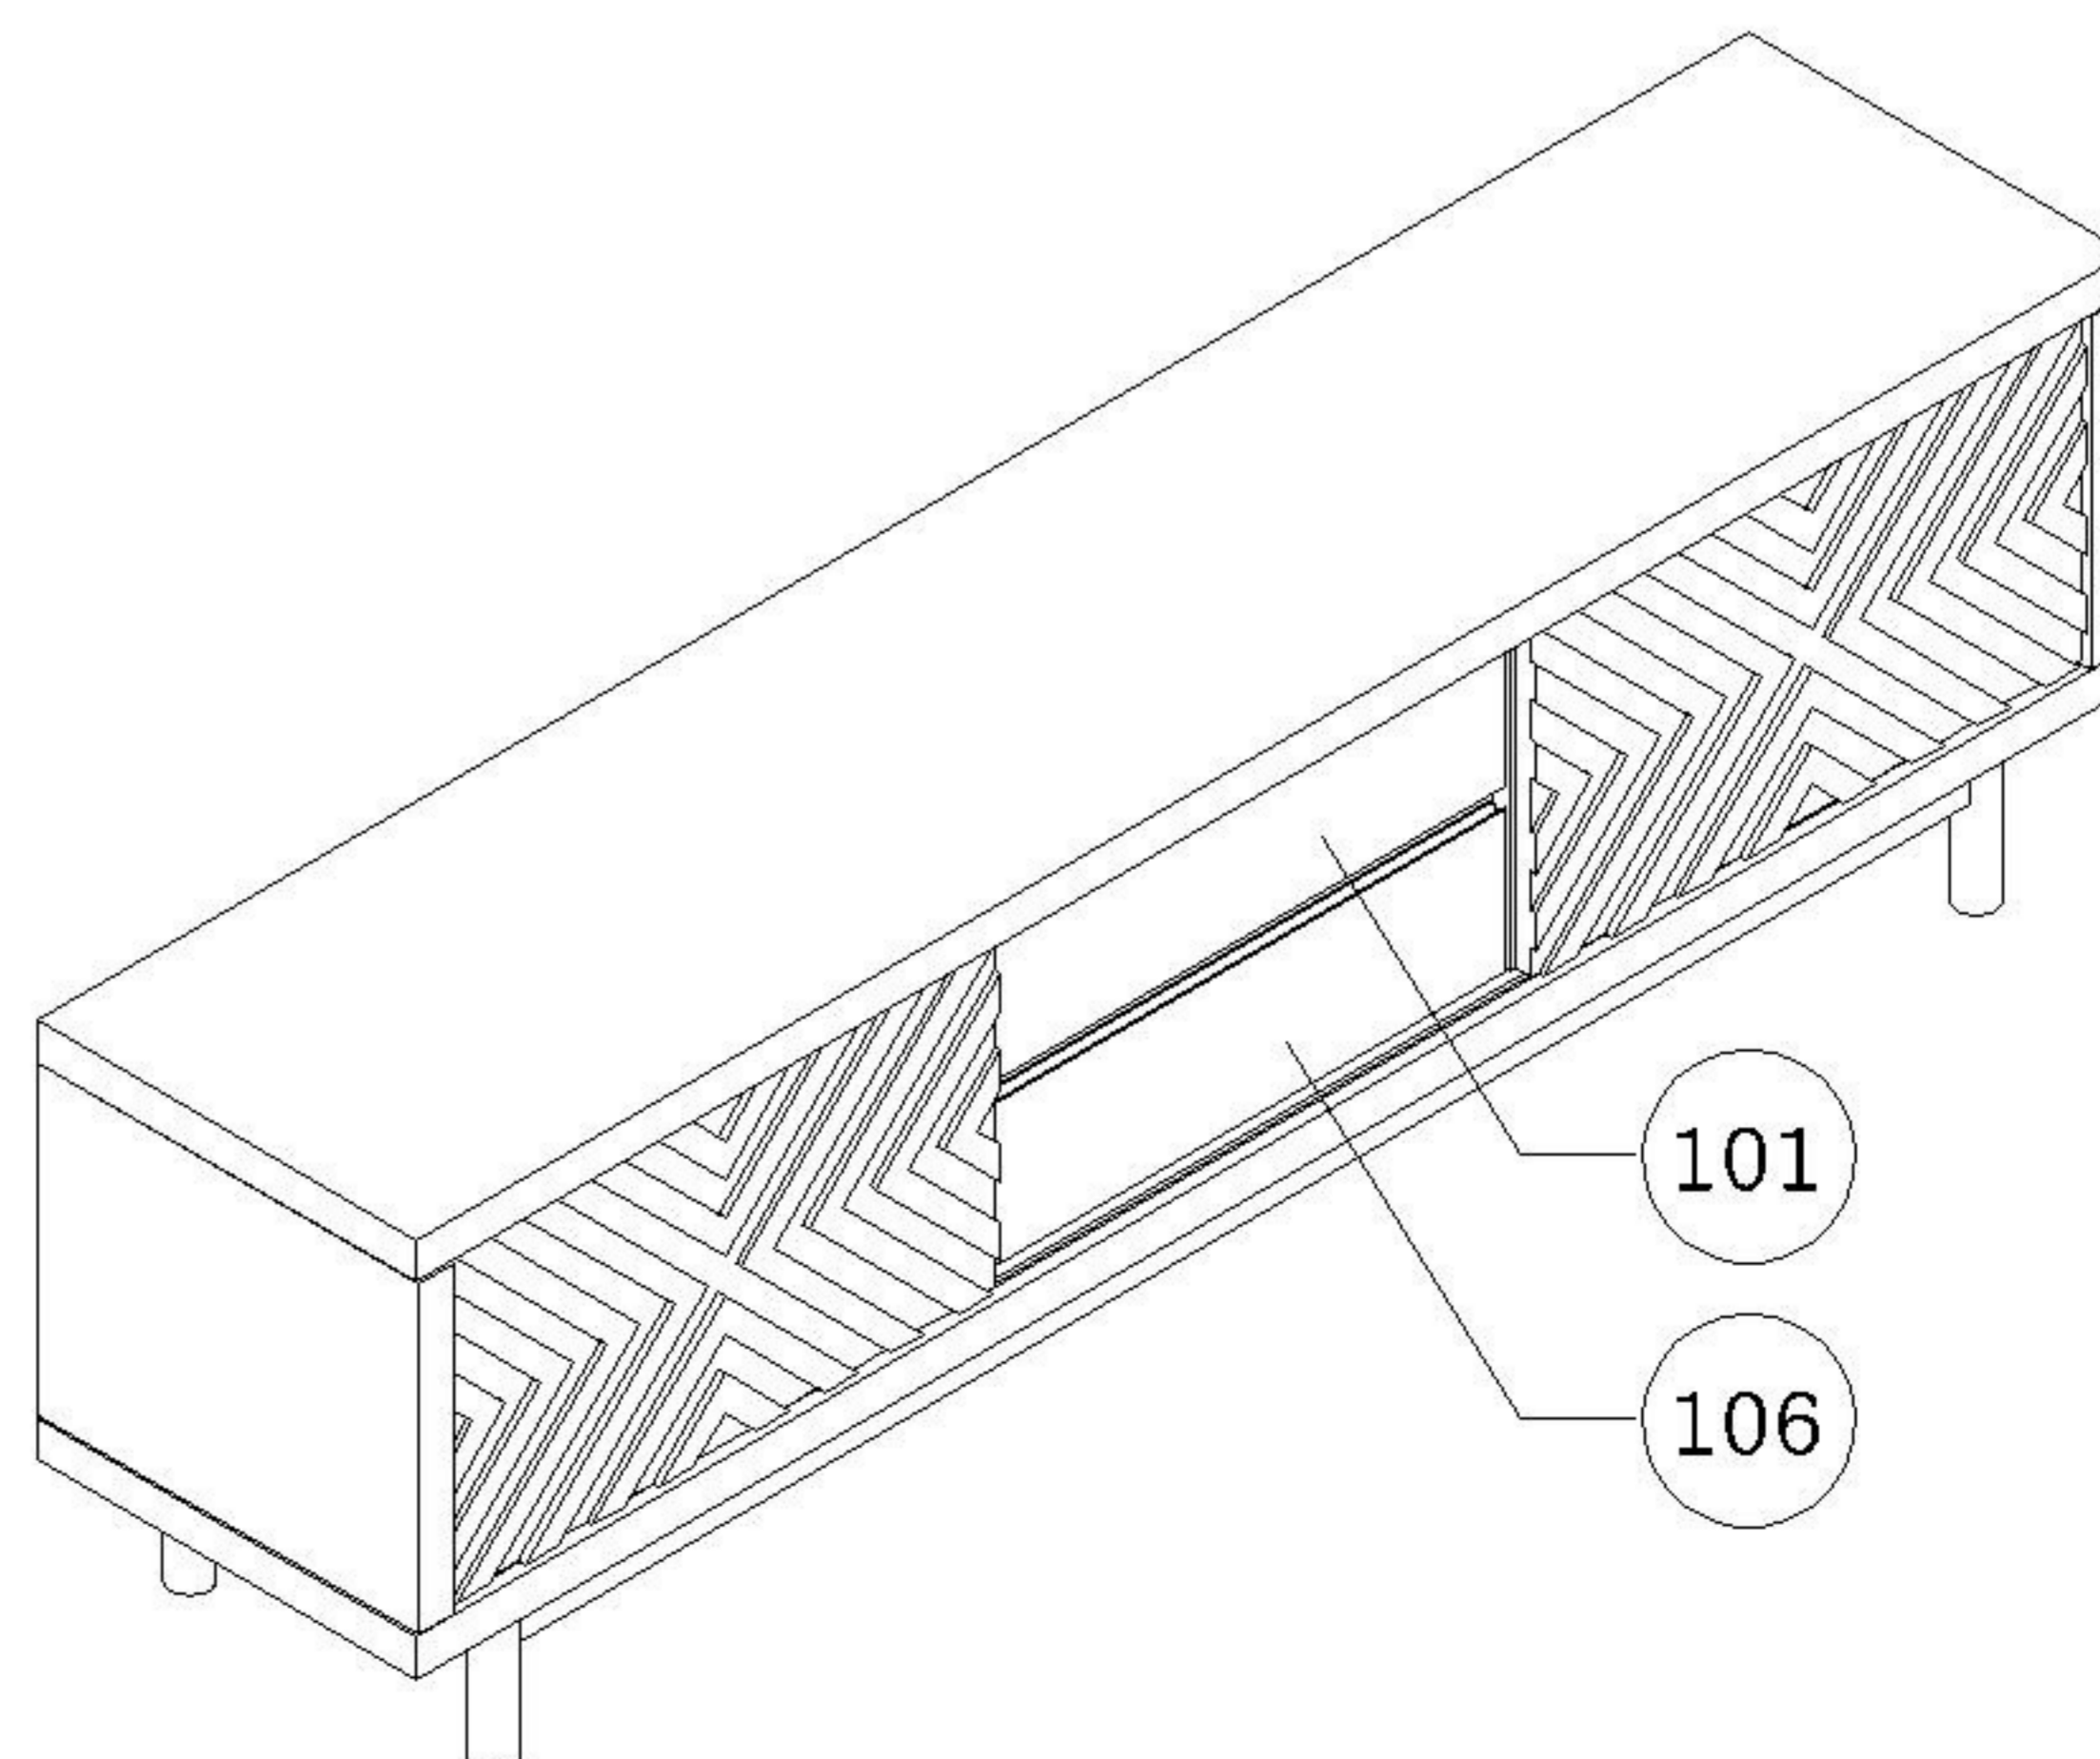


STEP 15

*Following step is OPTIONAL. Follow these steps if you wish to secure unit to a wall for added safety

 
- i) Attach Safety Belt(Z) to Top Panel and secure using Flat Washer(X) & Chipboard Screw(W) to secure

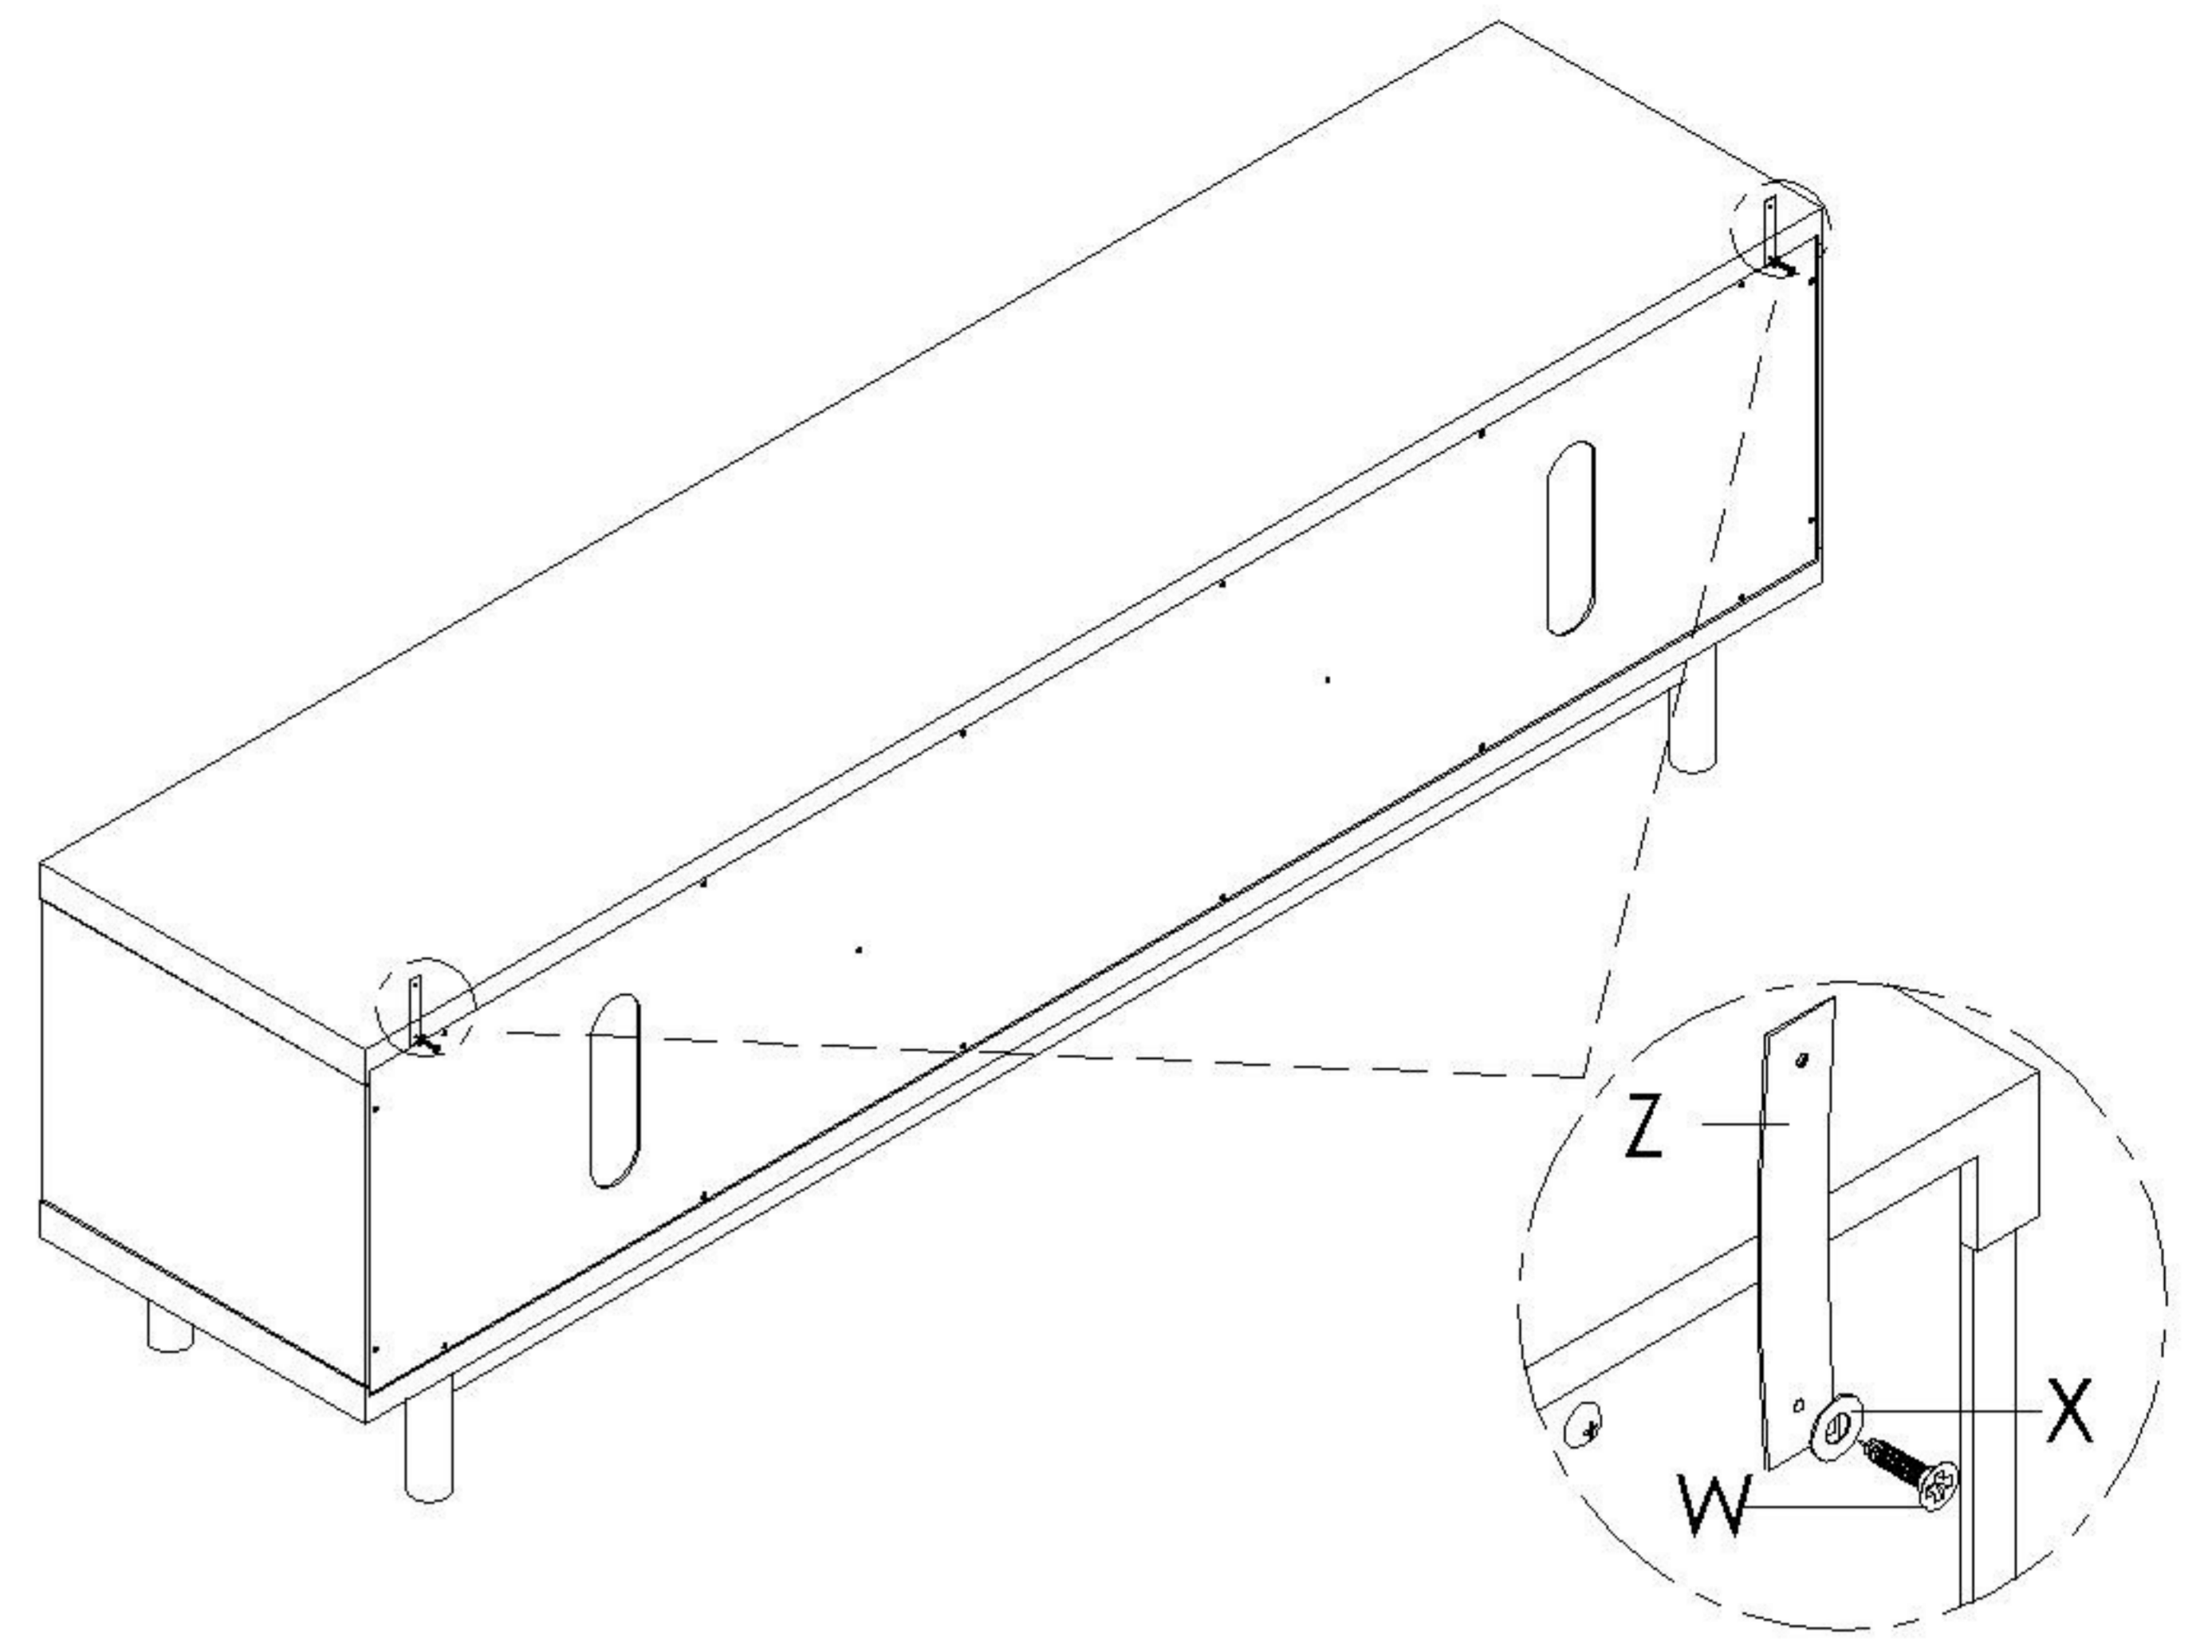


 - ii) Drill a hole at the wall, insert Screw Plug(Y) into hole


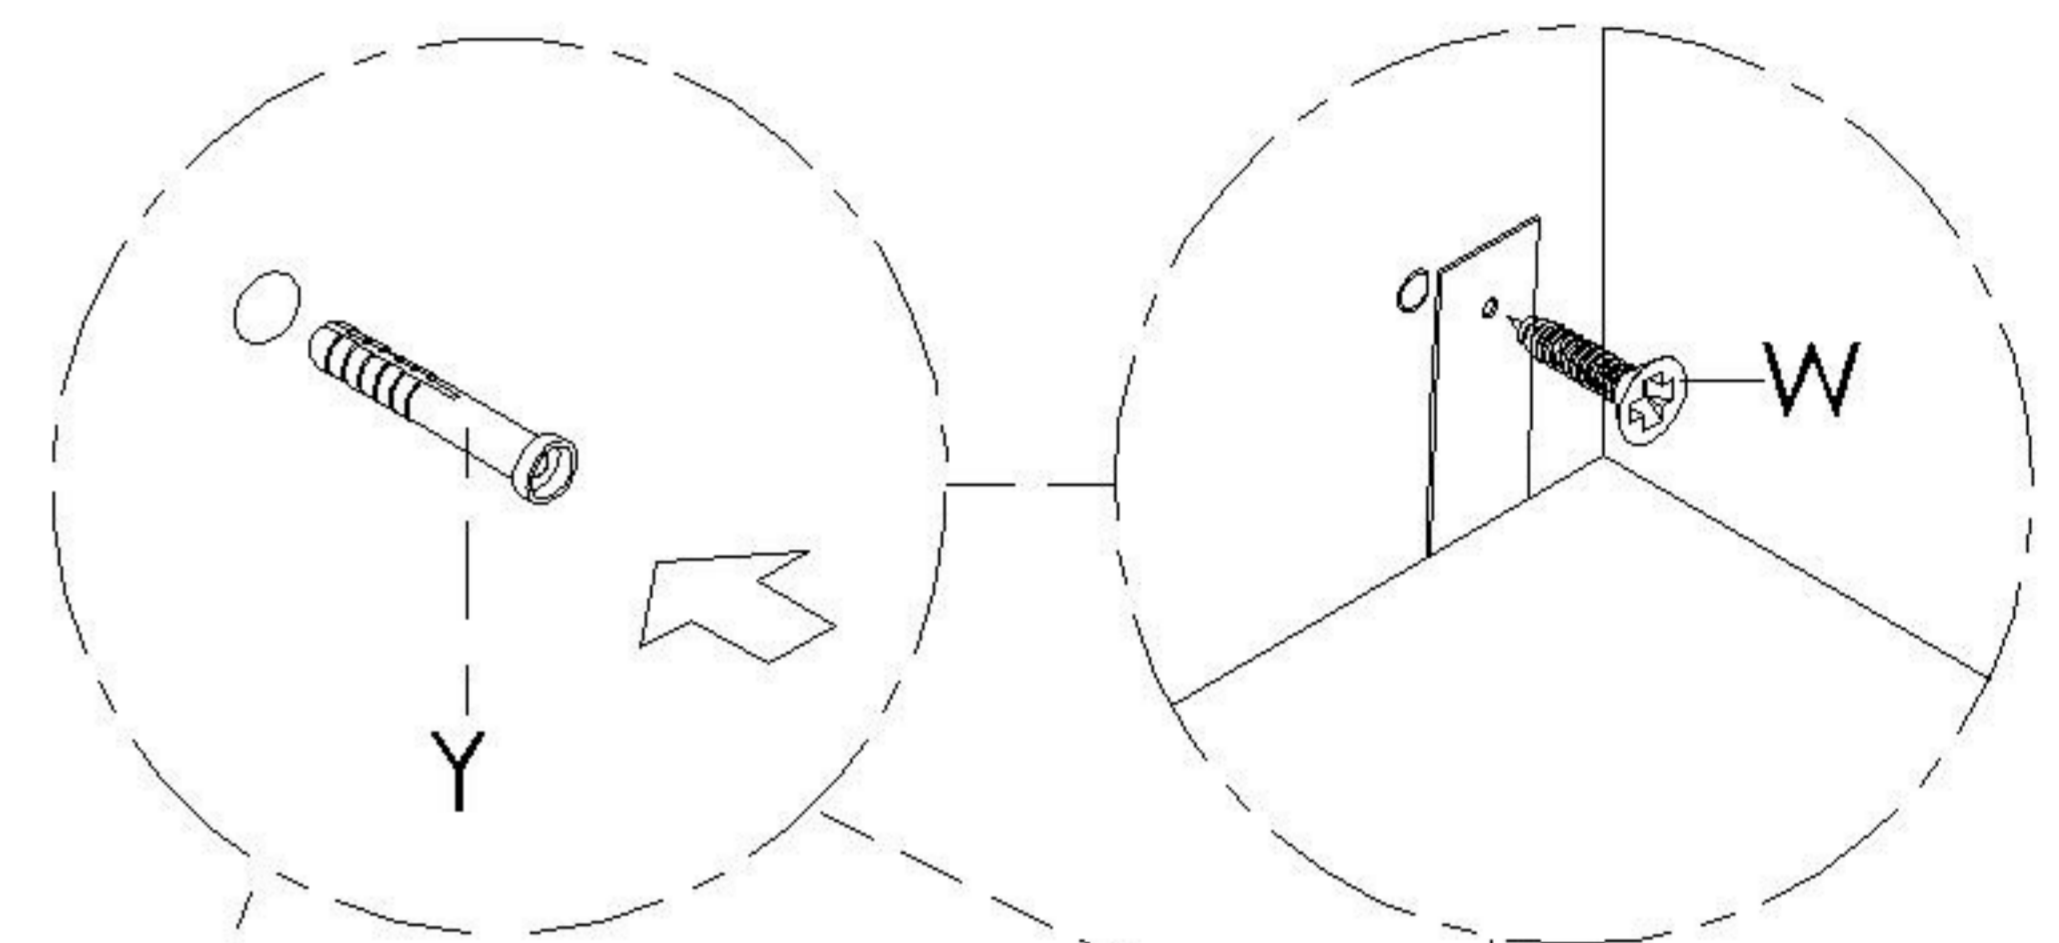


  - iii) Move assembled unit to wall and Screw in Safety Belt(Z) using Chipboard Screw(W)

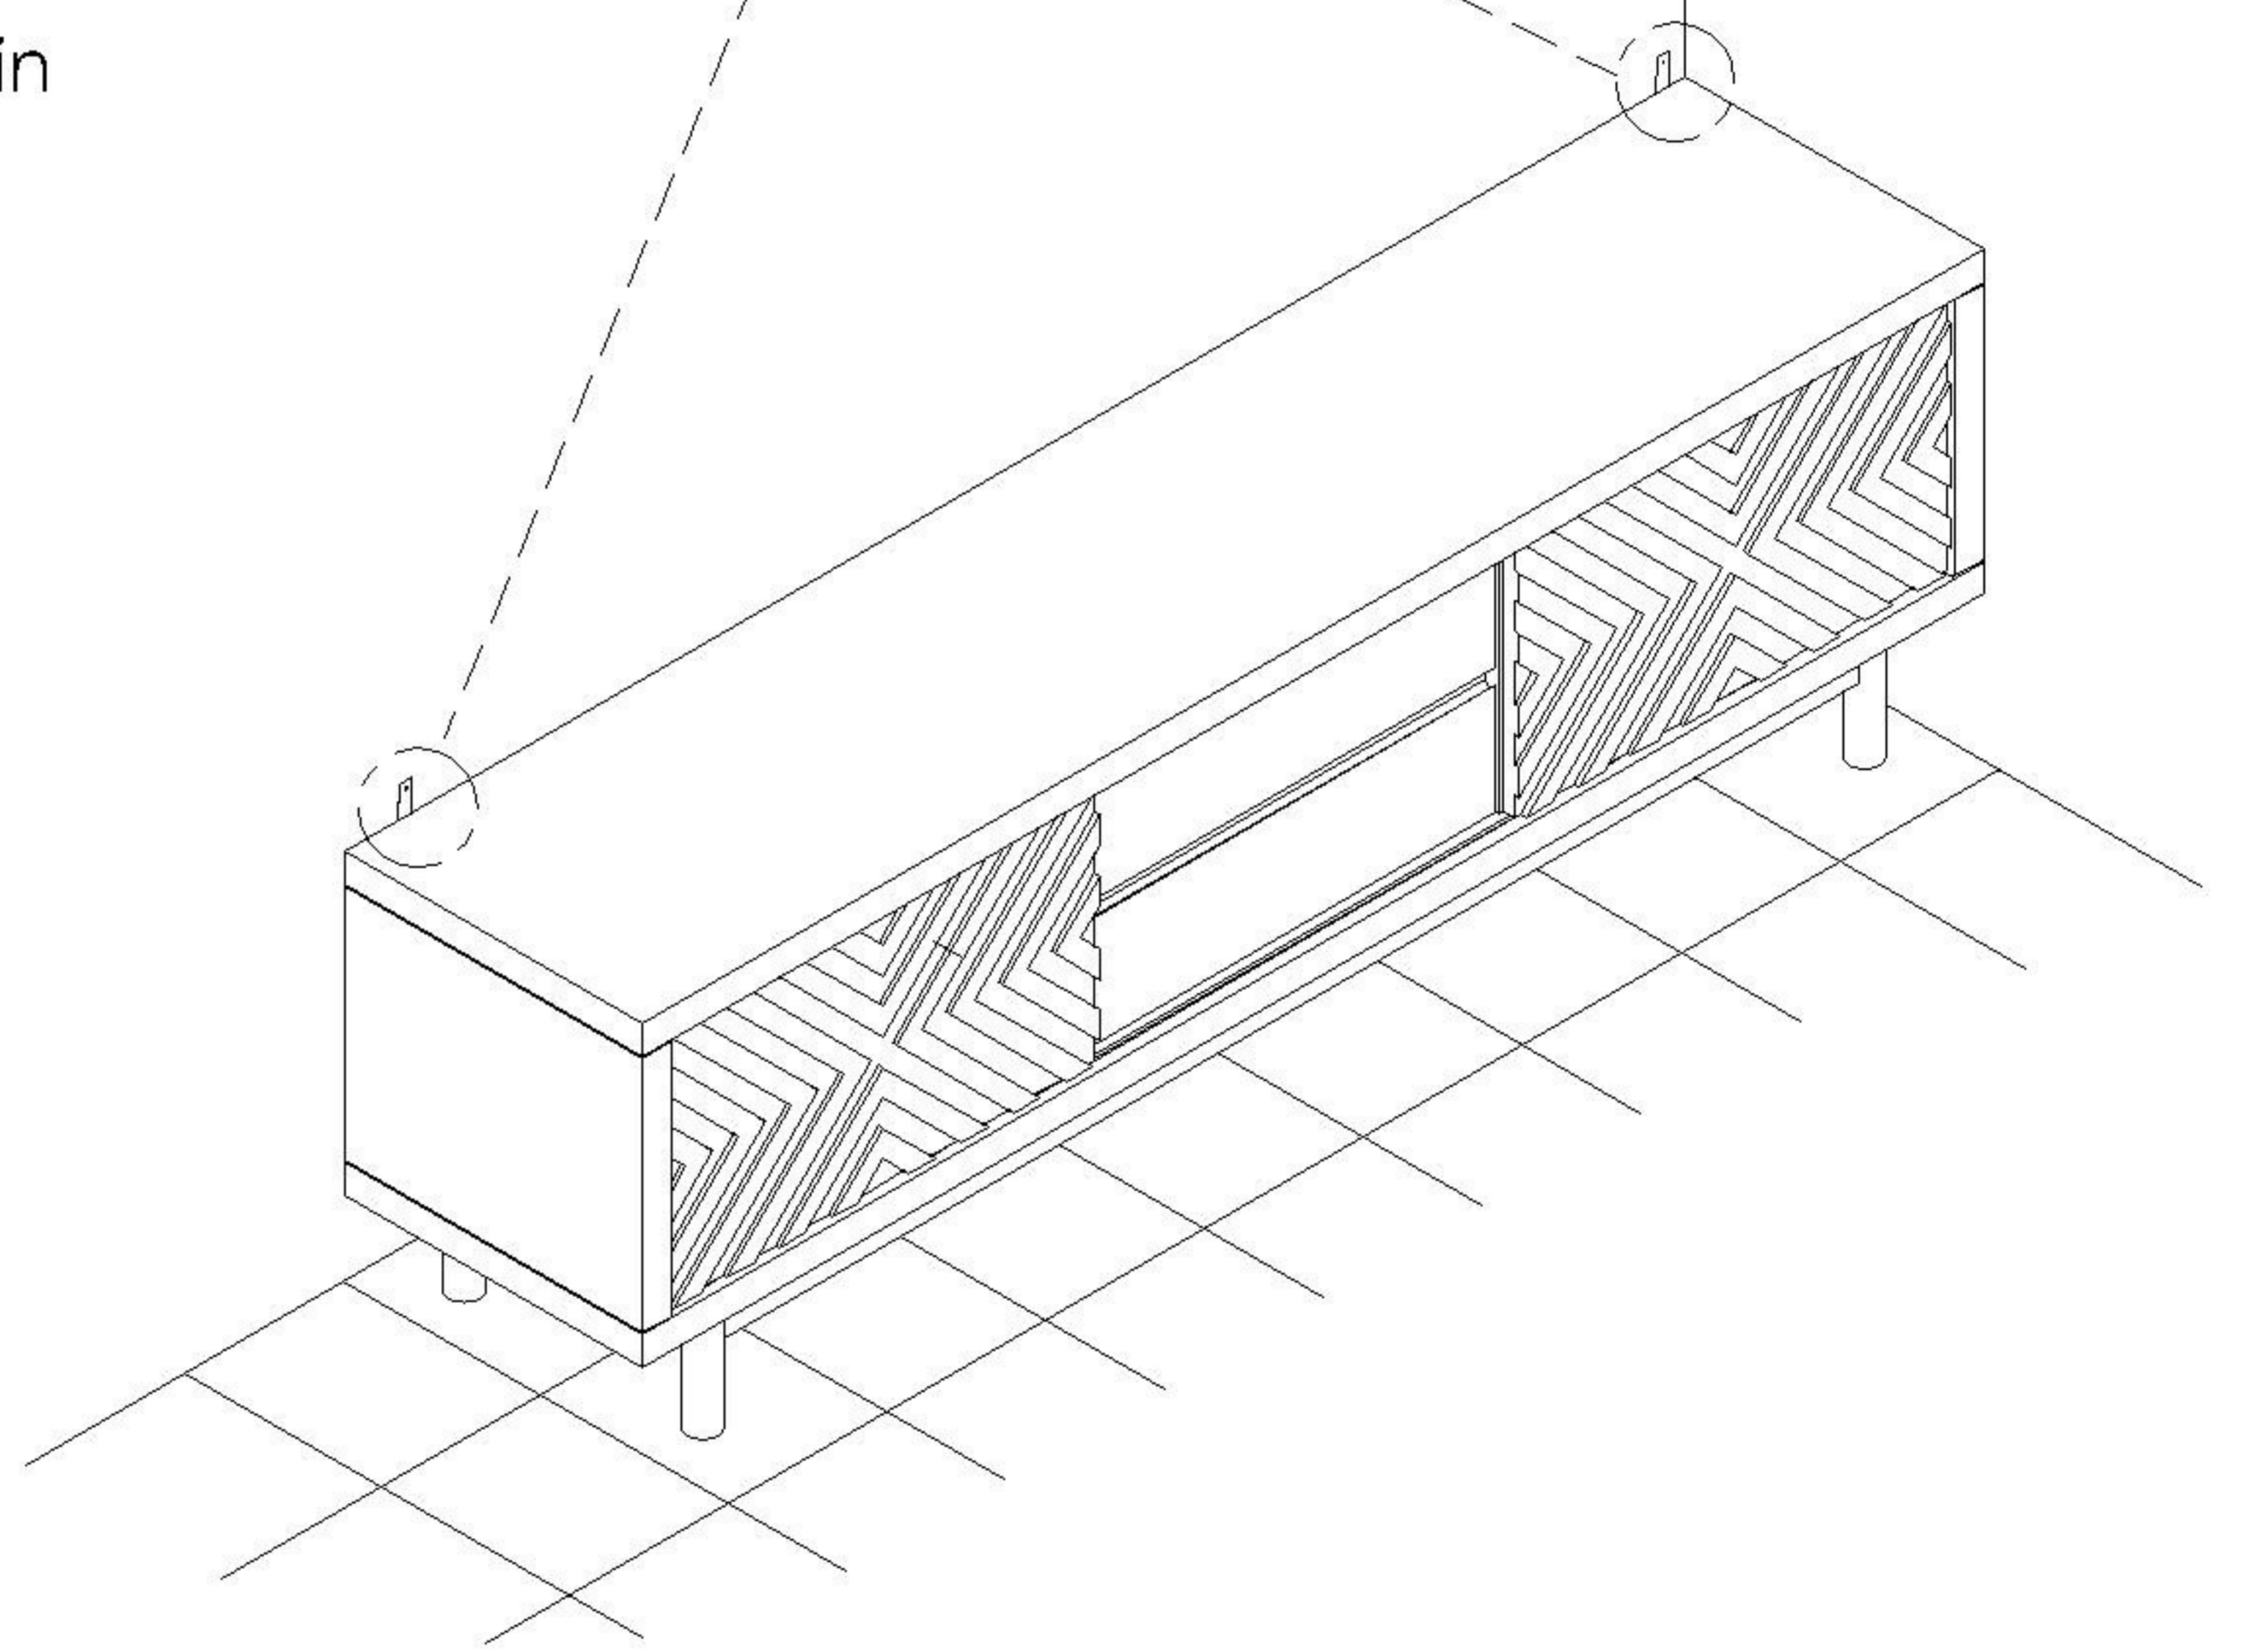

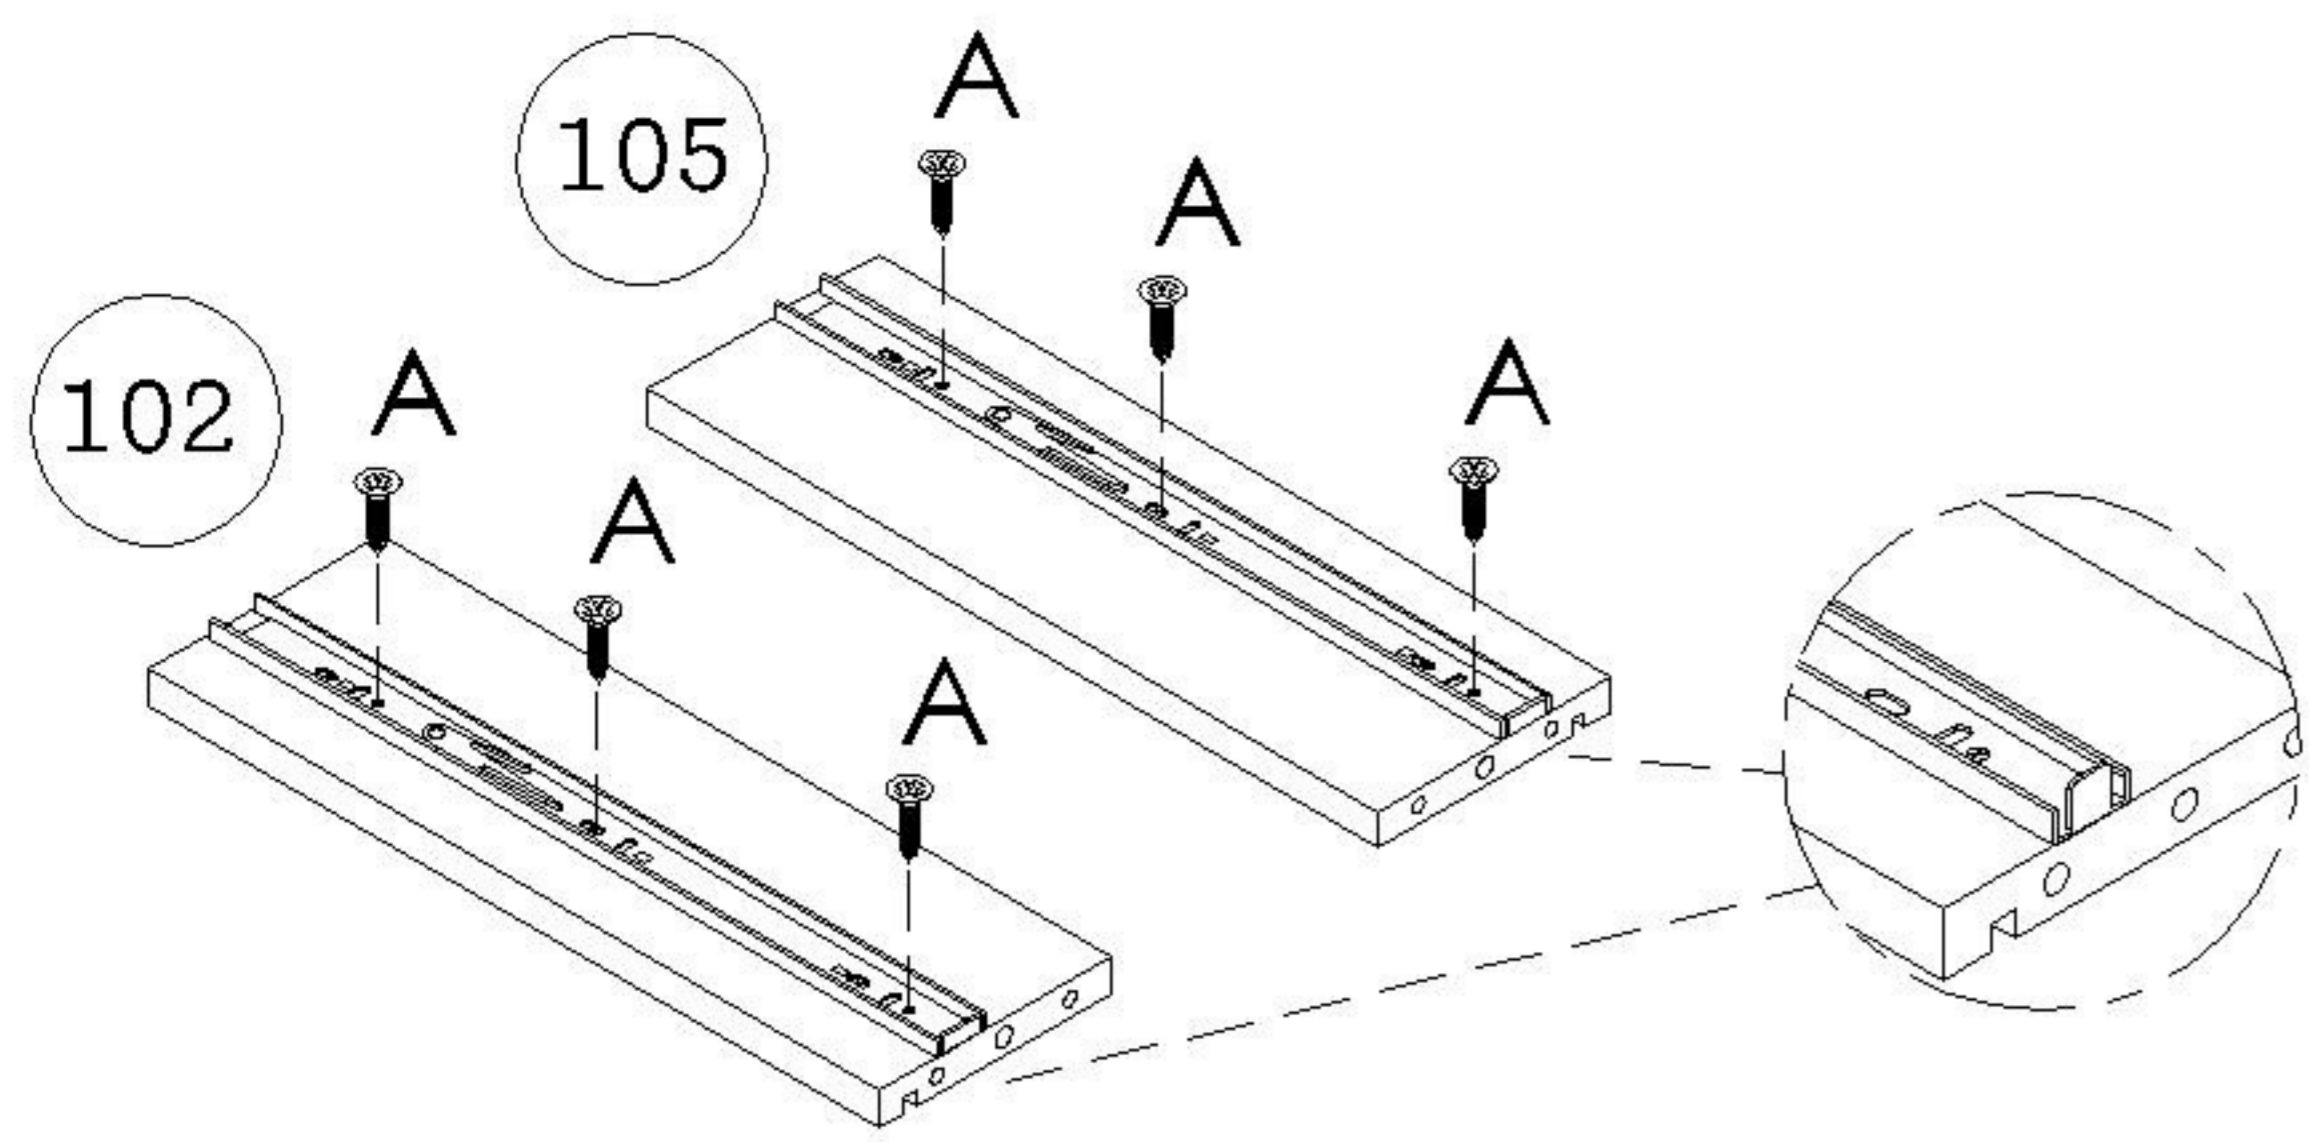


  - A) Attach Extension Runner(F) to Left,Right Drawer Side (102,105) using Chipboard Screw(A) to secure

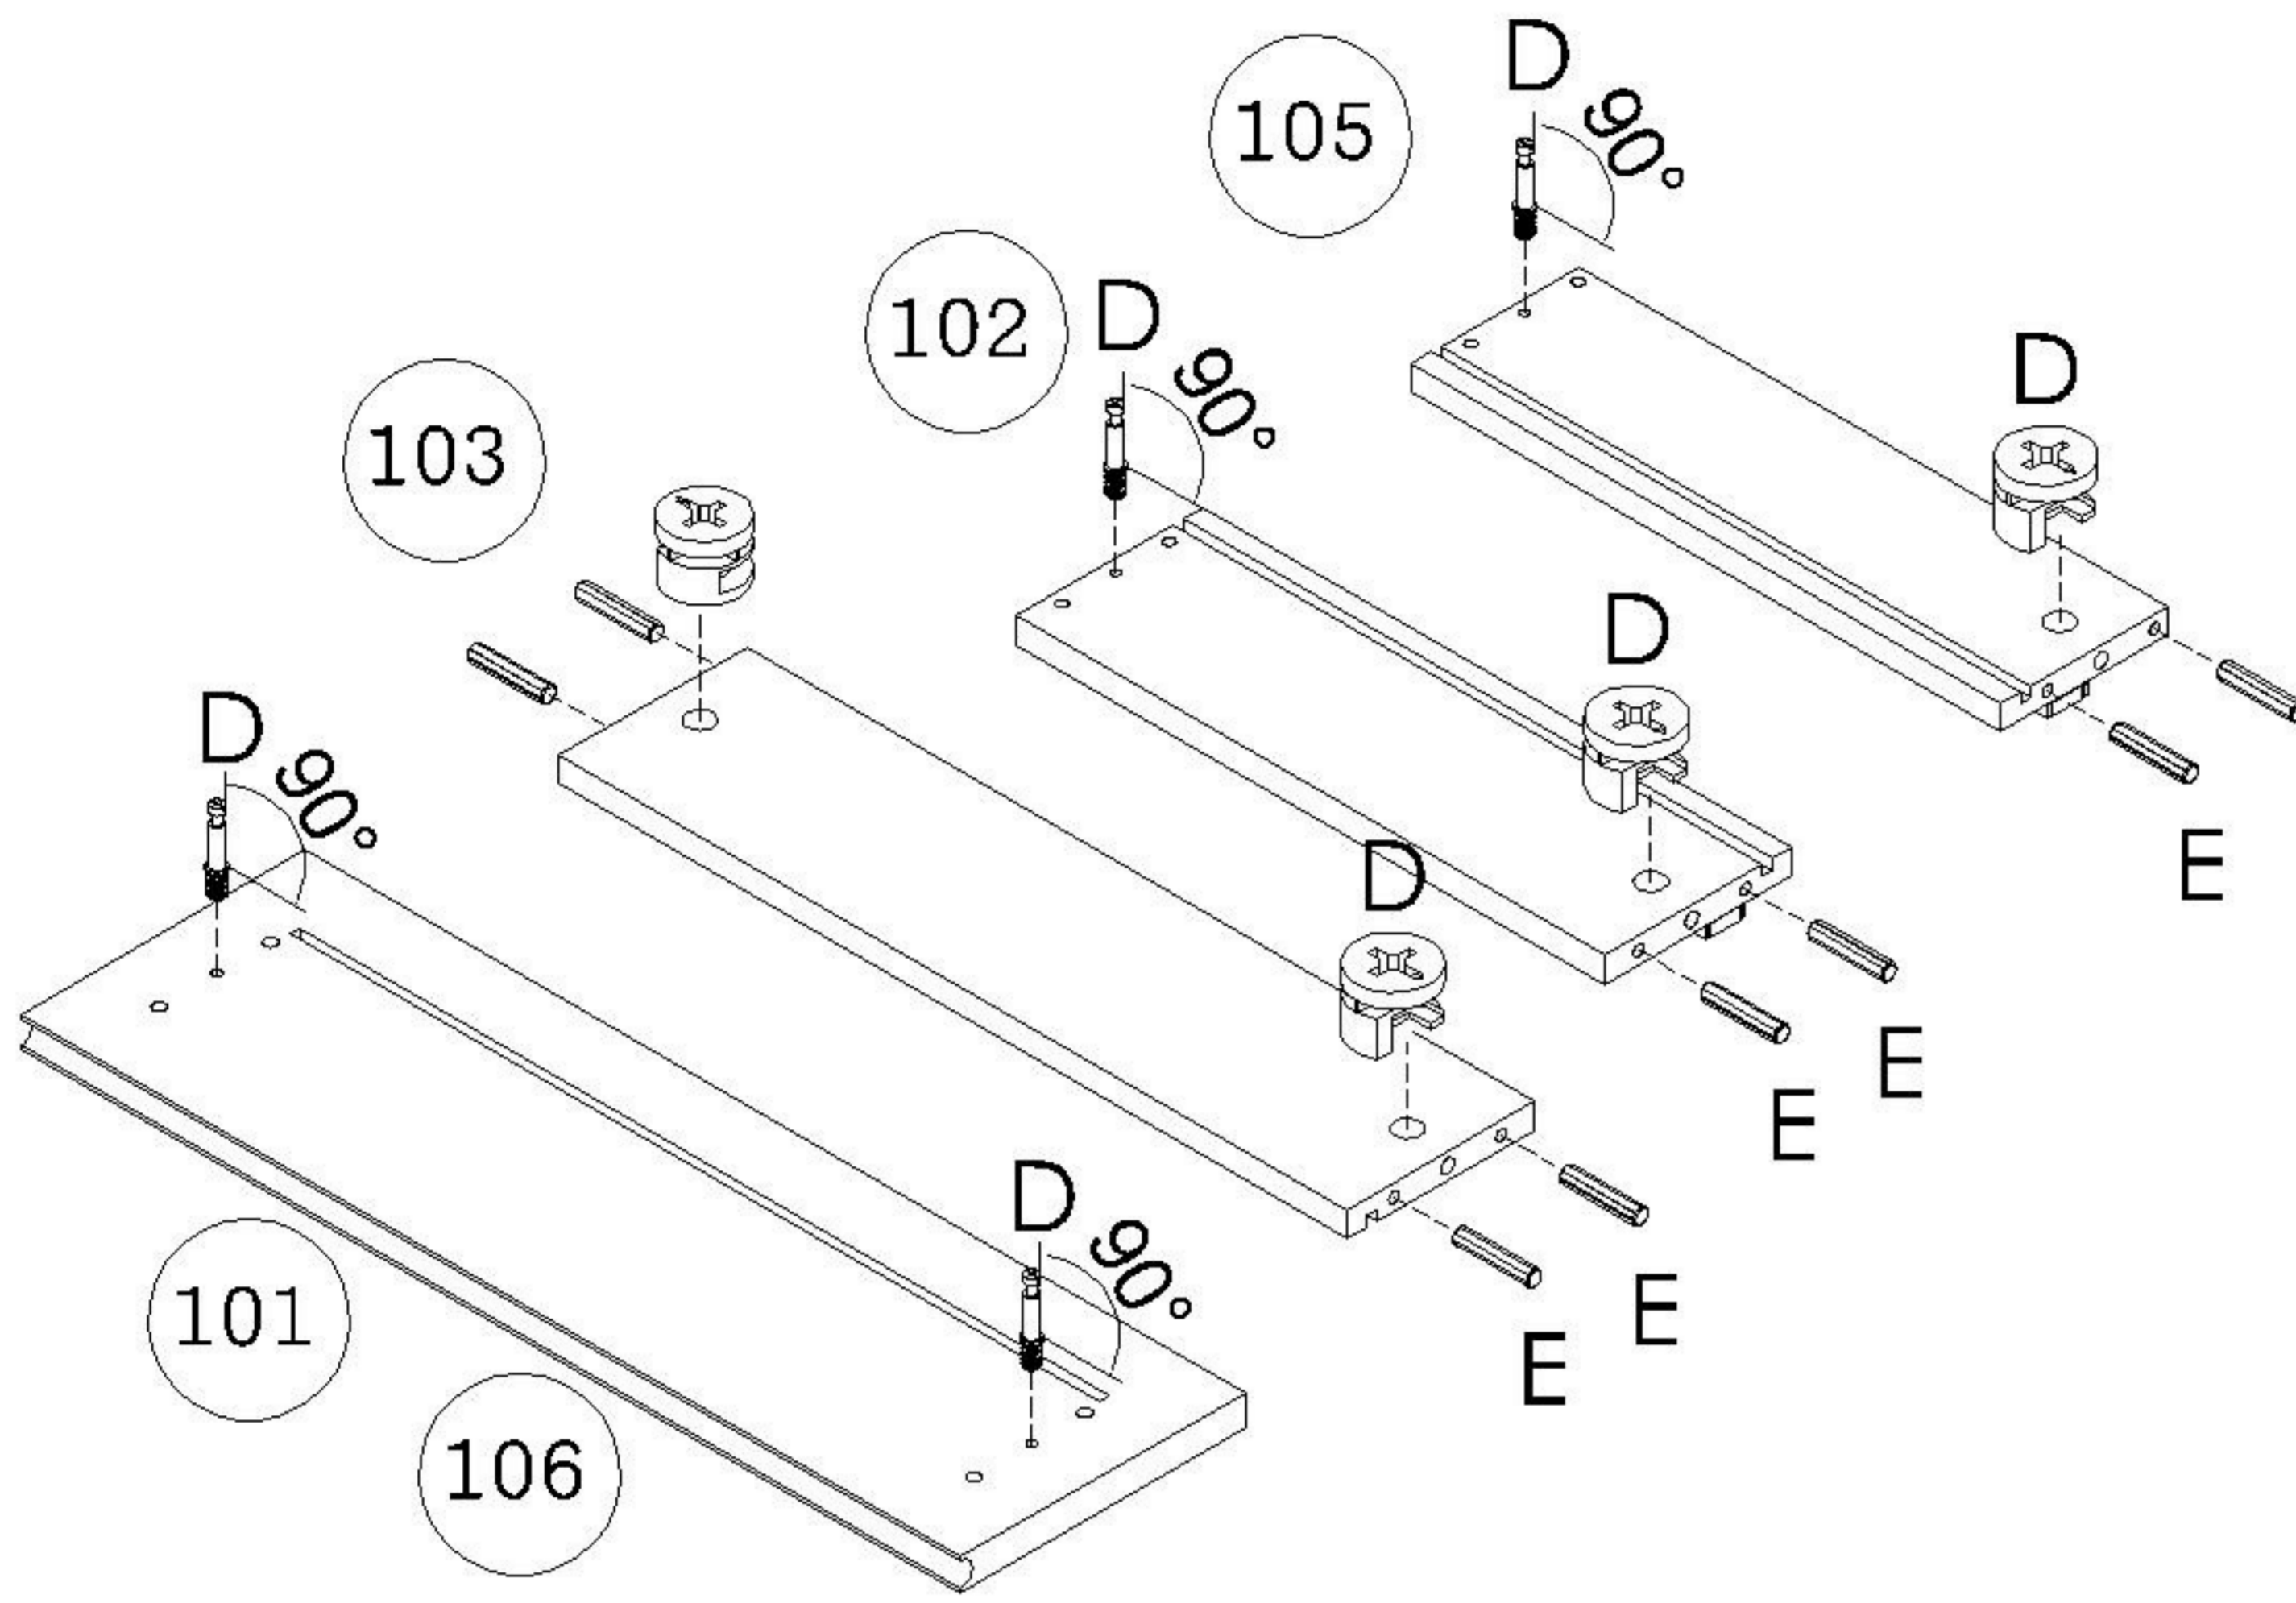
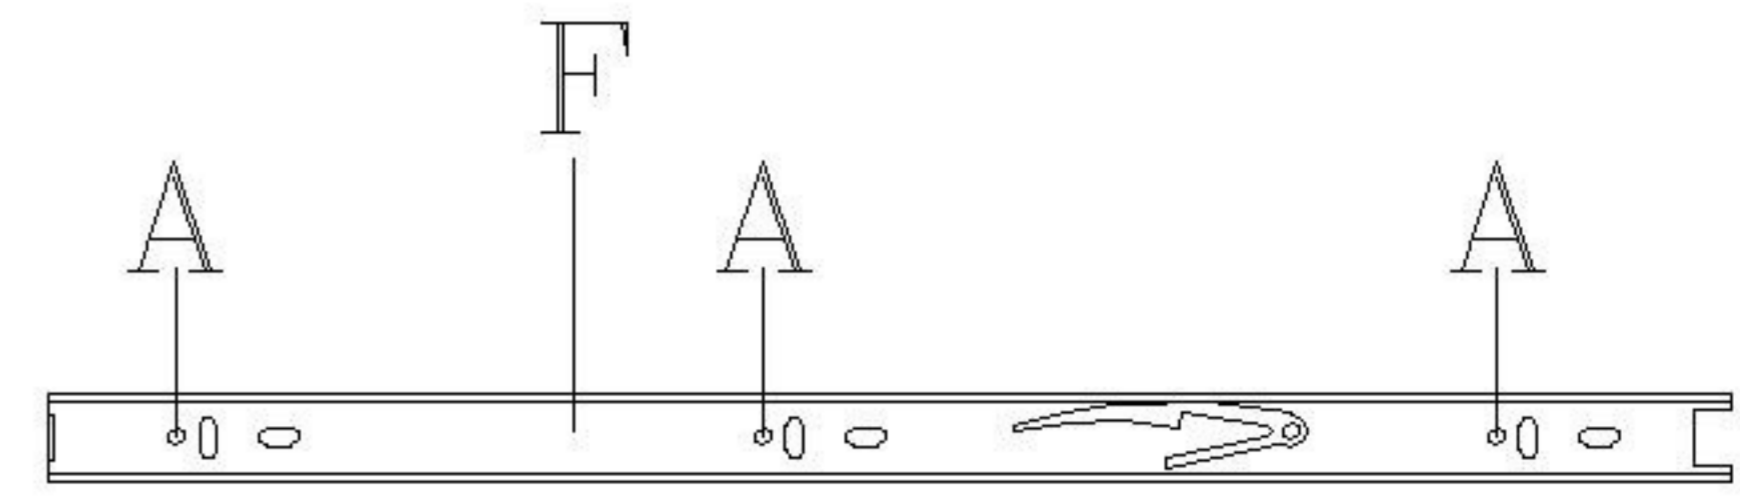


- A) Flip Over Left,Right Drawer Side(102,105)
- B) Insert Wood Dowel(E) to Left,Right Drawer Side(102,105) & Drawer Back(103)
- C) Attach Cam Lock(D) to Left,Right Drawer Side(102,105) & Drawer Back(103)
- D) Attach Cam Bolt(D) to Left,Right Drawer Side(102,105) & Drawer Front(101,106)

 NOTE : Make sure arrows on each Cam Lock point towards nearest edge with holes

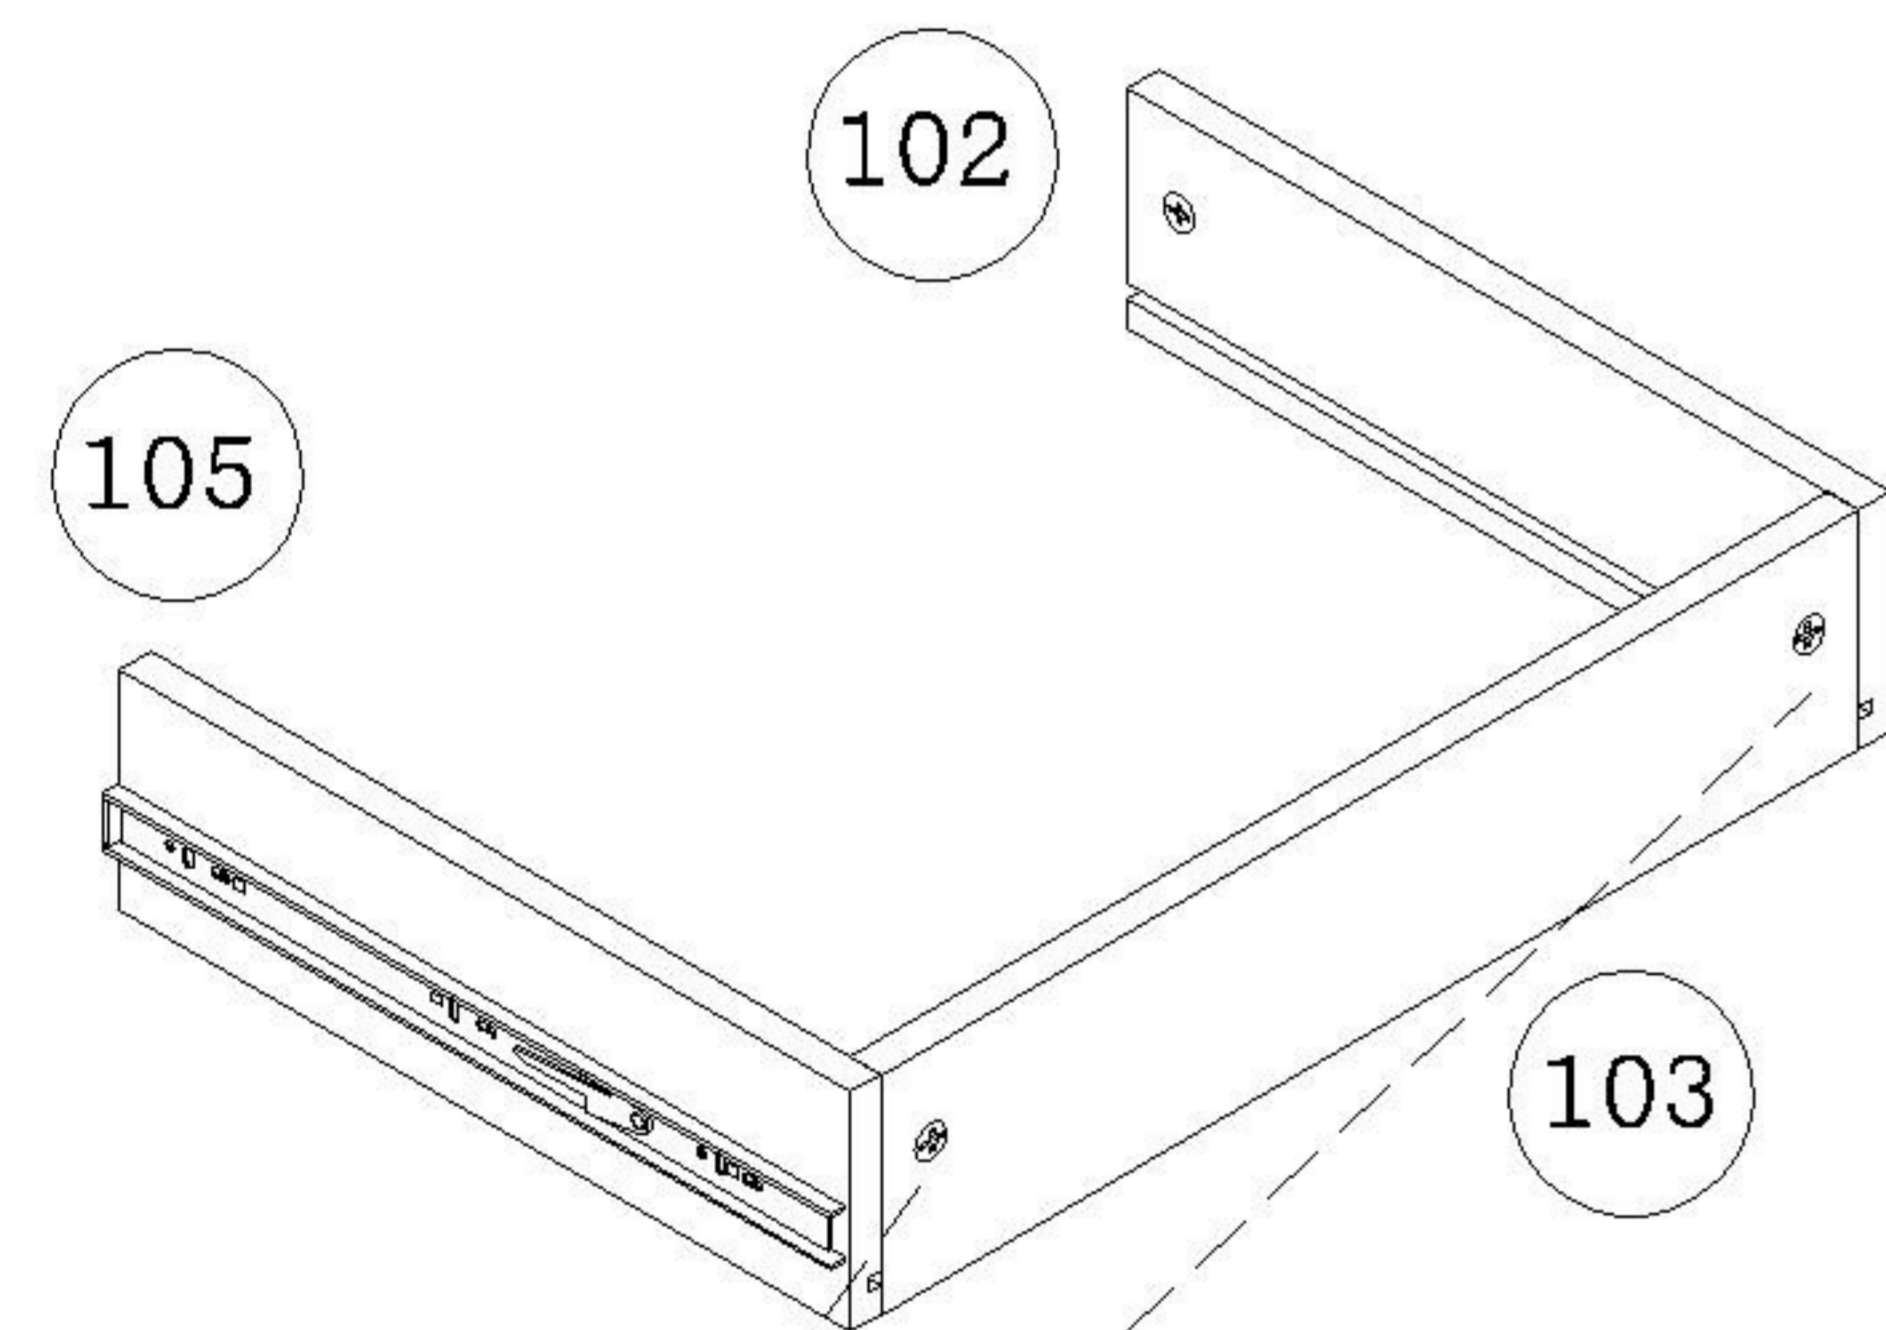

  - A) Attach Left,Right Drawer Side(102,105) to Drawer Back(103) secure with Cam Lock(D)
- B) Using Cam Lock Cover(G) to cover Cam Lock(D)

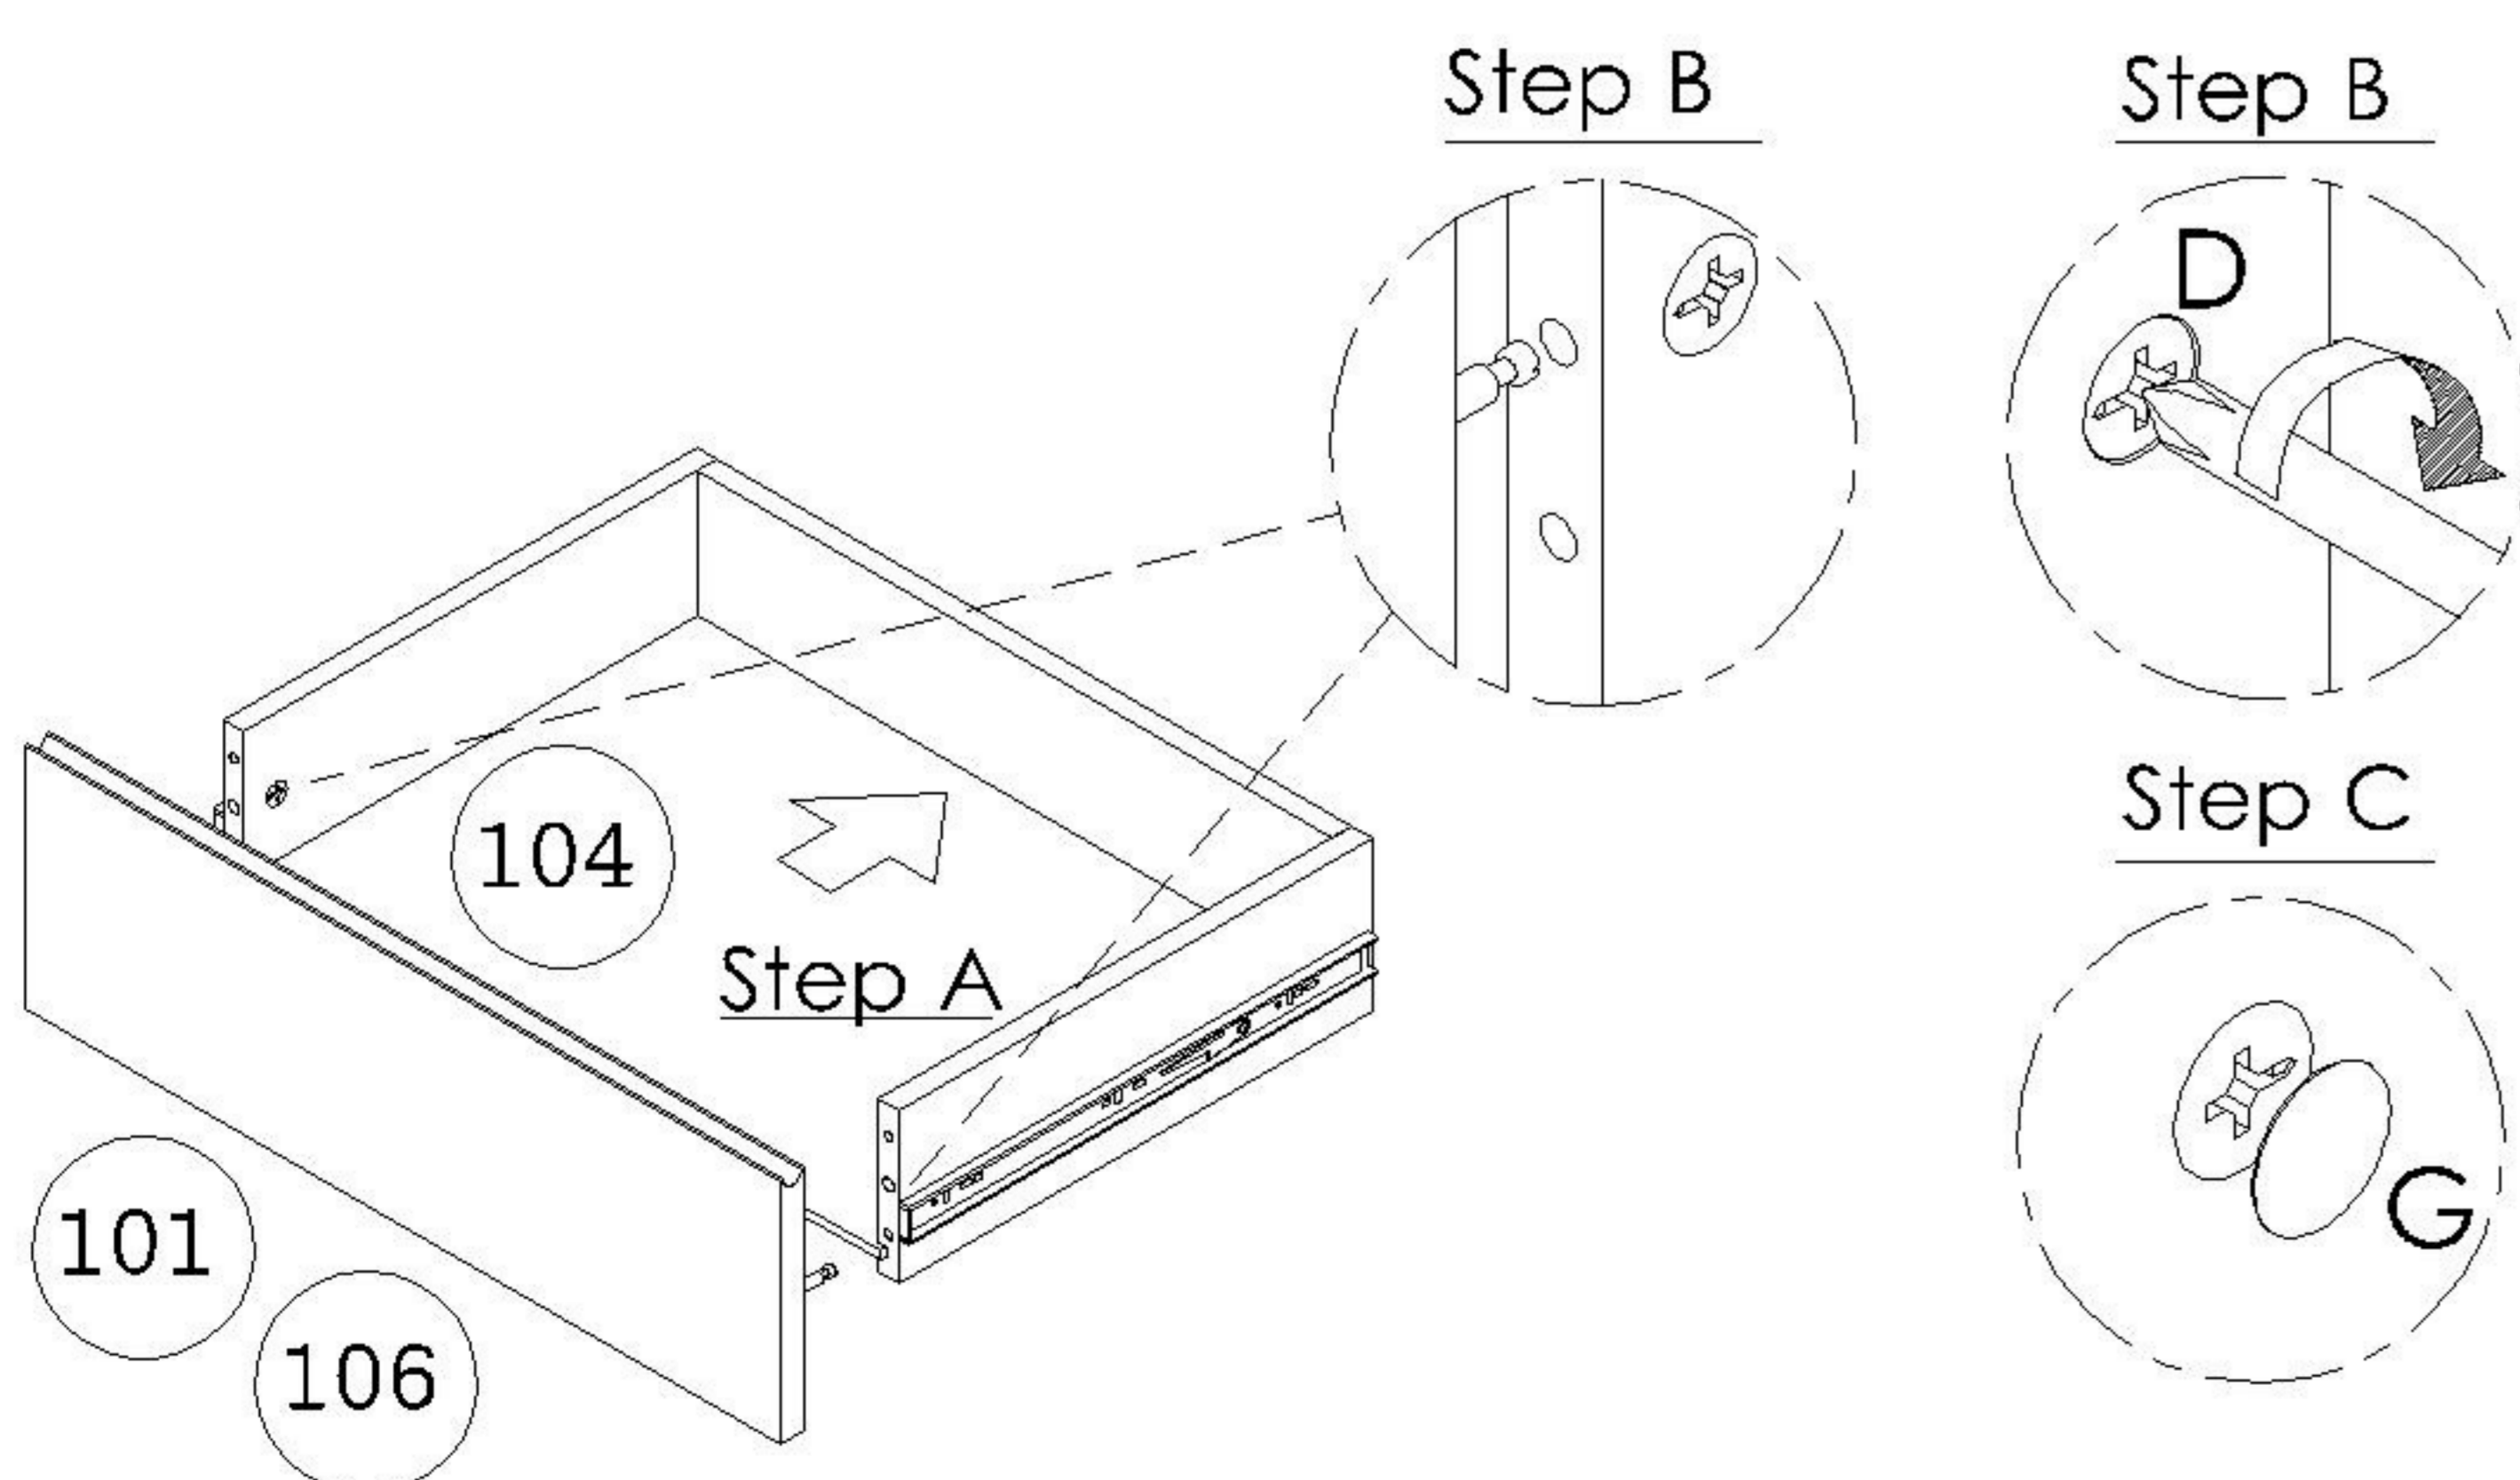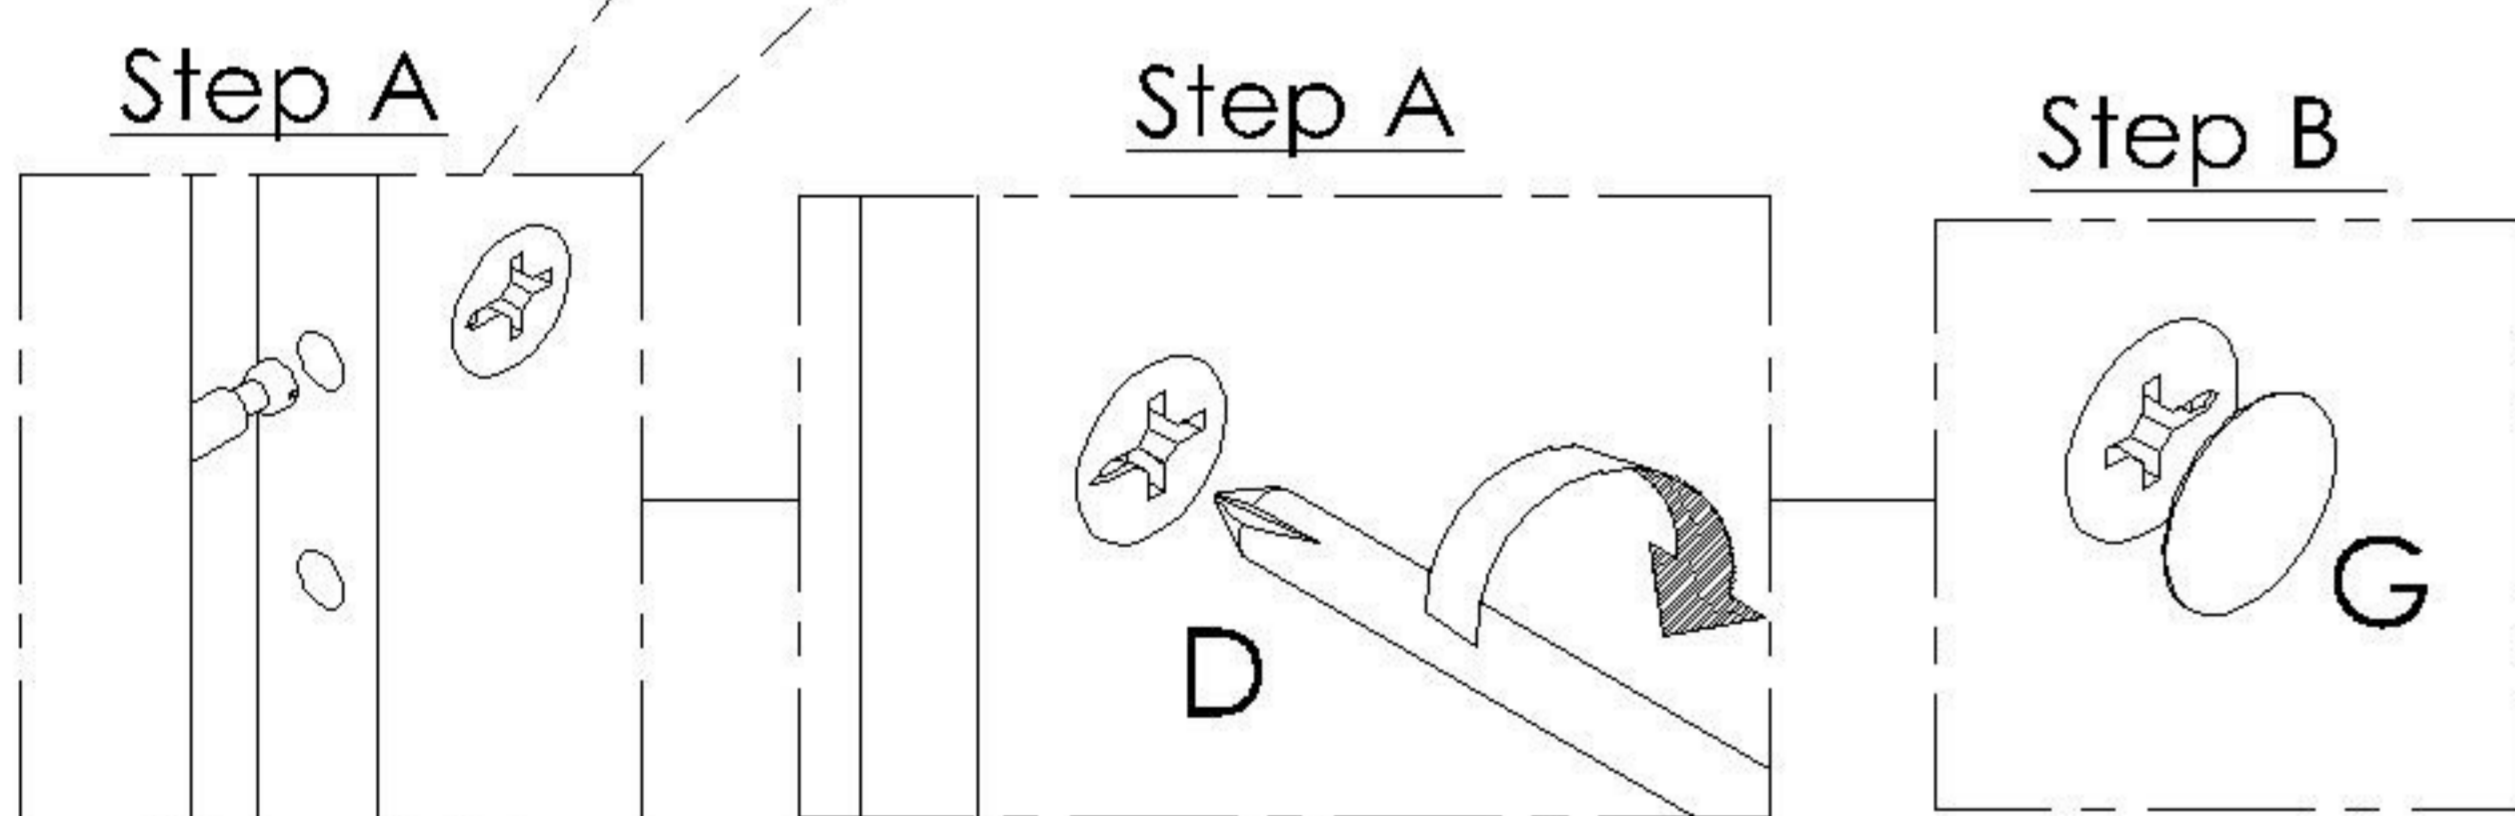

- A) Slot in Drawer Base(104) in corresponding grooves
- B) Attach Drawer Front(101,106) to Drawer Box secure with Cam Lock(D)
- C) Using Cam Lock Cover(G) to cover Cam Lock(D)