

FLOOR LAMP ASSEMBLY INSTRUCTIONS

 
 
 
These instructions are provided for your safety.
Please read carefully before commencing work and retain for future reference.

SAFETY INFORMATION

- * The supply cable runs through the inside of this product. Take care not to place undue stress on the cable whilst unpacking to prevent the possibility of a poor connection.
- * If you are in any doubt consult a person competent to give advice on the assembly of electrical equipment.
- * Always be sure to use the correct type and wattage of bulbs as indicated on the fitting. Do not exceed wattage stated.
- * If the external flexible cable of the lamp is damaged it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- * To prevent electrocution switch off at the mains supply before assembling or maintaining this fitting. Ensure the plug is not connected to any power supply and read instructions before assembly.
- * When changing the bulb, always unplug from the mains and allow the old bulb to cool down before handling. Dispose of used bulbs carefully.

ASSEMBLY INSTRUCTIONS

1. Unpack the product and remove all packaging. Be careful not to scratch the surface of the product whilst removing the plastic wrapping.
2. Lay the product out on the floor. If the floor is not carpeted please cover it with a soft cloth to avoid damage to the flooring and surface of the product. Assembly should take place with the product lying flat.
3. It may be necessary to remove protective packaging (plastic / cardboard) located at cable entry points of the product.
4. Screw bulb holder section into the top pole taking care to hold the parts parallel to avoid cross threading. Hold the lamp holder section still and only turn the top pole so as not to twist the cable.
5. Screw the middle pole into the top pole section. Take care to hold the poles parallel to avoid cross threading. Hold the top pole still and only rotate the middle pole to prevent the cable from twisting.
6. Screw the bottom pole into the middle pole section. Take care to hold the poles parallel to avoid cross threading. Hold the upper poles still and only rotate the bottom pole to prevent the cable from twisting.
7. Gently pull excess cable out of the base until the lower pole meets the base.
8. Turn the base onto the bottom pole. Keep the pole parallel to avoid cross threading. Keep the pole stationary and only rotate the base.
9. Stand the floor lamp upright and ensure all the assembled parts are fully tightened.
10. **“Swing Lock feature”** This product is supplied collapsed to reduce packaging waste. One of the arms has a coloured dot on it. This arm is fixed in its correct final position. **Do not try to move this arm.**
The other arms need to be swung into position. Simply swing the arms out firmly and they will lock at the correct angle and in the correct final position. No wiring or special tools are required. Once locked, the arms cannot be released so **do not** try to force them back to their original position. A small amount of movement in the arms once locked may be present. This is quite normal and does not indicate the product is faulty.
11. Remove the shade ring from the bulb holder. Fit the glass shade over the bulb holder and secure in place with the shade ring.
12. Fit bulb: type and wattage as indicated on fitting. **The wattage indicated must not be exceeded.**
13. Floor lamp is now ready for use.

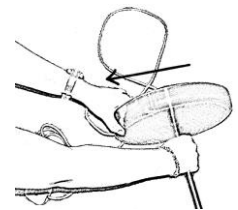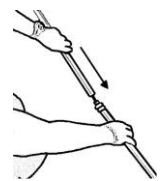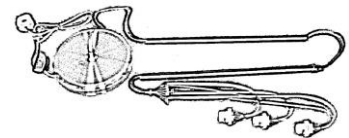

GENERAL INFORMATION

This product is designed for internal use only. **Do not use polish or abrasive cleaner – just a soft dry cloth.**

To register your product for an extended five-year warranty, please complete the simple form at

www.darlighting.co.uk/warranty

You'll need to fill in the details of the product, the retailer you purchased it from, and also the installer and the installation. Please also upload a clear copy of the original purchase invoice or receipt to complete this registration.

UK: *där Lighting Ltd, Wildmere Road, Banbury, Oxon, OX16 3JZ*

Ireland & EU: *Dar Lighting Ireland Limited, Suite 108, Q House, 76 Furze Road, Sandyford Industrial Estate, Dublin 18*