

ASSEMBLY INSTRUCTIONS

DINING TABLE

 
ASSEMBLY REQUIREMENTS

2-Person
Assembly

Assembly Time
Per Chair (Approximate)

30 MINUTES


Tools Required
(Not Provided)



Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware, Replacement parts are normally shipped within 2 or 3 days.

 We appreciate your business!

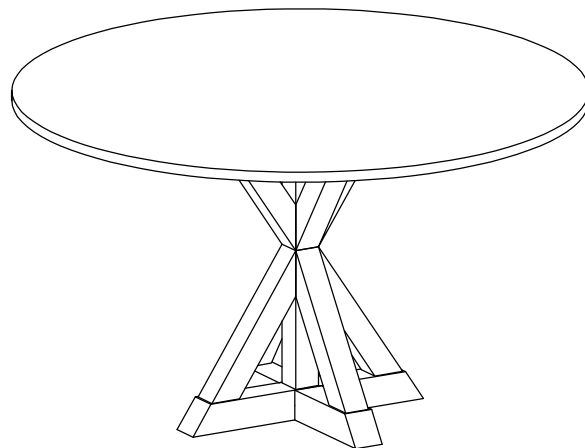

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are complete before you start assembling.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Please check all of the parts and quantities are included before assembly. Contact customer service for missing parts.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

CLEANING - Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.






FITTINGS - Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.

This product is for indoor and household use only - not for commercial use.






 



ASSEMBLY INSTRUCTIONS

DINING TABLE

PARTS LIST (FOR 1 TABLE)


NO.	DESCRIPTION	QTY
P1	TABLE TOP 	1
P2	TABLE LEG 	1
P3	TABLE SUPPORT 	1
P4	LEG SUPPORT 	4
P5	LEG BOTTOM 	1

 HARDWARE LIST (FOR 1 NOS. OF TABLE)

NO.	DESCRIPTION	QTY
H1	ALLEN KEY 	1
H2	JCBC SCREW M6 x 50mm 	4
H3	JCBC SCREW M6 x 60mm 	2
H4	JCBC SCREW M6 x 80mm 	2
H5	SPRING WASHER 	4
H6	CSK SCREW M4 X 32MM 	16
H7	CSK SCREW M4 X 38MM 	4
H8	WOOD DOWEL 	8
H9	ADJUSTMENT SCREW 	4


STEP 1

 - Lay Table Leg (P2) with its bottom base facing up.
- Insert Wood Dowel (H8) into designated holes at the end of Leg Support (P4). Next, attach (P4) onto Table Leg (P2) as shown and align the screw holes on each part.
- Insert JCBC Screw (H2) through the screw hole at bottom-end of (P4) into the screw hole at the middle of the Vertical Leg.
Use Allen Key (H1) to drive (H2) into (P2).

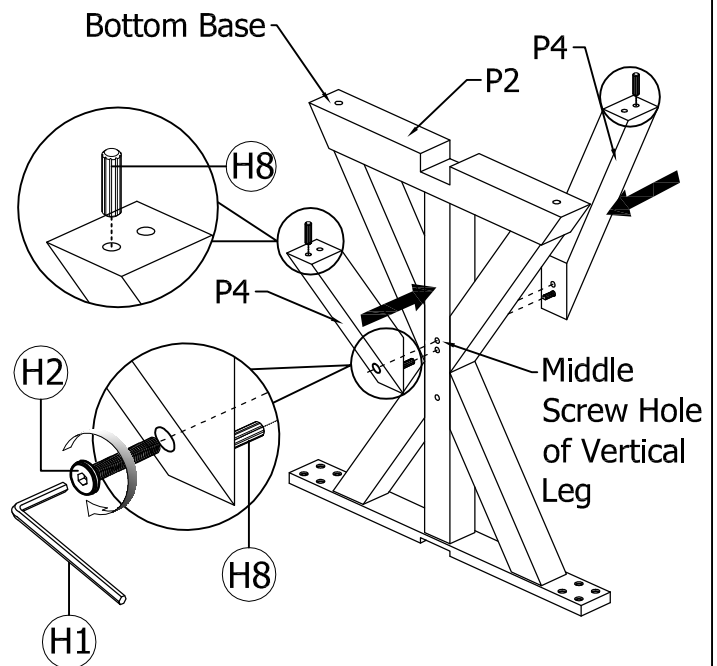

STEP 2

 - Attach Leg Bottom (P5) onto the assembly from STEP 1 as shown. Make sure (P5) is attach to (P4) via Wood Dowel on (P4) and align the screw holes on each part.
- Insert JCBC Screw (H4) fitted with Spring Washer (H5) into center screw holes of Leg Bottom (P5) as shown. Use Allen Key (H1) to drive (H4). Do not tighten completely until both screws are in place.
- Insert CSK Screw (H7) into screw holes located at both end of Leg Bottom (P5)
Use a Phillips Screwdriver to drive (H7) into (P4).

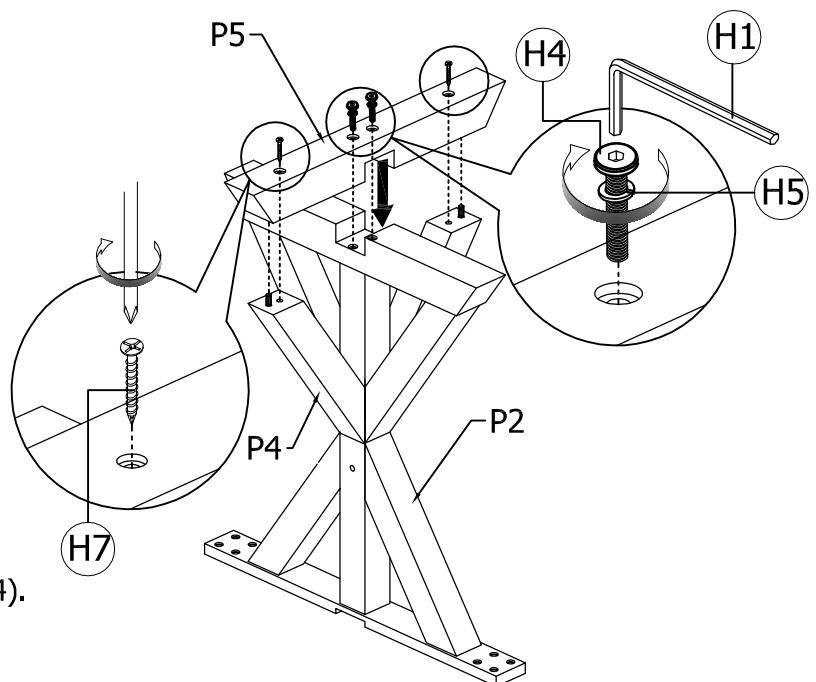


ASSEMBLY INSTRUCTIONS

DINING TABLE


STEP 3

 - Turn the assembly From STEP 2 right-side up as shown to stand on its Bottom Base.
- Place Leg Support (P4) on Table Leg (P2) as shown and aligning the middle screw holes on each part.
- Insert Wood Dowel (H8) into designated holes at the end of Leg Support (P4). Next, attach (P4) onto Table Leg (P2) as shown and align screw holes on each part.
- Insert JCBC Screw (H2) through the screw hole at bottom-end of (P4) into the screw hole at the middle of the Vertical Leg. Use Allen Key (H1) to drive (H2) into (P2).

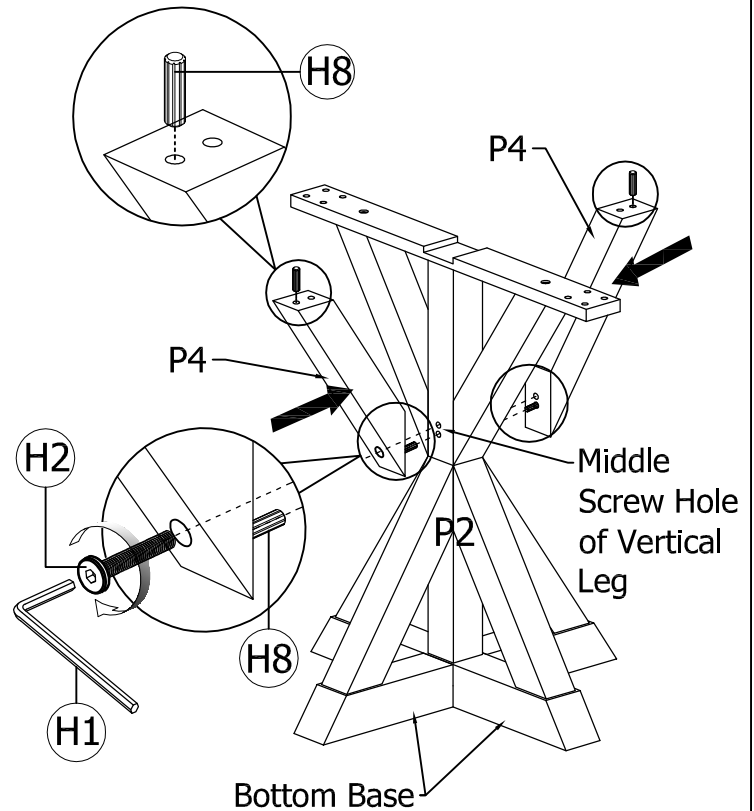

STEP 4

 - Attach Table Support (P3) onto the assembly from STEP 3 as shown. Make sure (P3) is attach to (P4) via Wood Dowel on (P4) and align the screw holes on each part.
- Insert JCBC Screw (H3) fitted with Spring Washer (H5) into center screw hole of Leg Bottom (P3) as shown. Use Allen Key (H1) to drive (H3). Do not tighten completely until both screws are in place.
- Insert CSK Screw (H7) into screw holes located at both end of Leg Bottom (P3). Use a Phillips Screwdriver to drive (H7) into (P4).

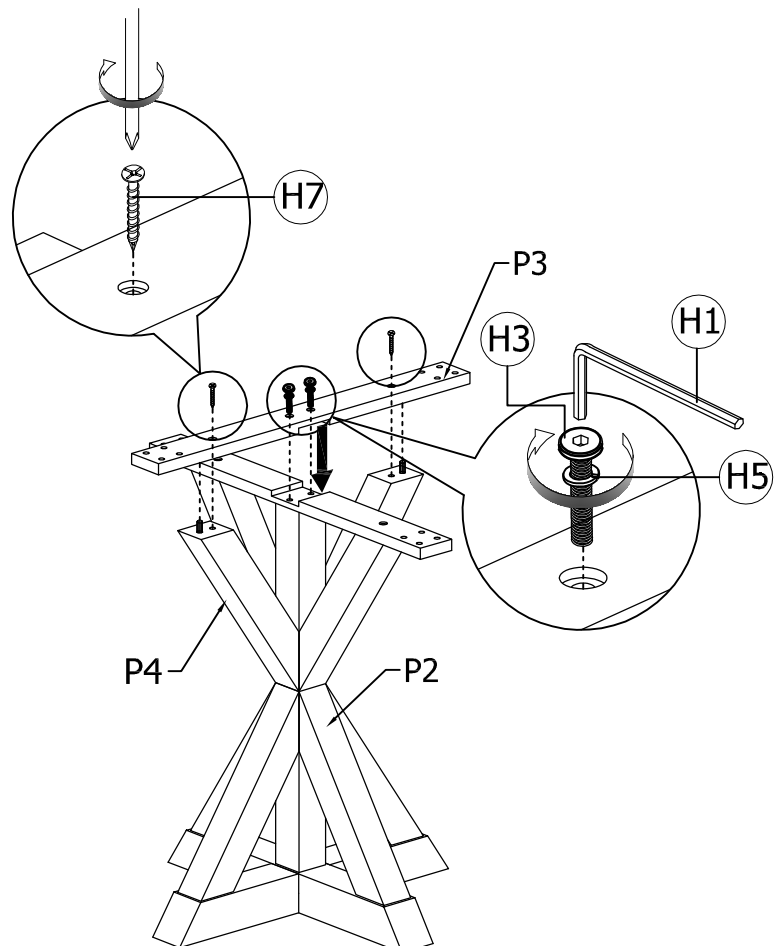

ASSEMBLY INSTRUCTIONS

DINING TABLE

STEP 5

a) With the assistance of another person, lay Table Top (P1) bottom-side up on a material that does not scratch or damage the part.

b) Position the assembly from STEP 4 upside-down. Align each arm of the Table Support accordingly to the marking on (P1). Insert CSK Screw (H6) into each screw holes on the Table Support (P3). Use a Philips Screwdriver to drive (H6) to fasten Table Top (P1) to (P3).

Do not over-tighten the screws.

c) Use fingers to screw in Adjustment Screw (H9) into screw holes on Leg bottom as shown.

*The assembly of the Table is complete.
Place the table right-side up.
Level the table with Adjustment Screw (H8) as needed.

