 


INSTALLATION

 
 
Product Manual

Version: 210247US-01-25A-AA

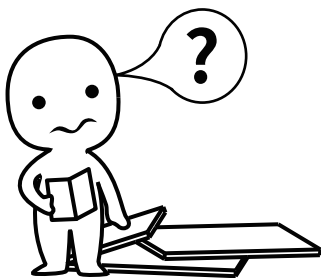


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

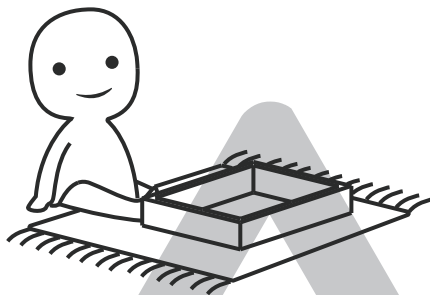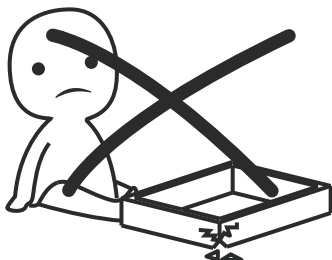



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

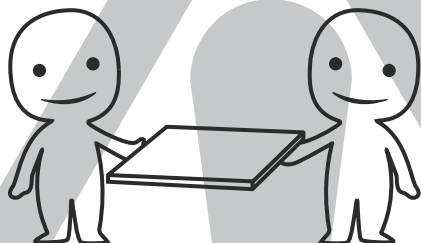

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

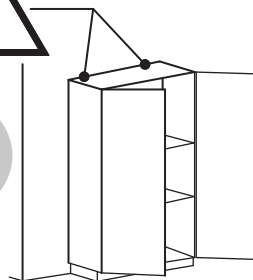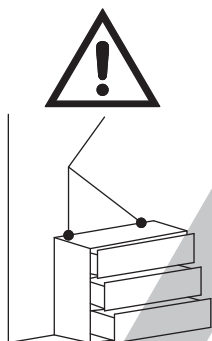

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.










Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



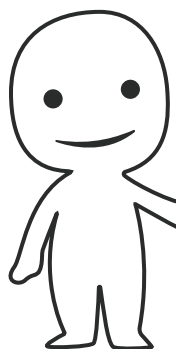


Please prepare the following tools

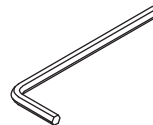  

         When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

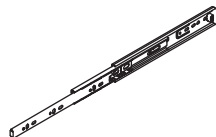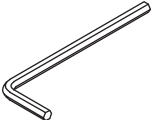A x 53  CRA0635A	B x 53  CRB1510A	C x 24  CRF0630A	D x 12  CRC0540A	E x 4 
F x 3 	G x 6  CRE0418A	H x 2  DGA861C	I x 48  CRD3514A	J x 3  #3508 12"
K x 44  CRG0612A	L x 8  CRG0640A	M x 2  CRE0445A	N x 4 	O x 4 
P x 4  CRG0616A	Q x 1 	R x 1 	S x 1 	

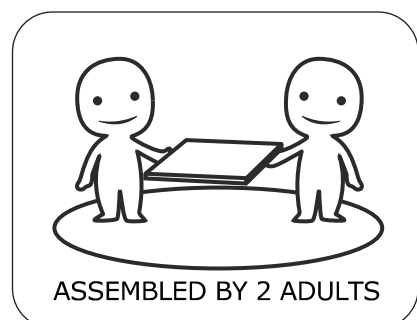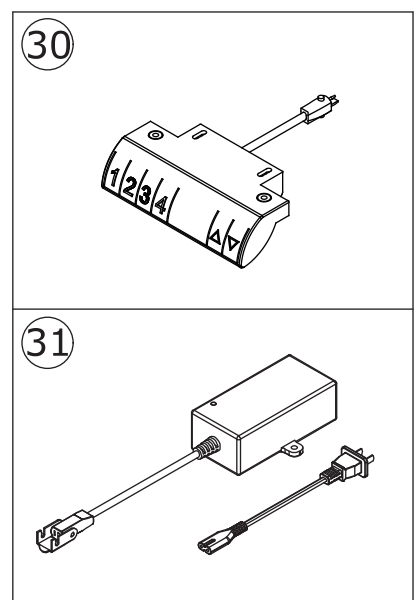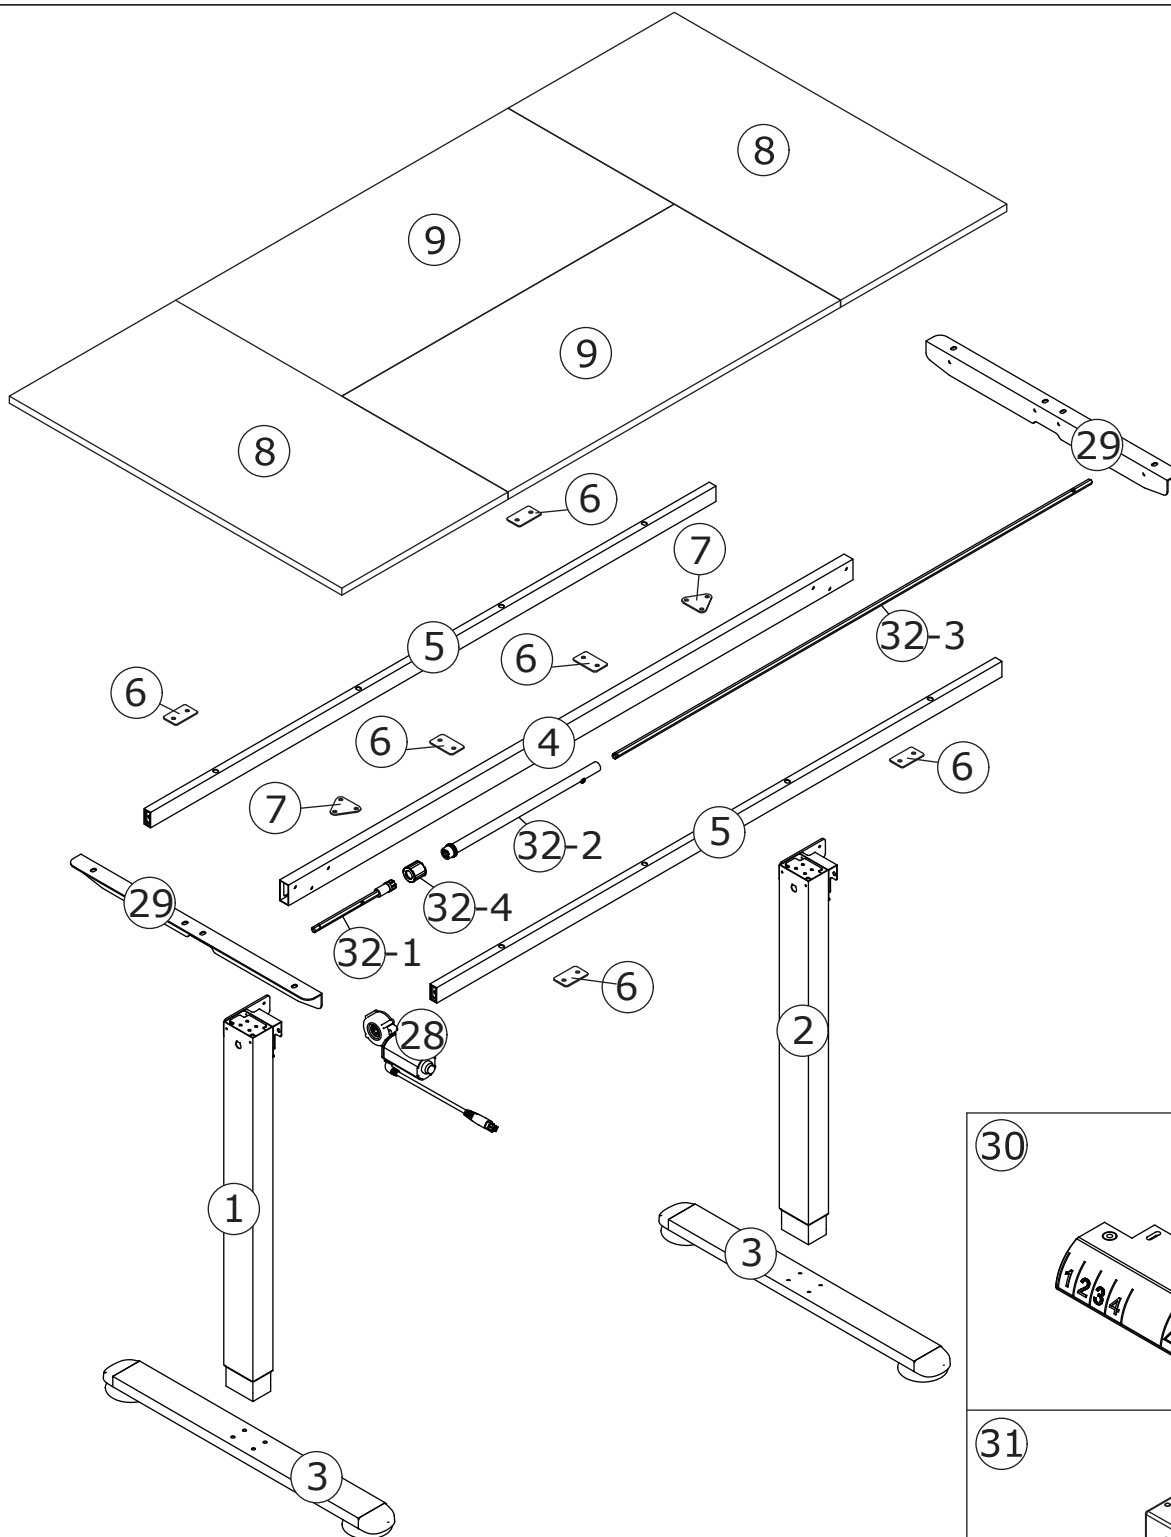   


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

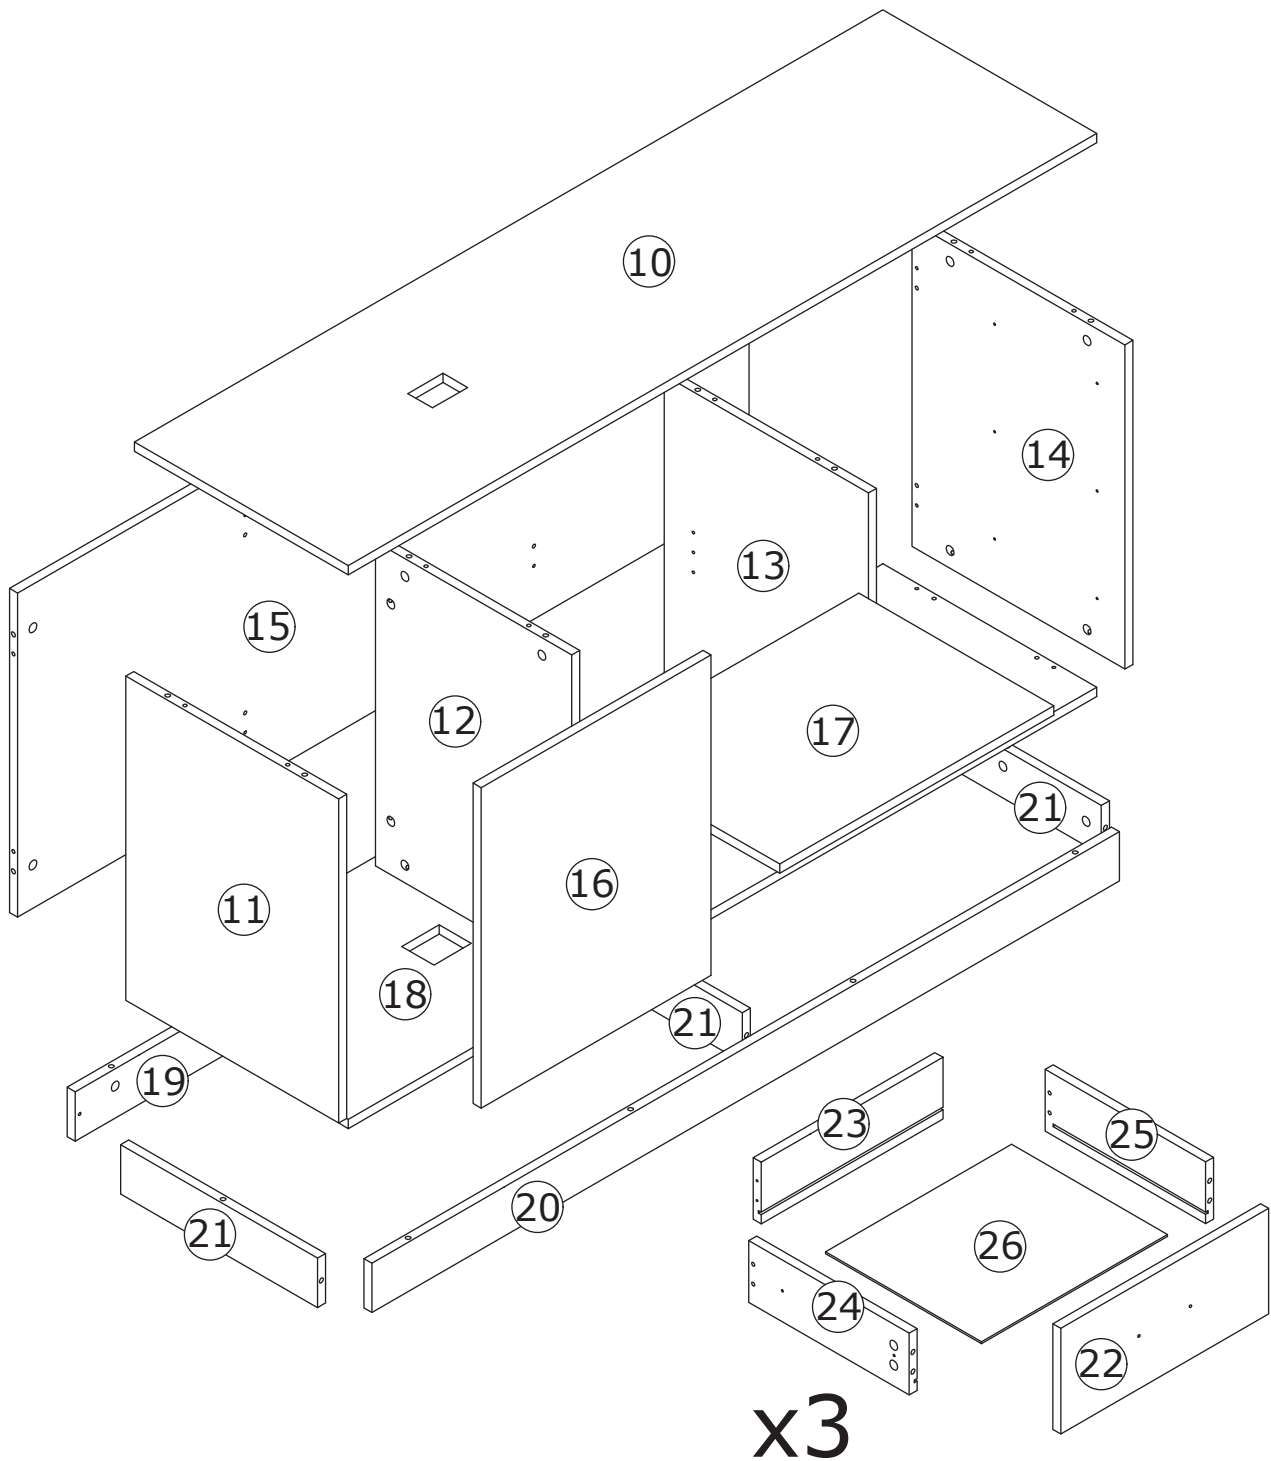


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

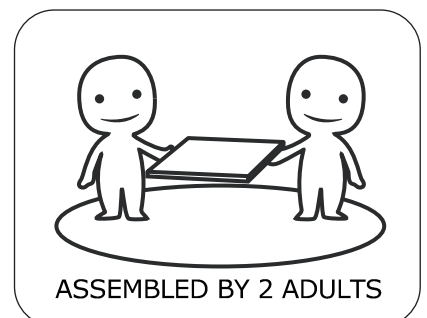


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

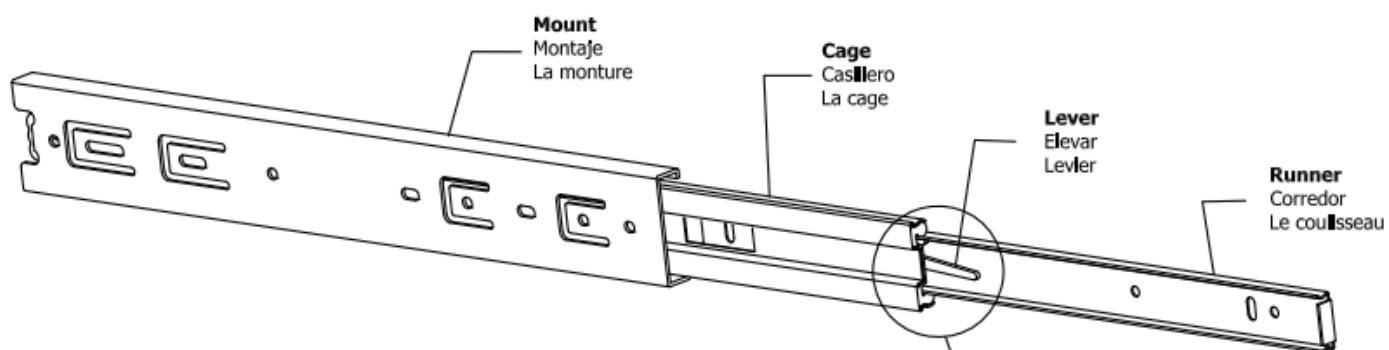

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

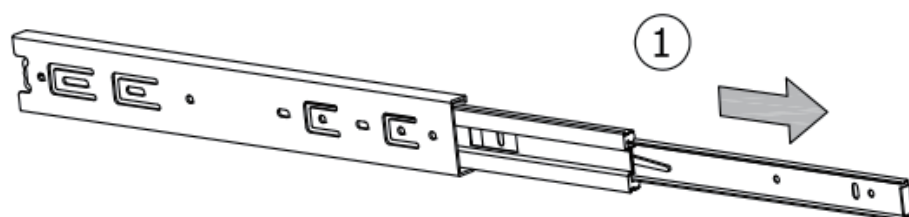



 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

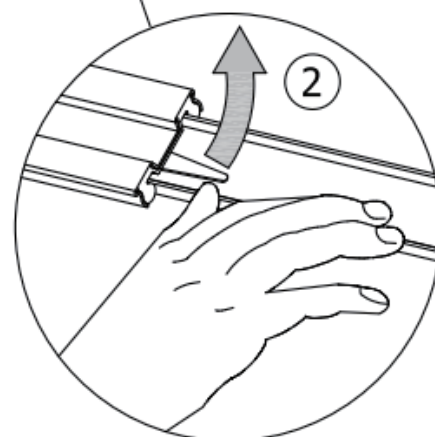

 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

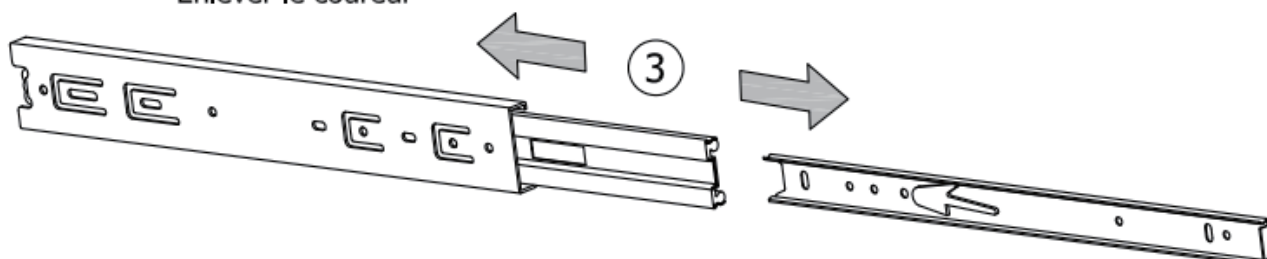





1

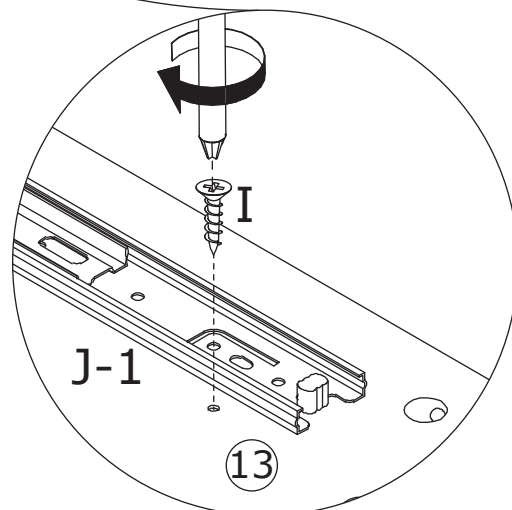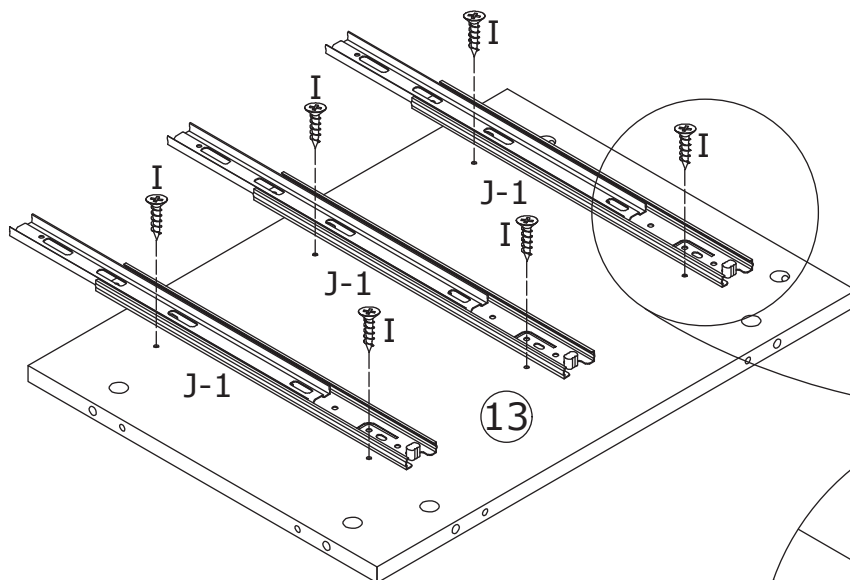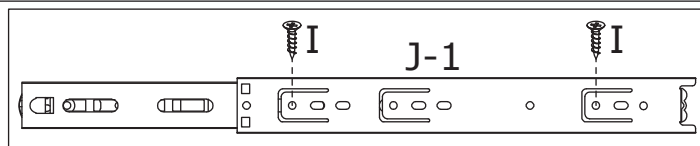   

 Fix rail(J-1) to board 13 and 14 with screw(I) as shown.


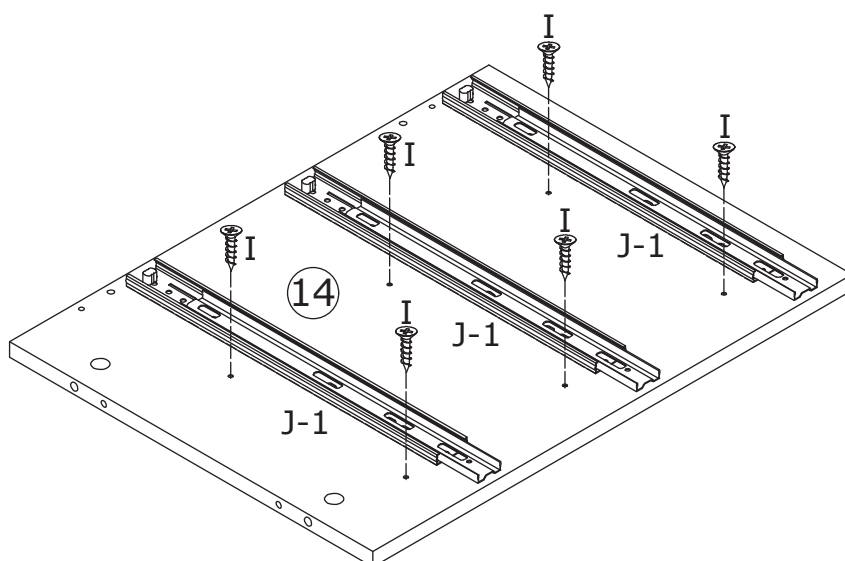


2

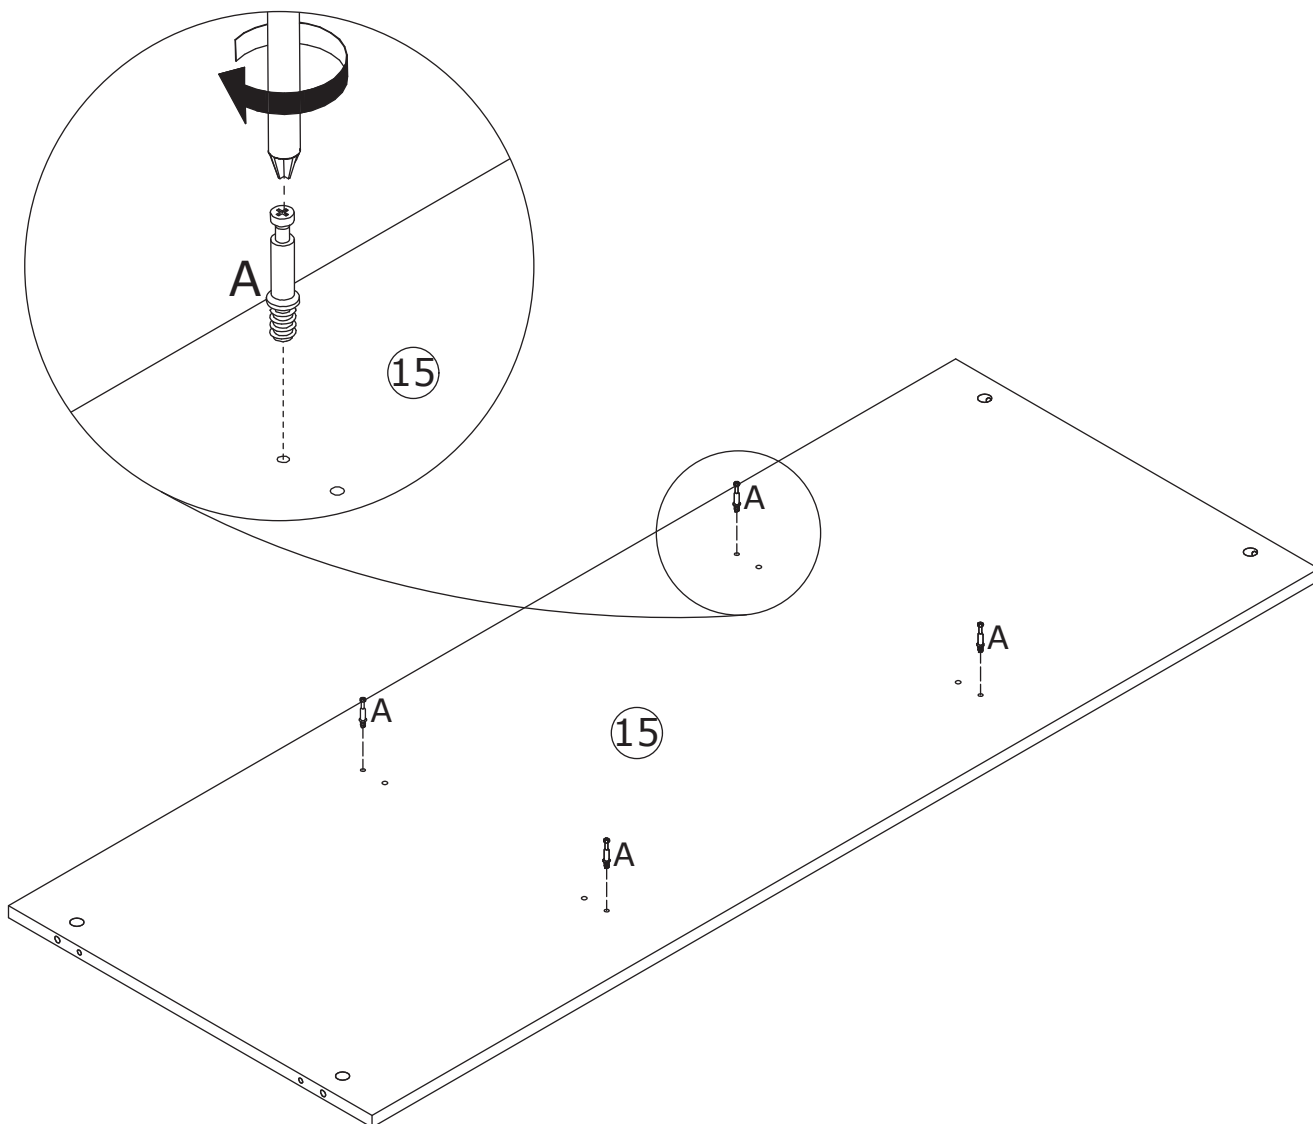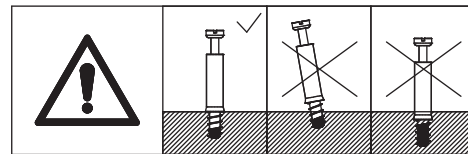   
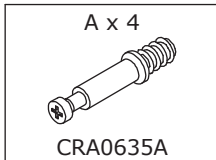 


Screw eccentric rod(A) into board 15 as shown.

  3

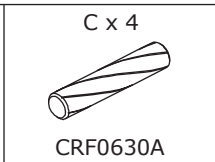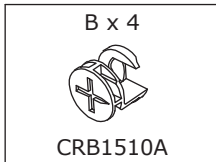

  Attach board 12 and 13 to board 15 using wooden dowel(C), add cam lock(B) into board 12,13 and turn clockwise to tighten as shown.


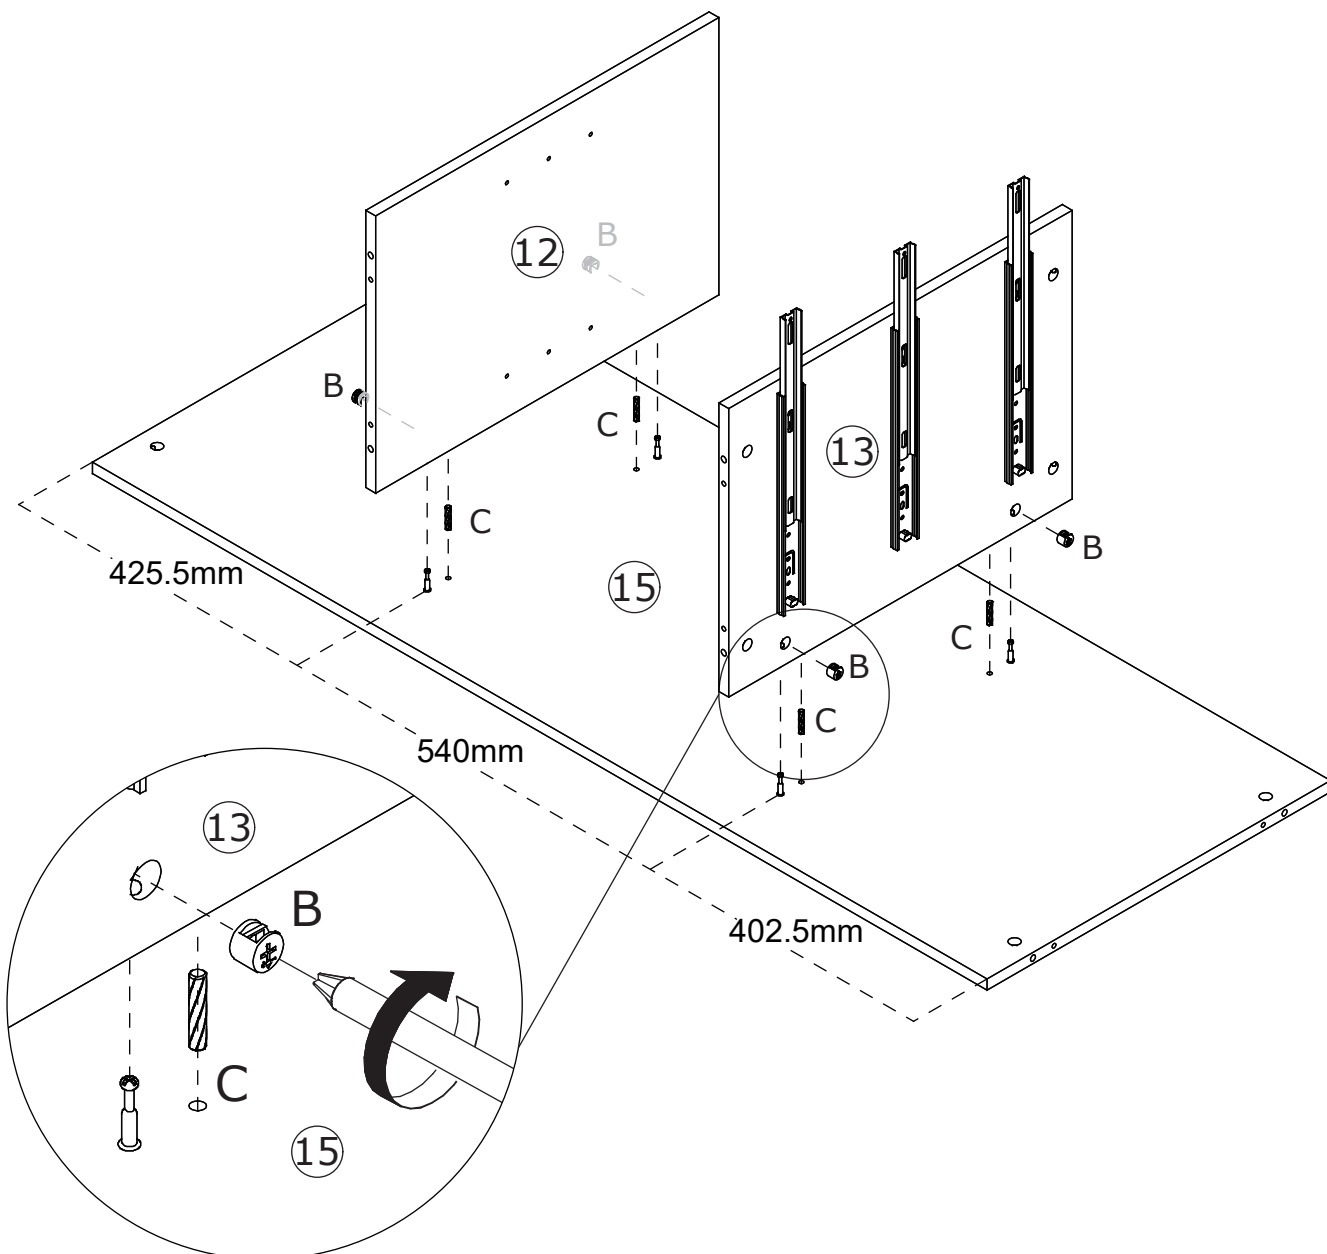
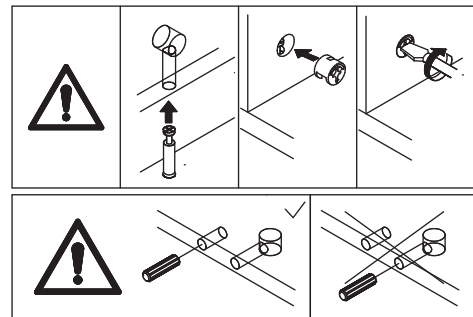


4



A x 4



 
 
 
CRA0635A

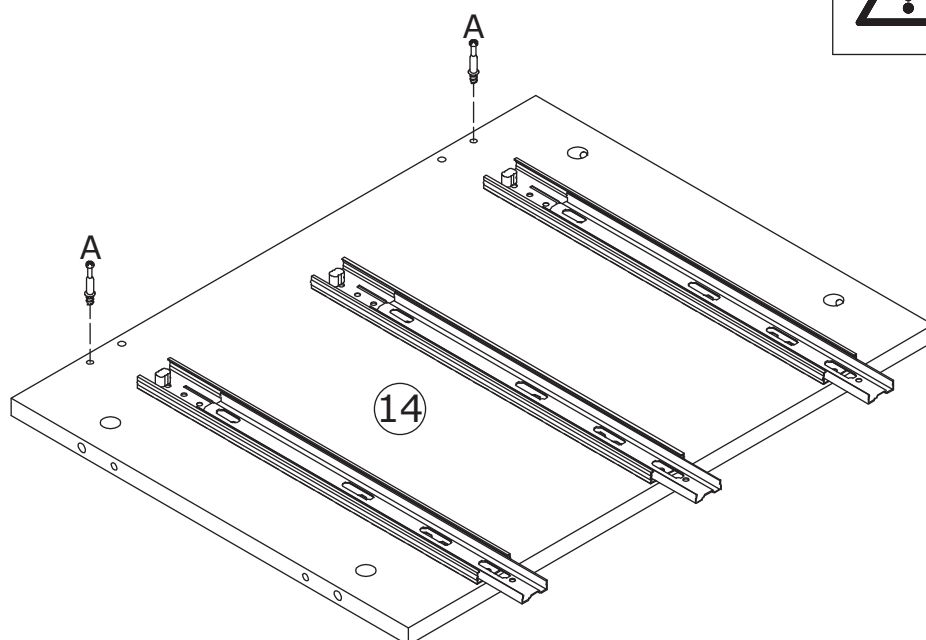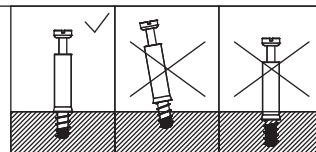

  
Screw eccentric rod(A) into board 11 and 14 as shown.

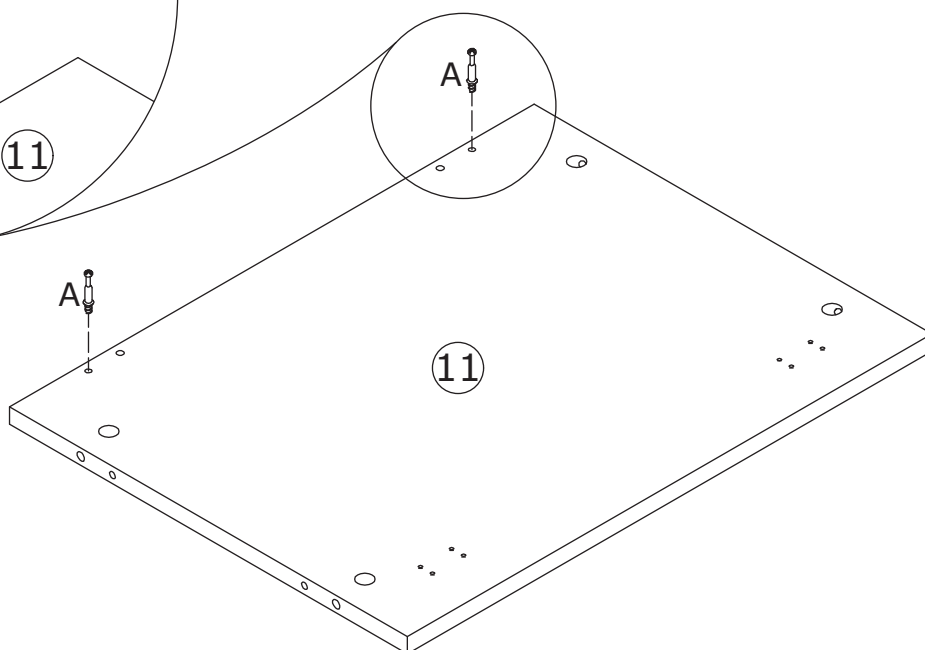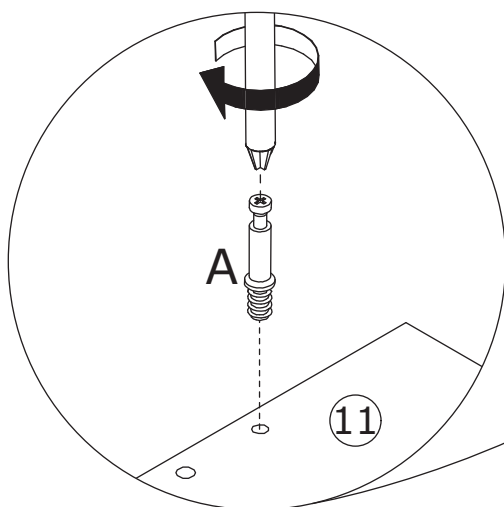





5

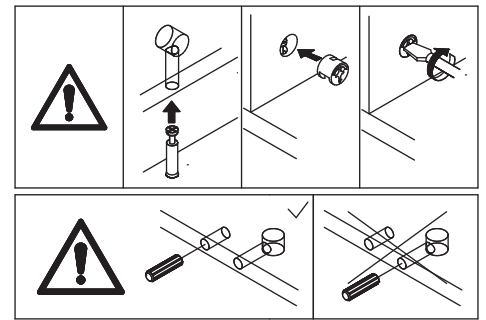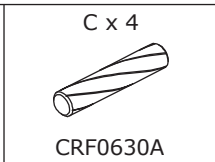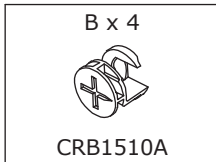   

 Attach board 11 and 14 to board 15 using wooden dowel(C), add cam lock(B) into board 15 and turn clockwise to tighten as shown.



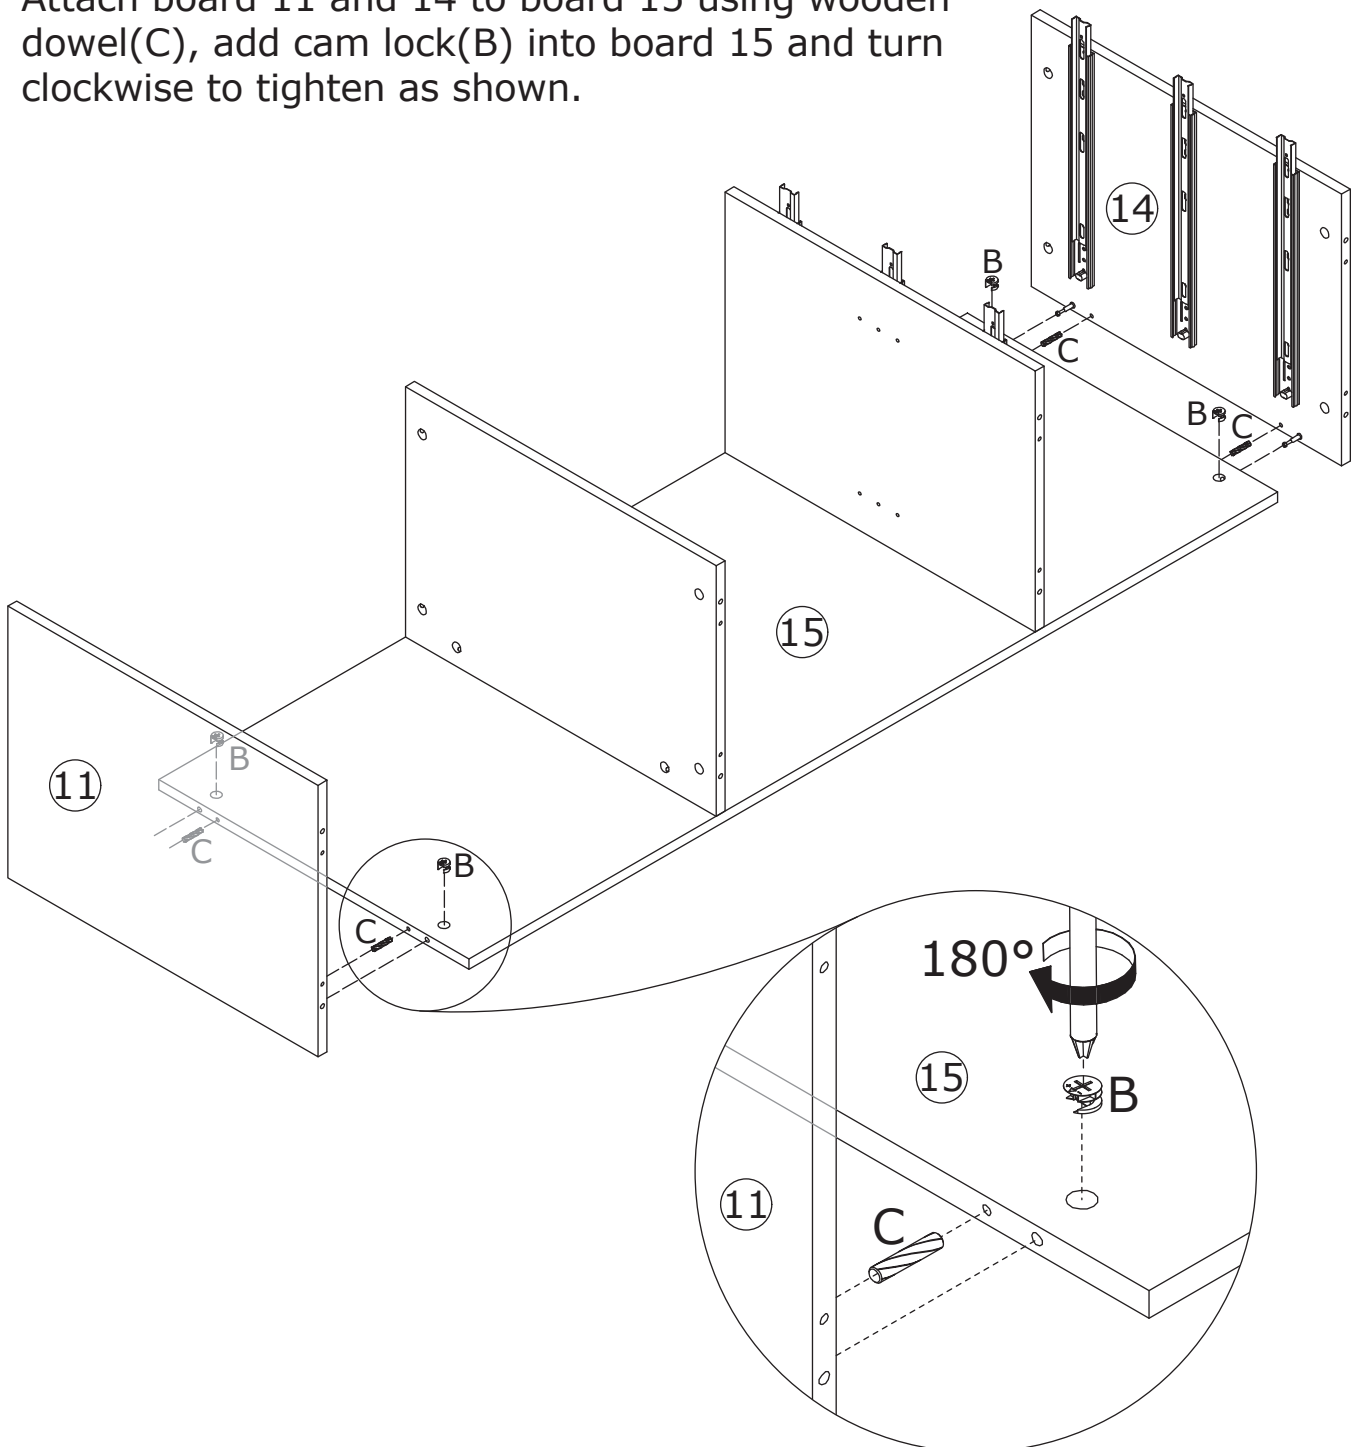


6

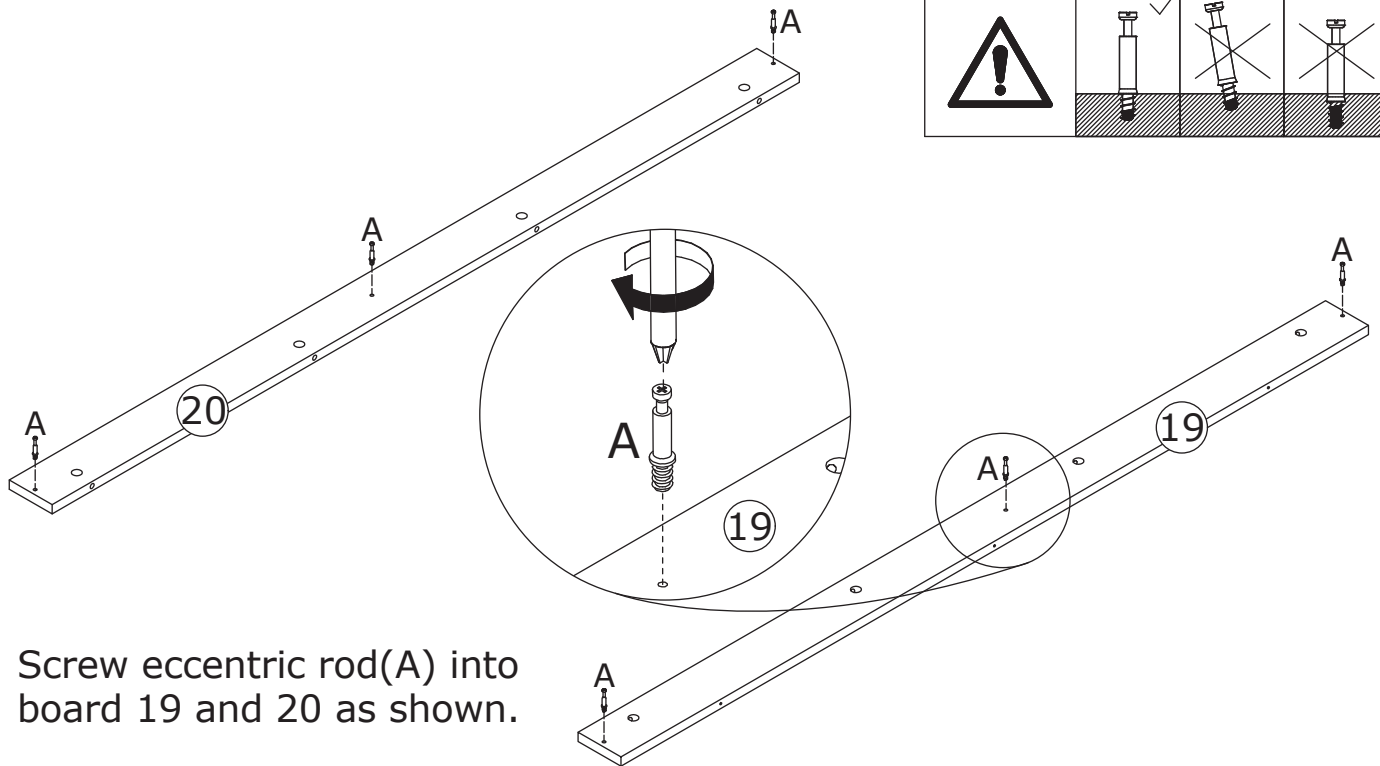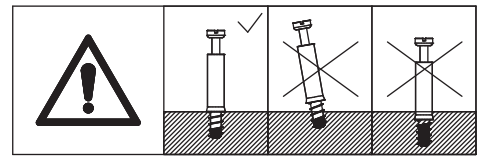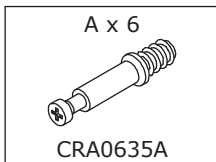    


Screw eccentric rod(A) into board 19 and 20 as shown.

   7

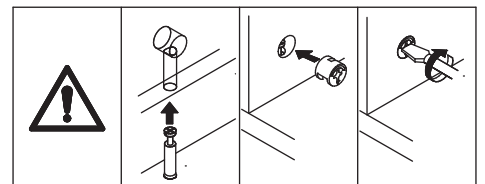

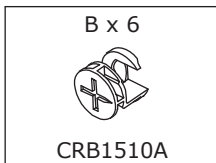


 Connect board 19 and 20 to board 21, add cam lock(B) into board 21 and turn clockwise to tighten as shown.

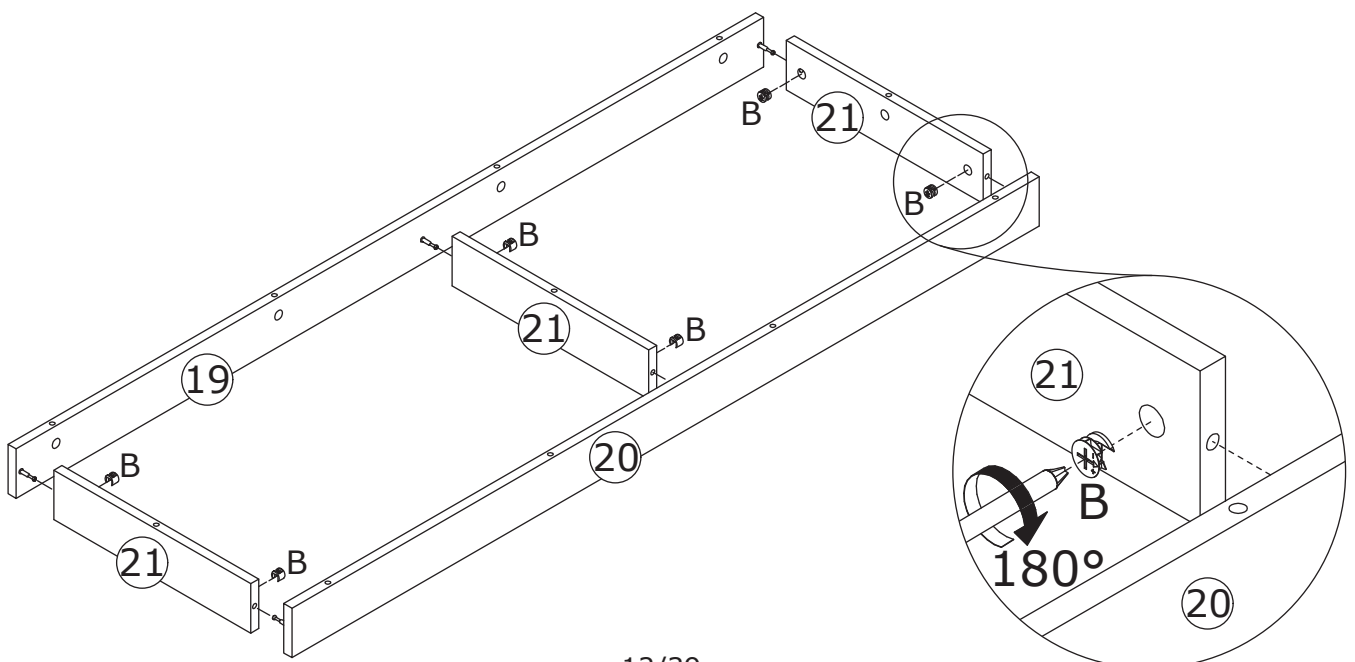


8

   A x 19
CRA0635A

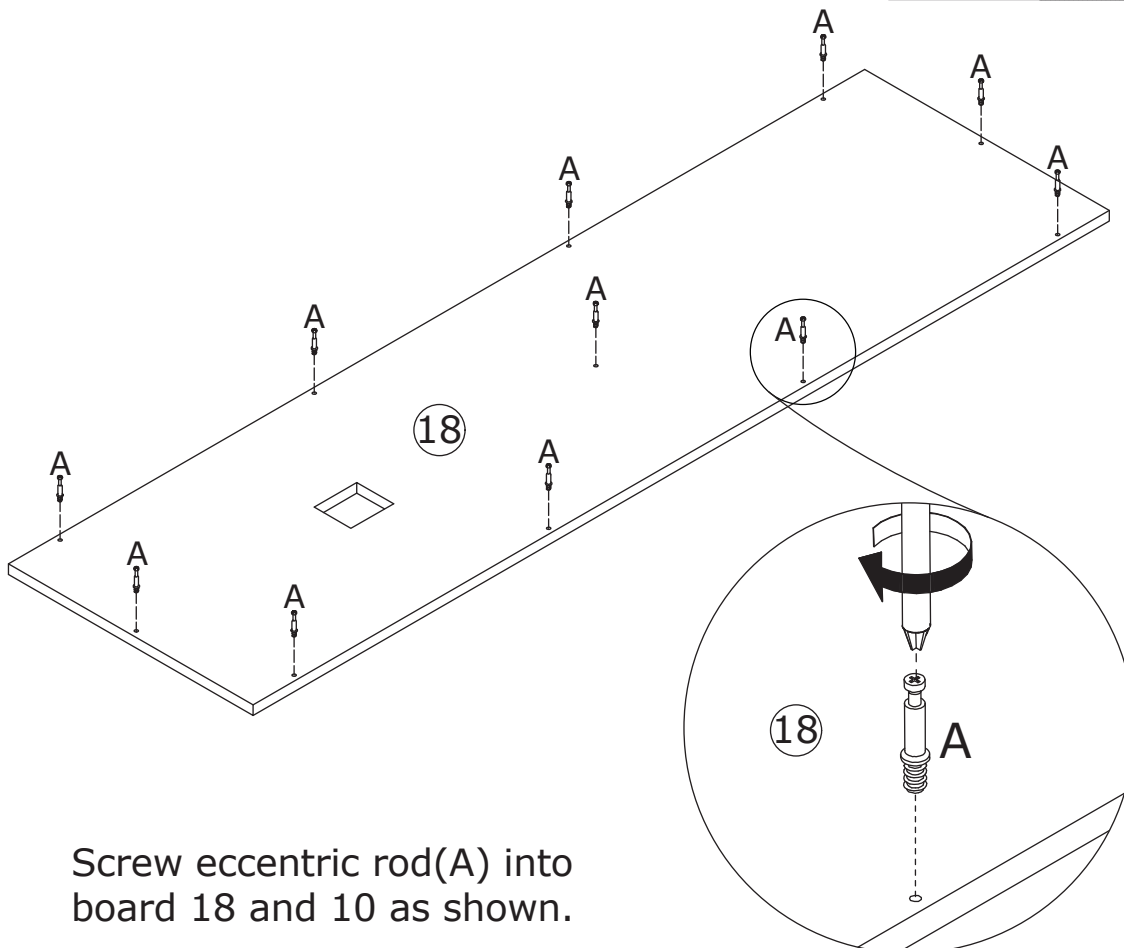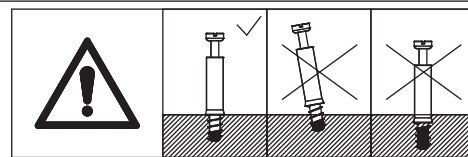

 Screw eccentric rod(A) into board 18 and 10 as shown.

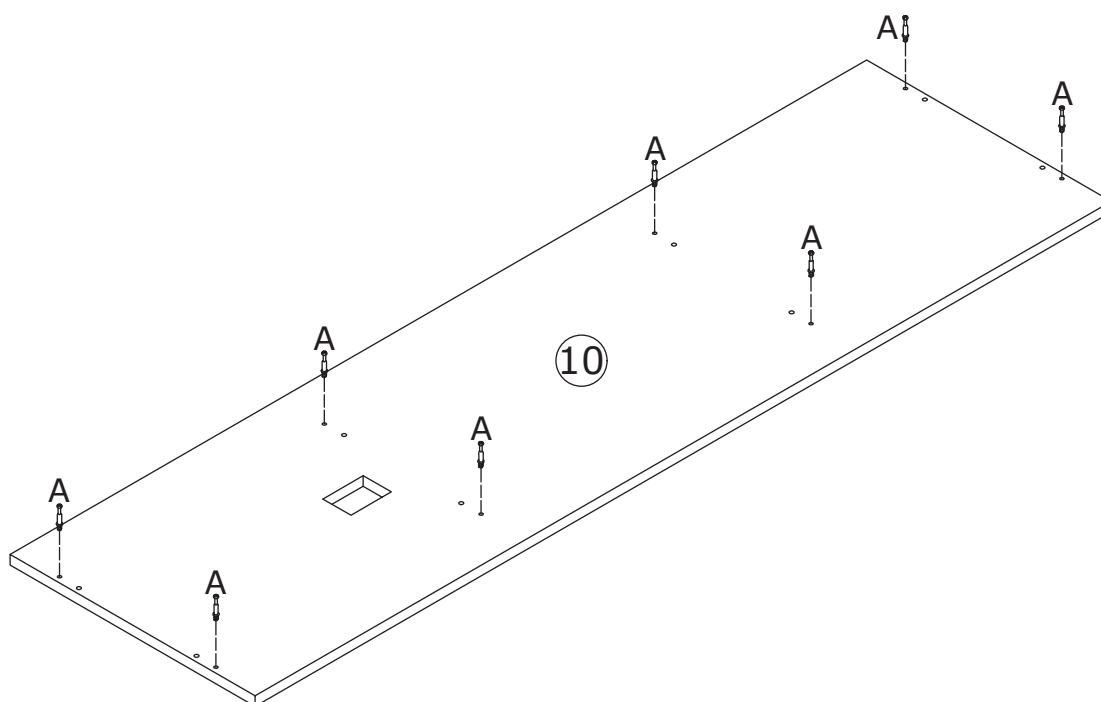


9




B x 11



 CRB1510A




   Attach the component to board 18,
add cam lock(B) into and turn clockwise
to tighten as shown.

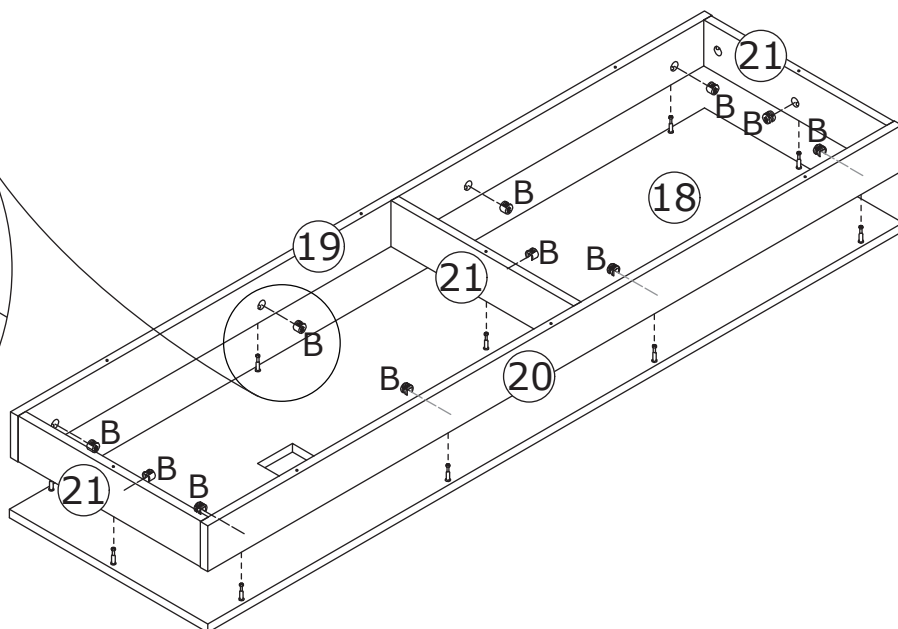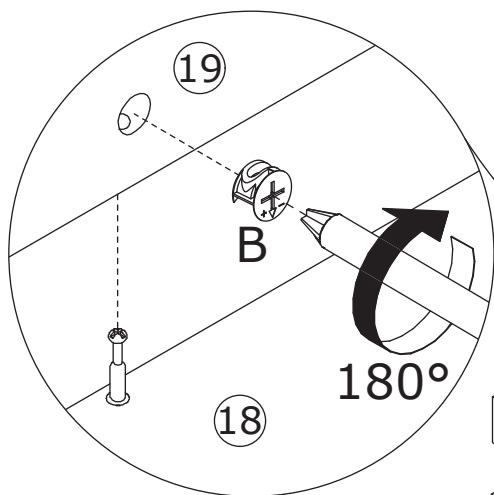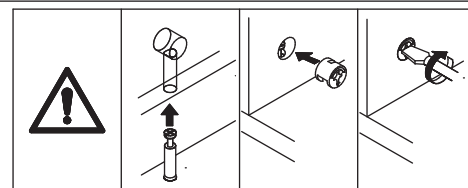


10


 
A x 8



CRA0635A

 

  Screw eccentric rod(A) into board 18 as shown.

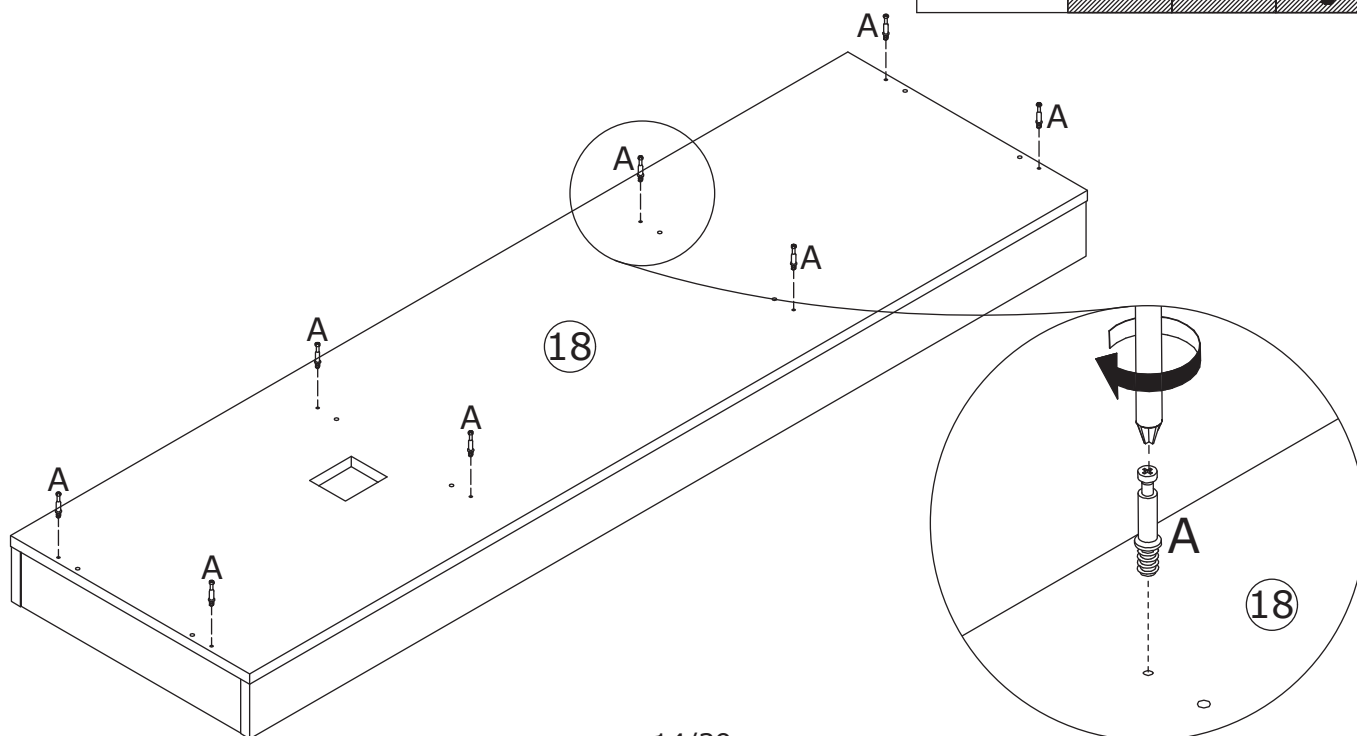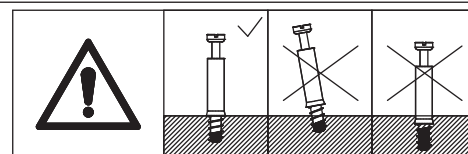


11

B x 8




CRB1510A


 
C x 8





CRF0630A

 

 
 
Attach board 18 to board 11, 12, 13 and 14 using wooden dowel(C), add cam lock(B) into and turn clockwise to tighten as shown.

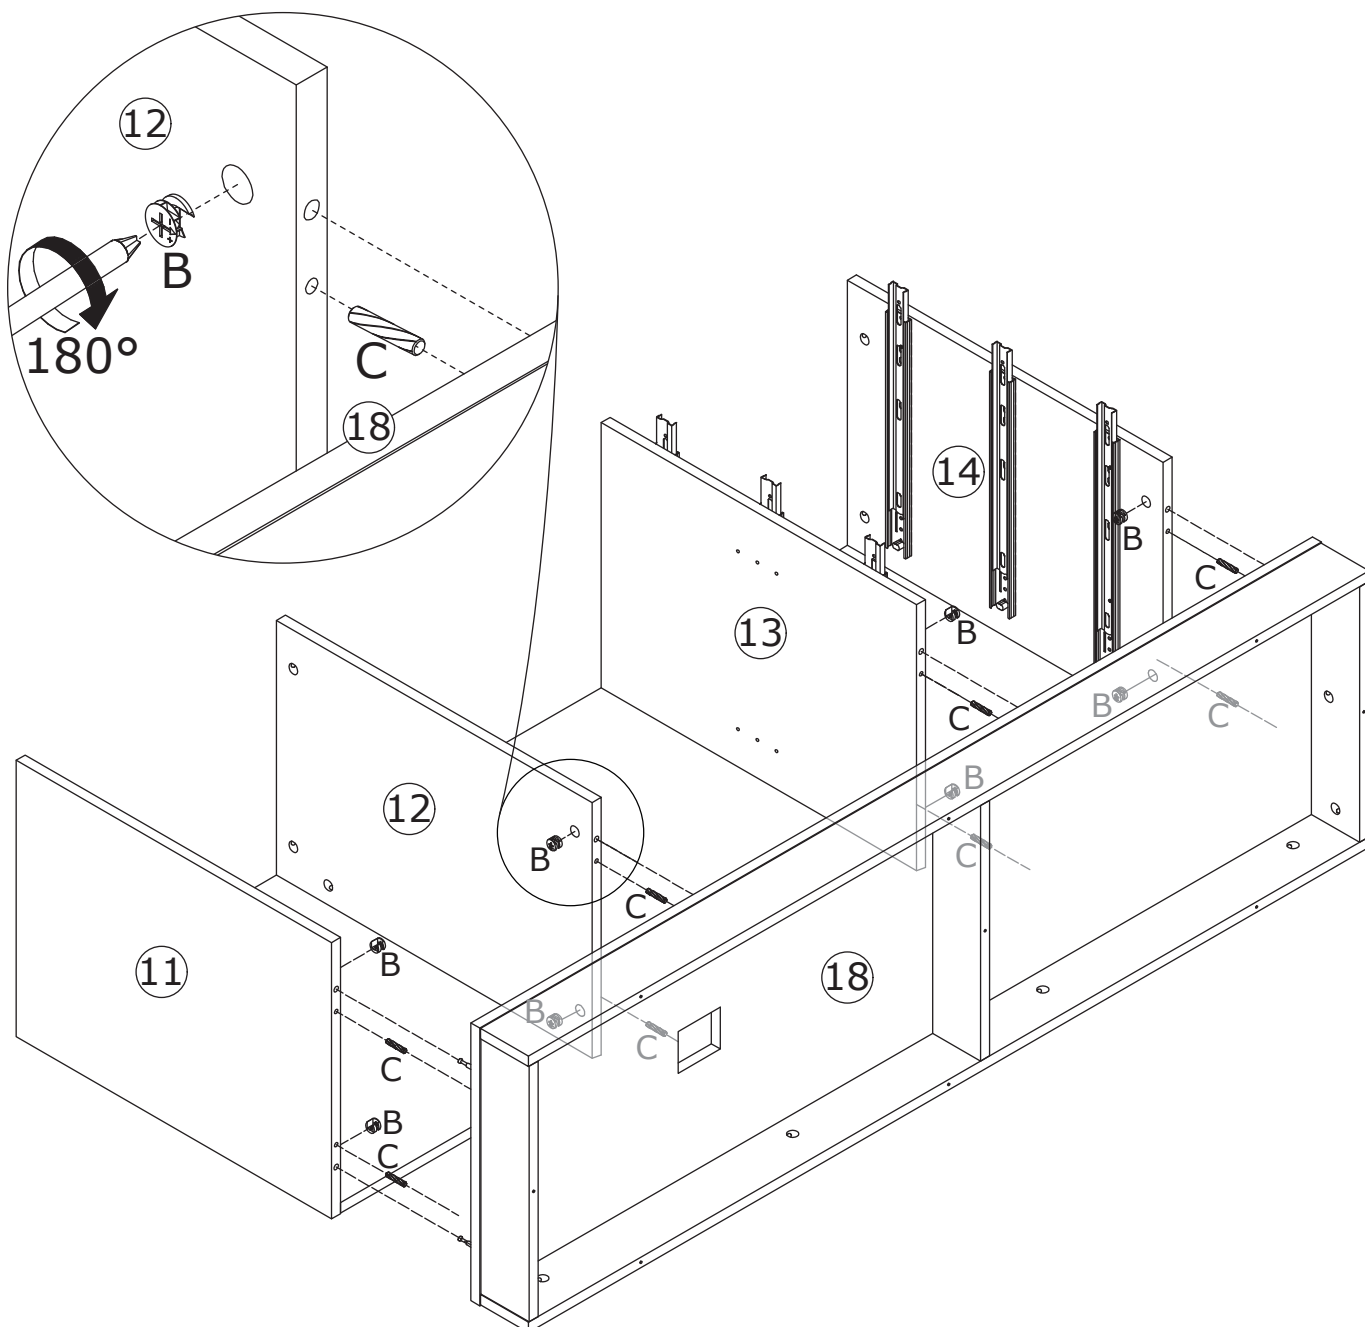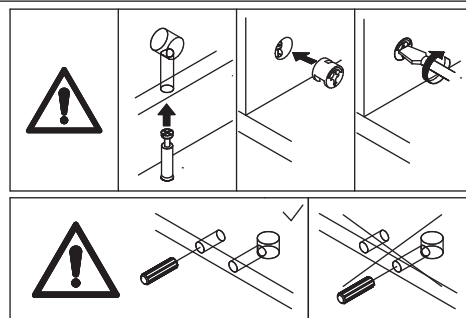

12

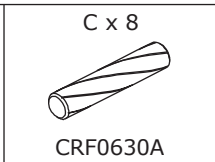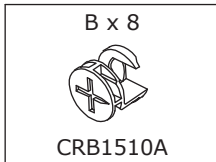  


  Cover board 10 to the top using wooden dowel(C), add cam lock(B) and turn clockwise to tighten as shown.

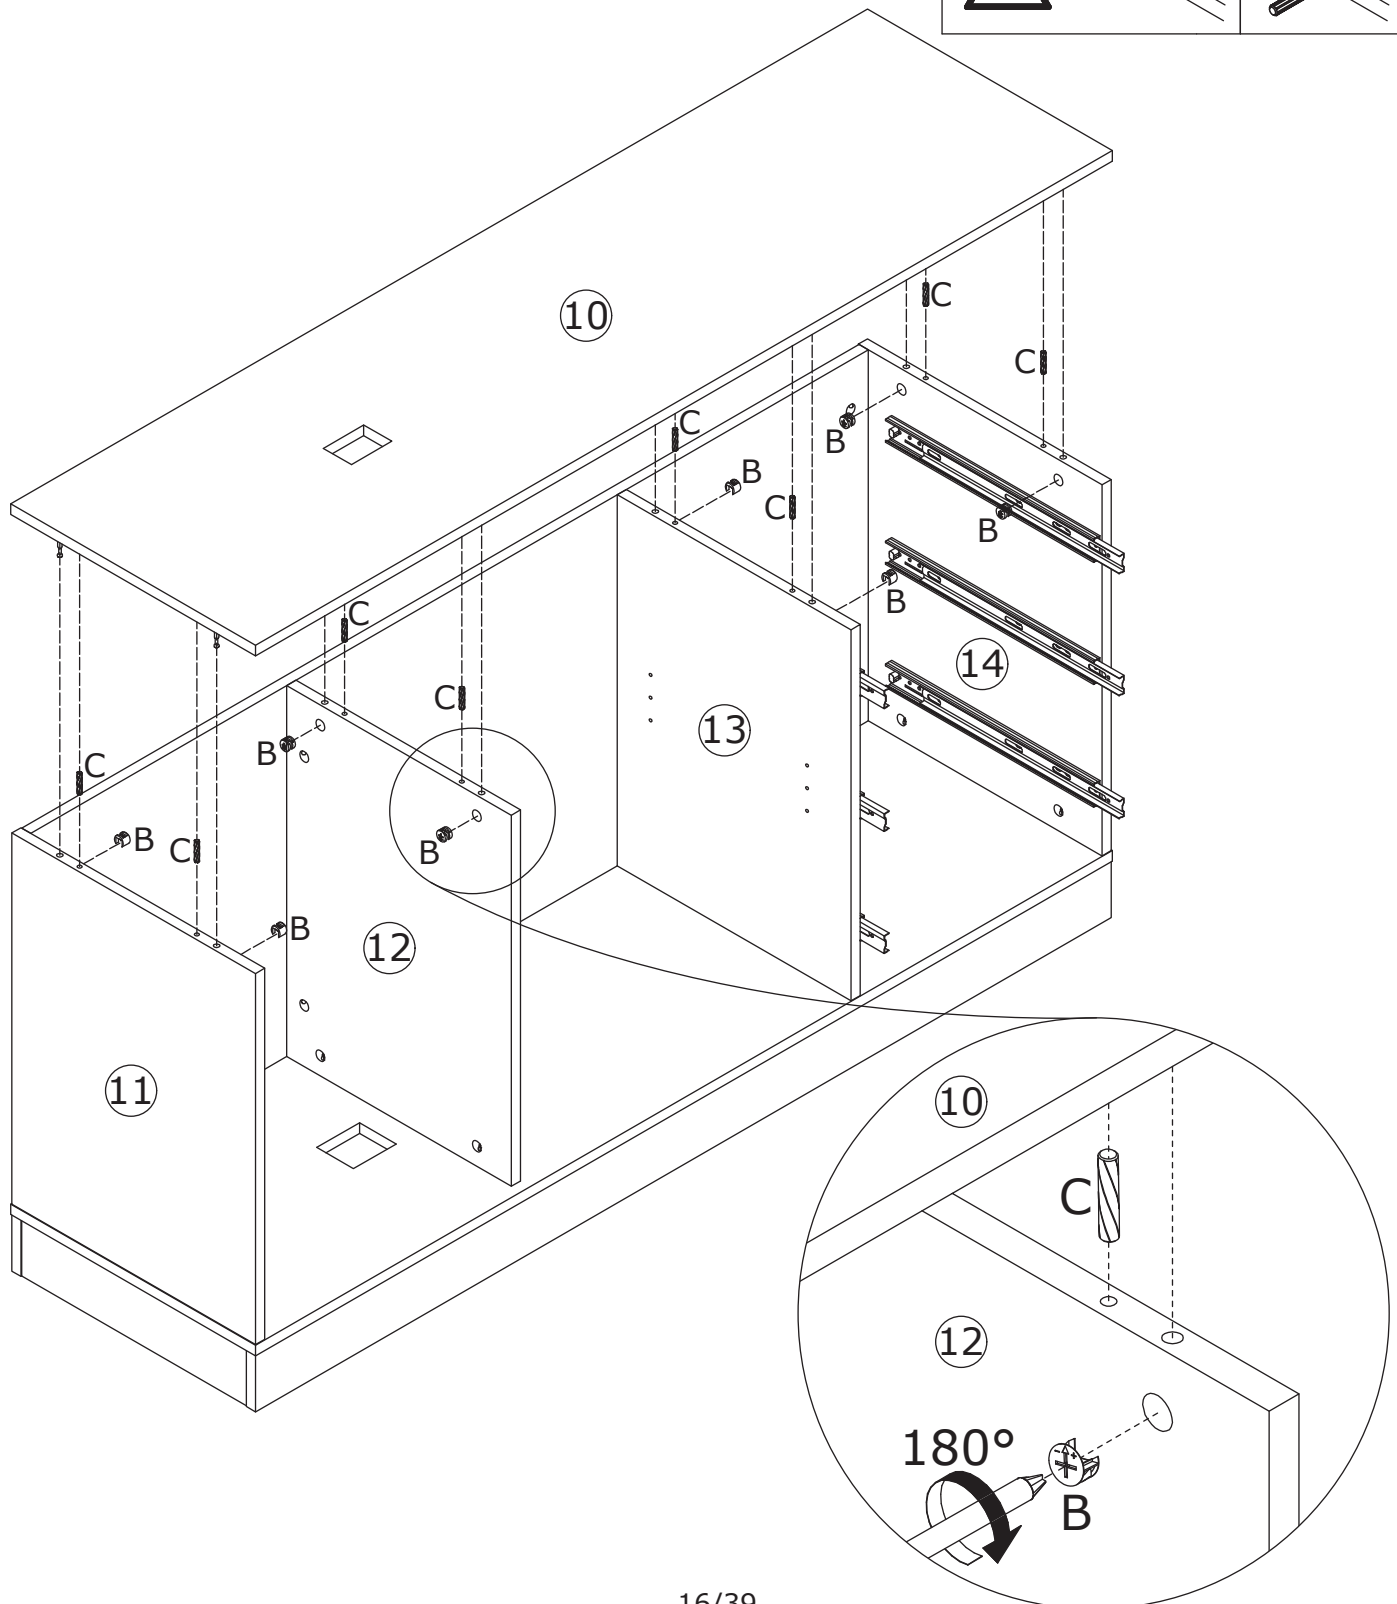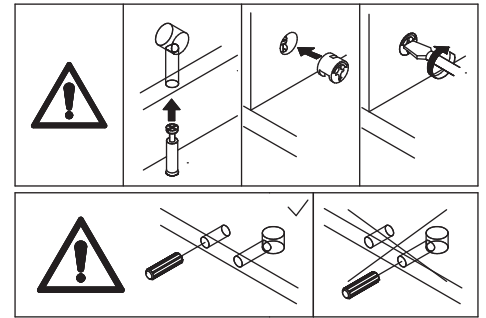

13

 Insert part 2 into the hole of board 10 at first.

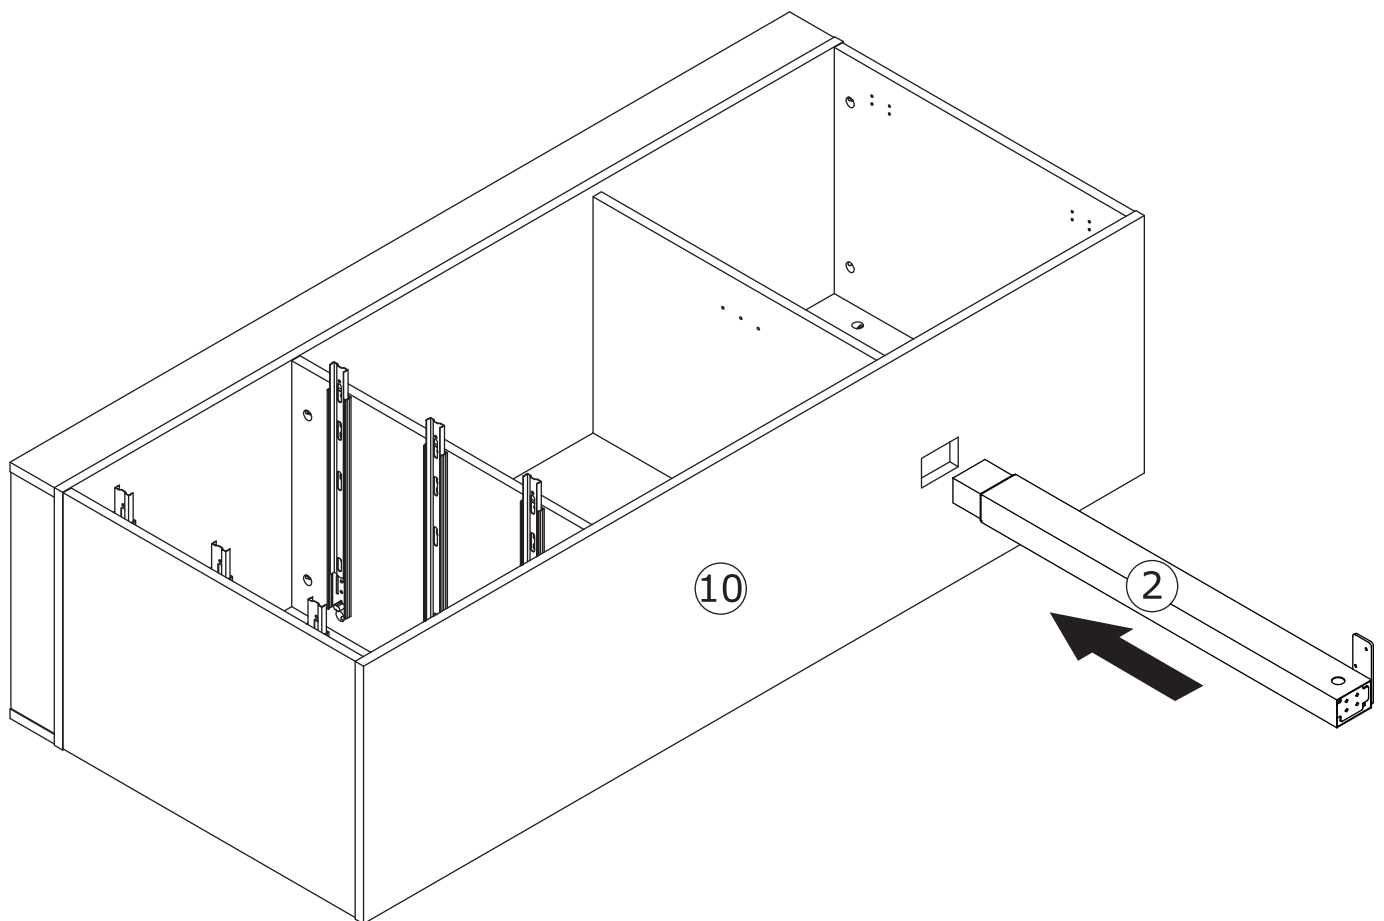

14

K x 4




CRG0612A


N x 2



 Q x 1





 Fix board 3 to part 2 using screw(K) as shown.
Rotate foot pad(N) into board 3 as shown.

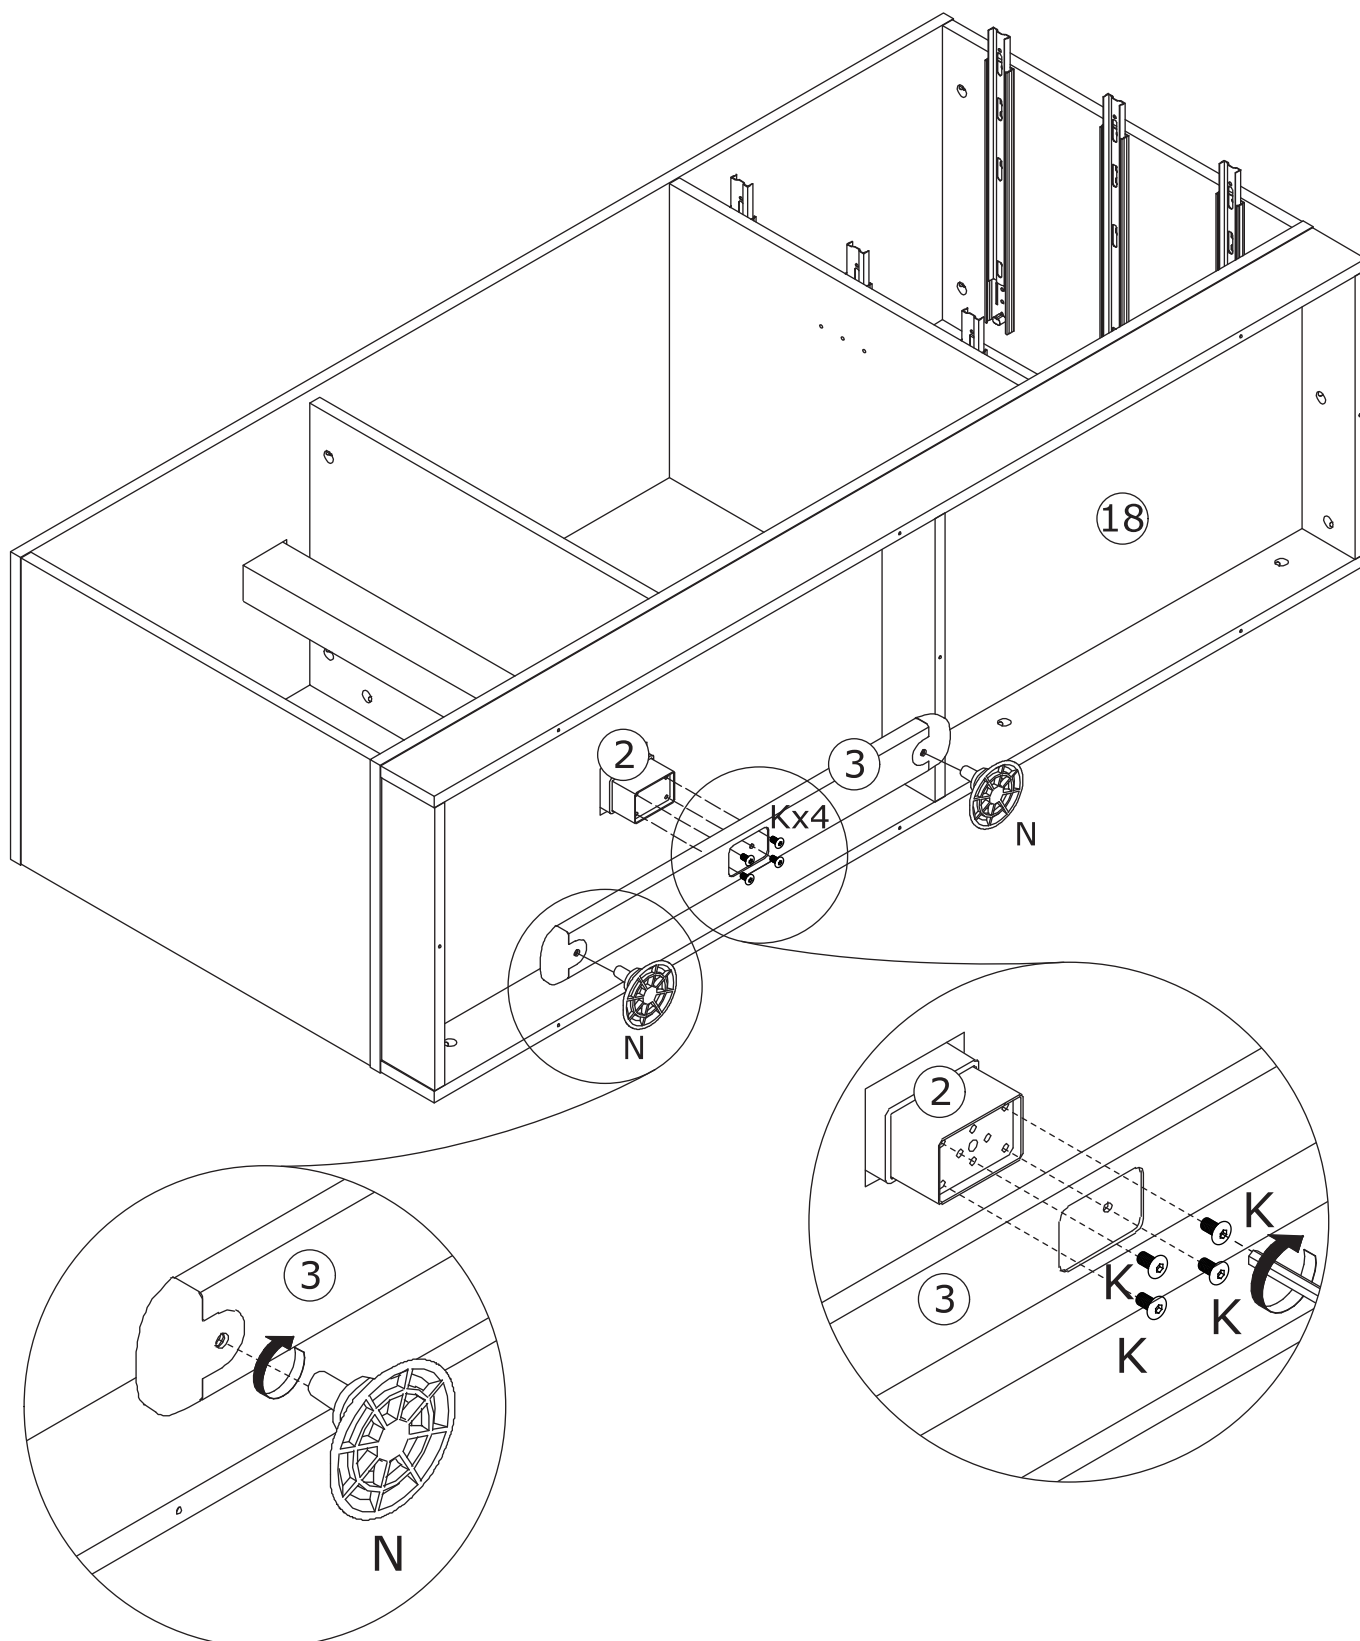

15

  E x 4

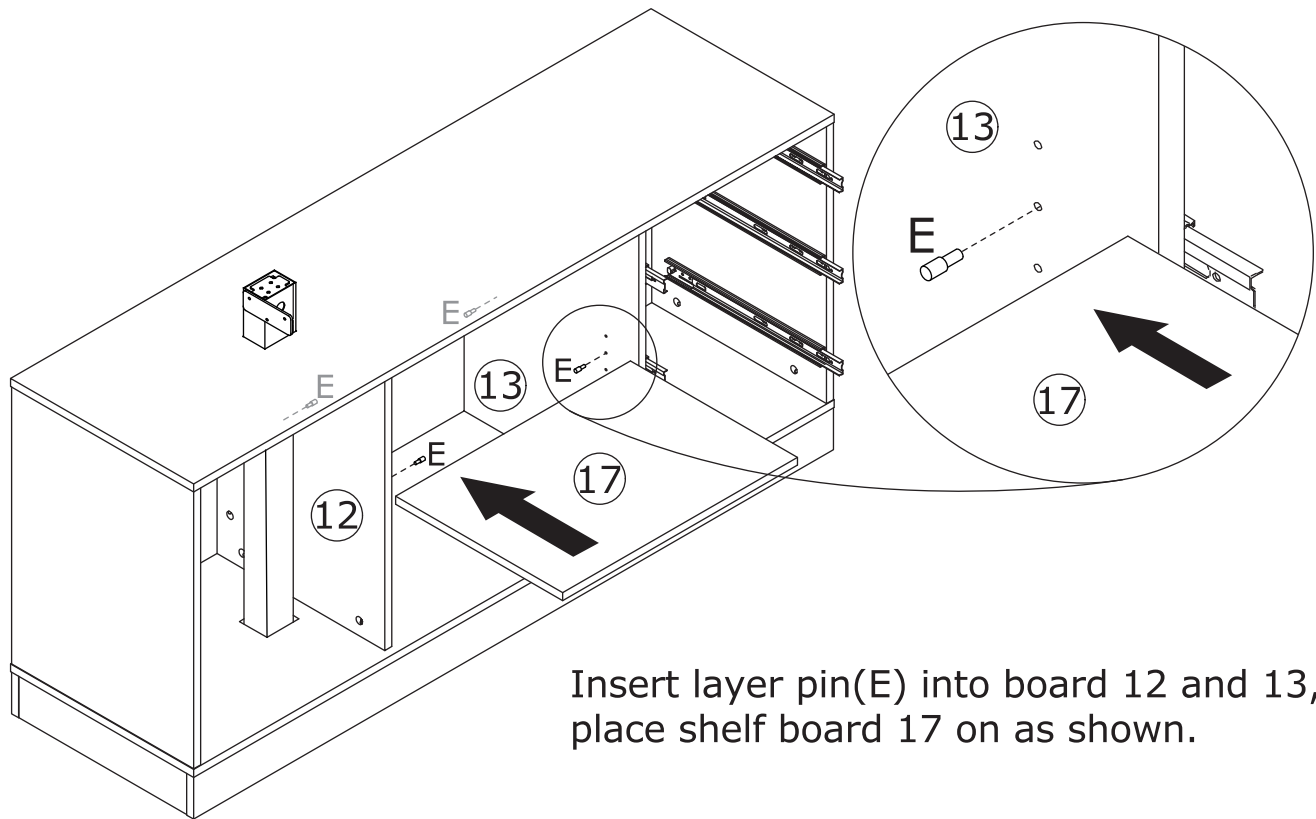

Insert layer pin(E) into board 12 and 13,
place shelf board 17 on as shown.

16

H x 2




DGA861C


I x 4



 CRD3514A



 Fix hinge(H) to board 16 with screw(I) as shown.

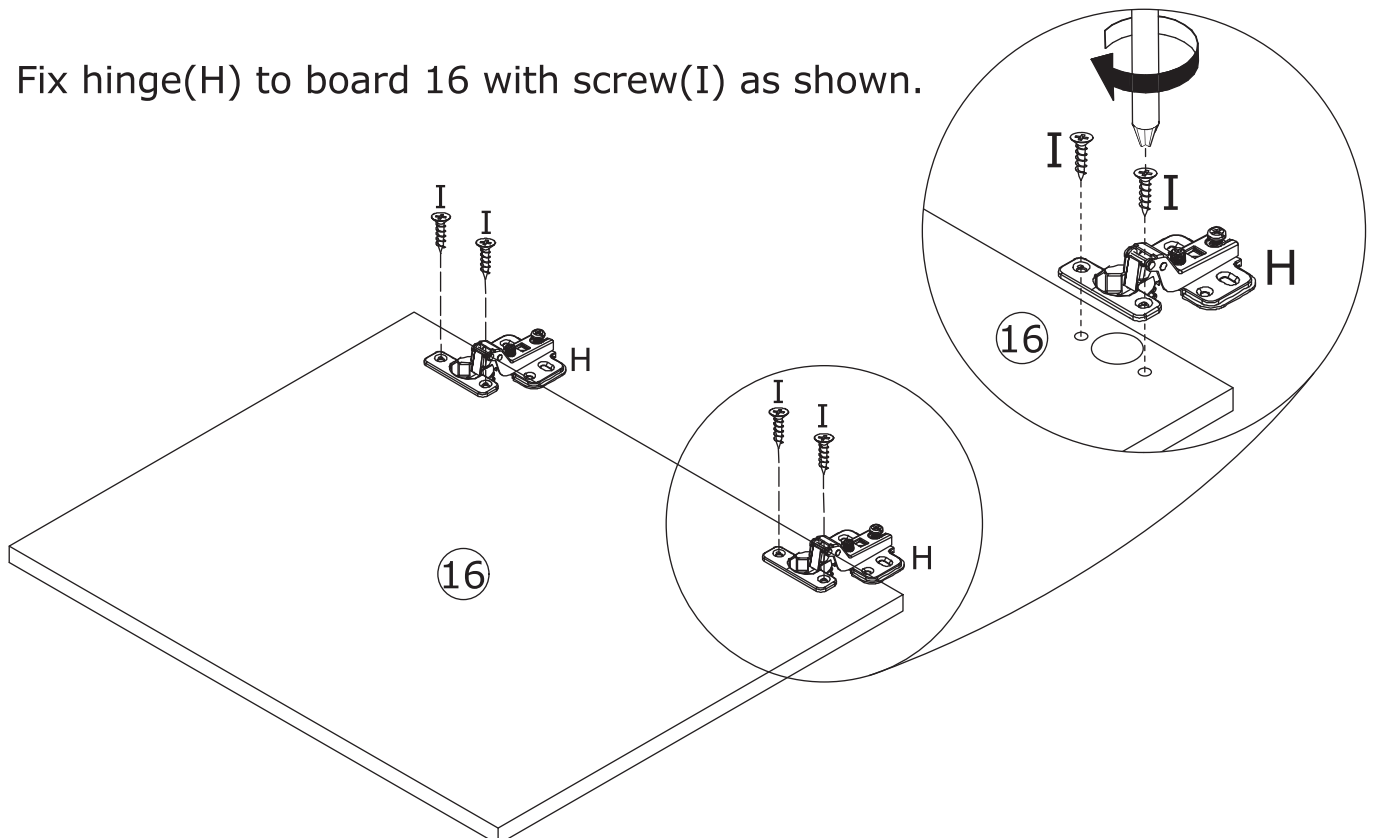


17


I x 8



 CRD3514A





 Assemble door 16 to board 11 by fixing hinge with screw(I) as shown.

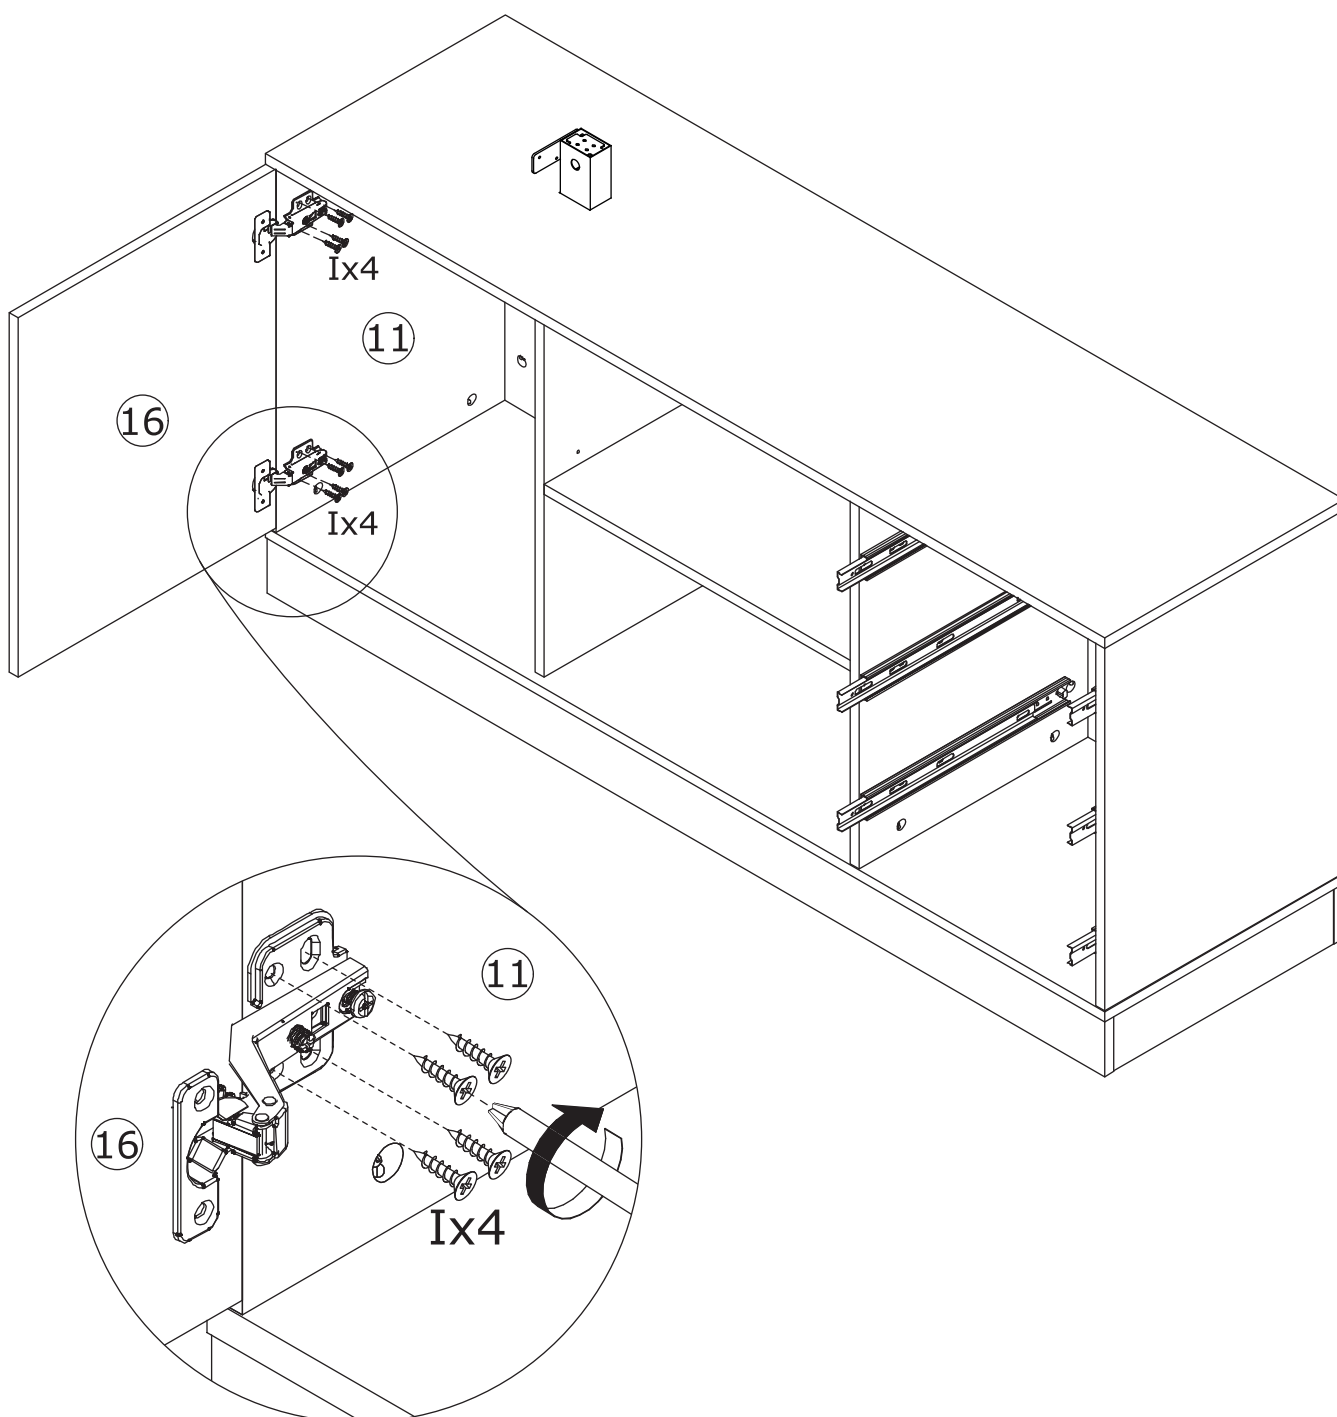



18

  D x 12
CRC0540A

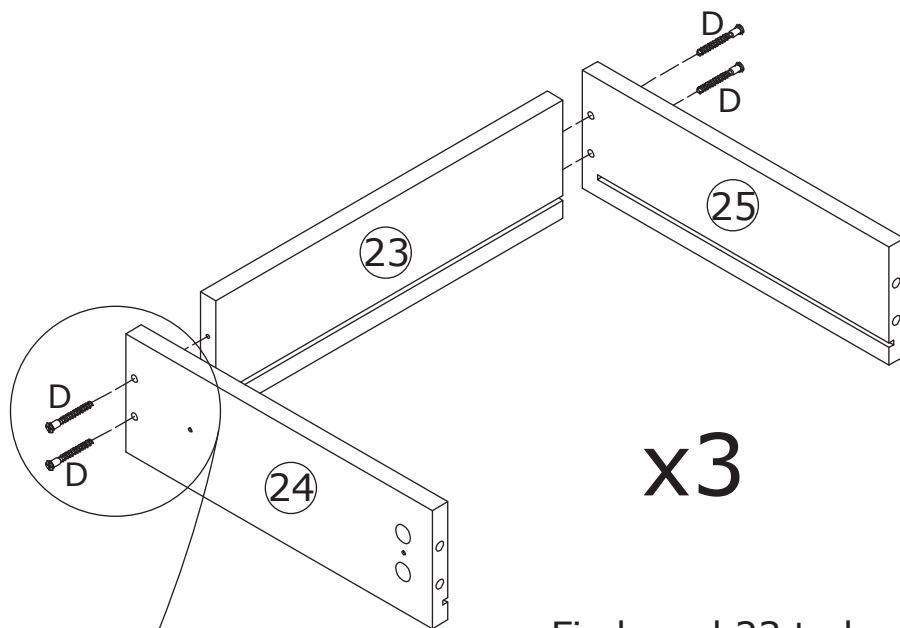




x3

  Fix board 23 to board 24 and 25 with screw(D) as shown.
Insert bottom board 26 along available grooves as shown.





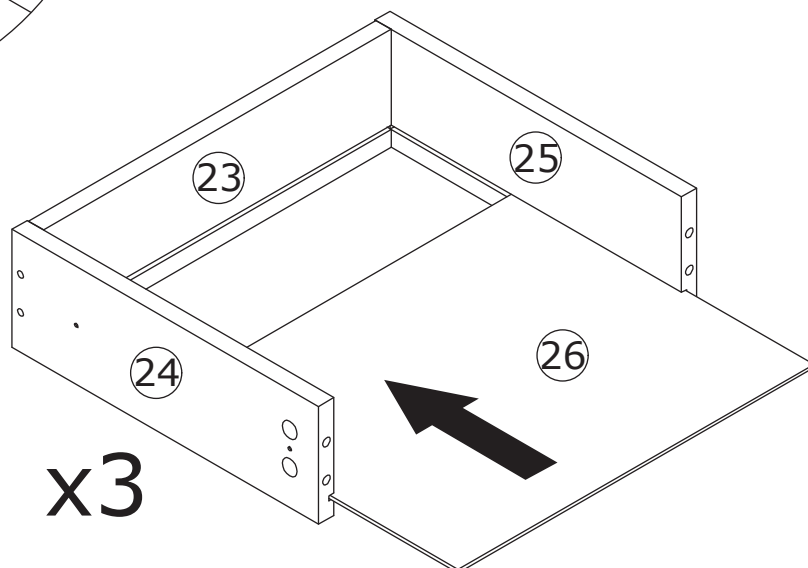
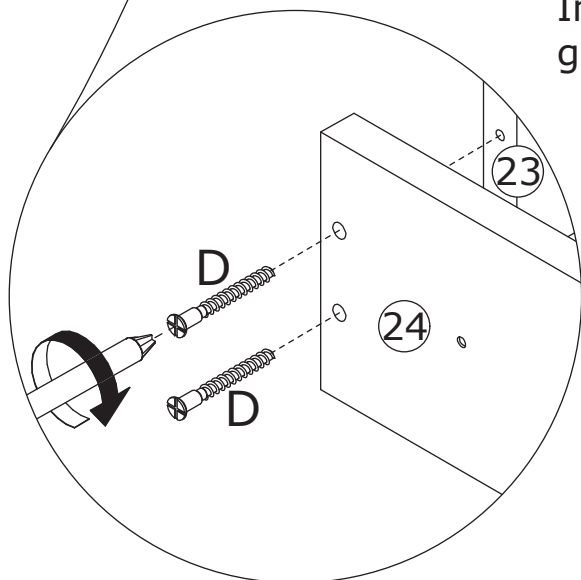


x3

   19




A x 12  CRA0635A	B x 12  CRB1510A	F x 3 	G x 6  CRE0418A	
---	---	--	---	---

      Screw eccentric rod(A) into board 22.
Attach board 22 to board 24 and 25,
add cam lock(B) into and turn clockwise
to tighten as shown.

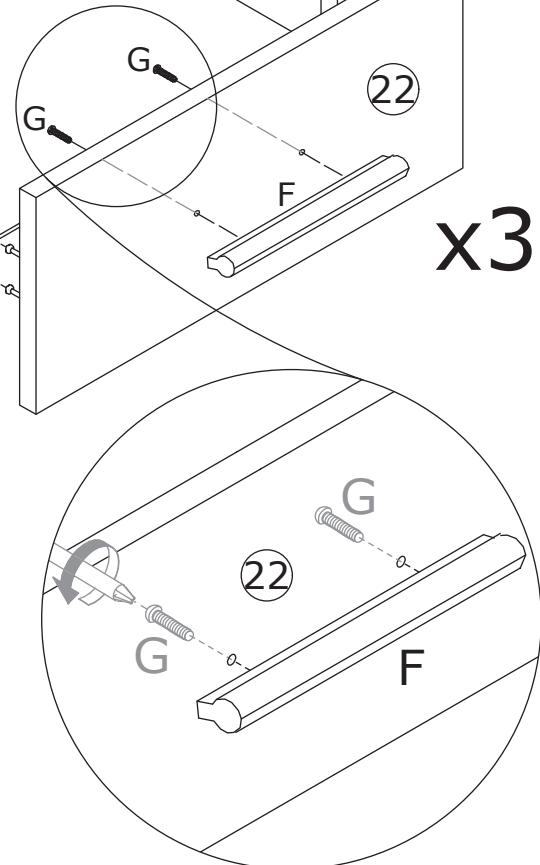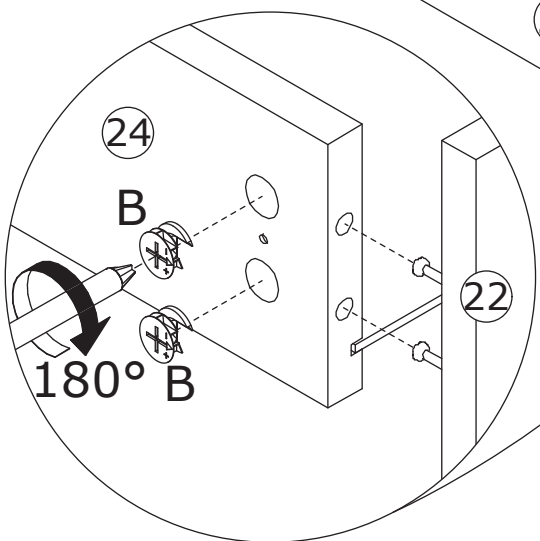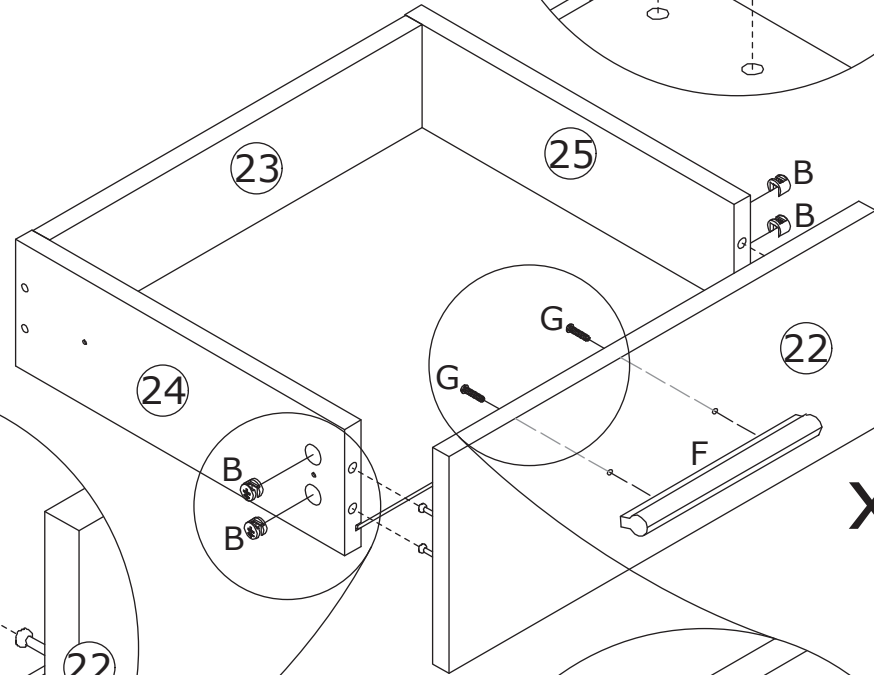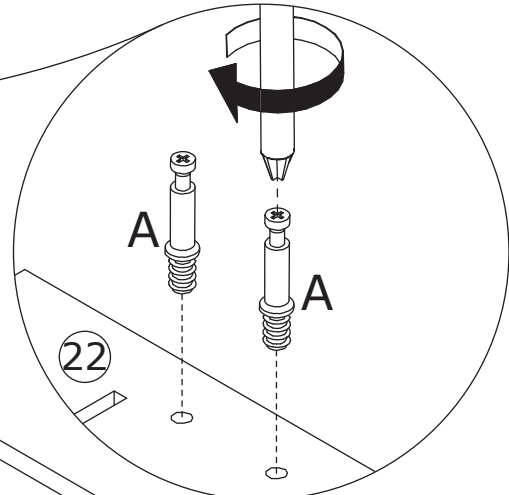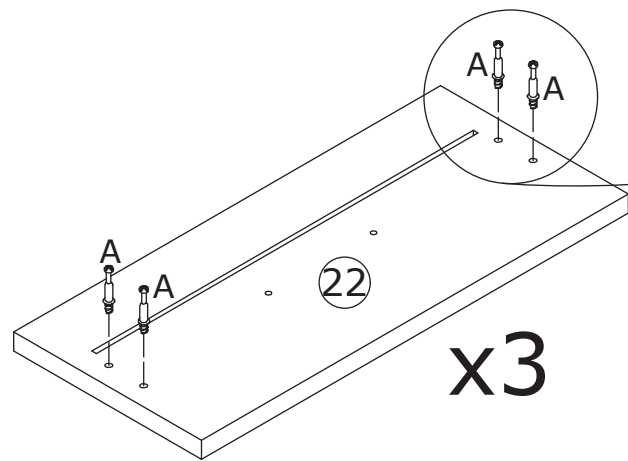
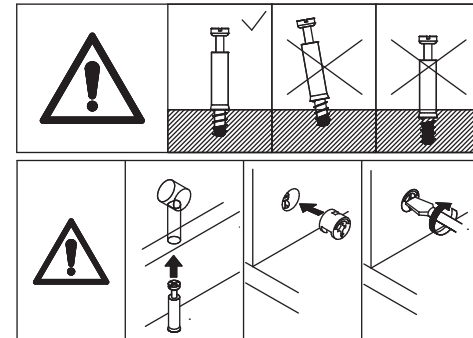


Fix handle(F) to board 22
with screw(G) as shown.

   20

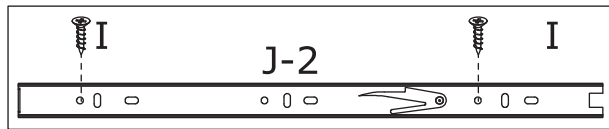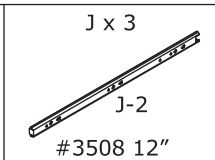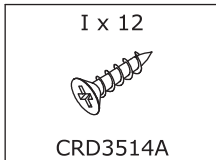

  
Fix track(DL) and (DR) to board 24 and 25 with screw(I) as shown.

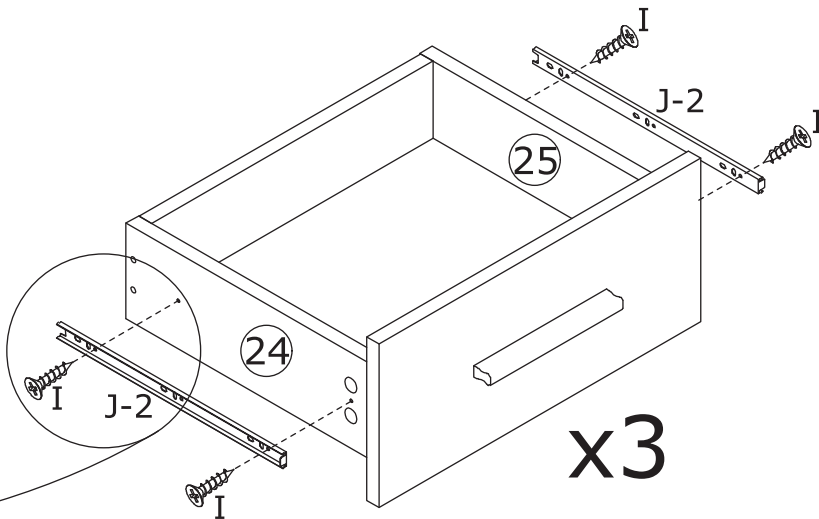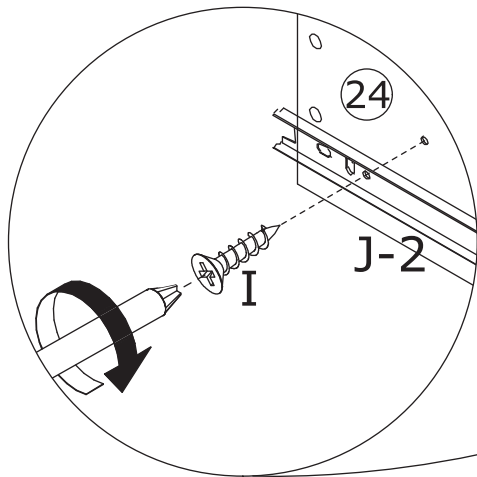


21








 
 
Align rails, insert drawers in.

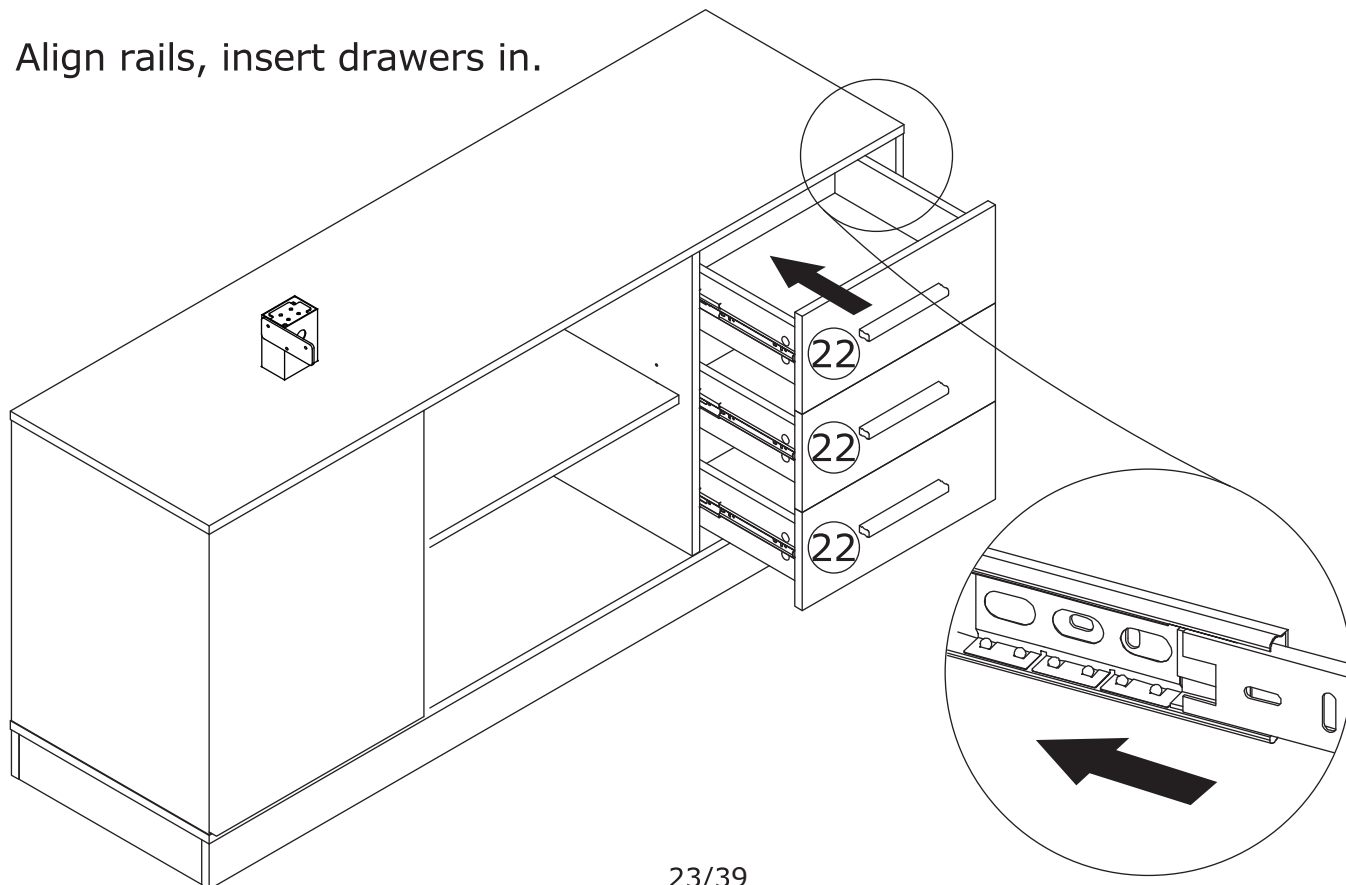




If doors are still not aligned if the hinges are properly correctly, please watch the video.
       
<https://youtu.be/n0Lb36SoODM>

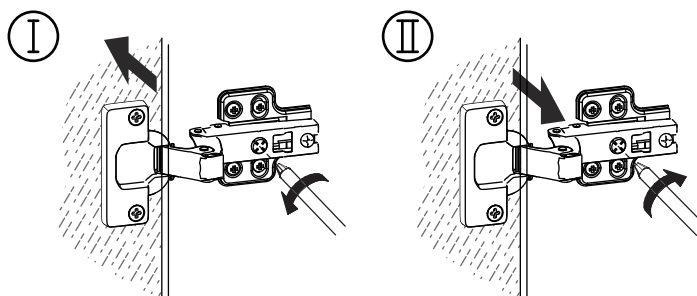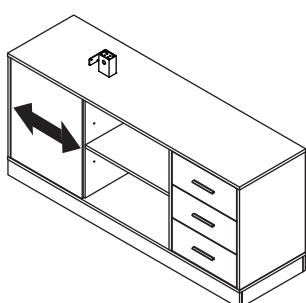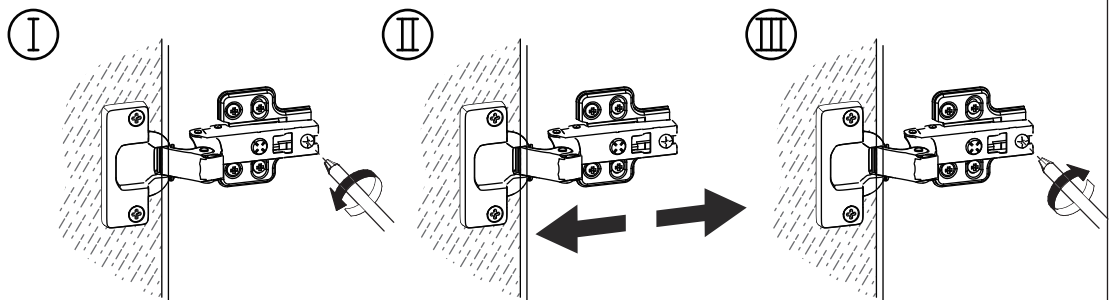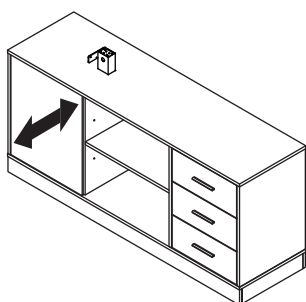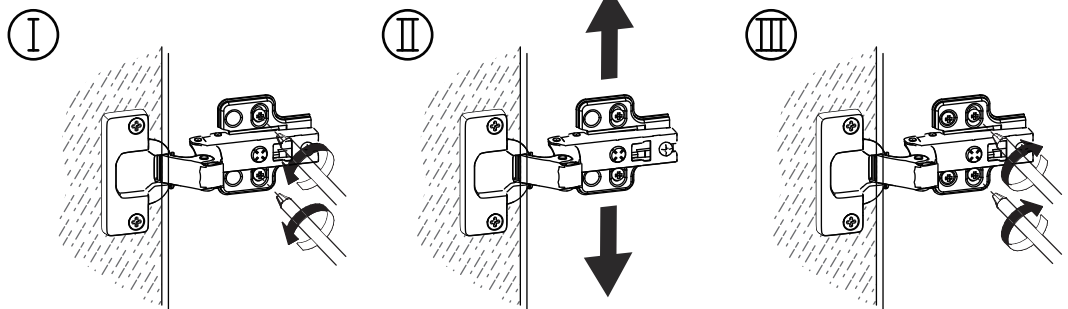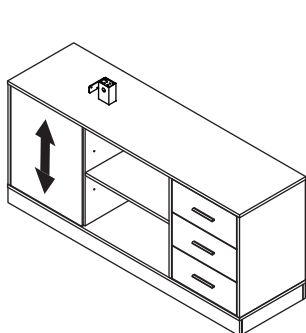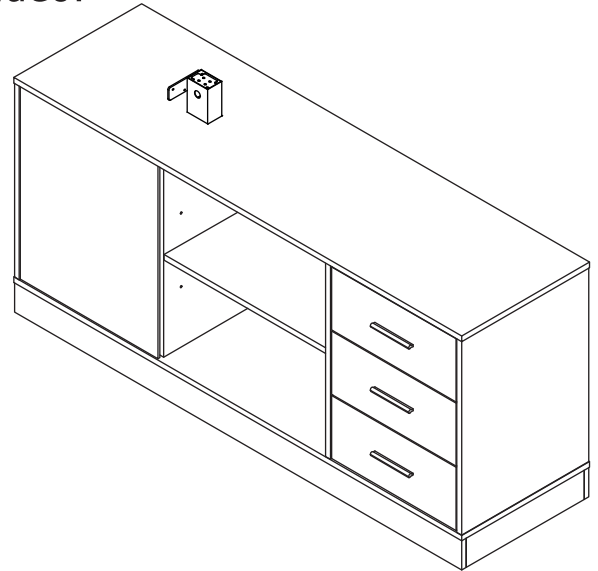

23

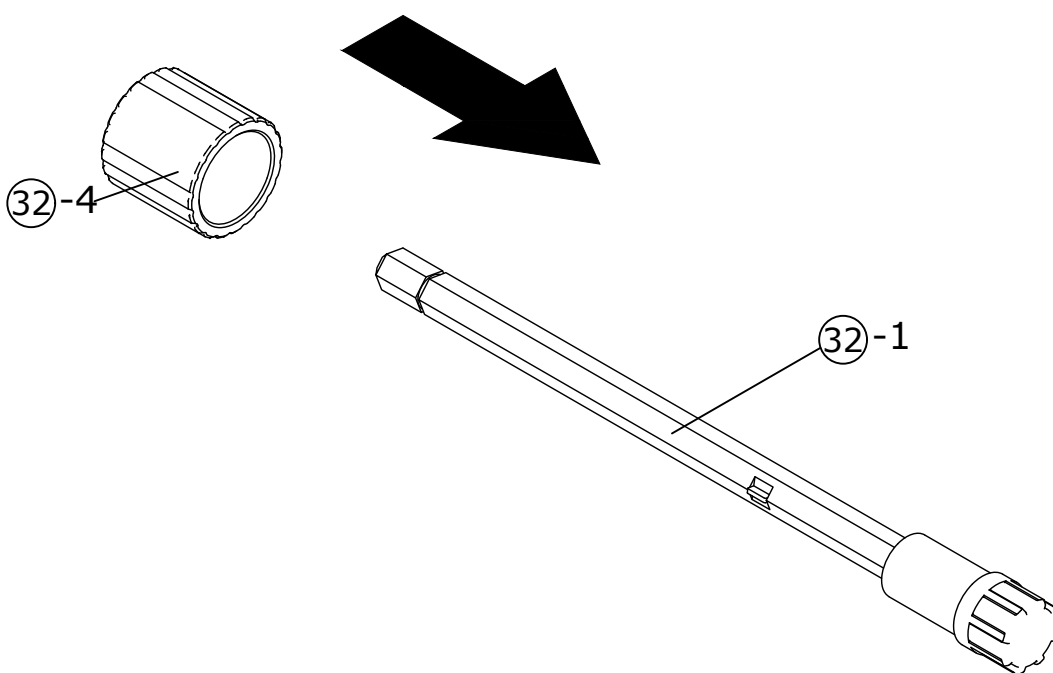 

24

K x 4



CRG0612A

M x 2






CRE0445A



N x 2



  
 
Q x 1

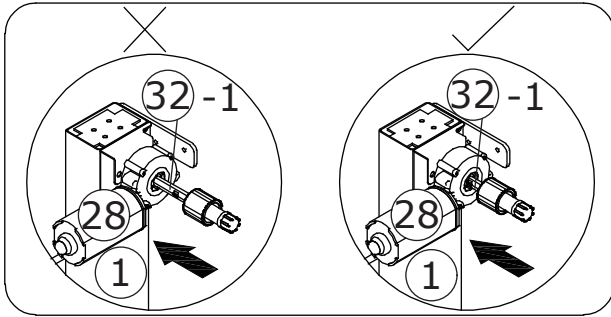

  
As shown in the figure, first use screws (M) to install part (28) onto part (1), then install parts (32-1) and (32-4) onto the mounting unit.

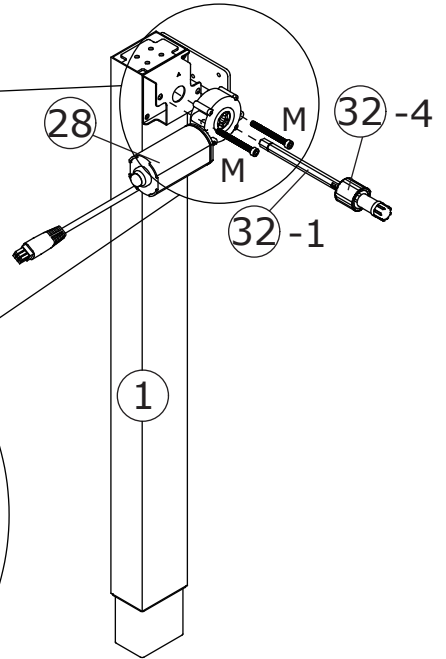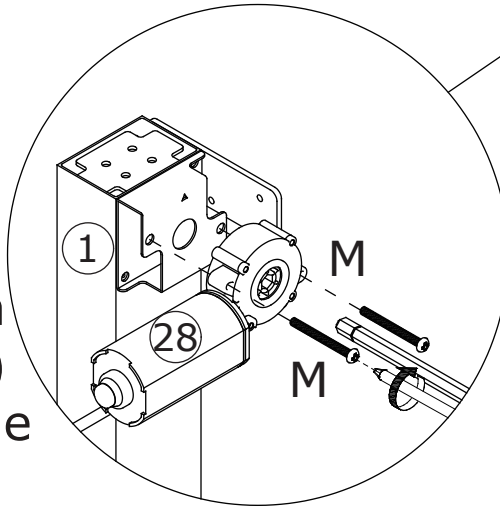


  As shown in the figure, use screw (K) to install part (3) to part (1). Install part (N) to part (3) and tighten it by turning it clockwise.

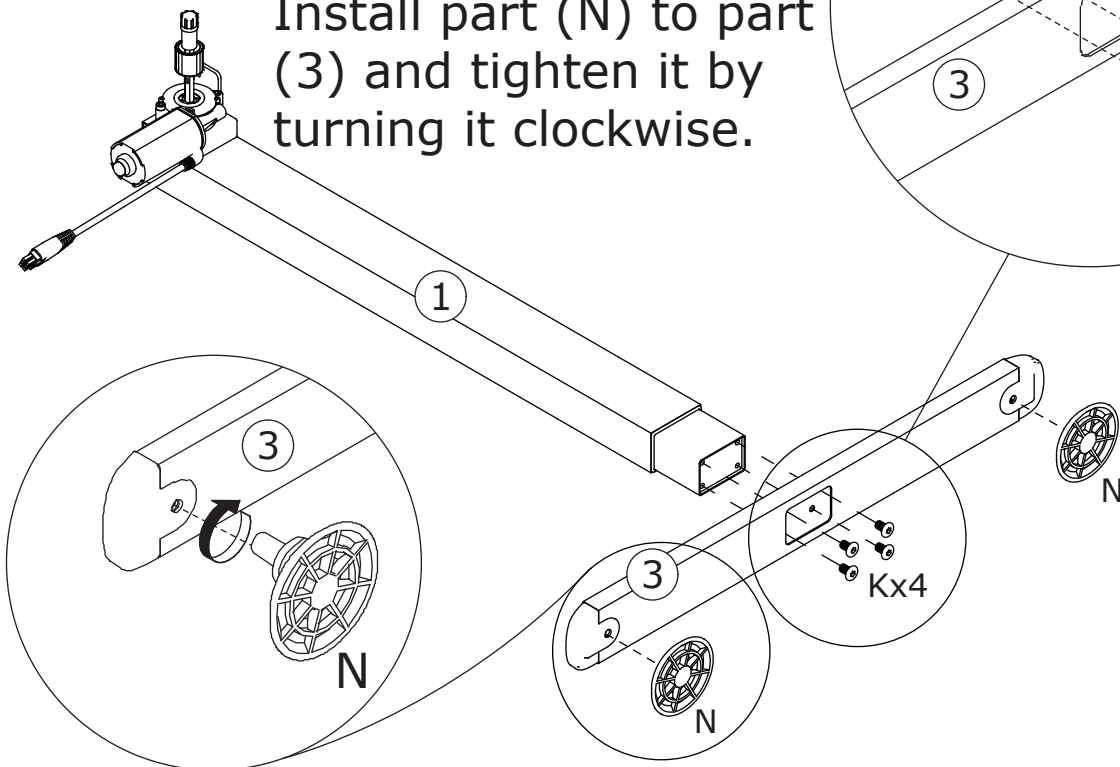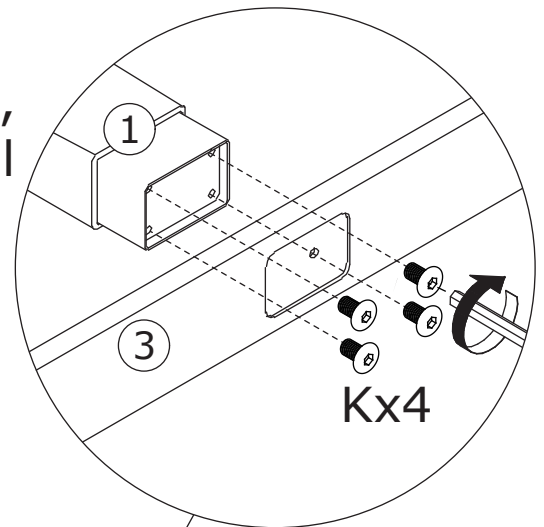

25

 K x 6  CRG0612A	Q x 1 	
--	--	--

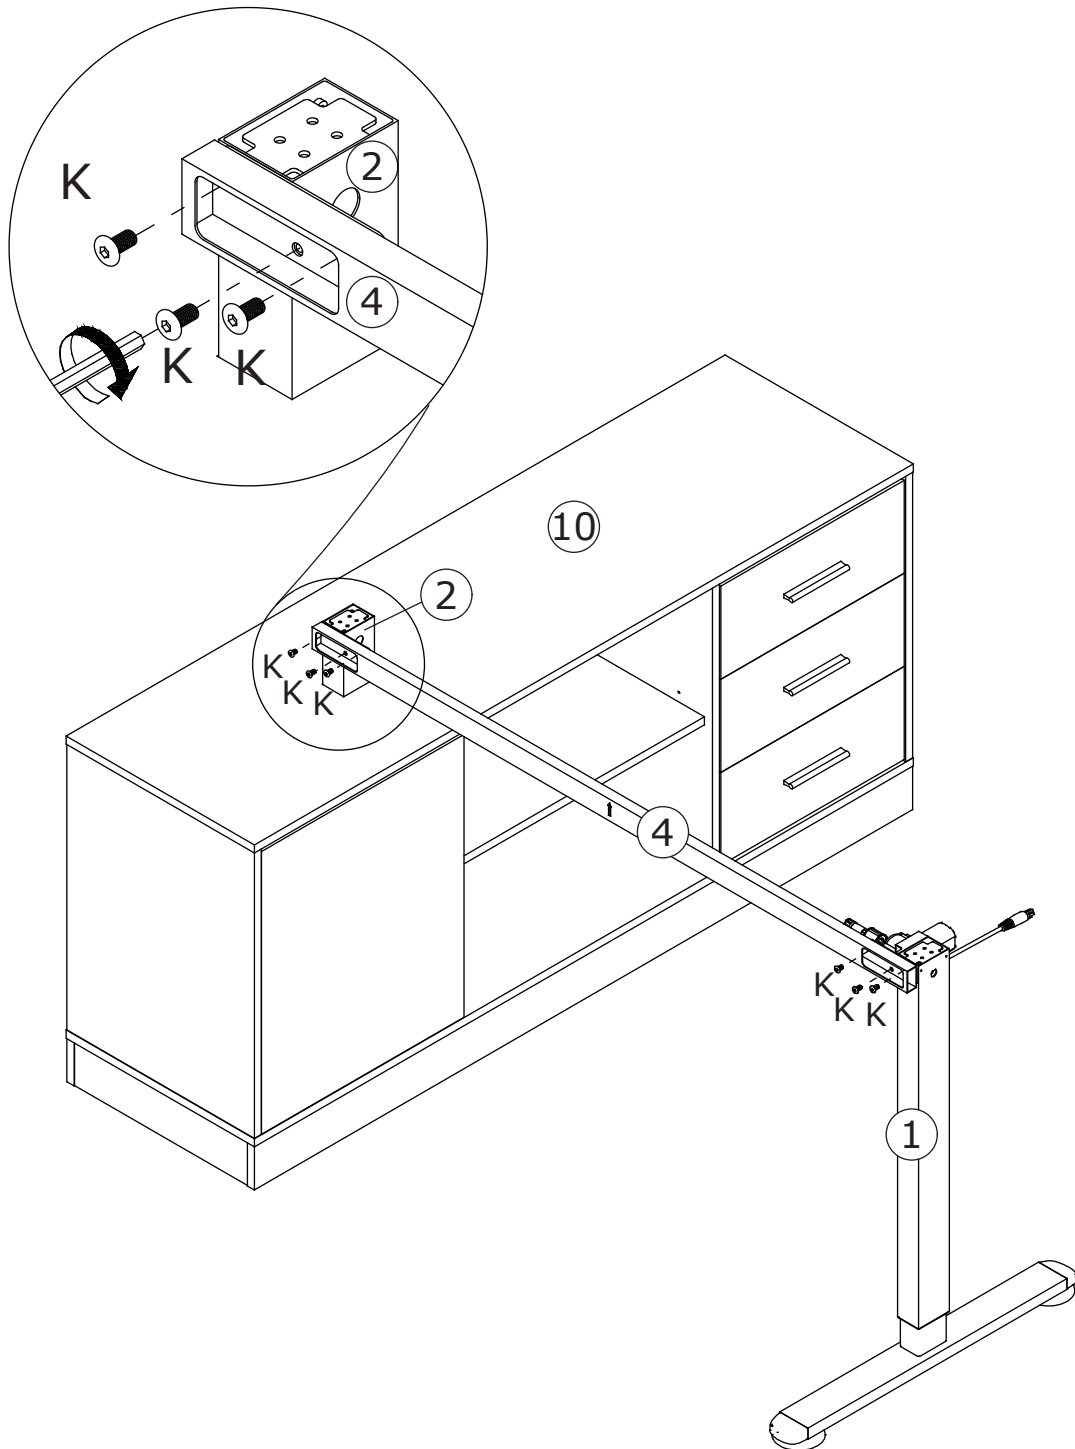 


Fix part 4 to part 1 and 2 using screw(K) as shown.

26


S x 1





 As shown in the figure, install the transmission device.

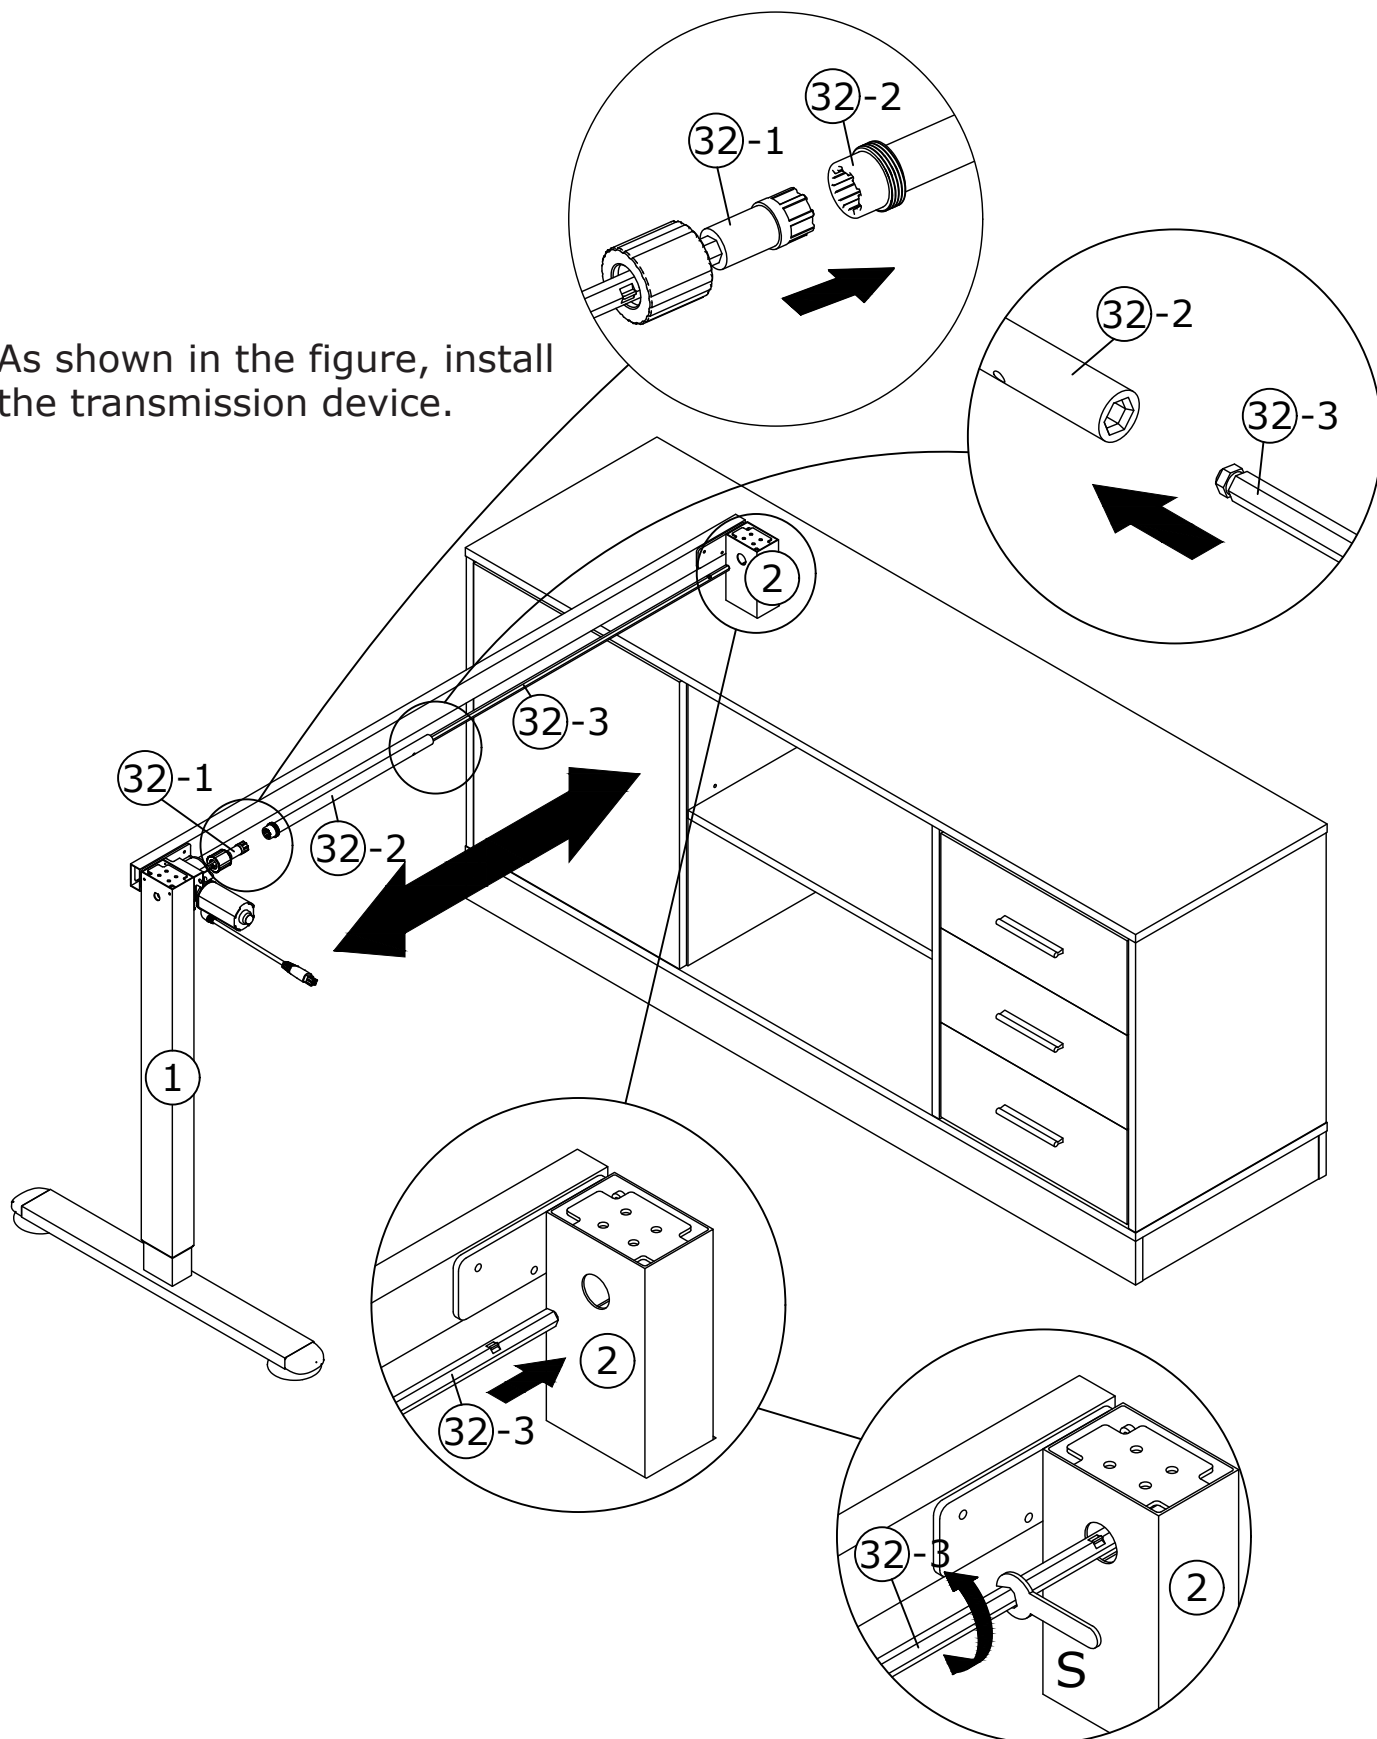

  
 
As shown in the figure, the drive rod can be inserted to a certain depth by rotating component (32-2).

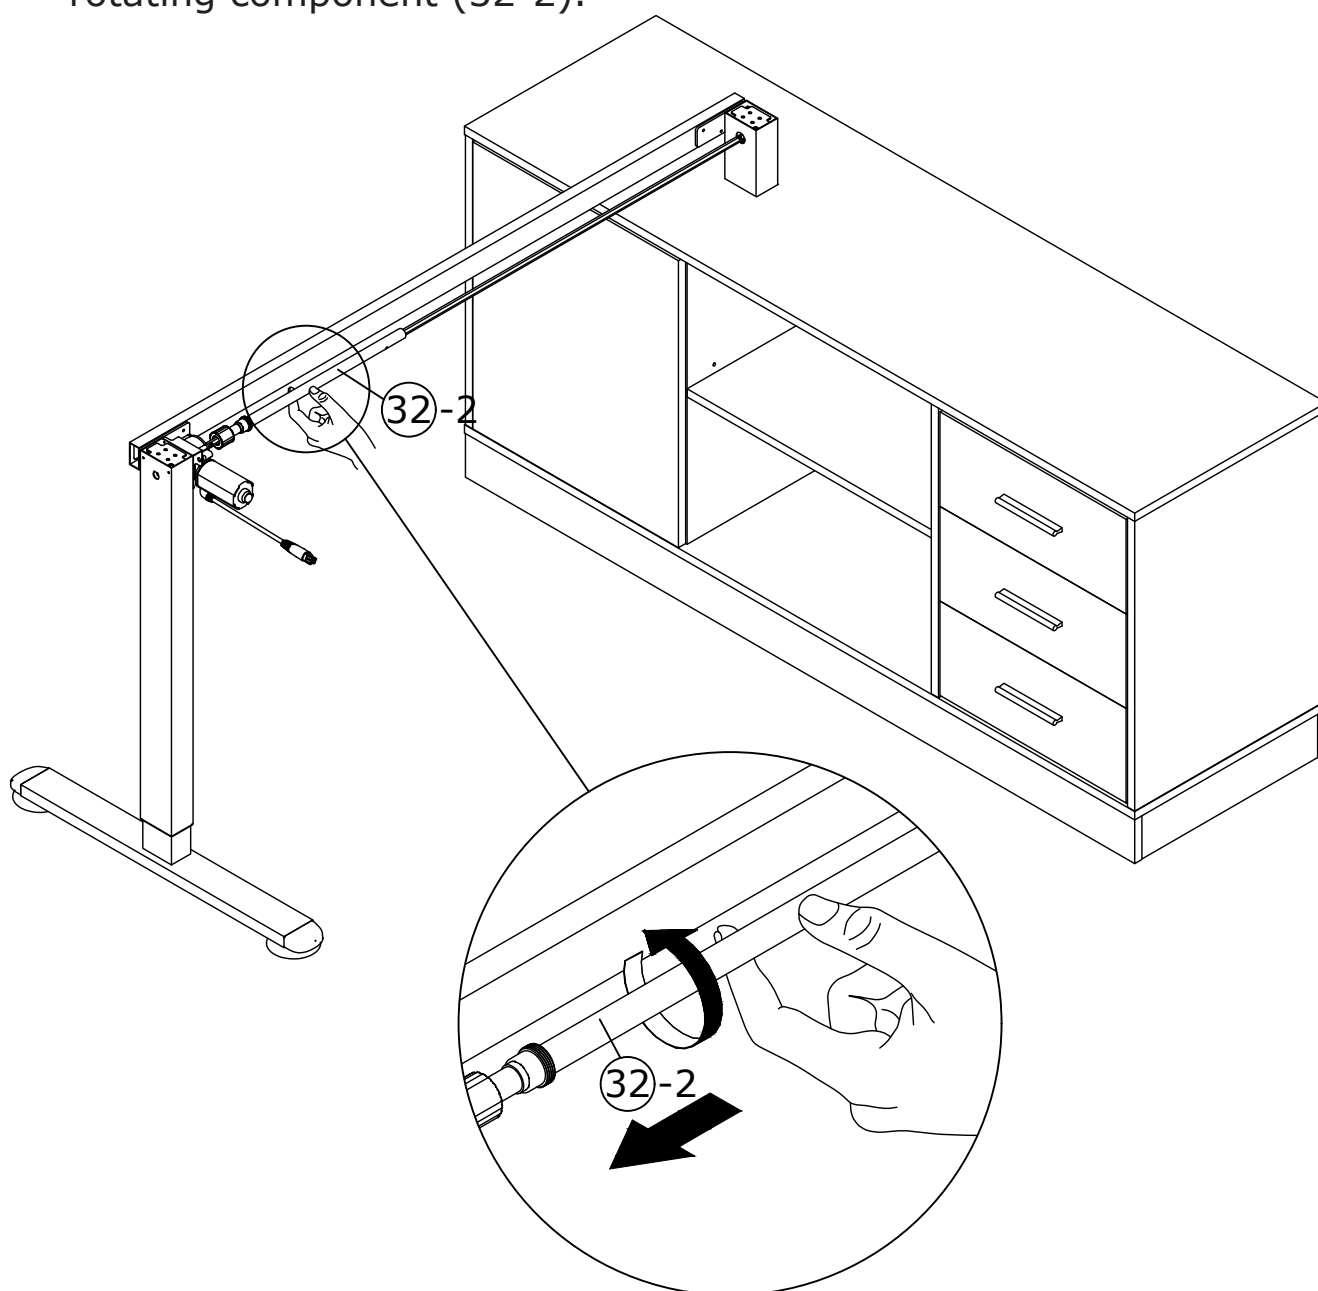

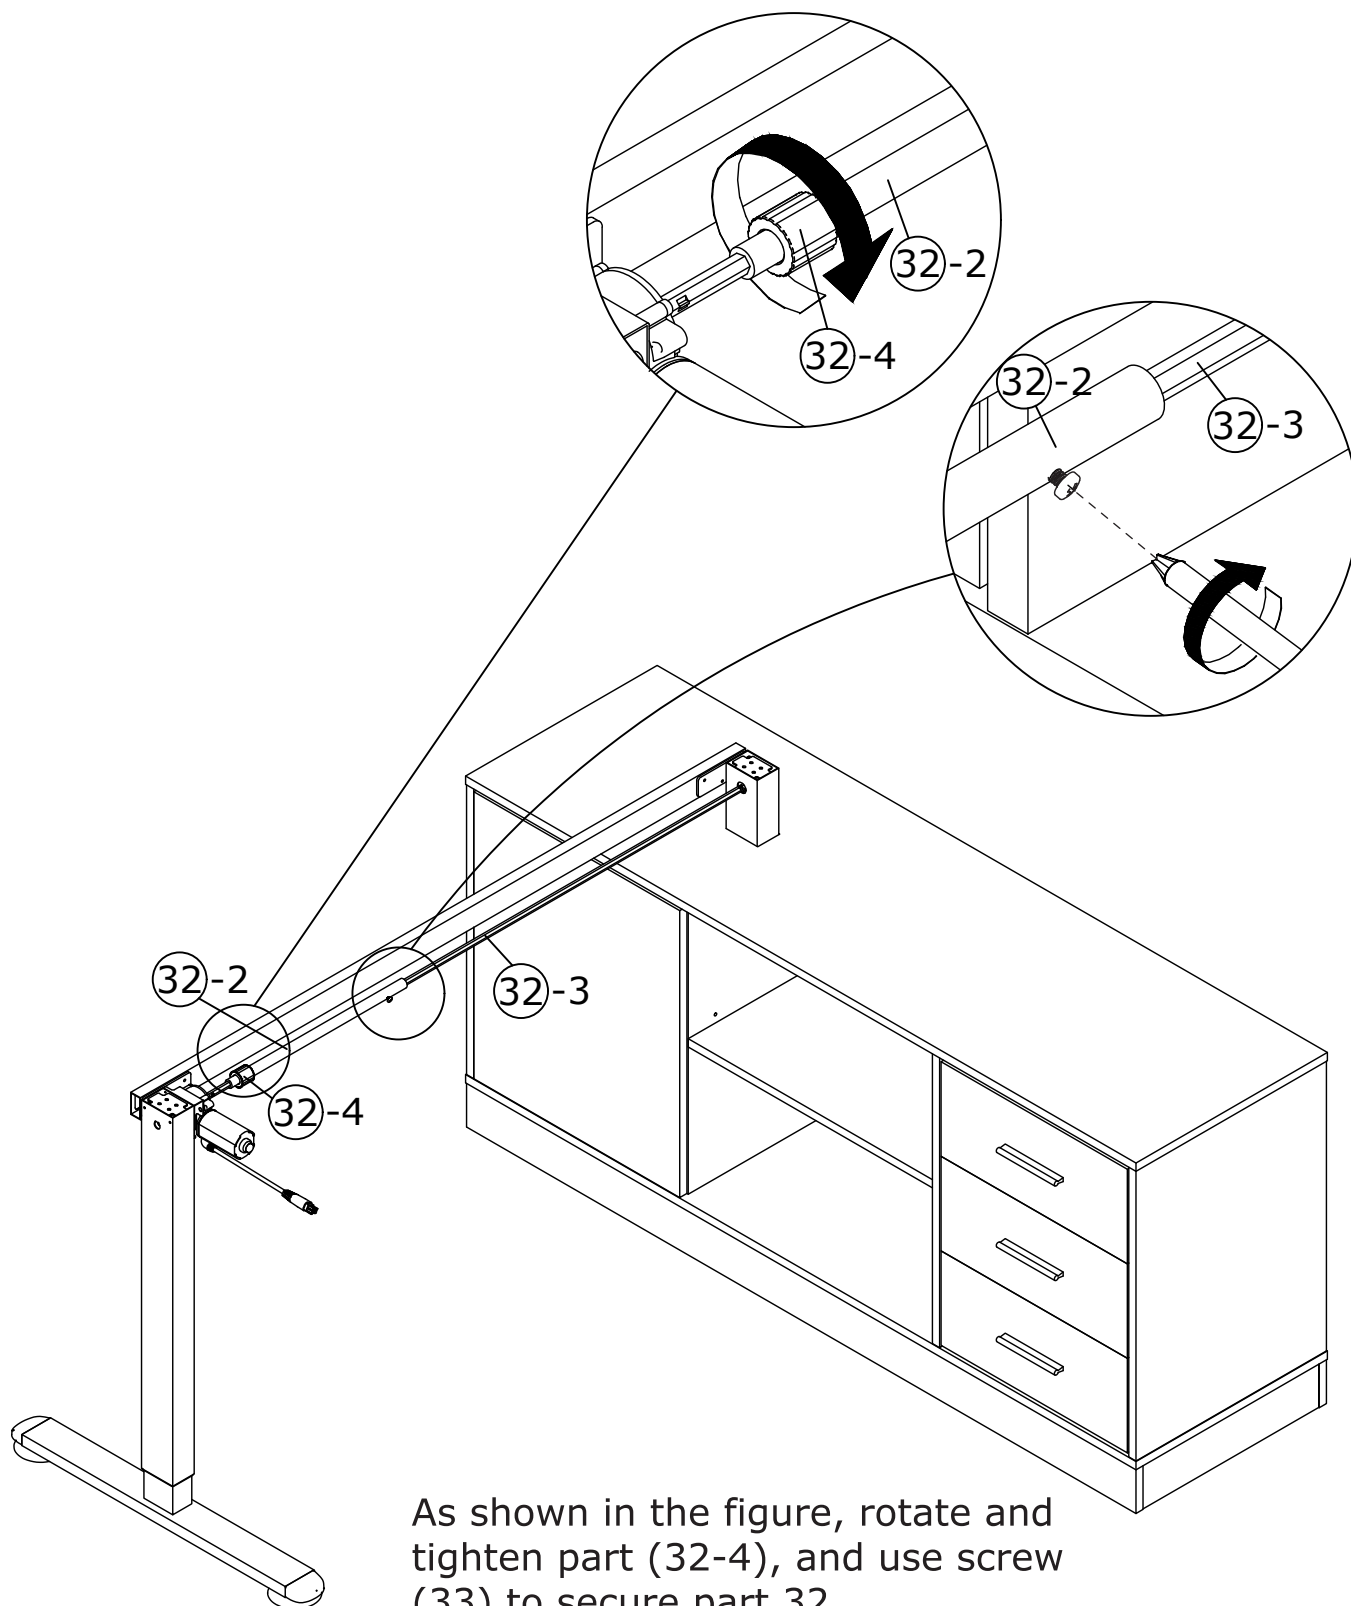


As shown in the figure, rotate and tighten part (32-4), and use screw (33) to secure part 32.

  
29

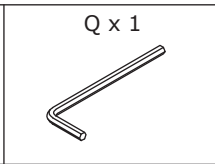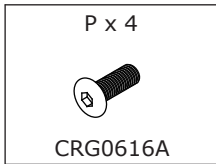

 
Fix part 5 to part 29 with screw(P) as shown.

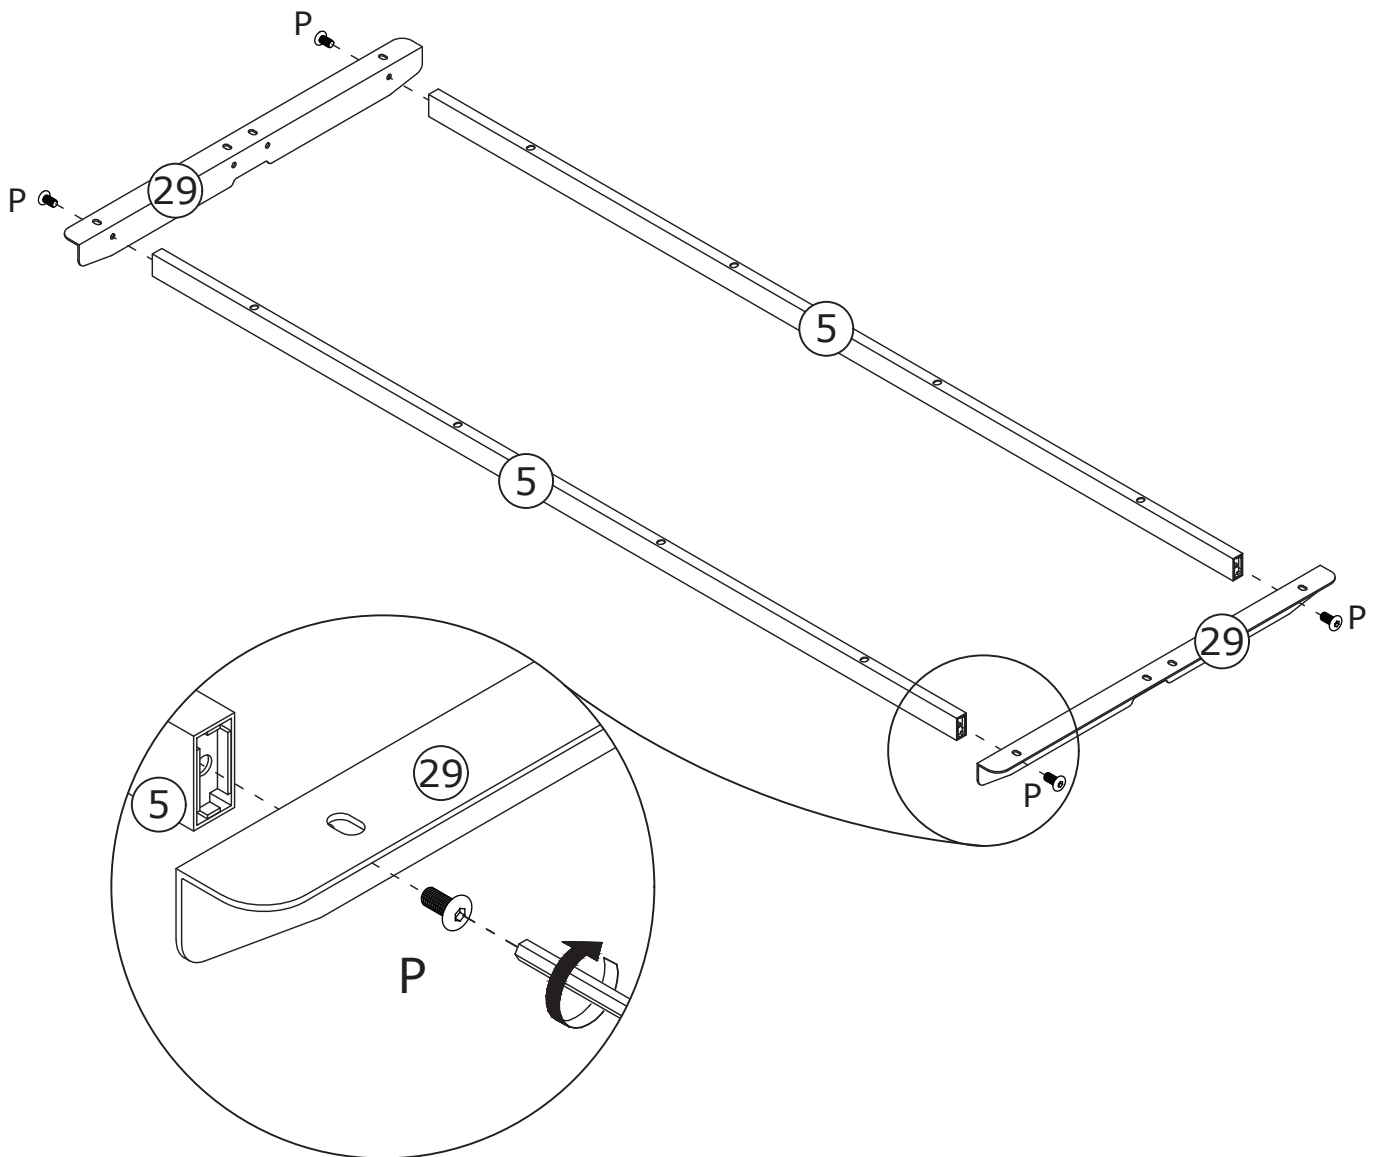



30

 K x 18  CRG0612A	Q x 1 	
---	--	--

 
Fix iron sheet 6 and 7 to board 8 and 9 with screw(K) as shown.

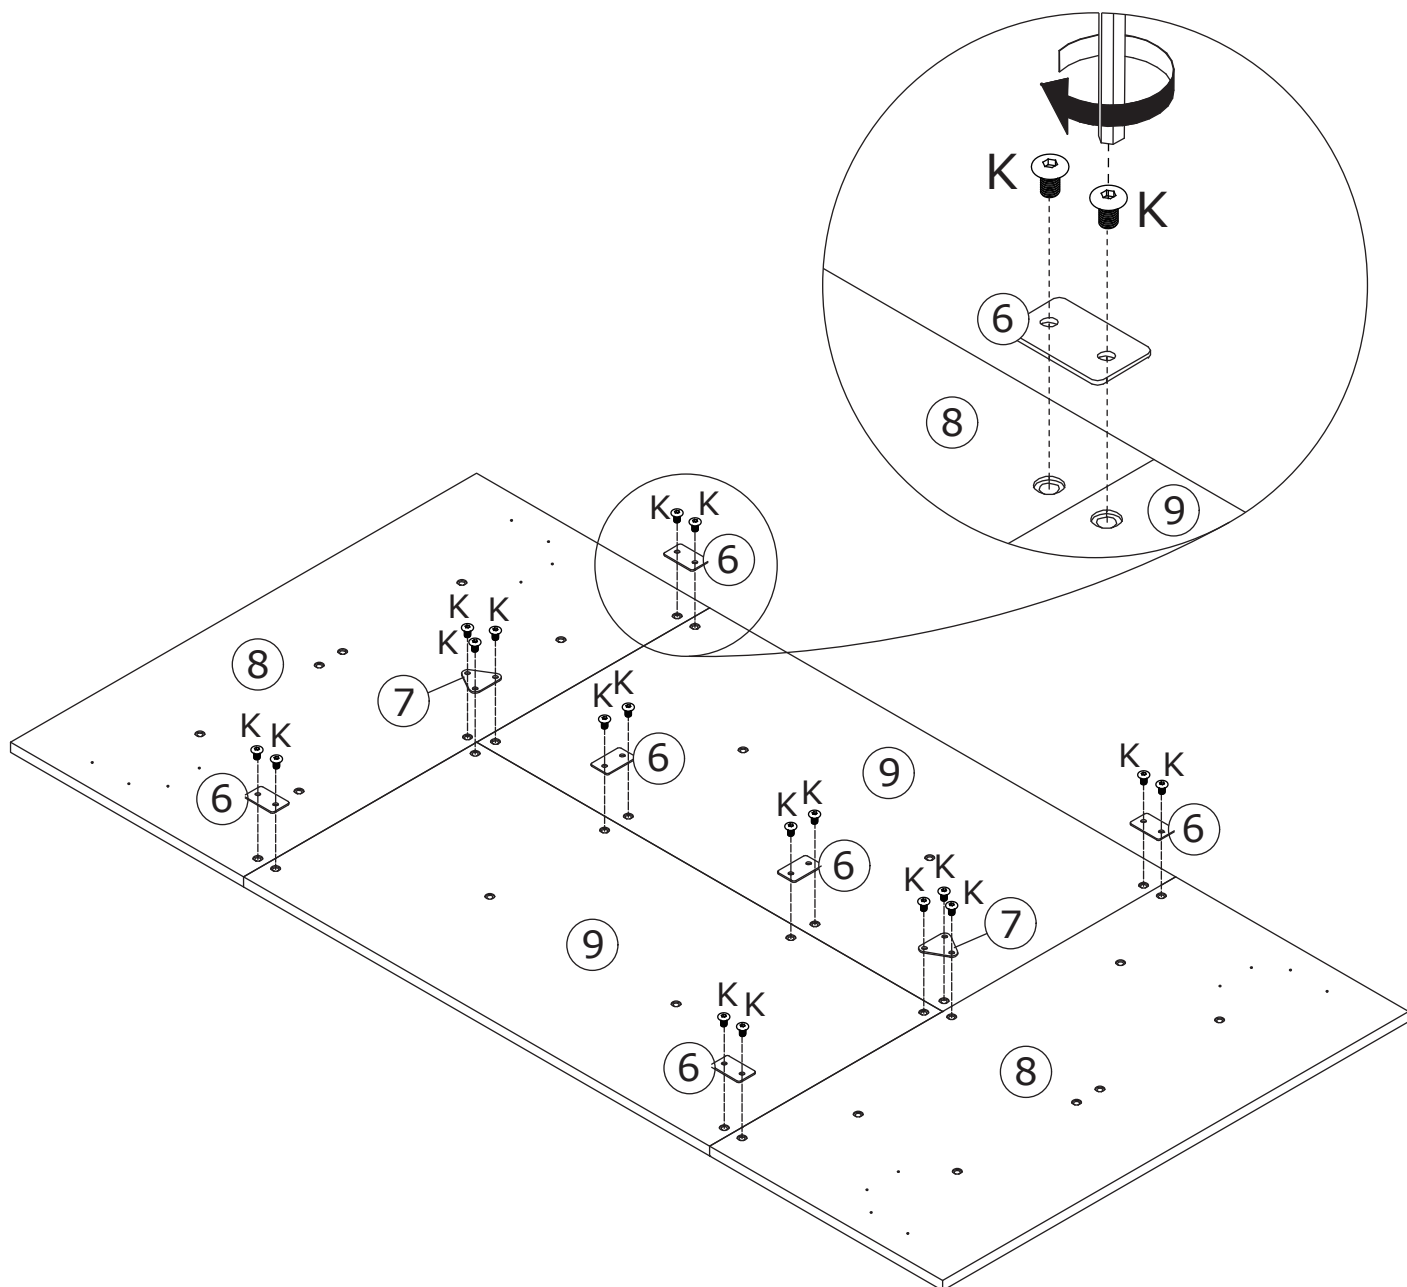


31

  K x 8  CRG0612A	L x 8  CRG0640A	Q x 1 	
--	--	--	--

 Fix the component to table top with screw(L, K) as shown.

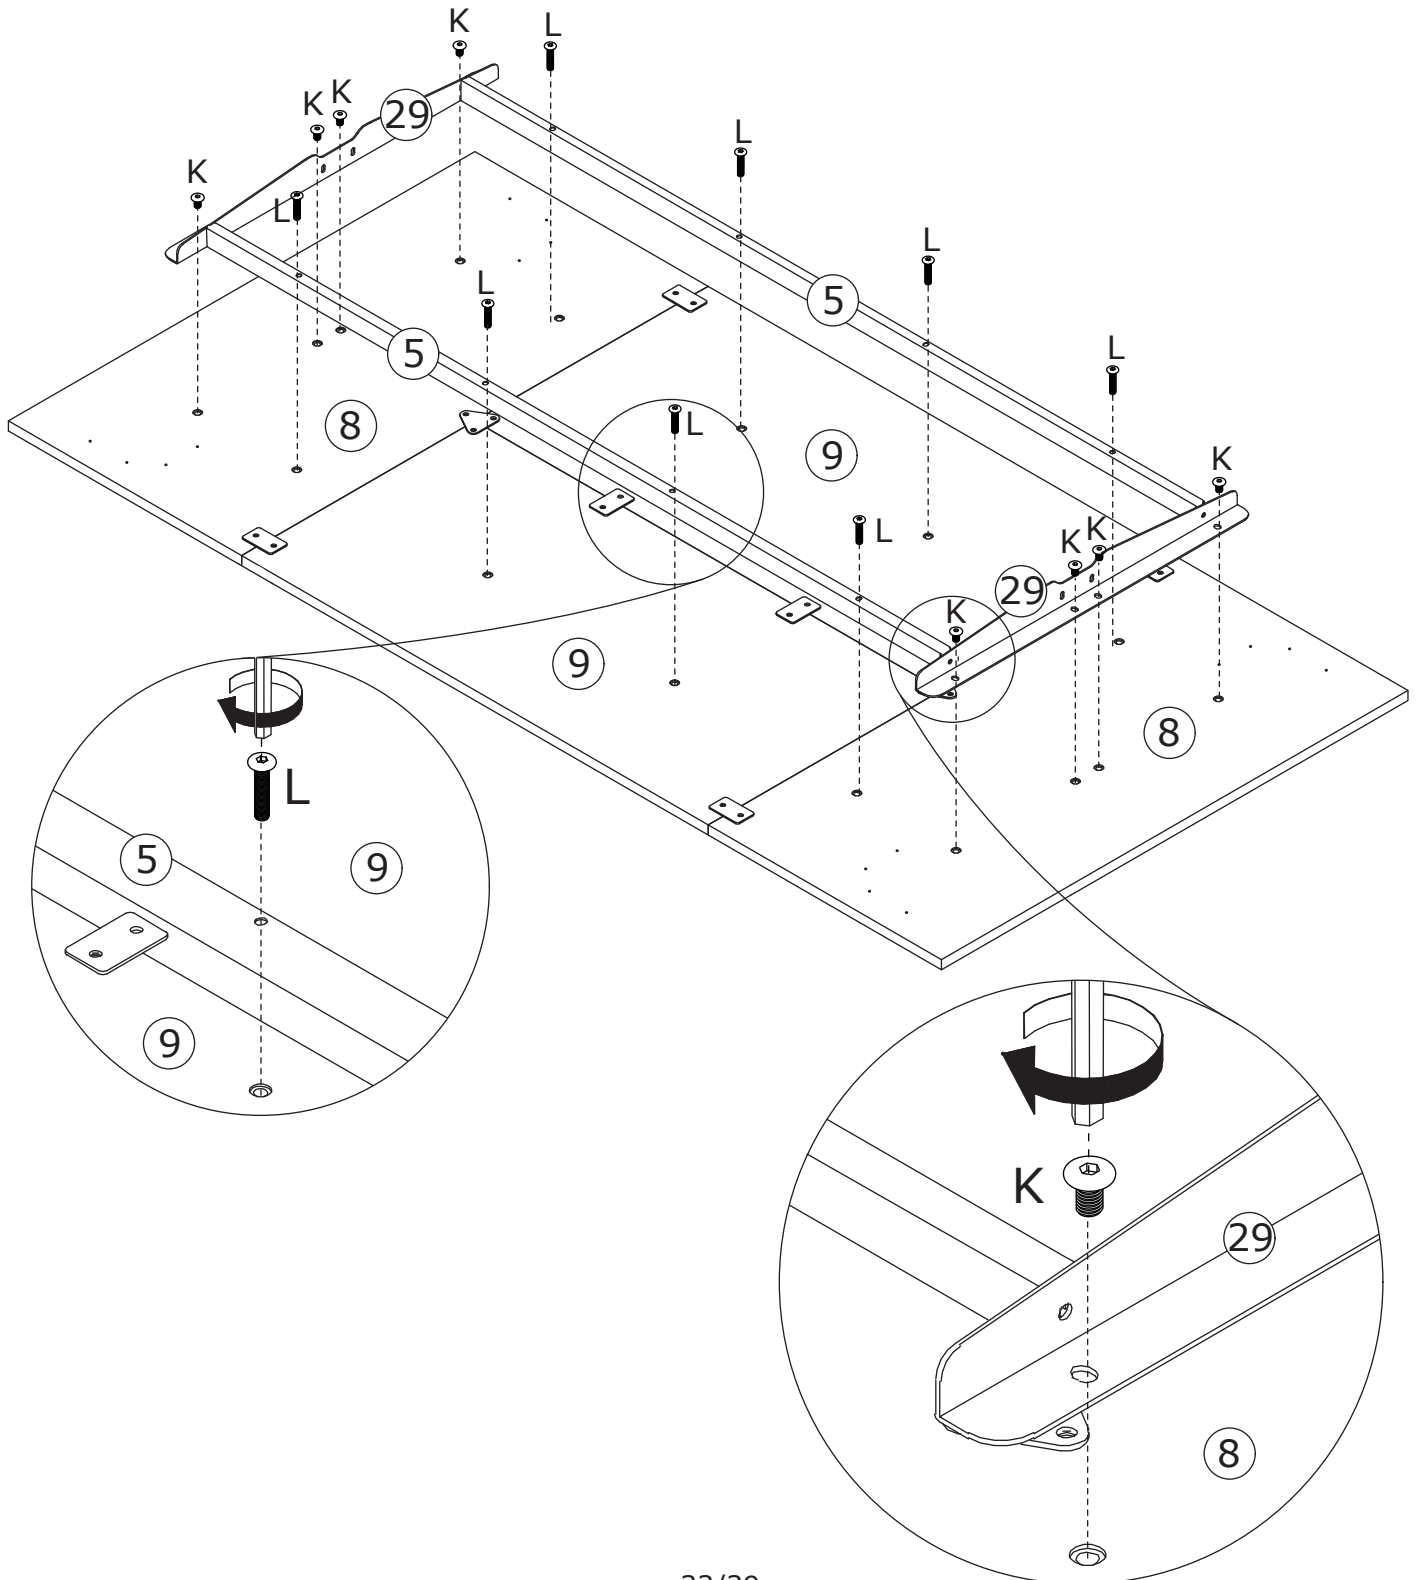


 Connect electric machine 28 and plug 31 with control panel 30 as shown. Power on after installation finished.

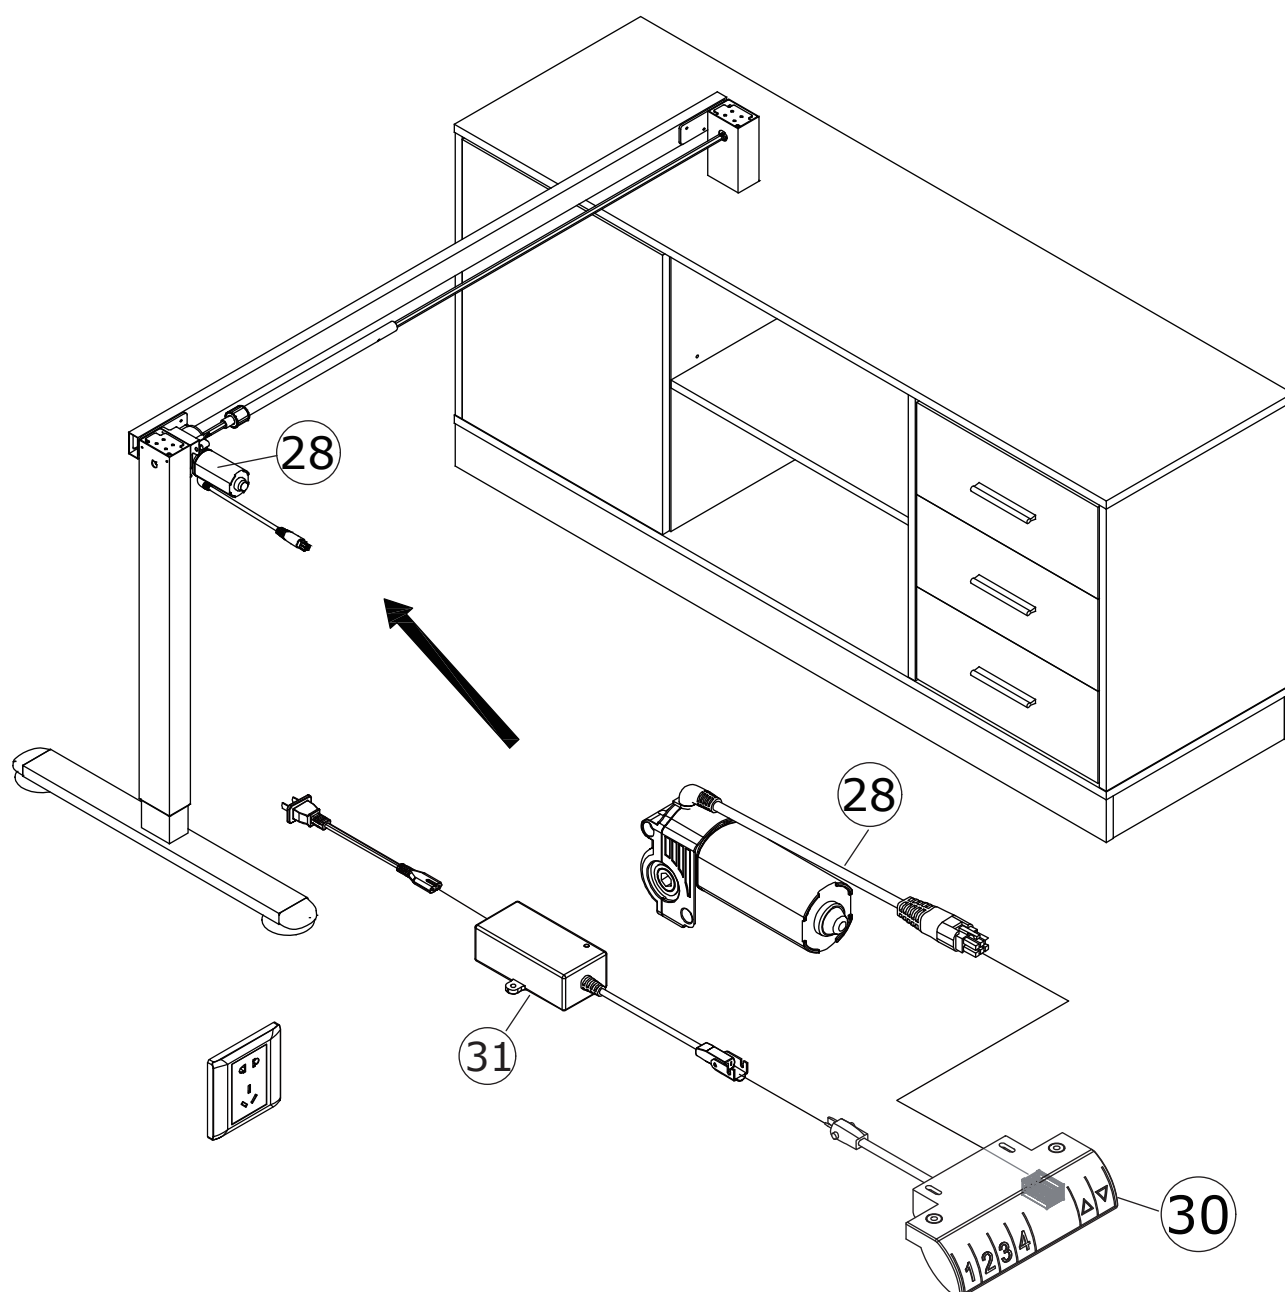

33

 After turning on the power, raise the iron frame to the highest level.

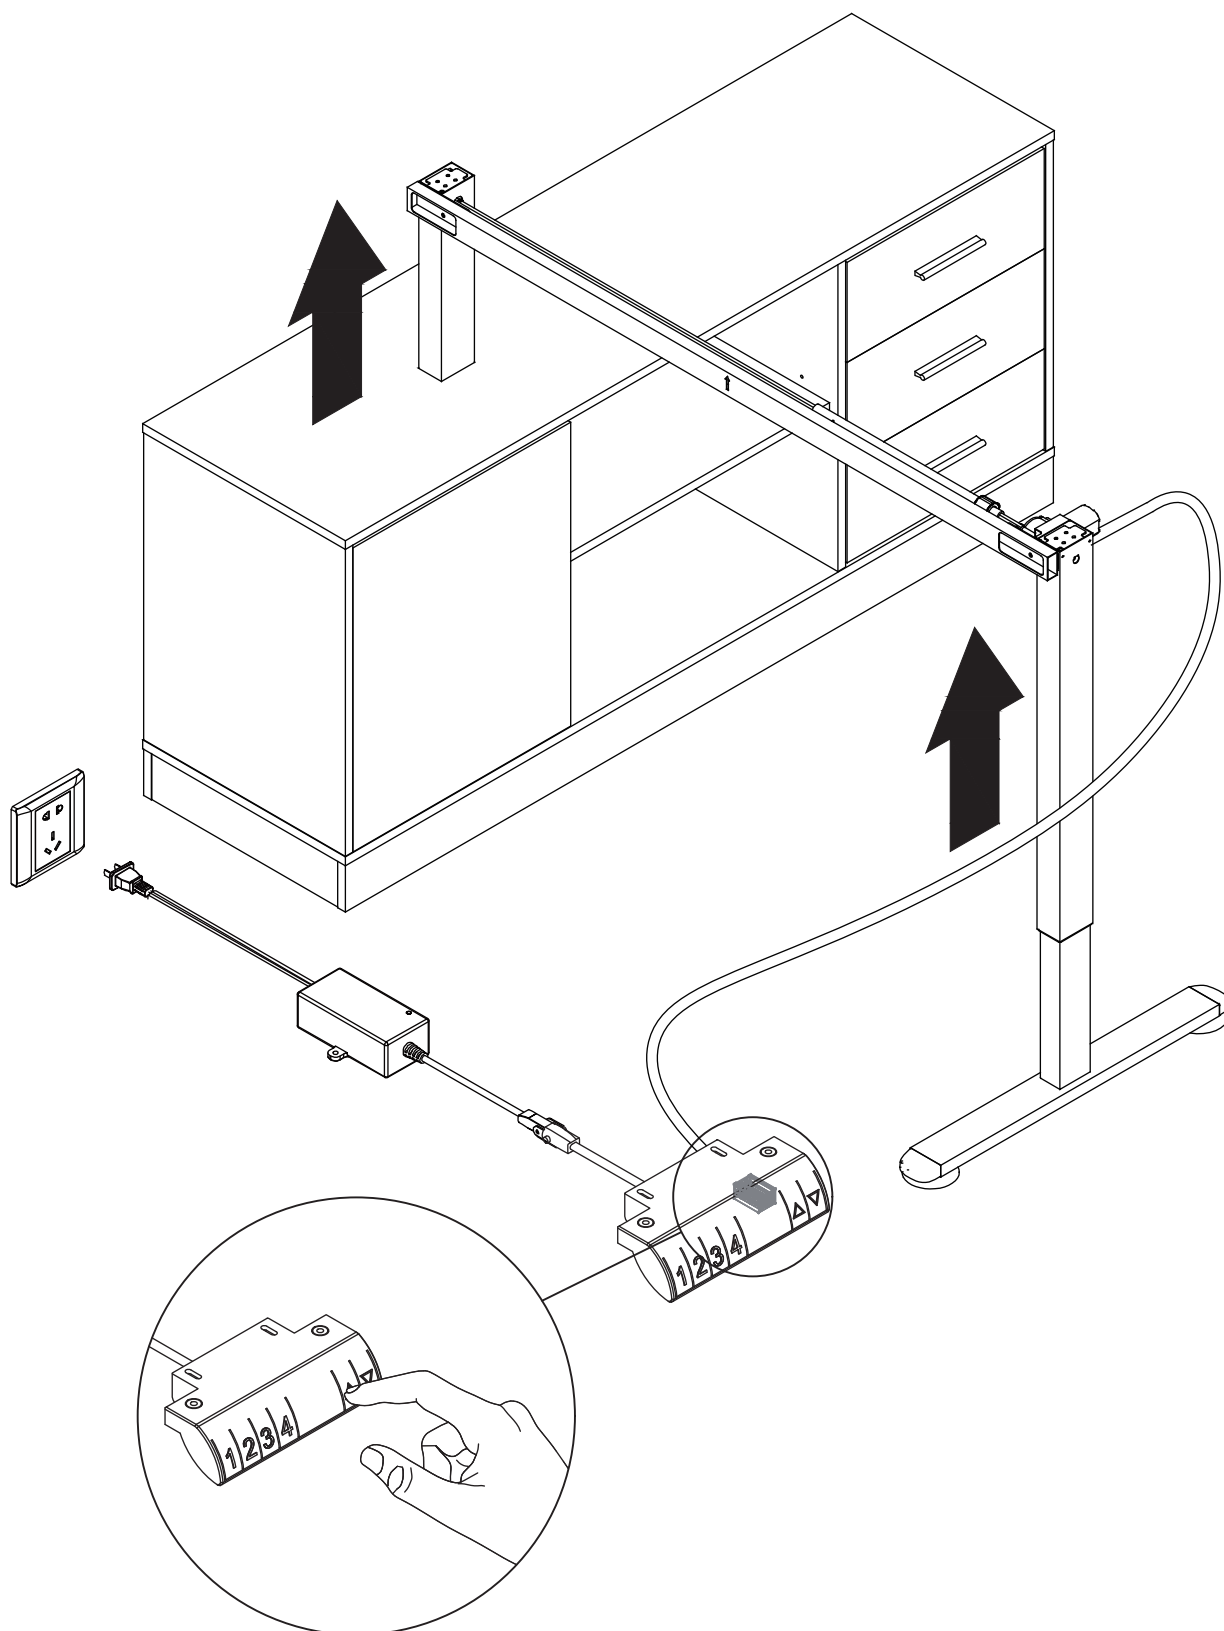



34

K x 4




CRG0612A

  Q x 1

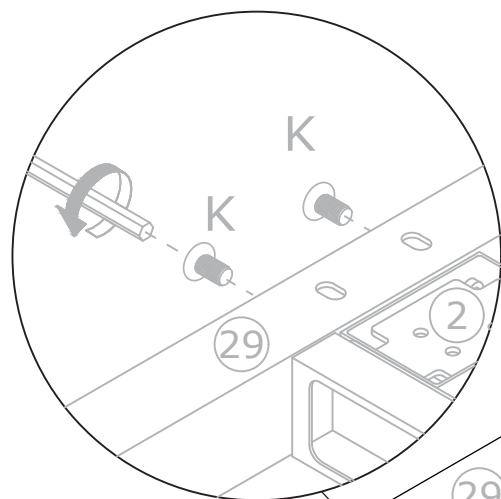

 Attach the top to the unit, fix part 29 to part 1 and 2 using screw(K) as shown.

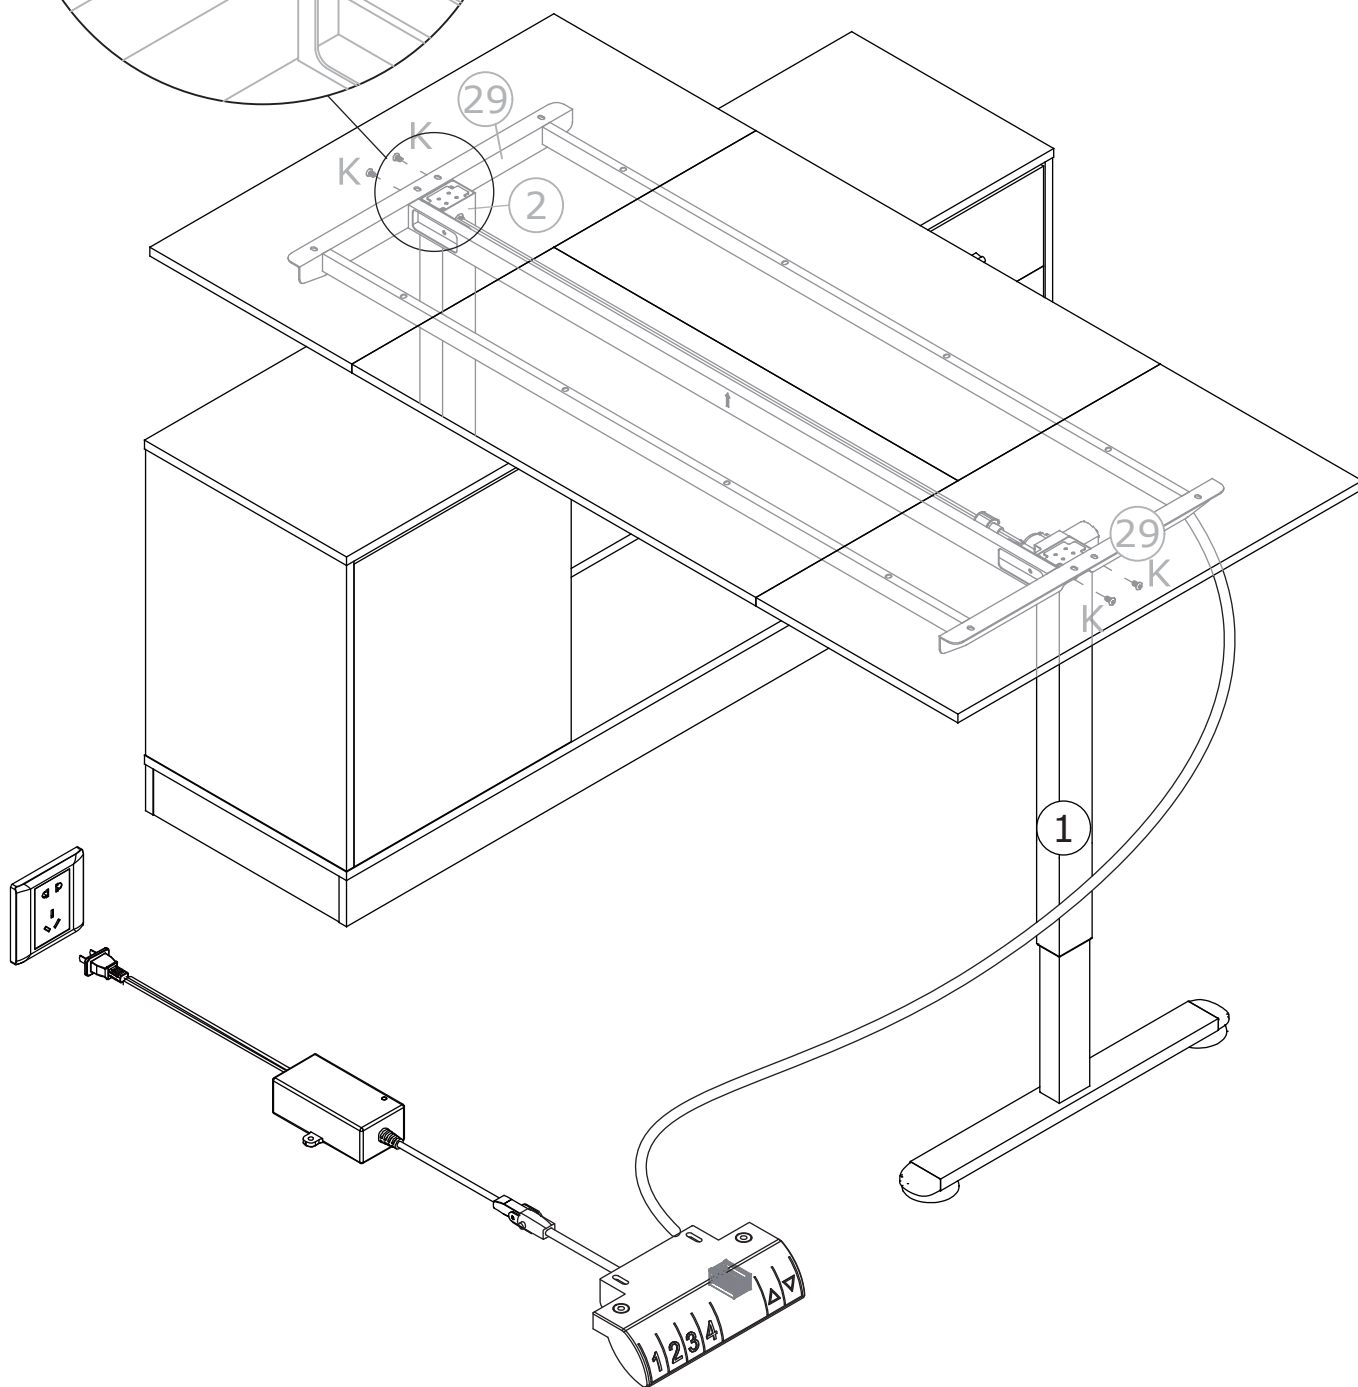


35


I x 4



 CRD3514A



 Fix the control panel and power adapter to board 8 with screw(I) as shown.

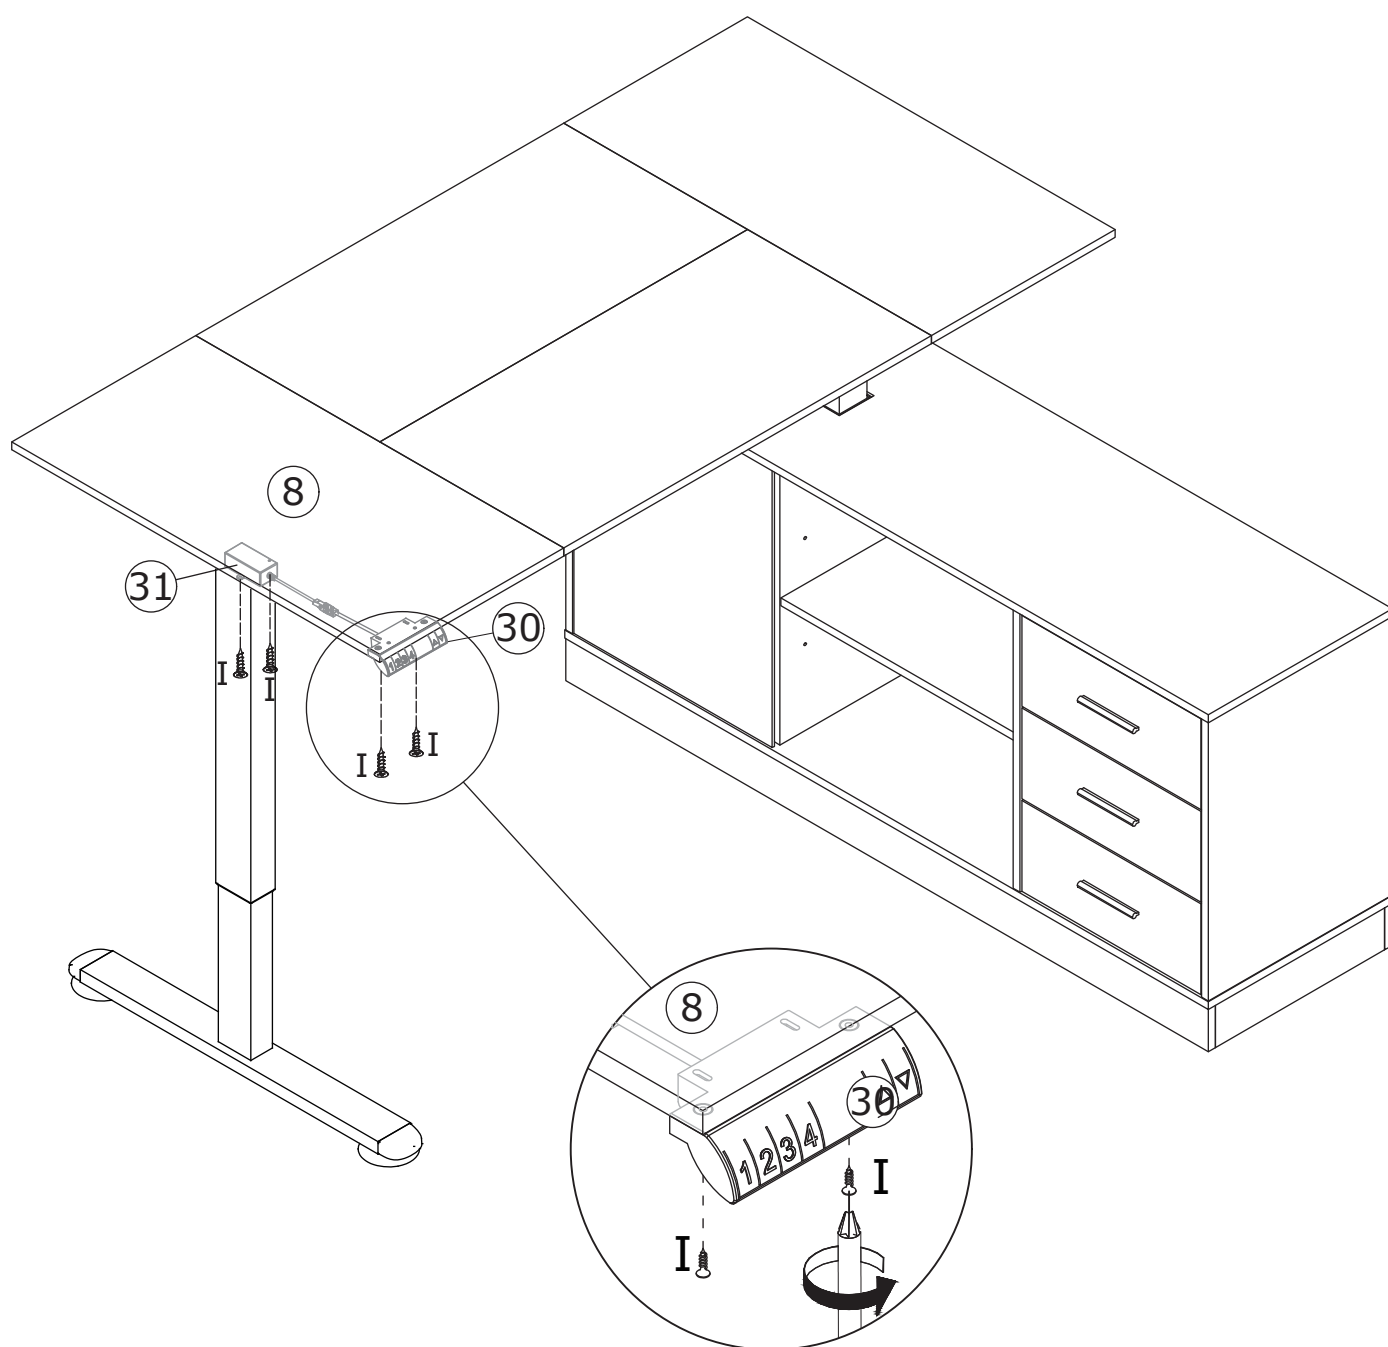


36

I x 8





CRD3514A

 O x 4



  Fix the power cord to board using part(O) and screw(I) as shown.

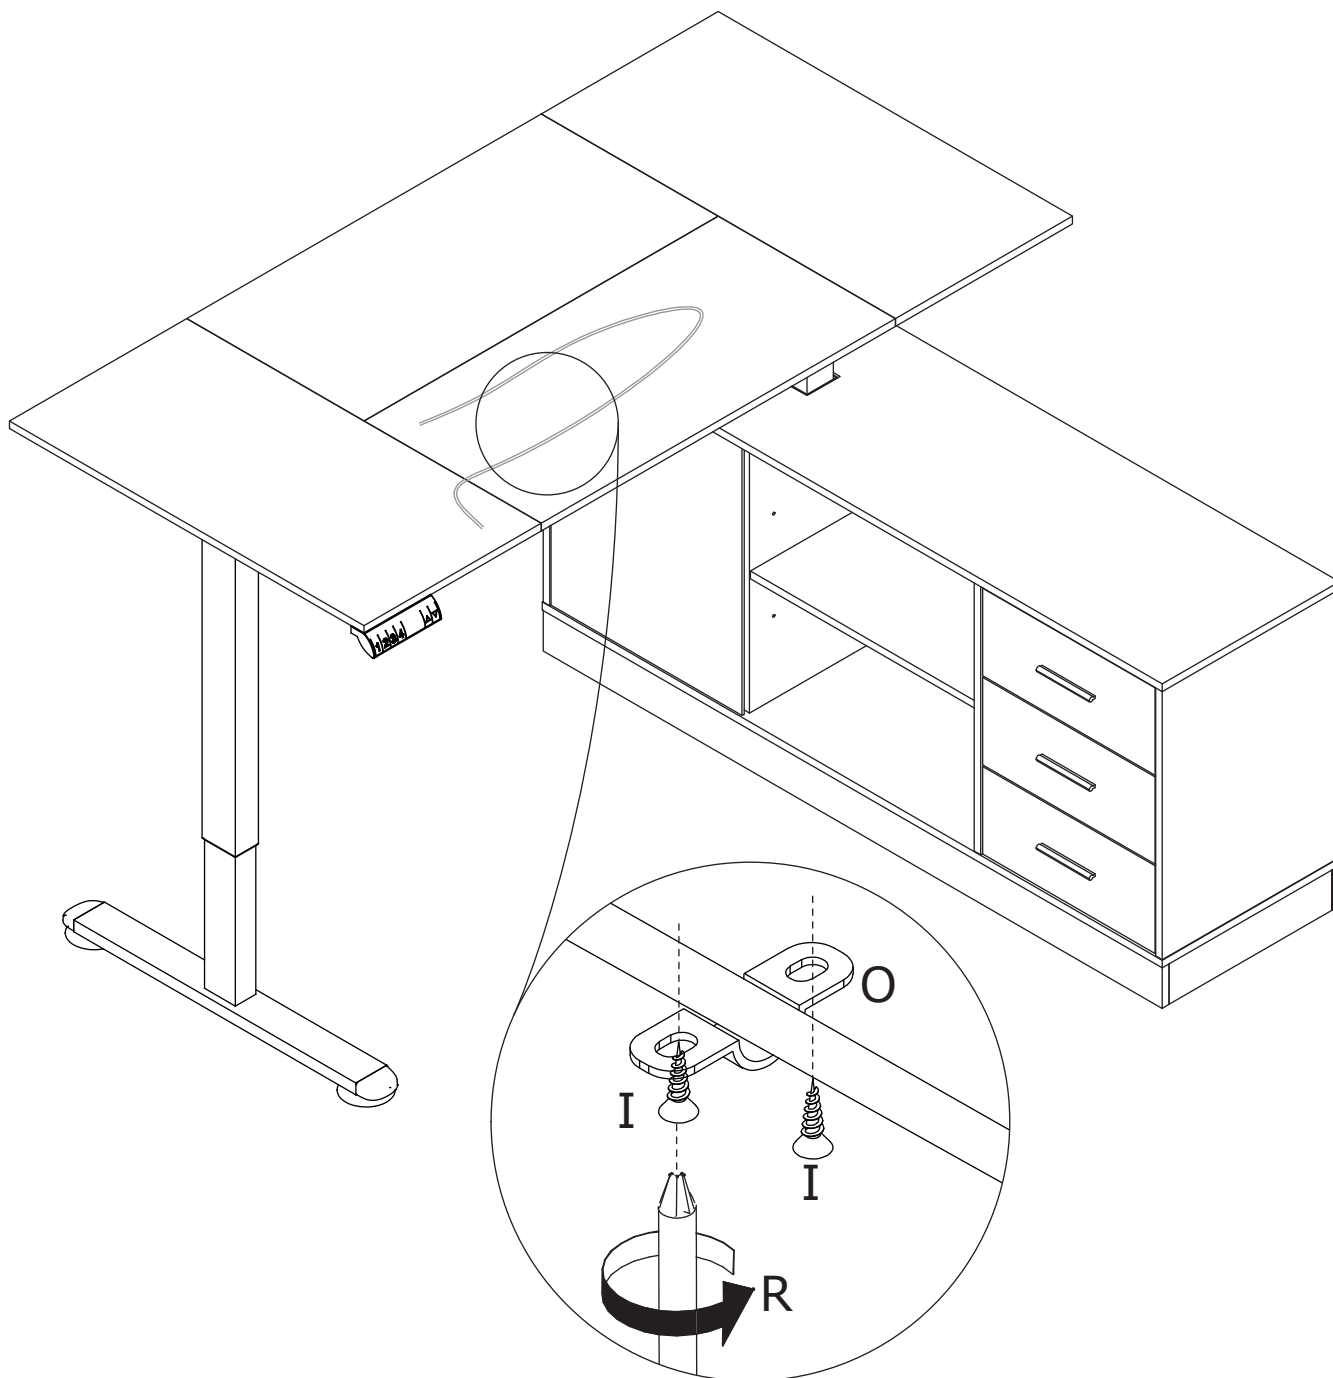

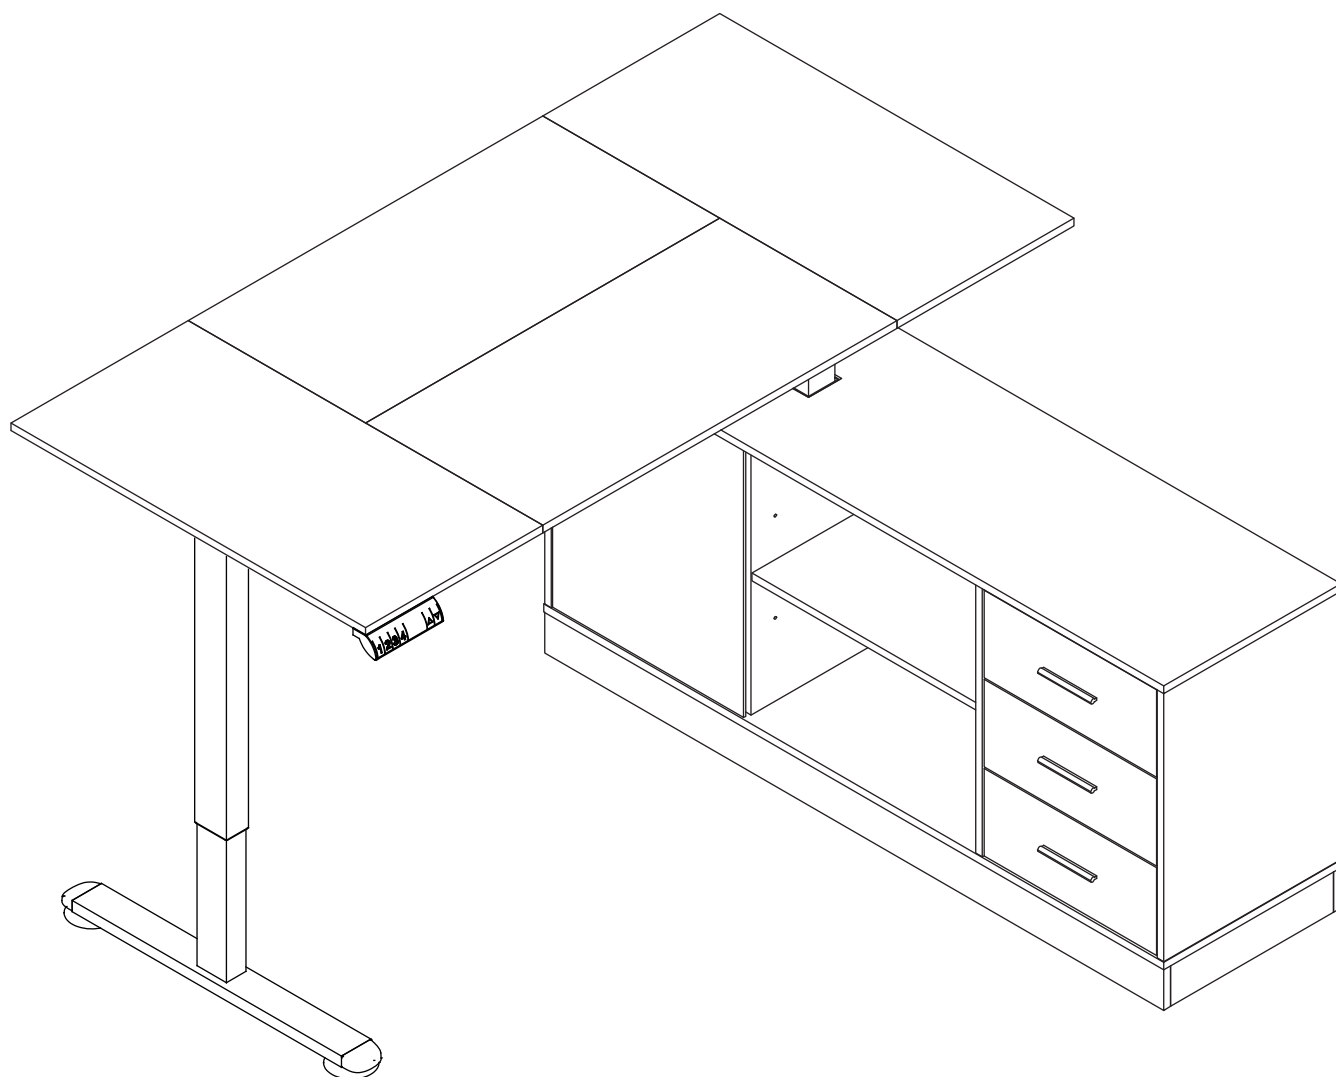

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068