


Ceiling Fan

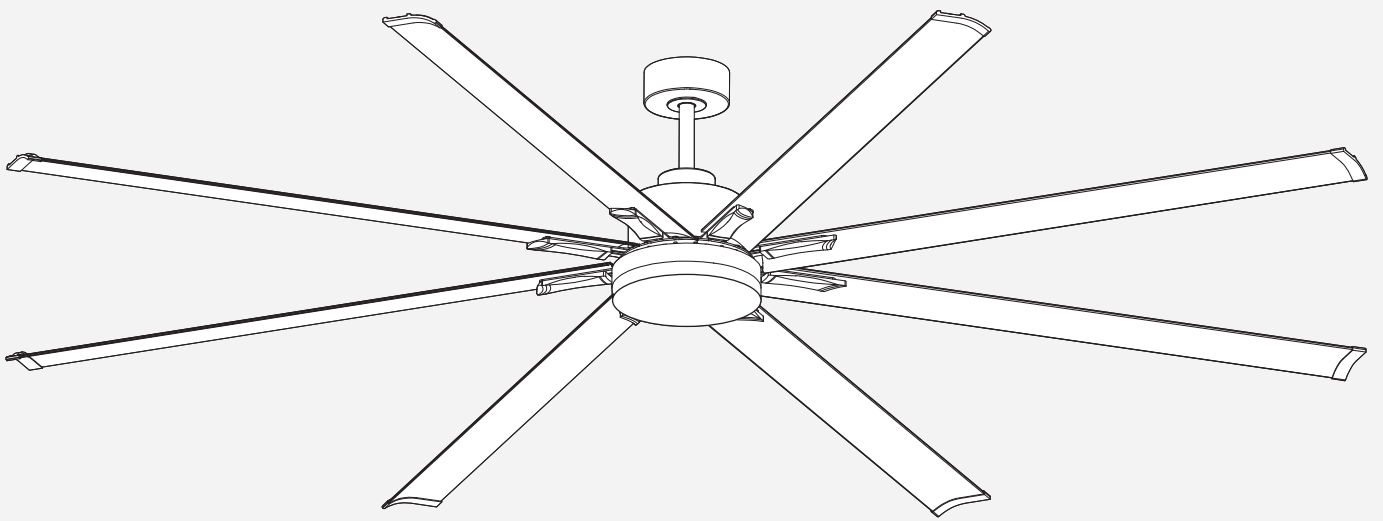

USER MANUAL

Thanks for Choosing

Your support means the world to us. We hope you enjoy our products much as we did creating it.

CONTENTS

01	IMPORTANT SAFETY INSTRUCTIONS	01-02
02	PACKAGE CONTENTS	03
03	BEFORE INSTALLATION	04
04	ASSEMBLING THE CEILING BRACKET	05
05	ASSEMBLING THE DOWNROD	06-07
06	HANGING YOUR CEILING FAN	08-09
07	ASSEMBLING THE BLADES	10
08	ASSEMBLING THE LIGHT KIT	11
09	USING YOUR CEILING FAN	12-13
10	LINK TO APP	14-16
11	LINK TO ALEXA	17-18
12	LINK TO GOOGLE	19-20
13	CLEANING AND MAINTENANCE	21
14	TROUBLESHOOTING	22
15	PIGOABZ CUSTOMER CARE	23

IMPORTANT SAFETY INSTRUCTIONS

01

READ AND SAVE THESE INSTRUCTIONS

- 1. WARNING:** To reduce the risk of fire, electric shock, or personal injury, mount directly to a structural framing member or to an outlet box marked acceptable for fan support of 15.9kg(35 lbs). For outlet box mounting, use mounting screws provided with the outlet box.
- 2.** To avoid possible electrical shock, before installing or servicing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location. If you cannot lock the circuit breaker in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
- 3.** To reduce the risk of electric shock, this fan must be installed with an isolating wall control/switch.
- 4. WARNING:** To reduce the risk of personal injury, do not bend the blade brackets when installing the blade brackets, balancing the blades, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.
- 5.** Chemical burn hazard. Keep batteries away from children. This remote contains a lithium button cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.
- 6.** Non-rechargeable batteries are not to be recharged. Exhausted batteries are to be removed from the product.
- 7.** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. It is recommended that children be supervised to ensure that they are not using the appliance improperly.
- 8. WARNING:** To reduce the risk of fire or electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer(e.g.parts made at home using a 3D printer).
- 9.** Read all instructions and safety information before installing your new fan. Review the accompanying assembly diagrams.
- 10.** Before installing the fan, disconnect the power by removing fuses or turning off circuit breakers.
- 11.** Make sure all electrical connections comply with local laws and the National Electrical Code. Please hire a qualified electrician or consult a do-it-yourself wiring handbook if you are unfamiliar with installing electrical wiring.
- 12.** Make sure the installation site is roomy enough to allow fan blades to rotate. There is at least seven feet from the floor to fan blades' tips.
- 13.** If you are mounting the fan on a ceiling outlet box, please use a metal outlet box. Secure the box directly to the building structure. The outlet box and its support must be able to support the rotating fan(at least 35 lbs). Do not use a plastic outlet box. Attach the mounting bracket using the ceiling outlet box's hardware.

14. After installing the fan, make sure all the connections are secured so that the fan won't fall.
15. Do not insert anything between fan blades while the fan is operating.
16. Turn the fan off and wait for it to stop before reversing fan's rotating direction.
17. **WARNING:** To reduce the risk of electrical shock and personal injury, do not install the fan on a sloped ceiling and do not use this fan with any solid-state fan speed control device, or rheostat. You must install the outlet box using the two steel screws and lock washers coming with the fan.
18. All wiring must be in accordance with national and local electrical codes ANSI/NFPA70. If you are unfamiliar with wiring, use a qualified electrician.
19. After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
20. The splices after being made should be turned upward and pushed carefully up into the outlet box.
21. Instructions for supply connections: the white conductor of a fan identified as grounded conductor to be connected to a grounded conductor of power supply, the black conductor of fan identified as ungrounded conductor to be connected to an ungrounded conductor of power supply, the green conductor of fan identified for equipment grounding to be connected to an equipment-grounding conductor.
22. The total weight of the fan install to outlet box is 6.9kg, check that the outlet box is securely installed in place such that it is able to support at least the fan weight.
23. When mounted directly to the building structure, appliance installation shall not expose combustible materials and do not install the appliance to a ceiling with combustible finish. The installation of the appliance cannot leave the wood of the rafters or any thermal insulation exposed to the interior of the room.
24. To reduce the risk of electric shock, disconnect the electrical supply circuit to the fan before installing light kit.

FOR HOUSEHOLD USE ONLY

Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:


- Components or parts are damaged.
- Loud noise or unusual smell.





Specifications:

Power Supply	120V 60HZ
Light Power	20W
Motor Power	50W
Remote Control Battery	1.5V AAA

PACKAGE CONTENTS

  02

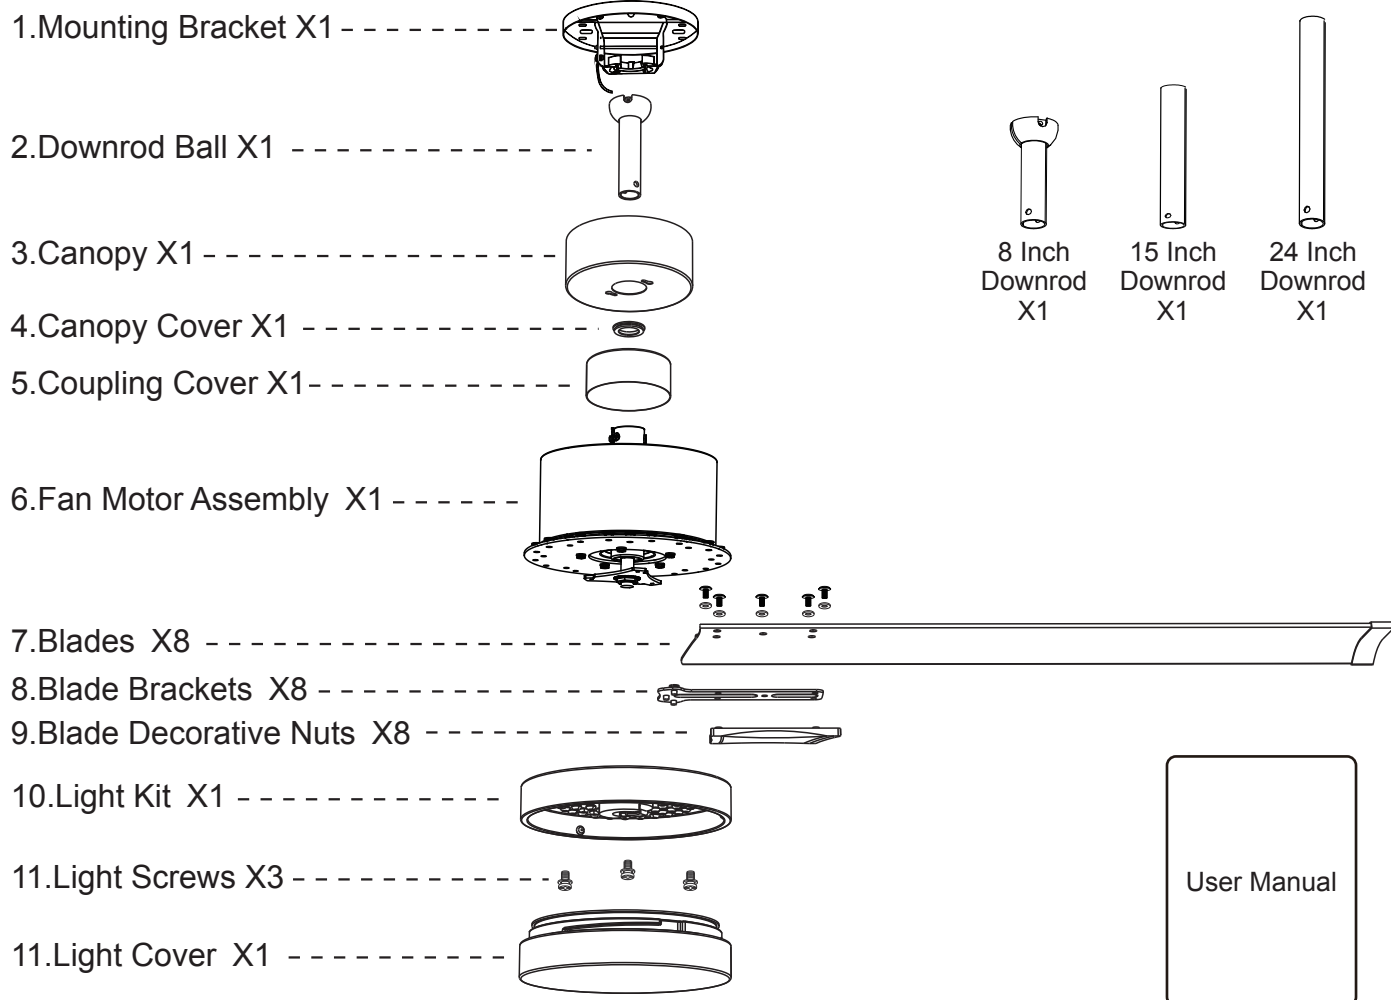


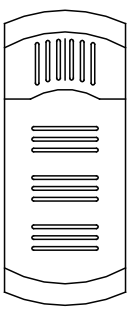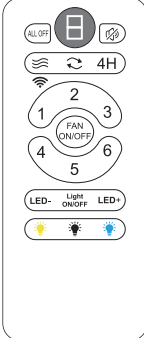1	2	3	4
Parts for Ceiling Bracket	Parts for Blades	Parts for Receiver	Parts for Remote Control Holder
 Mounting Bracket Screws X4  Expansion Screws X4  Metal Washers X4  Wire Nut X3	 Balanced parts package X1  Blade Washers X40  Blade Screw X40	 Receiver X1	 Remote Control X1 (Batteries not included)  Remote Bracket Screw X2  Aircraft Cap X2  Remote Control Bracket X1

BEFORE INSTALLATION

03

⚠ WARNING

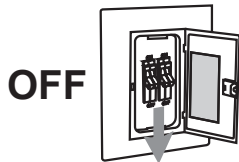

To avoid serious injury or death, turn off the power at the circuit breaker before installing the fan.

⚠ IMPORTANT

Input Voltage: 120 VAC, 60 Hz



- Connect the ground wire to the supply ground, ensuring its length exceeds that of the safety cable.
- A means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- Do not connect the fan to a damaged power source.

Select the Downrod


There are three downrods of 8" 15" 24" in the package, customers can choose according to the height of the house. (The normal default is to install on the 8 inch downrod.)

Ceiling Height	Downrod Length
9 feet	Included 5 to 10
10 feet	inches 15 inches
11 feet	15 to 24 inches
12 feet	36 inches

Tip:
Ensure the ceiling angle is **NOT** steeper than 15°.

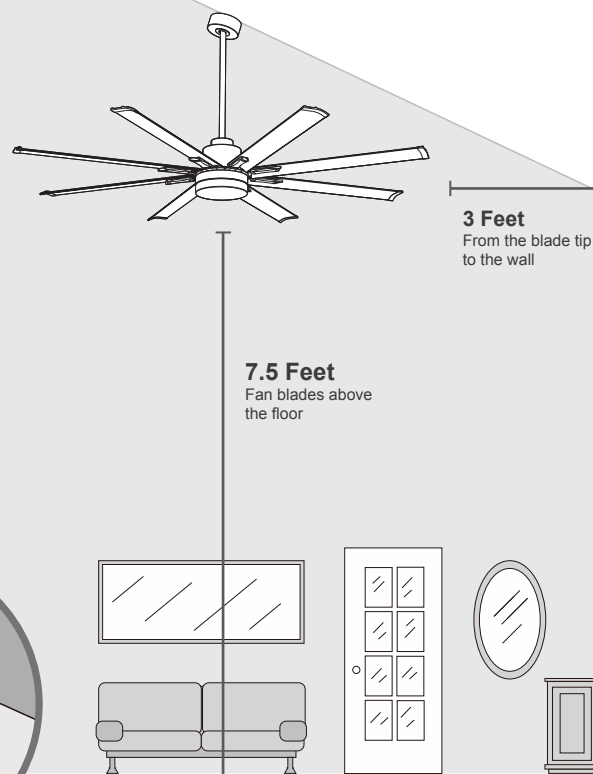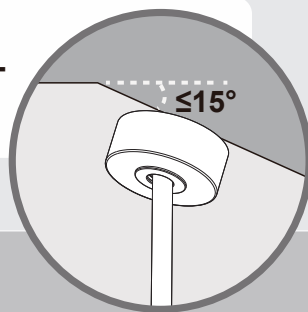

TOOLS NEEDED

 


Phillips Screwdriver




Wire Stripper



Step Ladder

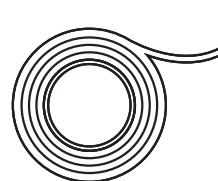

Electrical Tape

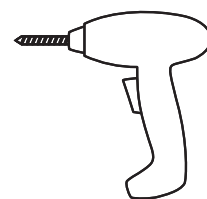


Power Drill


ASSEMBLING THE CEILING BRACKET

04

Concrete Ceiling

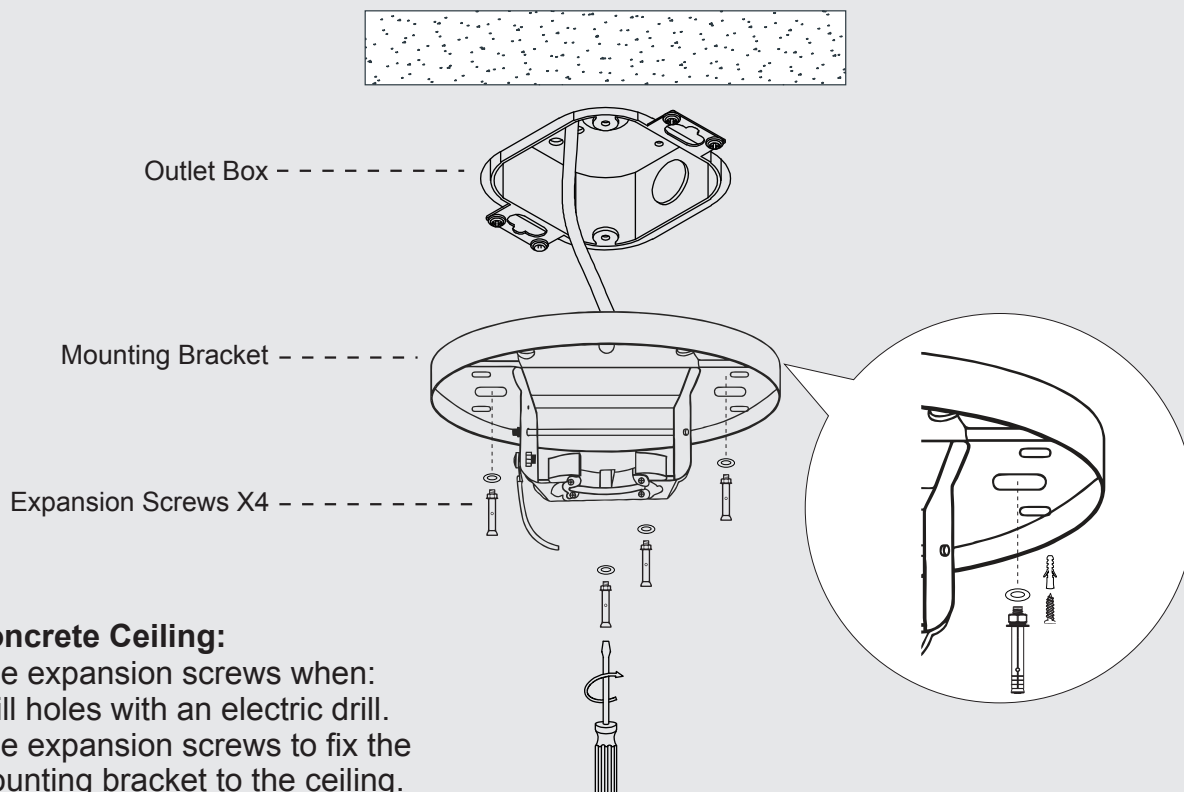

Wooden Ceiling

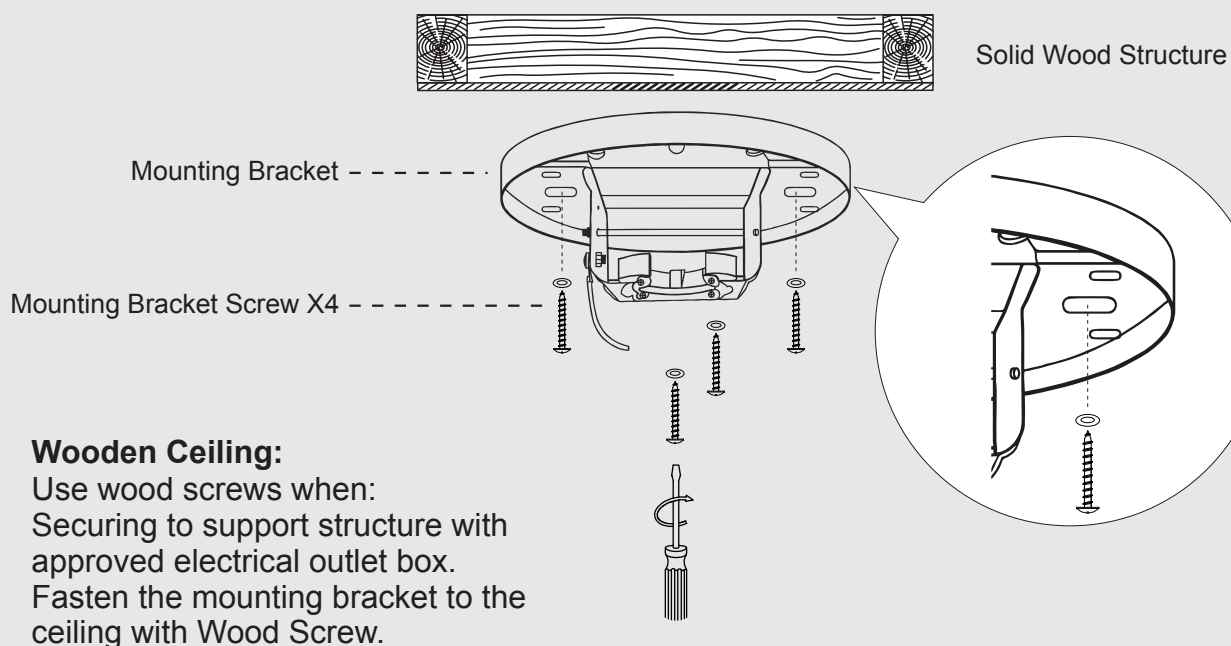

ASSEMBLING THE DOWNROD

05



⚠ WARNING: FAN FALL HAZARD


To prevent **SERIOUS INJURY** or **DEATH**:

- **ALWAYS** tighten set screws with screwdrivers.
- **DO NOT** hand-tighten the set screws.
- **CHECK** that the set screws are tight with a screwdriver each time you change the fan direction.




The downrod ball has been pre-installed on the 8-inch downrod.
If you wish to move it to the 15-inch downrod, please follow these steps.

1

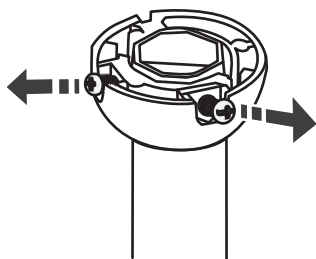


Loosen and remove the two screws on the downrod ball from the 8-inch downrod.

2

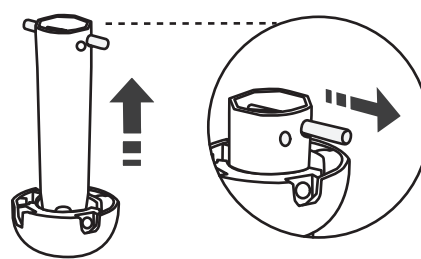


Lift the downrod upwards, then remove the horizontal bar, and detach the downrod ball from the 8-inch

3

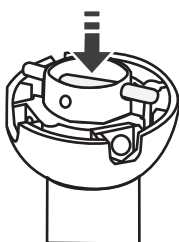

Tighten the two screws on the downrod ball from the 15-inch downrod position.

4

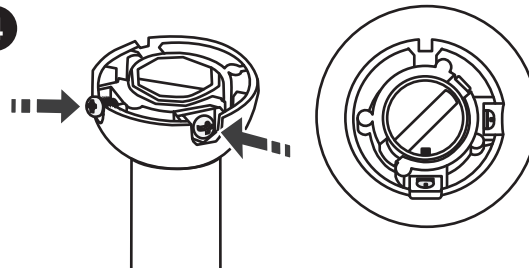


Insert the first perforated screw tightly, and then insert the second screw tightly.

Note: Using an excessively long downrod may increase fan wobble. When using a 24-inch downrod, extension wires are required for the light and motor connections.

1

Step 1:


Remove the pre-installed set screws and downrod pin.

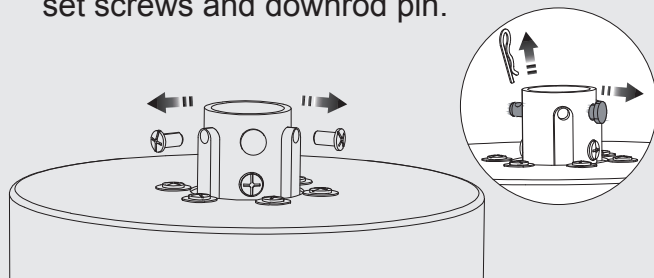

2

Step 2:

Loosen and remove the two screws securing the downrod ball to the 8-inch downrod. Lift the downrod, then remove the cross pin.

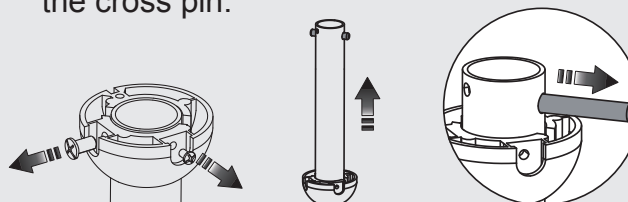

Ceiling Bracket →


Downrod →

Hanging the Ceiling Fan →

Blades →

Light Kit


3

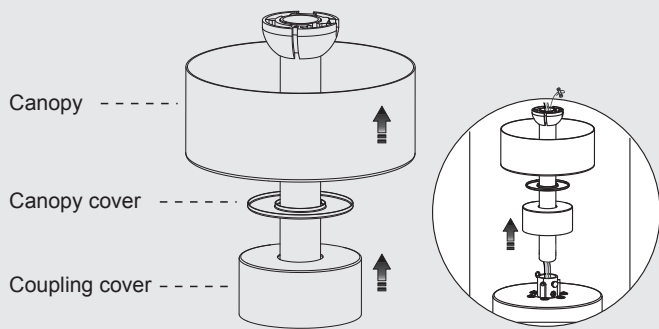

Step 3:

Slide the canopy, canopy cover, and coupling cover onto the downrod.
Feed all wires and the safety rope through the downrod.


4

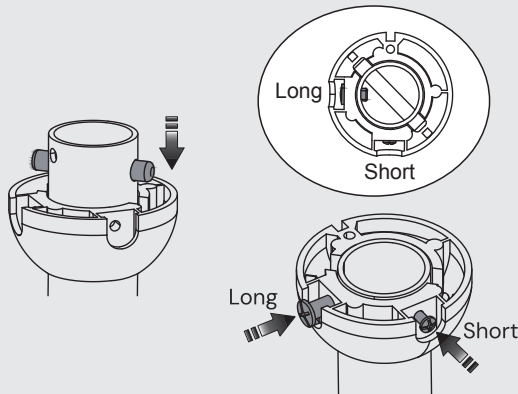

Step 4:

Reinstall the downrod ball onto the 8-inch downrod.
Insert the cross pin into its designated position, then tighten the two screws removed earlier.


5

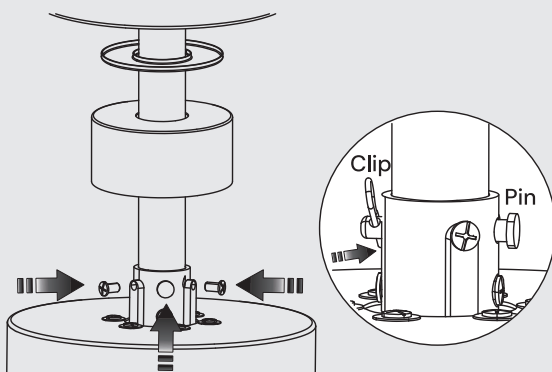

Step 5:

Carefully slide the downrod into the motor yoke.
Reinstall the downrod pin and clip.
Tighten the two set screws removed earlier.

6

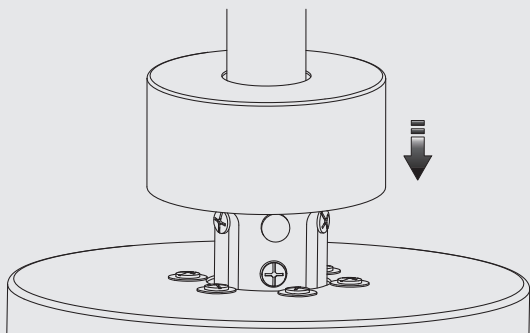

Step 6:

Slide the coupling cover down.

Note: Please lift the canopy and yoke cover to avoid interference with your installation when you are tightening set screw.

Ceiling Bracket →

Downrod →

Hanging the Ceiling Fan →

Blades →

Light Kit

HANGING YOUR CEILING FAN

06




⚠ WARNING: FAN FALL HAZARD

To prevent SERIOUS INJURY or DEATH:


- ALWAYS tighten set screws with screwdrivers.
- DO NOT hand-tighten the set screws.
- CHECK that the set screws are tight with a screwdriver each time you change the fan direction.

1

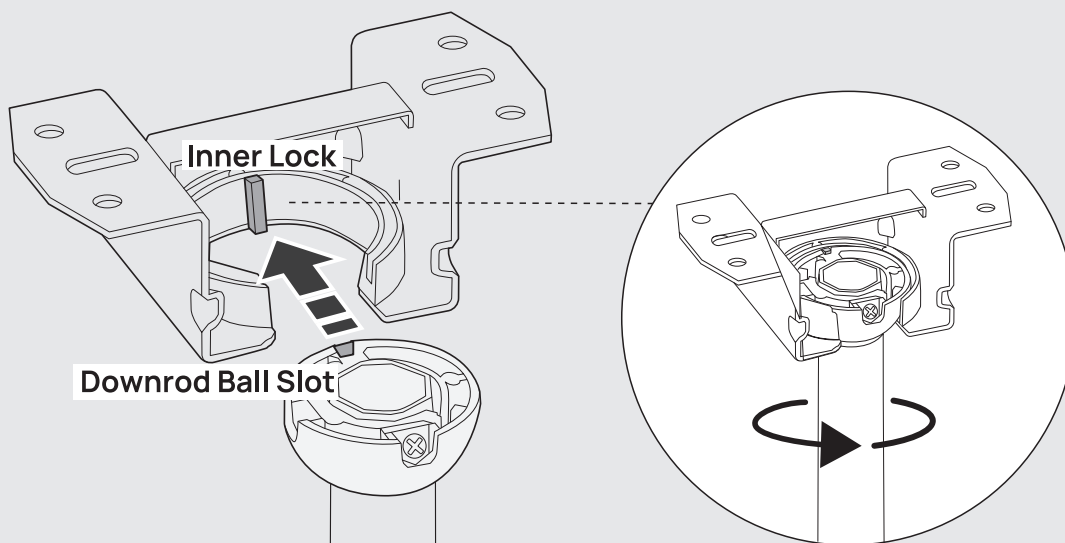

Step 1: Seat the downrod ball into the ceiling bracket. Make sure the slot on the downrod ball aligns with the locking tab inside the bracket. Rotate the downrod until it locks into place.

2

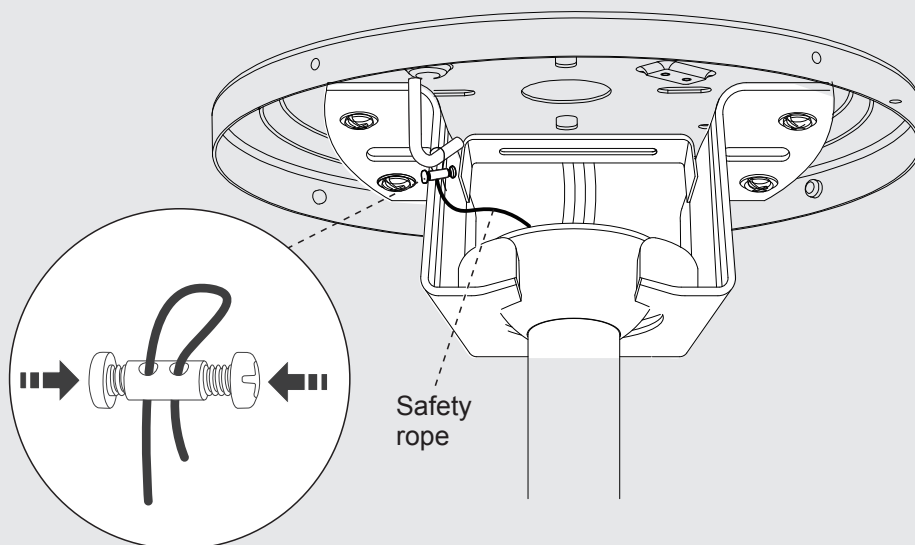

Step 2: Hang the fan's safety cable onto the hook on the mounting bracket. Loosen the screw on the safety cable clamp slightly, pull the cable tight, then retighten the screw securely.

Ceiling Bracket →


Downrod →

Hanging the Ceiling Fan →

Blades →

Light Kit

3

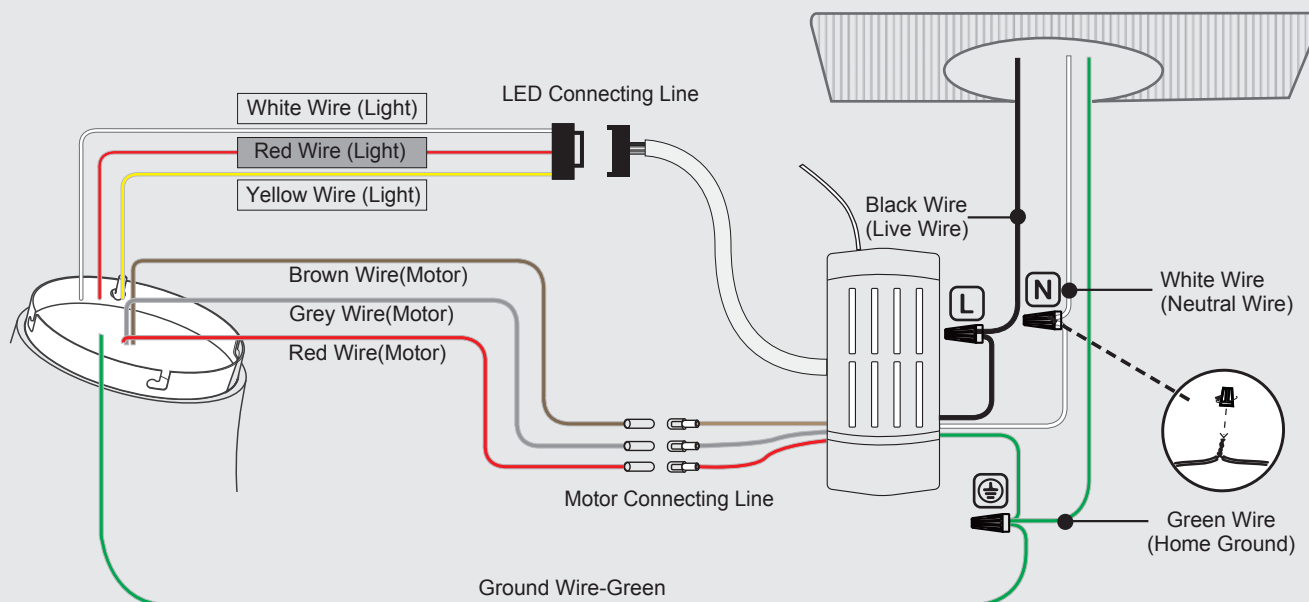


Connect the motor wires and power supply wires to the corresponding wire connectors on the receiver.

NOTE: Twist the bare wire ends together and secure them with a wire nut. Twist the wire nut clockwise until tight. Gently pull on each wire to ensure the connection is secure.


NOTE: After the wiring is completed correctly, the receiver will emit a single beep when power is turned on. If no sound is heard, double-check all wiring connections and inspect the wire ends for damage or loose connections.

4

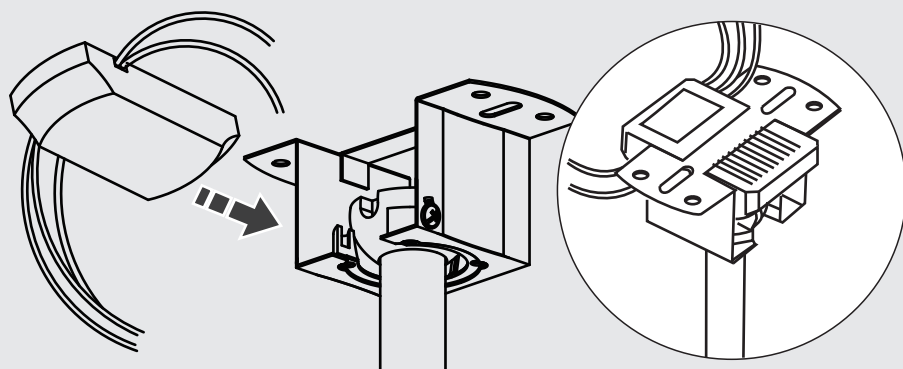


Insert the remote receiver into the mounting bracket.

5

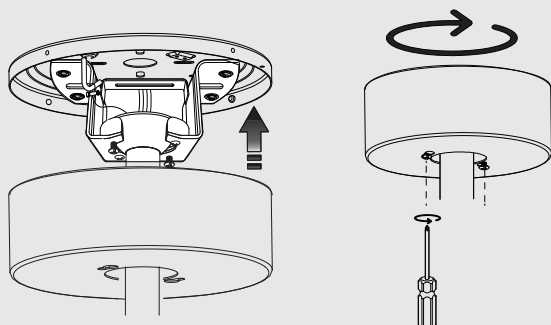

Rotate the canopy clockwise.
Align the screws on the mounting bracket with the holes in the canopy until it seats into place.
Tighten all canopy screws securely with a screwdriver.

6

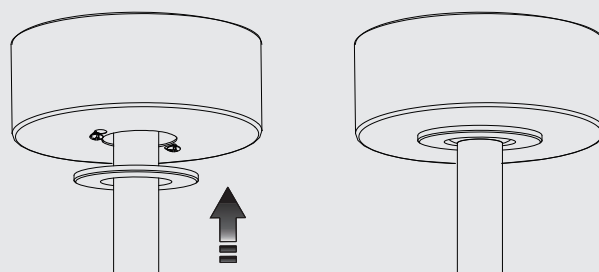

Push the canopy cover up until it snaps into place.

Ceiling Bracket



Downrod



Hanging the Ceiling Fan



Blades



Light Kit


ASSEMBLING THE BLADES

07

****NOTE****

Ensure all blade screws are tightened evenly and securely. Do not overtighten the blade screws. Install all blades before operating the fan, as uneven or incomplete installation may cause fan wobble or noise.

1

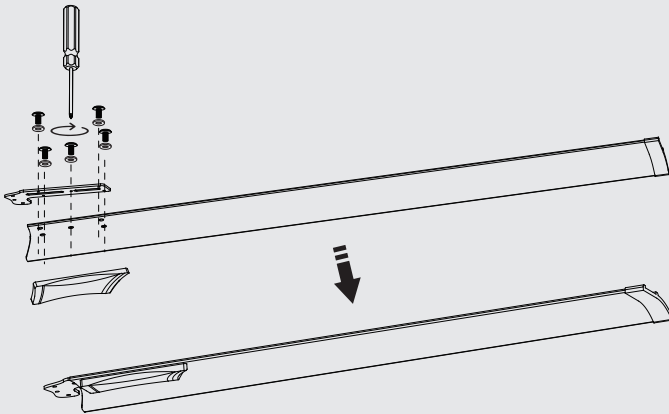


Step 1:

Secure each fan blade to the blade bracket using the included five blade screws with blade washers and decorative nuts.

Tighten all fasteners evenly and firmly. Repeat to assemble all eight fan blades.


2

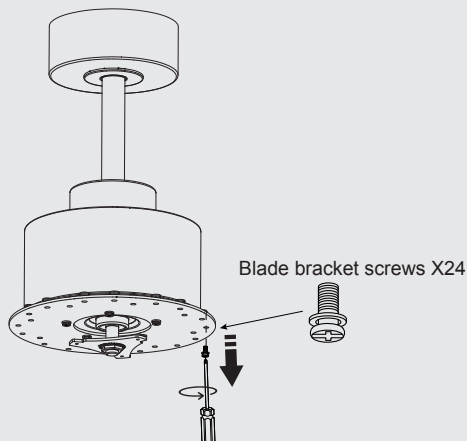

Step 2:

Remove the 24 screws from the fan motor housing and set them aside for later use.


3

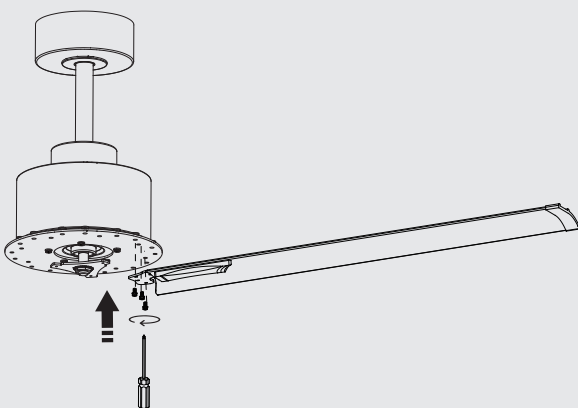

Step 3:

Attach each blade assembly to the fan motor housing using the three screws removed earlier.


Tighten the screws firmly. Install all eight blade assemblies.

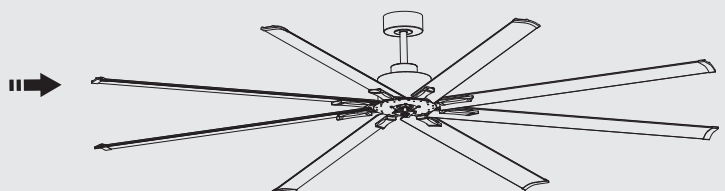

ASSEMBLING THE LIGHT KIT


08

1

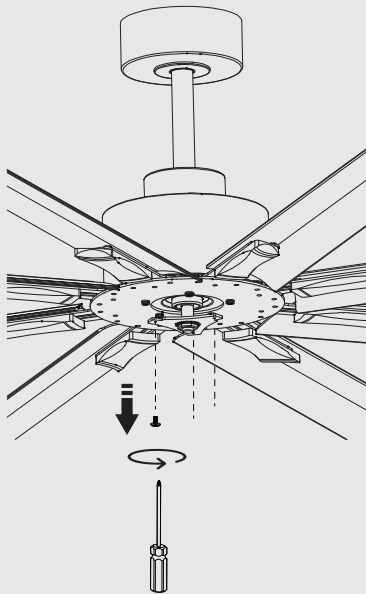

(1)


Remove the screws from the triangular mounting plate on the motor.

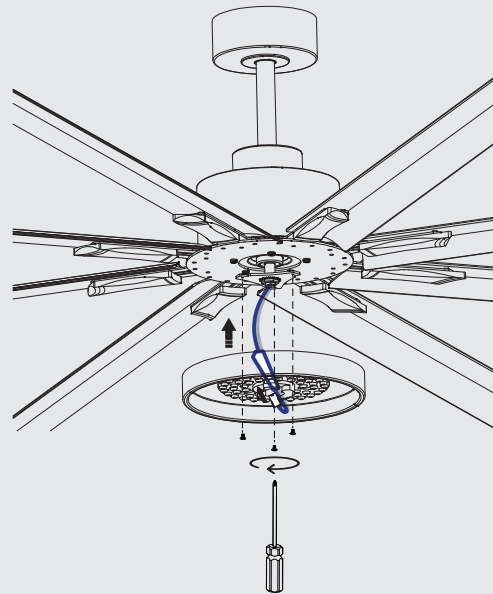

(2)


Align the holes in the light board with the screw holes in the mounting plate, then reinstall the screws and tighten them securely.

2

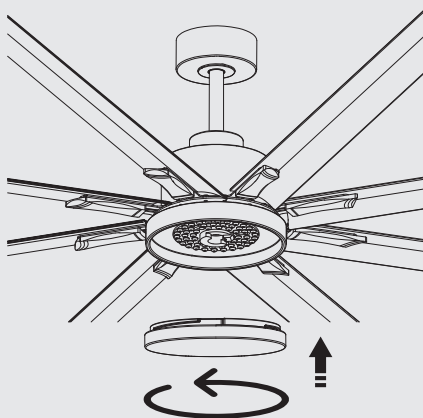

(1)

Make sure all wire connections are in good condition and properly seated.

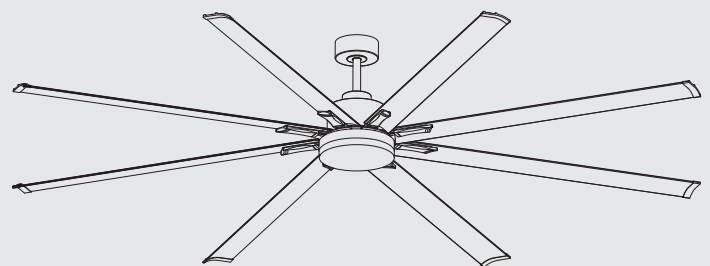


(2)

Connect the light kit wires to the motor wires, then install the light cover by rotating it clockwise until it locks into place.

NOTE: The three screws on the lamp panel are part of the lamp panel's structural composition, and there is no need to tighten or remove the screws again.

USING YOUR CEILING FAN

09

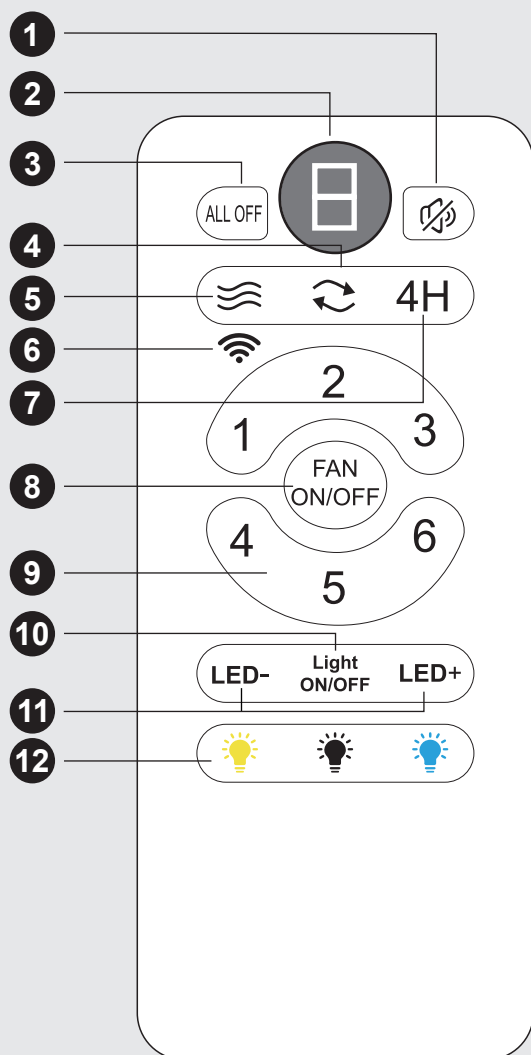

- ❶ Mute Button (Press and hold the Mute Button for 3 seconds to turn the beep sound on or off)
- ❷ Fan Speed Display
- ❸ ALL OFF
- ❹ Fan Forward / Reverse Rotation
- ❺ Natural Wind
- ❻ WiFi Pairing
- ❼ 4H Timer
- ❽ Fan ON/OFF (Pairing)
- ❾ 6-Speed Fan Control
- ❿ Light ON/OFF (Press to switch)
- ⓫ Brightness + / - (Press and hold)
- ⓬ Color Temperature Selection Buttons



● Install 1.5*2 volt battery (**Not included**)
(To prevent damage to transmitter, remove the batteries if not used for a long time).

● Do not place the remote control in an excessively hot or humid environment.

REMOTE CONTROL SETTING

How to pair the remote control?

Step 1: Turn the power off for at least 5 seconds, then turn the power on.

Step 2: Within 5 seconds of powering on, point the remote at the controller and hold the button

Fan ON/OFF () for about 5 seconds.

Step 3: A "beep" sound indicates successful learning.

Note: Code-pairing won't be completed if the power-on time exceeds 10 seconds.

If the fan receiver does not power on or emit a beep sound after pairing, please contact us for a free replacement of the entire remote and controller set !

(The remote control and the receiver are a matched set and they need to be replaced or used as a whole.)

Tip: Do not use any other dimmer or speed controller.

If you need compatible wall switch, contact us and we will help!


Tip: Memory Function Command

With the memory function, the controller can save the set/asjusted status (light and speed) while supply power off and resume to the original state after reload the power supply.

How to save the color temperature?

After turning off the light, wait for 5s reopening it to save the color temperature.

Installing one fan operating on multiple remote controls

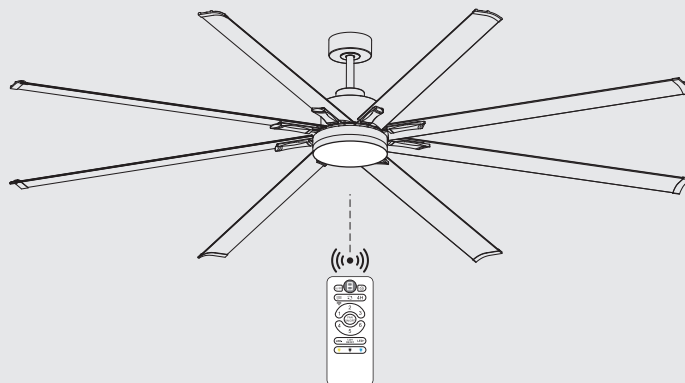


To have multiple fans operated by a single remote control, you must pair the remote control to each additional receiver. The receiver that shipped with your fan is already paired to the remote control.

- Power cycle the fan by toggling the wall switch (or circuit breaker if needed).

Within 10 seconds long press the **Fan ON/OFF** () on your remote for 5 seconds to pair it.

- If applicable, the fan will turn on, along with a continuous beep to indicate successful pairing.

Installing multiple fans operating on a single remote control (Up to Two Fans)

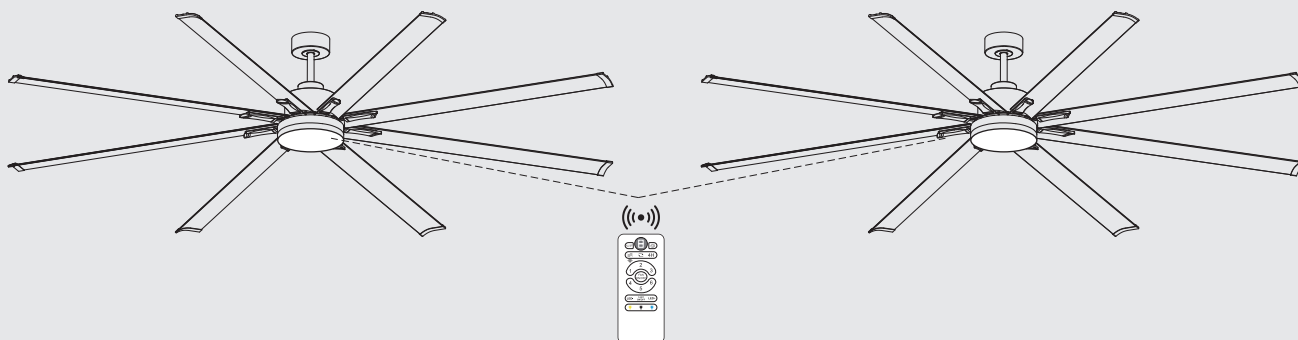

To have multiple fans operated by a single remote control, you must pair the remote control to each additional receiver. The receiver that shipped with your fan is already paired to the remote control.

- For each additional fan, ensure that a compatible receiver is installed. Disconnect power from all other fans while pairing.

- Power cycle the fan by toggling the wall switch (or circuit breaker if needed).

Within 10 seconds long press the **Fan ON/OFF** () on your remote for 5 seconds to pair it.

- If applicable, the fan will turn on, along with a continuous beep to indicate successful pairing.

LINK TO APP

10

Step 1



Turn Power ON

Step 2: Download App

Search and Download the APP on your smart device.


Step 3: Authorizations

Make sure that your Wi-Fi and using the APP.




Step 4: Sign Up and Login

If this is your first time logging in, please register for an account first.

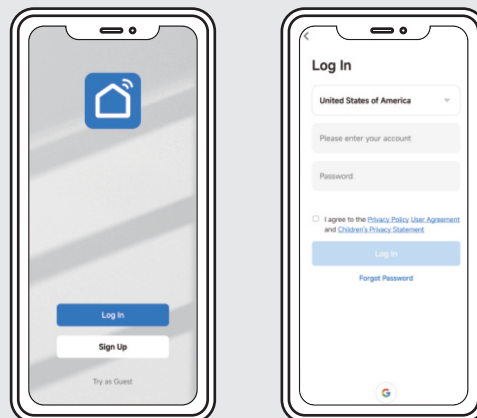


Step 5: Wi-Fi Pairing

Turn fan power off and back on at the switch, then within 10 seconds, press the **"Natural Wind & Wi-Fi Pairing"** button for 3 seconds to pair the wi-fi. When it beeps, the pairing indicating successful.

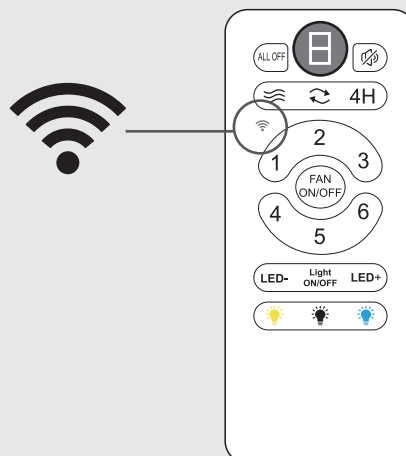


Step 6

- 1 Select "Add Device" or click the "+" in the upper right corner.

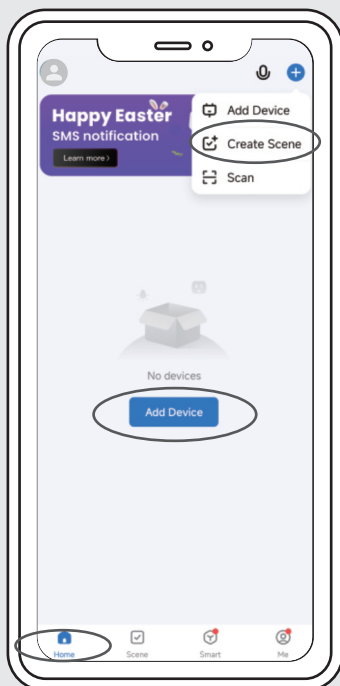


- 2 Find the Fan Device, click "ADD".

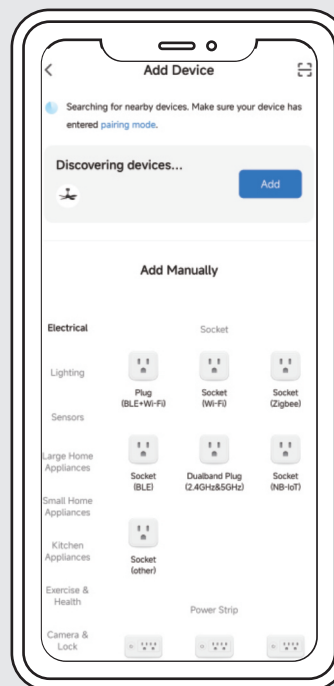


Tip: If you are unable to search for the device, repeat step 5 to reset.

Step 7

- 1 Fill in your 2.4GHz Wi-Fi name and password, then click "Next". Make sure the fan is connected to the same Wi-Fi as the device.

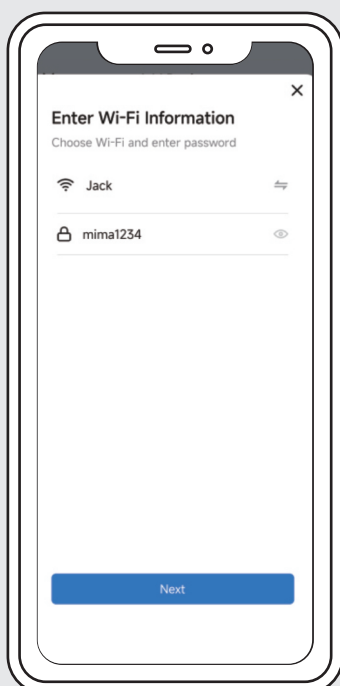


- 2 Waiting for connection.

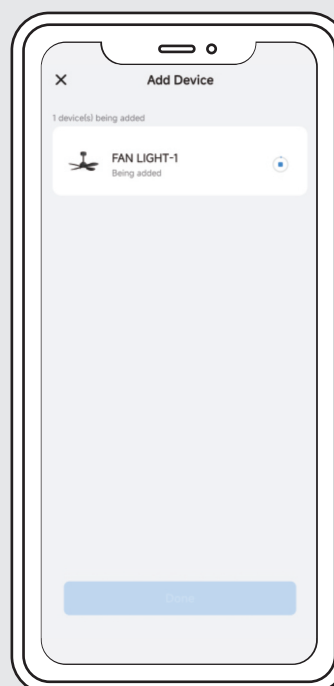


Step 8

- 1 After you have edited and saved the product name, click "DONE" to complete set up.

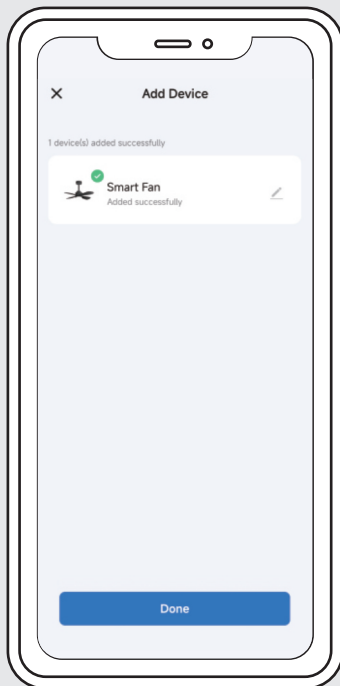


- 2 Device added successfully.

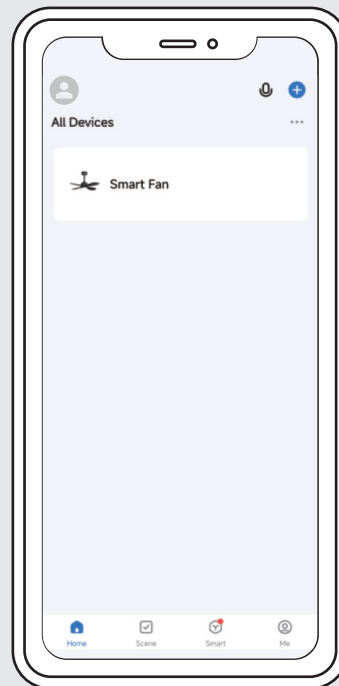

Step 9


Congratulations! You can use your mobile phone to control your fan!

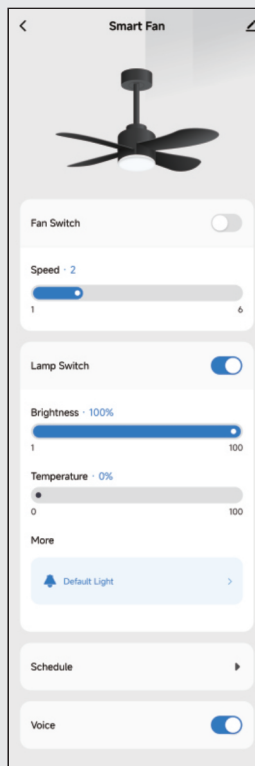

LINK TO GOOGLE

11


- 1 On the "ME" page, click "Google Assistant".

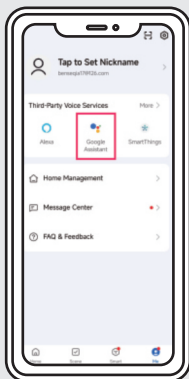


- 2 Follow the prompts to link with google assistant.




- 3 Click "Continue"

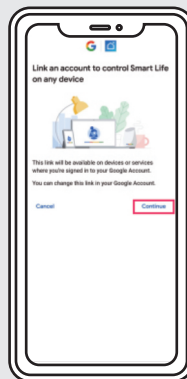

- 4 Click "Agree and link", the connection to google was successful.

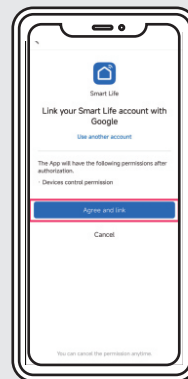


- 5 In the Google app interface, click on "2 new devices connected".

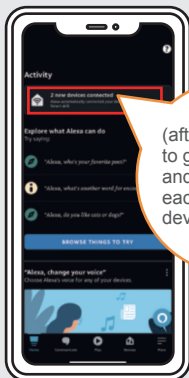


(after connecting to google, the light and the fan will each generate a device).


- 6 Selected fan.

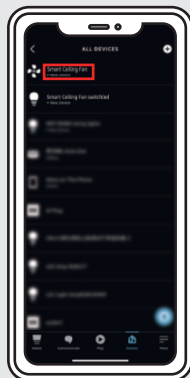


- 7 Click on the device name, modify to the name you want.

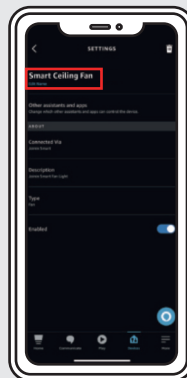

- 8 Modify successfully, return to the previous screen.

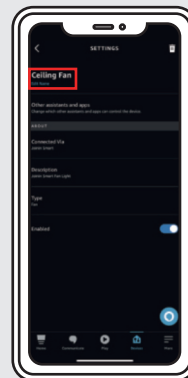


- 9 Similarly, select the light and change the name of the light.

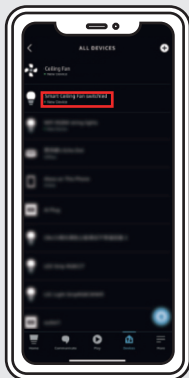


- 10 Click "Settings" in the upper right corner.



- 11 Click on the device name, modify to the name you want.

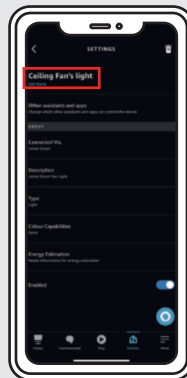


- 12 Now you can control our light and fan with google commands!

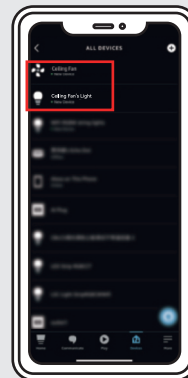


GOOGLE - VOICE CONTROL COMMAND LIST

Note: Command the voice control with the newly edited device name.

Feature Name	GOOGLE English(US)
Fan Power	"OK Google, turn on <Device Name>." "OK Google, turn off <Device Name>."
Light Switch	"OK Google, turn on light for the <Device Name>." "OK Google, turn off light for the <Device Name>."
Wind Speed Level Setting	"OK Google, set <Device Name> to (1-5)."
Color Temperature Setting	"OK Google, set the <Device Name> to cool white." "OK Google, set the <Device Name> to warm white." "OK Google, set the <Device Name> to neutral white."
Brightness Setting	"OK Google, what is the brightness level of <Device Name>?" "OK Google, adjust <Device Name> to 65% brightness." "OK Google, brighten the <Device Name>" "OK Google, dim the <Device Name>"
Forward / Reverse	"OK Google, set direction to summer on <Device Name>." "OK Google, set direction to winter on <Device Name>."
Light Countdown(Timer)	"OK Google, run <Device Name> timer for 1 hour." "OK Google, how much time is left on <Device Name> timer?" "OK Google, stop the <Device Name> timer." "OK Google, pause the <Device Name> timer." "OK Google, resume the <Device Name> timer."
Fan Countdown(Timer)	"OK Google, run <Device Name> timer for 1 hour." "OK Google, how much time is left on <Device Name> timer?" "OK Google, stop the <Device Name> timer." "OK Google, pause the <Device Name> timer." "OK Google, resume the <Device Name> timer."
Fan Mode	"OK Google, set mode to normal on <Device Name>." "OK Google, set mode to natural on <Device Name>."

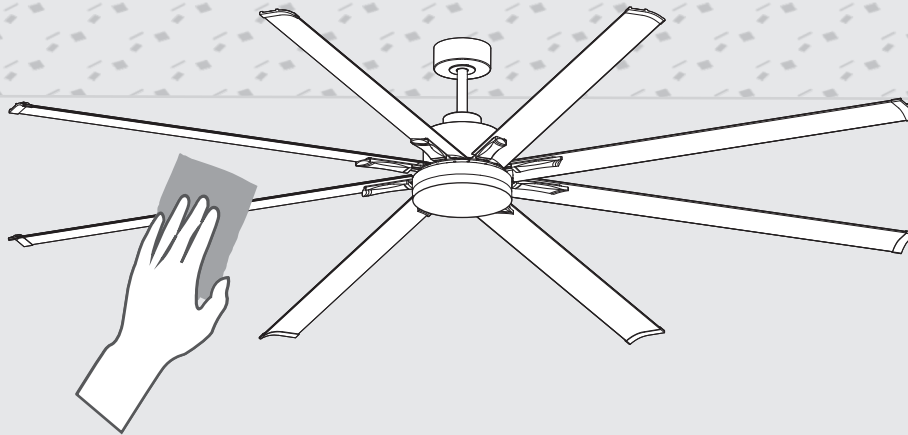

Clean the motor housing and blades with a soft brush or lint-free cloth to avoid scratching the finish.

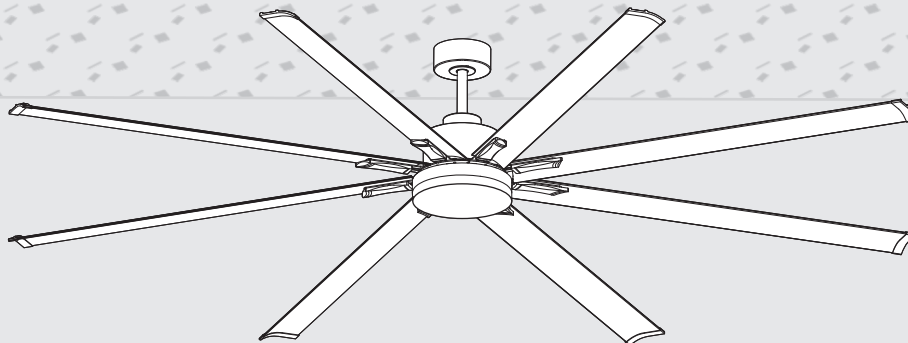

At least twice each year, lower the canopy to check the downrod assembly and tighten all screws on the fan.



- Shut off the main power supply before you begin any maintenance task.
- **DO NOT** use water or a damp cloth to clean the fan.
- Cleaning products may damage the finishes.



NOISE

When it is quiet (especially at night) you may hear occasional small noises. This is normal. Please allow a 24-hour “breaking-in” period, most noises associated with a new fan disappear during the time.

Your fan may occasionally jerk forward or backward upon starting up. This is normal and does not affect the fan operation. Try these troubleshooting steps before contacting customer service.

Problem	Solution
Fan not spinning	• Make sure the fan is getting power. • Check your circuit breaker or fuse panel and wall switch for functionality. • Check to make sure the fan wires are correctly connected to the house wires. • Remote control must be paired with the fan within 1 minute after connecting the fan to the electricity. • Use a multi-meter and test the adapter wiring harness to see if there is any electrical output. • All the pin wiring on the circuit board must be inserted tight and in the correct position. • Remote needs to be paired with the fan first. • Make sure the fan blades spin freely. • If you're using a wall control, check the power to the breaker from your control and try working your ceiling fan manually. (Normal switch only for the fan power on/off)
Fan light not working	• Make sure LED wires are connected to the circuit board. • Make sure the whole fan is powered.
The fan is noisy and wobbling	• Check if the blade screws are NOT rubbing against any part of the motor housing. • Check the pin wires are NOT connected against any moving parts. • Check the down fan cup is NOT hitting the motor. • Confirm the canopy is NOT touching the ceiling while the fan is in operation. • Check the downrod is NOT slanted. • Tighten any loose screws on the light kit, fan blades, motor coupling, downrod, brackets and mounting hardware. • Confirm the hanger ball is firmly seated in the mounting bracket. • The ceiling beam must meet the minimum tensile test strength of 30KG for installation. • Make sure the blades and brackets are NOT bent or deformed. • Verify the wire connections are not rattling against each other. • Verify the fan blades are not cracked. If the fan blades are cracked, replace the damaged blades with a new blade set from the same brand as your ceiling fan to ensure compatibility. • Confirm the light kit is NOT slanting and hitting the motor.
The fan or light automatically turns on/off	• Confirm the circuit breaker is not malfunctioning. • Verify the wire connections are not frayed. • Check the app is not set to a timer or schedule. • Cut the fan power for 10 minutes then power on again. • All the pin wiring on the circuit board must be inserted tight and in the correct position.

If your problem is not listed or still persists, please contact our Customer Support (see page 21).



Customer Service

01 30-Day Return Policy

If you're not completely satisfied with your purchase, simply return the merchandise via Orders. Unused merchandise can be refunded or exchanged within 30days from the original purchase date.

02 2-Year Warranty

We takes user experience very seriously, We provide you with good after-sales service, motor is guaranteed for ten (10) years and the whole fan warranty for two (2) years.
If your appliance fails to operate properly within our warranty period, we will arrange a new replacement free of charge and cover all the shipping costs.

03 Quick Response within12 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately at our support email. It doesn't matter if the product has been installed; our customer support team will respond with in 12hours and assist you quickly and efficiently.
The most efficient way to convey your problem to us is to attach a video illustrating your product issue.