 


TV STAND

USER MANUAL

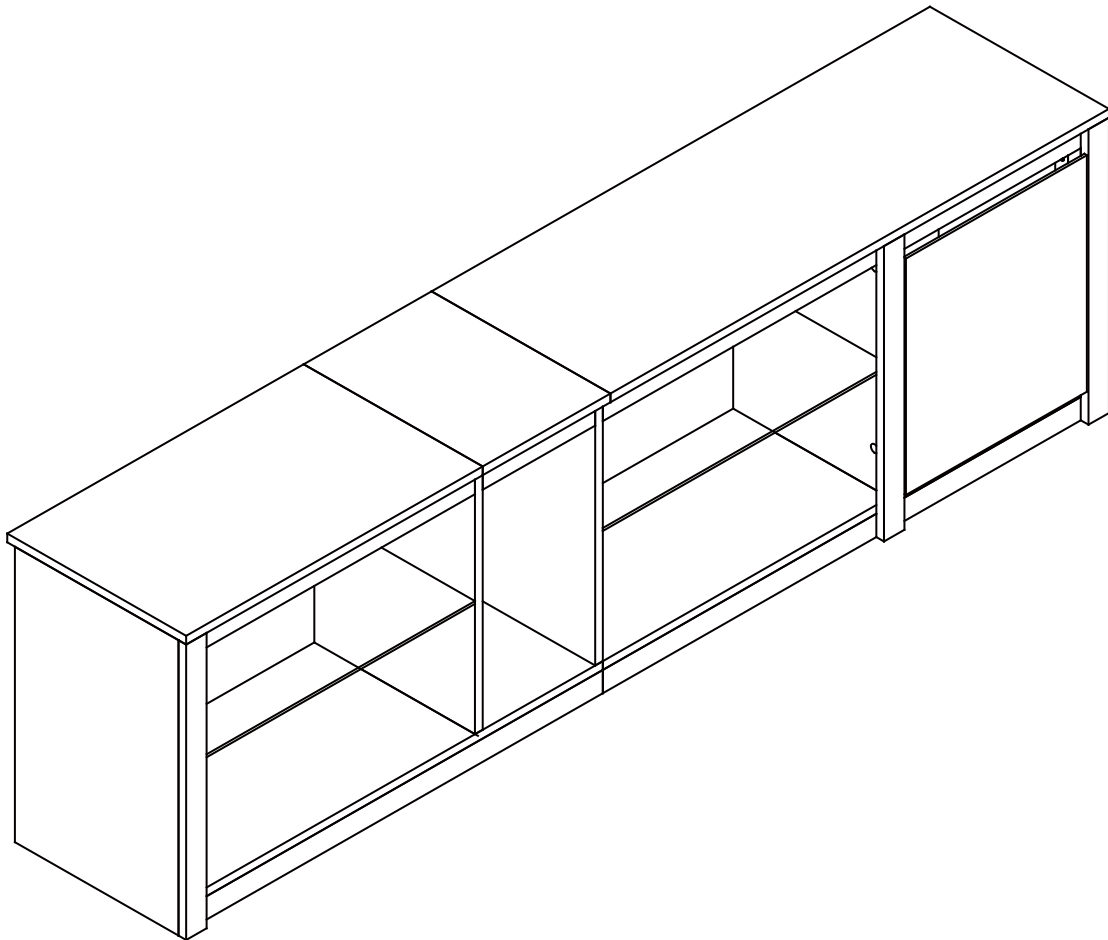

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

 
 
 
 
 
 
Before Installation

 
Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


 
Cam Lock Assembly Instructions

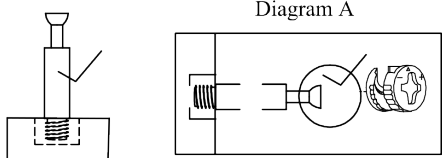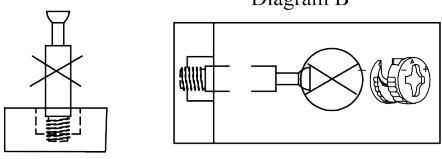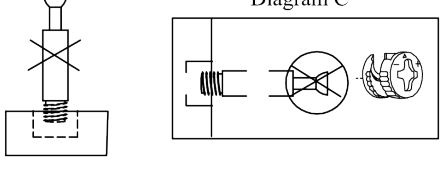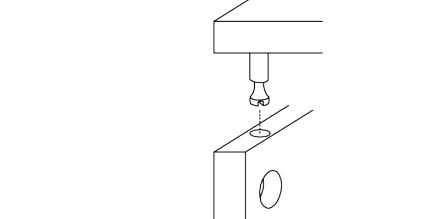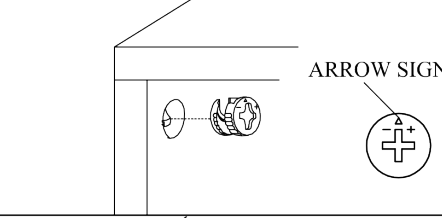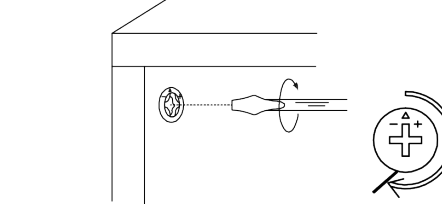	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>


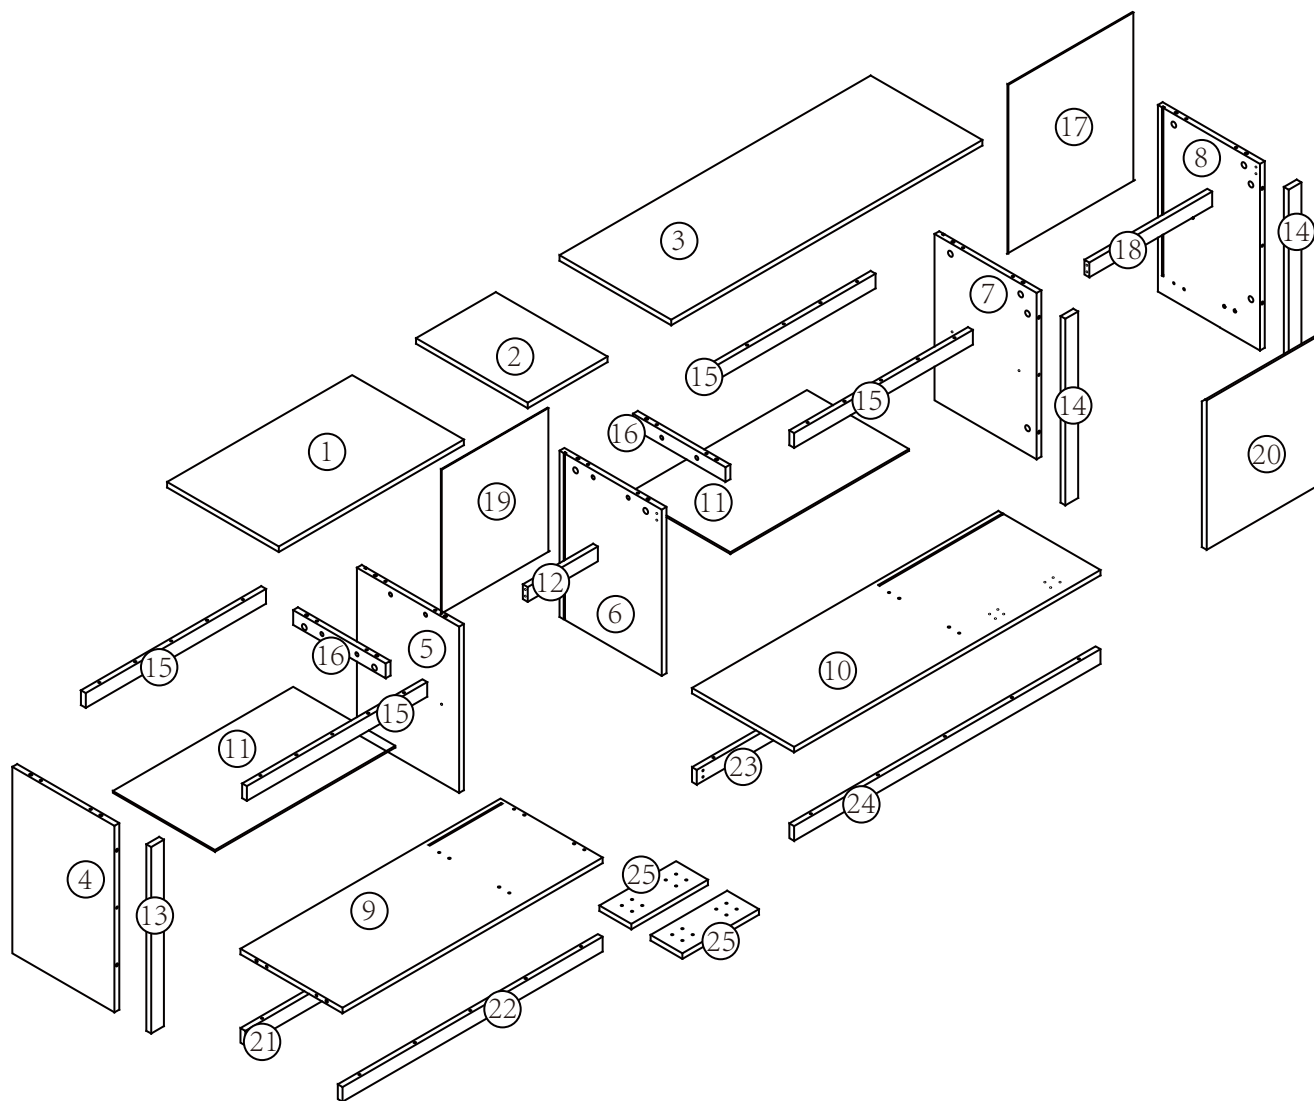 


Ax24	Bx24	Cx51 M6x30	Dx30 M4x40	Ex16 M4x25	Fx2
Gx16 M4x12	Hx4	Ix8	Jx16 M3x12	Kx2	Lx8
Mx8	Nx1	Ox2	Px1		

STEP 1

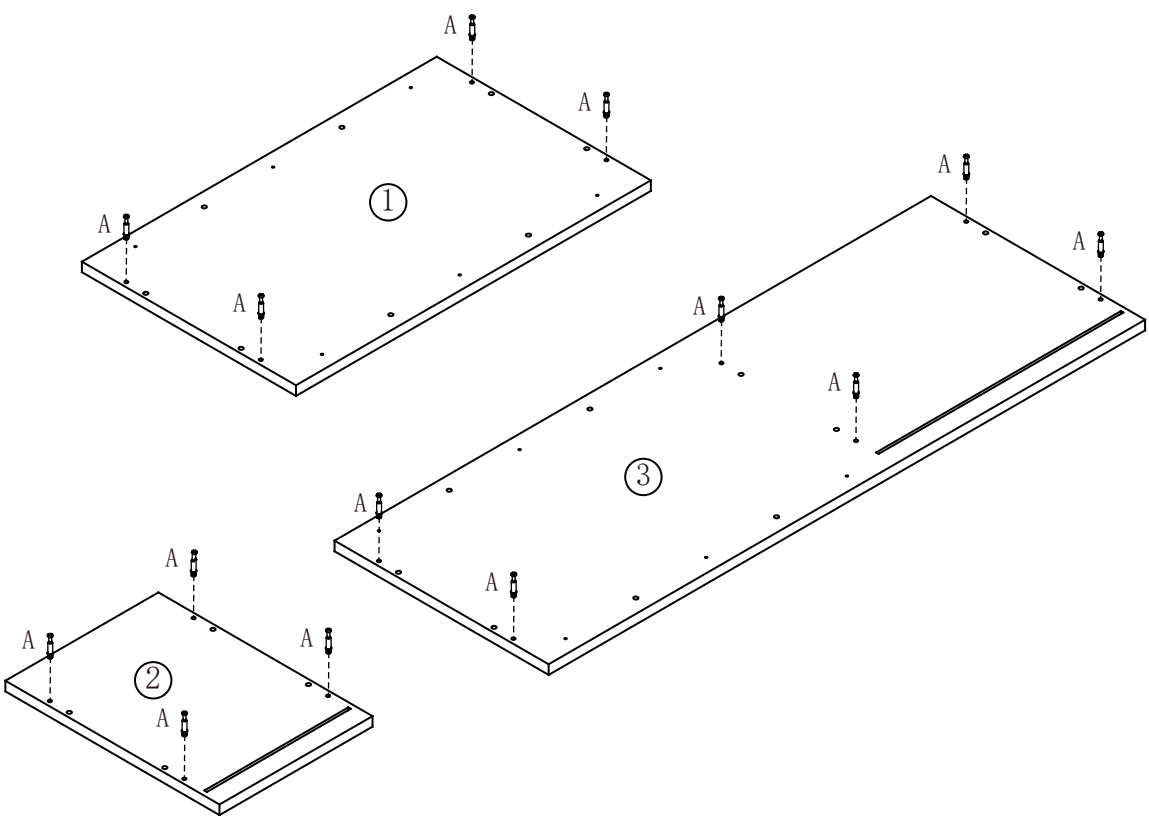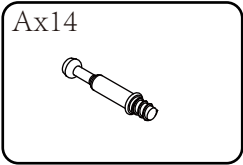

  STEP 2

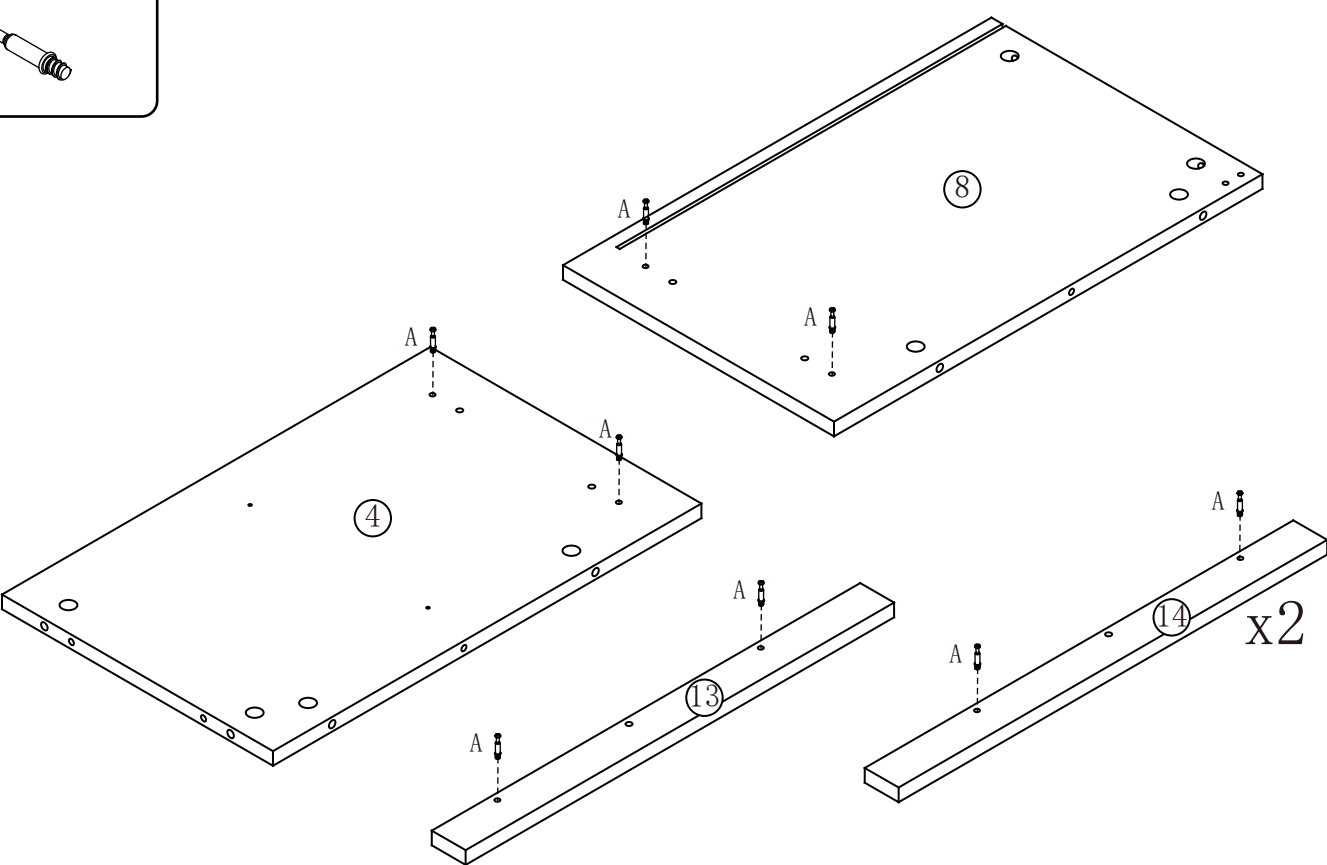
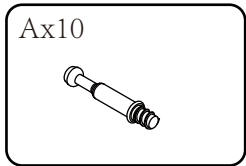


STEP 3

Bx6



  Cx3

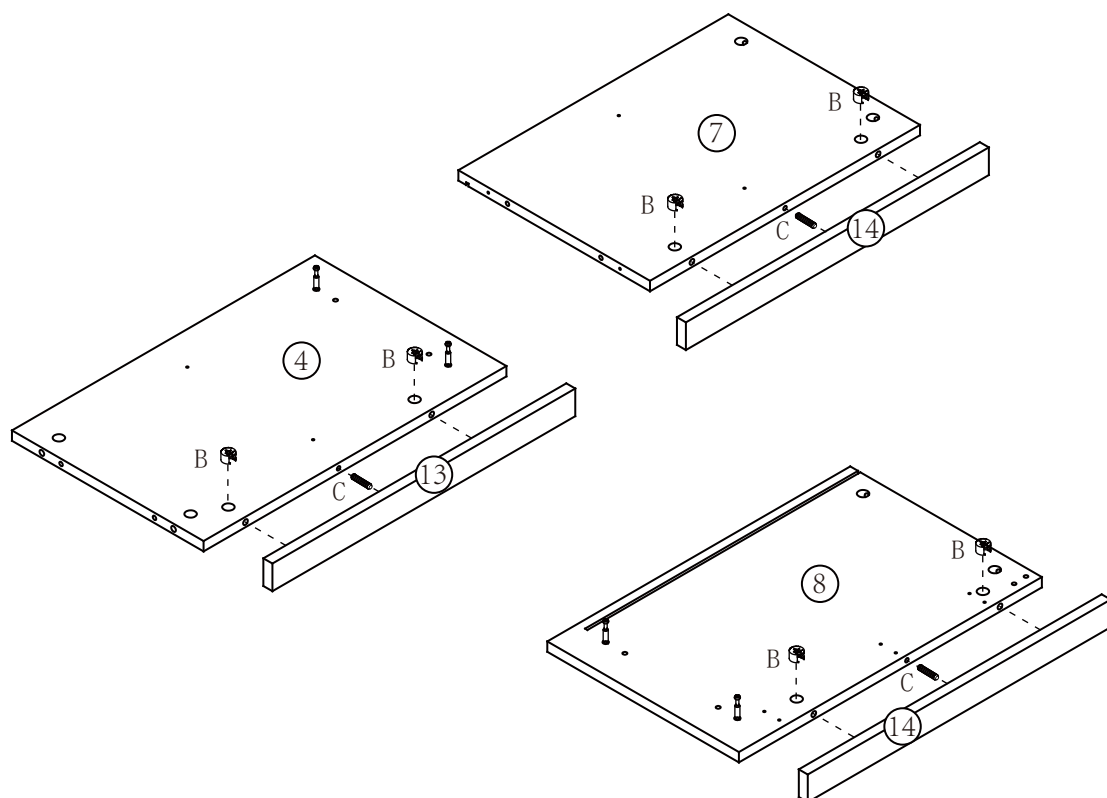

STEP 4





Dx6




Bx4



    Cx8

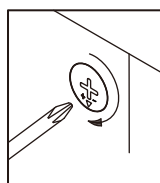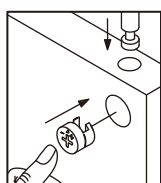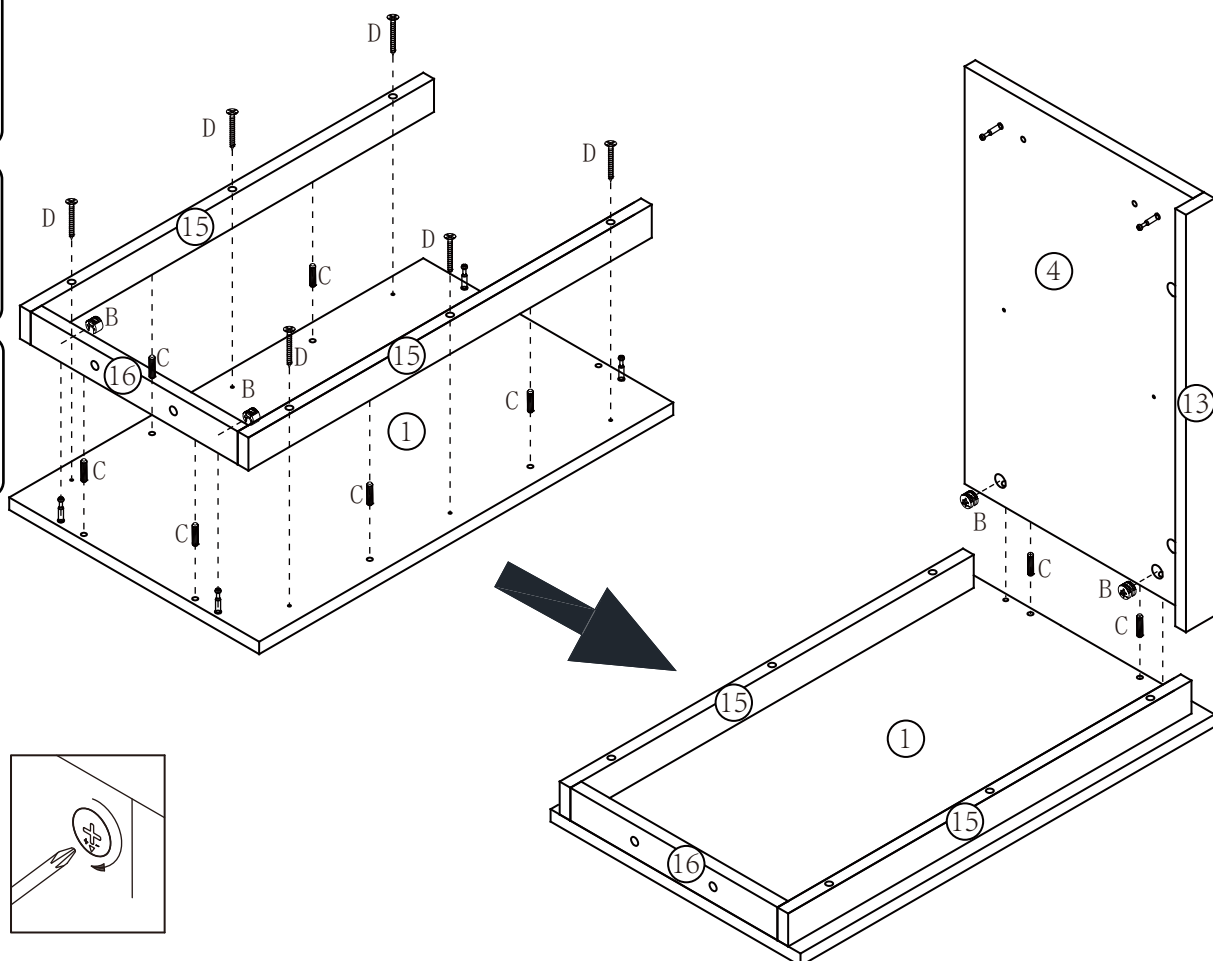



 
STEP 5

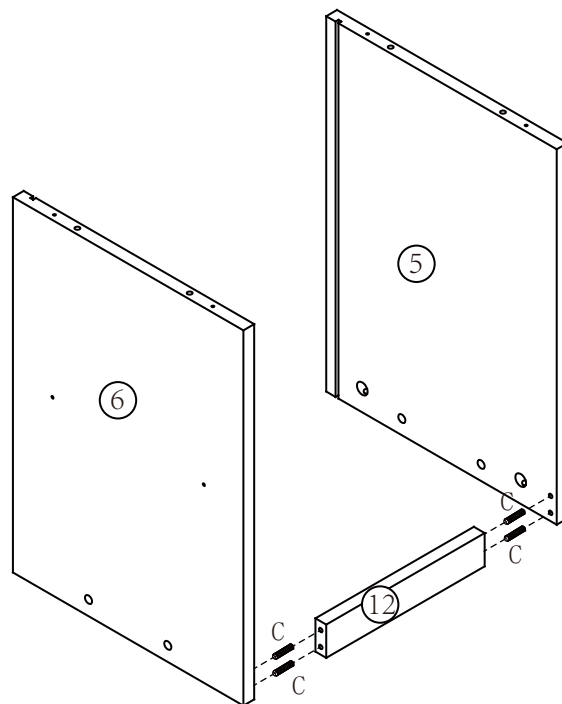

Cx4



   STEP 6

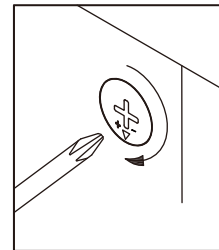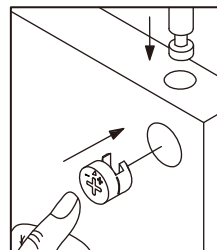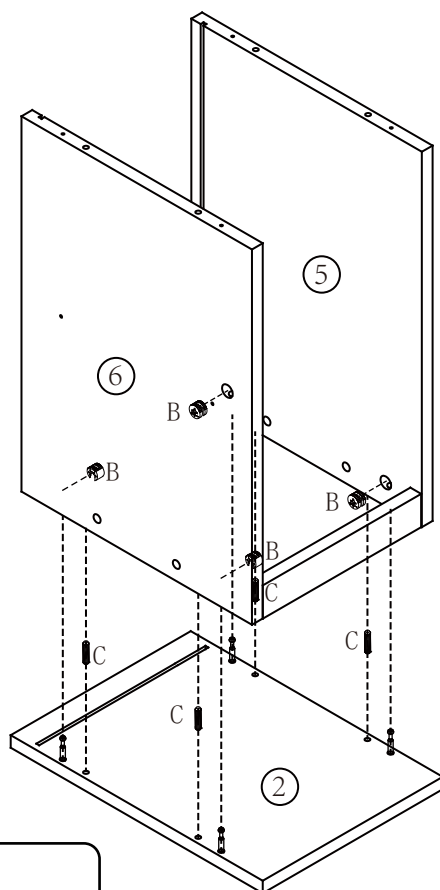


Cx4





Bx4








 
STEP 7

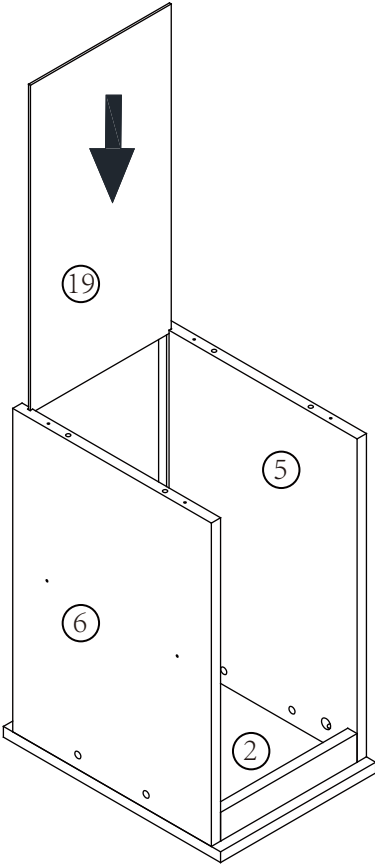


 
 
STEP 8

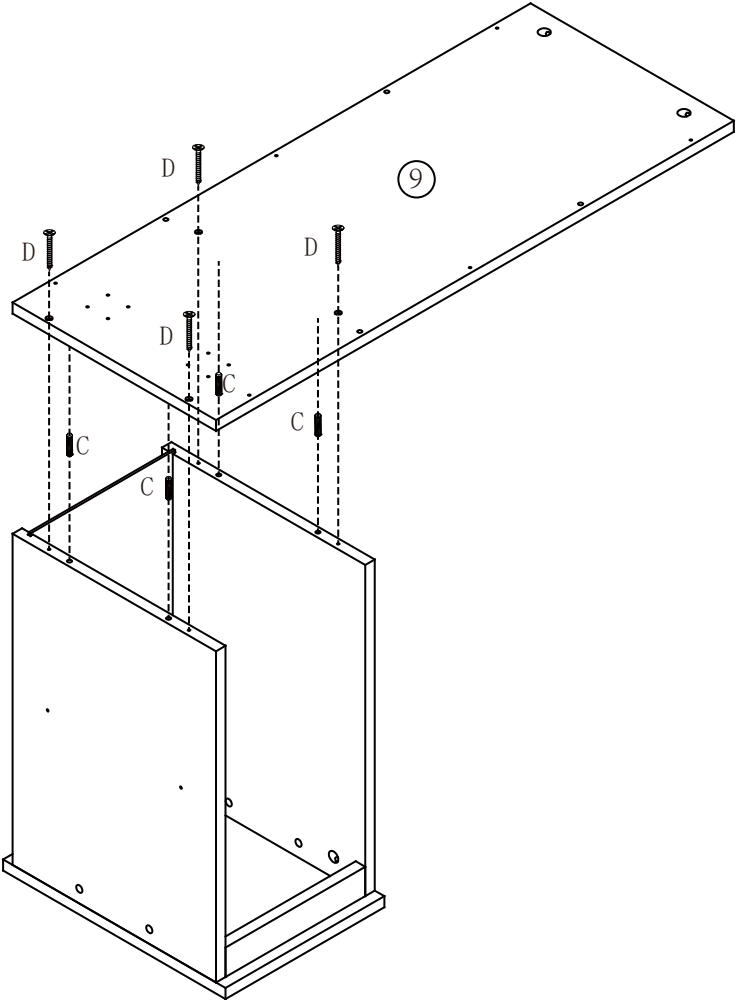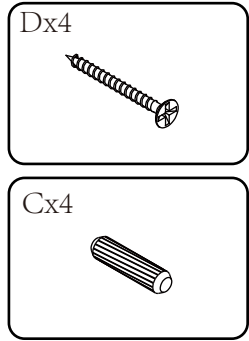

      STEP 9

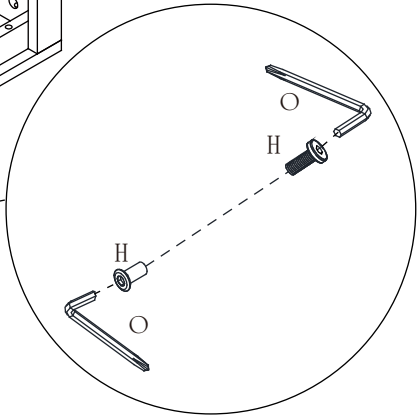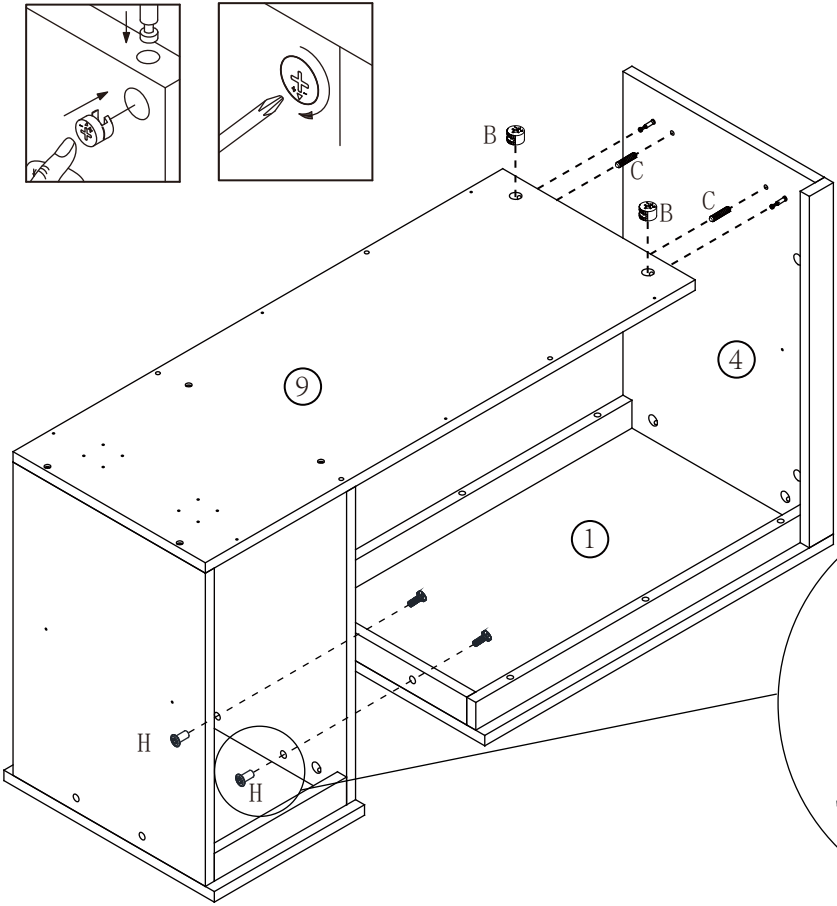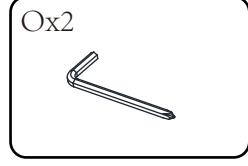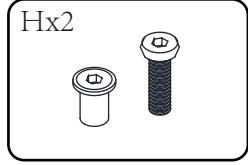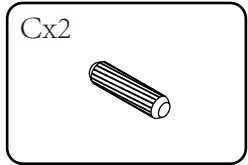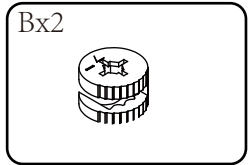

   STEP 10

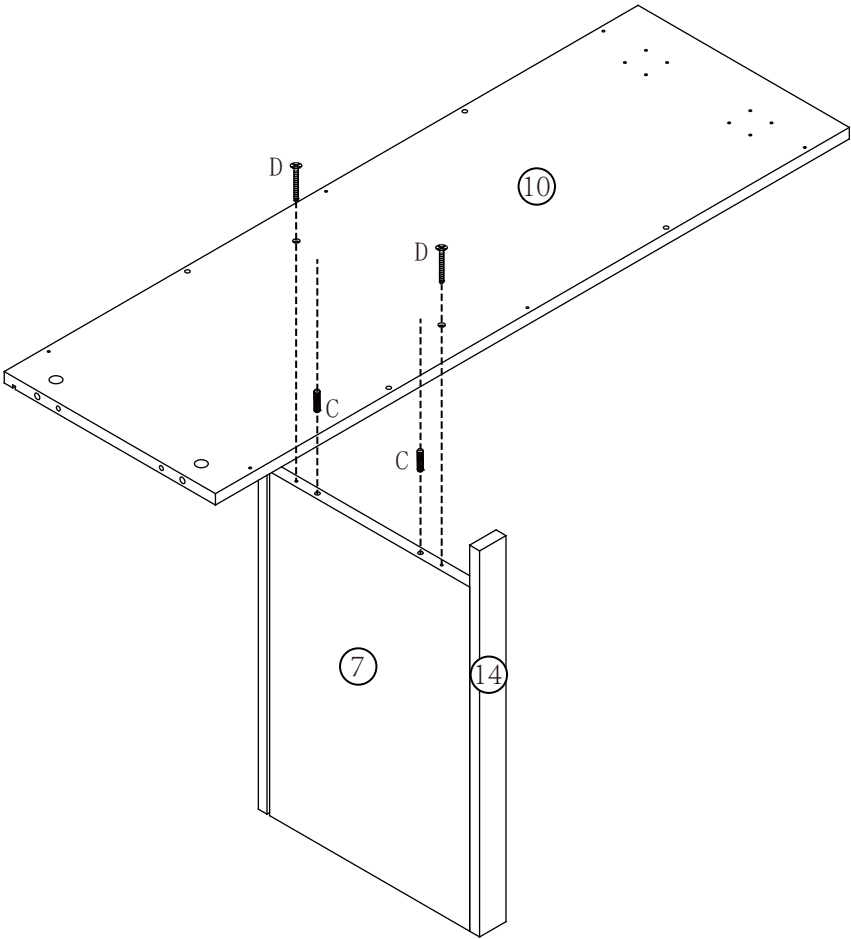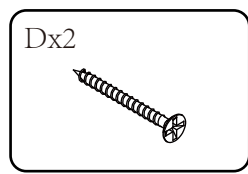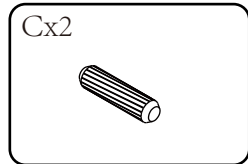


STEP 11


Bx2



 Cx6

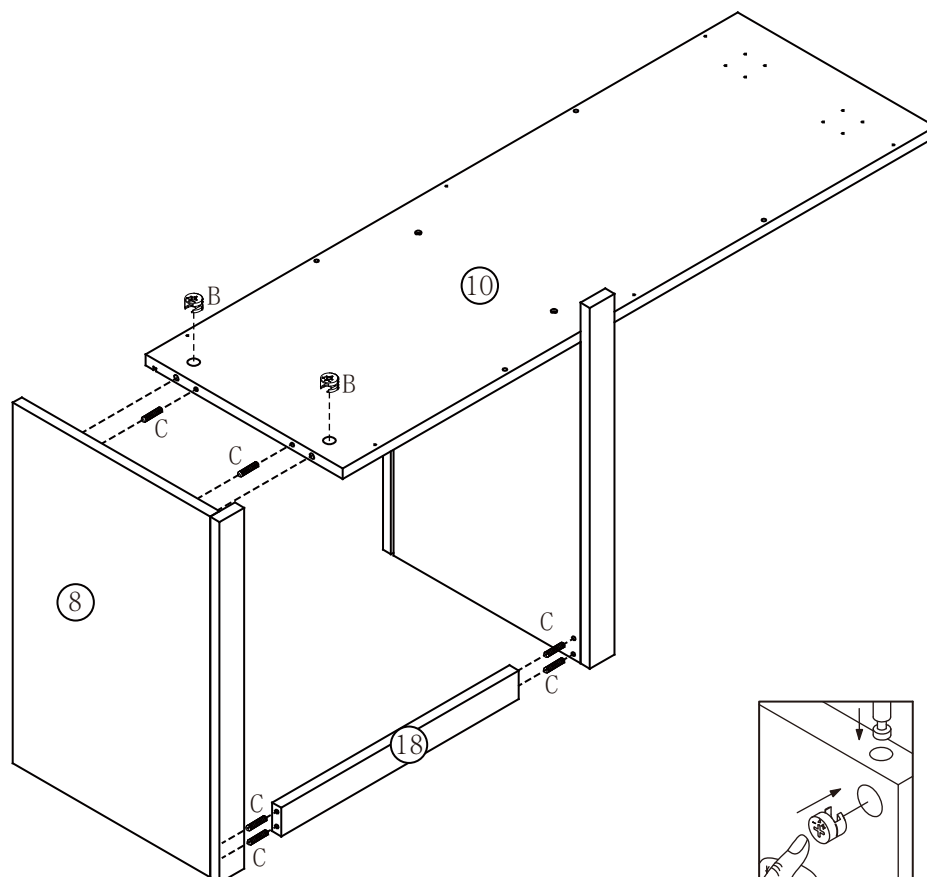

 STEP 12

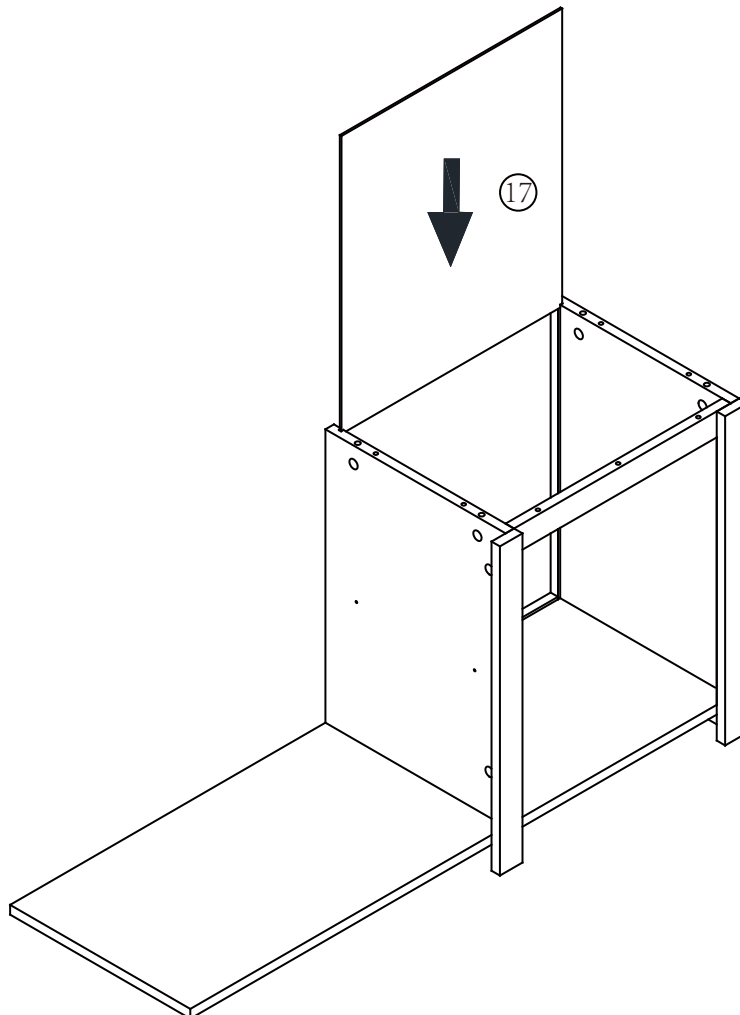

STEP 13



Dx6



Bx2



  Cx6


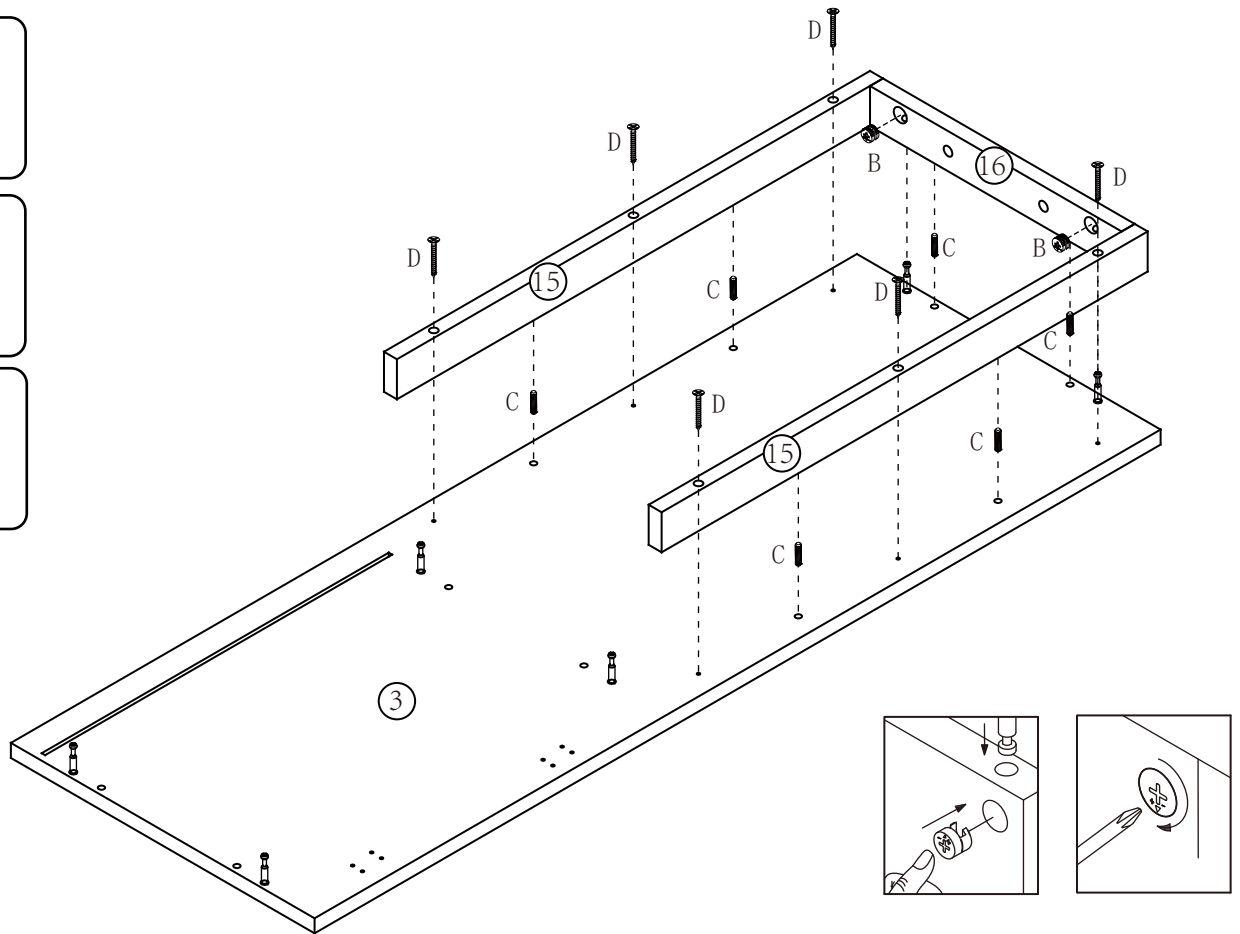



STEP 14



Bx4



  
 
Cx4

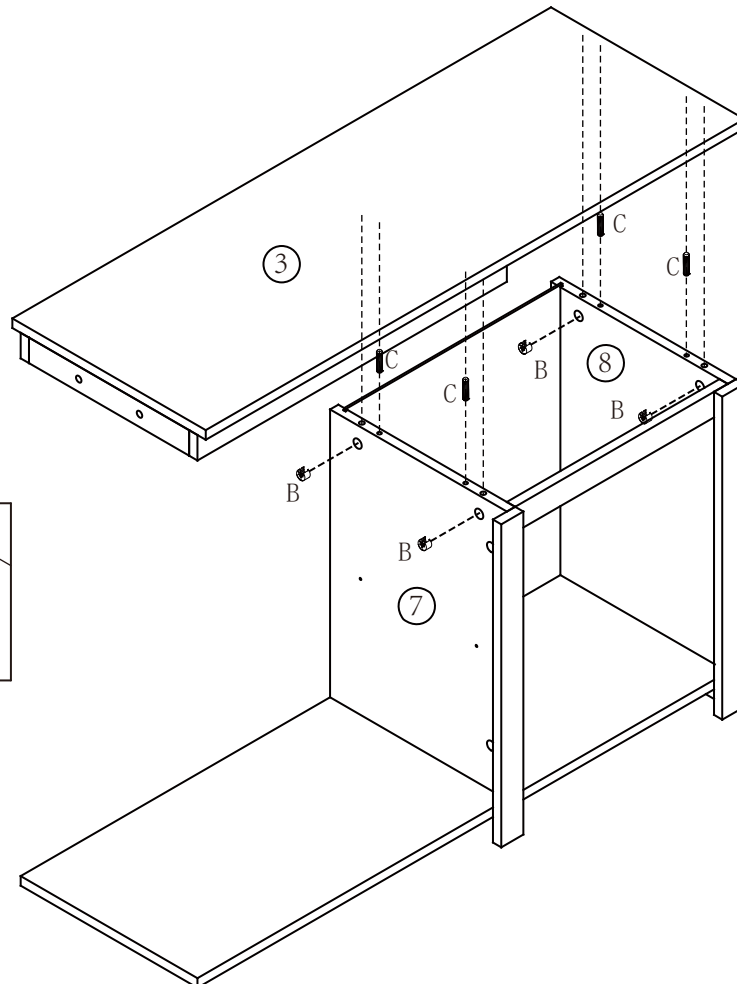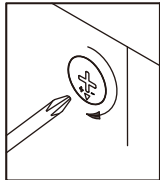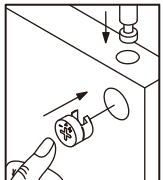


 
 
STEP 15

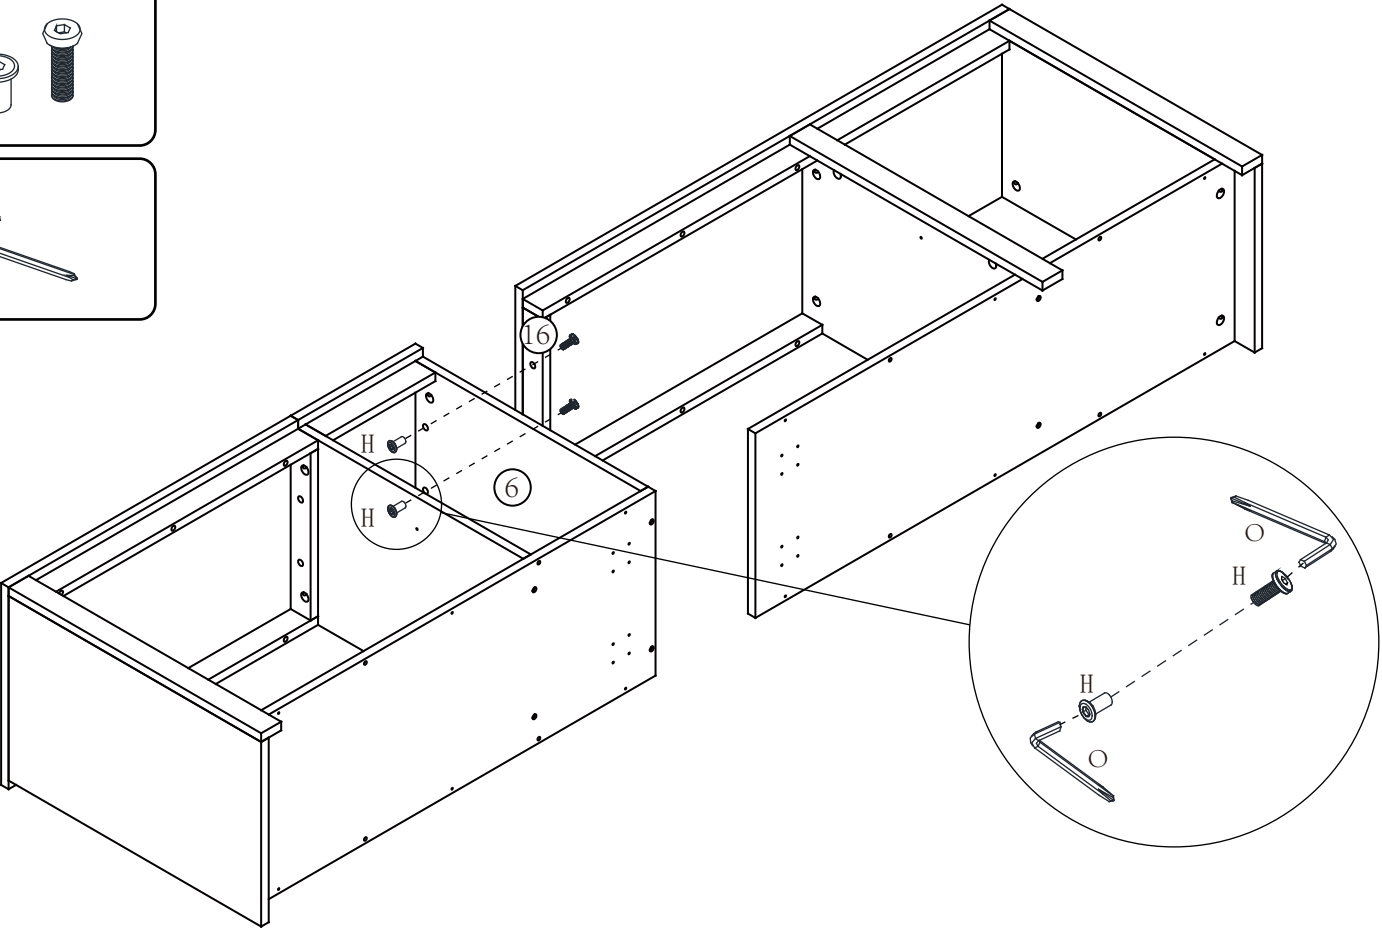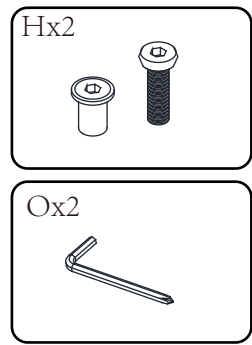


 
 
STEP 16

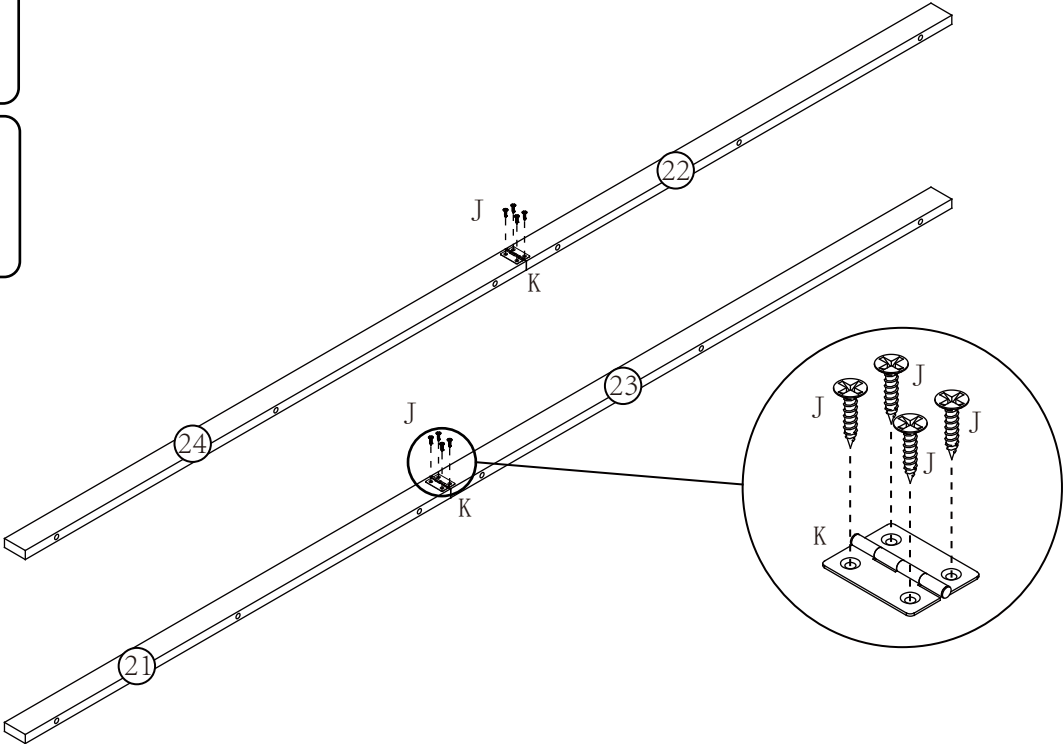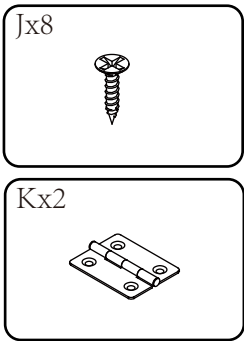

 
 
 
STEP 17

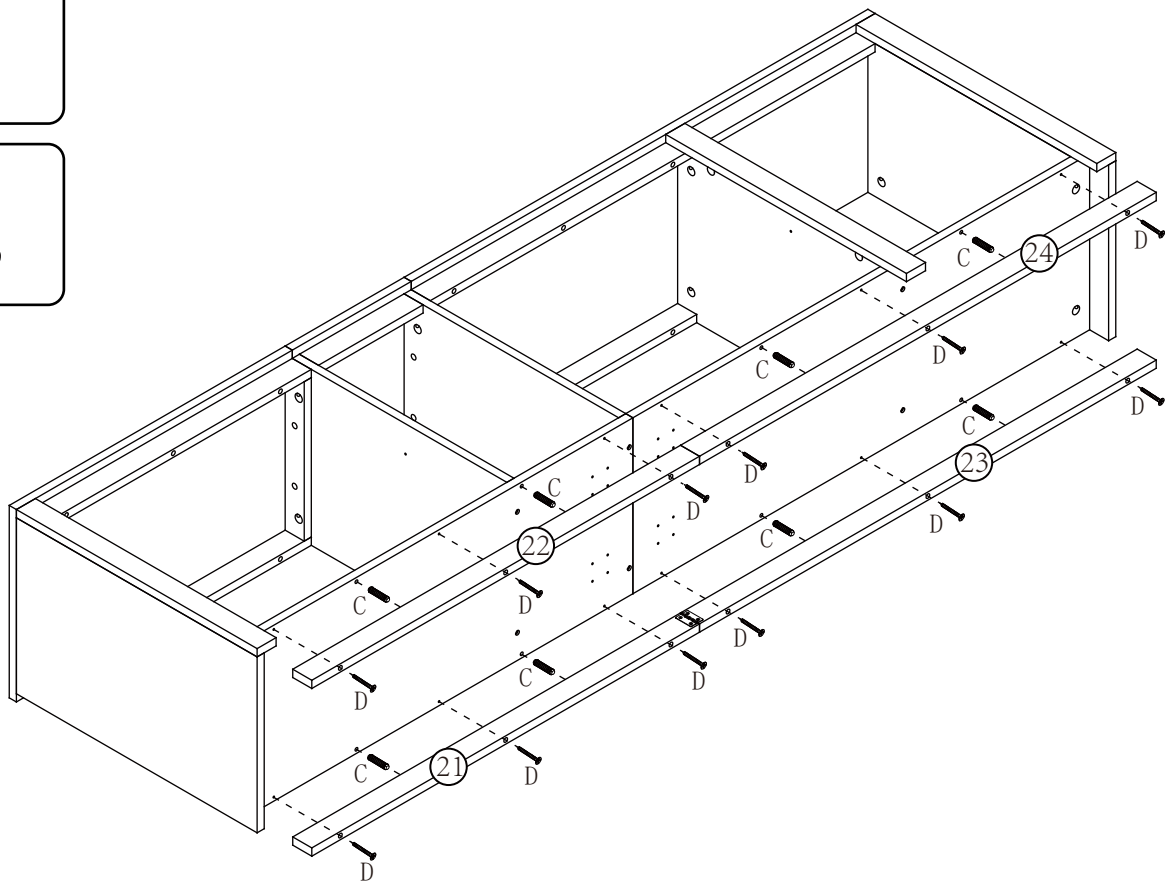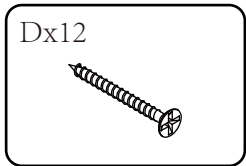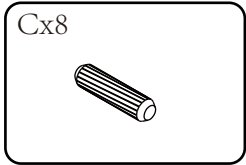

 
 
 
STEP 18

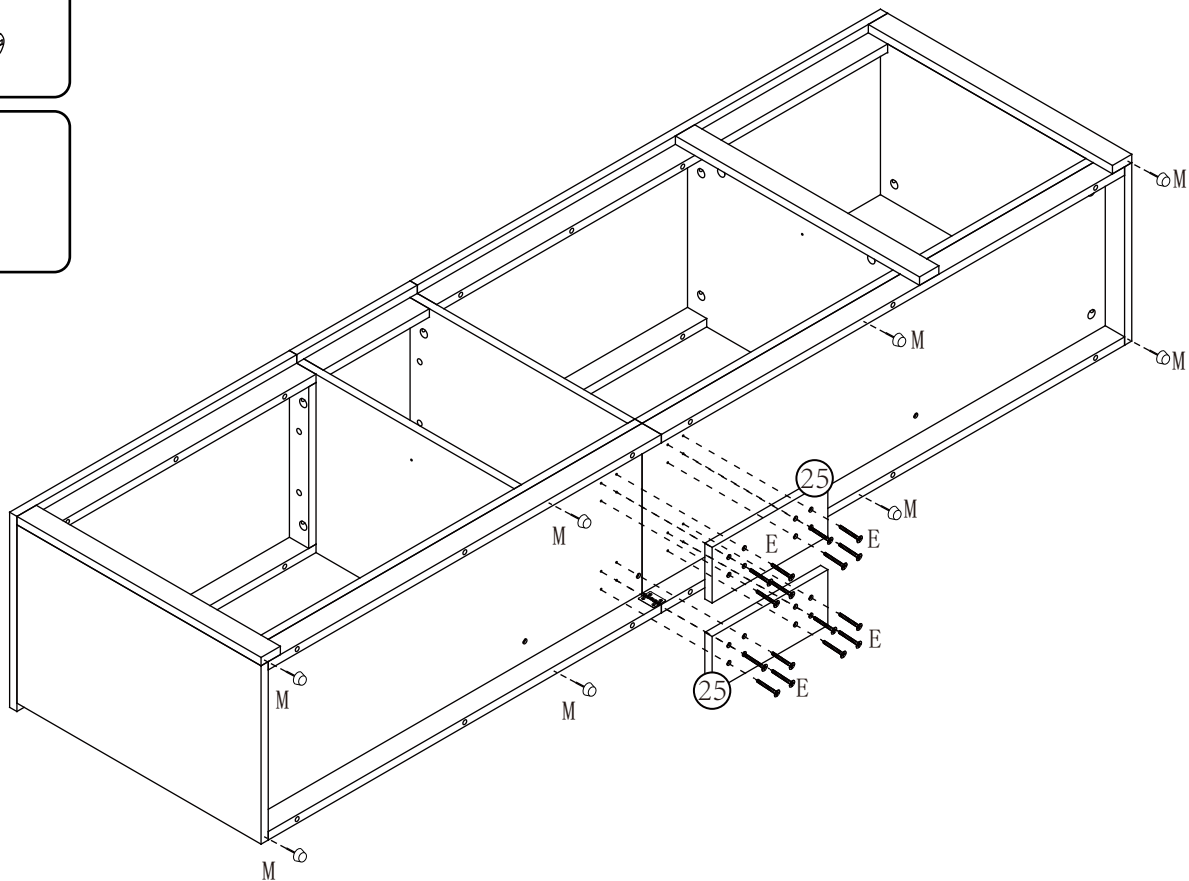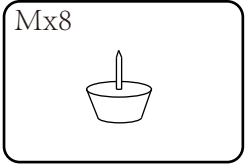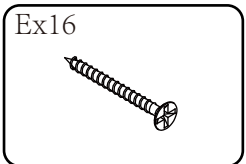

   STEP 19

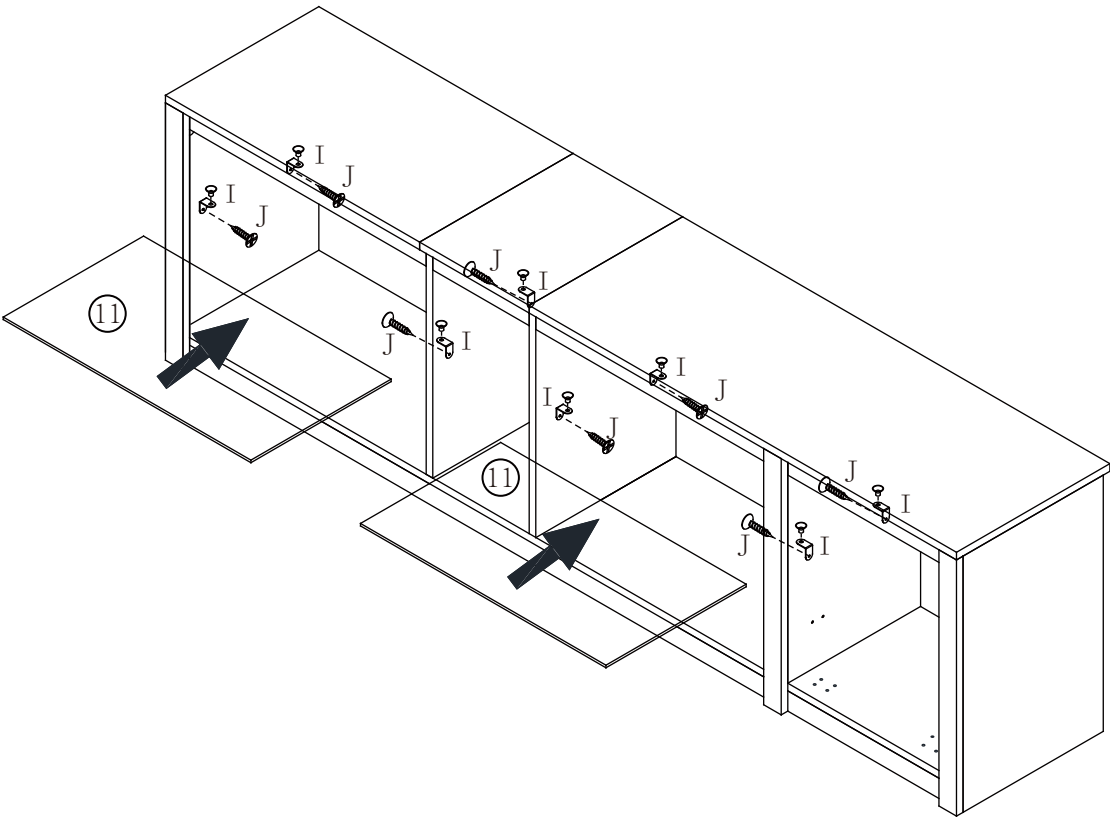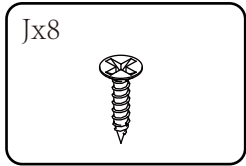
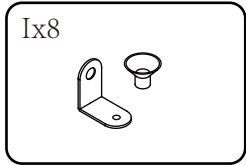


   STEP 20

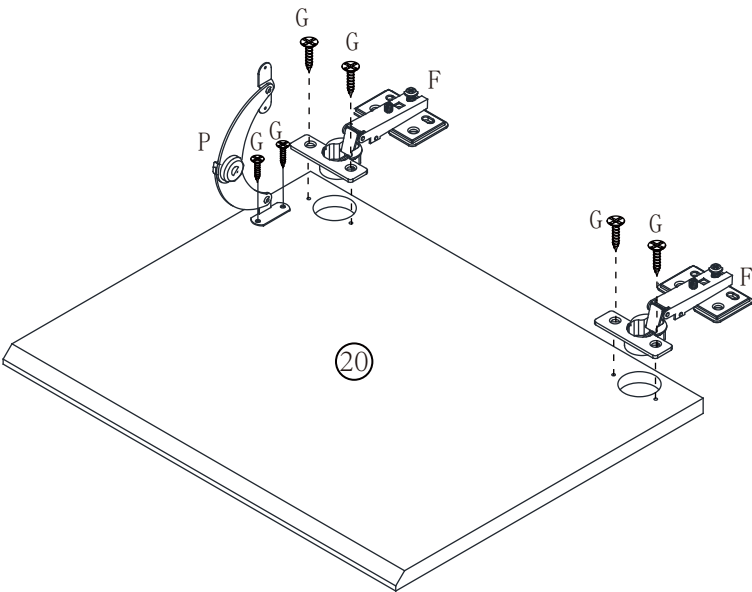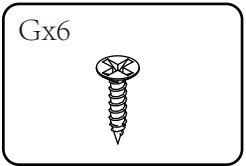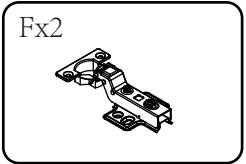

STEP 21

 
 
Gx10

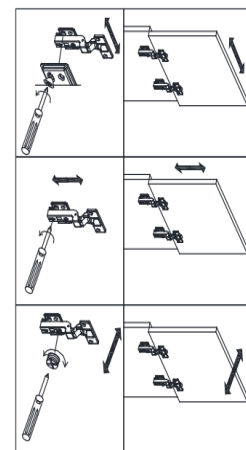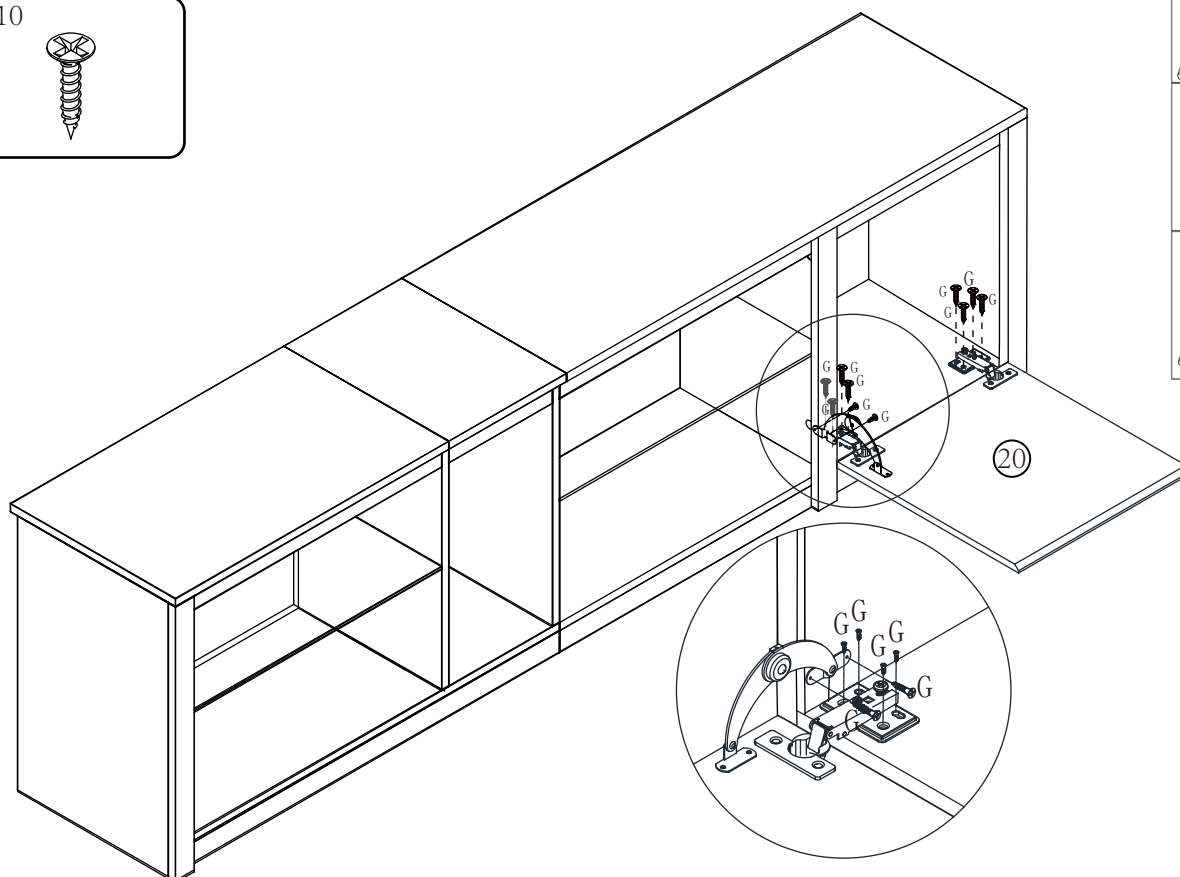

(For detailed hinge adjustment instructions, please refer to the last page.)



STEP 22

  Lx8

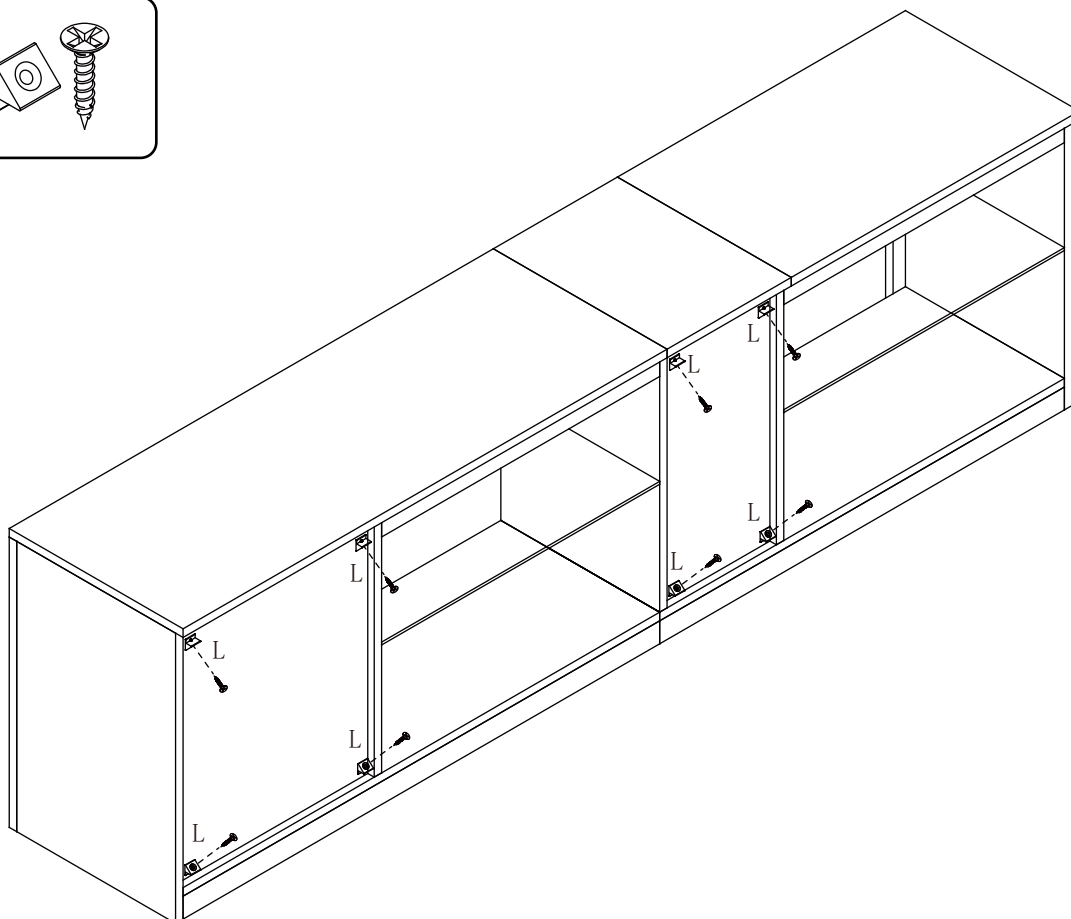

STEP 23

  
Nx1

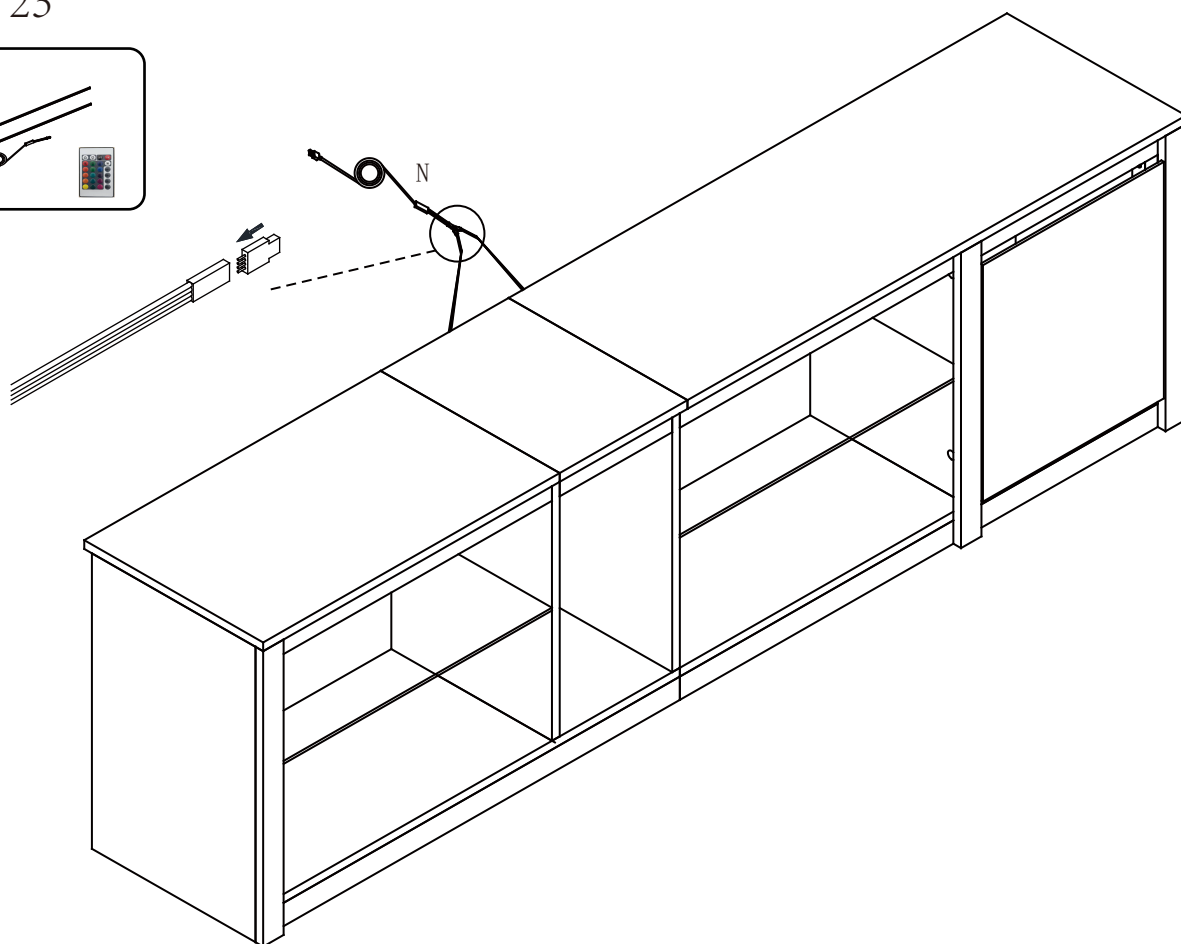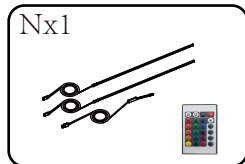


LED Light

How to fix LED strip lights not working:

 1. Make sure the arrows on the female and male connector are aligned.
2. Make sure the plastic inserted into the remote control is removed before using it.
3. The remote control only works within a certain range only. Don't use the remote control from a faraway distance.
4. Point the remote control at the receiver, not the light strip.

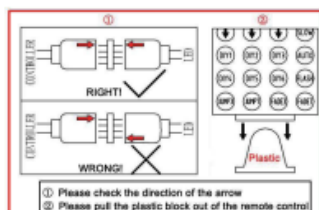


 Note: These two buttons are invalid because this product cannot adjust the brightness of the light.

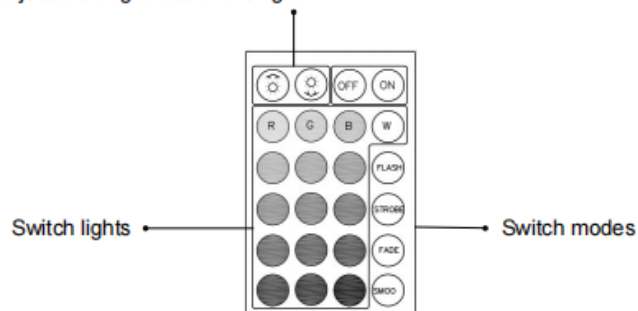


Note: The remote control is compatible with CR2025 battery. Battery is NOT included in the package to comply with safety regulations in certain shipping conditions.

 HINGE ADJUSTMENTS

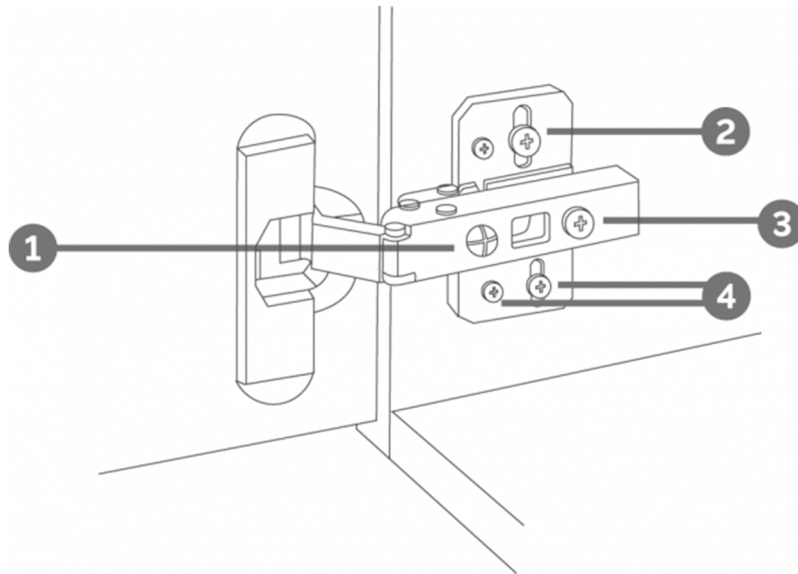


① Sideways / Tilt adjustment

 Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

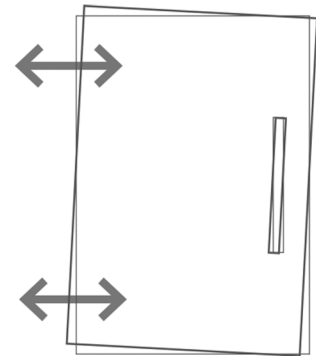

② ④ Height adjustment

 While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

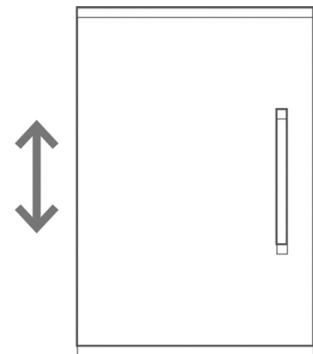

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

