



NON STICK BAKEWARE

Use, Care and Safety Advice

Remove labels and adhesives, wash in hot soapy water, rinse and dry before first use. Season the cooking surface with a little oil and wipe with kitchen paper. Judge Bakeware is for oven use only. It is not suitable for Microwave ovens. Always use Oven Gloves or similar when moving the bakepans around the oven. Judge Bakeware is guaranteed for oven use up to 240°C, 475°F, Gas Mark 9. Allow bakepans to cool before plunging into washing water - pouring cold water into a hot bakepan may cause warping.

Non Stick surfaces: Use only nylon or wooden tools as metal tools and harsh abrasives will degrade the Non Stick coatings. Do not cut food with a knife in a bakepan. Take care to avoid scratching Non Stick surfaces when storing.

Cleaning: wash in hot soapy water after every use. Soak bakepans and use only nylon scouring pads to remove burnt-on deposits. Dry immediately. Judge Bakepans are dishwasher safe; however, they should be removed immediately after dishwashing and dried straight away.

Judge Bakeware Guarantee

Please read the Use, Care and Safety Advice thoroughly. Judge Bakeware has a 25 Year Guarantee to be free from defects in material and workmanship under normal household use. Non Stick coatings are guaranteed for 5 years, providing the Use, Care and Safety Advice is followed.

We promise to the original purchaser that any defective part or item will be replaced, (or we will supply a product of equal value if the product is out of production).

The Guarantee does not cover damage by accident, misuse or commercial use. In addition, discoloration, scratching, staining and damage from overheating is not covered by the guarantee.

This Guarantee is in addition to your statutory rights.
Please retain your purchase receipt.

JUDGE Horwood Avonmouth Way Bristol BS11 9HX
sales@horwood.co.uk www.horwood.co.uk