


OWNER'S MANUAL

FIREPLACE

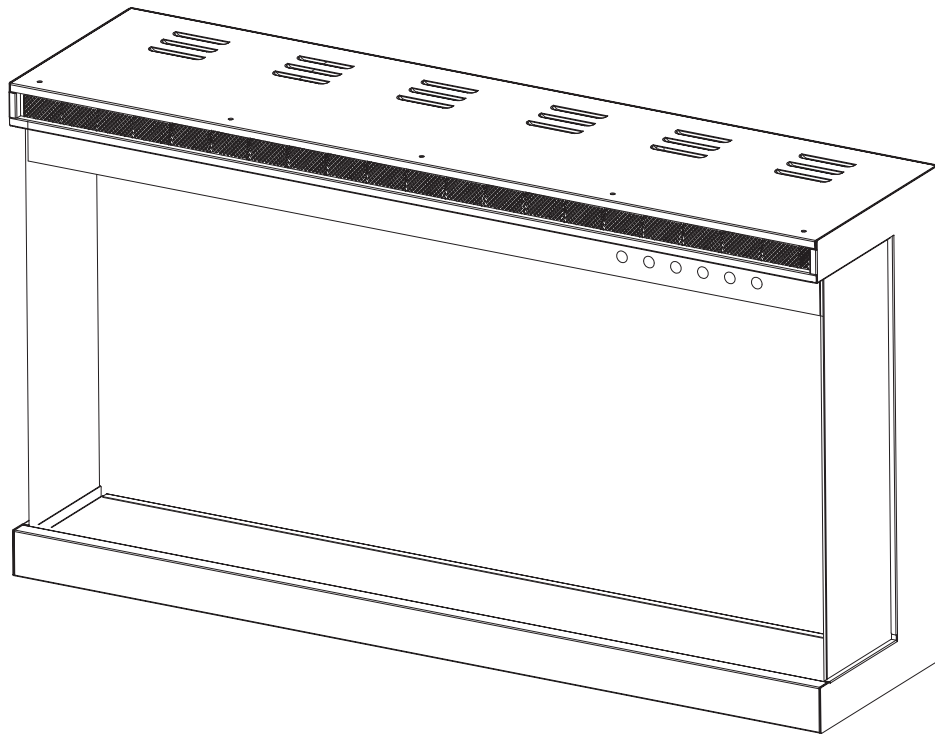

AC 120V 60Hz

⚠ WARNING//
⚠ Waarschuwing

Read and understand this entire owner's manual, including **all safety information**, before plugging in or **using** this product. Failure to do so could result in **fire, electric shock, or serious personal injury**.

Lees en begrijp deze gehele gebruikershandleiding, inclusief alle veiligheidsinformatie, voordat u de stekker in het stopcontact steekt of dit product gebruikt. Als u dit niet doet, kan dit leiden tot brand, elektrische schokken of ernstig persoonlijk letsel.

IMPORTANT SAFETY INFORMATION!

WARNING

When using electrical appliances basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using this fireplace.
- Always unplug fireplace when not in use.
- Do not operate any fireplace with a damaged cord or plug or after the fireplace malfunctions, has been dropped damaged in any manner, return fireplace to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Indoor use only, do not use outdoors.
- This fireplace is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate fireplace where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tipped over.
- To disconnect fireplace, turn controls to off, then remove plug from outlet.
- Use this fireplace only as describes in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Replacement of the lamps should be done only while the fireplace is disconnected from the supply circuit.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.


ALWAYS check your heater cord and plug connections with each use!

- MAKE SURE** the plug fits tightly in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
- Heaters draw more current** than small appliances. occurred with the use of other appliances.
- During use, frequently check to see if the plug outlet or faceplate is
- If the outlet or faceplate is **HOT, discontinue use immediately** inspect and/or replace the faulty outlets.




The power cord supplied with the heater has a plug with two flat blades (live and neutral) and one round pin (ground). If a 3-slot receptacle is not available, an adapter **MUST** be used. The adapter **MUST** be **properly grounded** to the outlet box (see figure at right).

NOTE: Adapter NOT INCLUDED.

Under no circumstances should this fireplace be modified.

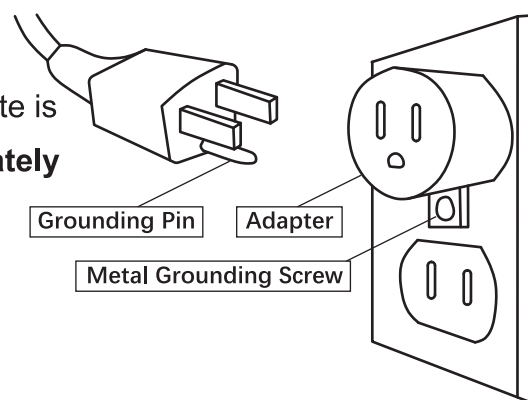


Parts and Hardware

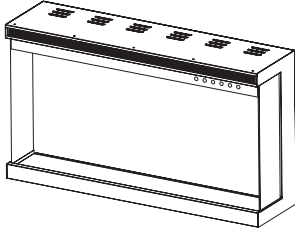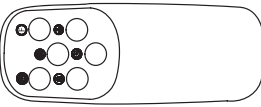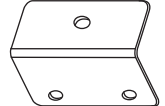  No.	Parts	Qty.
A	 Fireplace	1
B	 M4 x 8mm Screw	12
C	 Logs	1PK
D	 Remote Control	1
E	 Metal Bracket	4
F	 Decorative Crystals	1PK



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

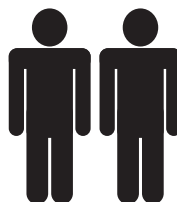

2-PERSON
ASSEMBLY/
INSTALLATION



WARNING

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children away during assembly.

Preparation



This product includes a GLASS panel! Always use extreme caution when handling glass. Failure to do so could result in personal injury or property damage.

Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Parts and assembly steps are grouped for free-standing or wall-hanging use. Check the parts list to make sure nothing is missing. Dispose of packaging materials properly. Please recycle whenever possible.



Before installation, plug the unit into a properly grounded outlet to ensure the unit works properly.

Tools needed for installation (not included):

Phillips screwdriver, stud finder, level, tape measure, pencil, electric drill, 1/4" wood drill bit, hammer




WARNING



When using paint or lacquer to finish the mantel, the paint or lacquer must be heat resistant to prevent discoloration.

Installation Overview

Your appliance facilitates three different installation configurations: **three-sided**, **two-sided**, and **Single-sided**.


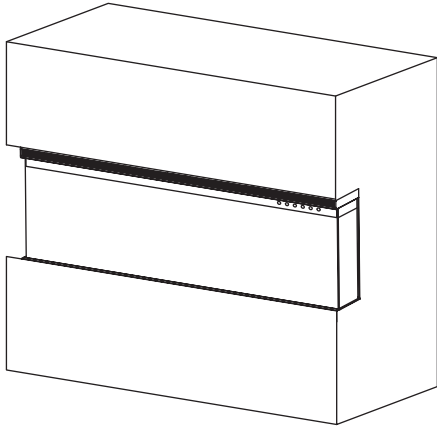


Three-sided installation

- Glass exposed on front, left, AND right sides.
- Appliance is fully recessed into the wall with both sides open.

Two-sided installation

- Glass exposed on front, AND left OR right sides.
- Appliance is fully recessed into the wall with one side open.

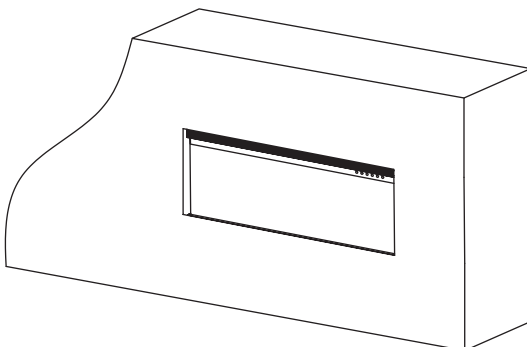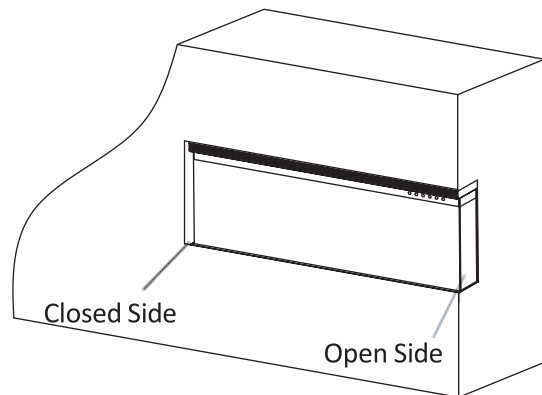


Single-sided installation


- Glass exposed on front ONLY.
- Appliance is fully recessed into the wall.

How do remove Front glass?

1. Remove the screws from the top glass panel.

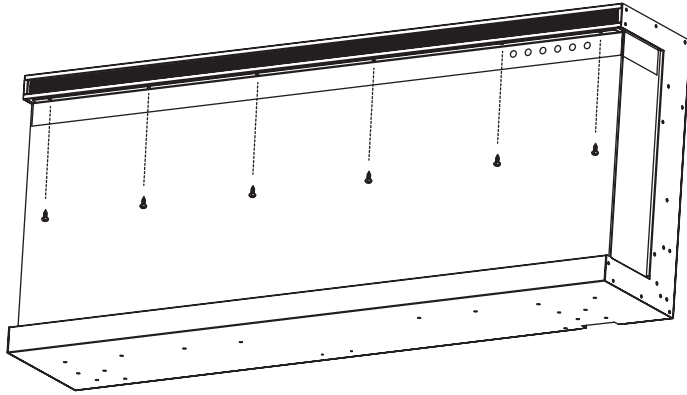

2. Try to lift the glass to the front with 2 people

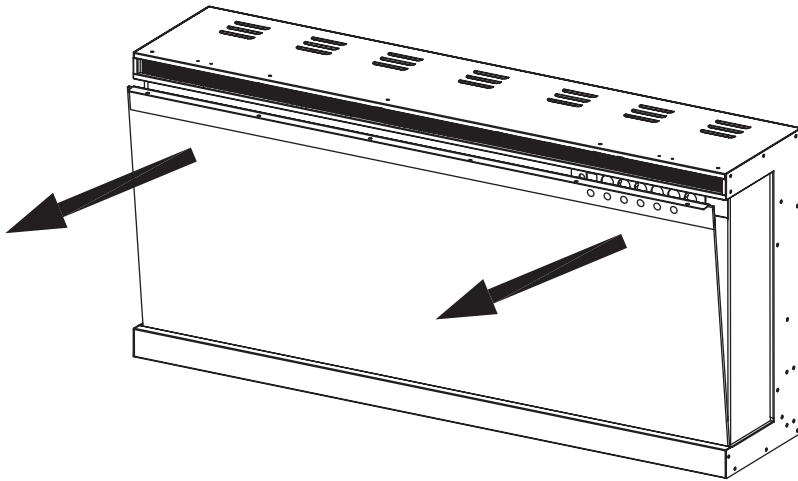

3. Do the reverse to reset everything

Log-set / Crystals/Pebbles Installation

(OPMERKING: voer de installatie uit volgens de sintels die u hebt gekocht of geselecteerd.)

- A. Glass front must be removed and the appliance must be mounted in its final location before the drift logs embers are installed.
- B. Carefully place the plastic ember bed strip to the slot, then place crystal/pebbles embers onto the surface of the ember bed as illustrated. Apply an even layer from side to side. **Figure 1, Figure 2.**



Figure 1. (Crystals)



Figure 2. (logs)

Operation



Read and understand this entire owner's manual, including **all safety information**, before **plugging in** or **using** this product. Failure to do so could result in **electric shock, fire, serious injury, or death.**

Power


Plug the power cord into a AC Volt outlet (see **IMPORTANT SAFETY INFORMATION** on **Pages 2**). Make sure the outlet is in good condition and that the plug is not loose. **NEVER** exceed the maximum amperage for the circuit. **DO NOT** plug other appliances into the same circuit.

Methods of Operation

Before operating, please review the **IMPORTANT SAFETY INFORMATION** on **Pages 2**, and heed all warnings.


This electric fire can be operated via the TOUCH PANEL or via the battery-powered REMOTE CONTROL.

Touch panel operation

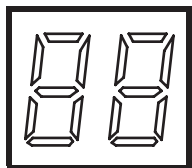

Burr on	FuncTion	ACTION AND INDICATION
 POWER	ON: Enables control panel and remote control function. Turns on the flame effect. OFF: Disables control panel and remote control function. Turns off the flame effect.	1. press once. Indicator light turns on. power turns on. All functions are enabled. 2. press again, power and all functions turn off. unit goes to standby.
 COLOR	COLOR button: changes the color flame effect. 12 color settings: c1, c2, c3.... 10,11,12.	1. press once to change the color flame effect. 2. press again until desired setting is reached.
 FLAME	FLAME button: Makes flame effect brighter and dimmer. NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for the heater to turn on. 5 brightness settings: L1, L2, L3....L5	1. press once to change flame color brightness. 2. press again until desired setting is reached; L1 is dimmest, L5 is brightest.
 HEATER	HEATER button: Turns heater on and of. NOTE: To prevent overheating, the heater fan will blow out cool air for 30 seconds after the heater turn off. 00, LL, HH will show on the display.	1.Press button,LL (low heat) about 750W. 2.Press button,HH (high heat) about 1500W. 3. press button, 00, heat function is off.
 TEMPERATURE	TEMPERATURE button: Changes the temperature setting. setting ranges from 62°F to 82°F 62,63,64.....82 will show on the display.	Press button until desired setting is reached. LED display shows selected setting. Once the desired temperature is reached, the heater will stop heating the room. Heat will automatically turn back on when room temperature falls below the set temperature.
 TIMER	TIMER button: Controls the timer settings to automatically turn the fireplace off. settings range from 1 hour to 8 hours. 0H, 1H,2H...8H will show on the display.	Press button until desired setting is reached. LED display wil lshow the setting. when time reaches the selected setting, the unit wil l automatically turnoff. 0H disables the timer function.

Remote control operation

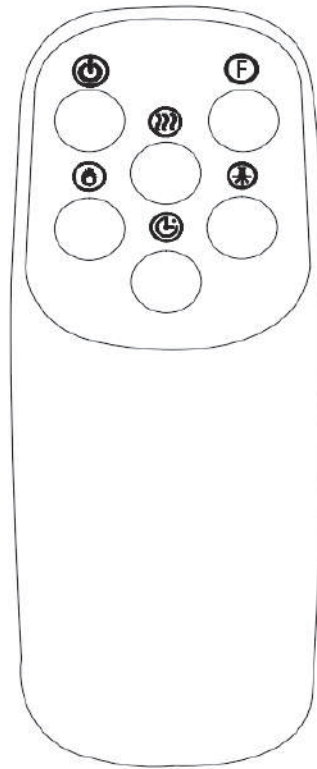

Remote control Battery Information

Remote control uses 2 x 'AAA ' batteries (not included)



NEVER dispose of batteries in fire. Failure to observe this precaution may result in an explosion. Dispose of batteries at your local hazardous material processing center.

Care and Maintenance

cleaning



ALWAYS turn the fireplace OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do So could result in electric shock, fire, or personal injury.



NEVER immerse in water or spray with water. Doing So could result in electric shock, fire, or personal injury.

Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- DO NOT Use brass polish or household cleaners as these products will damage the metal trim.

Glass:

- Use a good quality glass cleaner sprayed onto the cloth or towel. Dry thoroughly with a paper towel or lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

- Use a vacuum or duster to remove dust and dirt from the fireplace and vent areas.

Plastic:

- Wipe gently with a slightly damp cloth and a mild solution of dish soap and warm water.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Maintenance



Risk of electric shock! DO NOT OPEN any panels! No user-serviceable parts inside!



ALWAYS turn the fireplace **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in **electric shock, fire, or personal injury.**

Electrical and Moving Parts:

- Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Storage:

- Store fireplace in a clean dry place when not in use.



WARNING! NO SERVICING of the internal or electrical parts should be performed by the consumer. Do not service the unit yourself.



WEEE:

Meaning of crossed –out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.