



JUDGE

Electric Carving Knife

Model No: JEA76



 
Please read this
instruction manual
carefully before use
and save for later
reference.

 **JUDGE**

**UNPACK YOUR MINI CHOPPER CAREFULLY AND REMOVE
PACKING PIECES, LABELS AND STICKERS BEFORE USE.**

Identifying the parts


(with Part Numbers for customer replaceable items)

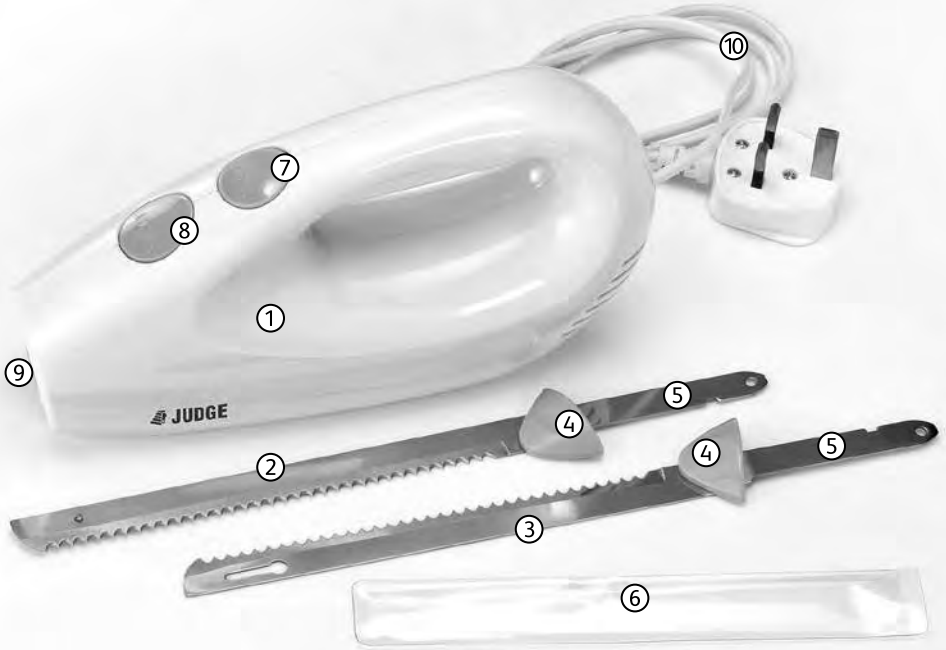

- | | |
|---|--------------------------|
| 1. Carving Knife Body | 6. Storage Case |
| 2. Blade - LH | 7. Pulse (ON/OFF) Button |
| 3. Blade - RH (<i>JEA76BL - pair of blades</i>) | 8. Blade Eject Button |
| 4. Blade Finger Guards | 9. Blade Receptacle |
| 5. Blade Shafts | 10. Mains Lead and Plug |

Before first use

 
1. Wipe the Carving Knife Body ① with a cloth, using liquid detergent and warm water.
■ **DO NOT IMMERSE ANY PART OF THE KNIFE BODY IN WATER.**
2. Hold the Blades ② & ③ using the Blade Finger Guards ④. Remove the Storage Case ⑥.
■ **THE BLADES ARE VERY SHARP. TAKE GREAT CARE WHEN HANDLING AND ALWAYS HOLD USING THE FINGER GUARDS ④.**
3. Slide the Blades ② & ③ until the hole at the end of the slot in the Right Hand Blade ③ is aligned with the lug in the Left Hand Blade ②, then separate the two blades.
4. Wash the blades in liquid detergent and warm water, or in a dishwasher, then allow to dry.

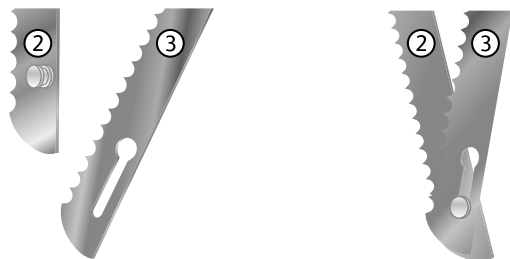

5. Hold the Blades ② & ③ using the Blade Finger Guards ④. Re-assemble the Blades by placing the hole at the end of the slot in the Right Hand Blade ③ over the lug in the Left Hand Blade ② and sliding until the lug is approximately half way into the slot.
6. Even if you intend to use the Carving Knife immediately, replace the Blades ② & ③ in the Storage Case ⑥, holding the blades by the Blade Finger Guards ④.

How to use

 1. Ensure that the Carving Knife is disconnected from the mains.
2. Holding the Blades ② & ③ using the Blade Finger Guards ④, insert the Blade Shafts ⑤ into the Blade Receptacle ⑨, with the cut-outs and serrations pointing downwards. Push home until they “click”.
3. Remove the Storage Case ⑥ from the Blades ② & ③.
■ **THE BLADES ARE VERY SHARP. TAKE GREAT CARE WHEN HANDLING AND ALWAYS HOLD USING THE FINGER GUARDS ④.**
4. Place the food to be cut on a suitable board.
5. Keeping your fingers away from the Blades ② & ③ and the Pulse ON/OFF Button ⑦, plug the Mains Plug ⑩ into a mains socket and switch on; please read the **CAUTIONS** on siting and connecting to your mains electricity.
6. Hold the food firmly with one hand or a carving fork, well away from the point where you will be carving.

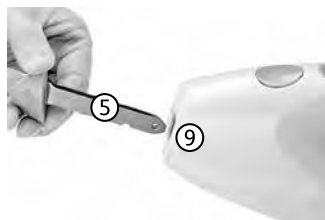

7. Hold the Carving Knife so that your thumb is in the correct position to operate the Pulse ON/OFF Button ⑦. Bring the Carving Knife to the food and, as the blades approach the food, press the rear of Pulse ON/OFF Button ⑦ and slice the food with the Blades ② & ③, with a downwards motion.
 - **APPLY ONLY VERY GENTLE PRESSURE AND DO NOT ATTEMPT TO CUT THROUGH BONES. DO NOT OPERATE FOR MORE THAN ONE MINUTE AT A TIME AND ALLOW ONE MINUTE BEFORE OPERATING AGAIN.**
 - You might find when slicing bread, it helps to slide the knife backwards slightly as you cut down.
8. When you have finished carving, switch off at the mains and unplug ⑩ from the mains socket.
9. Hold the Blades ② & ③ using the Blade Finger Guards ④ and hold the Carving Knife Body ① with your other hand.
10. Press the Blade Eject Button ⑧ and carefully withdraw the Blades ② & ③ from the Blade Receptacle ⑨.

Cleaning & Care

- Ensure the Carving Knife is disconnected from the mains before cleaning.
 1. Wipe the Carving Knife Body ① with a cloth, using liquid detergent and warm water.
- **DO NOT IMMERSE ANY PART OF THE KNIFE BODY IN WATER.**
 2. Wash the Blades ② & ③ in liquid detergent and warm water, or in a dishwasher, then allow to dry.
- **THE BLADES ARE VERY SHARP. TAKE GREAT CARE WHEN HANDLING AND ALWAYS HOLD USING THE FINGER GUARDS.**
- Do not use harsh abrasive cleaners or scourers.
- When the Carving Knife is not in use, store in a dry place, with the Blades ② & ③ stored in the Storage Case ⑥ for protection.

Cautions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- THE BLADES ARE VERY SHARP. TAKE GREAT CARE WHEN HANDLING AND ALWAYS HOLD USING THE FINGER GUARDS.
- Always keep the appliance out of the reach of children.
- Ensure that your home electrical supply corresponds to the requirements of the appliance - see "Specifications".
- Do not connect the Mains Plug ⑩ into the socket, or use the appliance, if your hands or the appliance are wet.
- Unplug the appliance whenever it is not in use.
- THE APPLIANCE MUST ALWAYS BE EARTHED - always connect to a mains socket with an earth connection.
- Never leave the unit unattended when it is plugged in.
- The Mains Lead ⑩ should be positioned so as not to cause an obstruction or to overhang the edge of the surface, where it could accidentally be snagged or pulled by children.
- Do not use the Knife outdoors.
- Do not place the Knife close to a heat source.
- Ensure that the Mains Lead ⑩ is not near any hot surface.
- Pull the plug (do not pull Mains Lead ⑩) to disconnect from mains socket.
- Do not pull the Mains Lead ⑩ to move the appliance.
- It is not recommended that the Knife be used with an extension lead.
- The Knife should be used only as instructed and for the purpose for which it was intended; there is potential for injury or damage from misuse.
- Do not switch on or attempt to operate the Knife if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.
- Never attempt to make any repair to the Knife yourself - contact Judge Customer Services at the address given in the warranty section.
- DO NOT IMMERSE ANY PART OF THE KNIFE BODY IN WATER.
- Should the Knife accidentally fall into water, unplug immediately and do not use.
- Please keep your purchase receipt.

Specification

Name	Model No.	Rated Voltage	Rated Frequency	Rated Power
Electric Carving Knife	JEA76	220 - 240V	50Hz	180W



Judge 2 Year Domestic Electrical Guarantee

- The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.
- During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- **THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.**
- Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

JUDGE

CUSTOMER SERVICES

Horwood, Avonmouth Way,
Bristol, BS11 9HX, Great Britain

www.judgecookware.co.uk

customerservice@horwood.co.uk

Tel: 0117 940 0000



FOR DOMESTIC USE ONLY

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.