
# **Assembly Instructions**

Caution: You must read this before you proceed

## Table

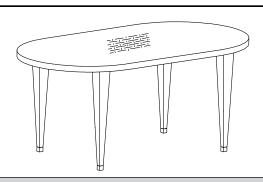

## Parts List

Label	Picture	Description	QTY
А		Leg	4
В		Table Top	1

## Hardware

Label	Picture	Description	QTY
1		Allen Key	1
2	0	Washer	17
3		Bolt (M6*20)	17

## **Assembly Preparation**


#### Before Beginning Assembly:



- Read instructions, cover to cover-
- ₩<sub>2×</sub>T
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-


## Assembly Steps

#### Overview

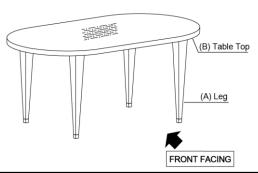

This Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

### Step 1

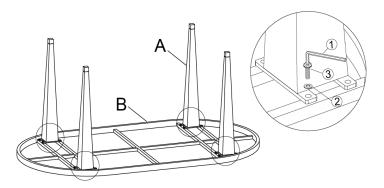


Open the carton and place all parts on a clean, non-marring surface.

Attach Table Legs(A) to Table Top(B) using Bolts( $\mathfrak{J}$ ) and Washers( $\mathfrak{D}$ ) with Allen Key( $\mathfrak{D}$ ) as shown in the picture above.

Tighten the Bolts fully in a sequential manner.

#### Step 2

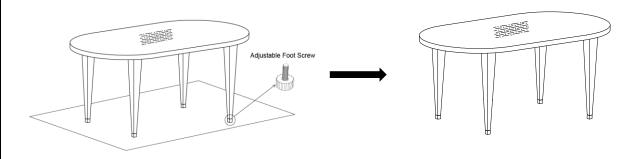

Stand the Table up with assistance from an adult partner.

Place the Table on a level surface to check for wobbles.

If the Table wobbles, adjust the Levelers on the bottom of the Legs to make it level.

Your Table is ready for use.

This Table can only be used on a flat, level surface.

#### Care & Maintenance





Do not put hot items directly on furniture surface



 


Do not clean furniture with harsh cleansers or polish.



sunlight is recommended.







Do not write on furniture without a padded barrier to protect the surface.



To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.

To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct



Not for commercial use. For residential use only.



Stains may be removed with mild soap solution and damp cloth.



Keep away from sources of ignition.



Dust and pick-up spills using a clean, non-colored, lint-free cloth .

#### What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning. Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

