

TAYAMA®

Multi-Cooker

Hot Pot & Grill

Instruction Manual



Model: TRMC-30W

Tayama Appliance USA Inc.
www.tayama-usa.com
support@tayama-usa.com

Please carefully read the instruction manual before use and keep it well for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or the appliance body in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance is not intended for deep frying foods.
15. Intended for counter top use only.
16. **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter. Always supervise when children are present.
17. Before connecting to power, please ensure the local voltage fit to the appliance and the socket must be grounded and installed as required.
18. Operate the appliance on a flat, ventilated, dry and heat-proof surface.
19. Before use, please do make sure the heating plate and the bottom of the cooking pot/ grill are clean and ensure the cooking pot or grill well connect with the heating plate.
20. Never turn on the appliance without the cooking pot or grill on the heating plate or with an empty pot on top of it as this may result in serious damage to the appliance.

21. Do not touch, cover or obstruct the steam vent on top of the lid as it may cause scalding.
22. The Cooking Pot, Lid, and Grill Pan will be extremely hot during and after use. Be sure to wear protective over mitts or gloves.
23. Do not immerse base in water.
24. To prevent damage or deformation, do not use the Cooking Pot or Grill Pan on a stovetop or burner.
25. During first use, some slight smoke and smell may be emitted from the appliance, which is a normal phenomenon as it is from the protecting oil on the heating plate. This will disappear after a few times of use and will not do harm to human health. Please open your windows for better air ventilation and quicker dispersal.
26. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
27. This appliance should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, this appliance may not operate properly.
28. Always unplug from the plug gripping area. Never pull on the cord. Use only with a 120V AC power outlet.
29. This appliance is for household use only. Intended for countertop use.
30. Always make sure the outside of the Cooking Pot or Grill Pan is dry before use. If the Cooking Pot or Grill Pan are returned to the cooker when wet, it may damage or cause the product to malfunction.
31. A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.
32. Lid is only for use on the Cooking pot, NOT for use on the Grill Pan.

SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


Product Features

1. Combined with Eastern and Western cuisine culture in design.
2. One switch temperature control for easy use.
3. Removable construction for easy cleaning.

Technical Parameters

MODEL NO.	VOLTAGE	POWER	CAPACITY
TRMC-30W	120V~ 60Hz	1000W	2.5L

Product Parts List

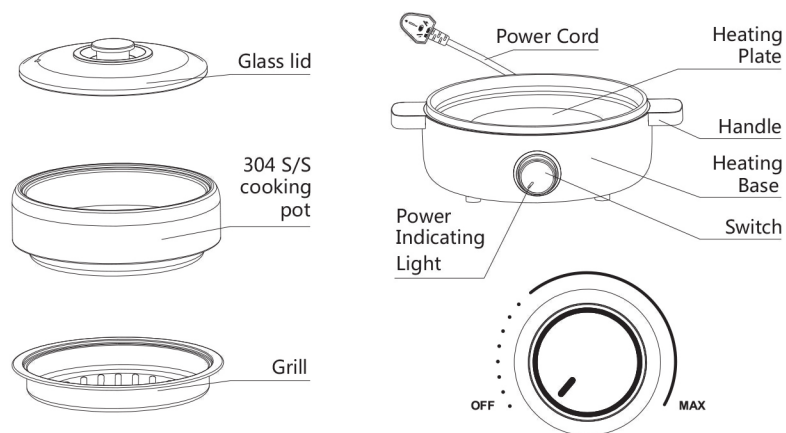

Before First Use

1. Read all instructions and important safeguards.
2. Remove all packaging materials and check that all items have been received in good condition.
3. Tear up all plastic bags as they can pose a risk to children.
4. Remove lid, Cooking Pot and Non-stick Grill Pan away from the Heating Base. Wash with warm, soapy water using a sponge or dishcloth.
5. Rinse thoroughly to remove all soap residue.
6. Condition the nonstick surface of the Grill Pan with oil.

Setting Temperature

Low Setting	150-200°F
Medium Setting	250-300°F
High Setting	450-500°F

Operating Instructions

● For Hot Pot







1. Before each operation, check if there are any articles on the surface of the heating plate; remove it if there is any. Ensure the surface of the heating plate clean and dry.
2. Place soup or water in the s/s cooking pot and put onto the heating plate (make sure the exterior of cookware is dry). Slightly adjust the pot to fit with the heating plate for more effective heating.
3. Switch the knob to the "OFF" position and then insert the plug into the socket.
4. Switch the knob to the HIGH position and the indicating light turns on to indicate the appliance is working. During the heating process, you can switch the knob counter-clockwise towards the OFF position and the power can be minimized from high to low.
5. Add the food to the cooking pot as soon as the water or soup starts to boil.
6. After using, turn the knob counter-clockwise to the OFF position and remove the plug from the socket.

● For Grill

1. Place the grill onto the heating and slightly adjust it to fit with the heating plate.
2. Switch the knob to the "OFF" position and then insert the plug into the socket.
3. Switch the knob to the "H" position (the best working temperature for grill) and the indicating light turns on to indicate the appliance is working.
4. Add food into the grill when the grill is hot. During the grill process, please pay attention to the color change of the food and turn the food regularly to prevent burn or rare food.
5. After using, turn the knob counter-clockwise to the OFF position and remove the plug from the socket.

NOTE: During operation, the indicator light will cycle on and off to maintain the set temperature. If the temperature is above M (medium) while simmering, boiling, or stewing, the indicator light will not cycle off.

Safety and Precautions

- | | | |
|--|--|--|
|  General Prohibition |  Disassembly and Decomposition Prohibited |  No Contact |
|  Water immersion Prohibited |  Wet hand Prohibited |  Compulsory Prohibition |

- Ensure proper operation of the appliance, do not cover the vented hole with cloth or other articles.




- Get the power cord replaced by the manufacturer or its service facility or similar professionals when it malfunctions.



- Please do not immerse the appliance in water, can cause malfunction or electric shock.



- Never leave the appliance near the gas cooker or other heating sources to avoid being affected by high temperature.

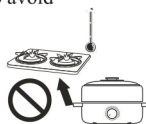

- Do not self-disassemble, self-repair or self-alter the appliance will void warranty.



- Always check for correct rated voltage. Do not attempt to modify polarized plug.




- Do not touch, cover or obstruct the steam vent on top of the lid as it may cause scalding.




- Do not connect the power plug to the socket with wet hand in case of electric shock.



- Please unplug when the appliance if not in use for a certain period.

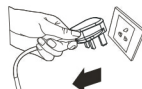

 - Do not move the appliance when it's working. Turn off power and unplug from the socket if you have to move the appliance.

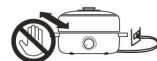

- Please do not attempt to reach inside the appliance with metal objects as it may lead to electric shock or malfunction.



- Children are not allowed to operate on the appliance. And never leave the appliance in the place where children could reach.



How to Clean

1. Disconnect the plug from the wall outlet.
2. Allow the unit to completely cool. Remove the cooking pot or grill pan from the heating base.
3. Wash the cooking pot, nonstick grill pan and lid with warm soapy water, using a sponge or dishcloth. Rinse thoroughly to remove soap residue. For even faster cleanup, the cooking pot, grill pan, and lid can be washed in the dishwasher.
4. Dry thoroughly with a soft cloth.

NOTE: Do not use harsh abrasive cleaners, scouring pads or products that are not considered safe to use on nonstick coatings. Never submerge the Heating base in water. To clean, simply wipe with a damp cloth.

Troubleshooting

If the Cooking Pot will not heat up...

- Make sure the Cooking Pot has been placed correctly on the base and that there is no food residue between the Cooking Pot and the Heating base element.
- Make sure the Grill Pan is not beneath the Cooking Pot. The Grill Pan and Cooking Pot should never be used at the same time.

Helpful Tips

- During and after use, the Tempered Glass Lid, Cooking Pot or Grill Pan will become very hot. Be sure to use the handles and wear protective oven mitts or gloves.
- To prevent food borne illness, always make sure food is cooking thoroughly before serving.
- Wooden, heat-proof plastic and nylon utensils are recommended. Metal utensils may scratch the nonstick surface of the Grill Pan.
- When simmering, boiling, or stewing, place the Glass Lid on top of the Cooker for faster heating.