

INSTALLATION

 
 
Product Manual

Version: 150297US-01-26A-SZT




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

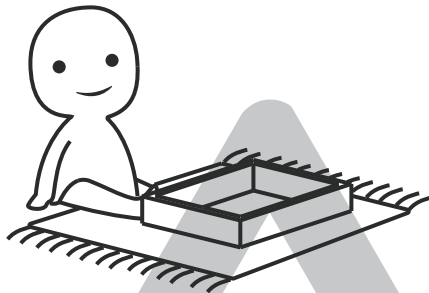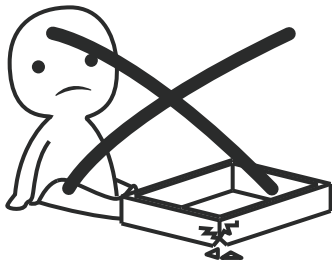



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

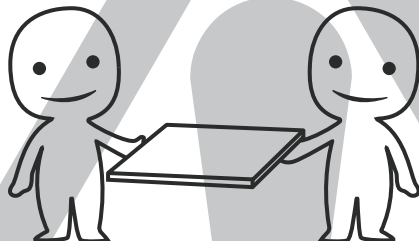

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

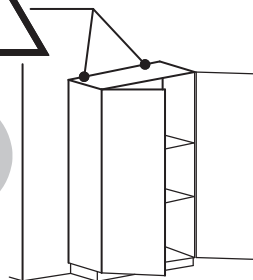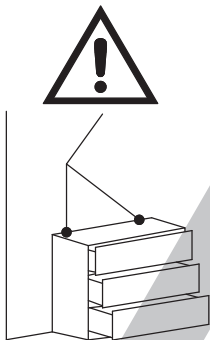

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

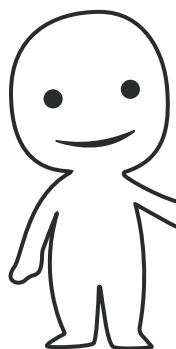


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 93+3

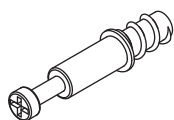


Ø6.5 x 35 mm

B x 93+3




Ø15 x 9 mm

 C x 96+3




Ø8 x 30 mm

 D x 12+2



Ø4 x 32 mm

 E x 20+2

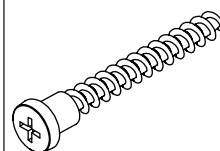

Ø6 x 50 mm

F x 4



G x 2



Ø4 x 6 mm

H x 2



Ø4 x 18 mm

J x 48+5



Ø3.5 x 14 mm

K x 6+1

 


Ø4 x 15 mm

L x 8+1




M x 4



Ø35 mm

 N x 28+1




P x 20



Ø20

 Q-1 x 2

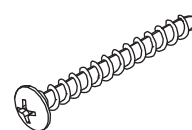


Ø4 x 40 mm

Q-2 x 2




Ø4 x 12 mm

 Q-3 x 2




Ø8 x 29 mm

 Q-4 x 2

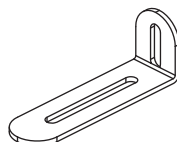


73 x 15 x 24 mm

 CL x 2

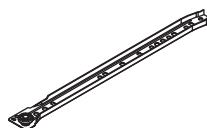


14"

 CR x 2

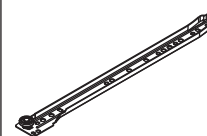


14"

 DL x 2

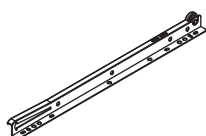


14"

 DR x 2

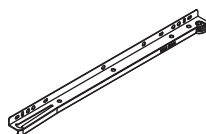

14"

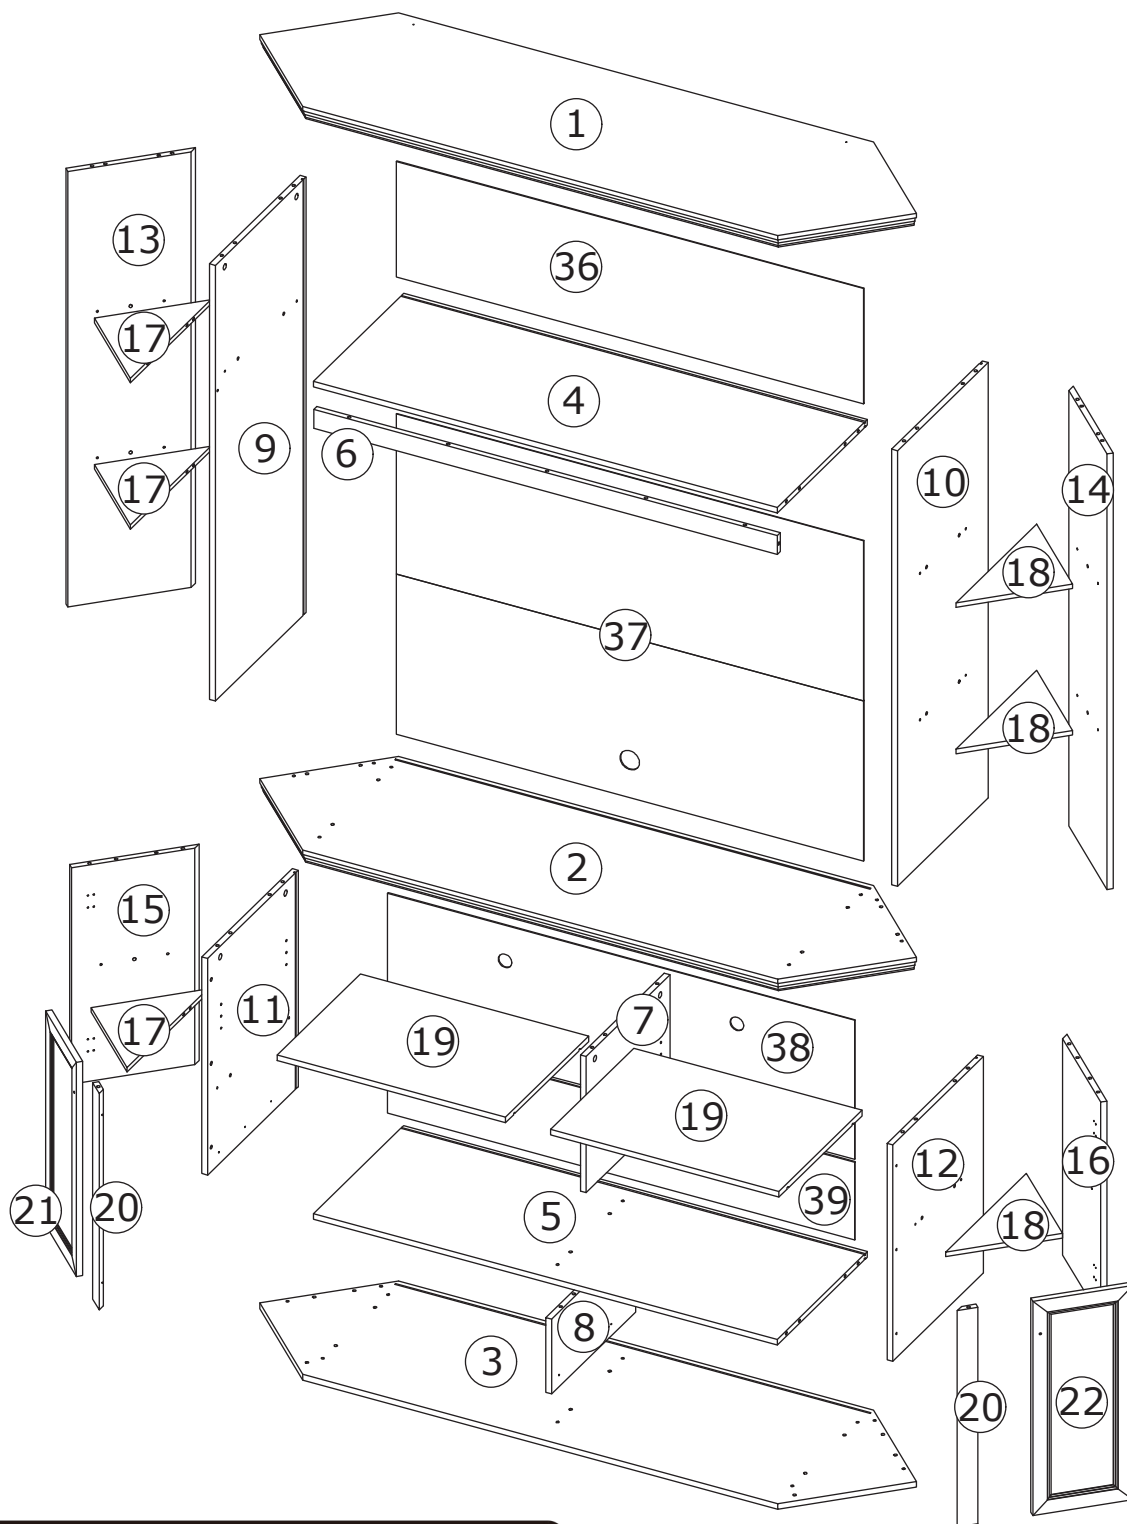 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

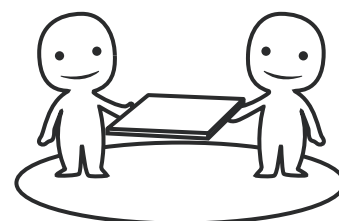

ASSEMBLED BY 2 ADULTS

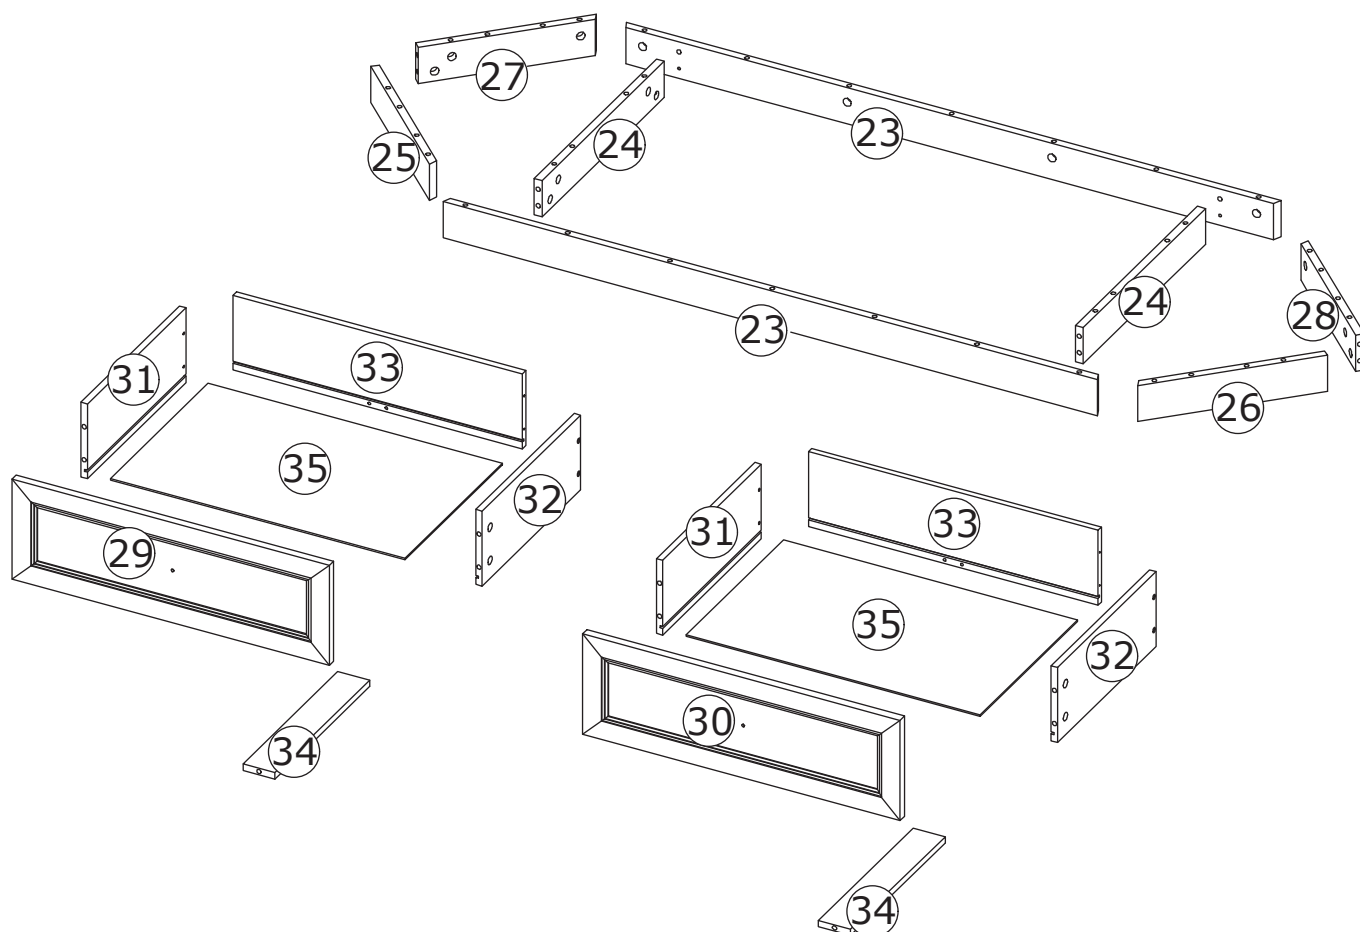 


⚠ WARNING









































Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

                    
 
*This is a permanent label.
Do not remove!*

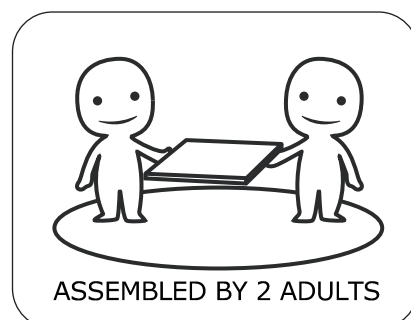

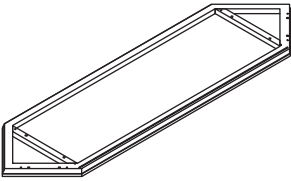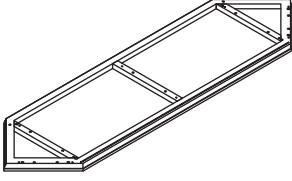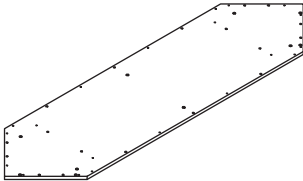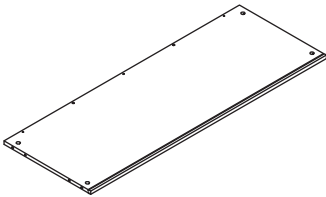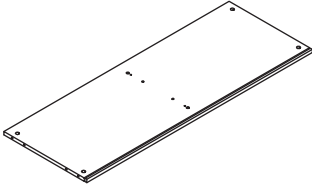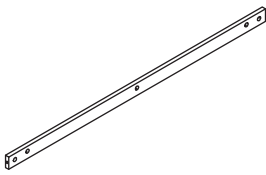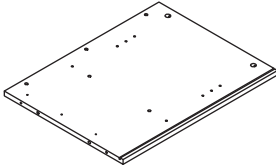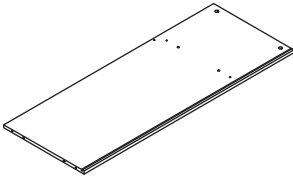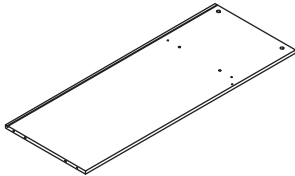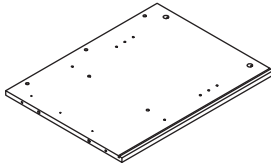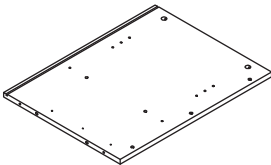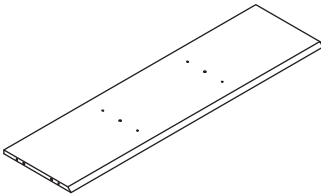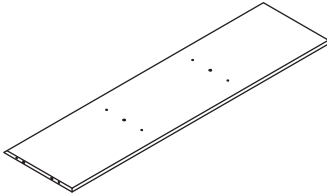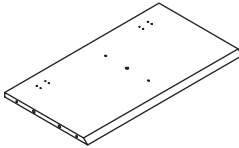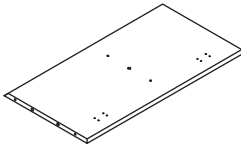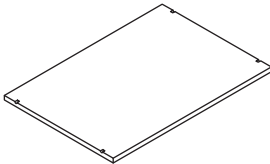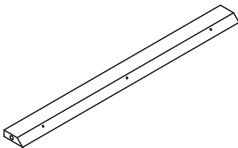
① x1 	② x1 	③ x1 	④ x1 
⑤ x1 	⑥ x1 	⑦ x1 	⑧ x1 
⑨ x1 	⑩ x1 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x1 	⑯ x1 
⑰ x3 	⑱ x3 	⑲ x2 	⑳ x2 
6/40			

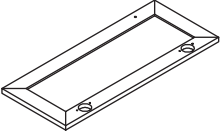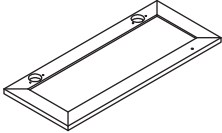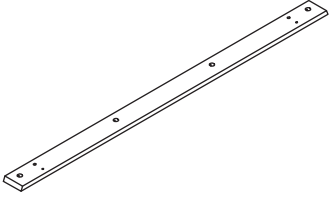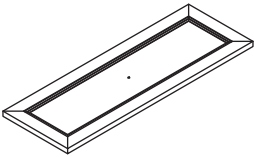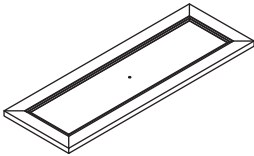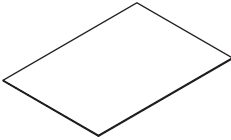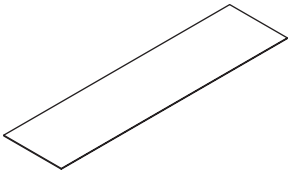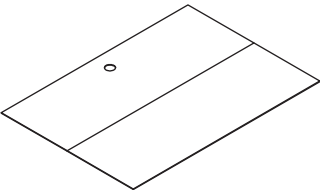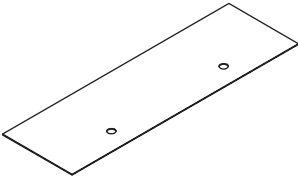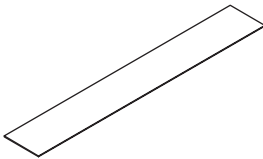                  21 x1 	22 x1 	23 x2 	24 x2 
25 x1 	26 x1 	27 x1 	28 x1 
29 x1 	30 x1 	31 x2 	32 x2 
33 x2 	34 x2 	35 x2 	36 x1 
37 x1 	38 x1 	39 x1 	
7/40			

  1

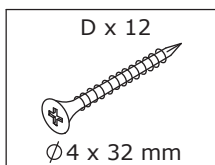


 Secure part 31, 32, and 34 to part 33 with screw (D).


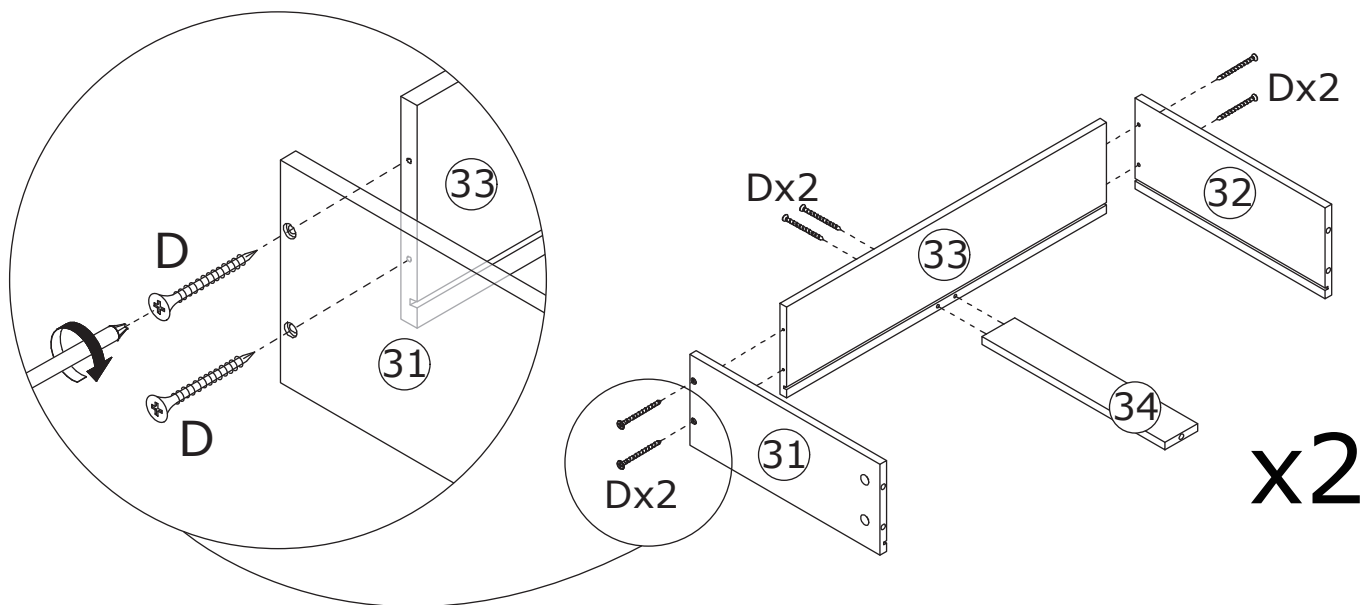


2



 
Insert part 35 along the available grooves.

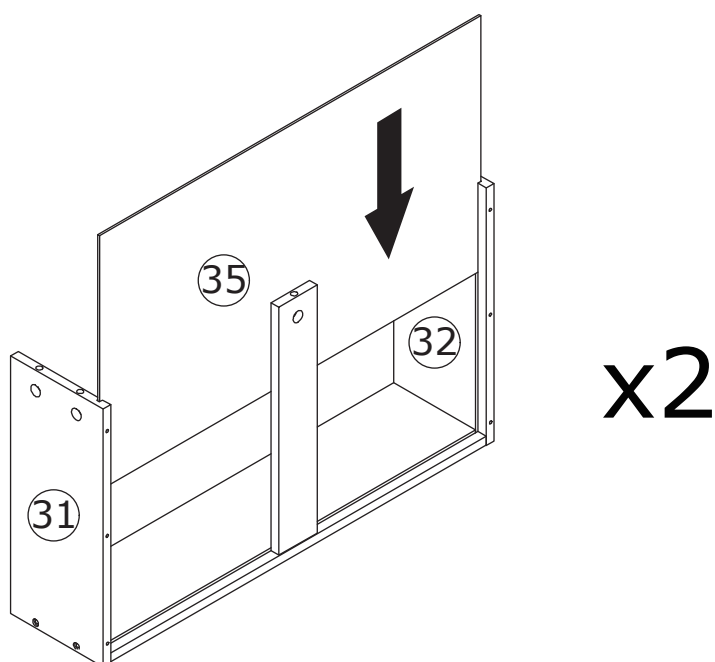





3

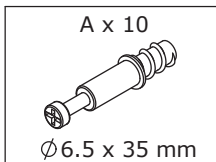  

   Screw eccentric rod (A) onto part 29 and 30.


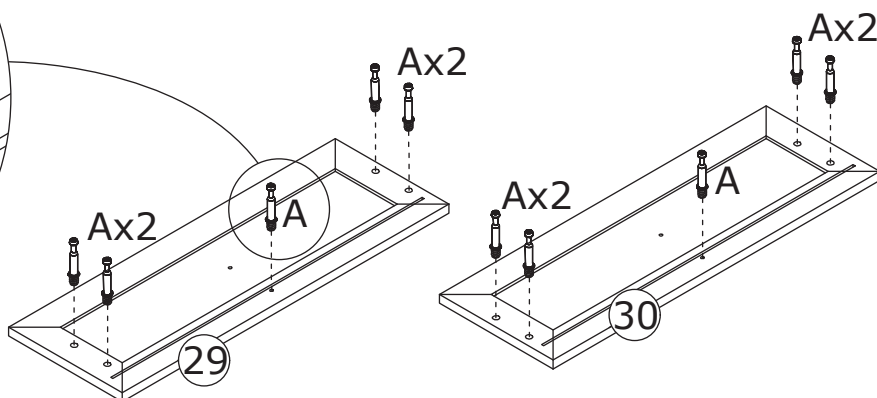
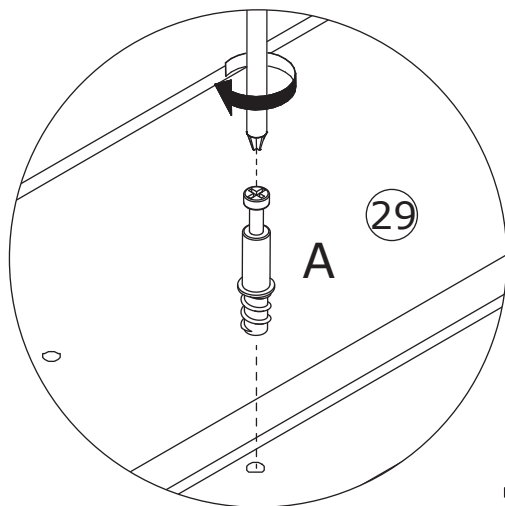
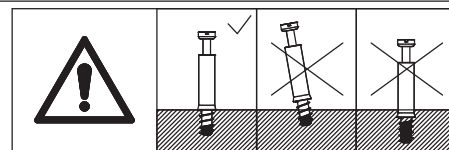


4

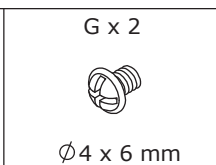  
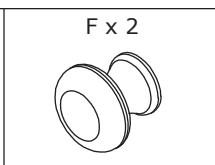 
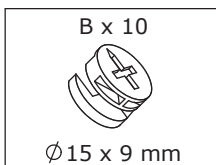 


Connect part 29 and 30 to part 31, 34 and 32 respectively, tighten by turning cam lock (B) clockwise.

 
 
 
 
Secure knob (F) with screw (G).

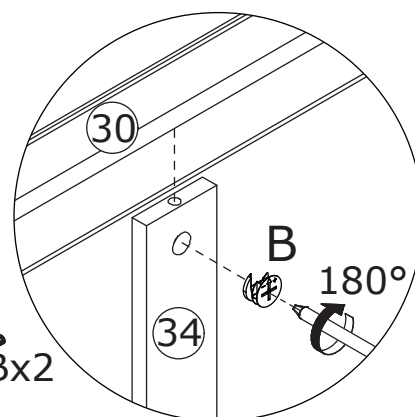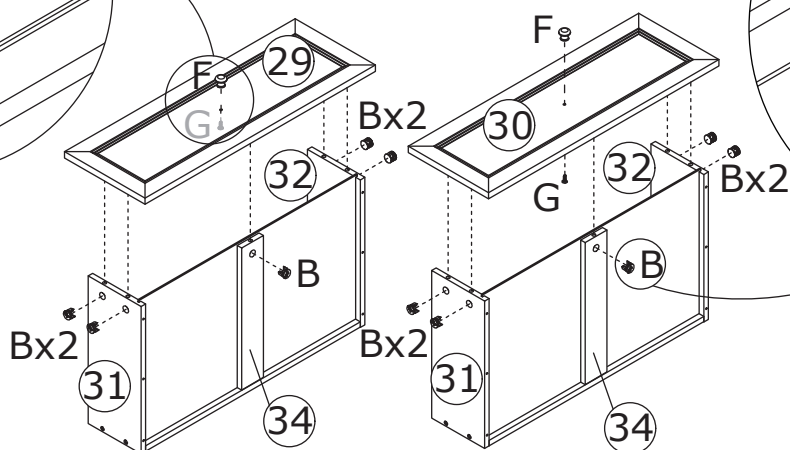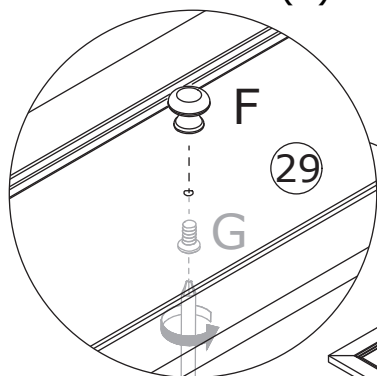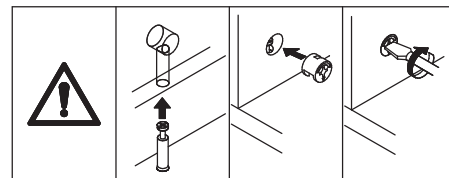


5

   J x 12  Ø 3.5 x 14 mm	DL x 2  14"	DR x 2  14"	
--	--	--	---

  
 
 
Secure slide rail (DL) and (DR) to part 32 and 31 respectively with screw (J).

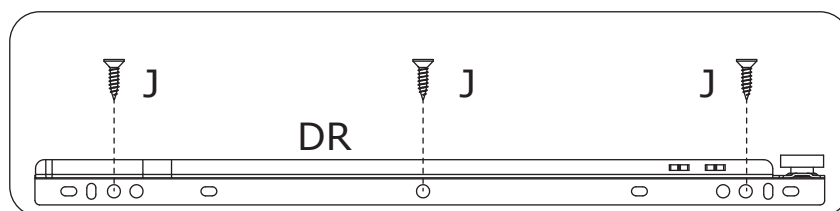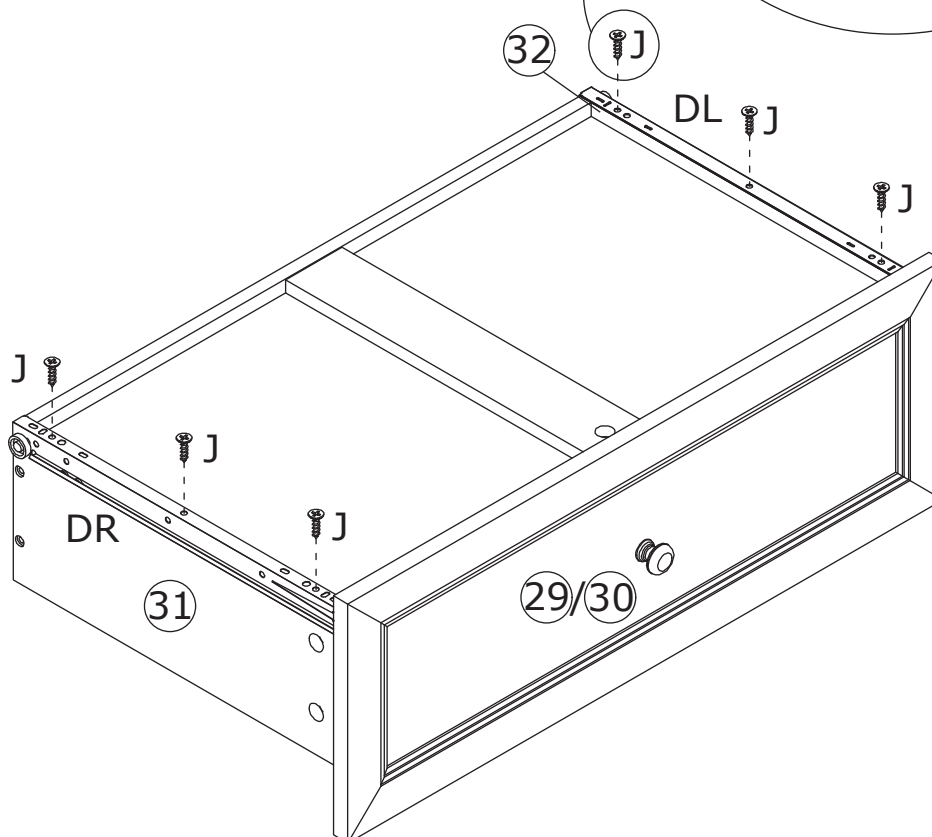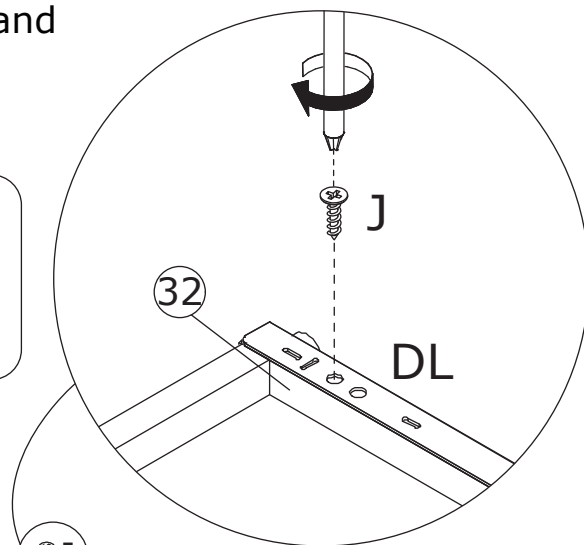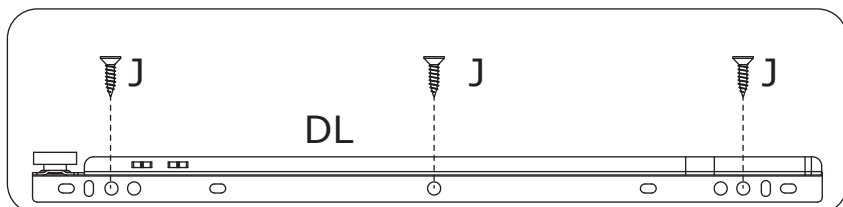





6

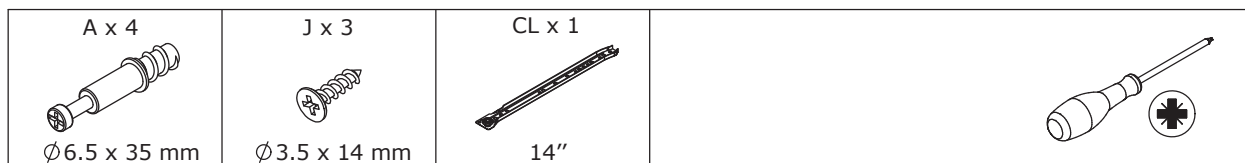 

   Secure slide rail (CL) to part 11 with screw (J).
Flip the board to other side, then screw
 eccentric rod (A) onto.

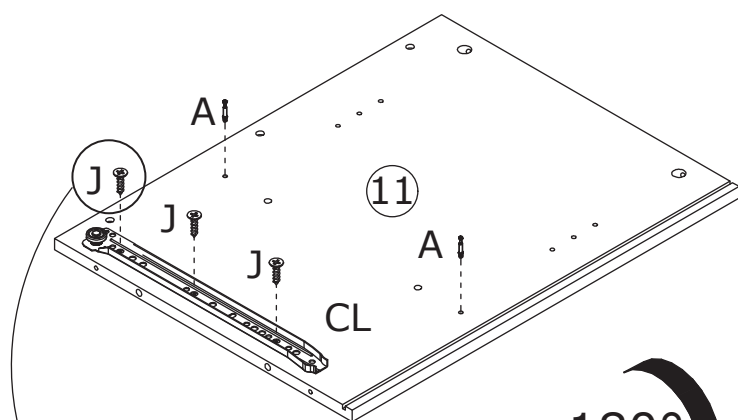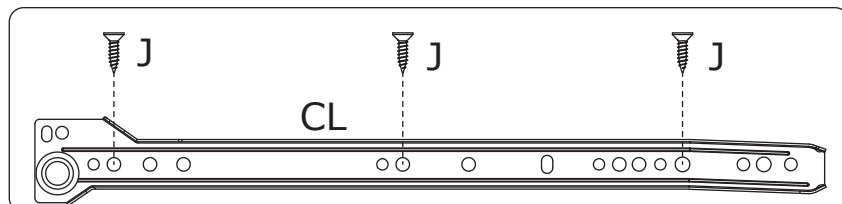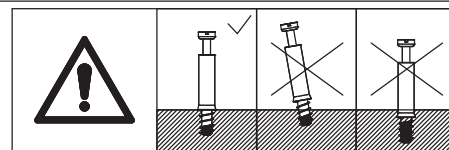


180°

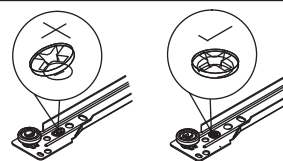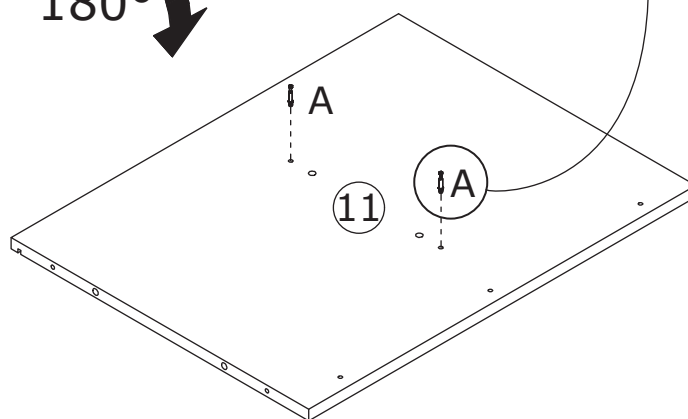  
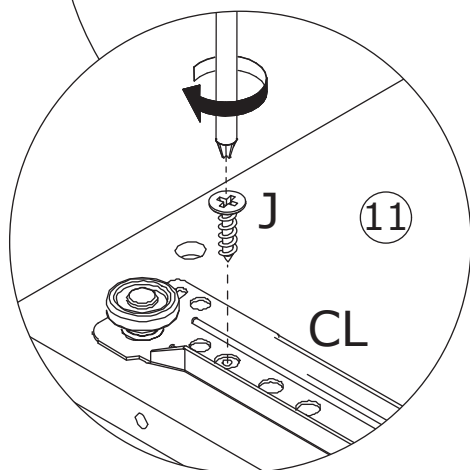 
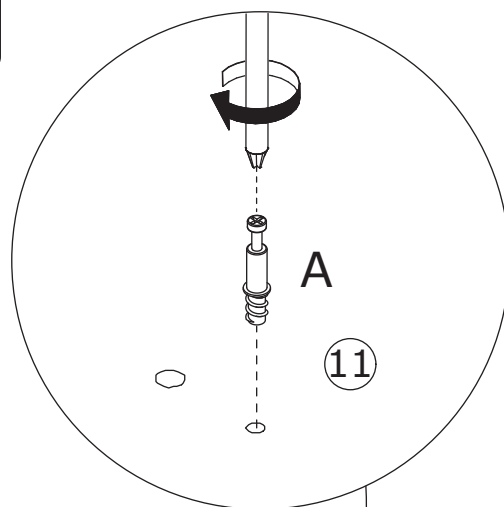 


Please make sure that the
 screws are inserted vertically
 to avoid affecting the sliding
 of the drawer.


 
7

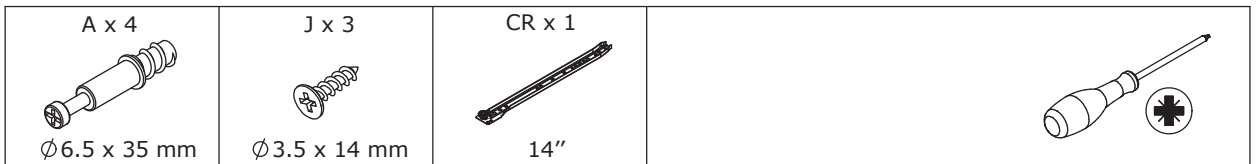

   Secure slide rail (CR) to part 12 with screw (J).
Flip the board to other side, then screw eccentric rod (A) onto.

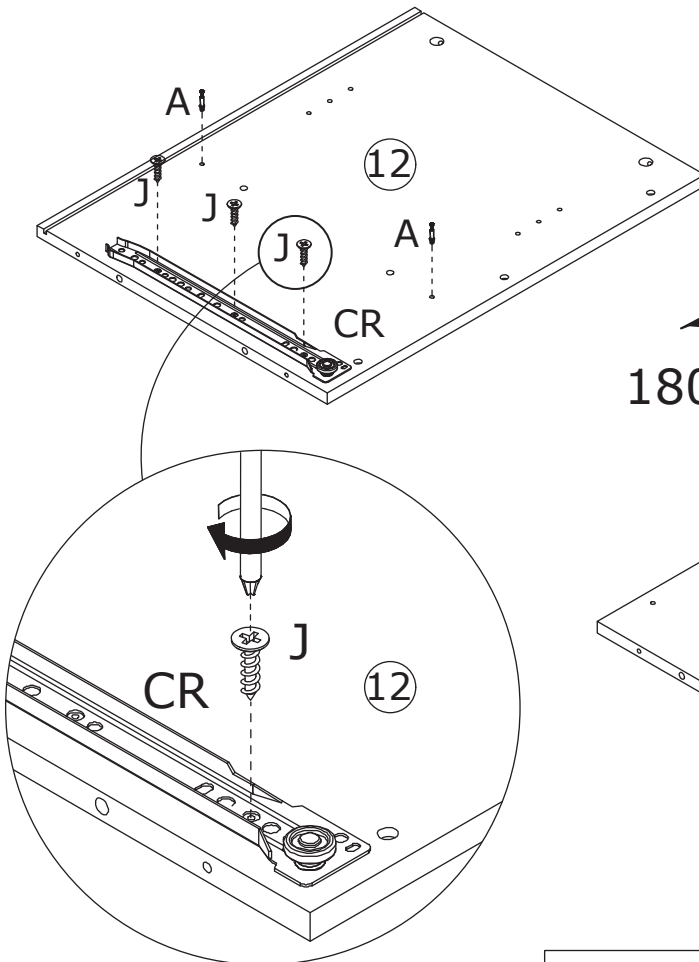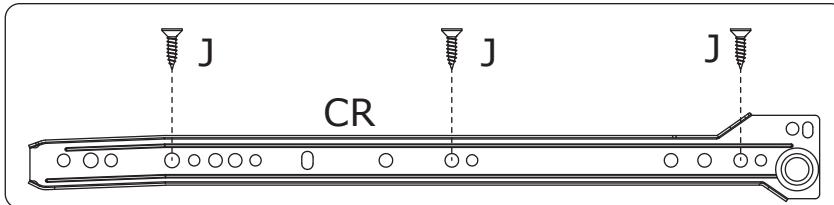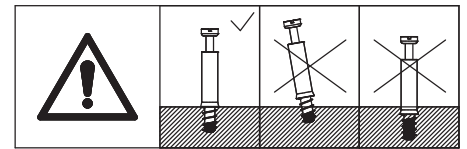

180°

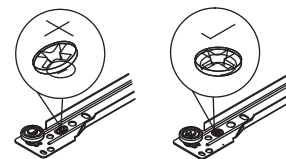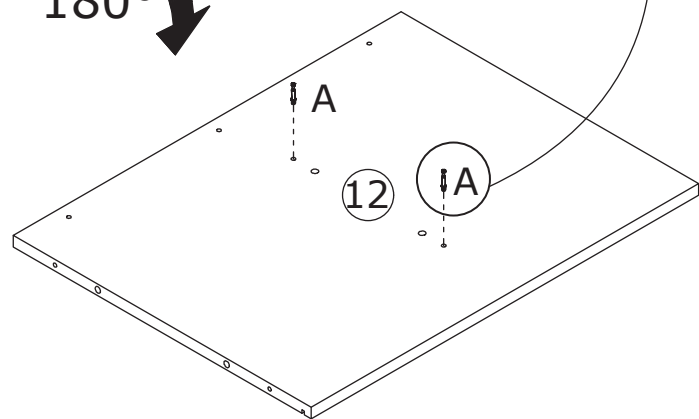  

Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

8

J x 6



Ø3.5 x 14 mm

CL x 1

 


14"

CR x 1




14"





Secure slide rail (CL) to part 8 using screw (J).



 
Flip the board to other side, and secure slide rail (CR).

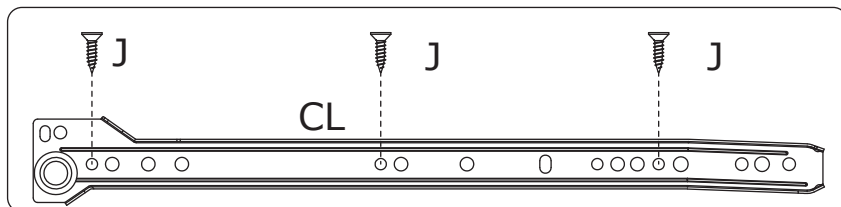

  - Please note that the screw positions of this slide rail are different from those of the others.

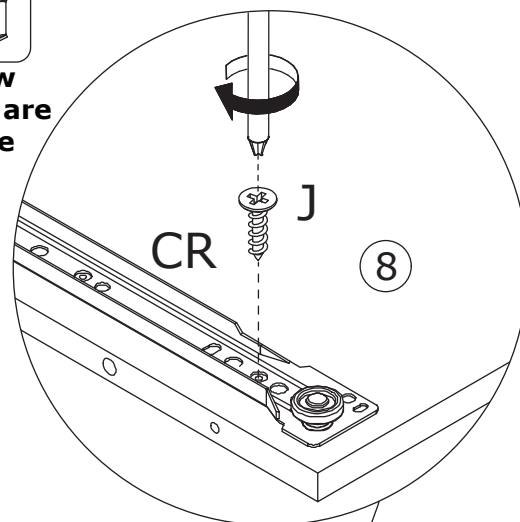
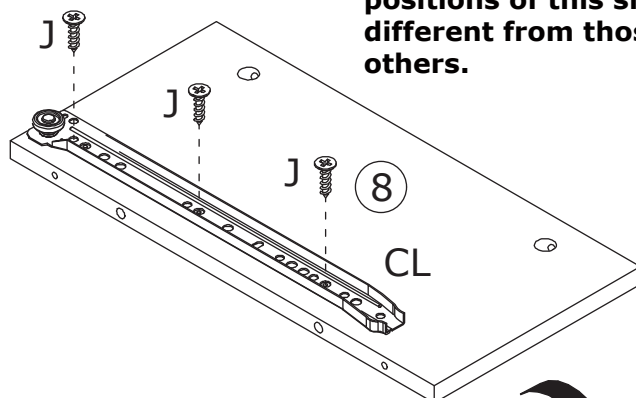


180°

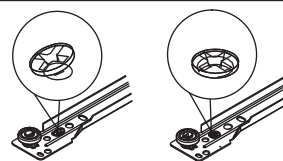 
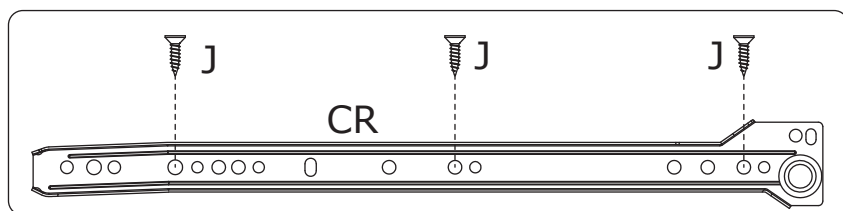 
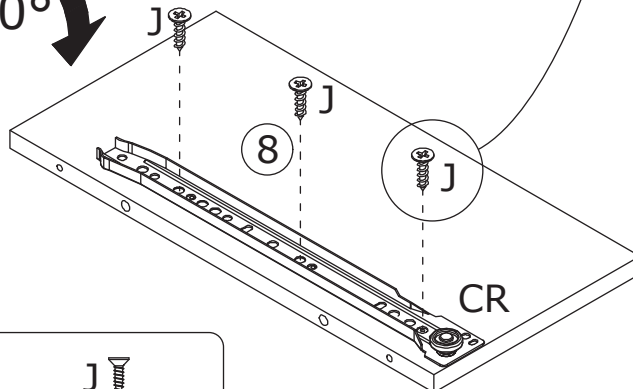 


Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.


 
 
9

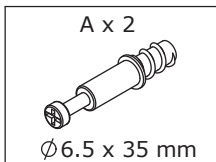




Screw eccentric rod (A) onto part 5.

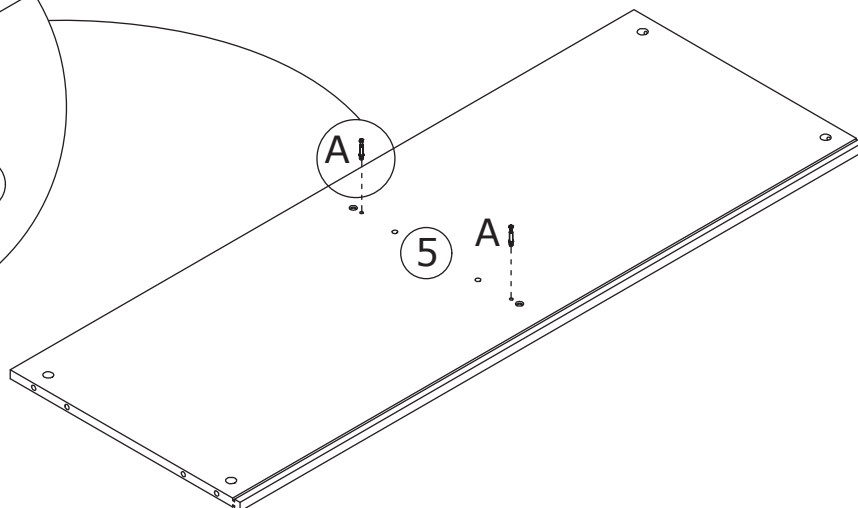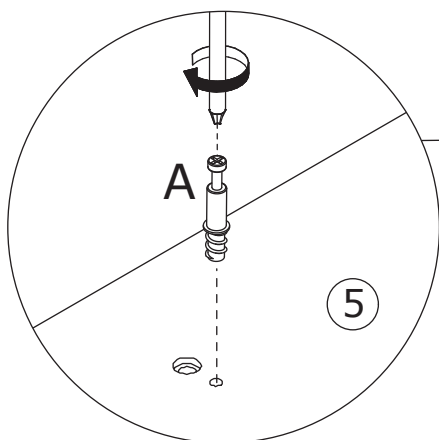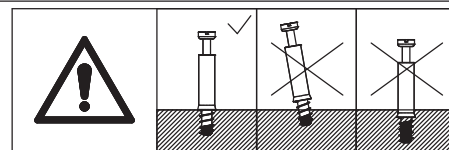   



10

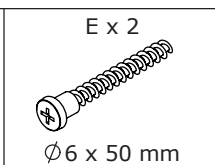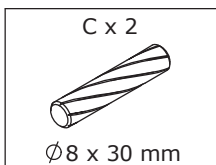   

 
 
 
Connect part 7 to part 5 using wooden dowel (C), then secure with screw (E).

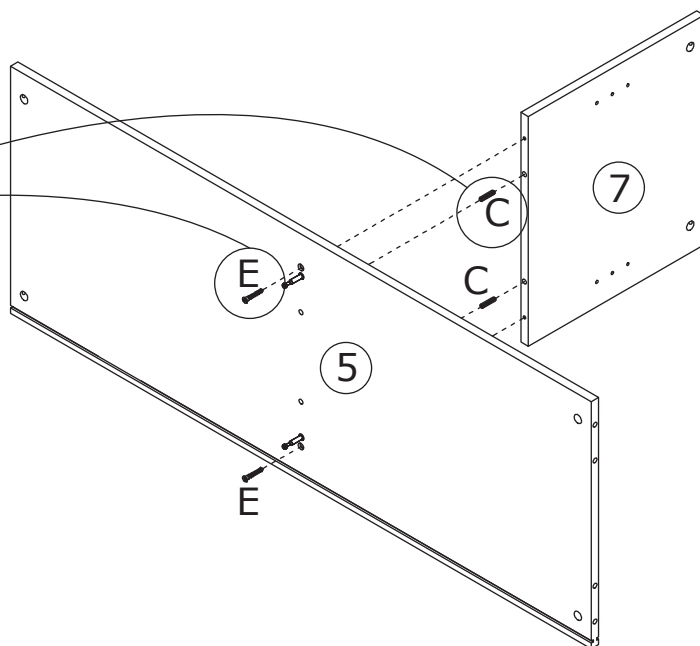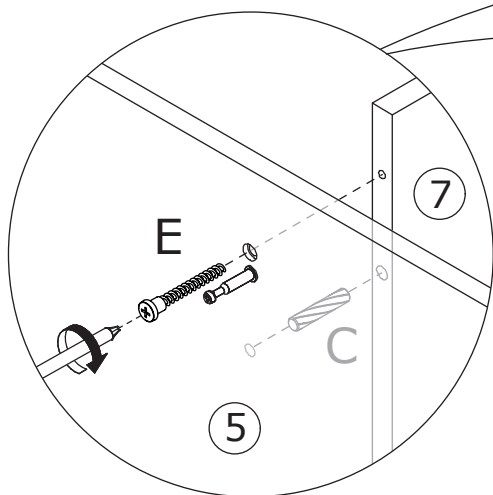


11

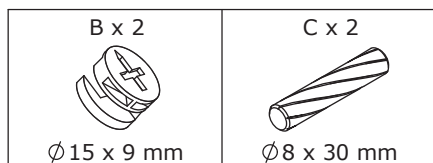  

   
Connect part 8 to part 5 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

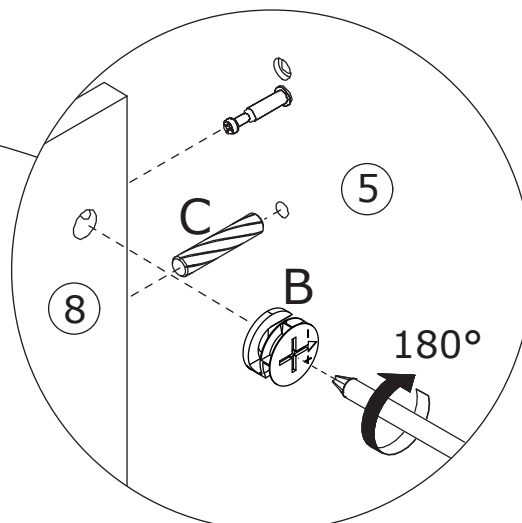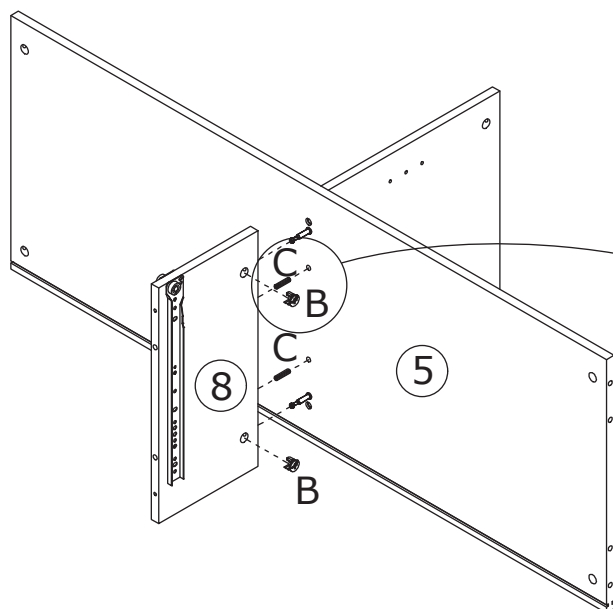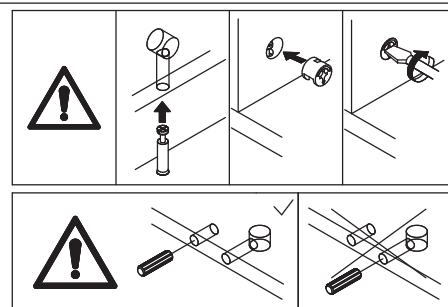



12

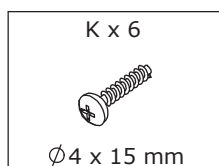 



 
Secure part 11 and 12 to part 20 using screw (K).

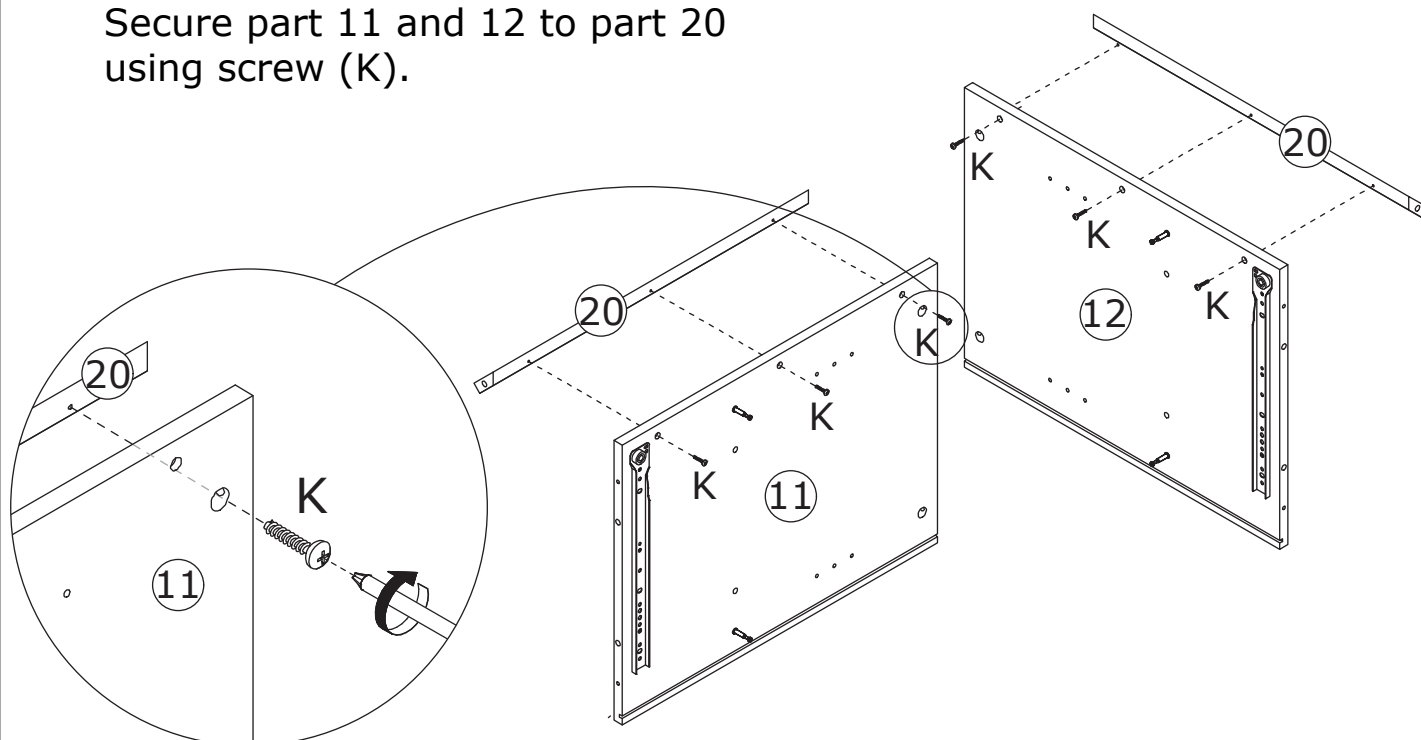



13

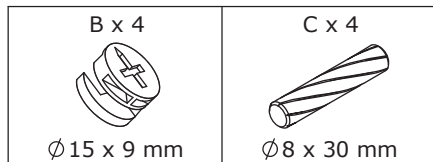  

 
 
 
Connect part 11 and 12 to part 5 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

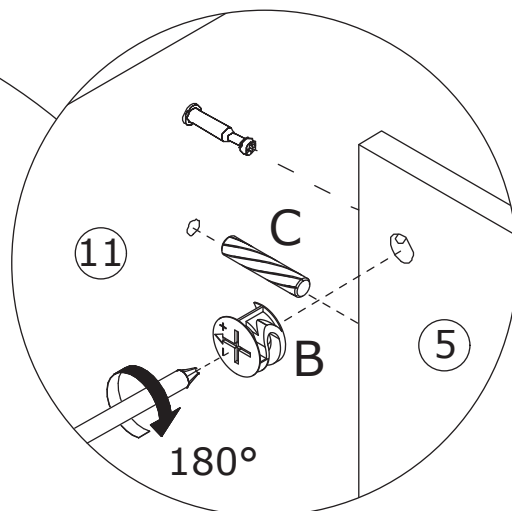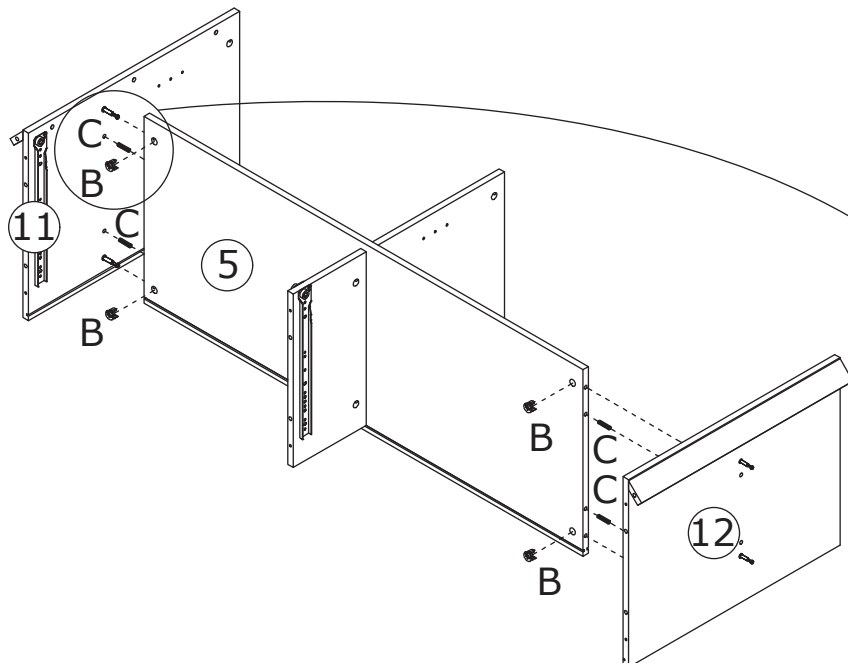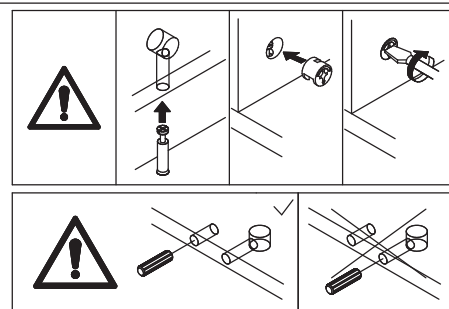



14

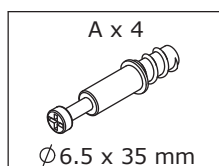  

 
 
 
Screw eccentric rod (A) onto part 15 and 16.

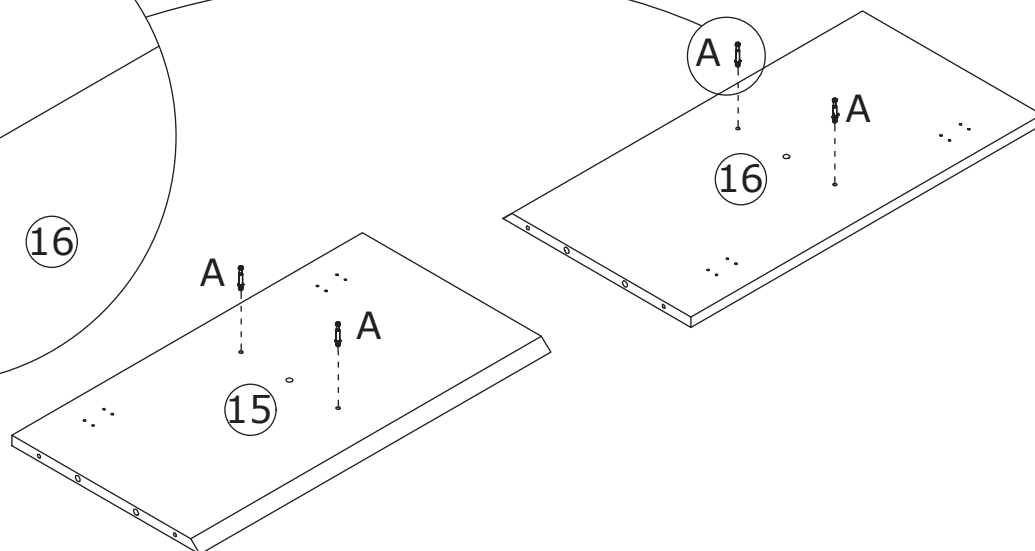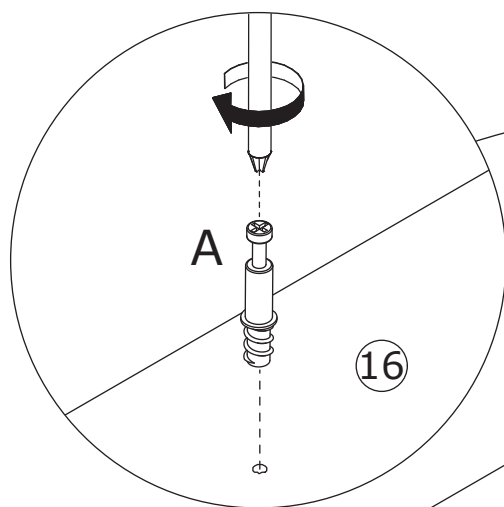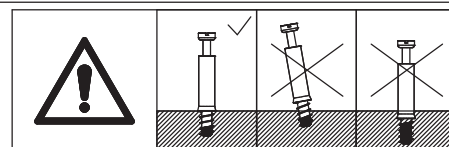



15

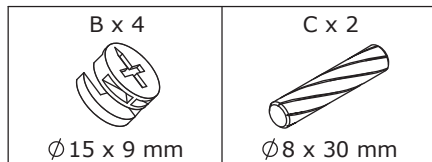  

  
 
Connect part 17 to part 15, and part 18 to part 16 respectively using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

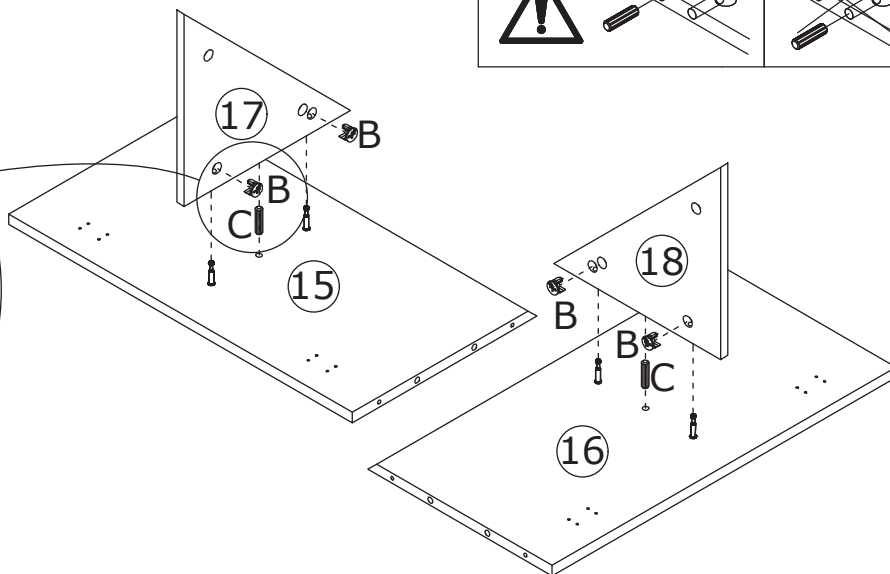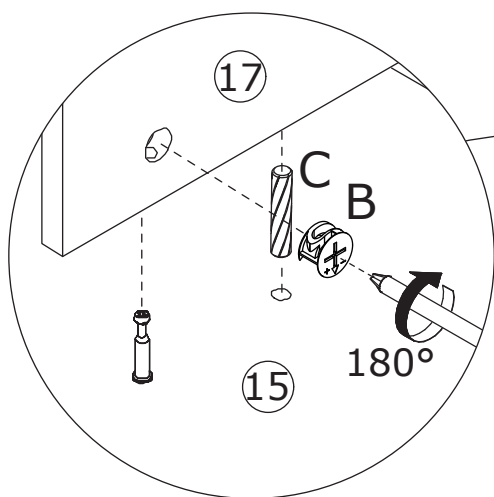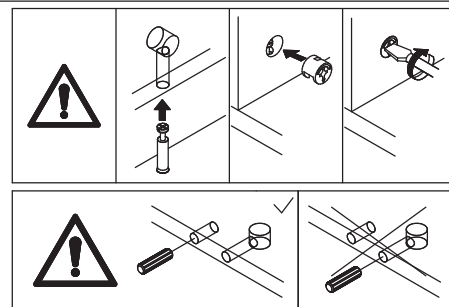

16

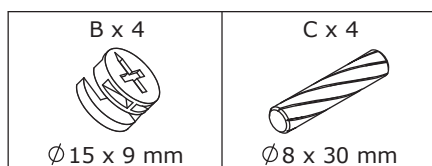  


  Connect part 17 and 18 to part 11 and 12 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

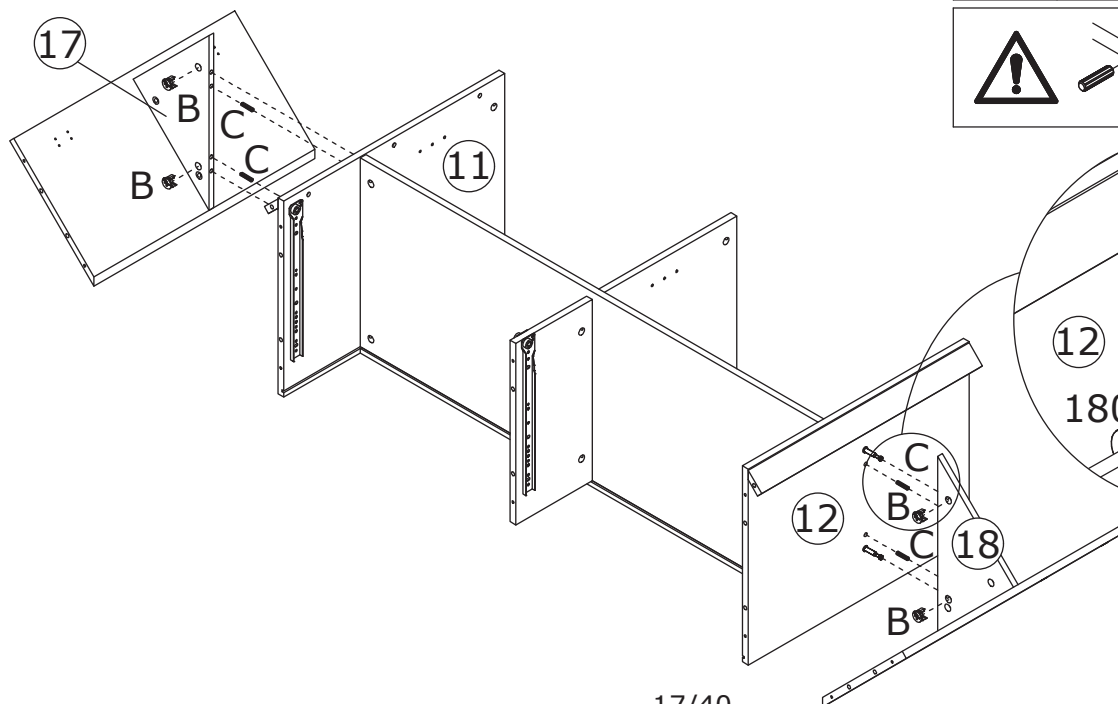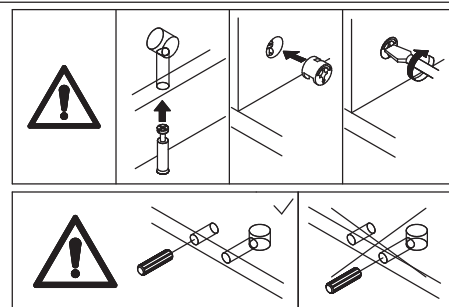



17

 Insert part 39 along the available grooves.



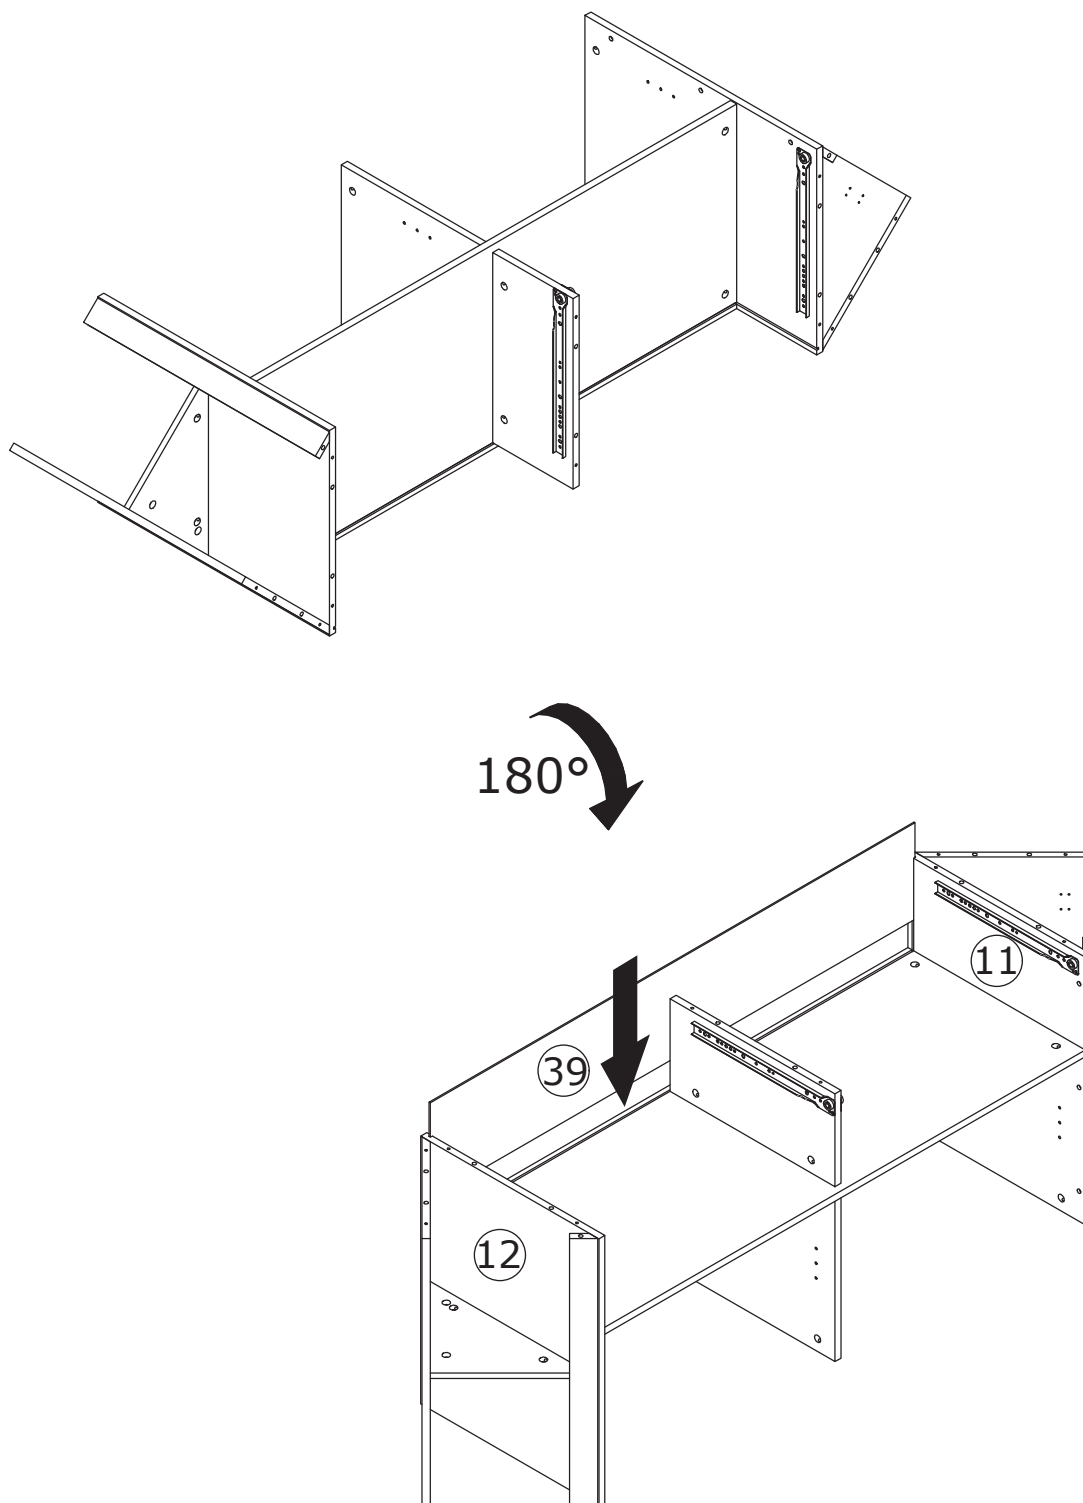


18

 A x 20

  Ø6.5 x 35 mm

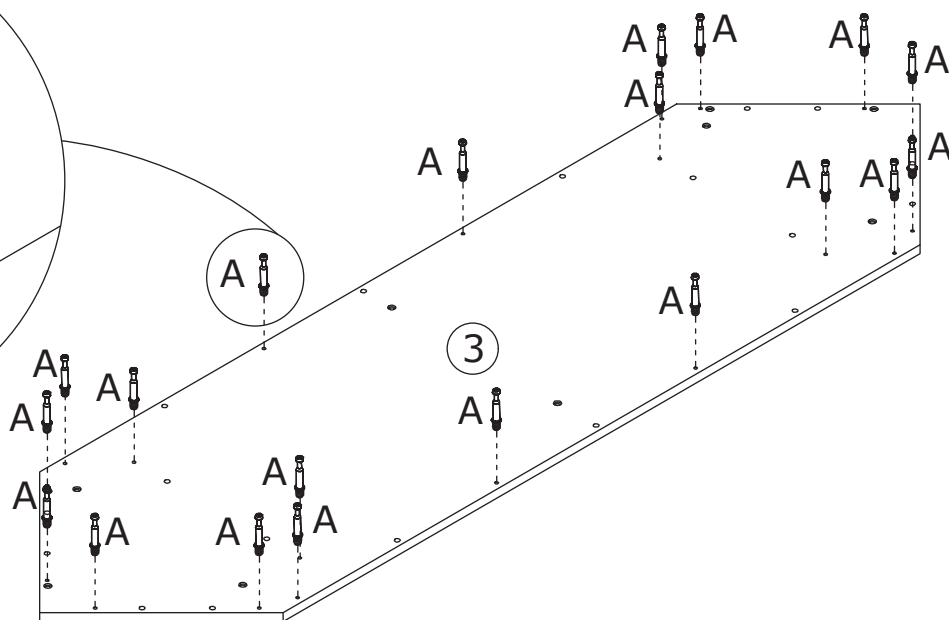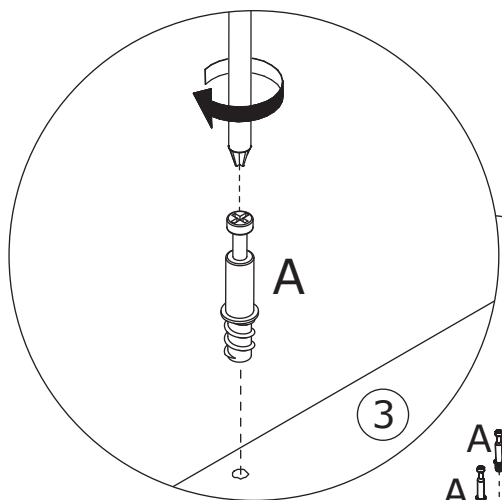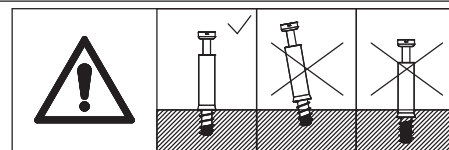   


Screw eccentric rod (A) onto part 3.



19




C x 12

  Ø8 x 30 mm



E x 10

    Ø6 x 50 mm

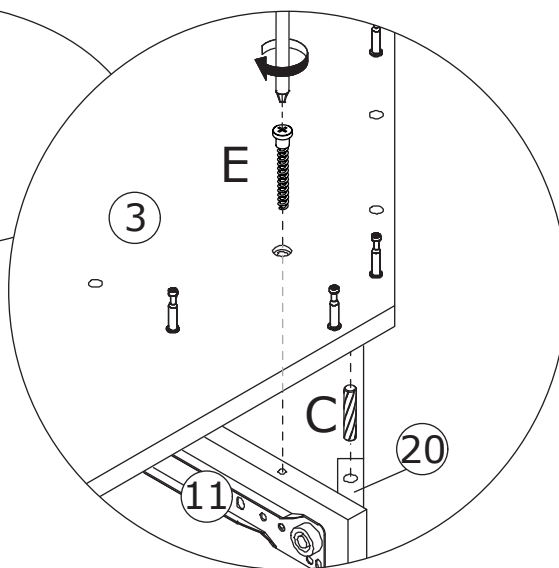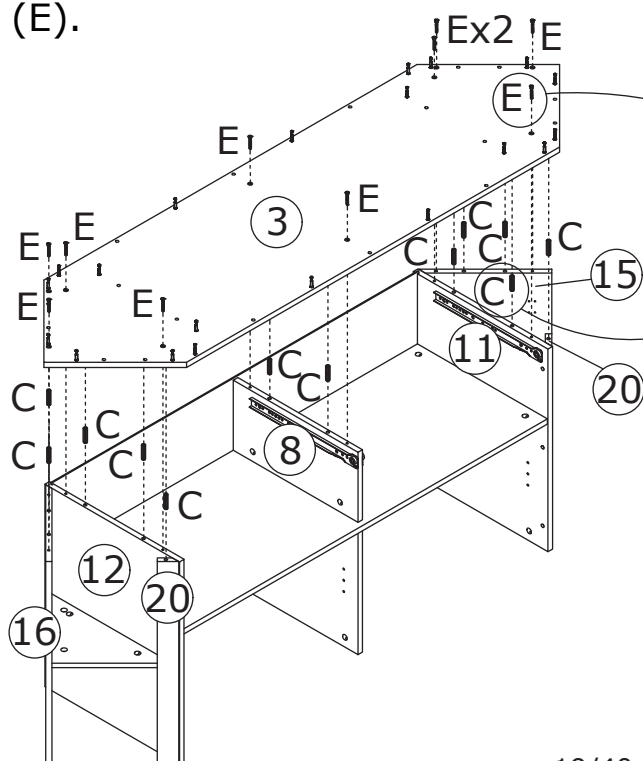


 
 
Connect part 3 to part 8, 11, 12, 15, 16 and 20 using wooden dowel (C), and secure with screw (E).

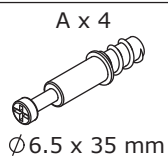




20



 
 
 
Screw eccentric rod (A) onto part 23.

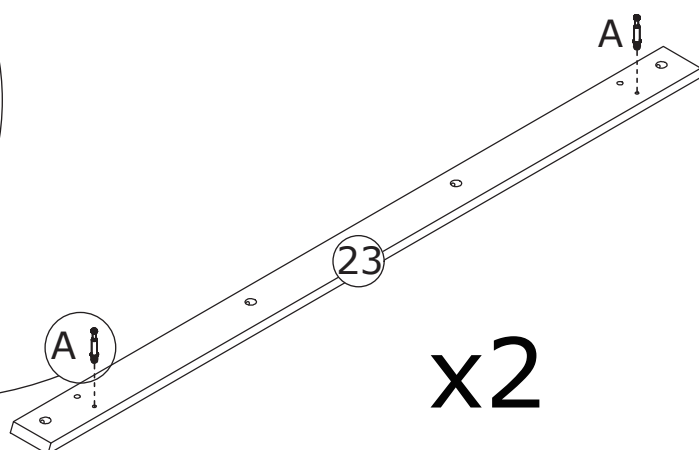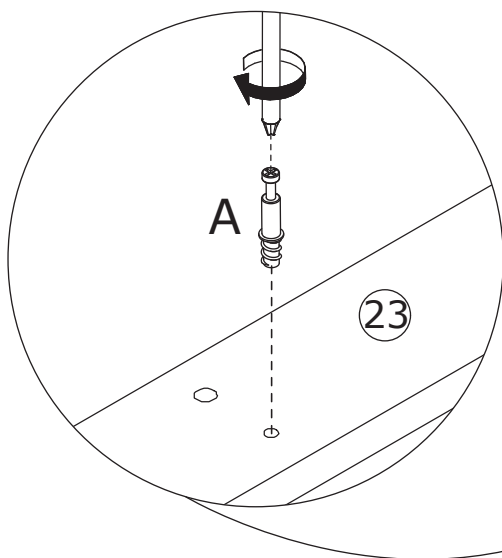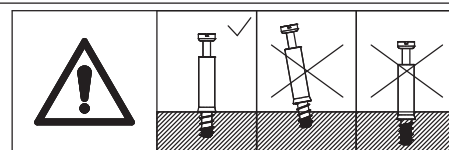



21

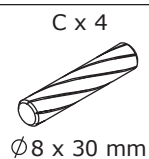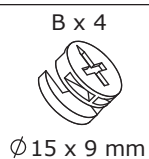   

 
 
 
Connect part 24 to part 23 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

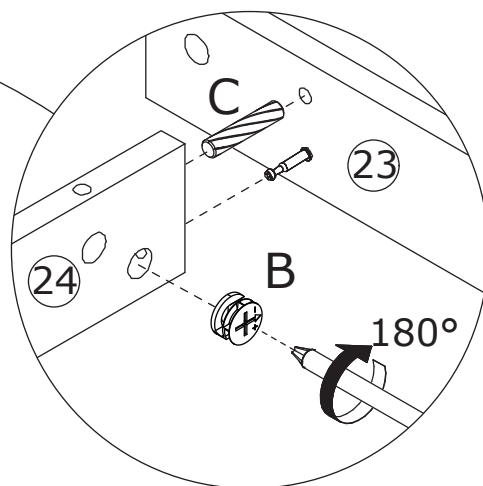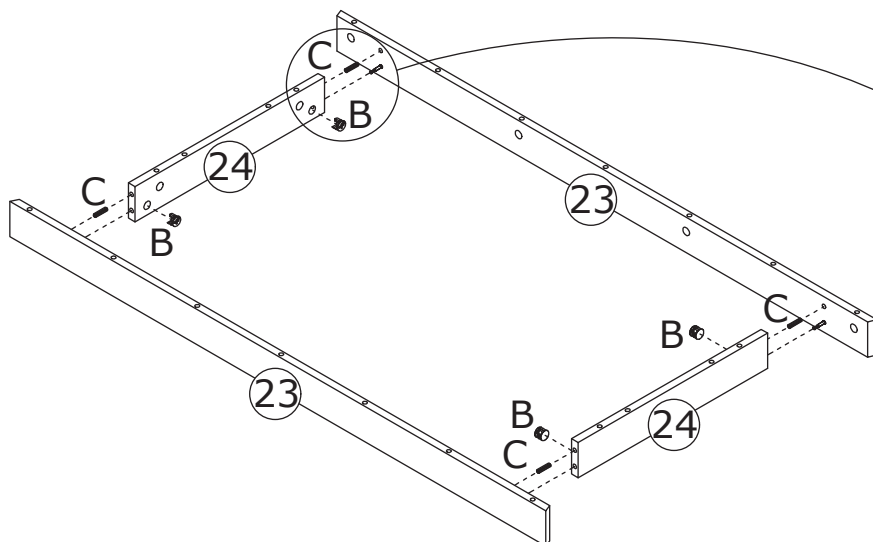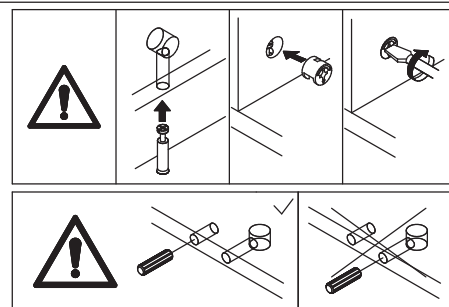




22

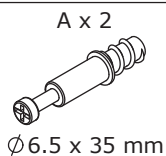  



 
 
 
Screw eccentric rod (A) onto part 25 and 26.

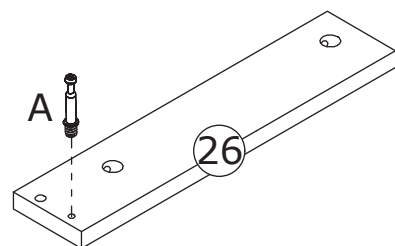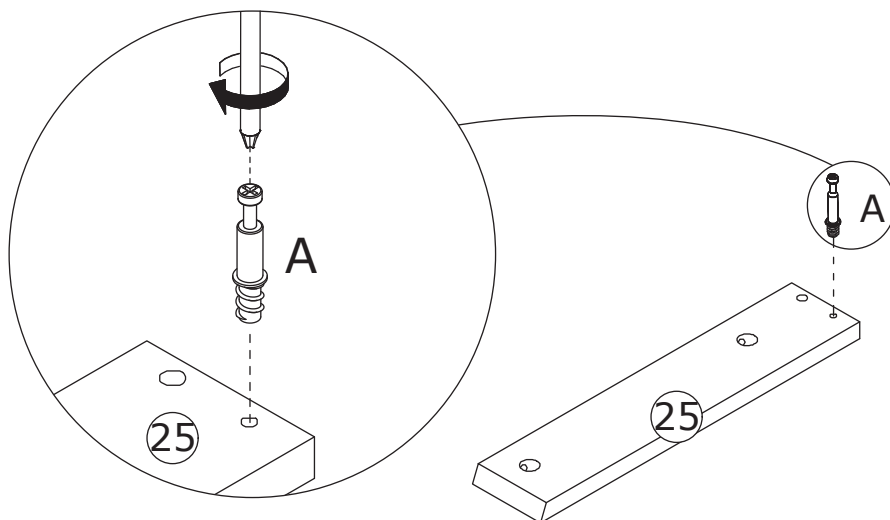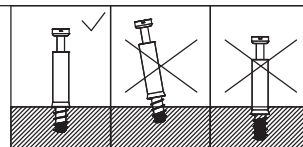

23

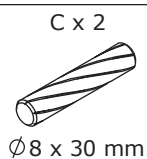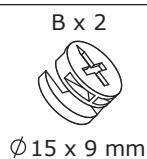   

     Connect part 27 to part 25, and part 28 to part 26 respectively using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

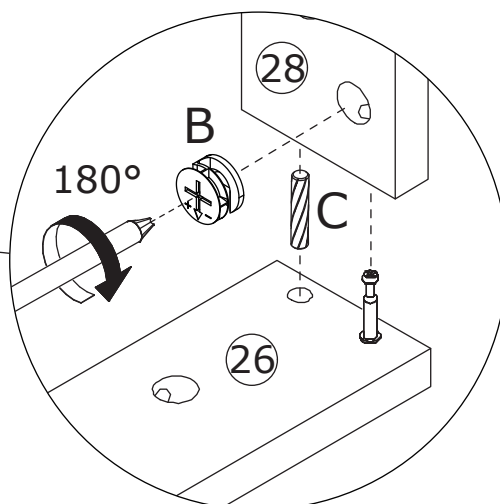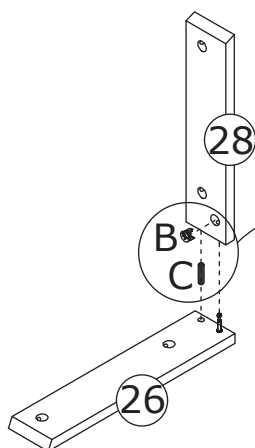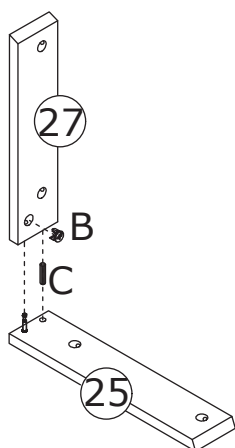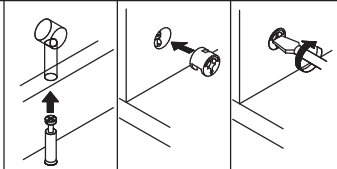


24

B x 12




Ø15 x 9 mm




 
C x 10



Ø8 x 30 mm

 

    Connect part 23 and 24 to part 3 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

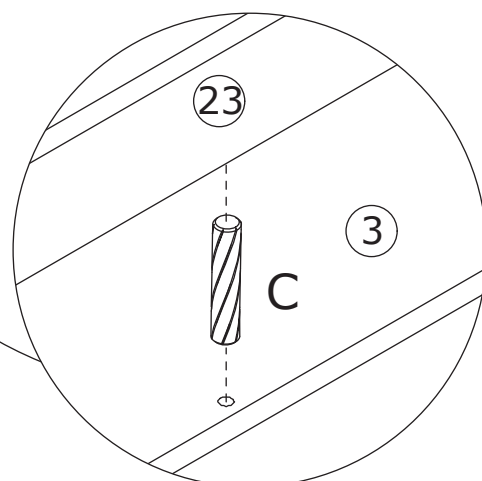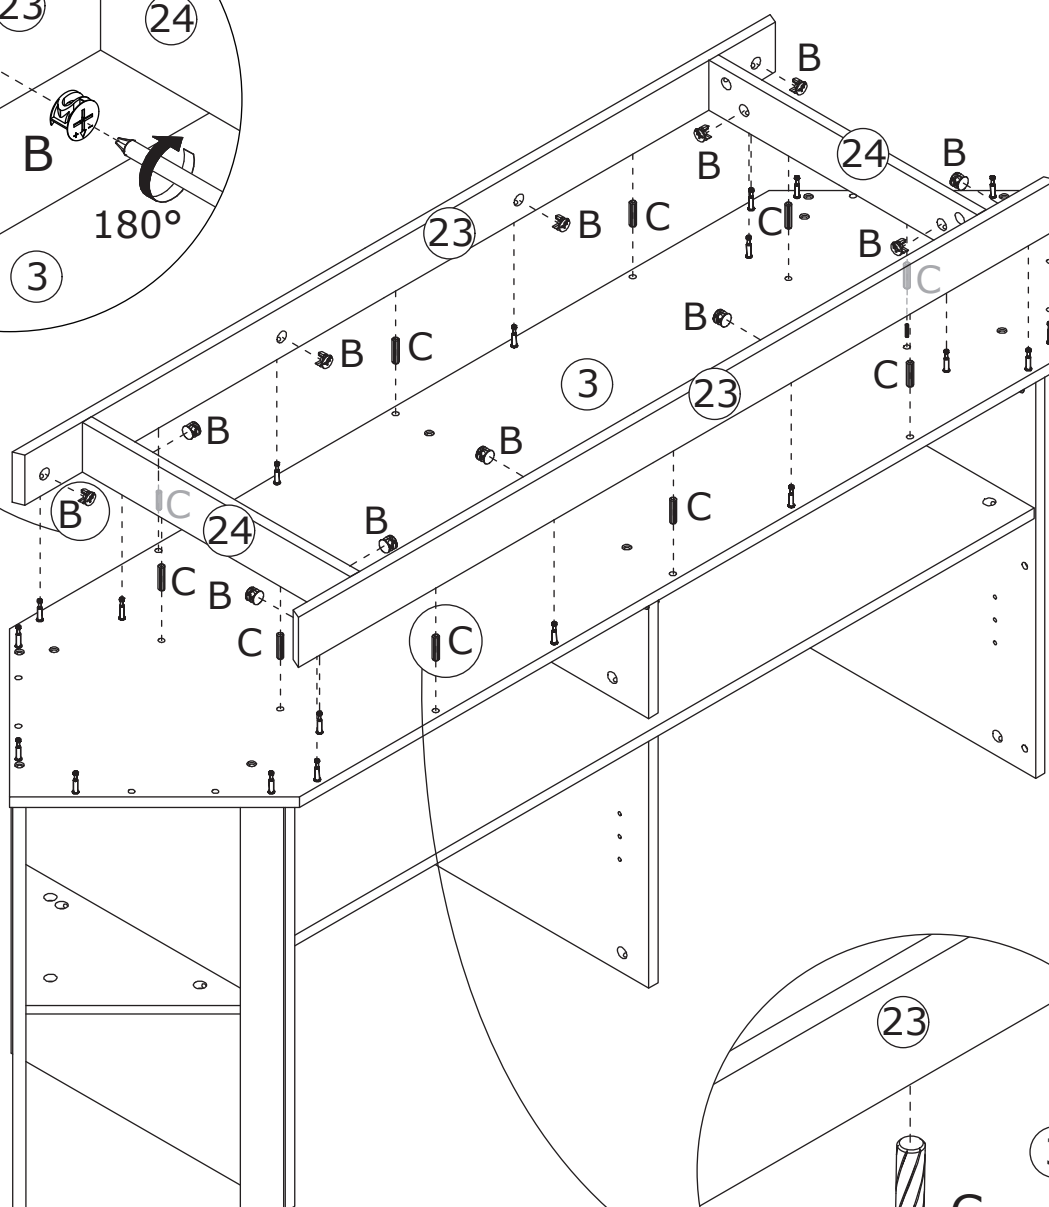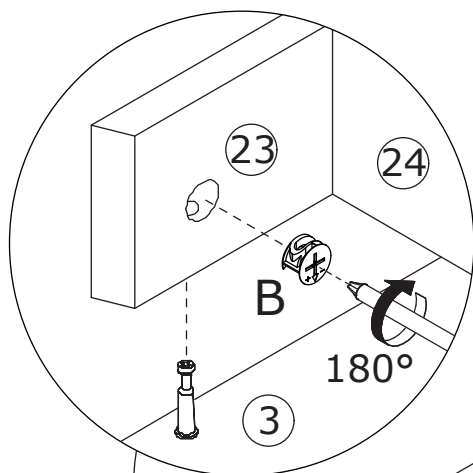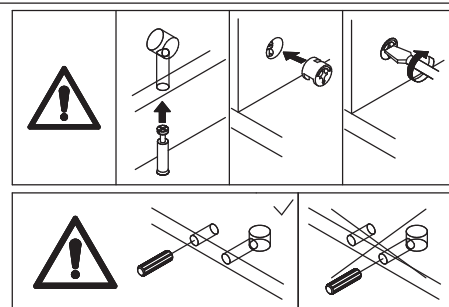

25

B x 8

 


Ø15 x 9 mm




C x 8




Ø8 x 30 mm



   Connect part 25, 27, 26 and 28 to part 3 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

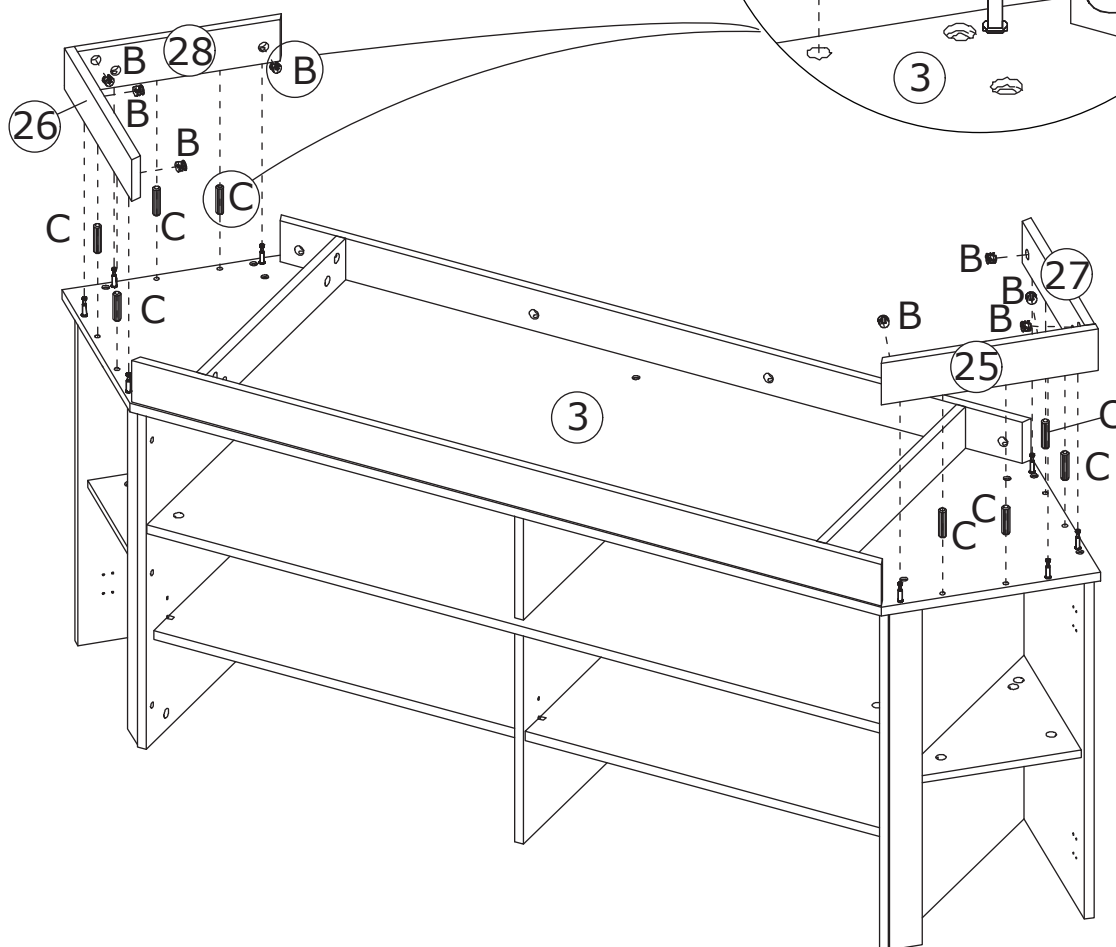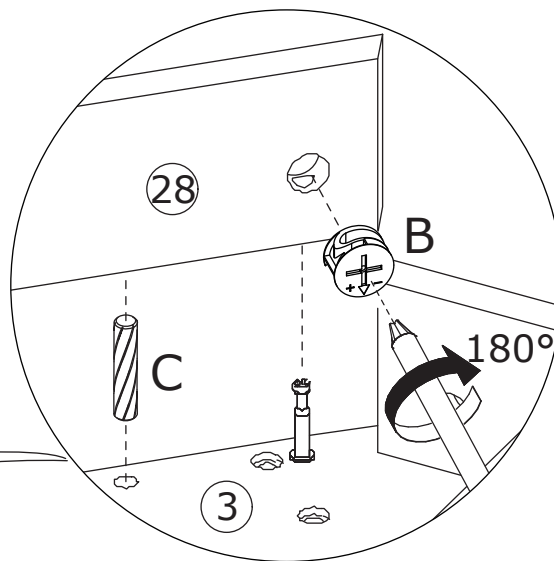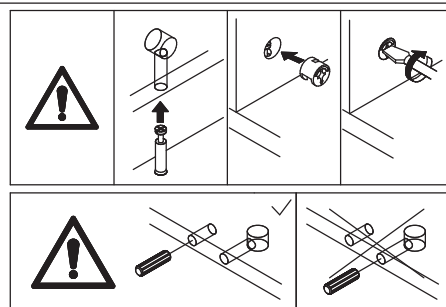


 Insert part 38 along the available grooves.


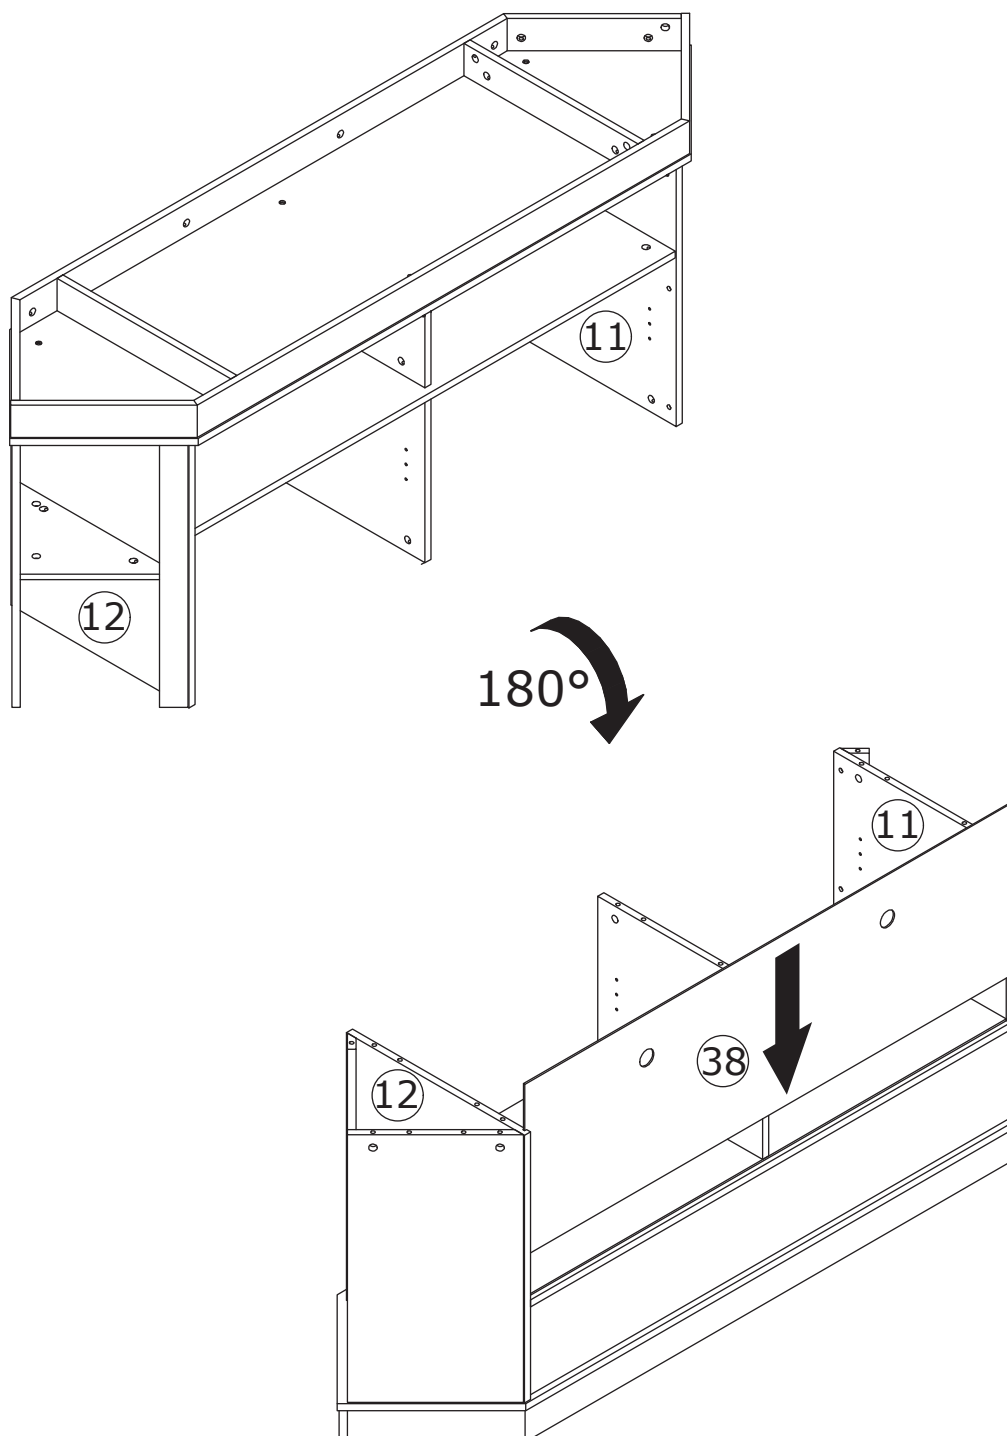


27

 
A x 14
 $\varnothing 6.5 \times 35 \text{ mm}$




  Screw eccentric rod (A) onto part 9 and 10.
Flip to other side, and screw eccentric rod (A) onto.

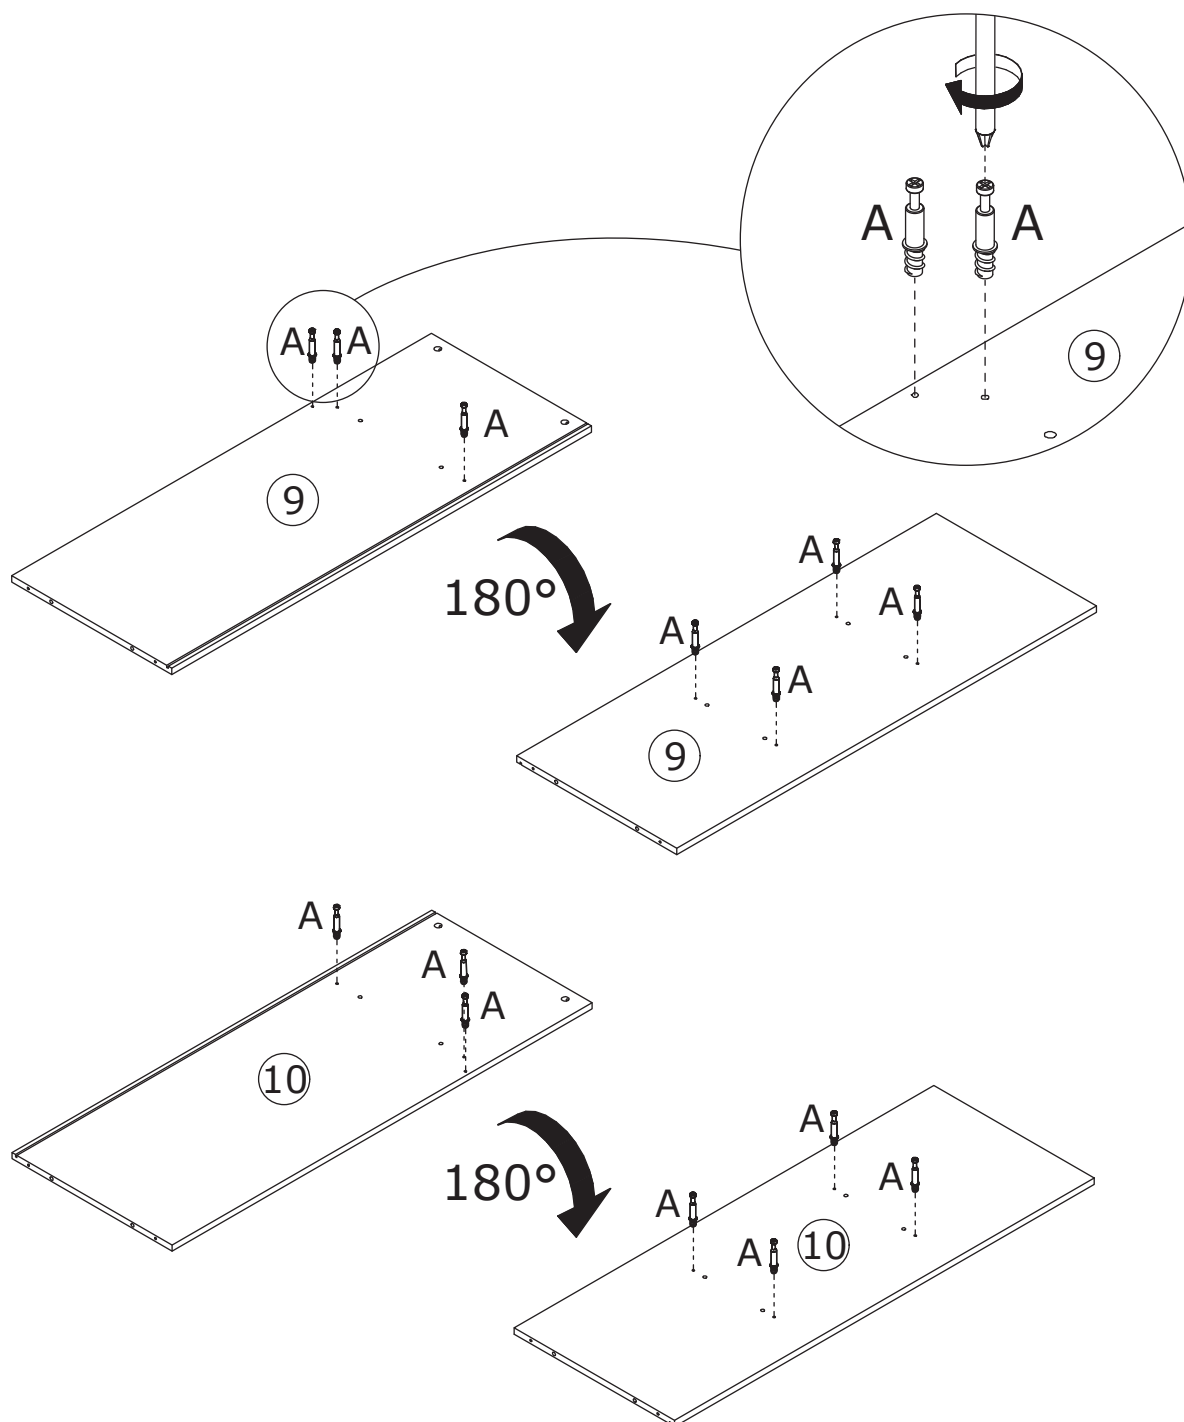
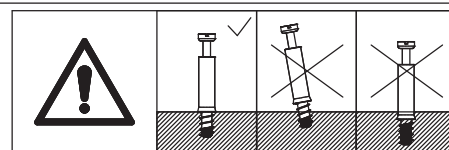


28

 A x 3

  Ø6.5 x 35 mm

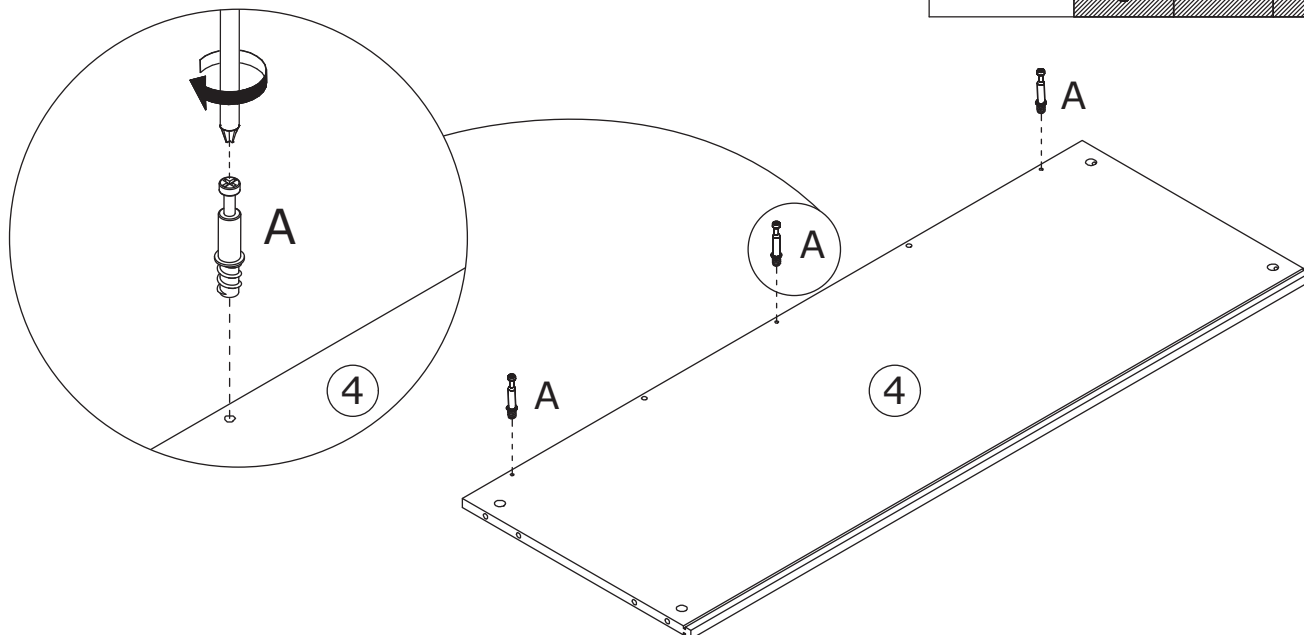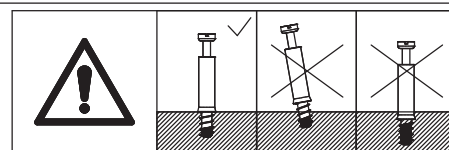  

Screw eccentric rod (A) onto part 4.



29

B x 3

 
 
 Ø15 x 9 mm

C x 2




 Ø8 x 30 mm






Connect part 6 to part 4 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

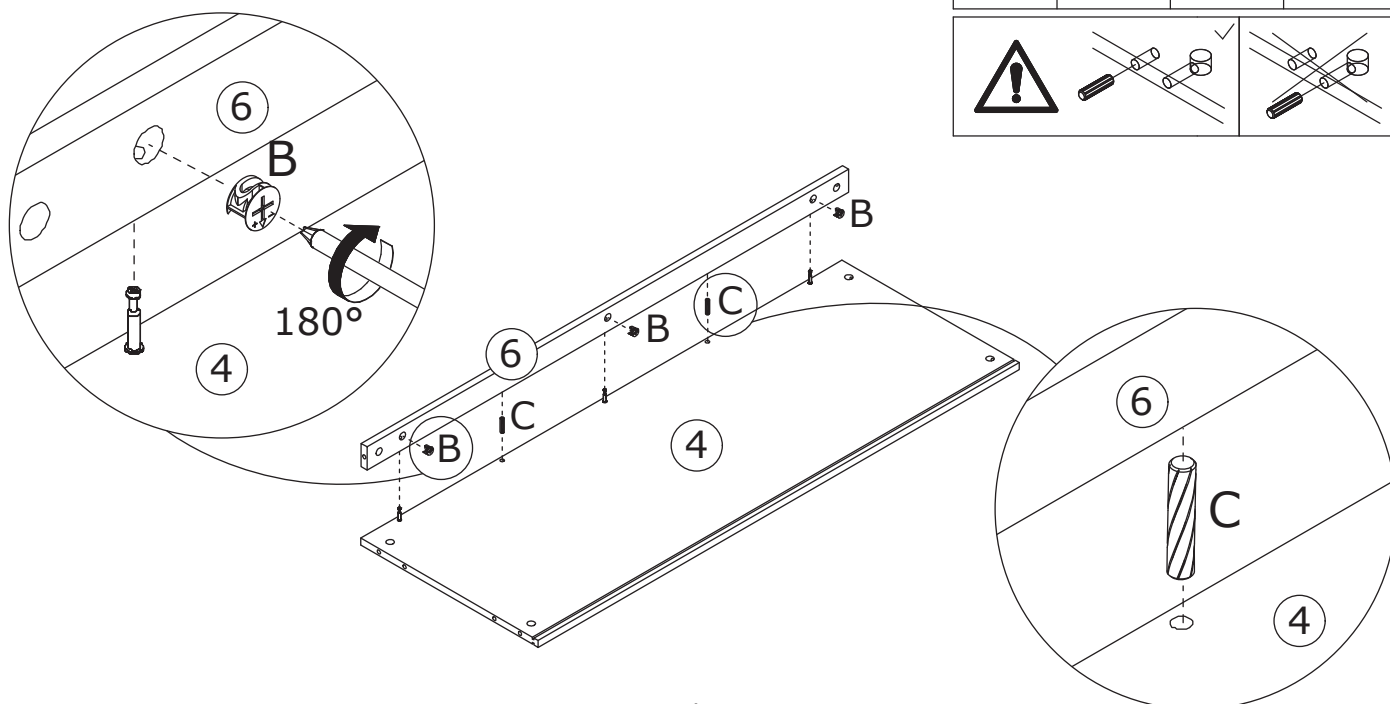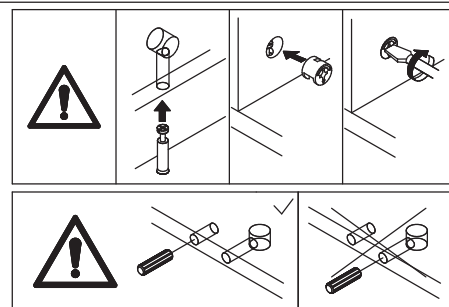


30

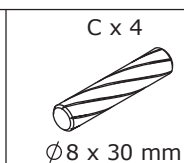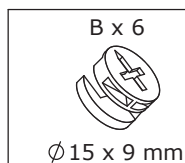   

 
 
 
Connect part 4 and 6 to part 9 and 10 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

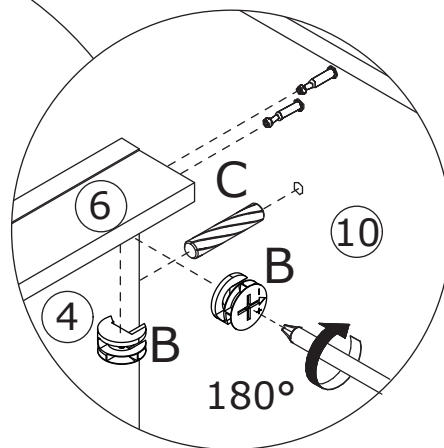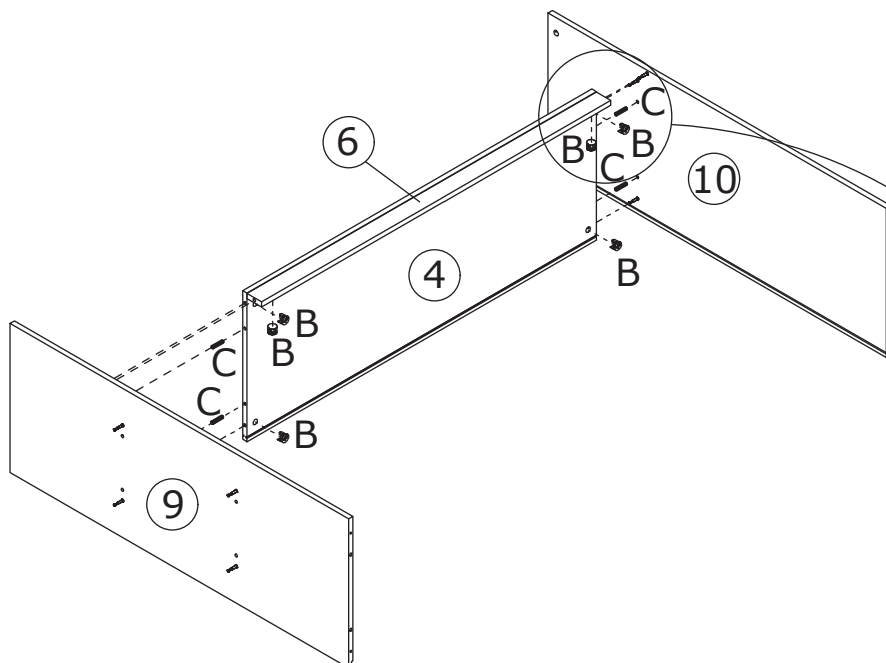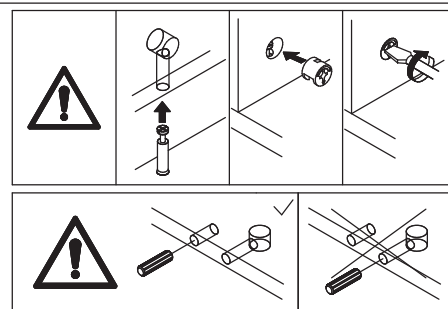




31

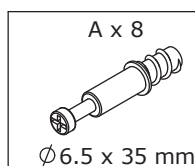 

  
 
Screw eccentric rod (A) onto part 13 and 14.

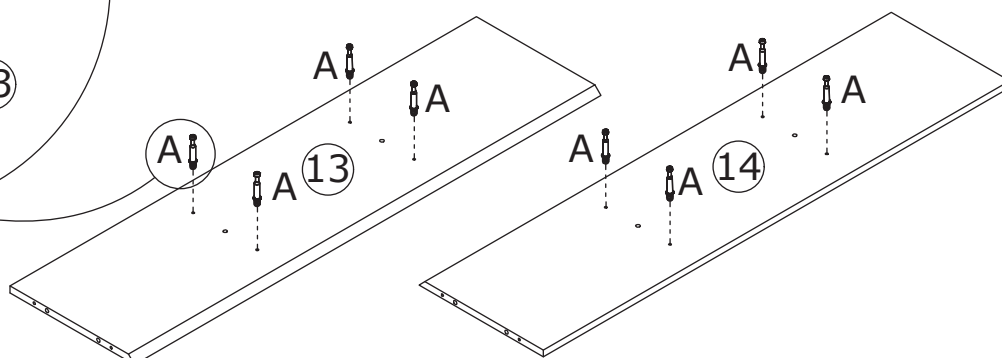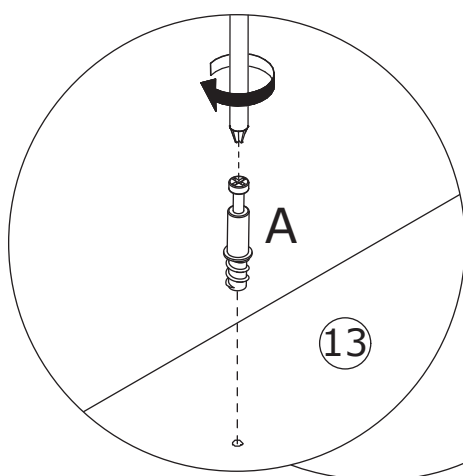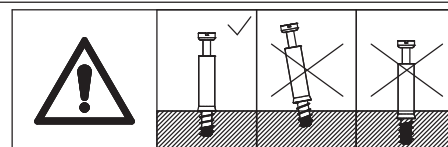




32

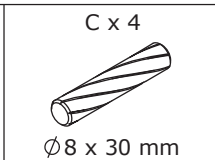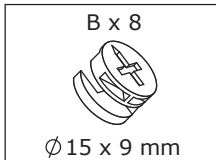   

 
 
Connect part 17 to part 13, and part 18 to part 14 respectively using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

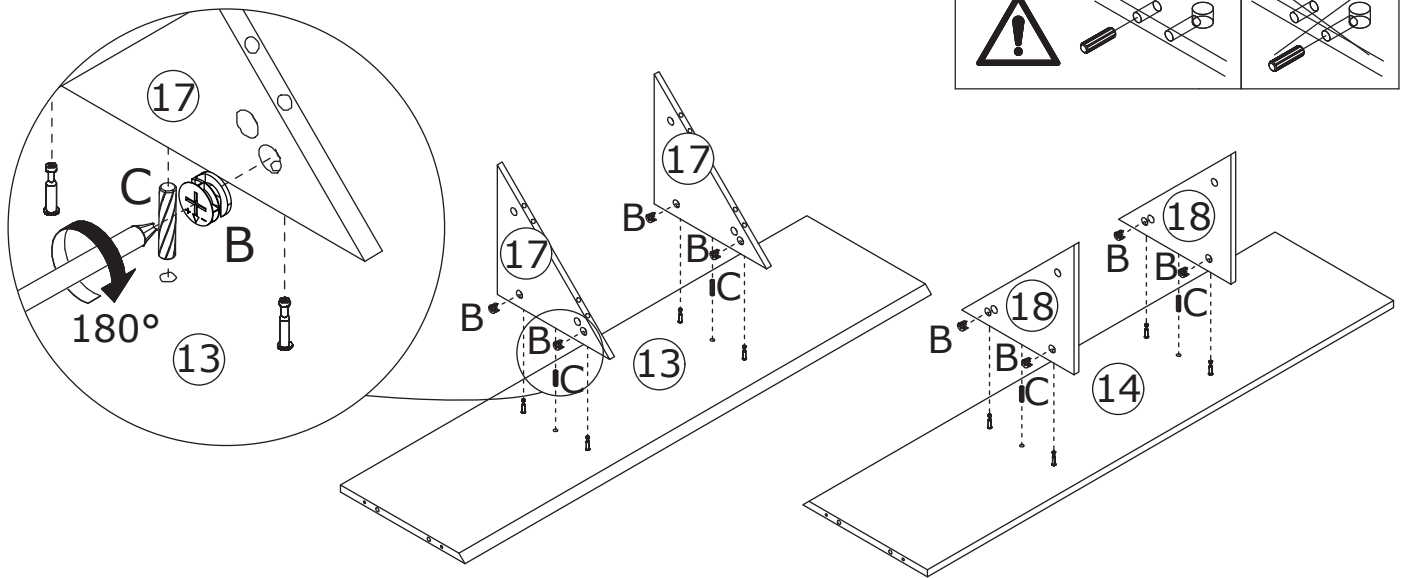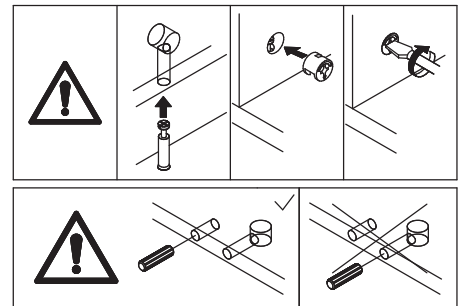

33

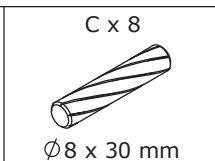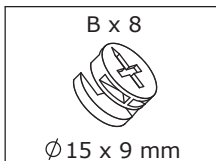   


  Connect part 17 and 18 to part 9 and 10 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

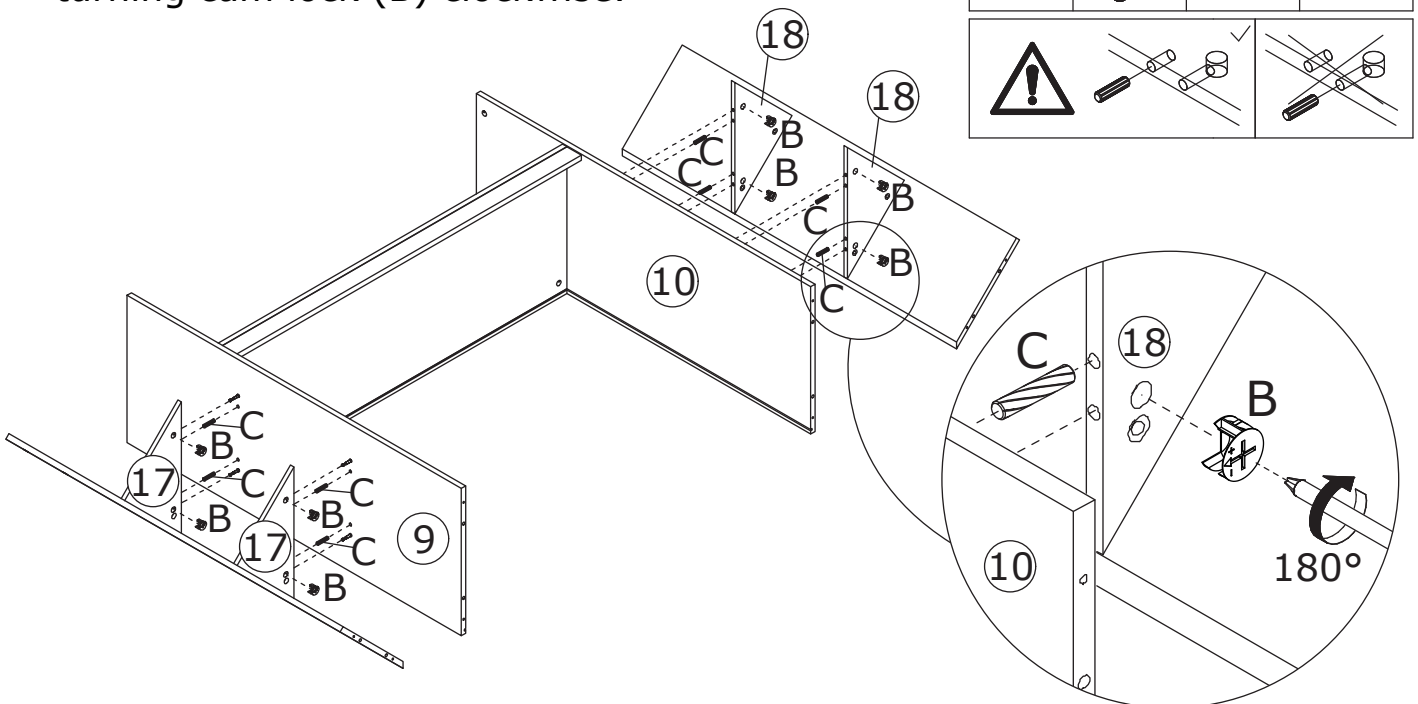
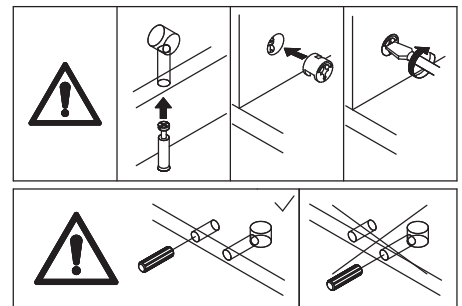


34



 
Insert part 36 along the available grooves.

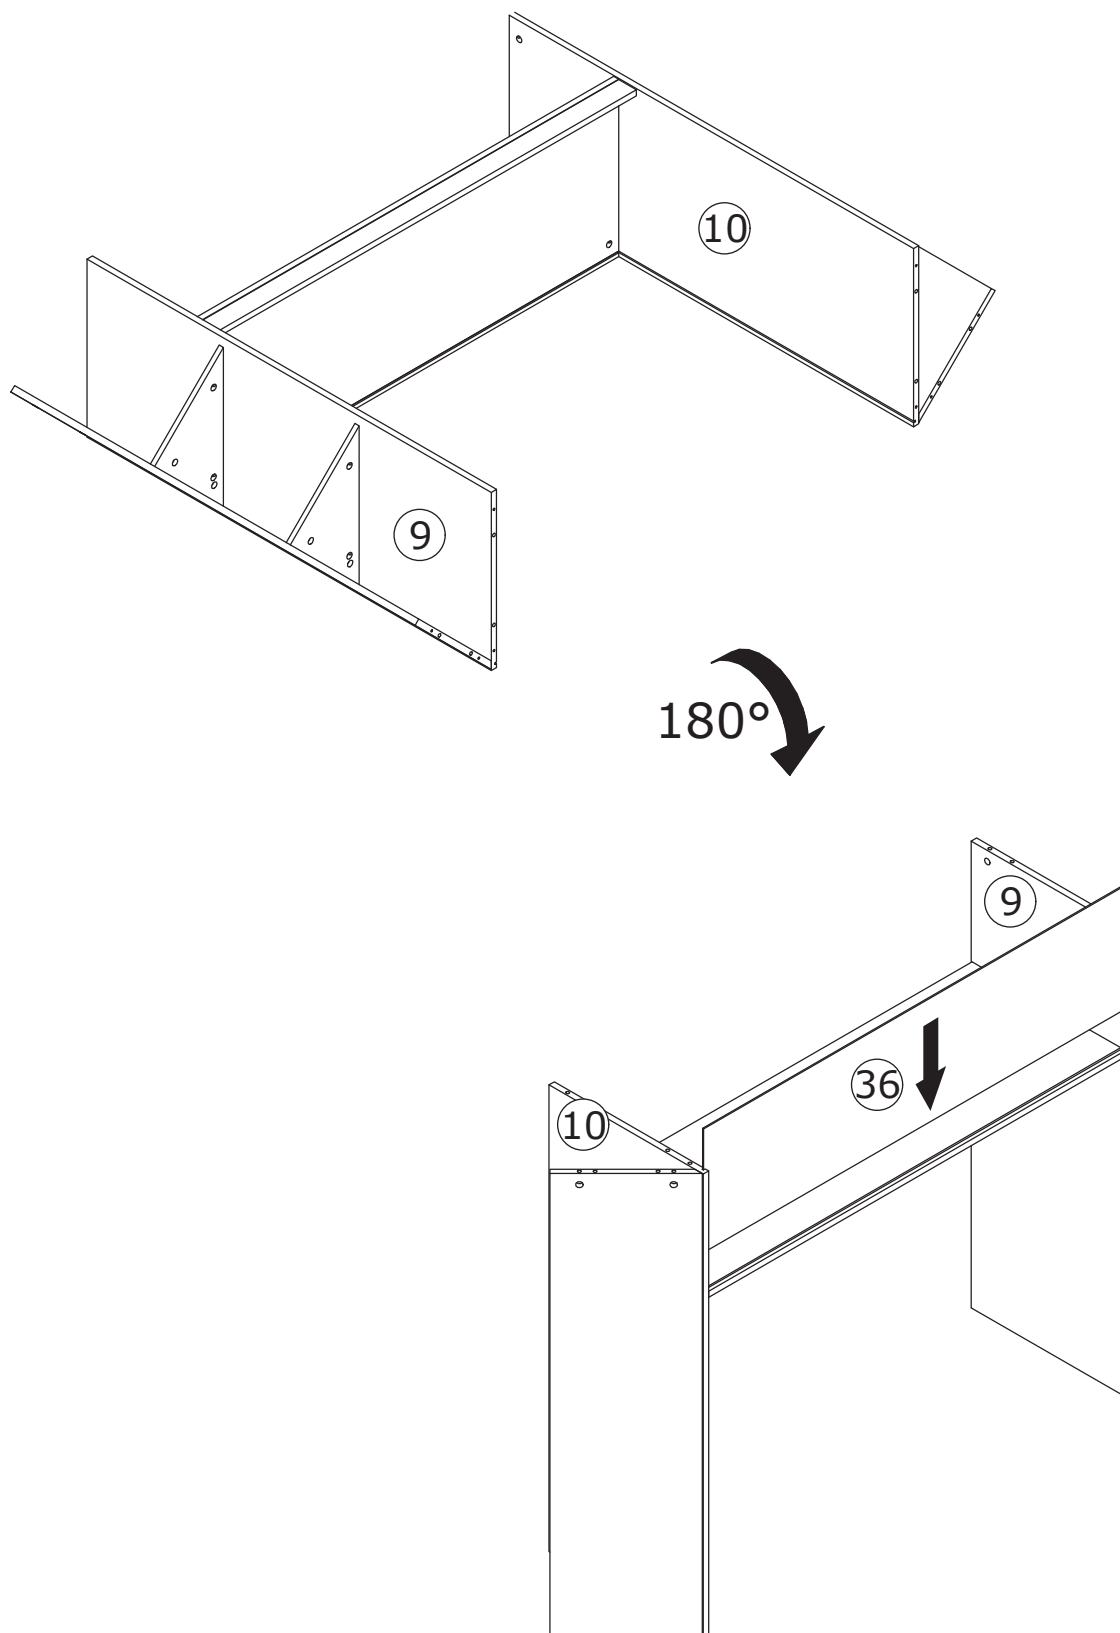




35

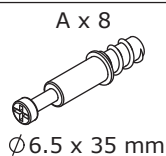  




Screw eccentric rod (A) onto part 1.

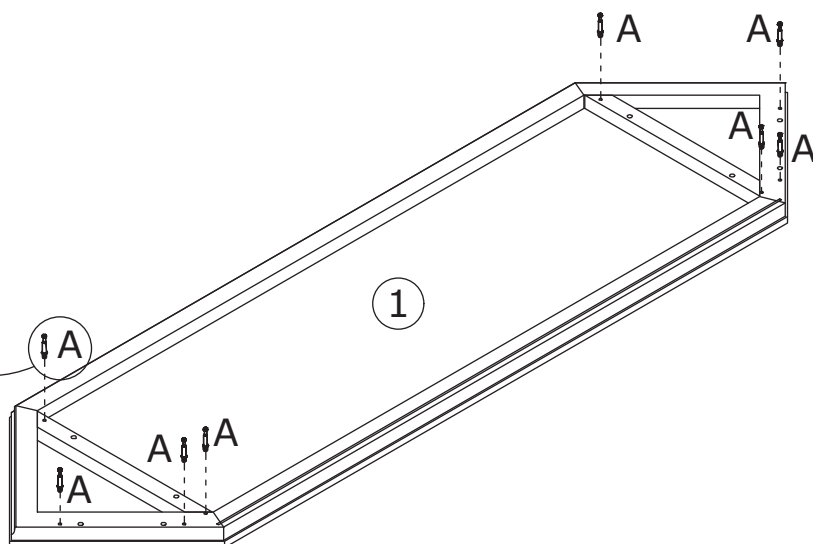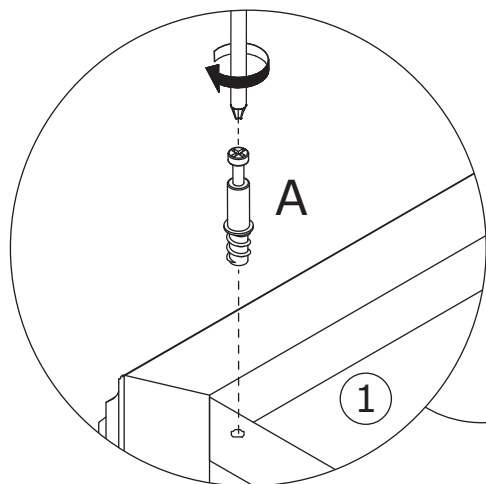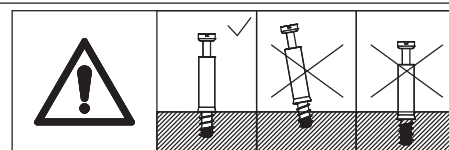   

36

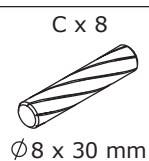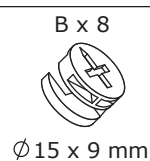   


   Connect part 1 to part 9, 10, 13 and 14 using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

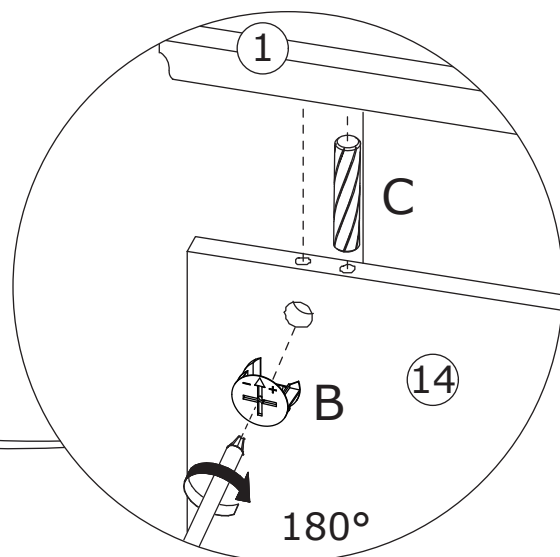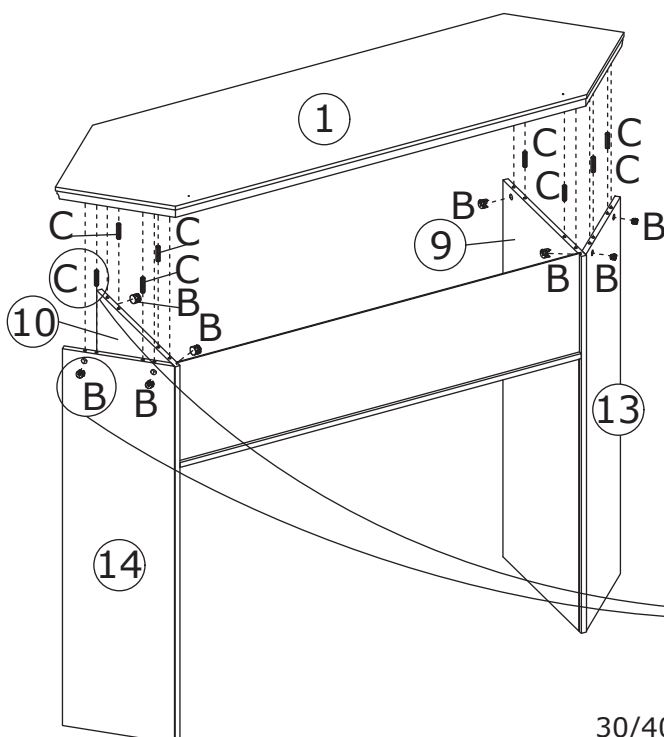
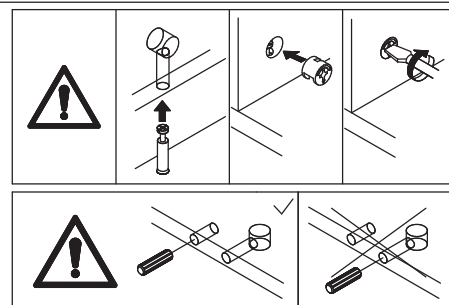


37


 
Insert part 37 along the available grooves.

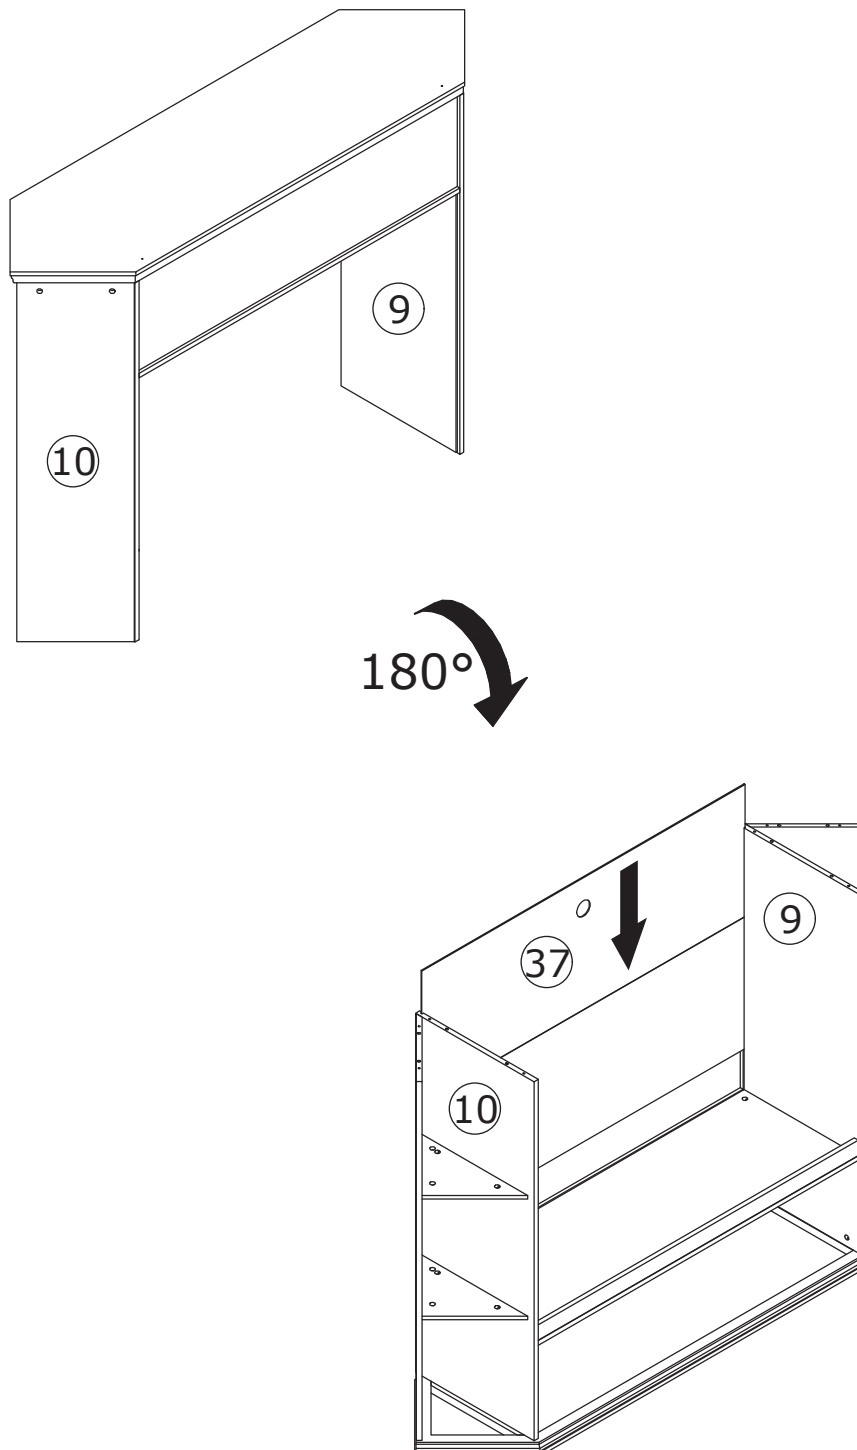



38

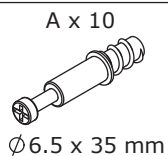  



Screw eccentric rod (A) onto part 2.

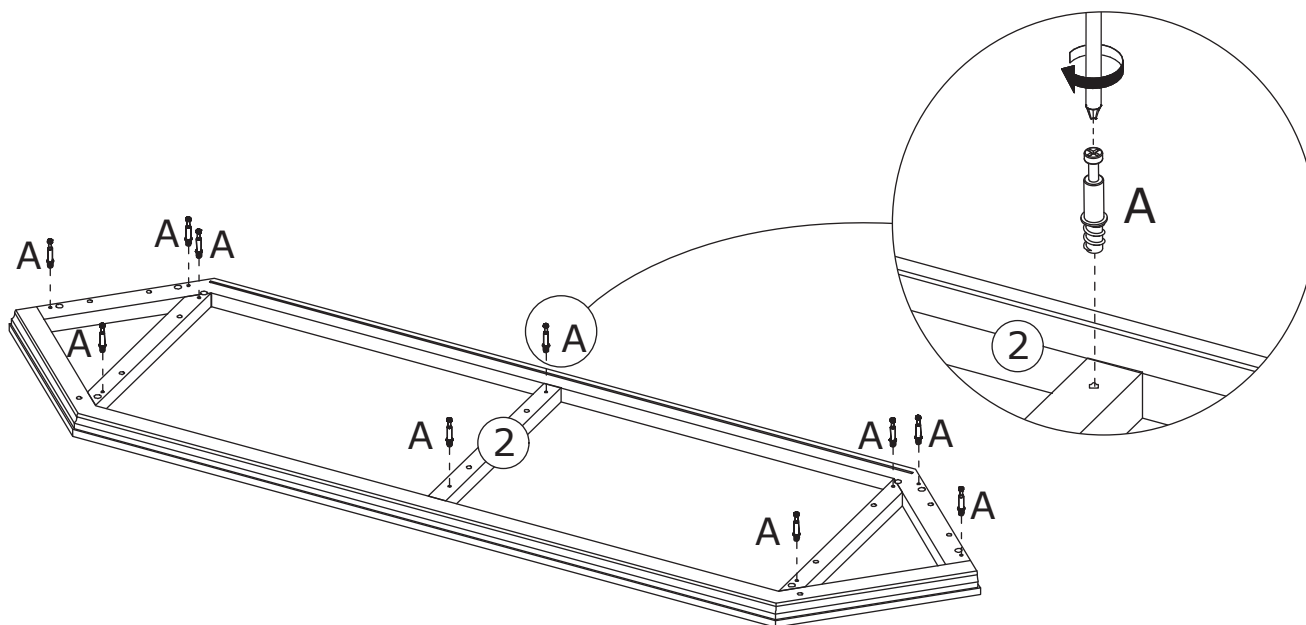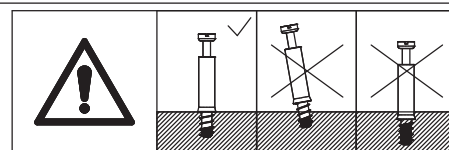  




39

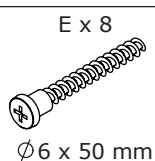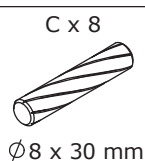  


 
 
Connect part 2 to part 9, 10, 13 and 14 using wooden dowel (C), then secure with screw (E).

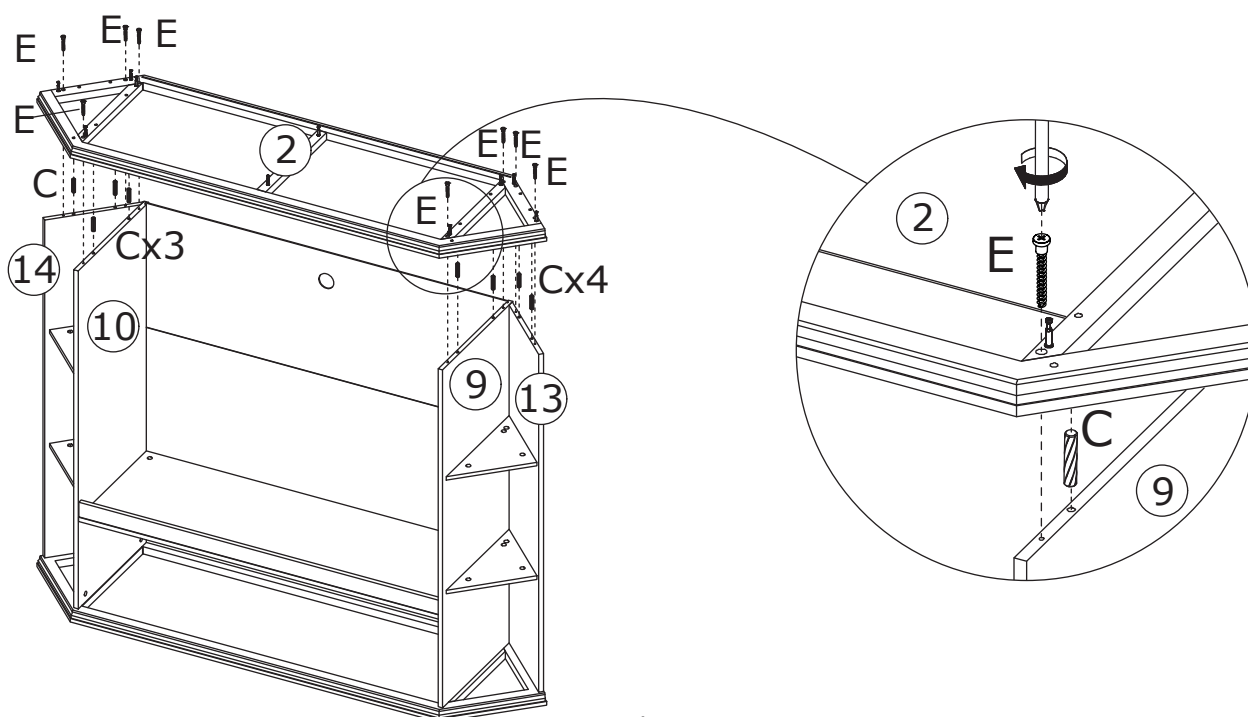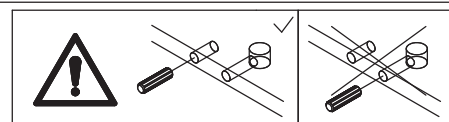



40

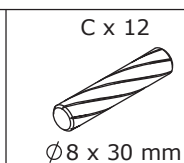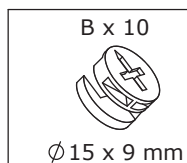   

   
Connect the two components using wooden dowel (C), then tighten by turning cam lock (B) clockwise.

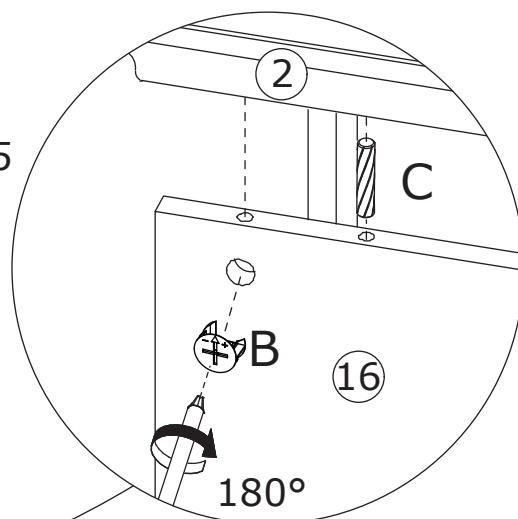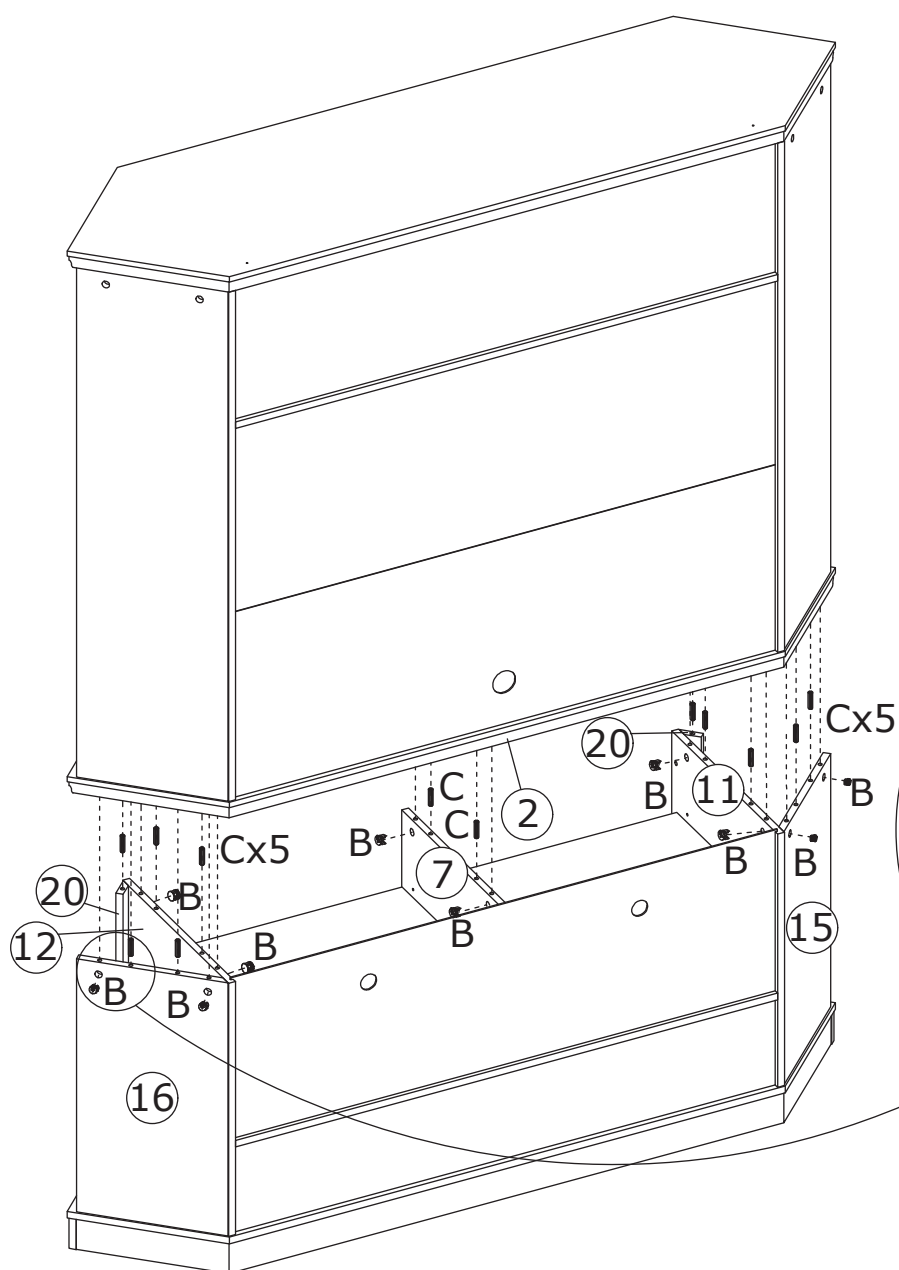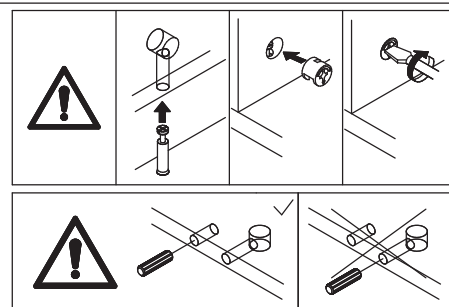




41

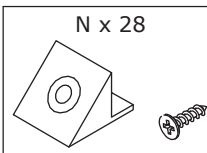  

 
Insert clip (N) into the gaps and secure them with screw (N).

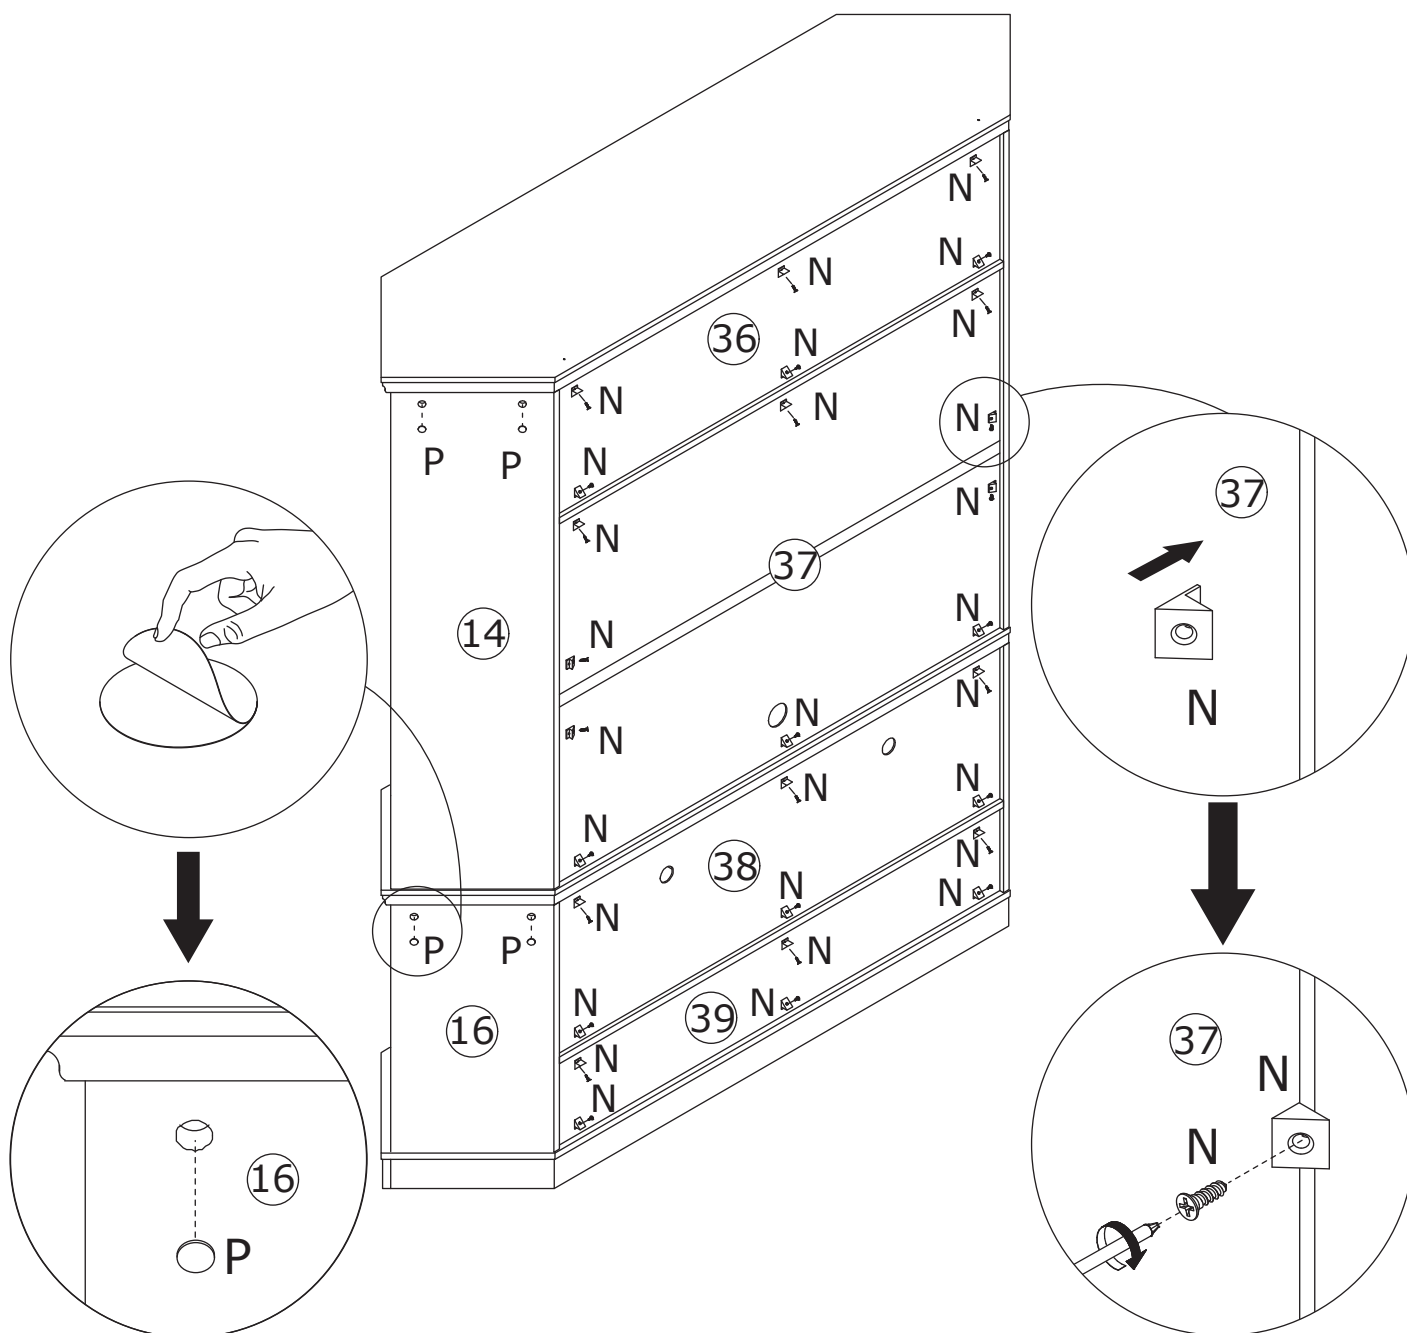

42

   F x 2 	H x 2  Ø4 x 18 mm	J x 8  Ø3.5 x 14 mm	M x 4 	
--	--	--	---	---

 Secure hinge (M) to part 21 and 22 using screw (J).
Secure knob (F) using screw (H).

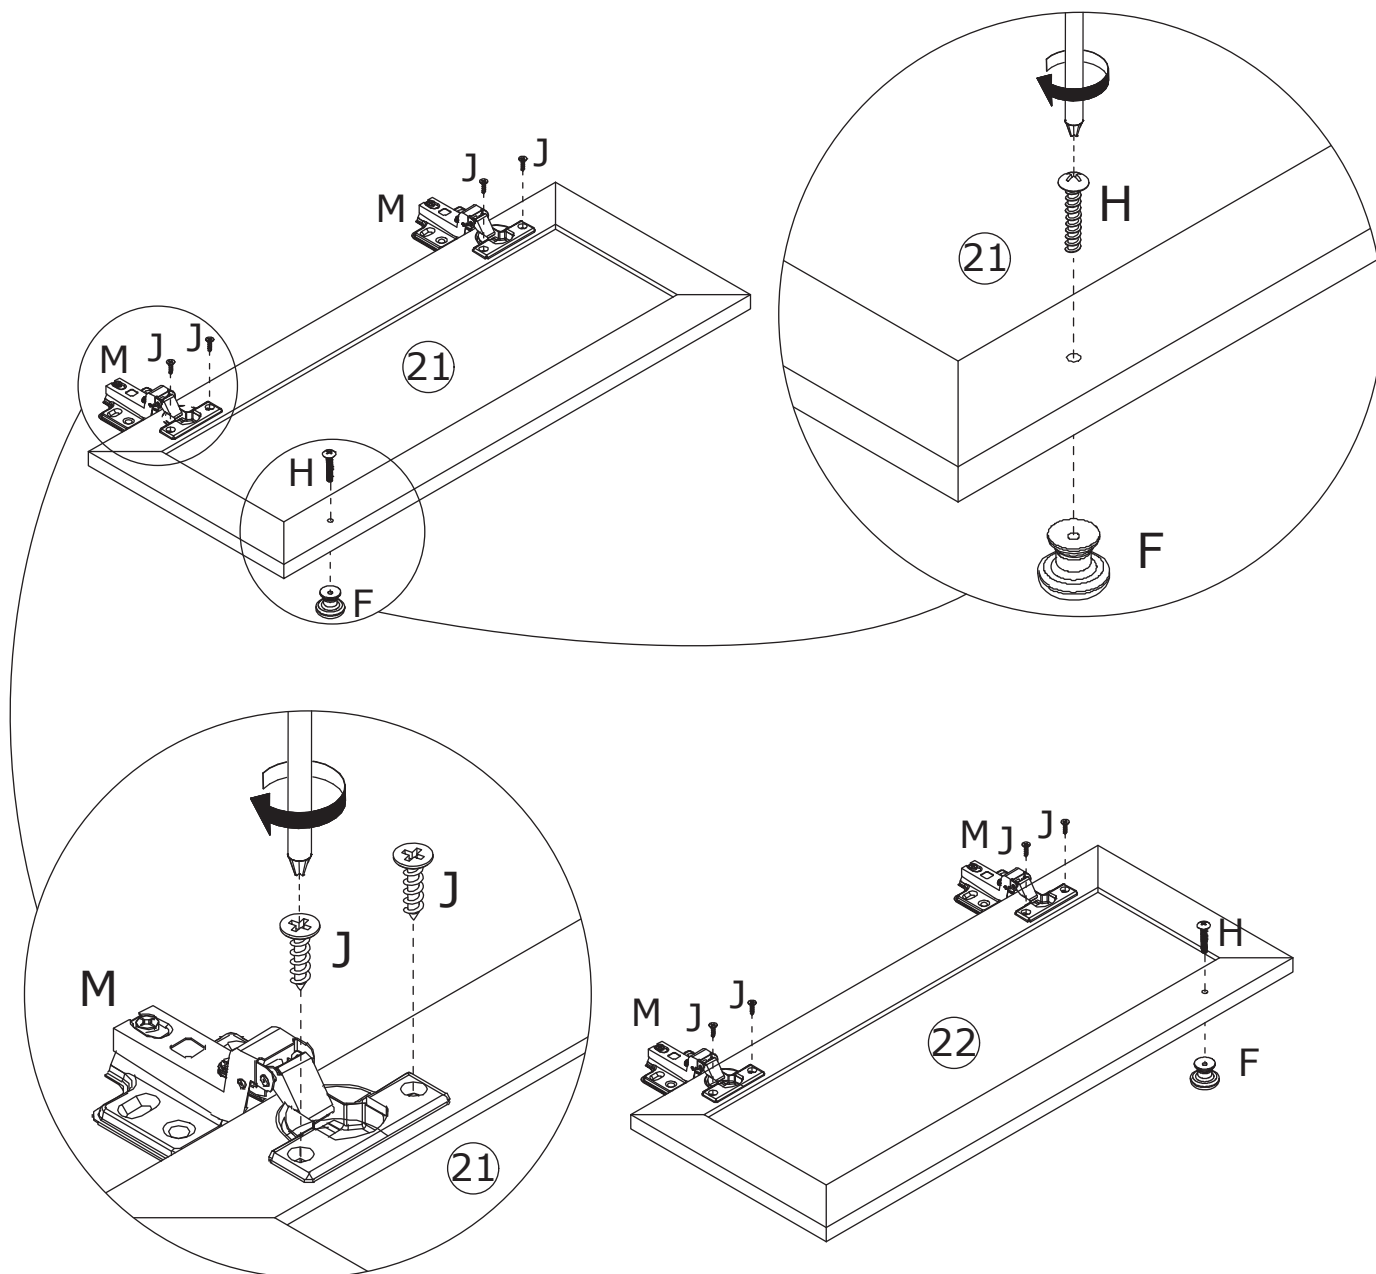


43


J x 16





 Ø3.5 x 14 mm



   Secure part 21 and 22 to part 15 and 16 using screws (J).

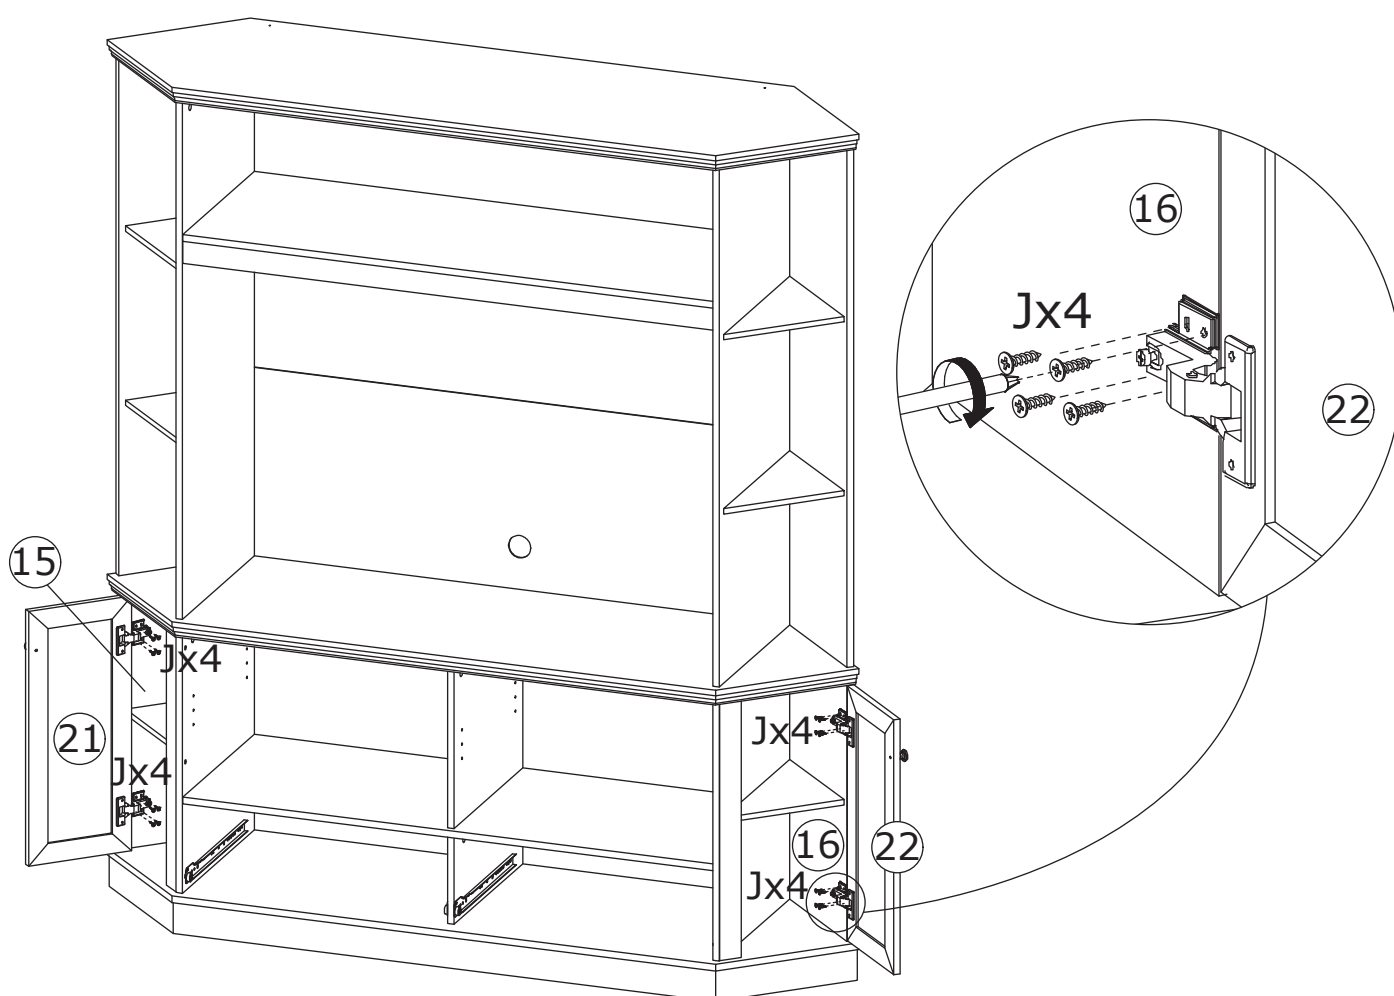

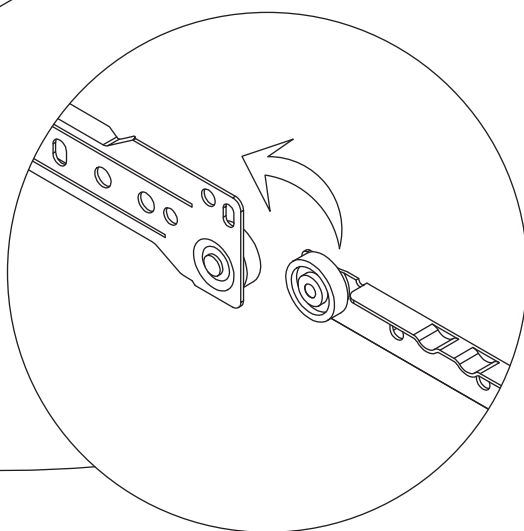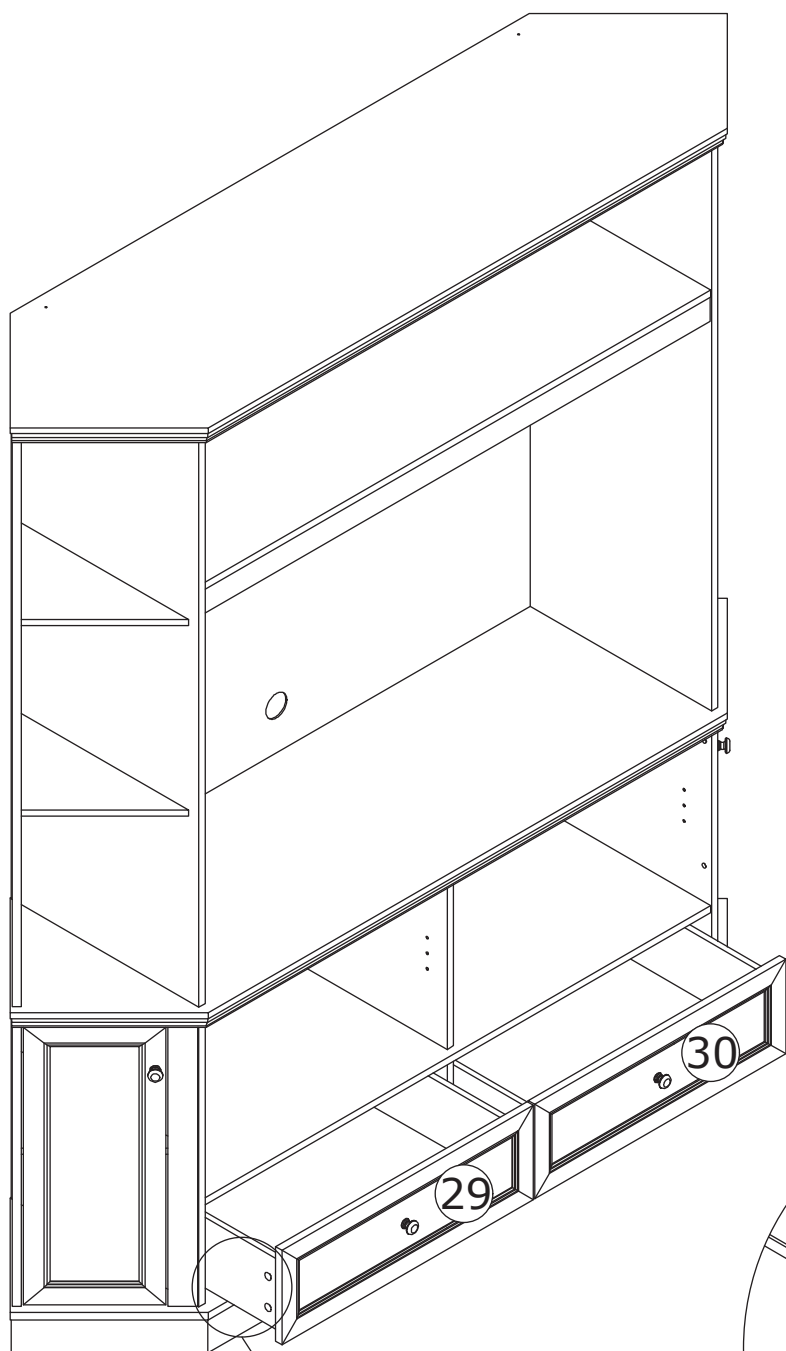



45

L x 8



  Insert shelf pin (L) into part 8, 11 and 12,
then place part 19 .


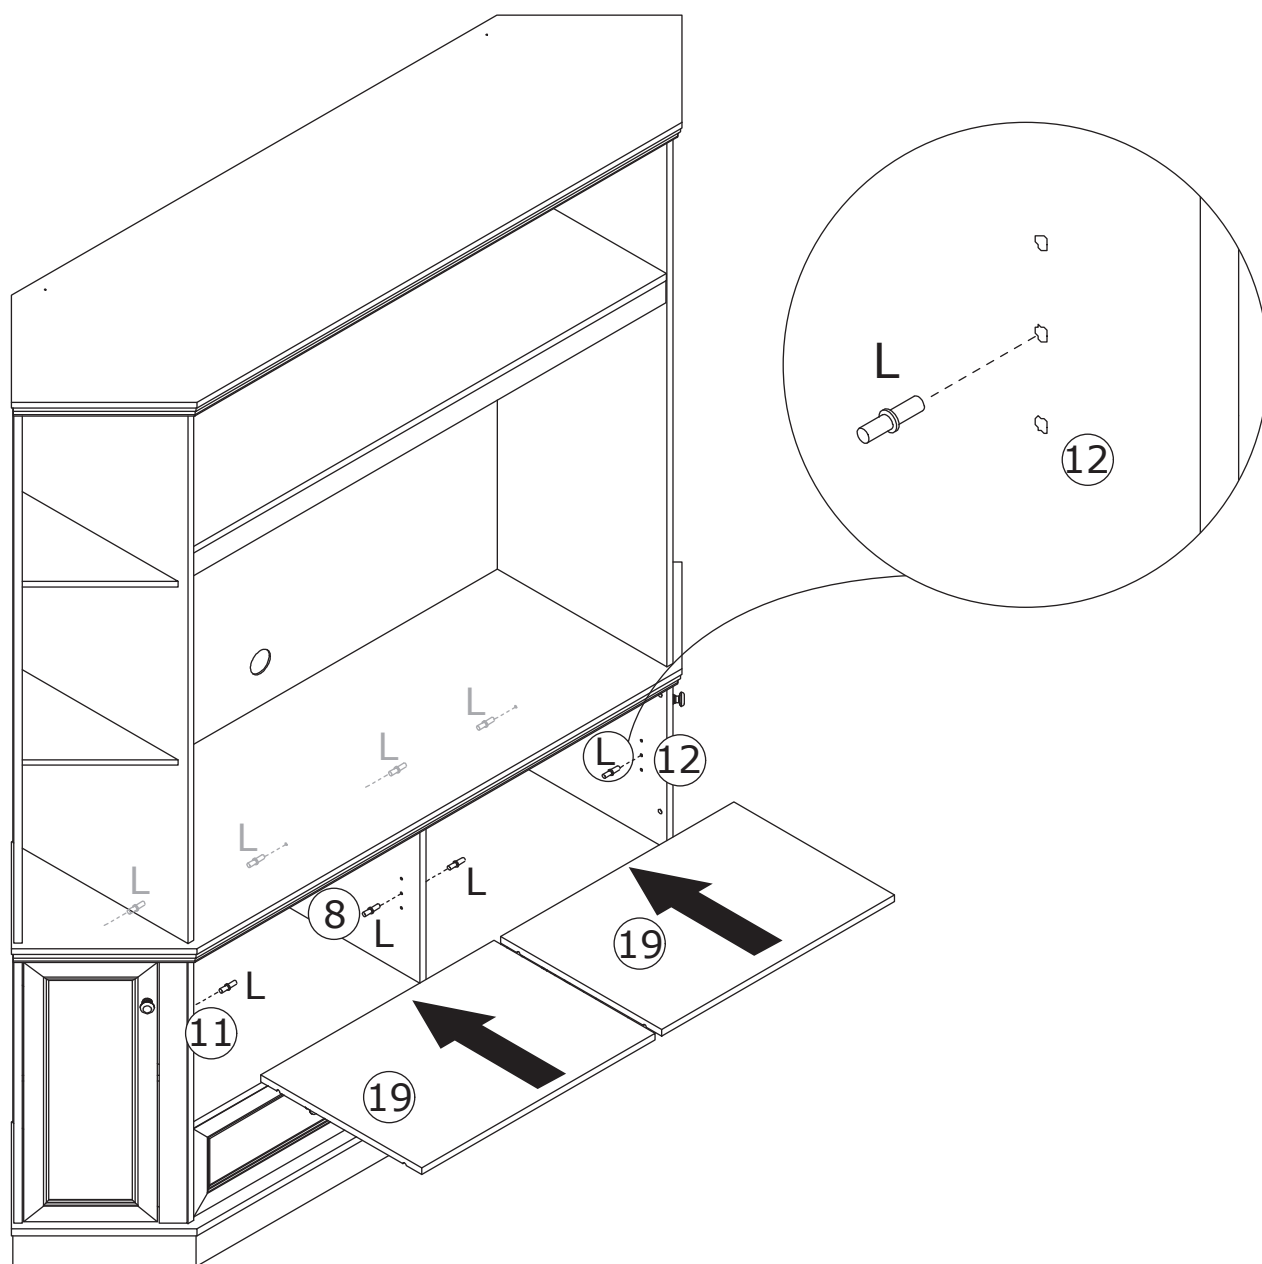





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.

  
<https://youtu.be/n0Lb36SoODM>

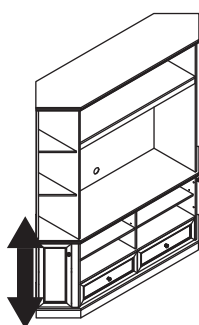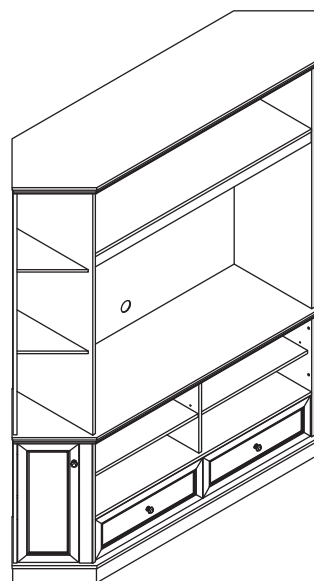



①

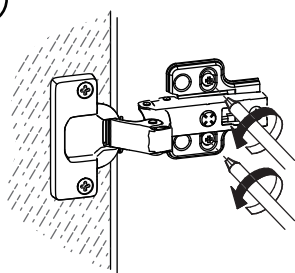 


②

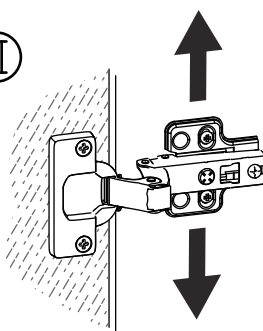 


③

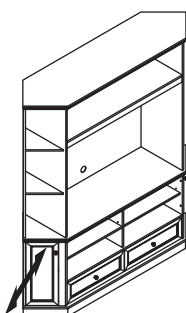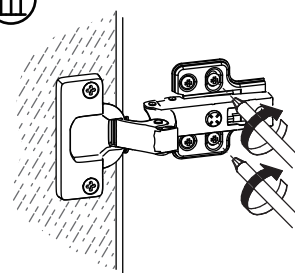  



①

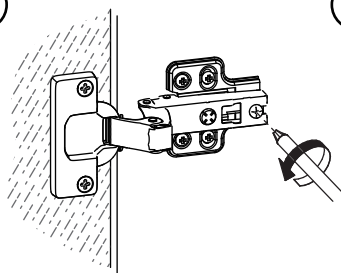 


②

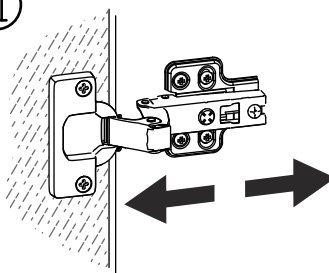 


③

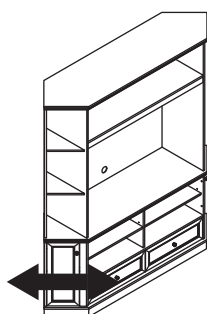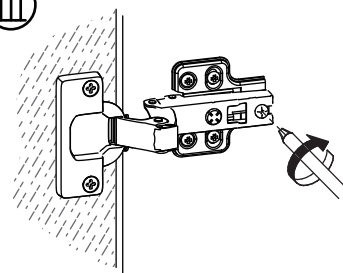  






①

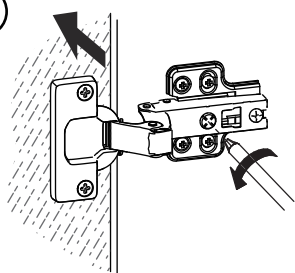 


②

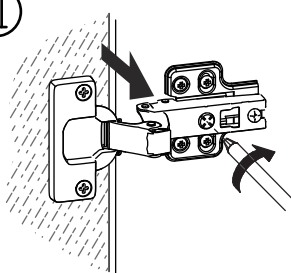 


47

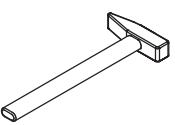     Q-1 x 2  Ø4 x 40 mm	Q-2 x 2  Ø4 x 12 mm				
Q-3 x 2  Ø8 x 29 mm	Q-4 x 2  73 x 15 x 24 mm				

 
Use the anti-tip bracket (S) to anchor the product to the wall.

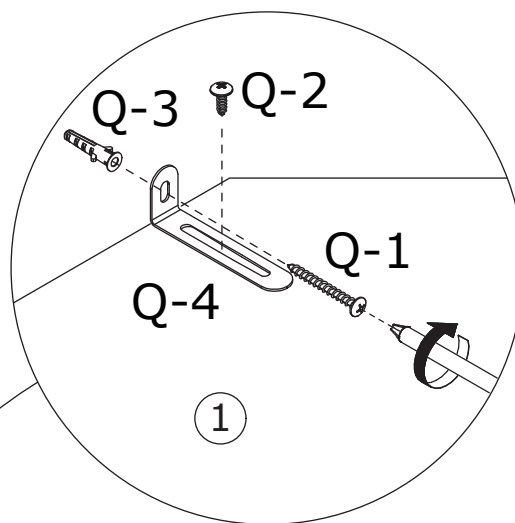


WALL

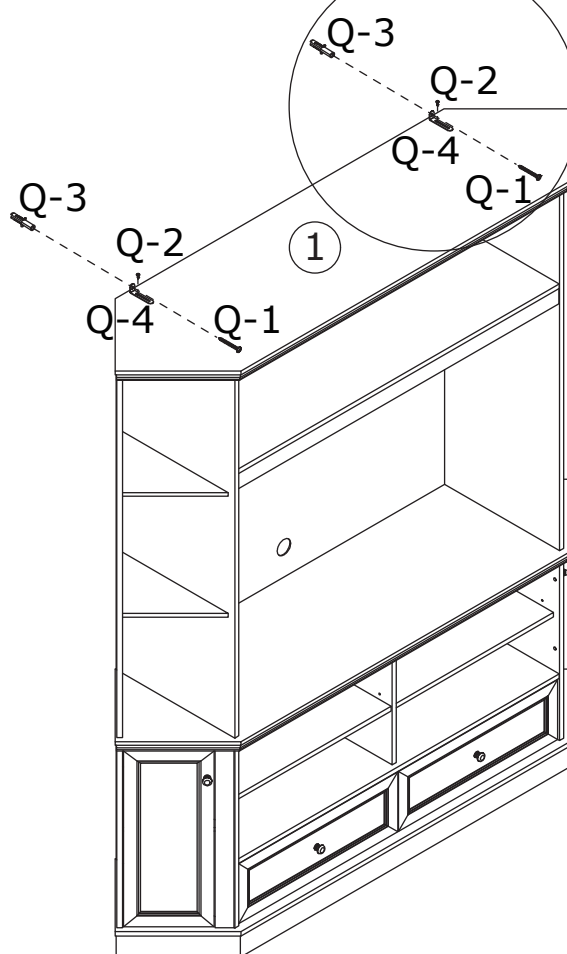 

 
1.

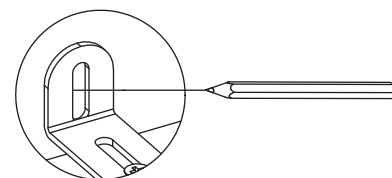

 
2.

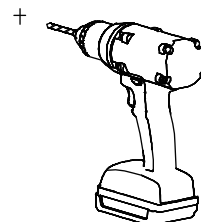

 3.

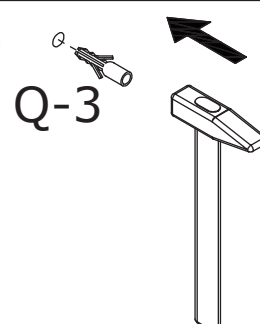

 4.

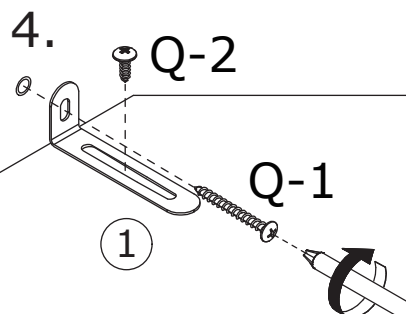

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068