

 
USER MANUAL




WARDROBE WITH MIRROR
AND LIGHTS

Model: JY-251128


TOOLS REQUIRED

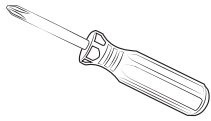


Phillips screwdriver
(Not included)

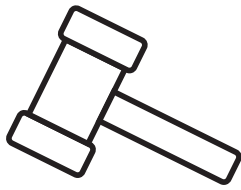 

Hammer
(Not included)

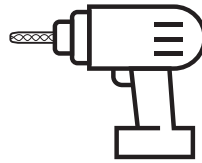 

Drill
(Not included)

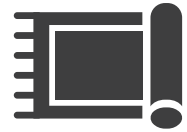 

Protective blanket
(Not included)



ATTENTION

 
Keep children and pets away while assembling.




How to use cam locks

CAM LOCK FASTENING SYSTEM


This Cam Lock Fastening System will be used throughout the assembly process.

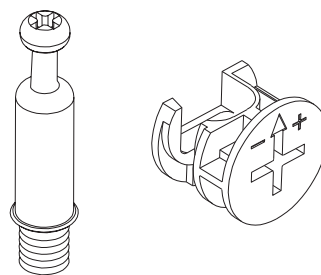


1

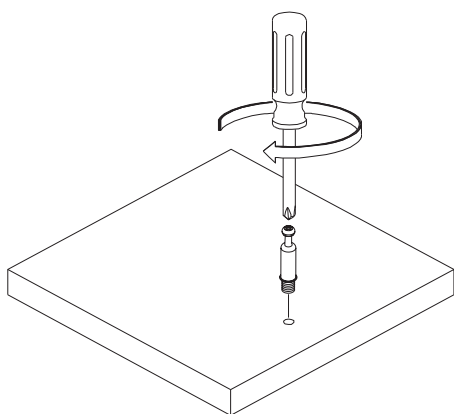 




2

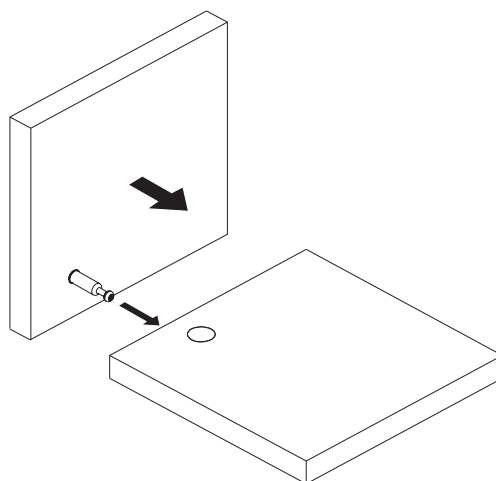 

3

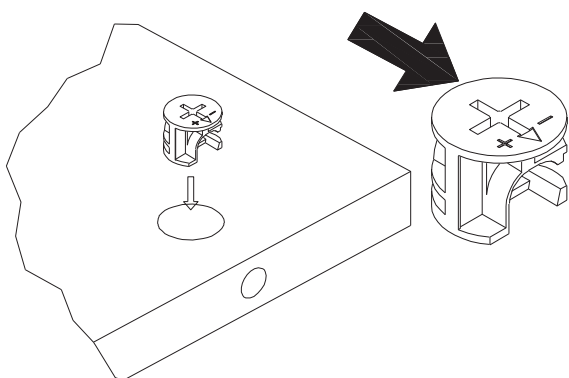 

4

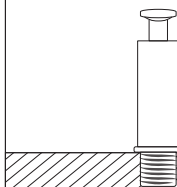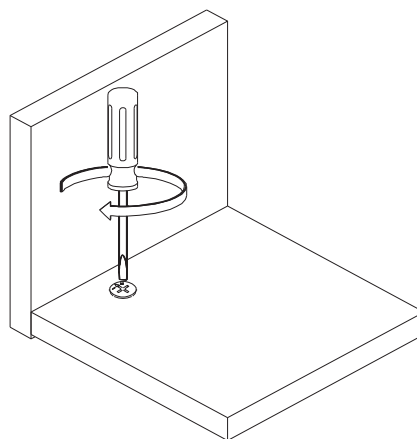   

INTRODUCTION

Thank you for choosing our products. Please read the instructions carefully and keep them for future reference. If you need further assistance, please contact our customer service online via email.

 
PRECAUTIONS

1. When installing the product, use a soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
2. Please try to use a manual screwdriver instead of electric screw driver. A manual screwdriver can be used to better control the tightness of the screws.
3. Do not use any glue.
4. The product is unstable before it is assembled. Please pay attention to the product installation sequence.
5. The structure of this product can not meet the requirements of the placement of heavy items and children climbing.





















WARRANTY

We provides an **18 Month** Warranty on all products starting from the date of original purchase. If the product has any manufacturing defect, please contact customer service via email with your order number and other details to the problem. We will send you further information about the return or exchange.

PACKAGE CONTAINS
















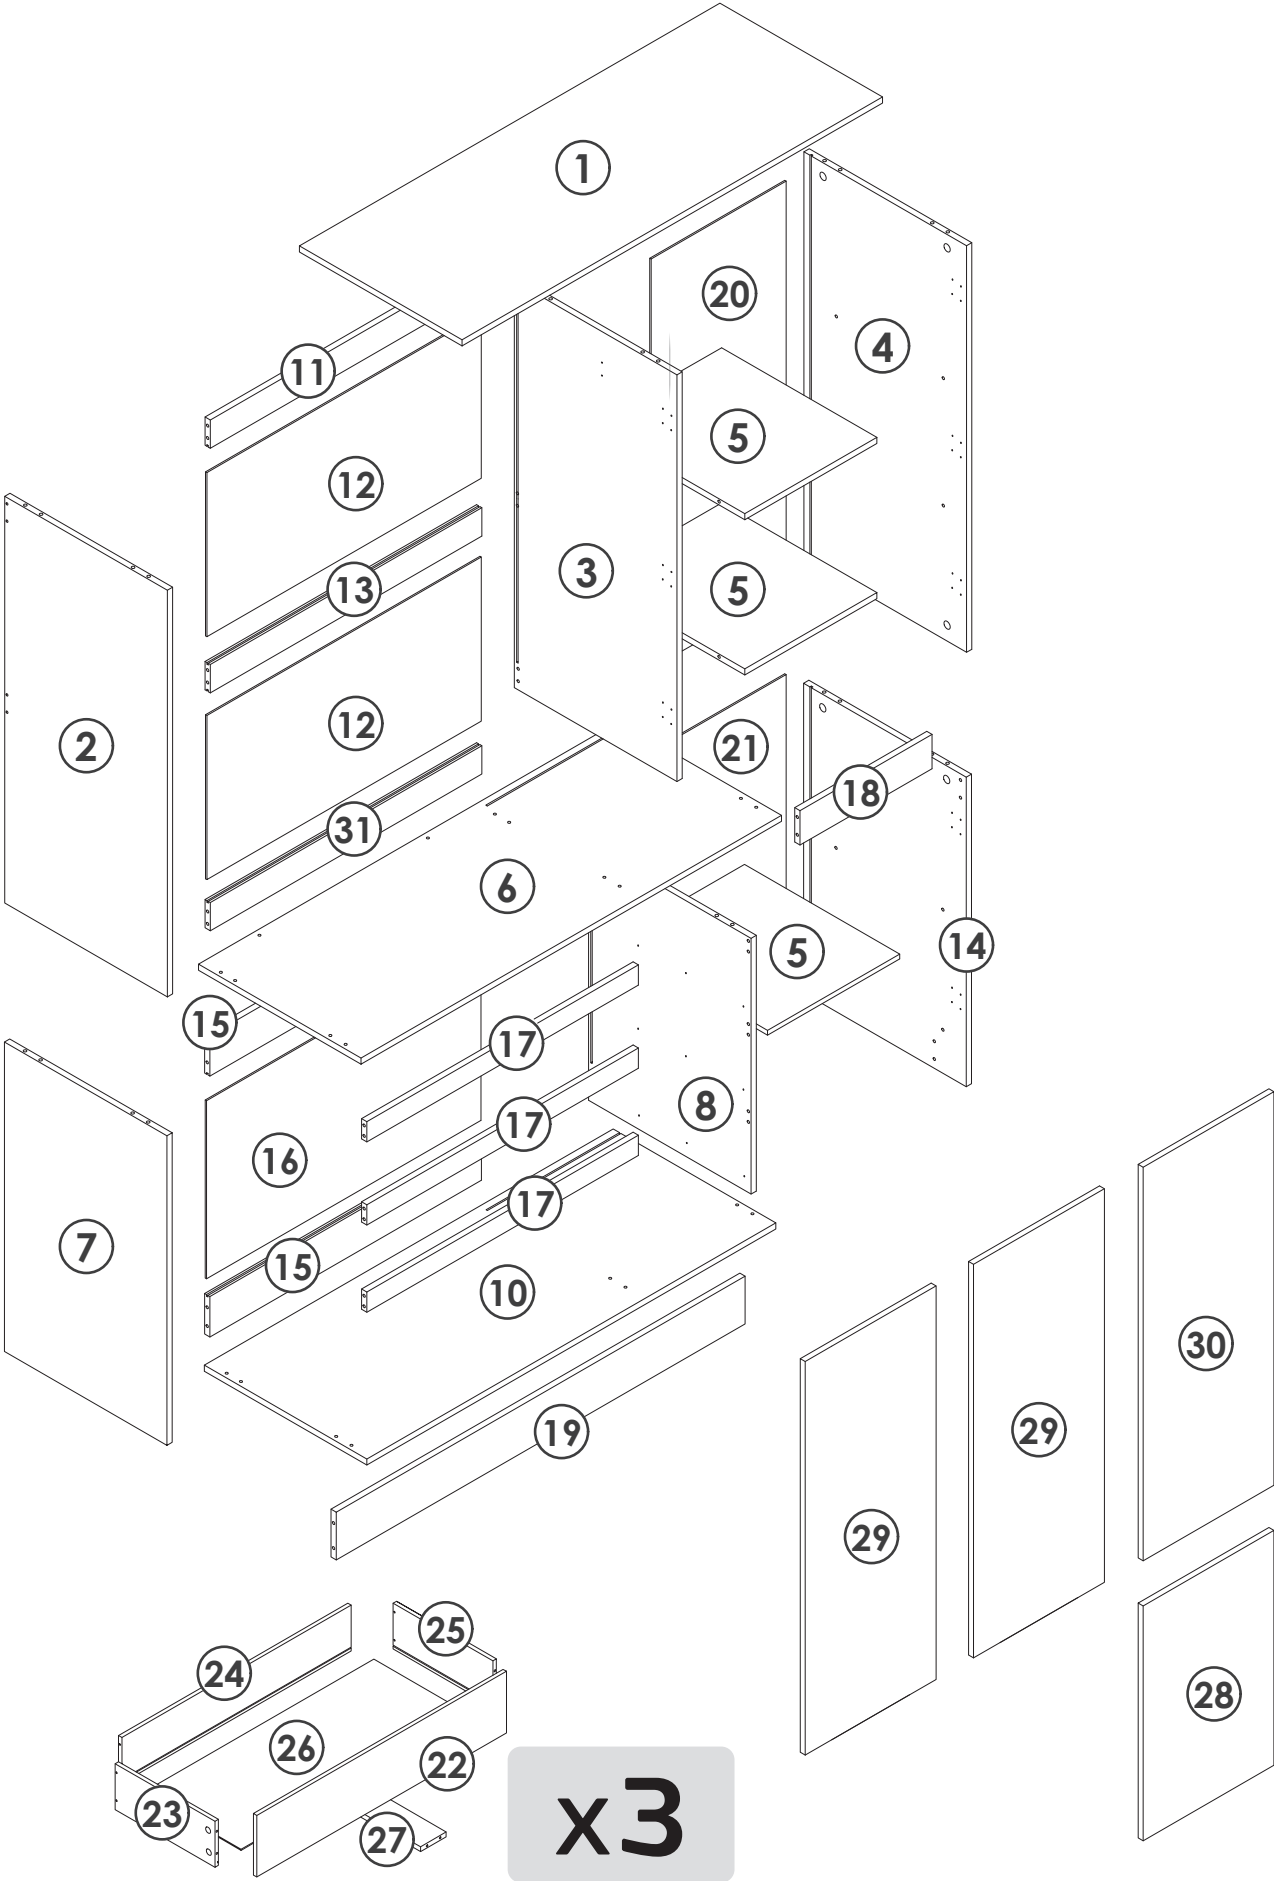


HARDWARES LIST

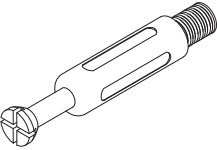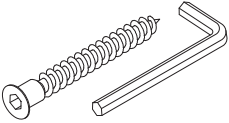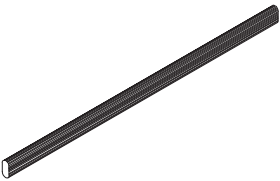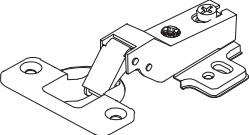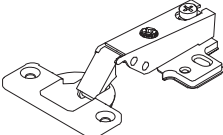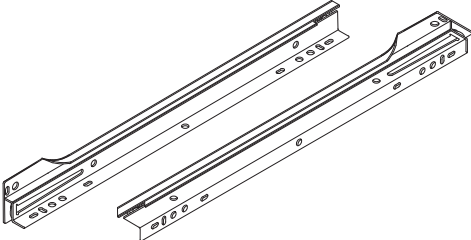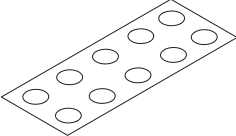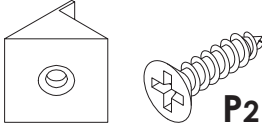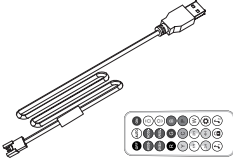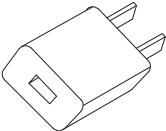                    A x86  M6*40	B x86  M15*11	C x70  M3.5*14	D x18  M8*40
E x30  M5*40	F x7 	G x2 	H x1 
J x2 	K x6 	L x3  12 inches	
M x18  M3*12	N x28 	P x36  P1 M3*16	Q x1 
R x1 	S x2      S1 S2 S3 S4 S5		
















PARTS LIST » A BOX

                Unit: (mm)

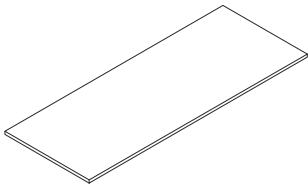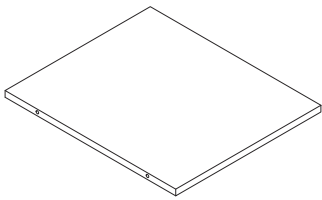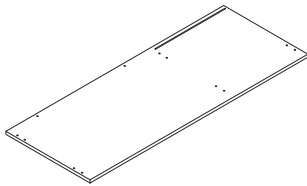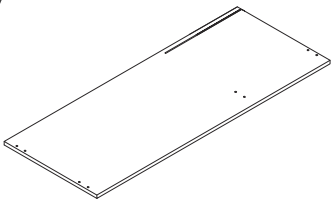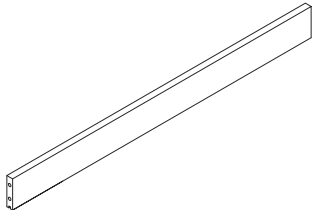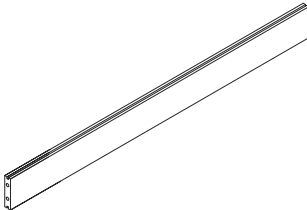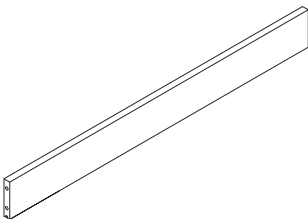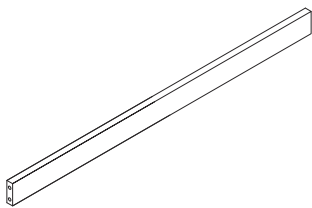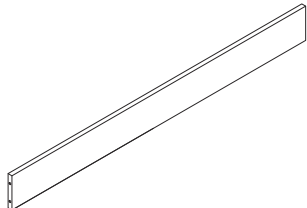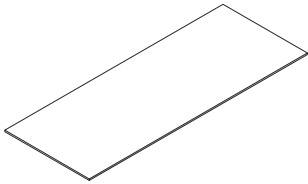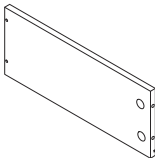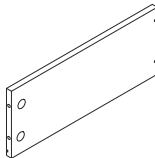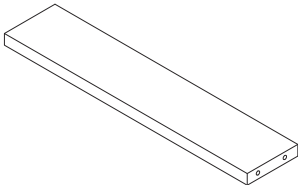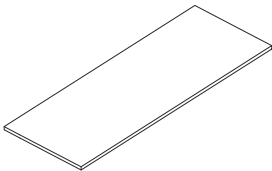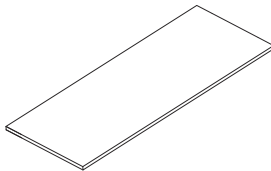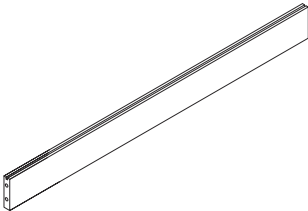① x1  1200*465*15 mm	⑤ x3  337*440*12 mm	⑥ x1  1200*465*15 mm
⑩ x1  1167*464*15 mm	⑪ x1  775*70*15 mm	⑬ x1  775*70*15 mm
⑮ x2  775*100*15 mm	⑰ x2  775*50*15 mm	⑲ x1  1167*118*15 mm
⑳ x1  1013*385*3 mm	㉓ x3  300*96*12 mm	㉕ x3  300*96*12 mm
㉗ x3  287*60*12 mm	㉙ x2  1034*397*15 mm	㉚ x1  1034*397*15 mm
㉛ x1  775*70*15 mm		



PARTS LIST » B BOX

               Unit: (mm)

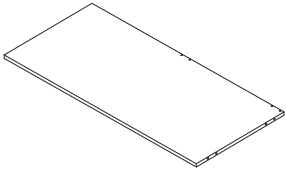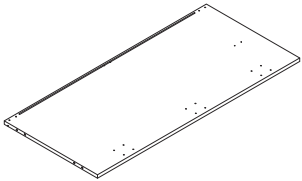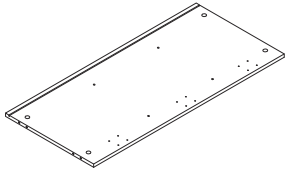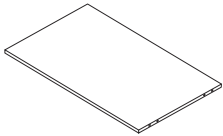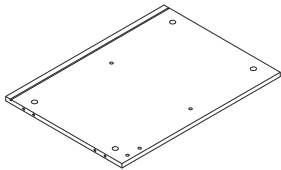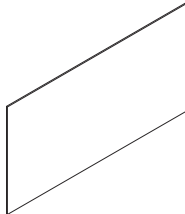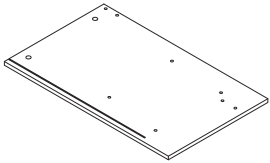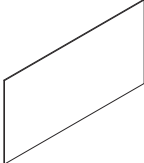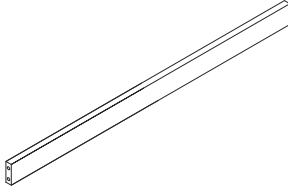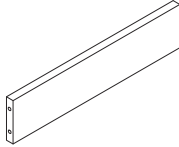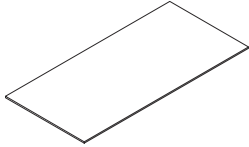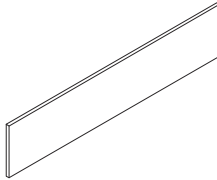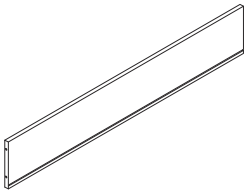
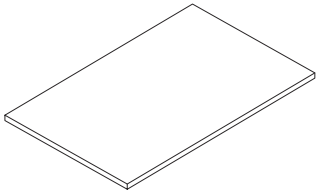
② x1  1005*465*15	③ x1  1005*465*15	④ x1  1005*465*15
⑦ x1  765*464*15	⑧ x1  632*464*15	⑫ x2  406*783*3
⑭ x1  765*464*15	⑯ x1  783*440*3	⑰ x1  775*50*15
⑱ x1  377*85*15	⑳ x1  1640*385*3	㉒ x3  796*186*15
㉔ x3  727*96*12	㉖ x3  735*295*3	㉘ x1  617*397*15

INSTALLATION INSTRUCTION

  01

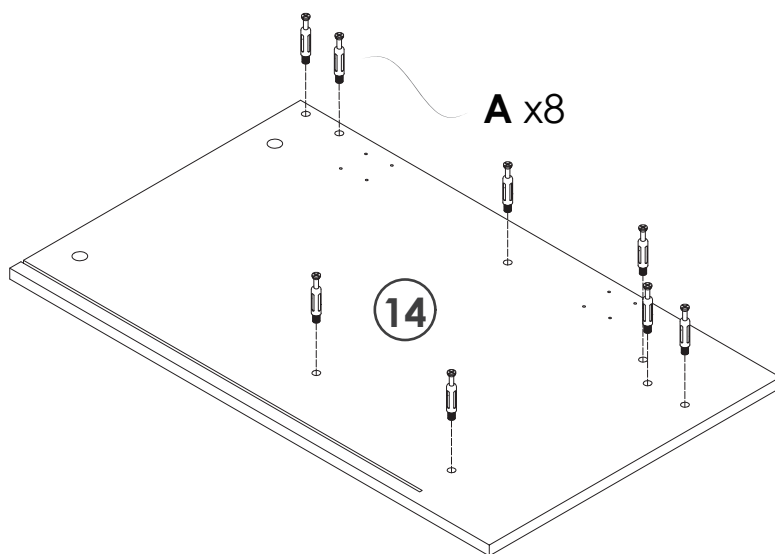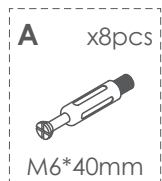

02

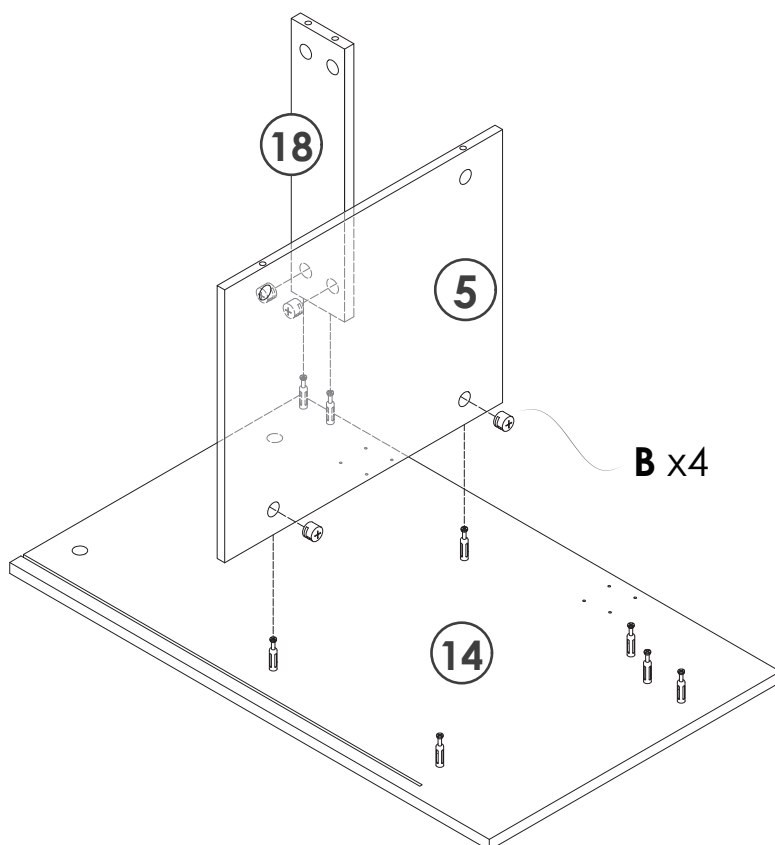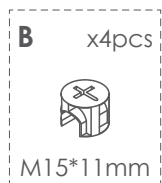  


03

B x2pcs



 M15*11mm

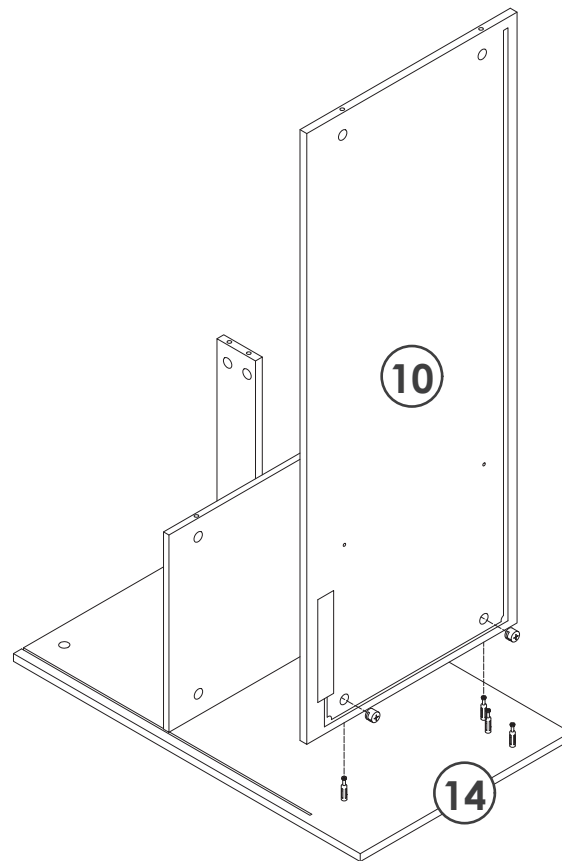


B x2

04


B x2pcs




 
M15*11mm

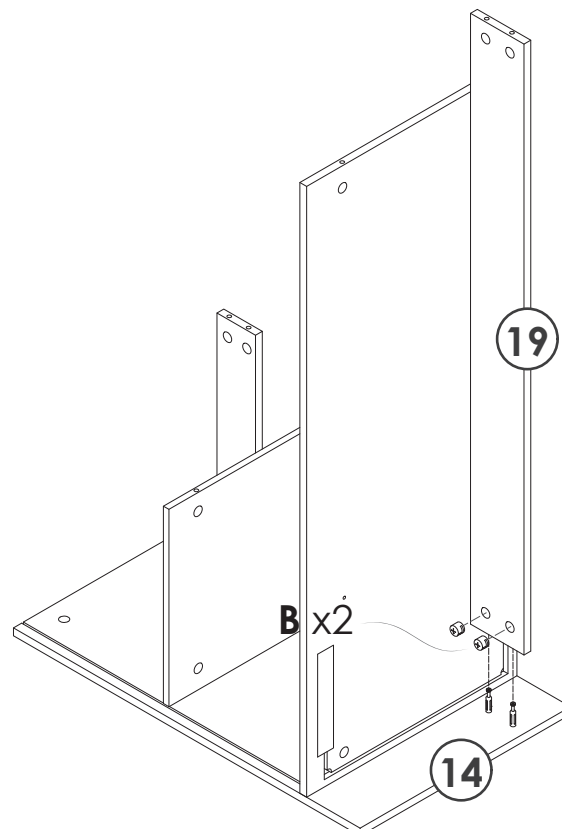


B x2

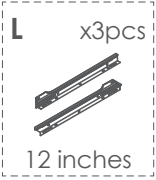 


$$L = CR + DR + CL + DL$$

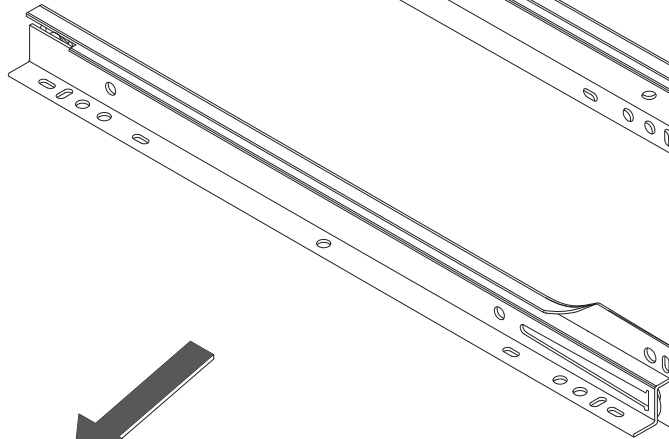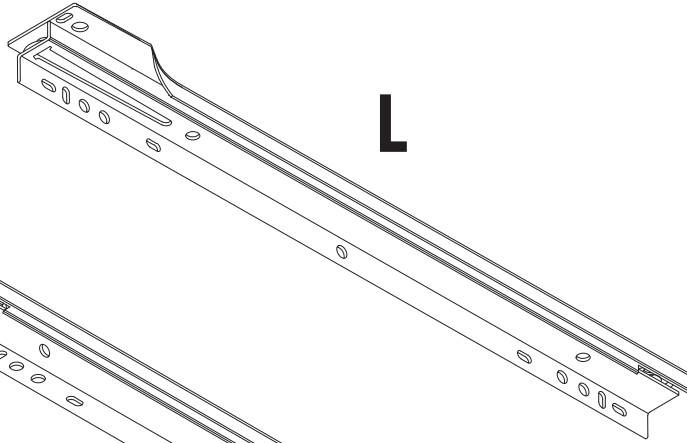  


CR

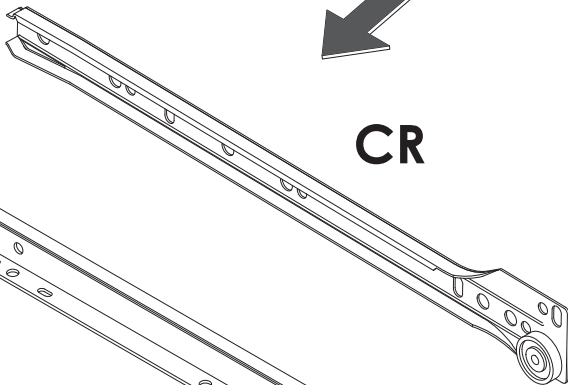 


DR

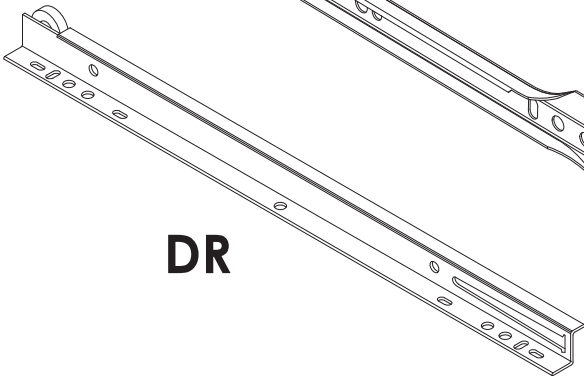 

DL

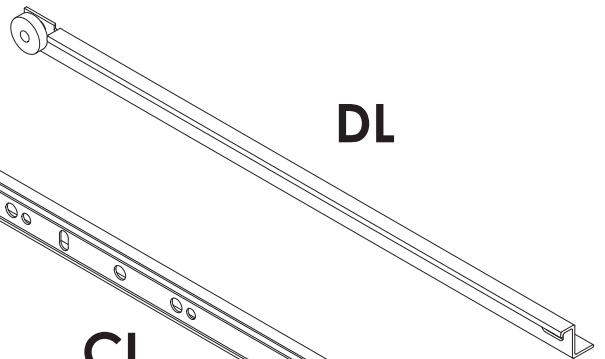 

CL

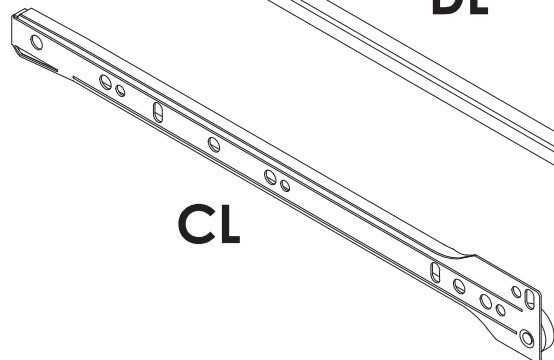 

05

A x4pcs



M6*40mm

C x9pcs



M3.5*14mm

L x3pcs



 
 
 
 
CR

CR



C

C



C

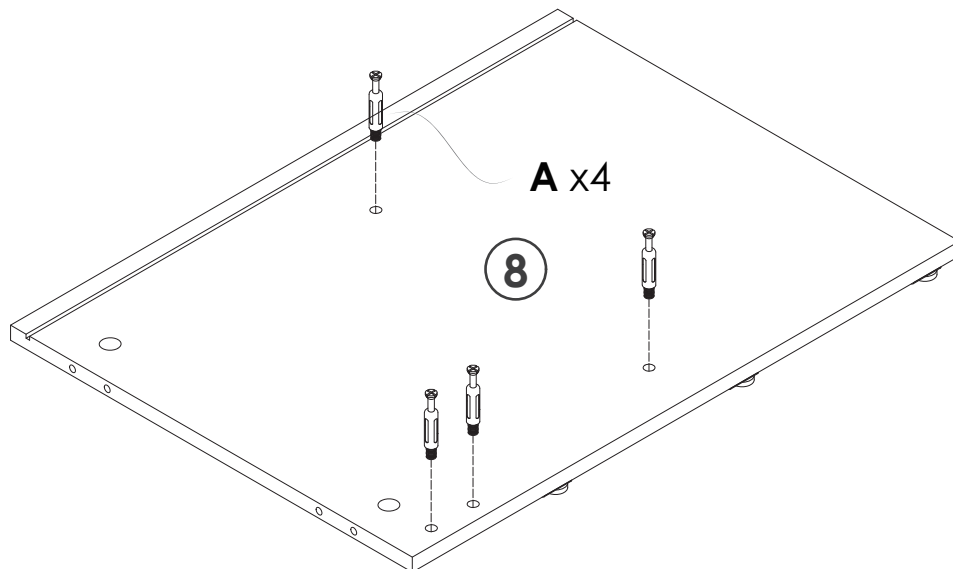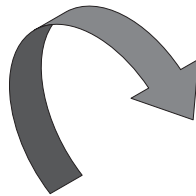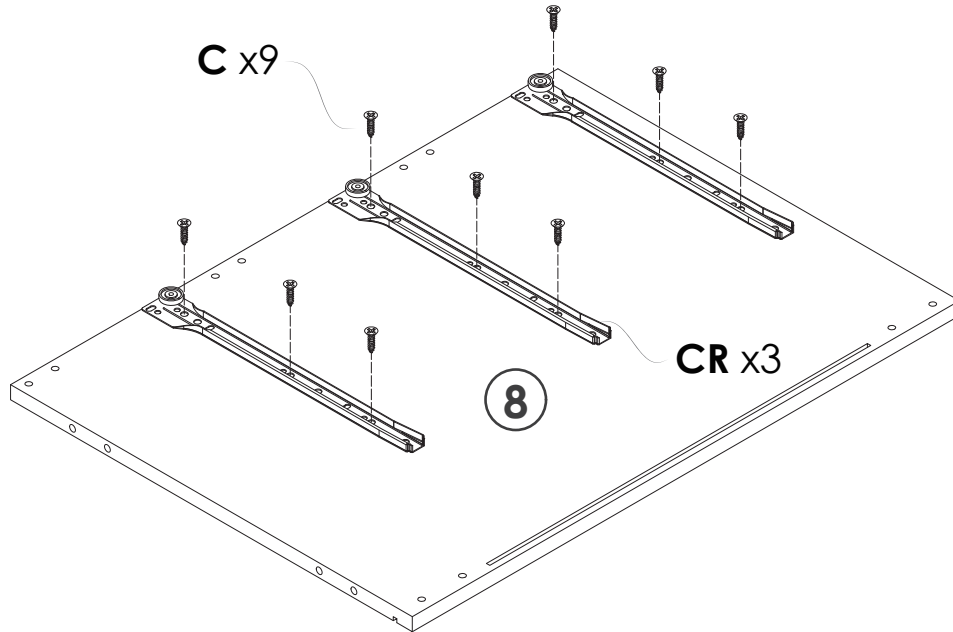

06

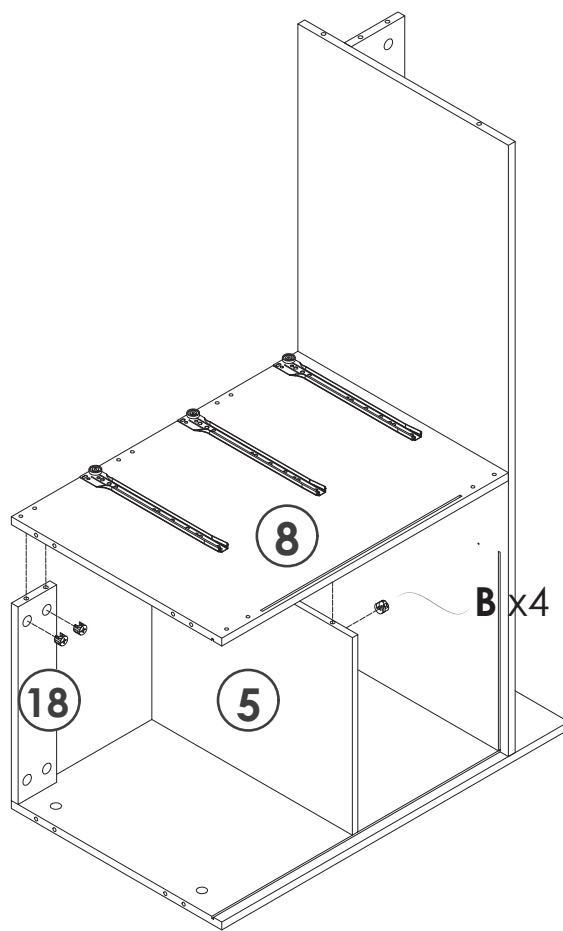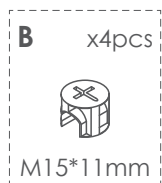  


07

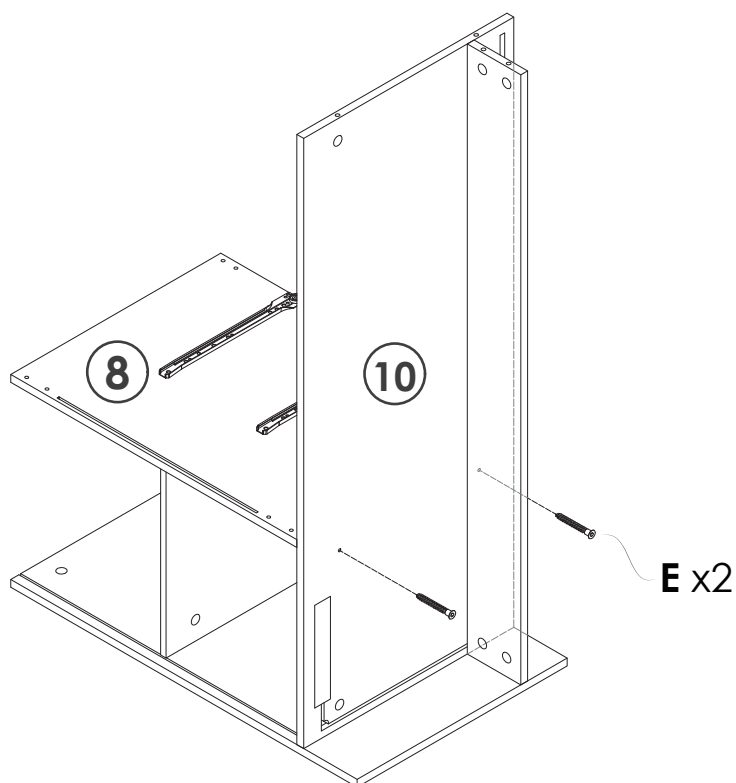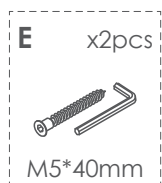  


08

 A x10pcs



M6*40mm

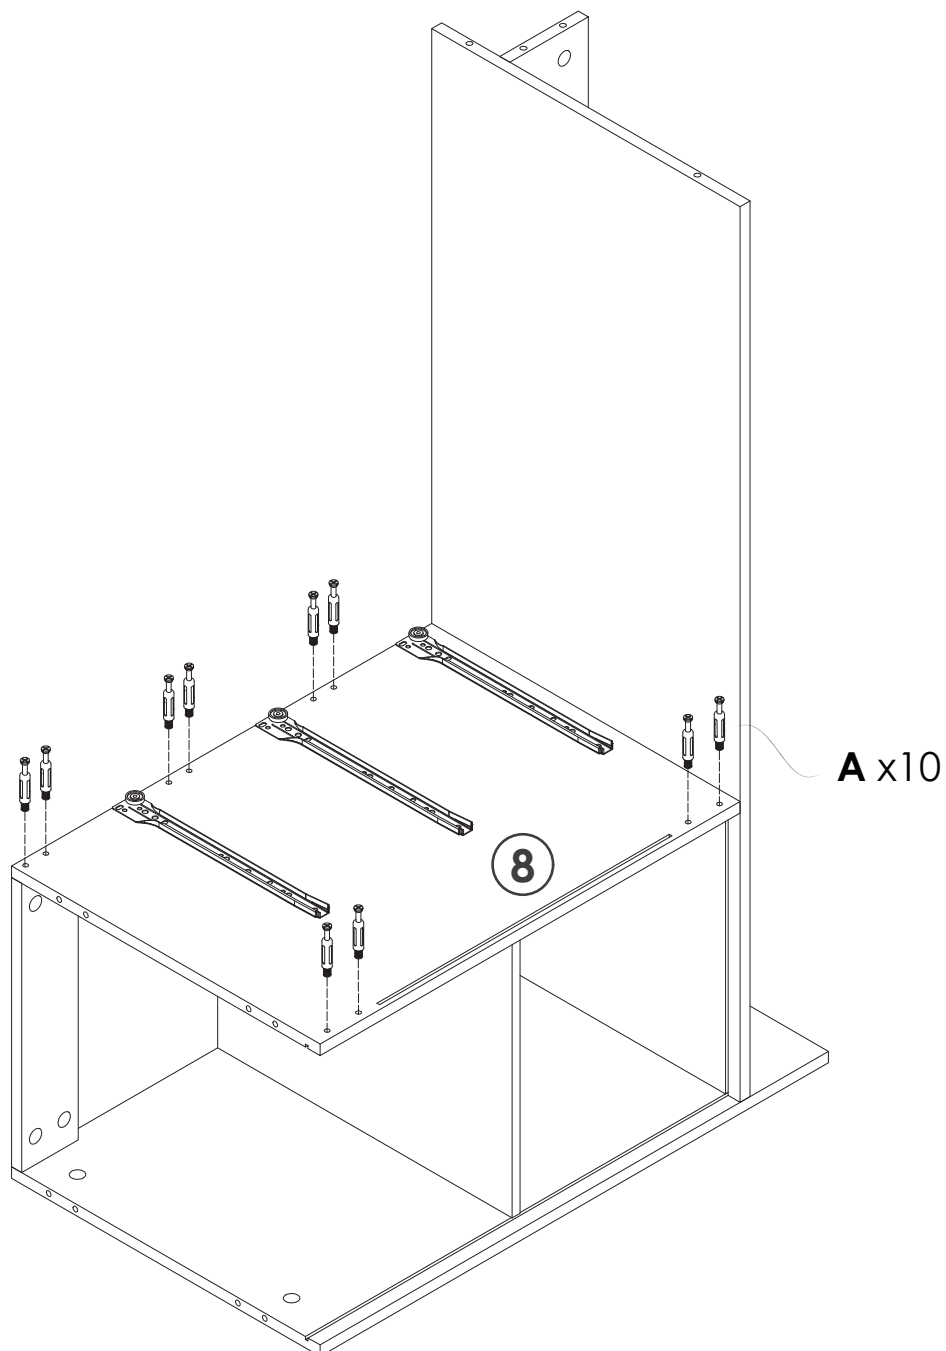 



09

B x10pcs



  M15*11mm

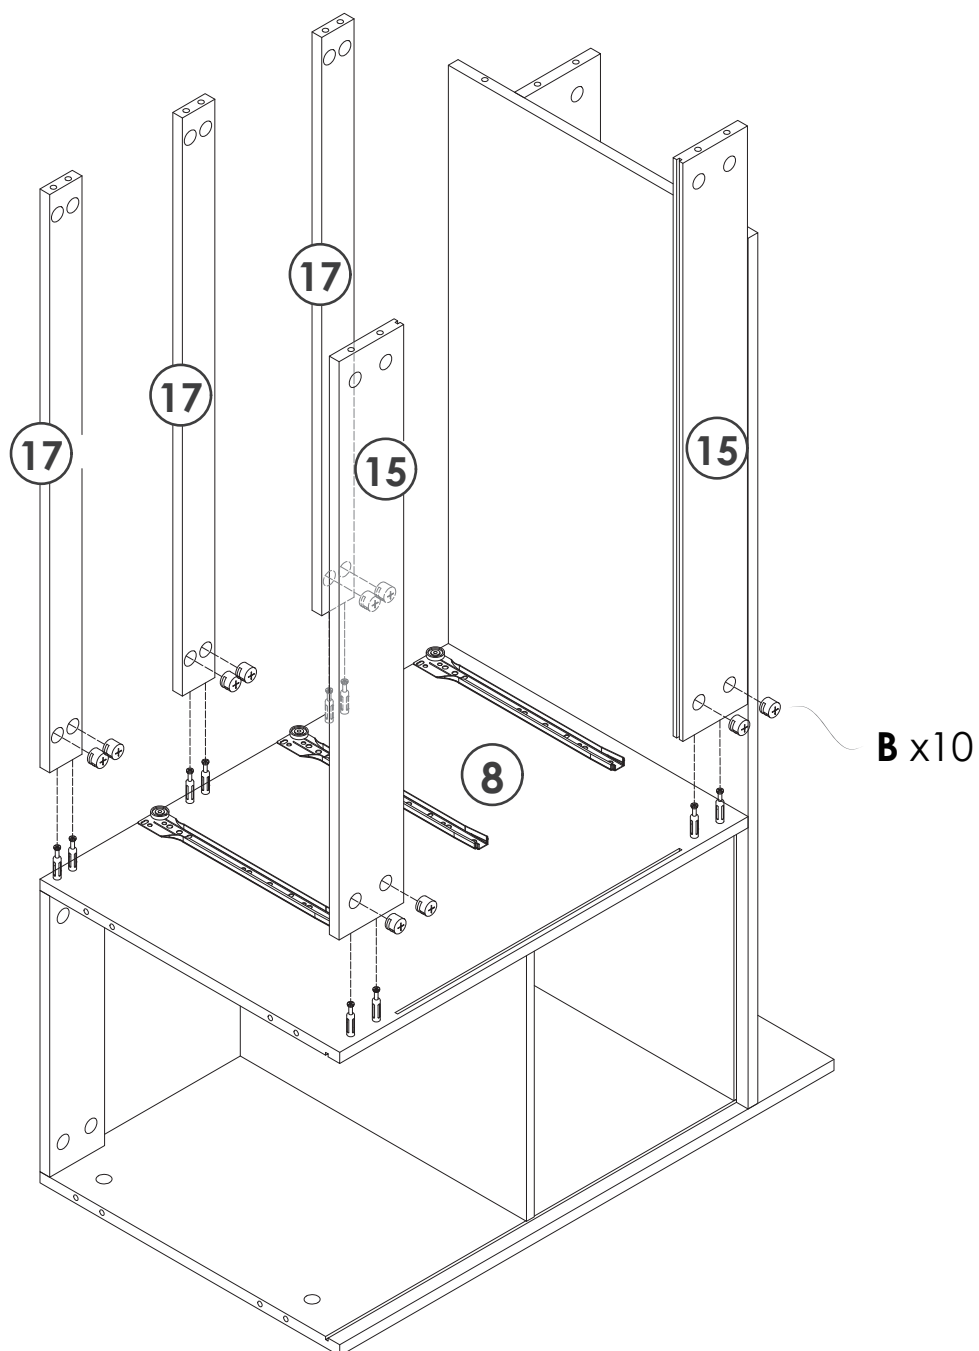

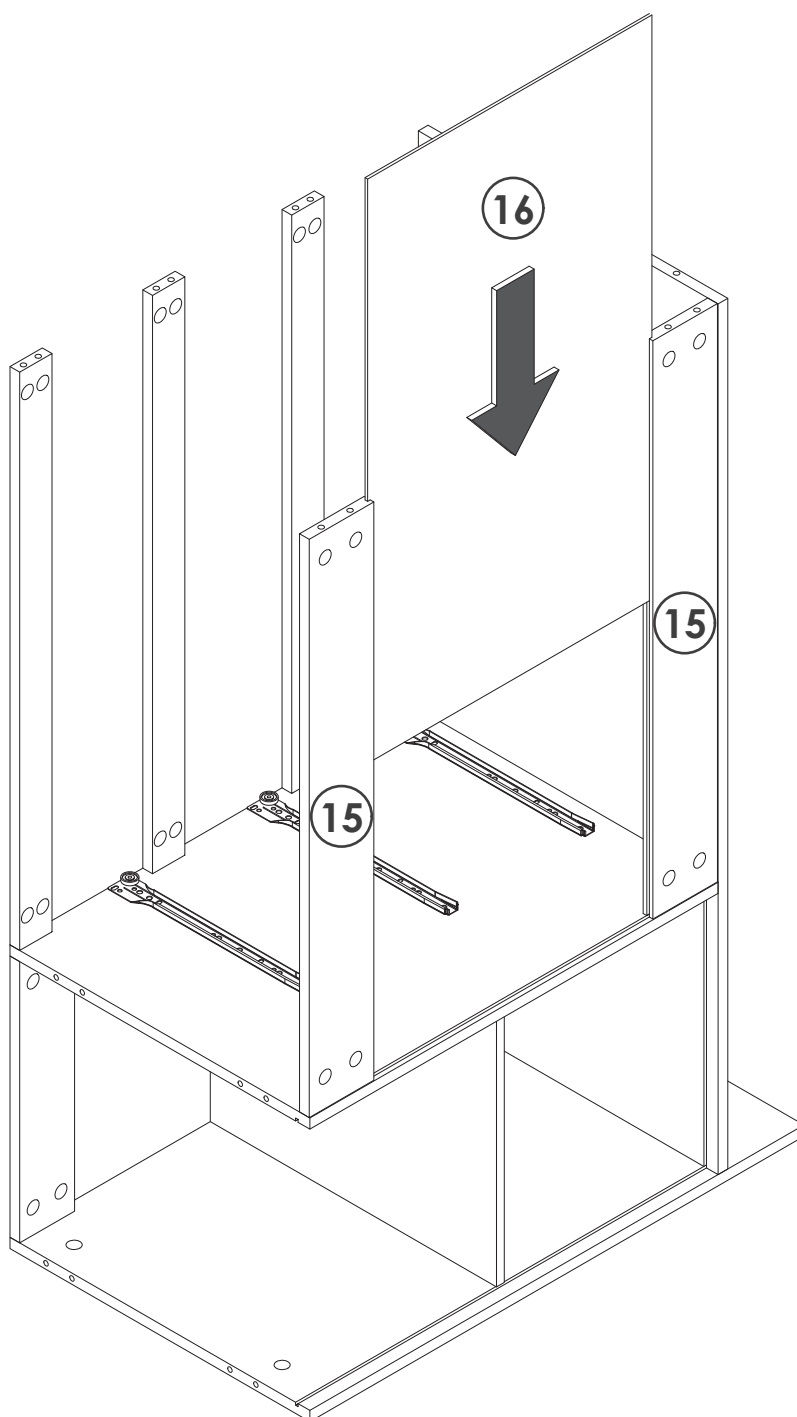

11

C x9pcs

 
 


M3.5*14mm

L x3pcs




CL

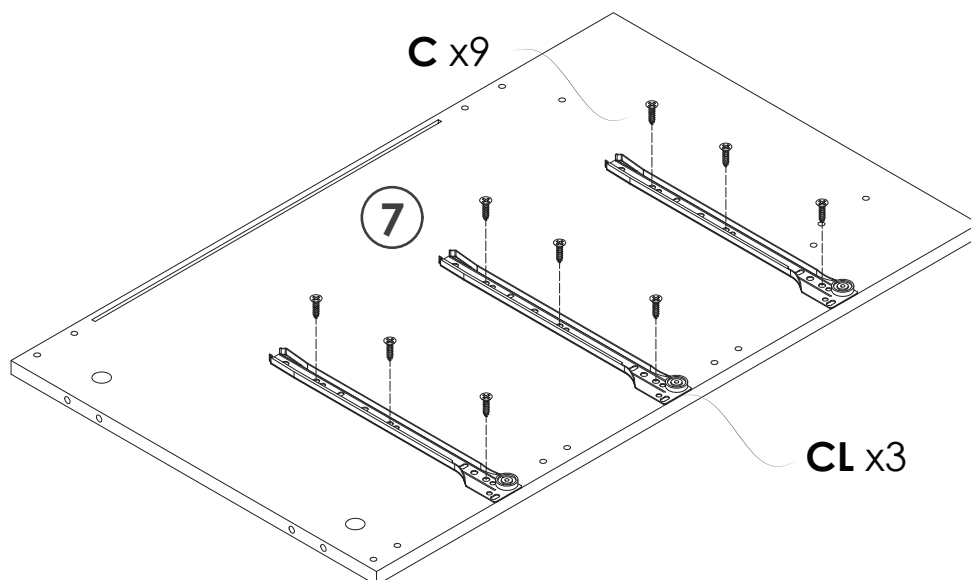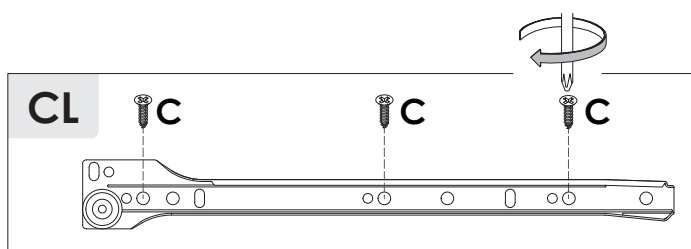


12

 A x14pcs



M6*40mm

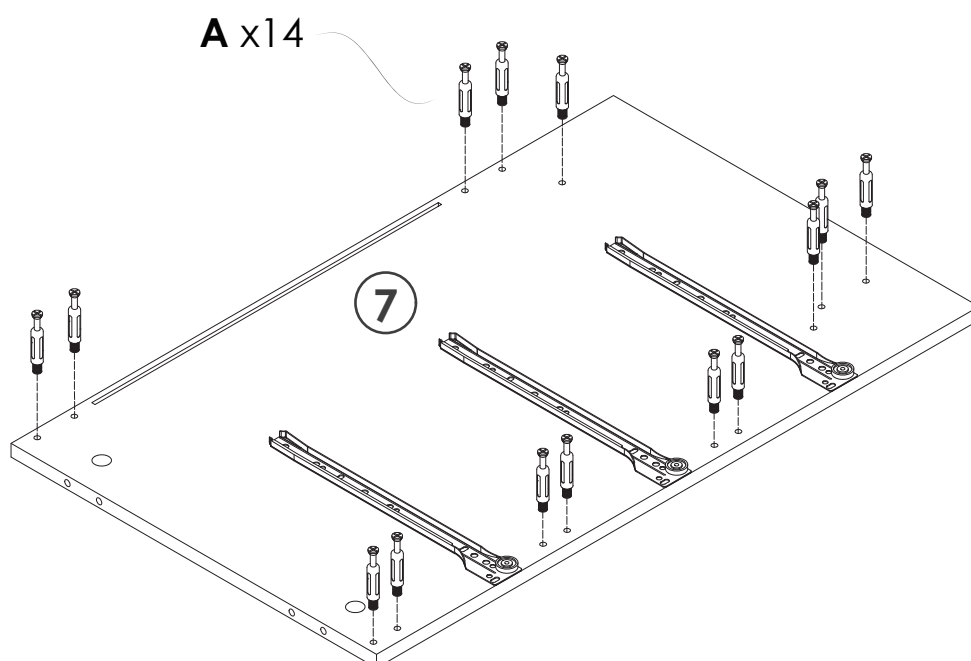 


13

B x14pcs




 M15*11mm


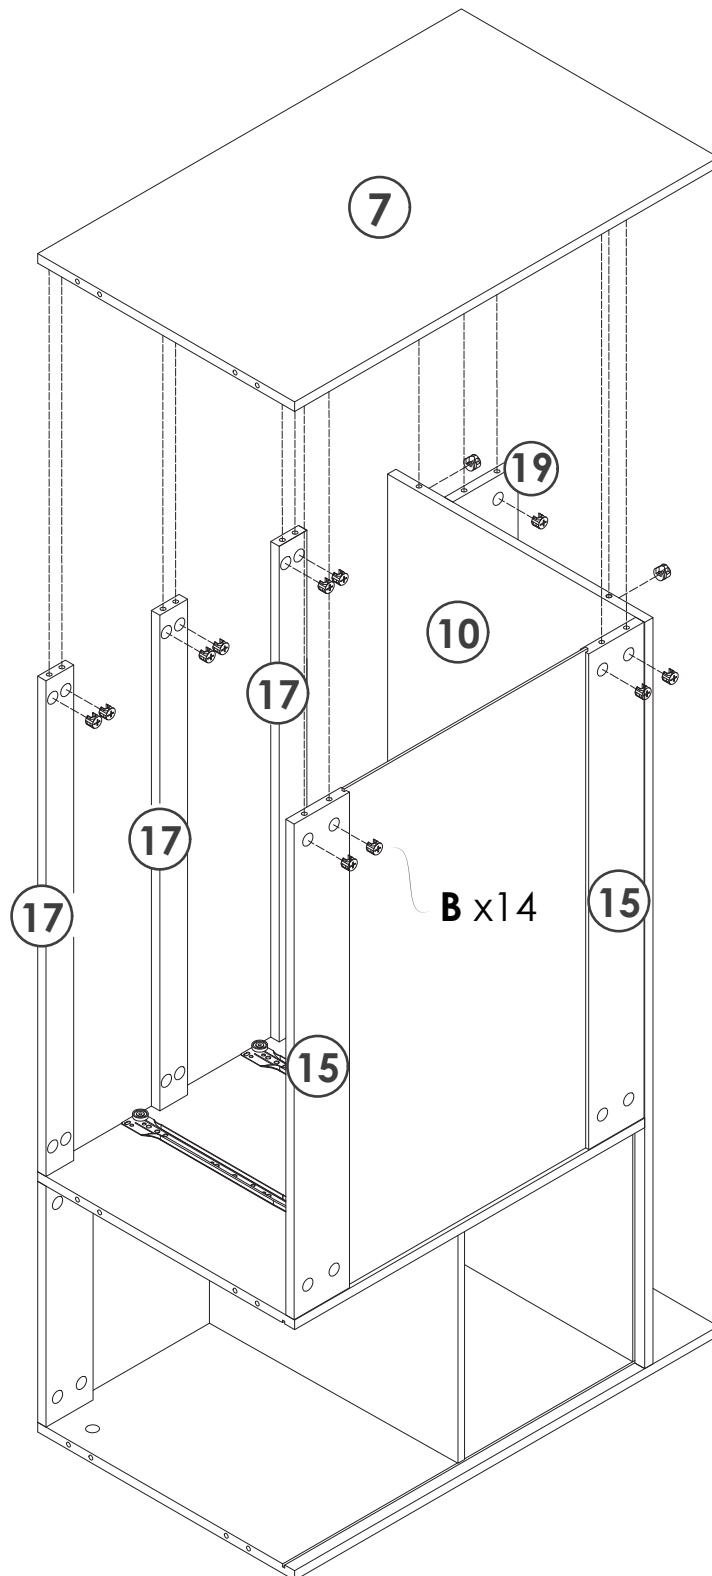


14



 
F x7pcs

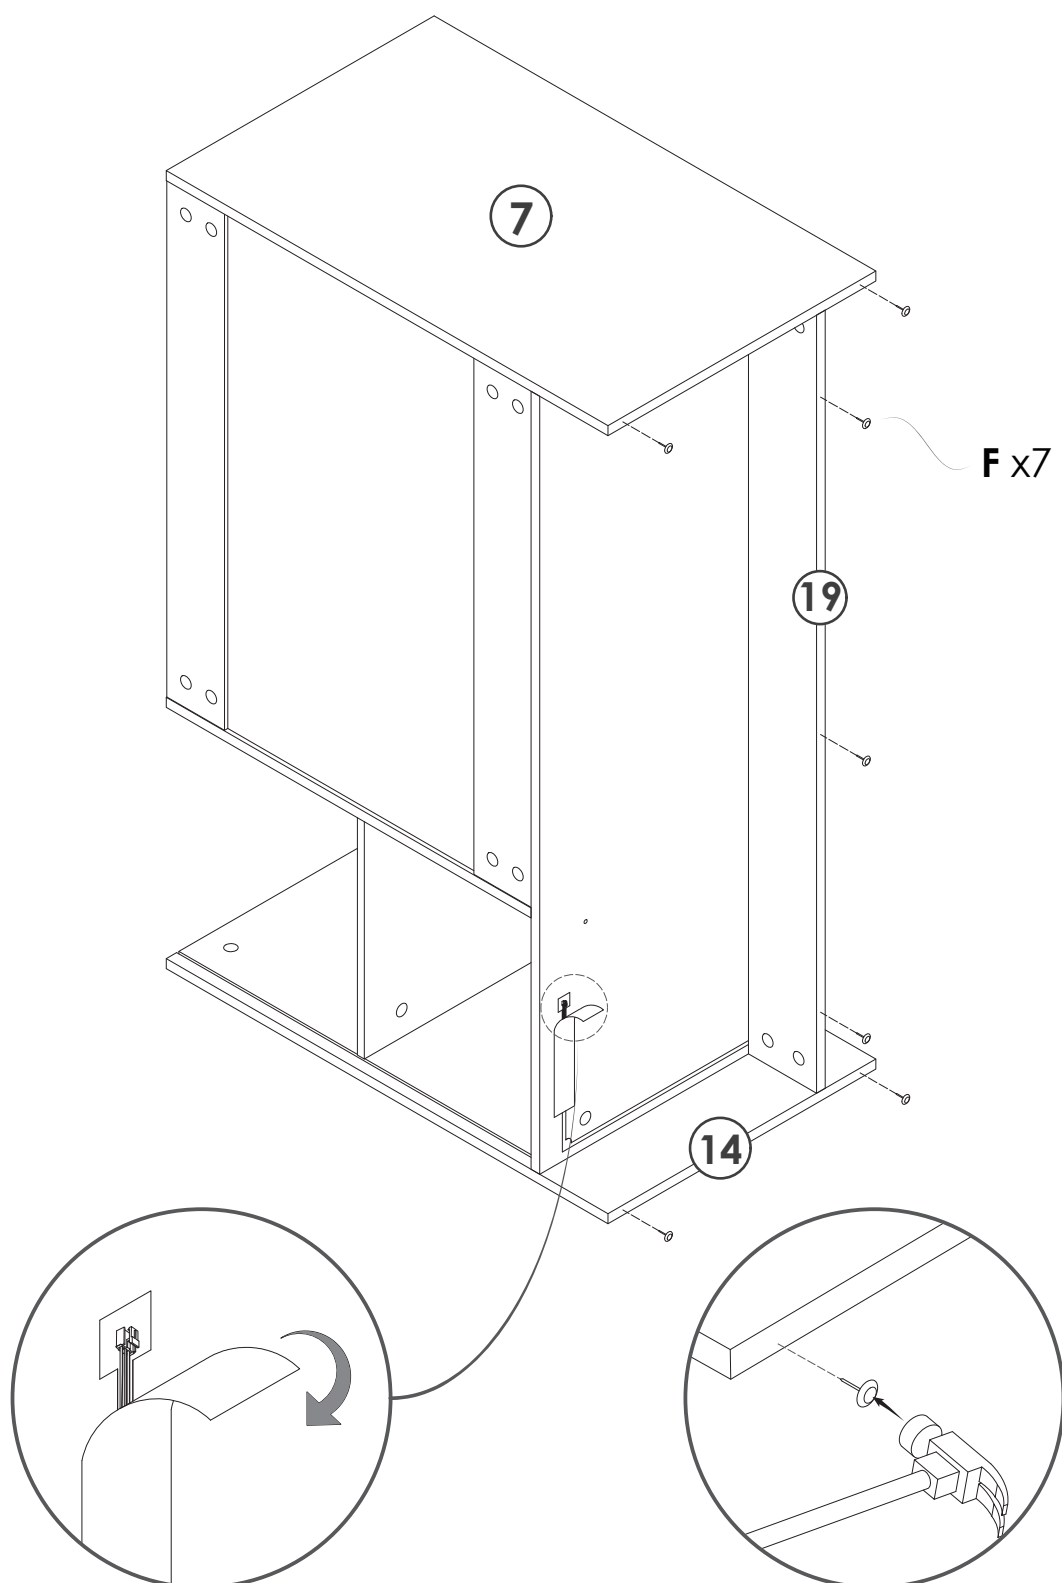



15

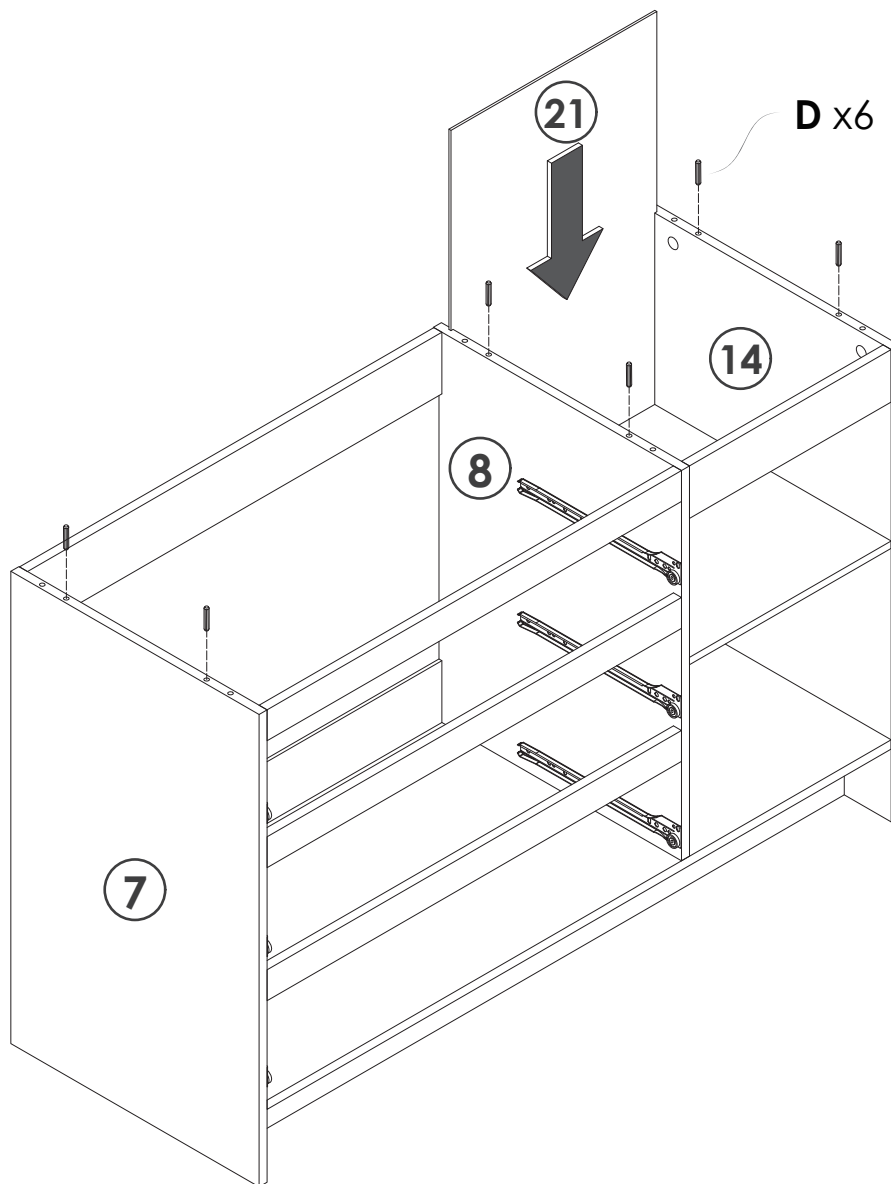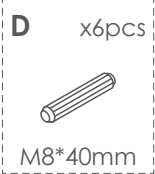  



16

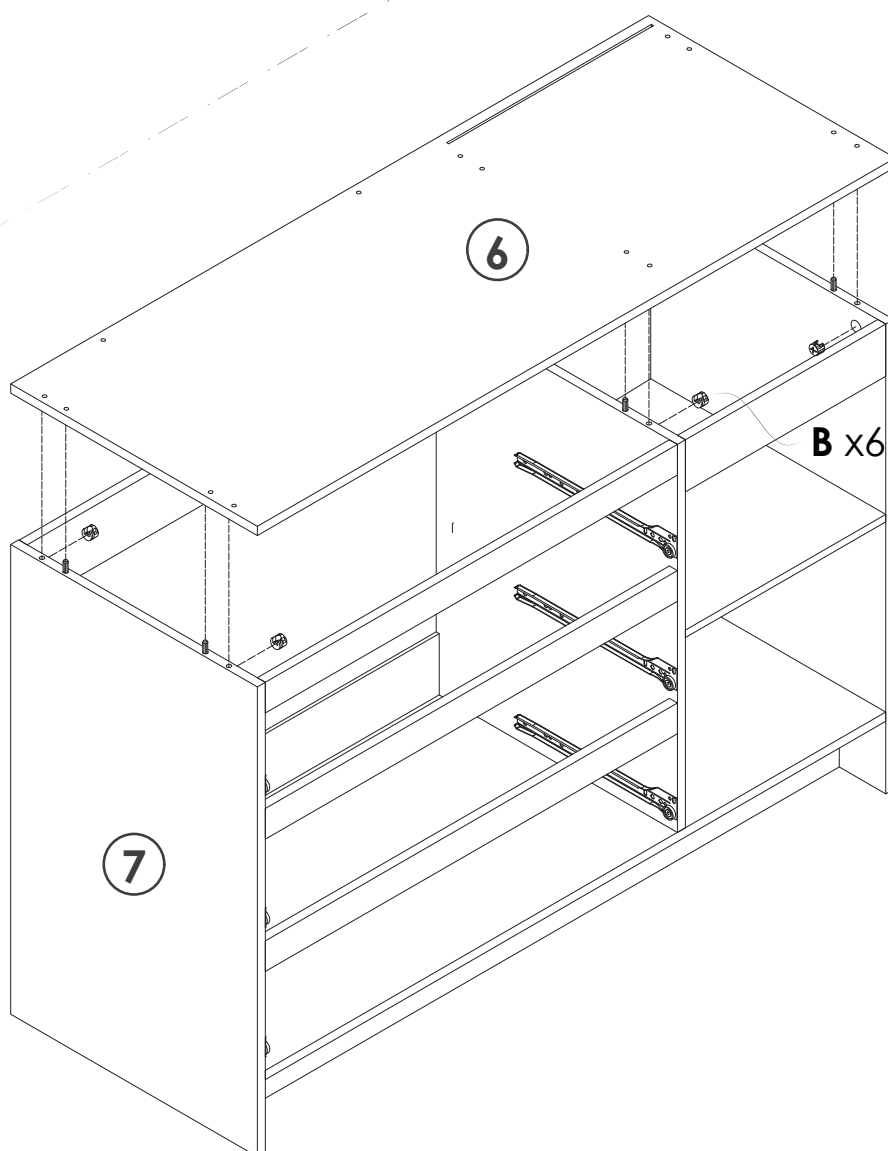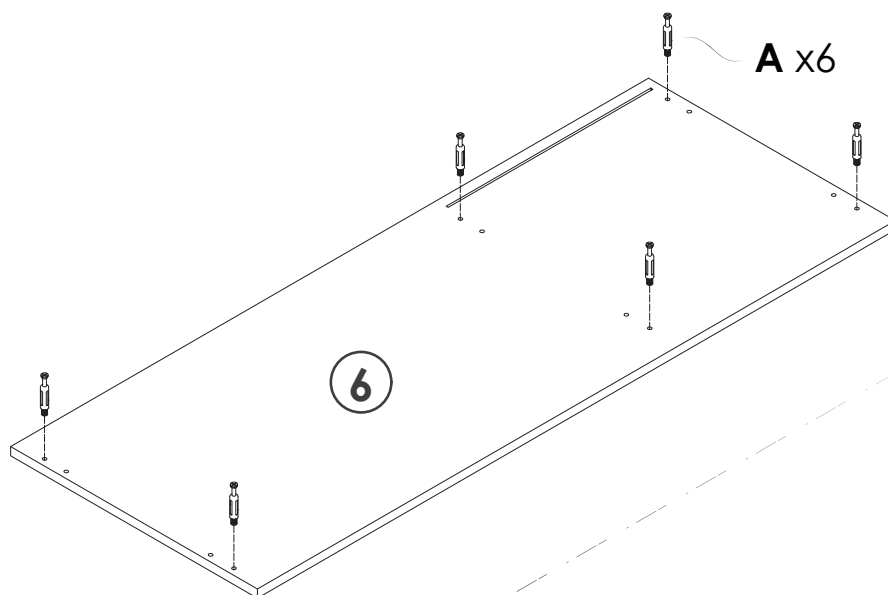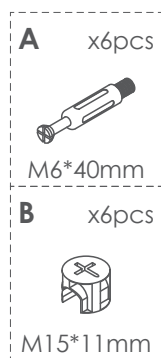   



17

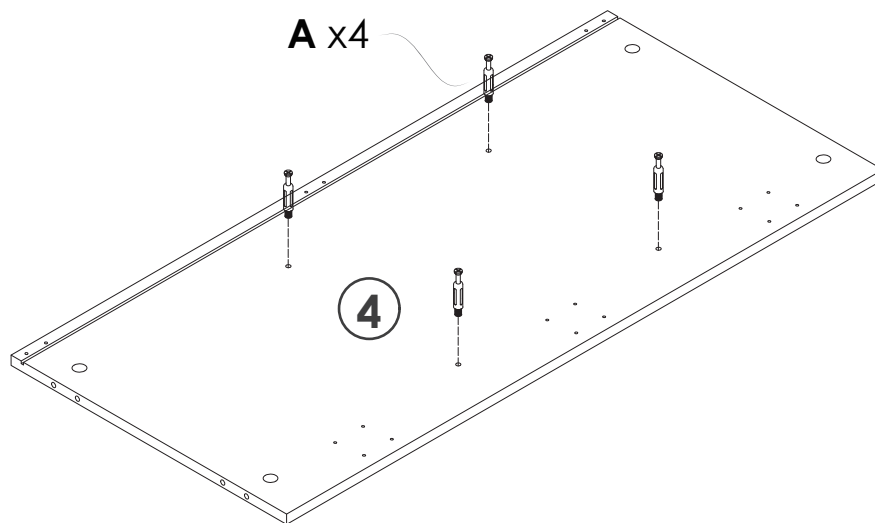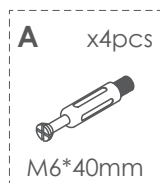  



18

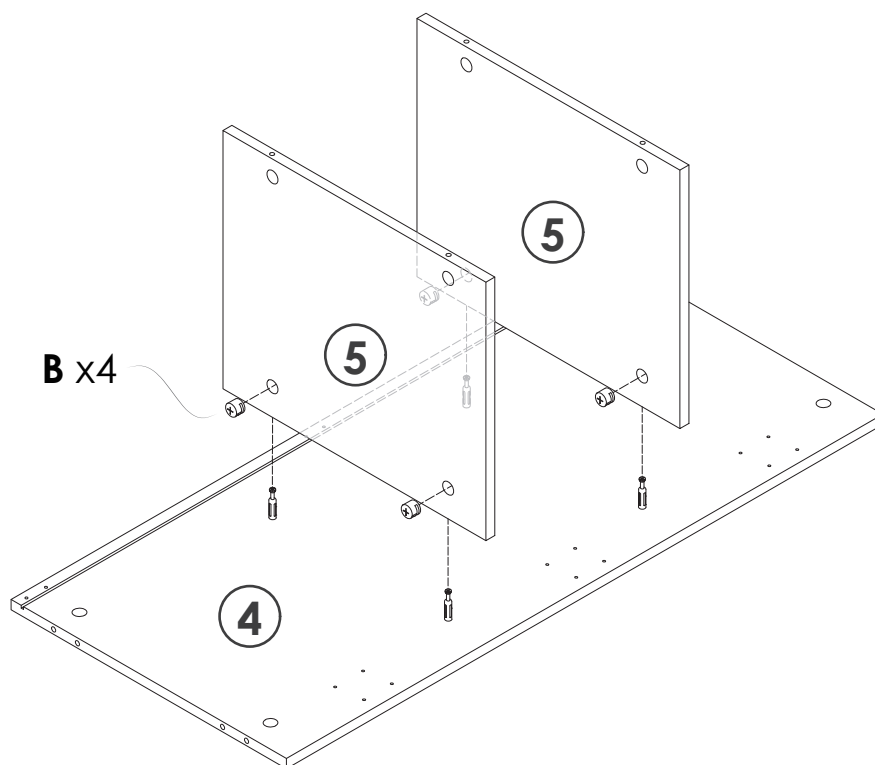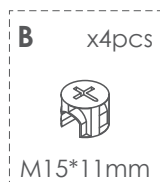  



19

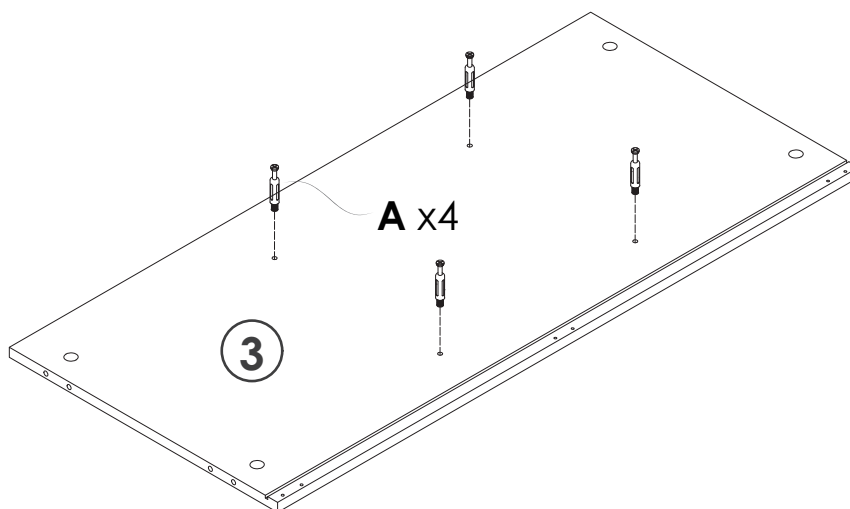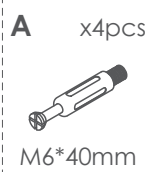  



20

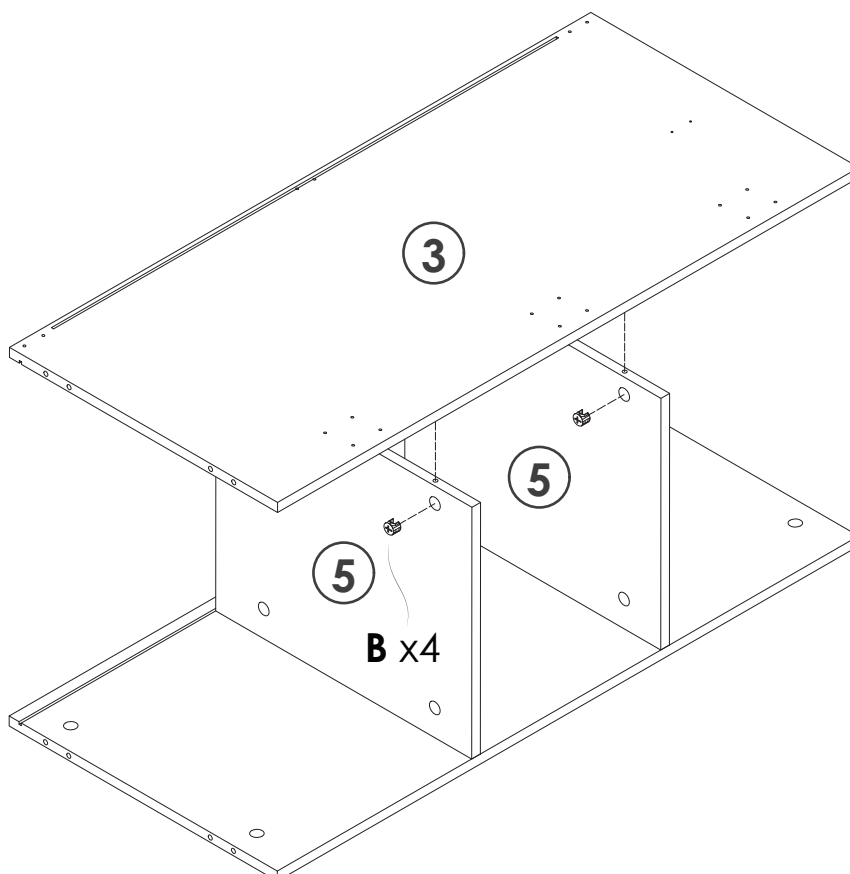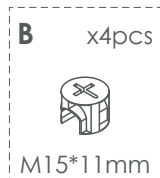  

21

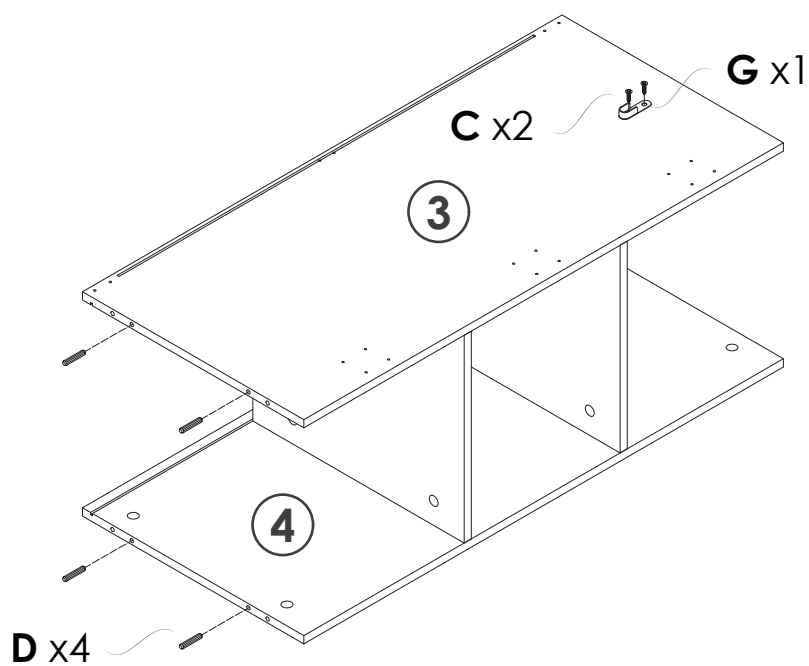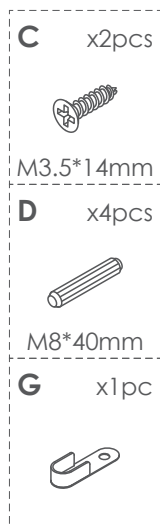  

22

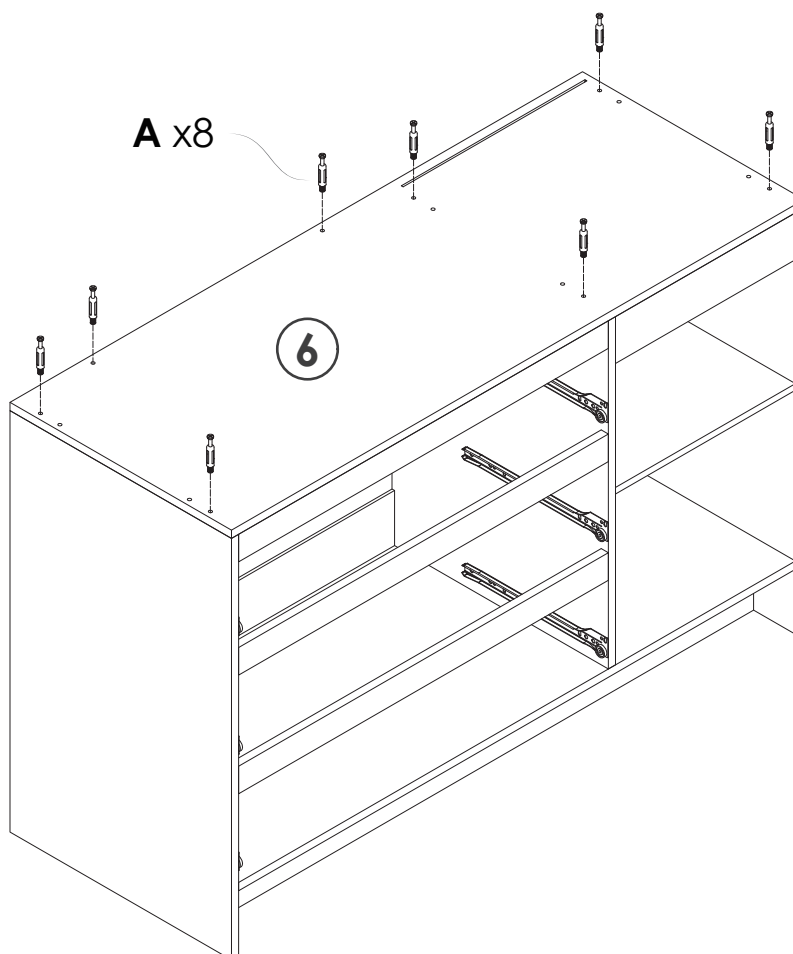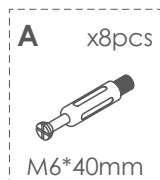  


23



B x4pcs




 
M15*11mm

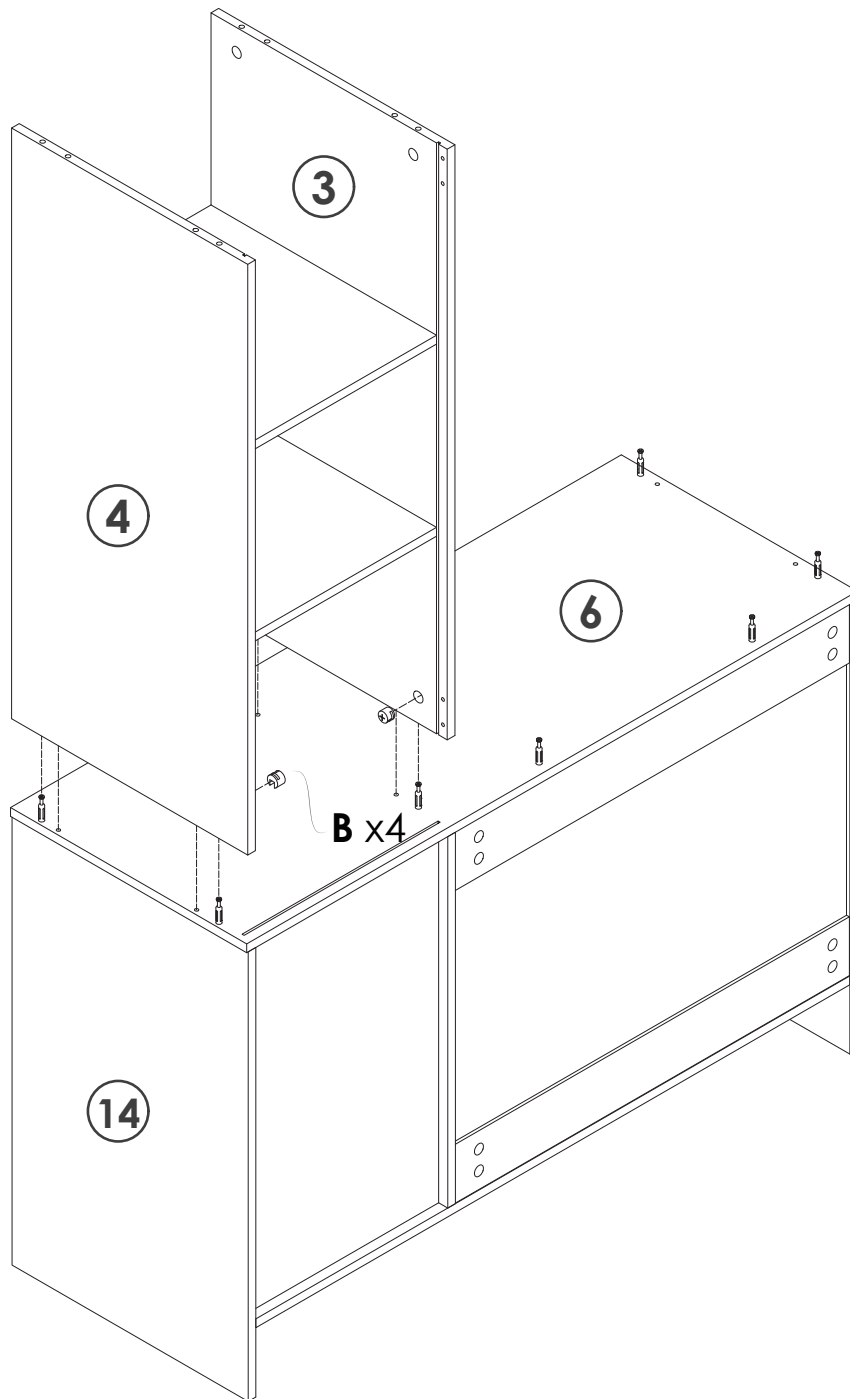

24

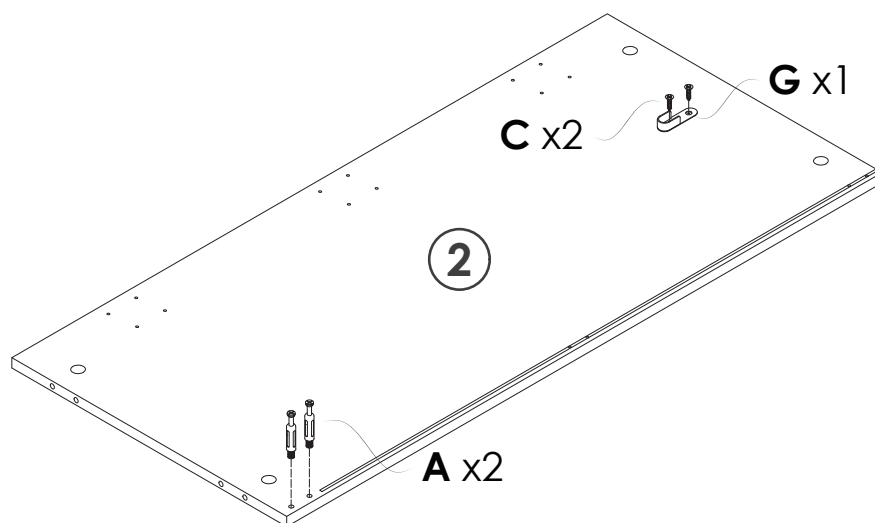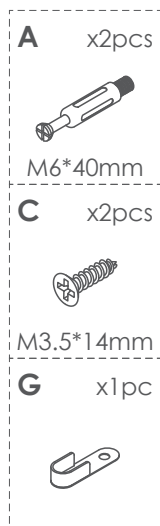  

25

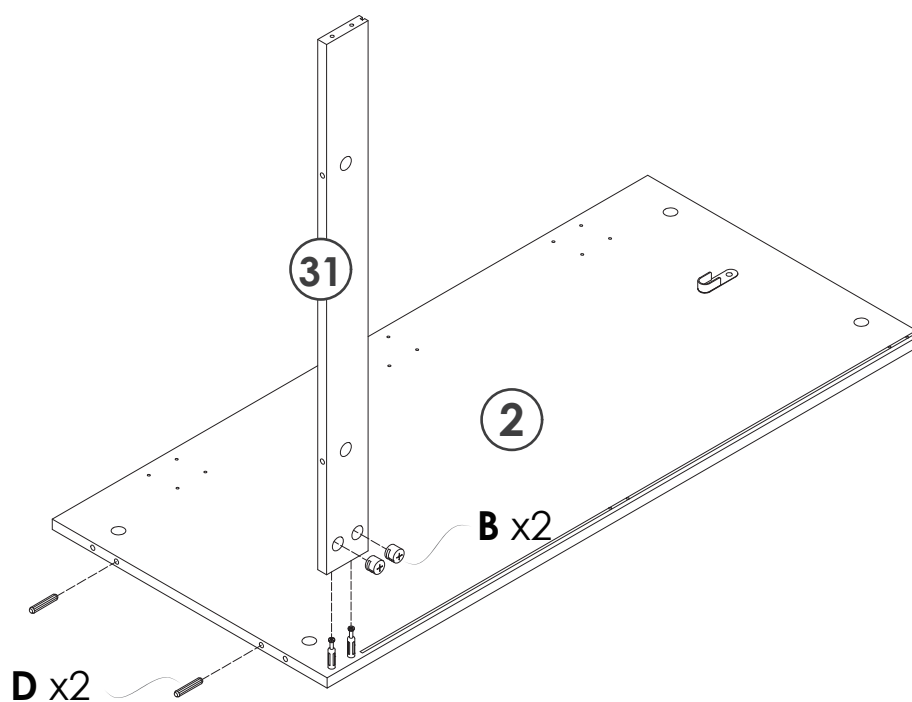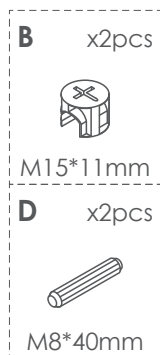  


26



B x4pcs




 M15*11mm

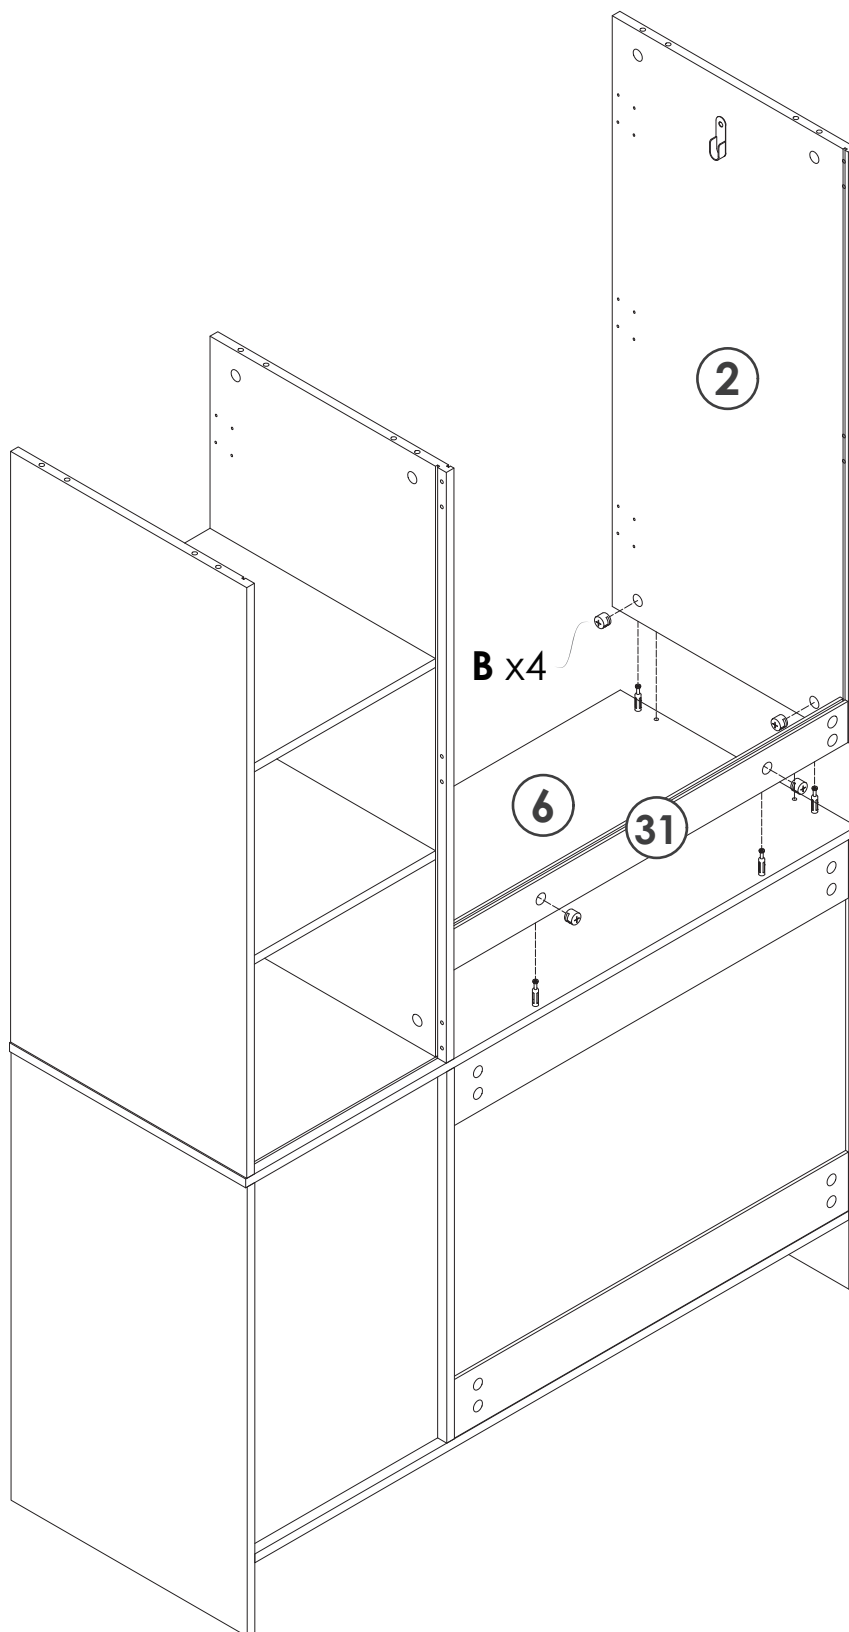



27

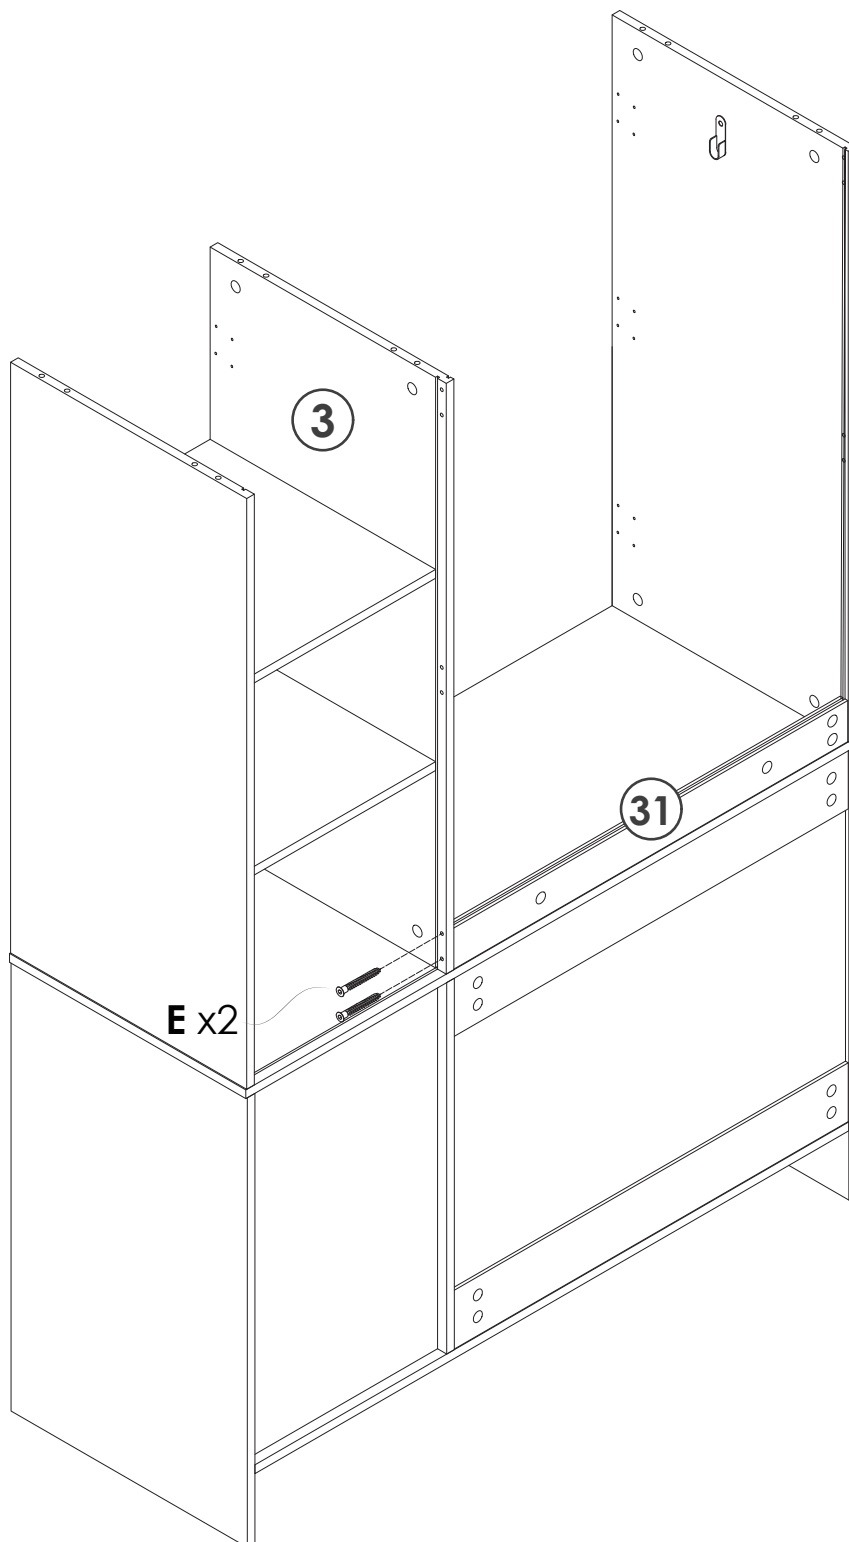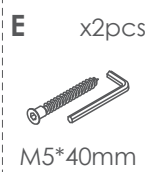  


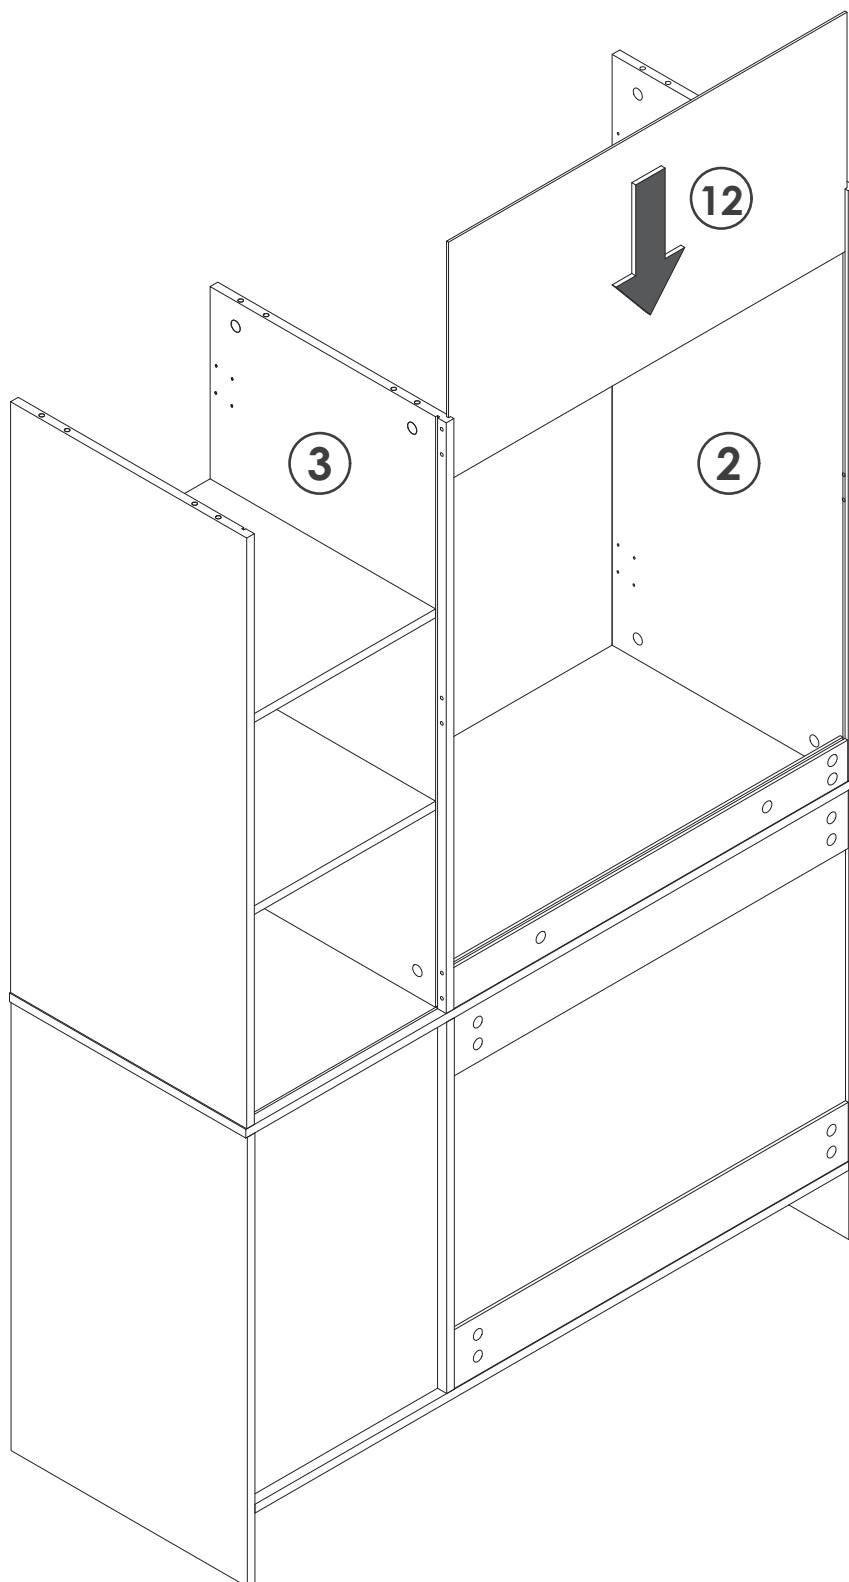 



29

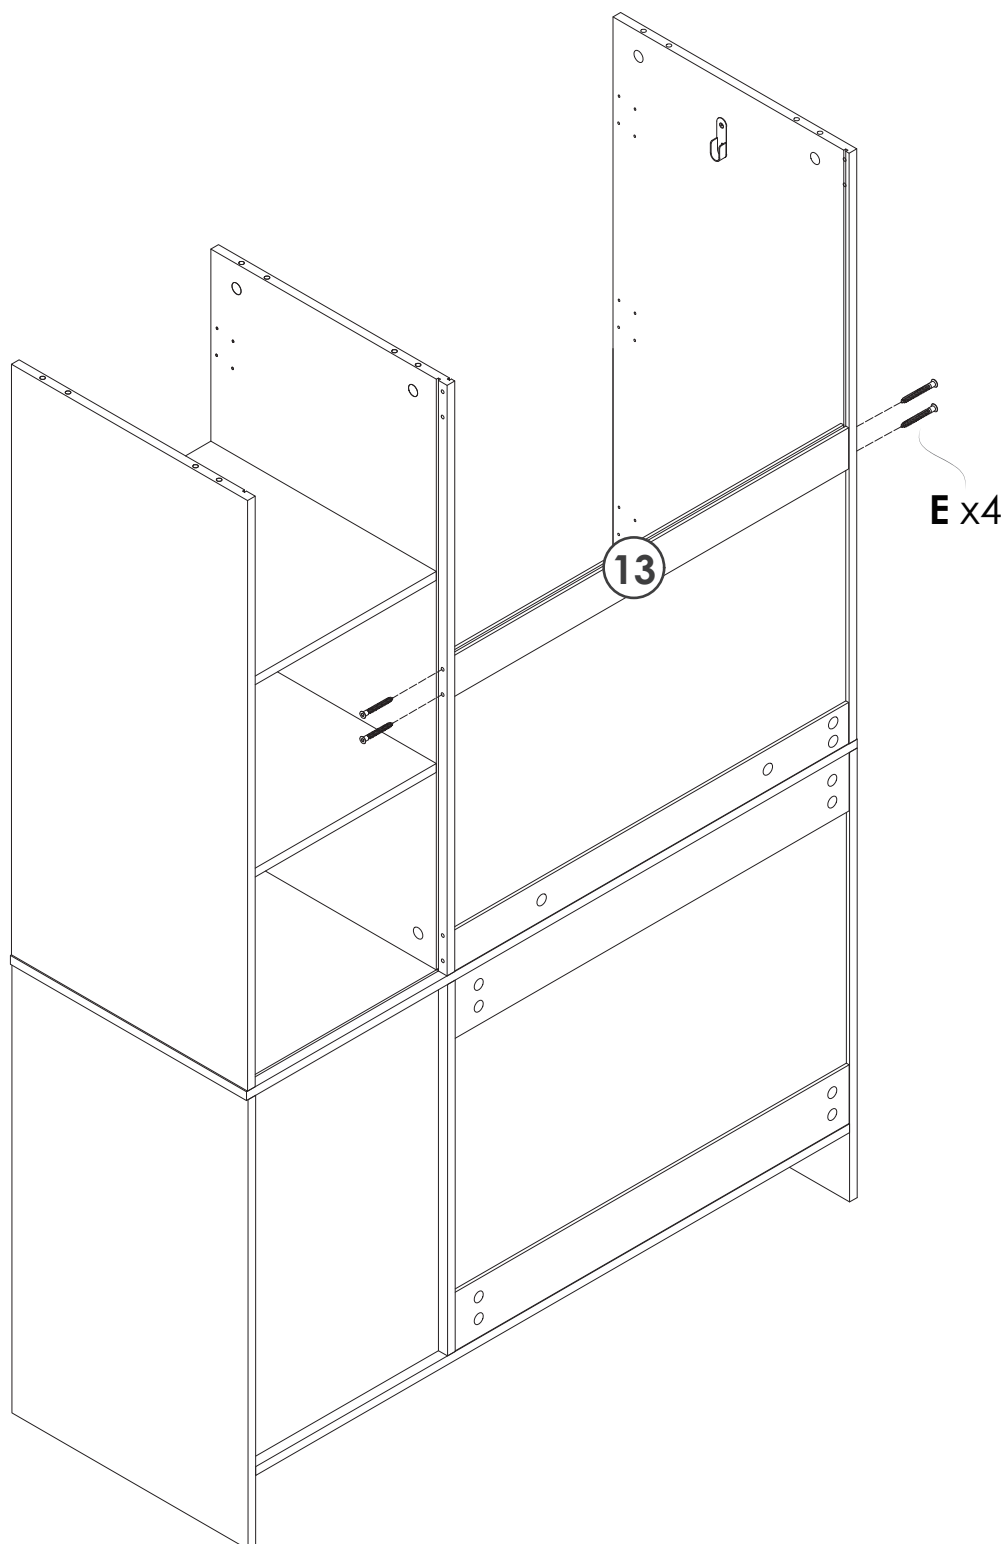 

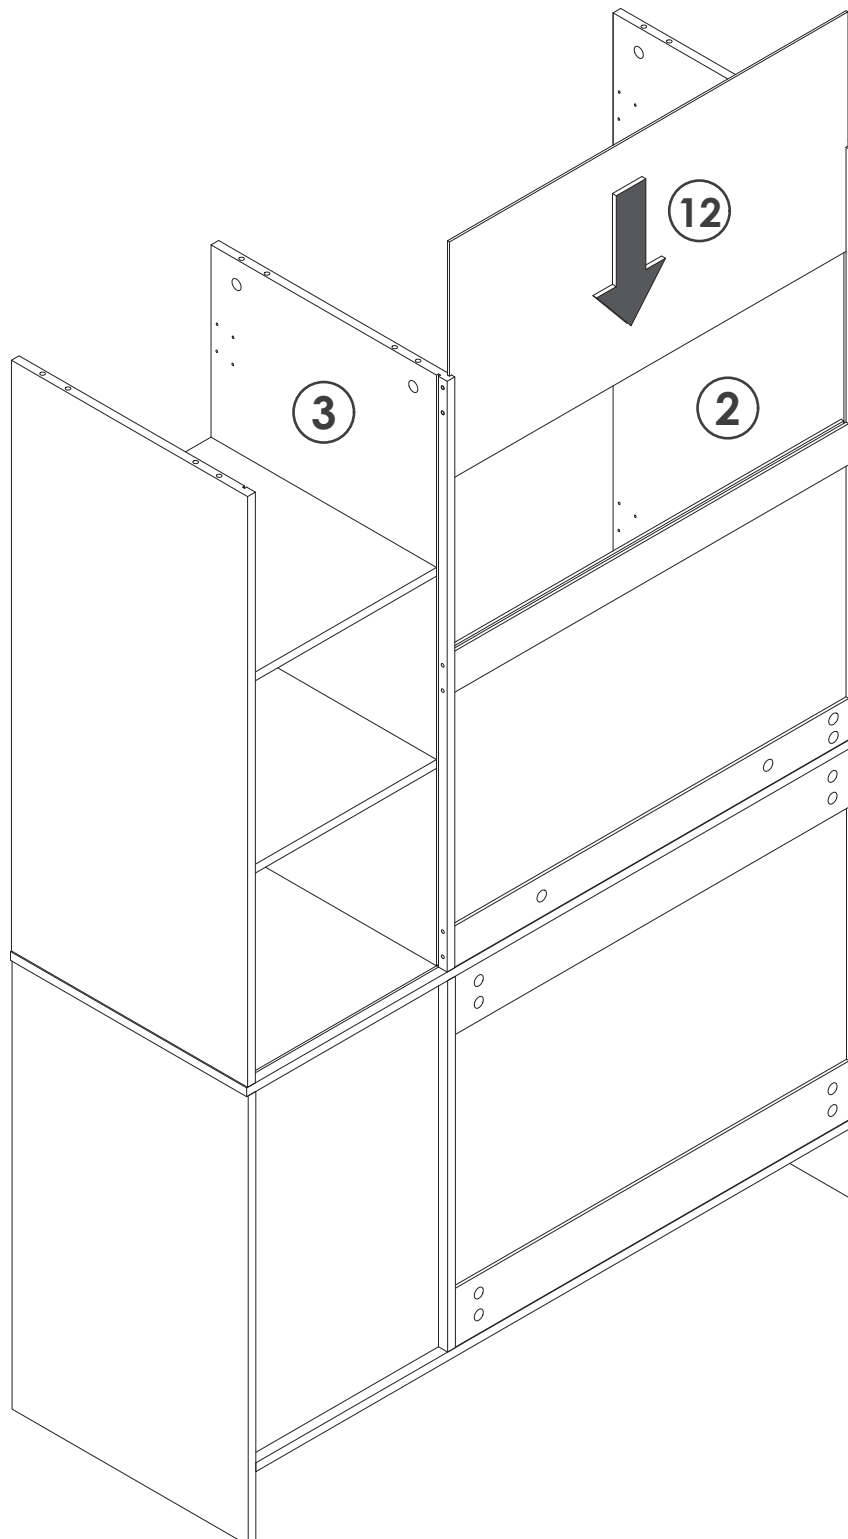 

31

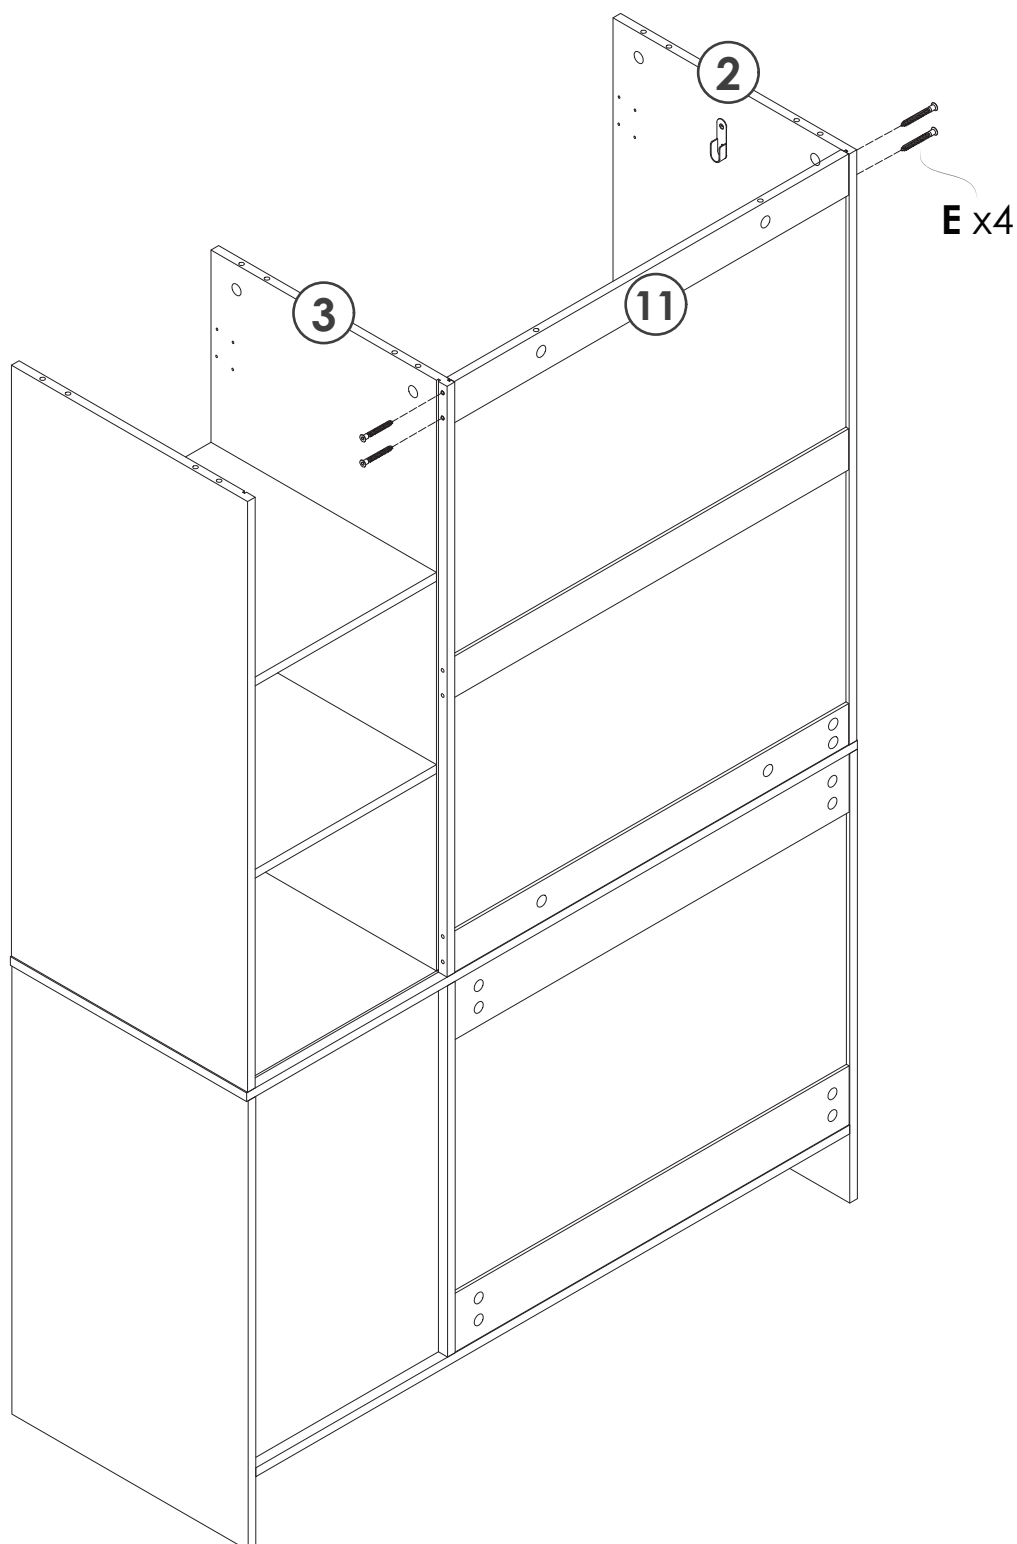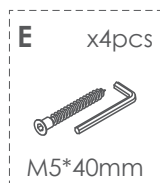  

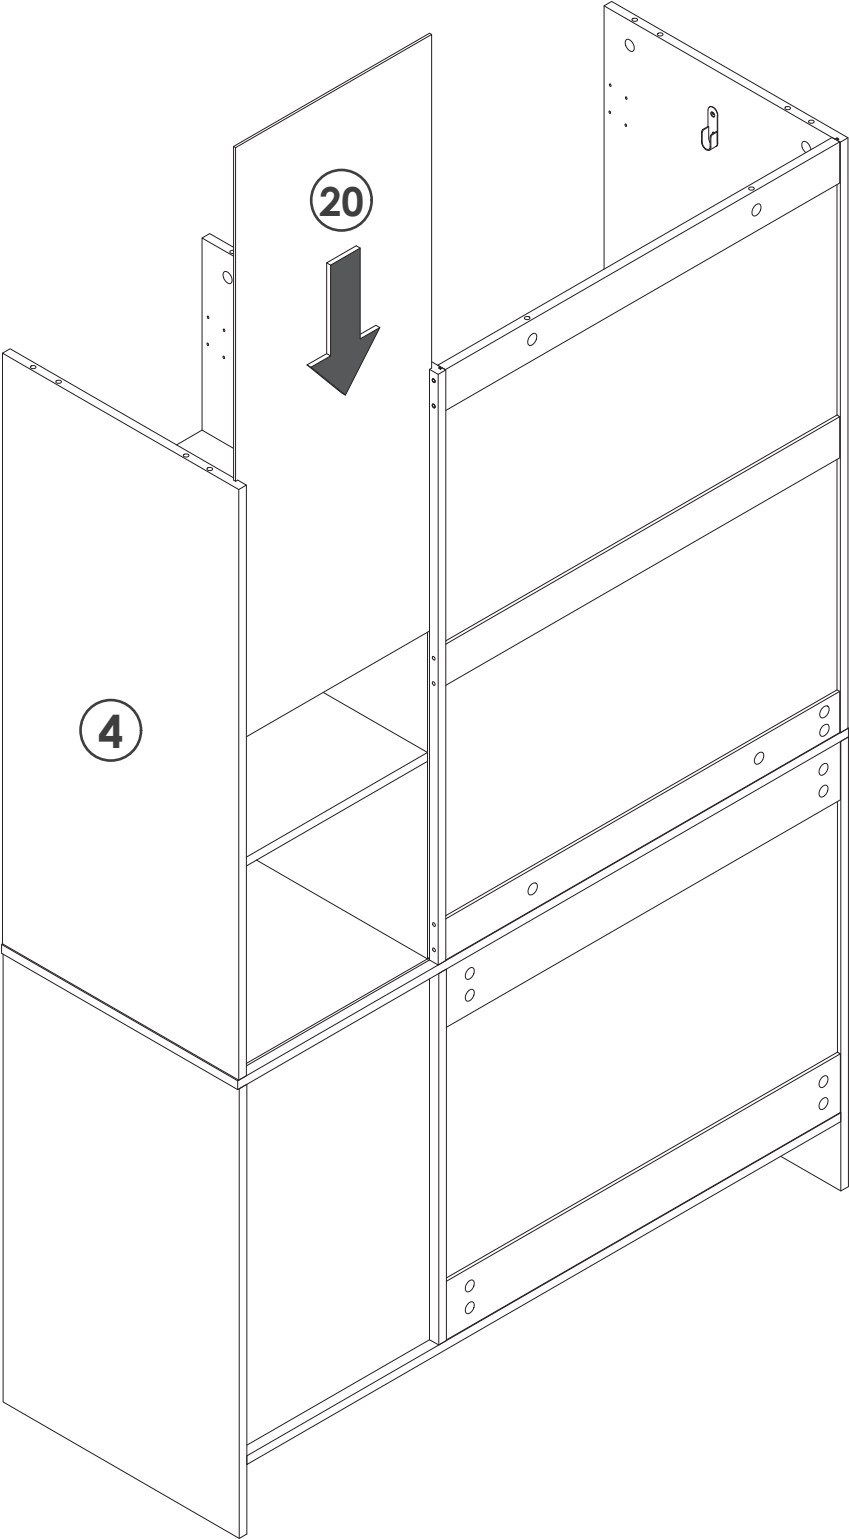 


33



A x8pcs



 M6*40mm

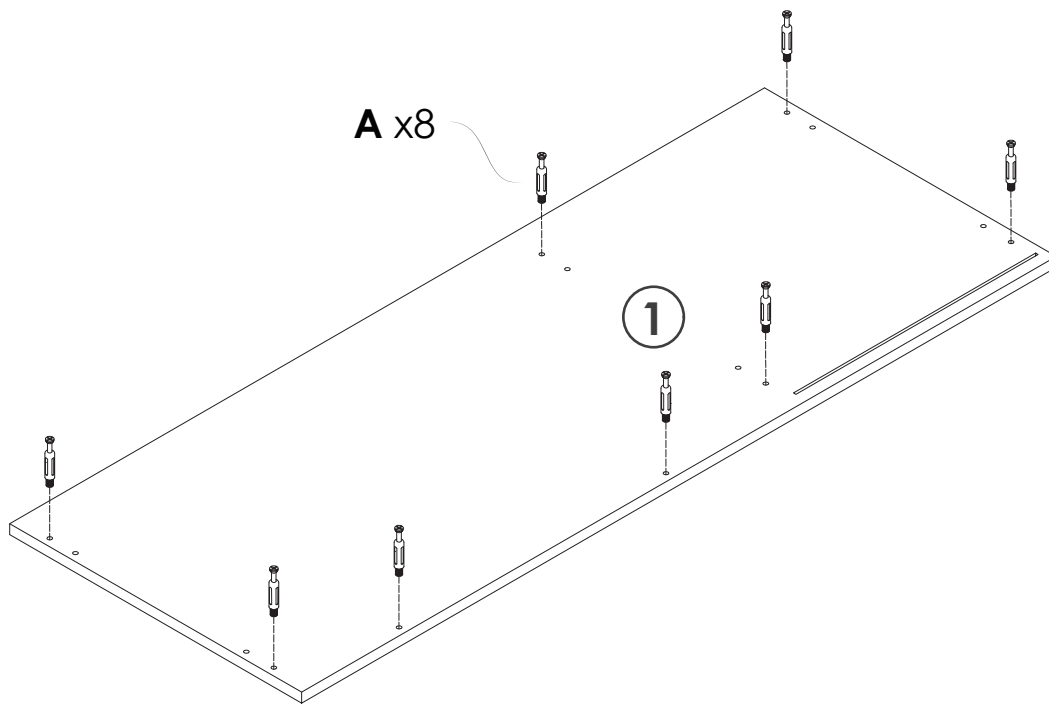

34

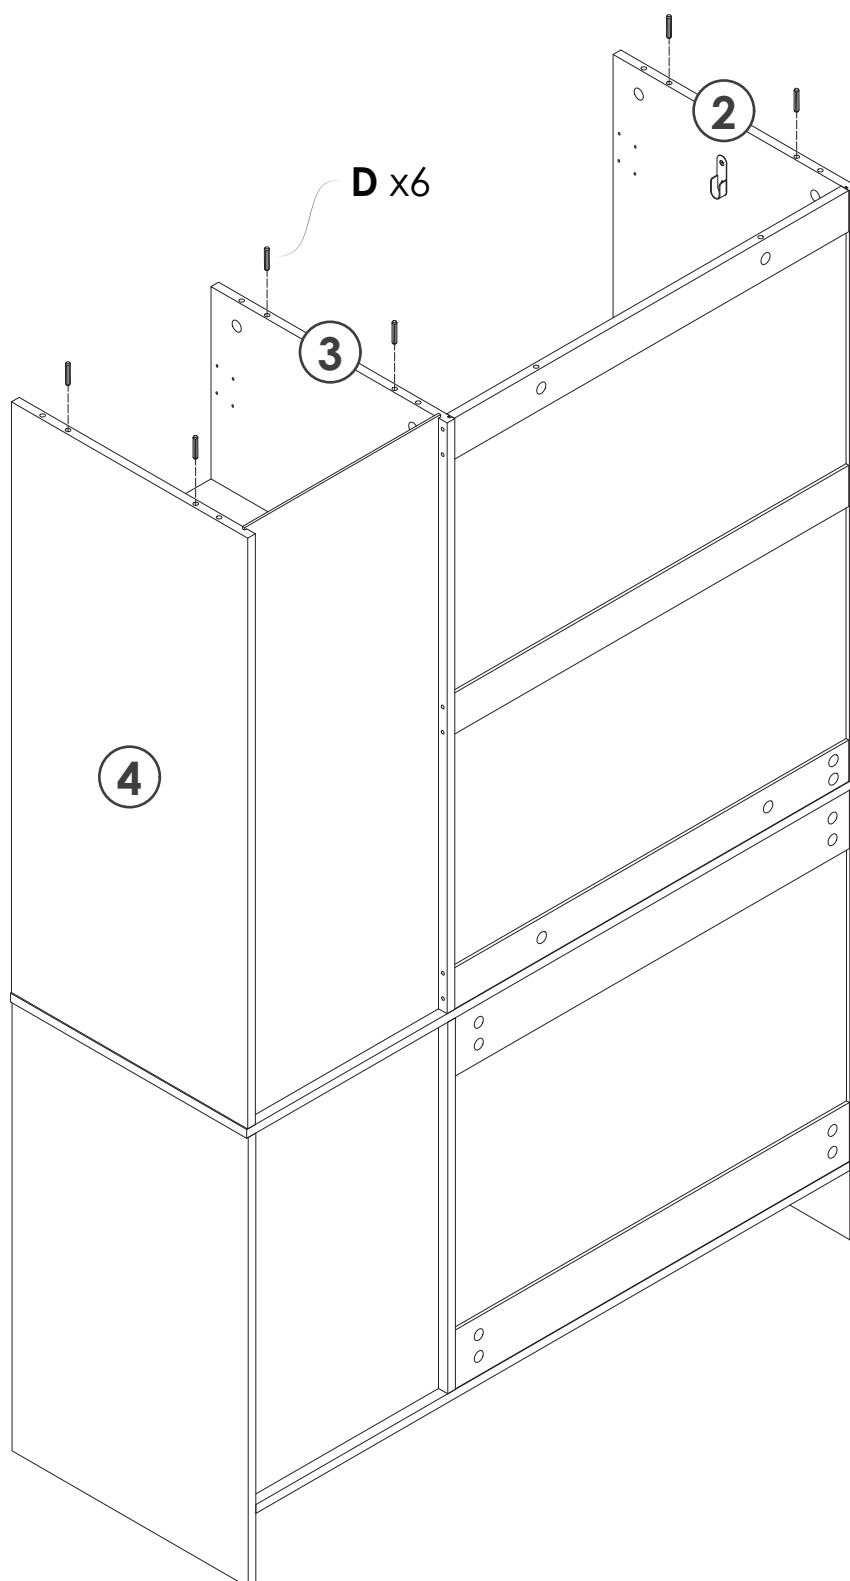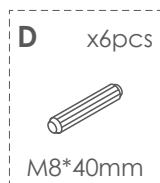  


35




B x8pcs



 M15*11mm

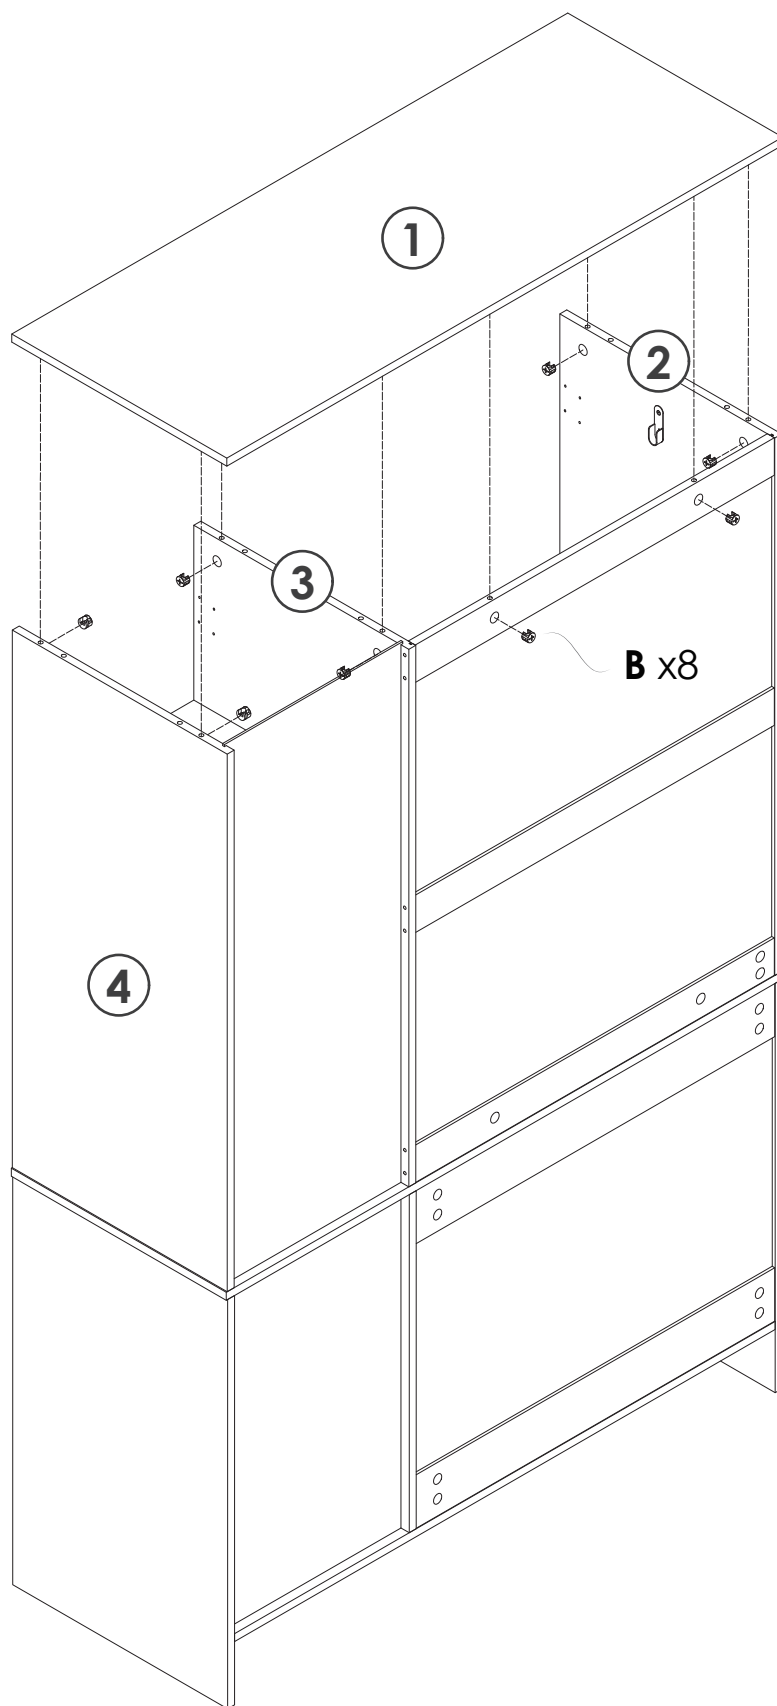

36

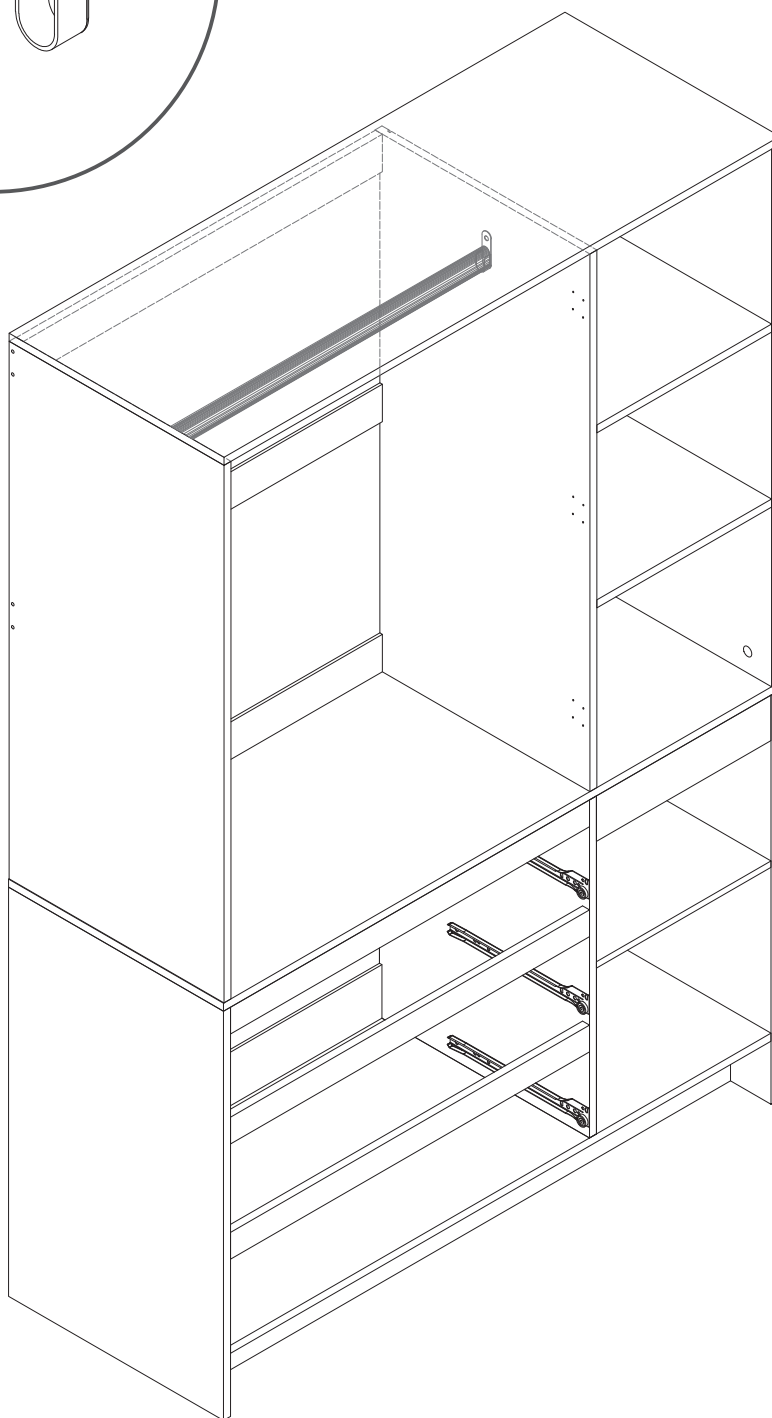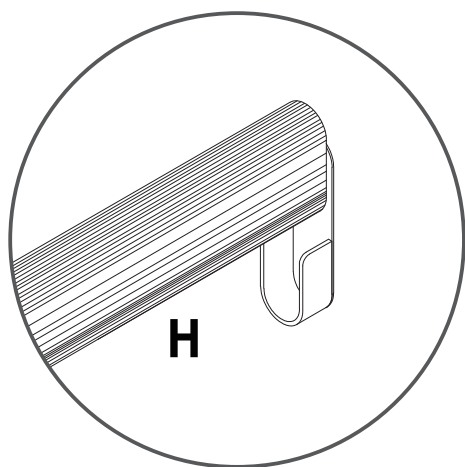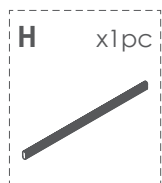   


37

C x4pcs




M3.5*14mm

 
J x2pcs

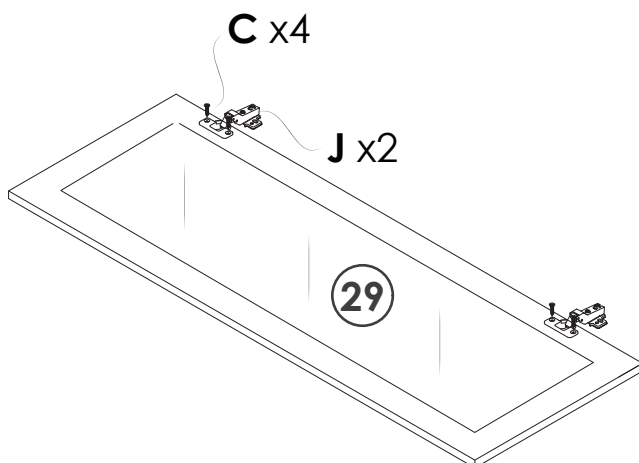

J

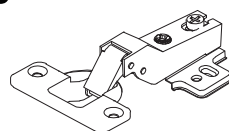 

K


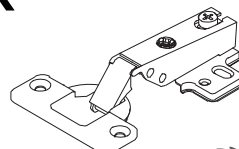 


38

C x8pcs



  M3.5*14mm

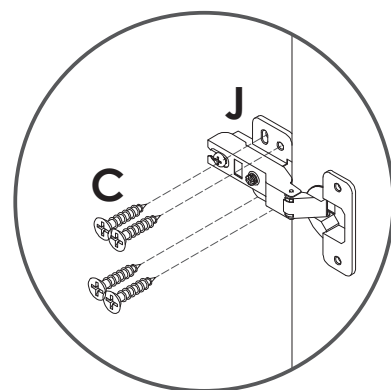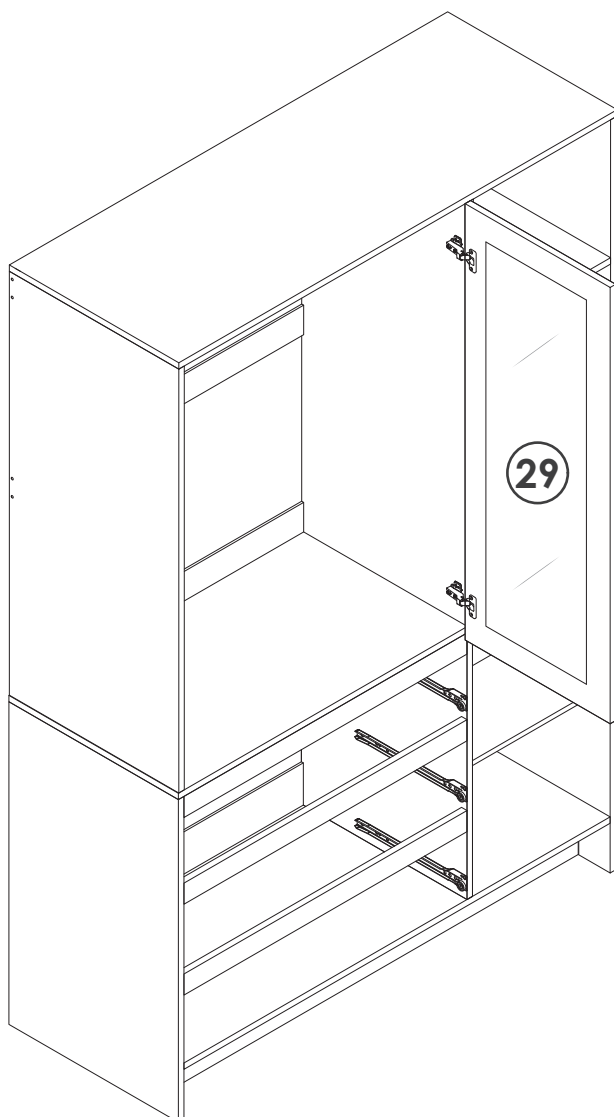

39

C x4pcs

 


M3.5*14mm



K x2pcs



K

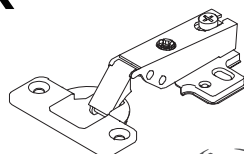

J

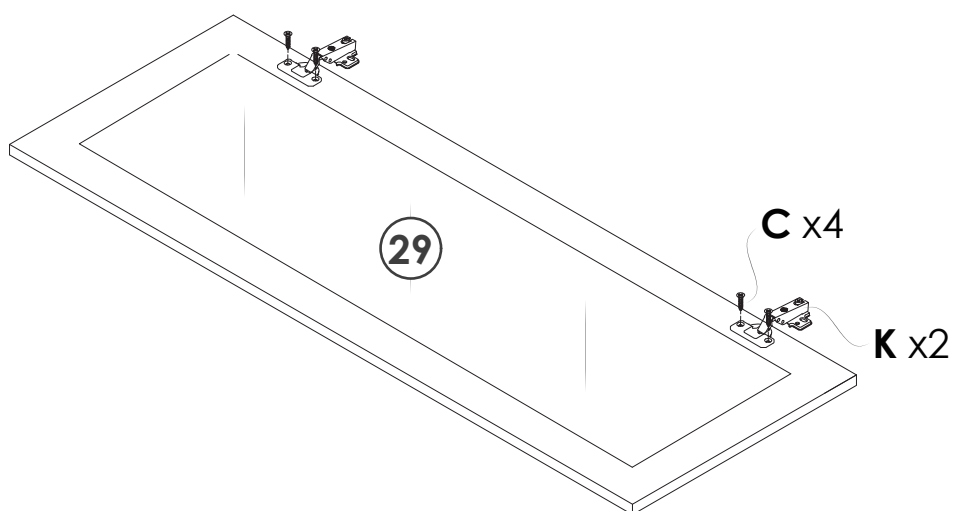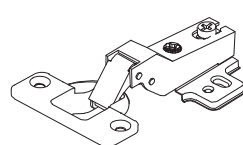  

40

C x4pcs

 


M3.5*14mm



K x2pcs



K

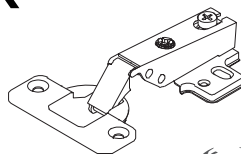

J

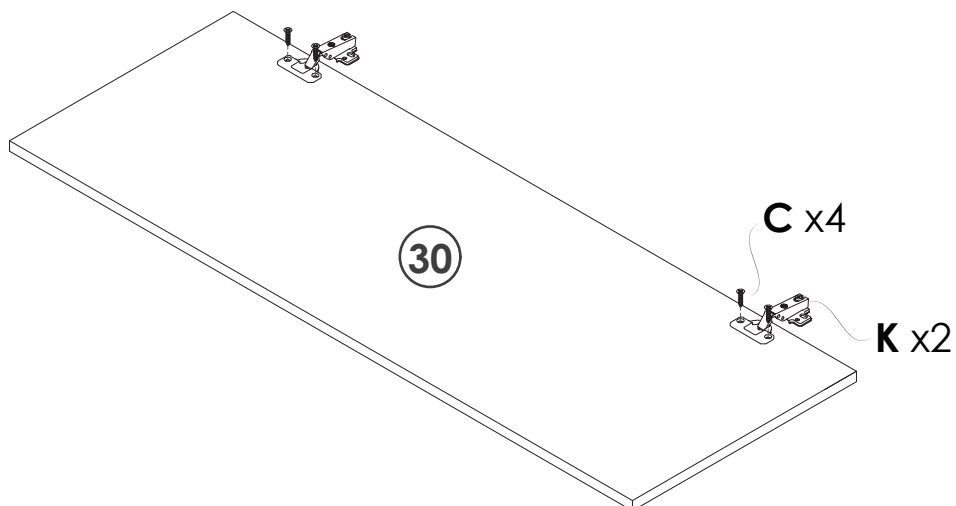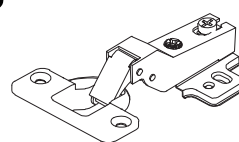  

41

C x4pcs

 


M3.5*14mm



K x2pcs



K

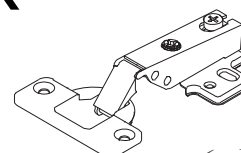

J

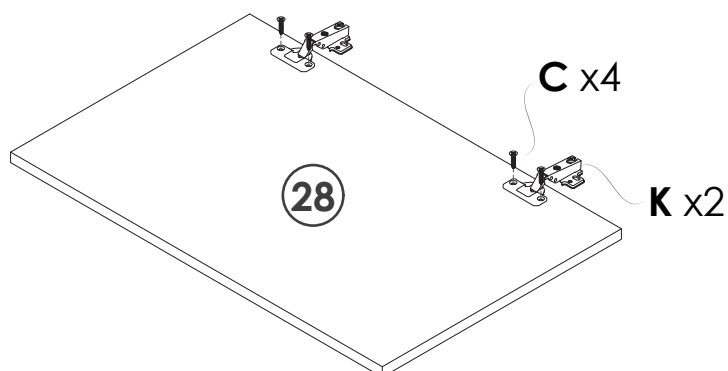 
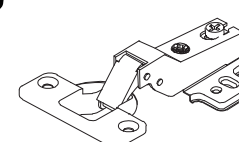 


42

C x24pcs



























  M3.5*14mm

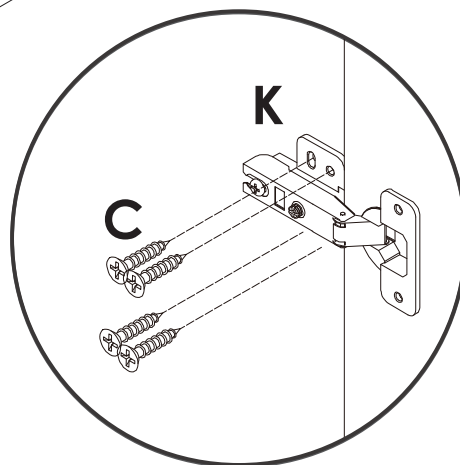
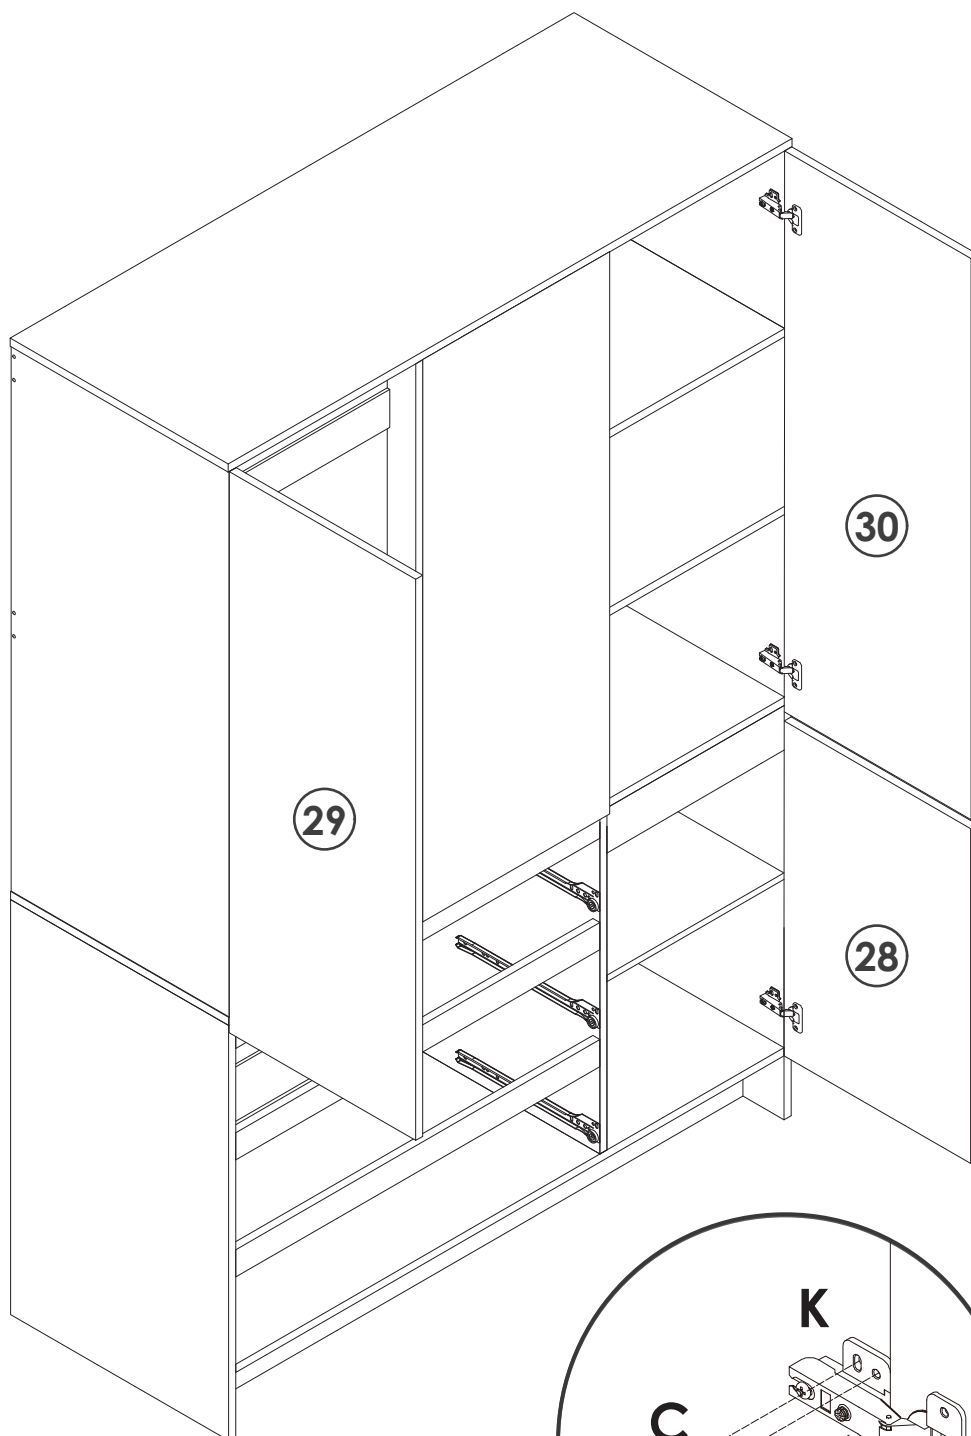


The ways to adjust the door

                        - Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.

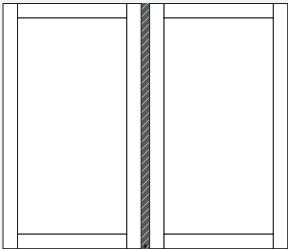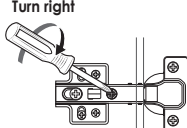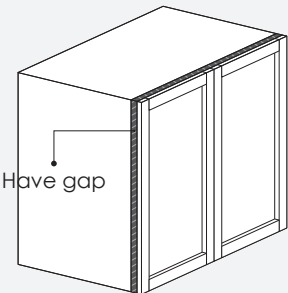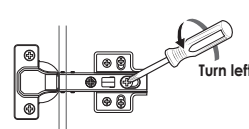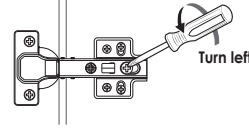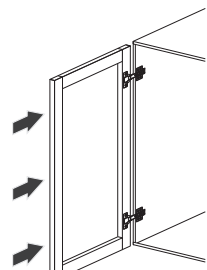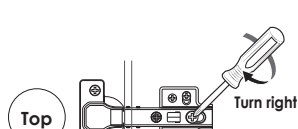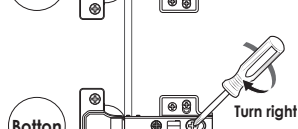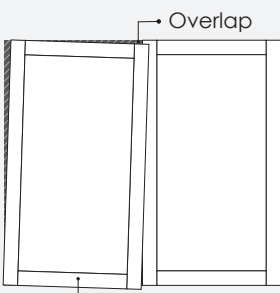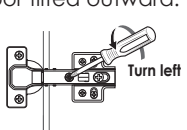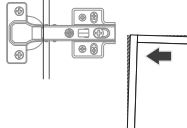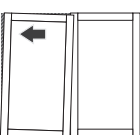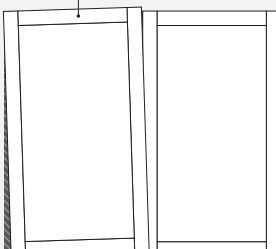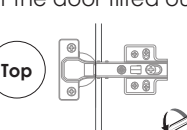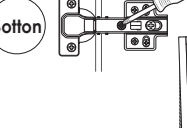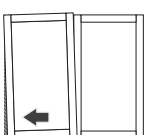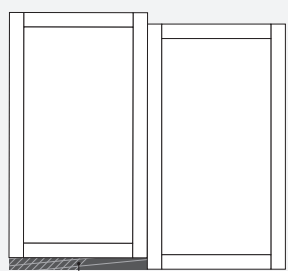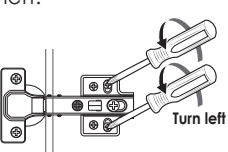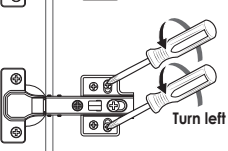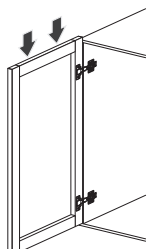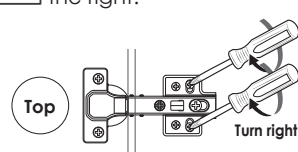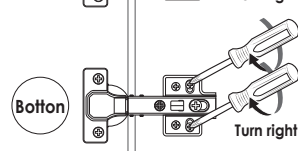
Obvious gaps between doors or Doors don't look closed  Have gap	1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little. Top  Turn right Bottom  Turn right The left door  Top  Turn right Bottom  Turn right The right door  * If the 2 doors are overlap, please turn the "internal & external screw" to the left.		
When door is crooked  Have gap	1 Rotate the "front and rear screws to the left. Top  Turn left Bottom  Turn left *After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.	2 Push the door to the cabinet. 	3 Rotate the "front and rear screws to the right. Top  Turn right Bottom  Turn right
When door is leaning  Overlap Protruding to the underside	Turn "internal & external screw" to the left can make the top of the door tilted outward. Top  Turn left Bottom  Turn left 	Protruding to the upside  Overlap	Turn "internal & external screw" to the left can make the bottom of the door tilted outward. Top  Turn left Bottom  Turn left 
When the door is higher on top  Have gap	1 Turn "up & down screw" to the left. Top  Turn left Bottom  Turn left	2 Lower the door's height so that 2 doors are of the same height. 	3 Turn "up & down screw" to the right. Top  Turn right Bottom  Turn right *If the door is lower on bottom, please lift up the left door slightly on step 2.

  43

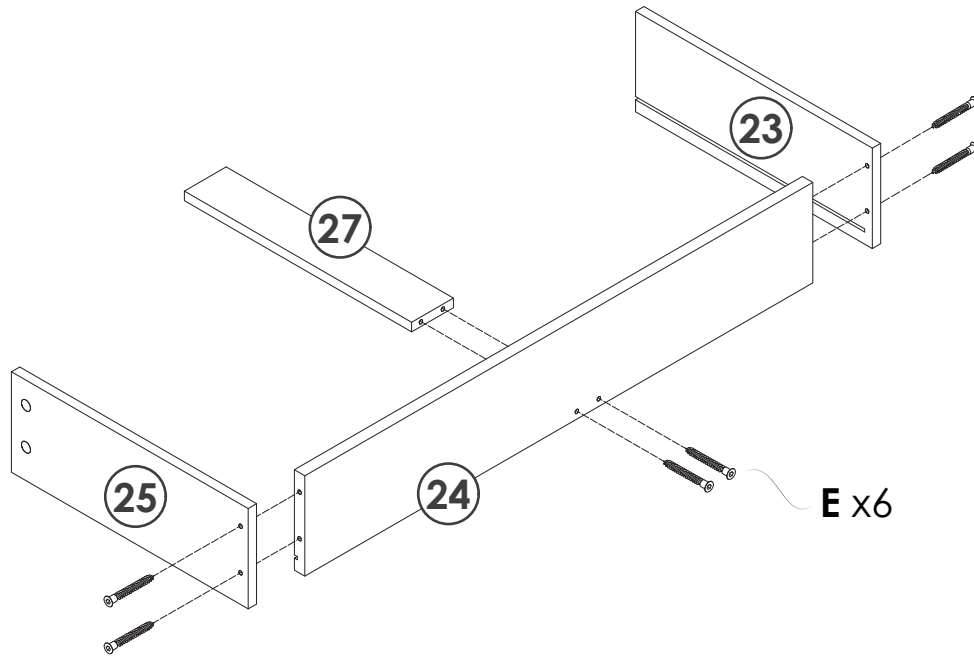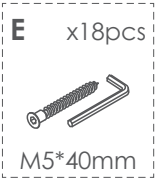



x3

 44

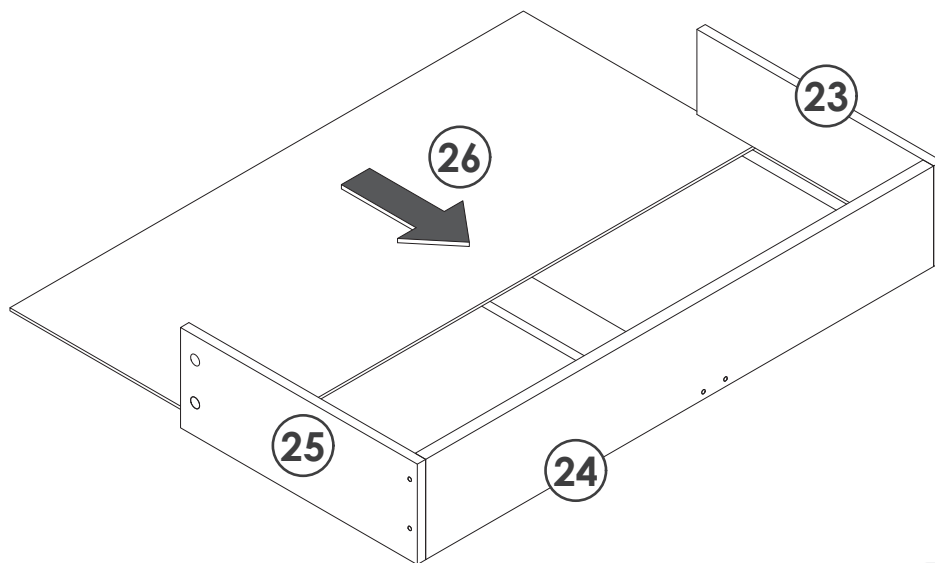



x3

  45

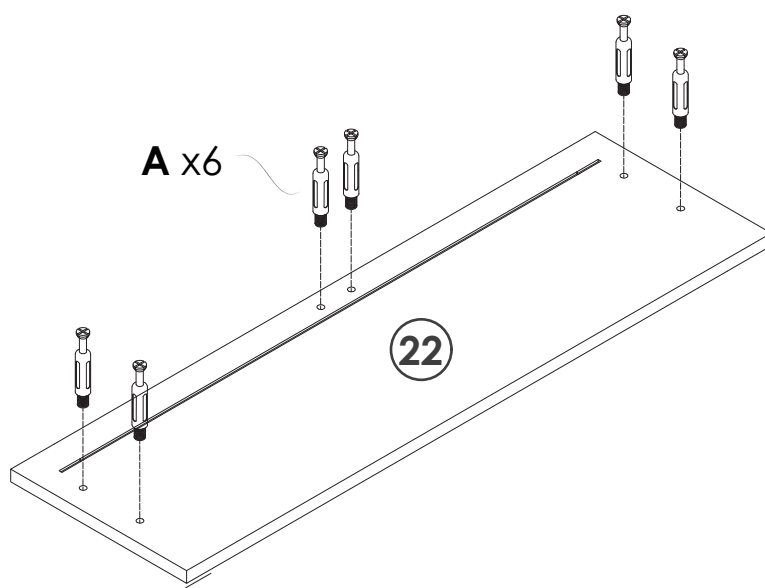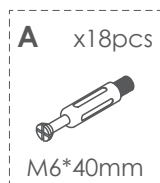

x3

  46

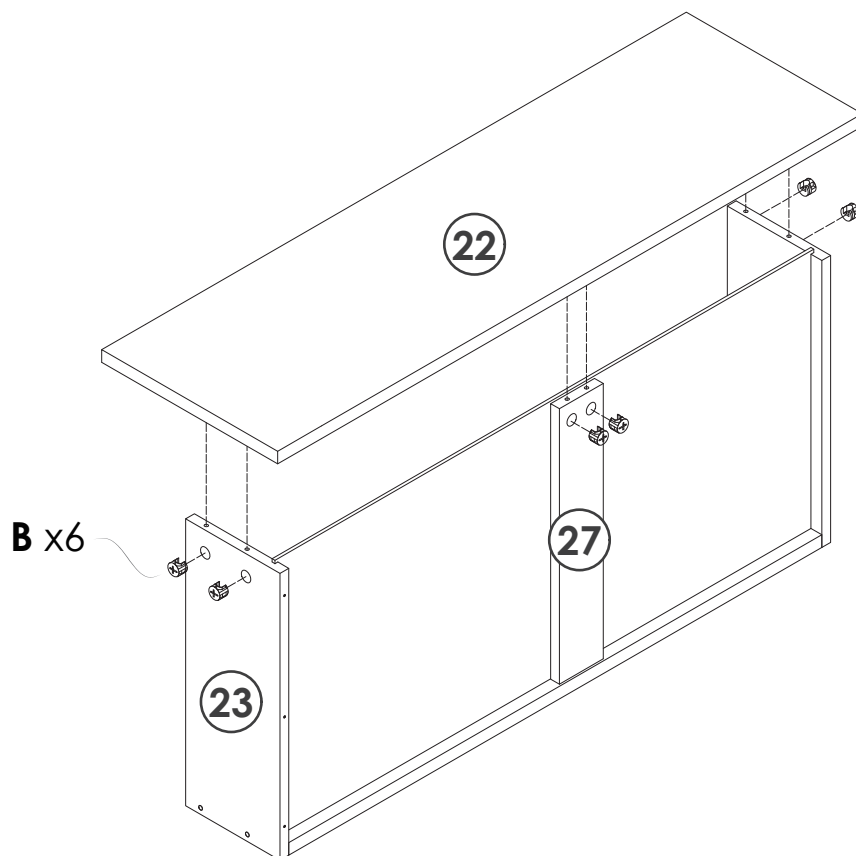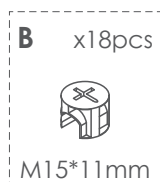

x3

47

M x18pcs



M3*12mm

L x3pcs

 


DR

L x3pcs






DL

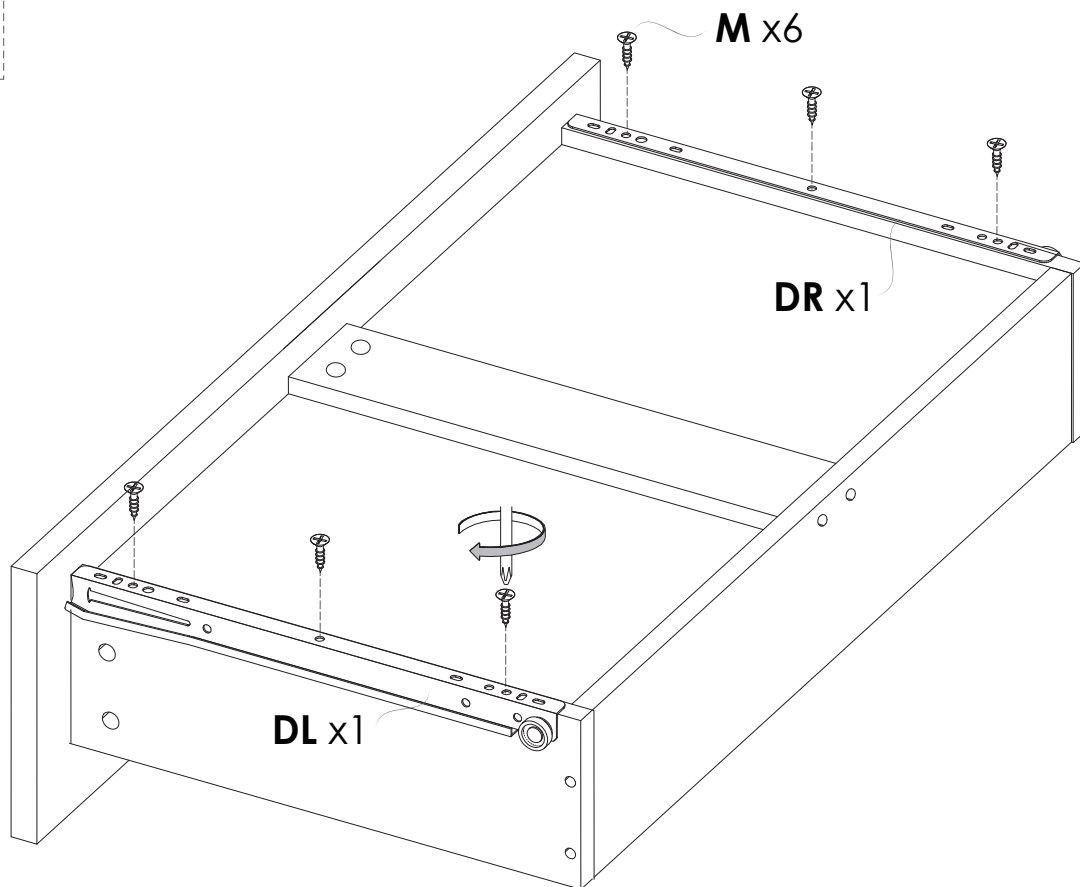

x3


48

   N x28pcs

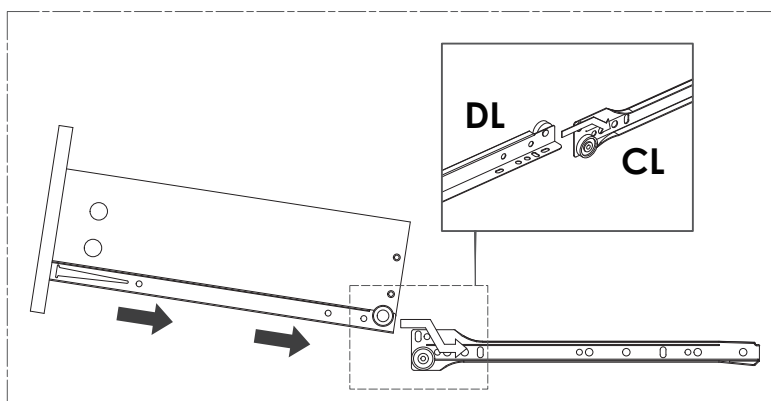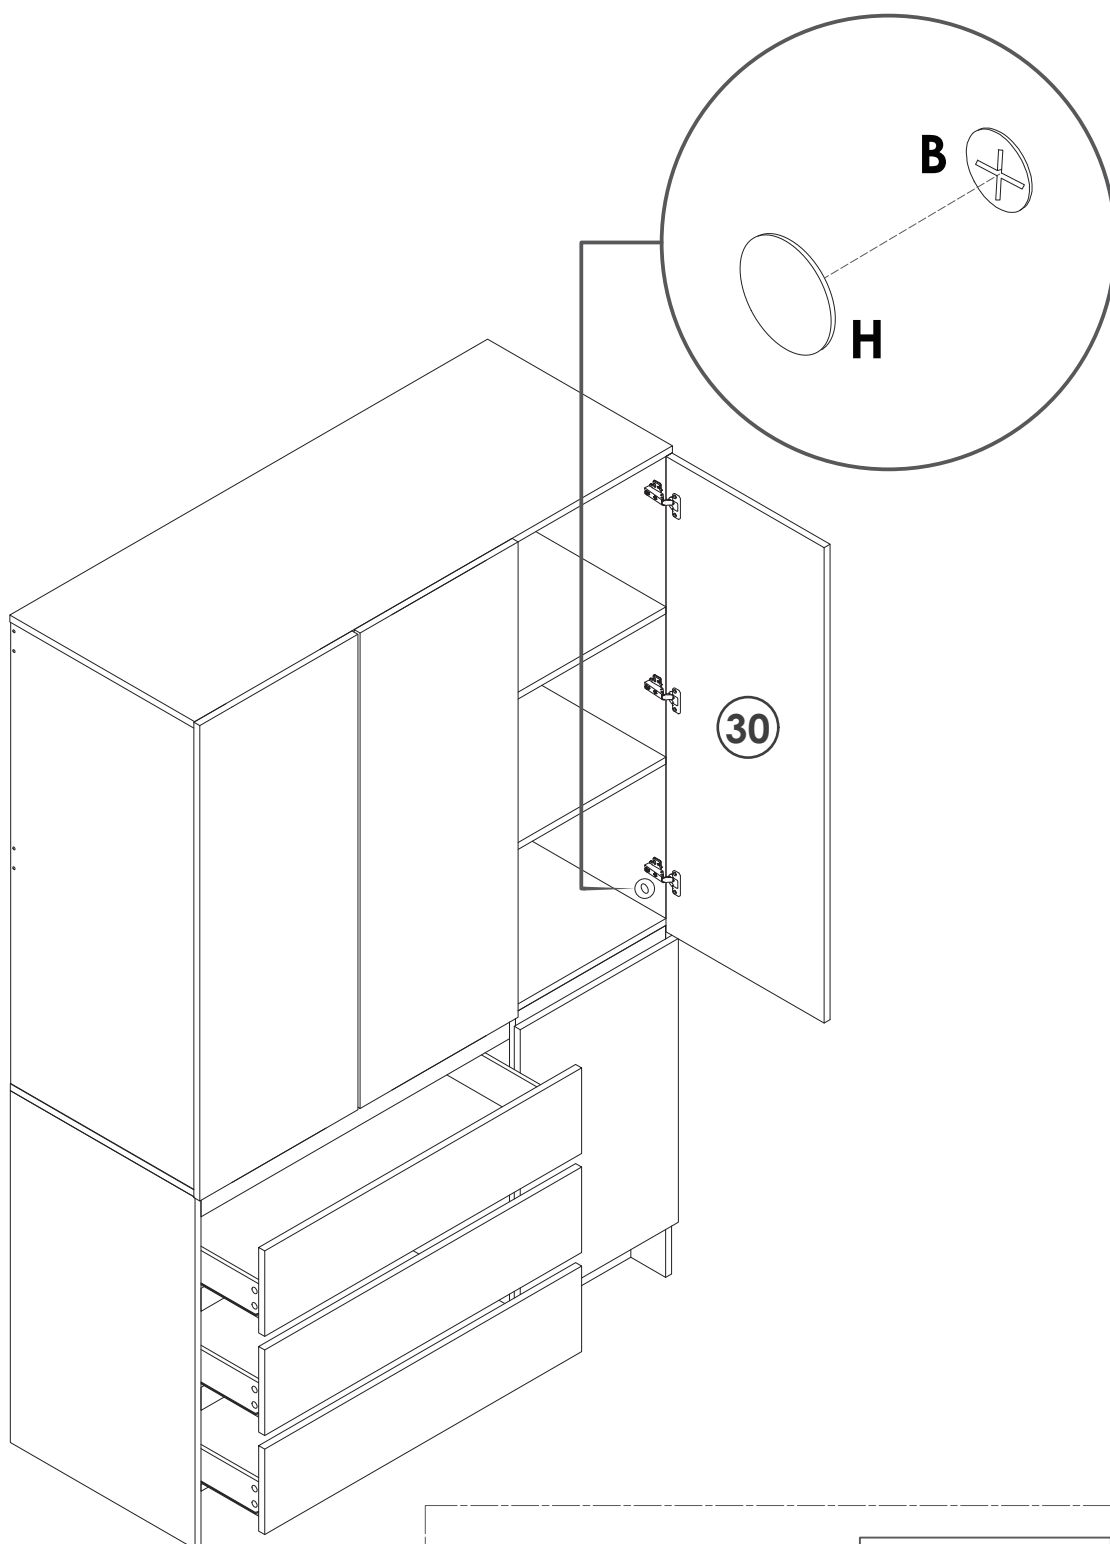


49



 
Q x1pc





R x1pc

 



Q

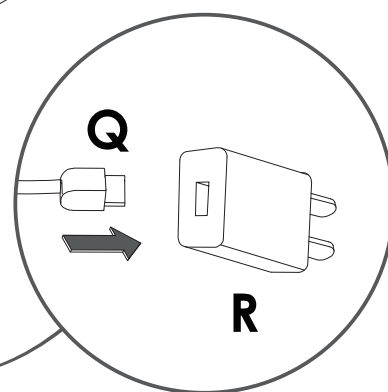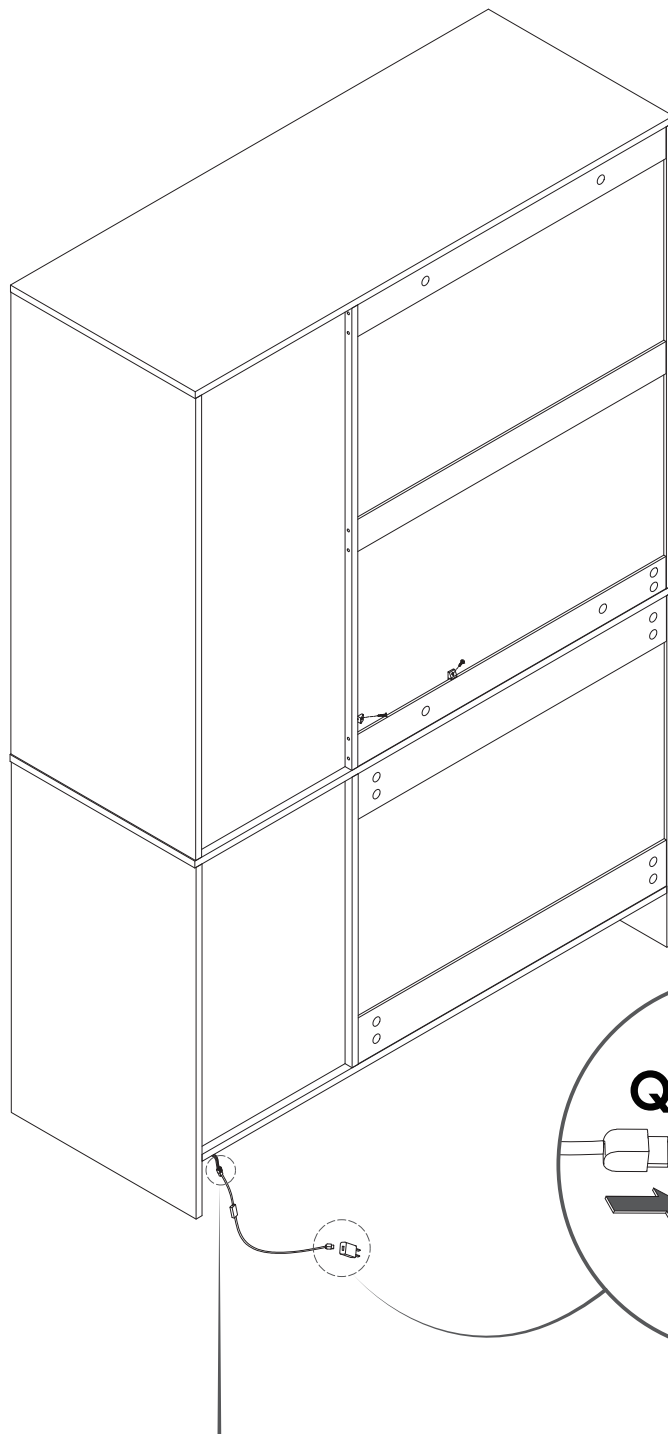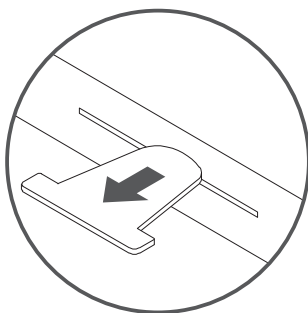   

1

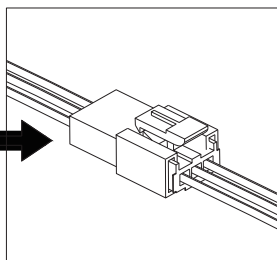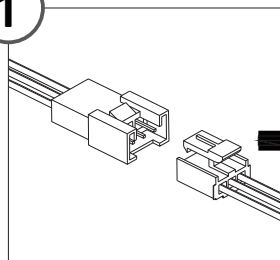  

2

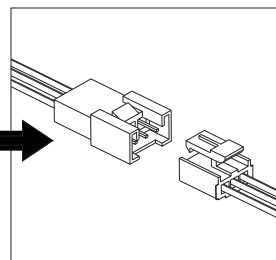 
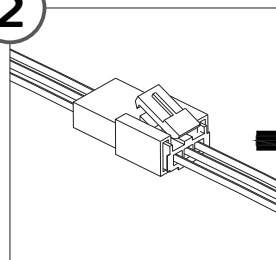 


50

P x36pcs




  M3*16mm

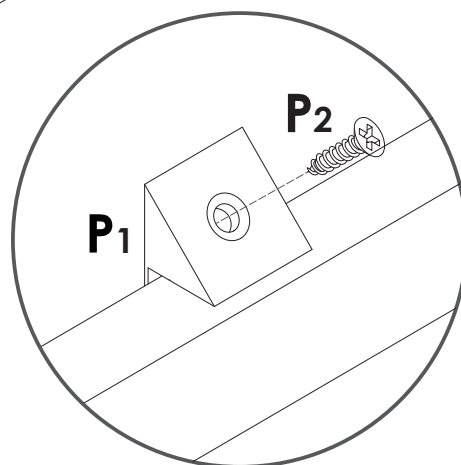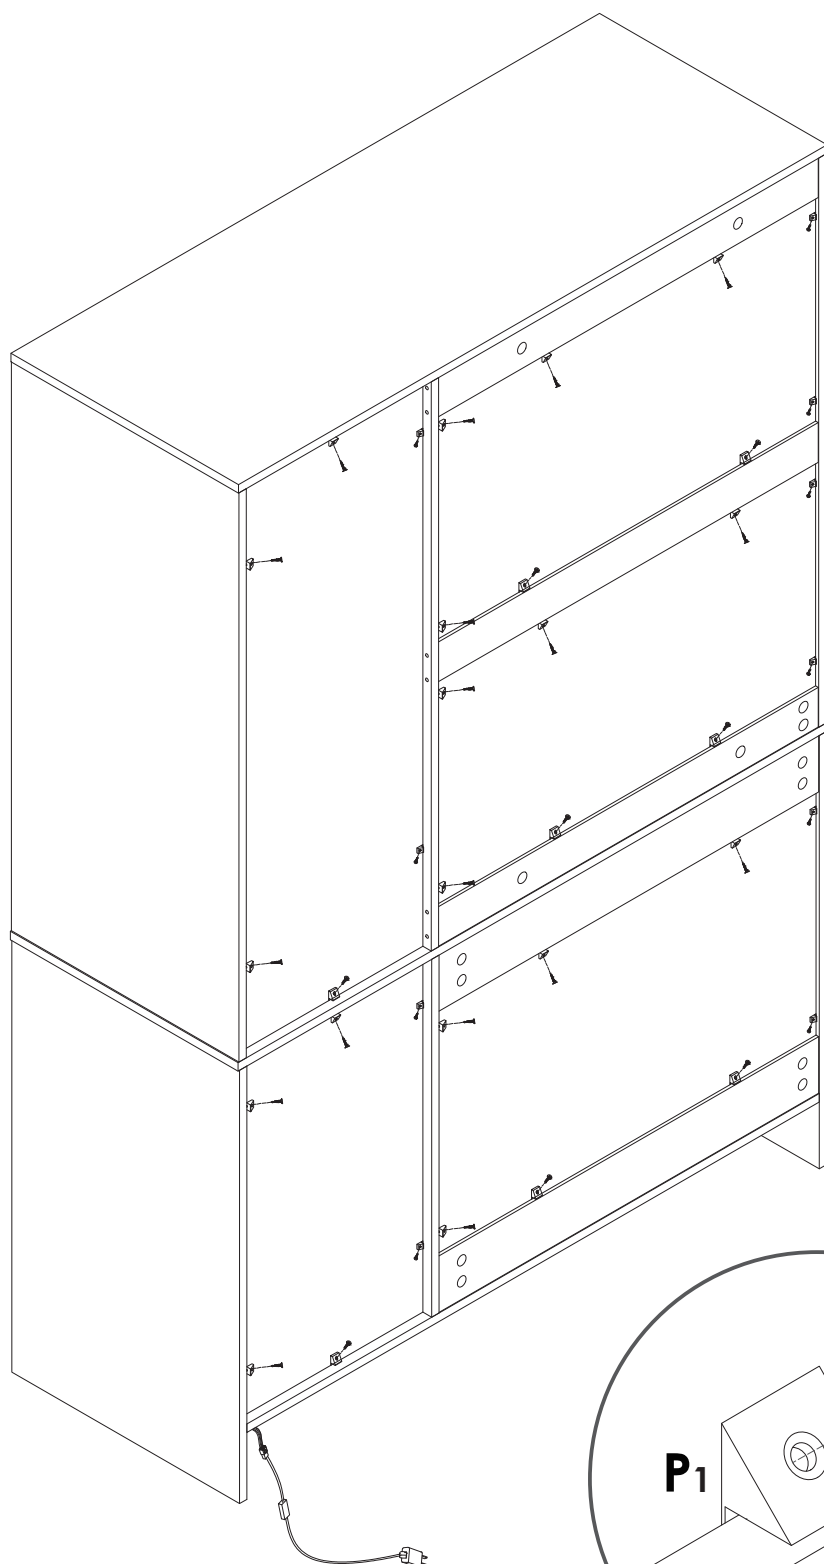

51

 Mandatory!

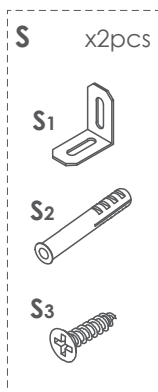

For safety reasons, we strongly recommend you follow these instructions to install the anti-tipping hardware, when installed properly, this hardware may prevent the unit from tipping unexpectedly.

⚠ WARNING

 


Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER open more than one drawer at a time.
- NEVER put a TV on this product.
- Place heaviest items in the lowest drawers.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.



This is a permanent label. Do not remove!

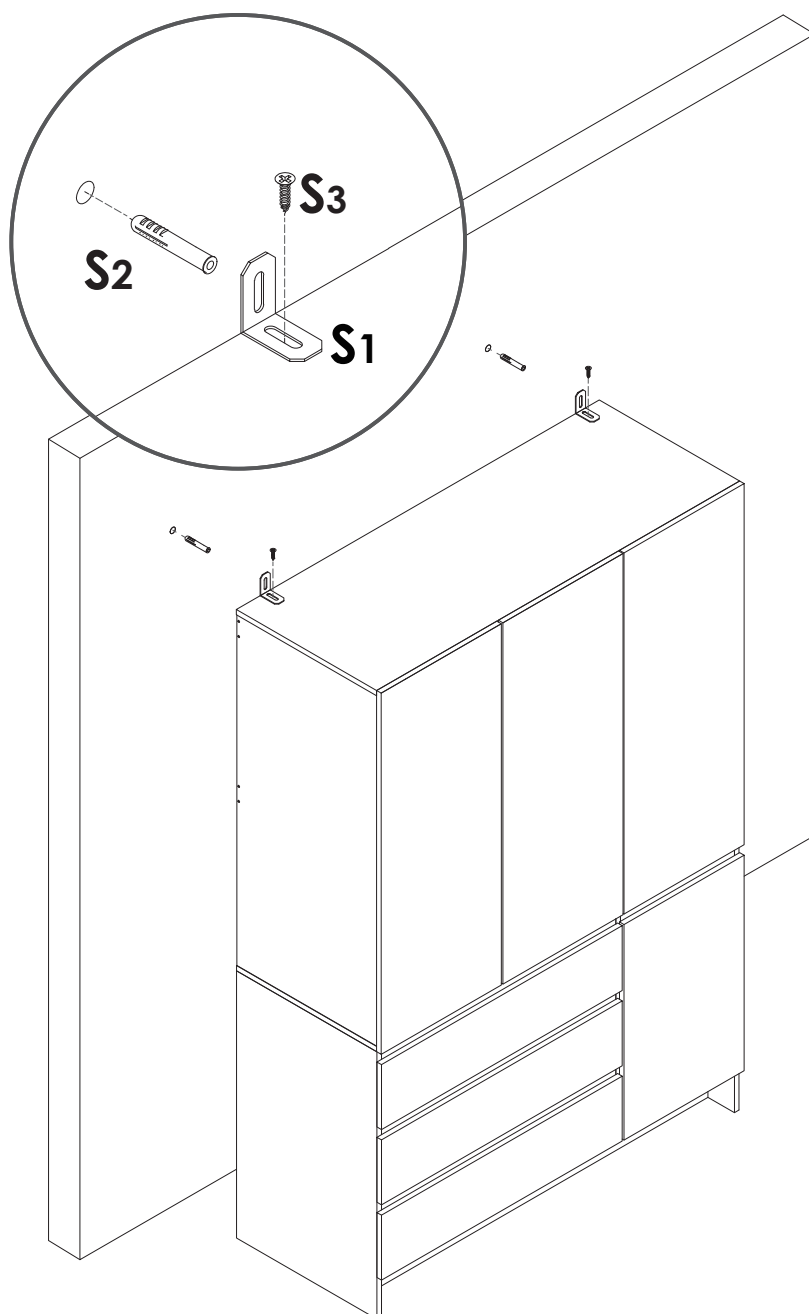


52

S x2pcs

S4



 S5

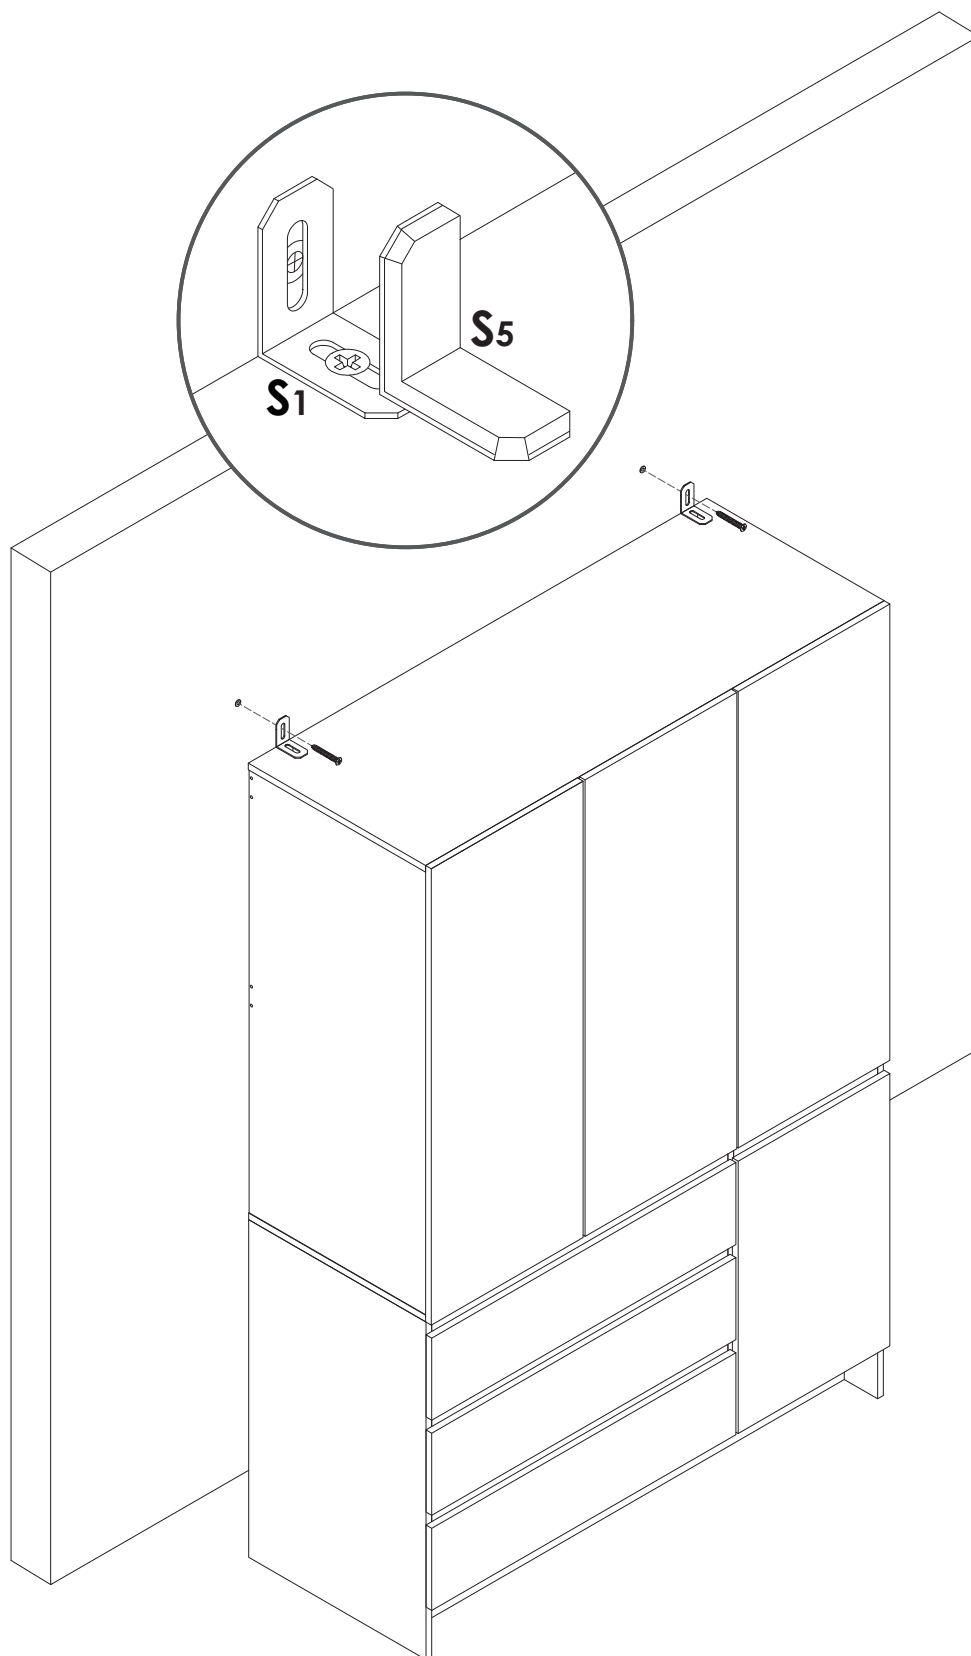

WARNING

INGESTION HAZARD: This product contains a button cell or coin battery. **DEATH** or serious injury can occur if ingested.

A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.

KEEP new and used batteries **OUT OF REACH of CHILDREN**

Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- This product contains a CR2025,DC3V coin battery. A coin battery can cause serious internal chemical burns if swallowed.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 132°F (60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Dongguan Yihong Hardware Electronics Co., Ltd

Model number: YH-252

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

