


COASTER[®]
FINE FURNITURE

100772/101772

WHEAT BACK DINING CHAIR WITH
F.R. FOAM CUSHION SEAT

ASSEMBLY INSTRUCTION

COASTER FINE FURNITURE

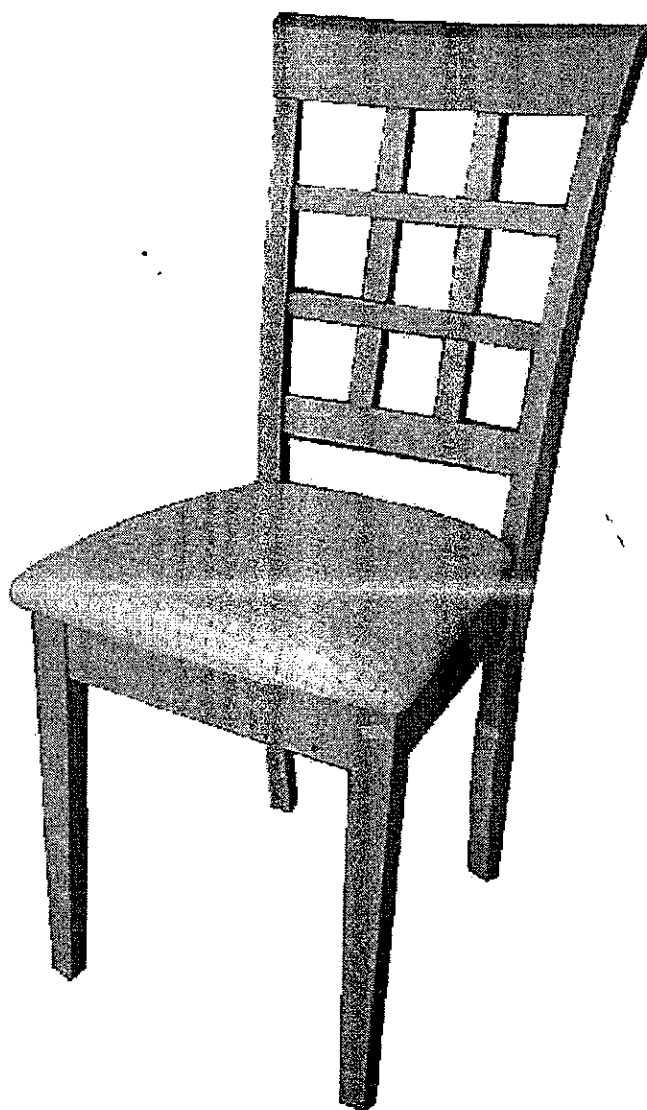

www.coastercompany.com

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS :

 
1. Remove hardware from plastic bag and sort by size.
2. Please check to see that all hardware and part are present prior start of assembly.
3. Please follow attached intructions in the same sequence as numbered to assure fast & easy assembly.

Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION:

A. BACK MEMBER



2PCS

 B. FRONT MEMBER



2PCS

C. SIDE PANEL



4PCS

D. CUSHION SEAT




2PCS


HARDWARE PACKAGE:

NO	DESCRIPTION	FIGURE	QTY
E	ALLEN KEY M4 X 110MM		1PC
F	JCBC BOLT M6 X 50MM		12PCS
G	SPRING WASHER 1/4"		12PCS
H	PH CBS SCREW #8 X 1"		8PCS


STEP 1

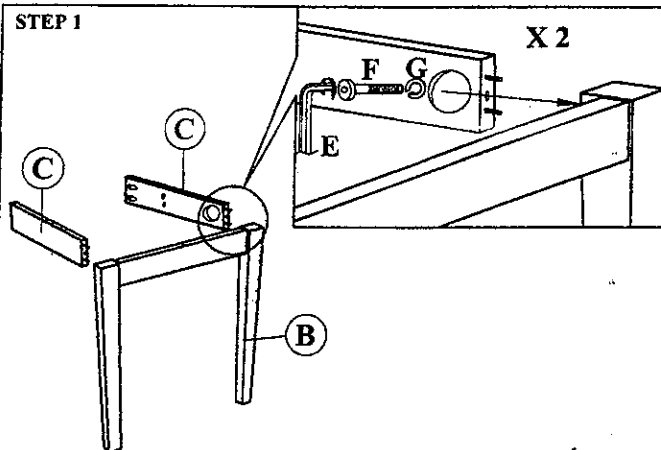

STEP 2

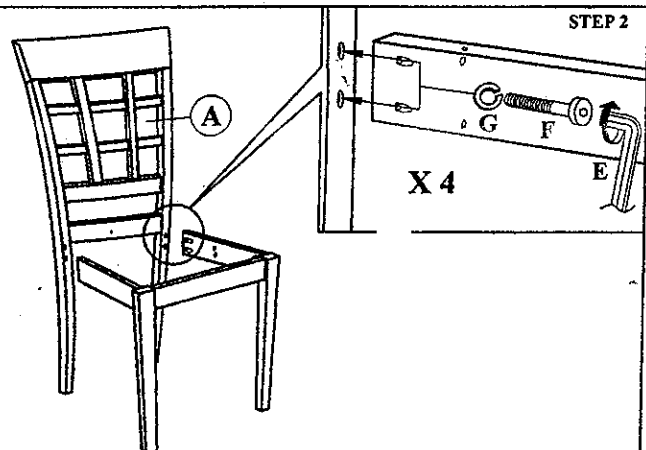

STEP 3

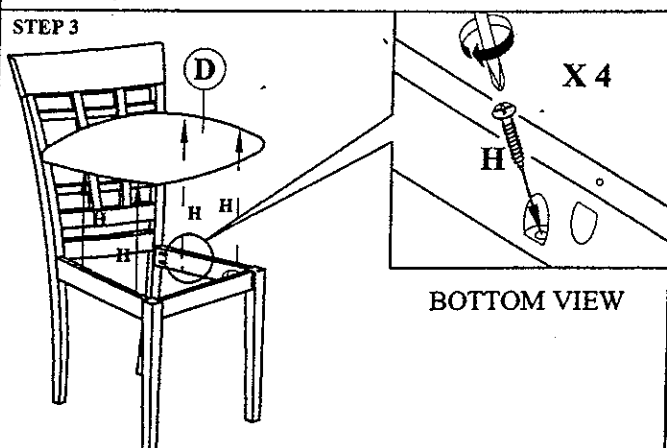

BOTTOM VIEW

