 


Specifications


| | |
|----------------------|--|
| Max. Weight Capacity | 110 lbs (50kg) |
| Speed | 25mm/s |
| Input Voltage | 120 V |
| Min. Height | 28.5" (724mm) |
| Max. Height | 47.2" (1200mm) |
| Duty Cycle | 10% (Working 2 minutes then stop 18 minutes) |
| Certification | FCC |

Accessory Package


PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, please contact us for replacement parts.

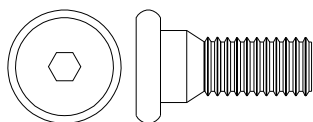

 
A. 3/4" Medium Machine Screw - 8

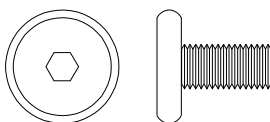

 
B. 1/2" Small Machine Screw - 10



 
C. 9/16" Medium Wood Screw - 12



 
D. Double End Cam Lock Screw - 3

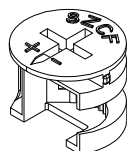

 
E. Cam Lock - 6



 F. Wood Dowel - 6



 G. Wrench - 1

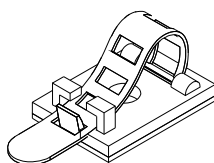


H. Self-adhesive Cable Strap - 3




I. Handset - 1



 J. 1/2" Small Wood Screw - 7

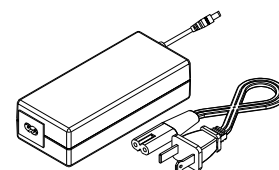

 K. Power Adapter - 1

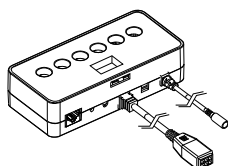


 L. Control Box - 1










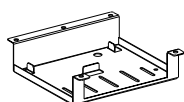


M. Spanner - 1



Diagram of Components

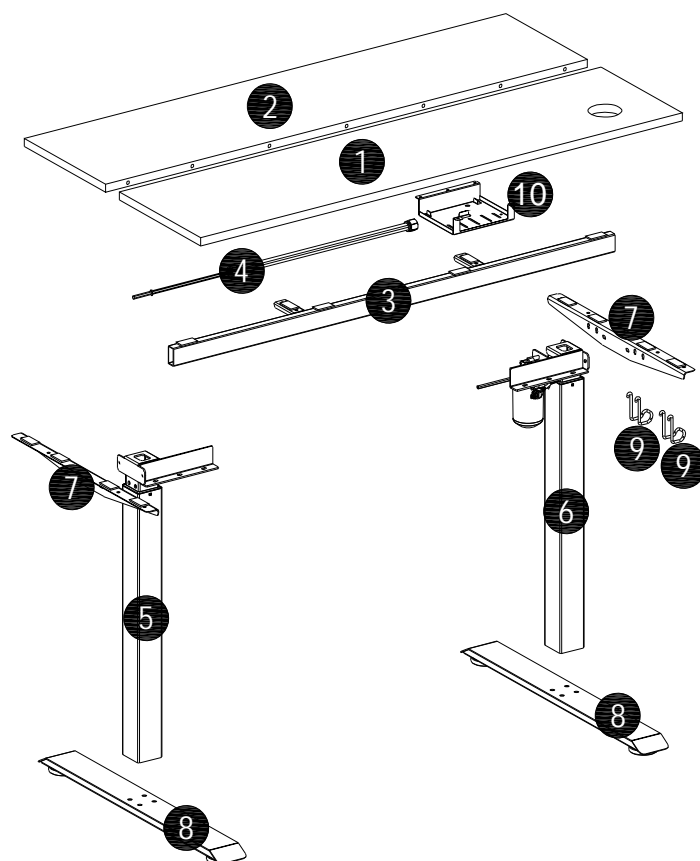


Parts Included
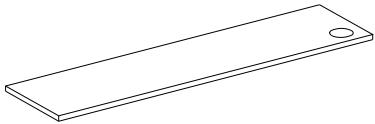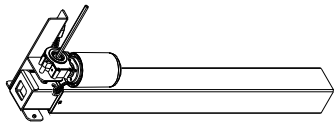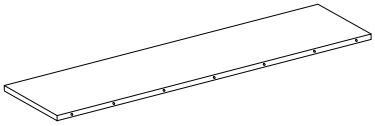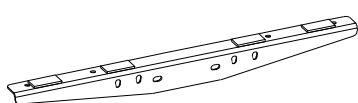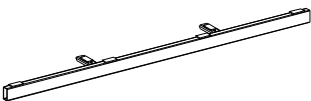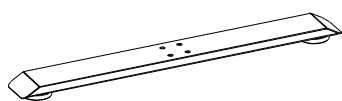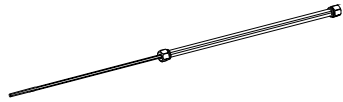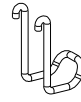
| NO. | Parts | Qty | NO. | Parts | Qty |
|-----|---|-----|-----|---|-----|
| 1 |  Tabletop | 1 | 6 |  Lifting Column with Motor | 1 |
| 2 |  Tabletop | 1 | 7 |  Support Bracket | 2 |
| 3 |  Crossbar | 1 | 8 |  Foot Bar | 2 |
| 4 |  Sync Rod | 1 | 9 |  Hook | 2 |
| 5 |  Lifting Column | 1 | 10 |  Control Box Cover | 1 |

  STEP 1

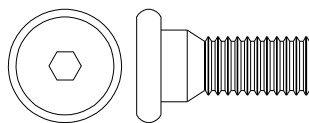
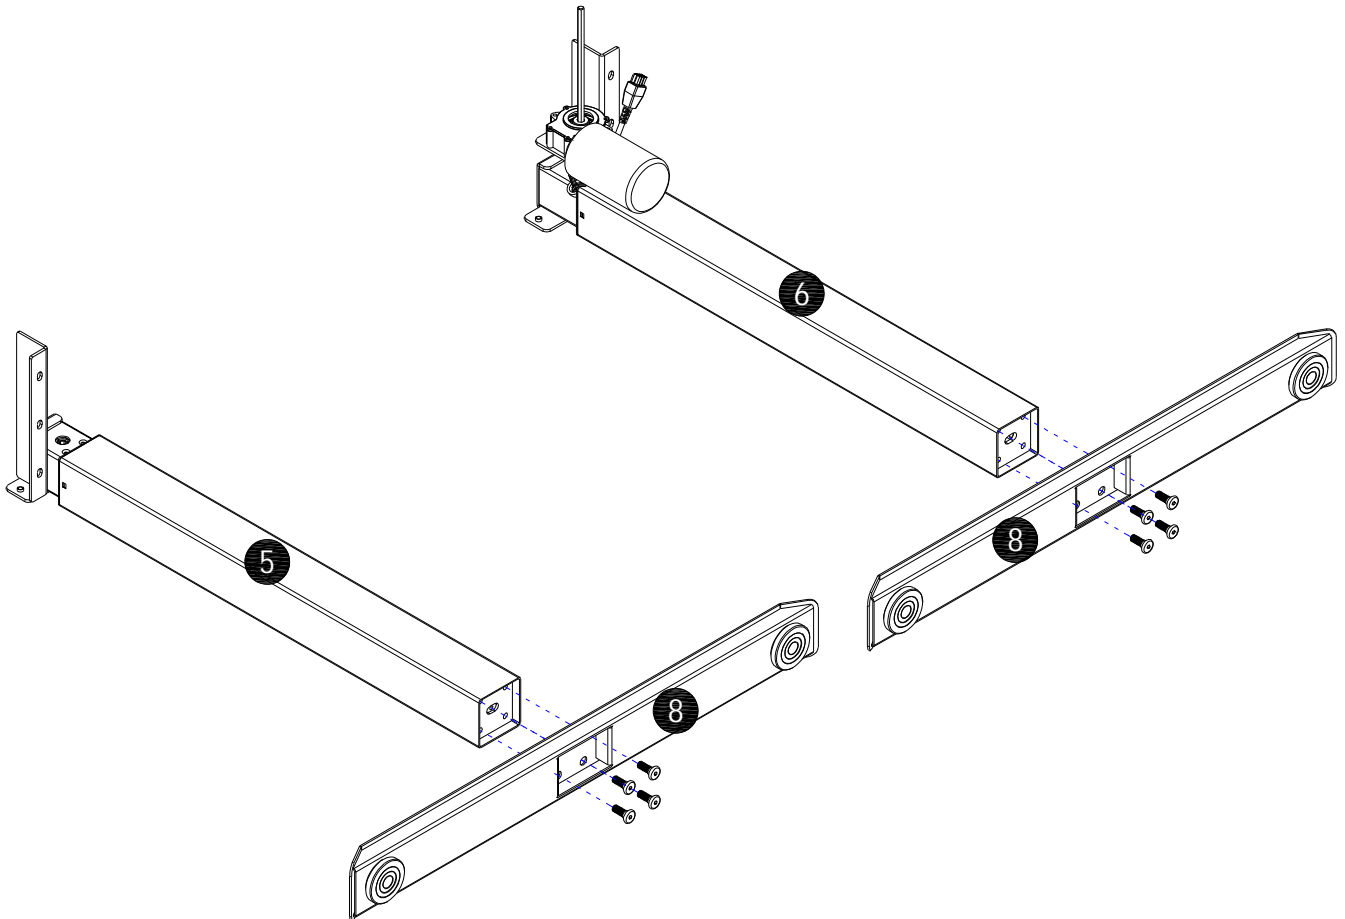


 A. 3/4" Medium Machine Screw - 8




G. Wrench - 1

  STEP 2


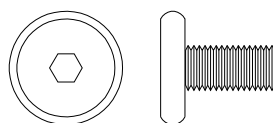
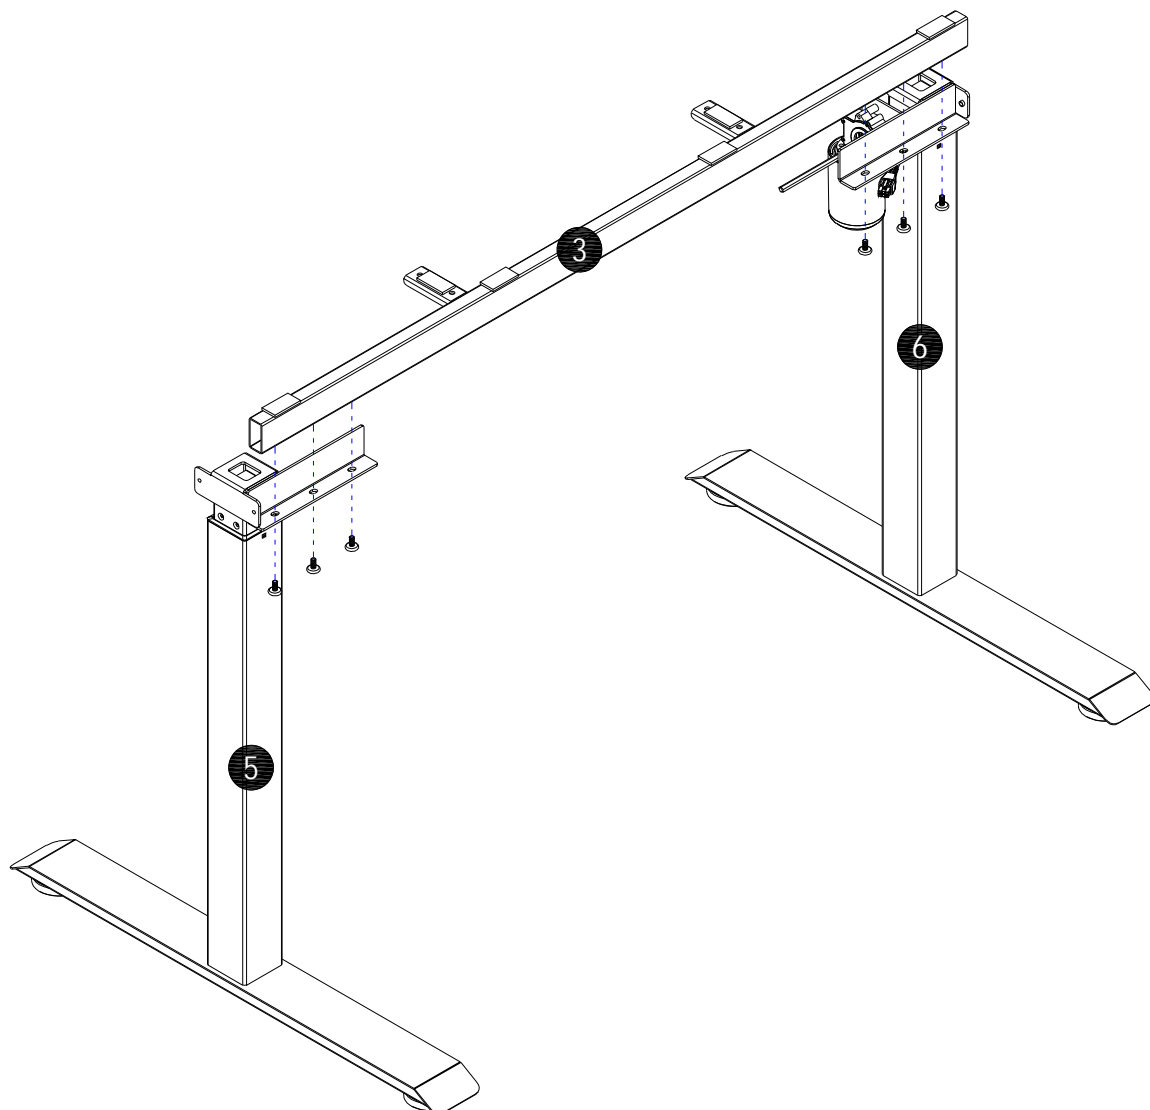


 B. 1/2" Small Machine Screw - 6




G. Wrench - 1

   STEP 3

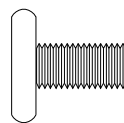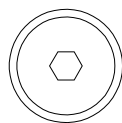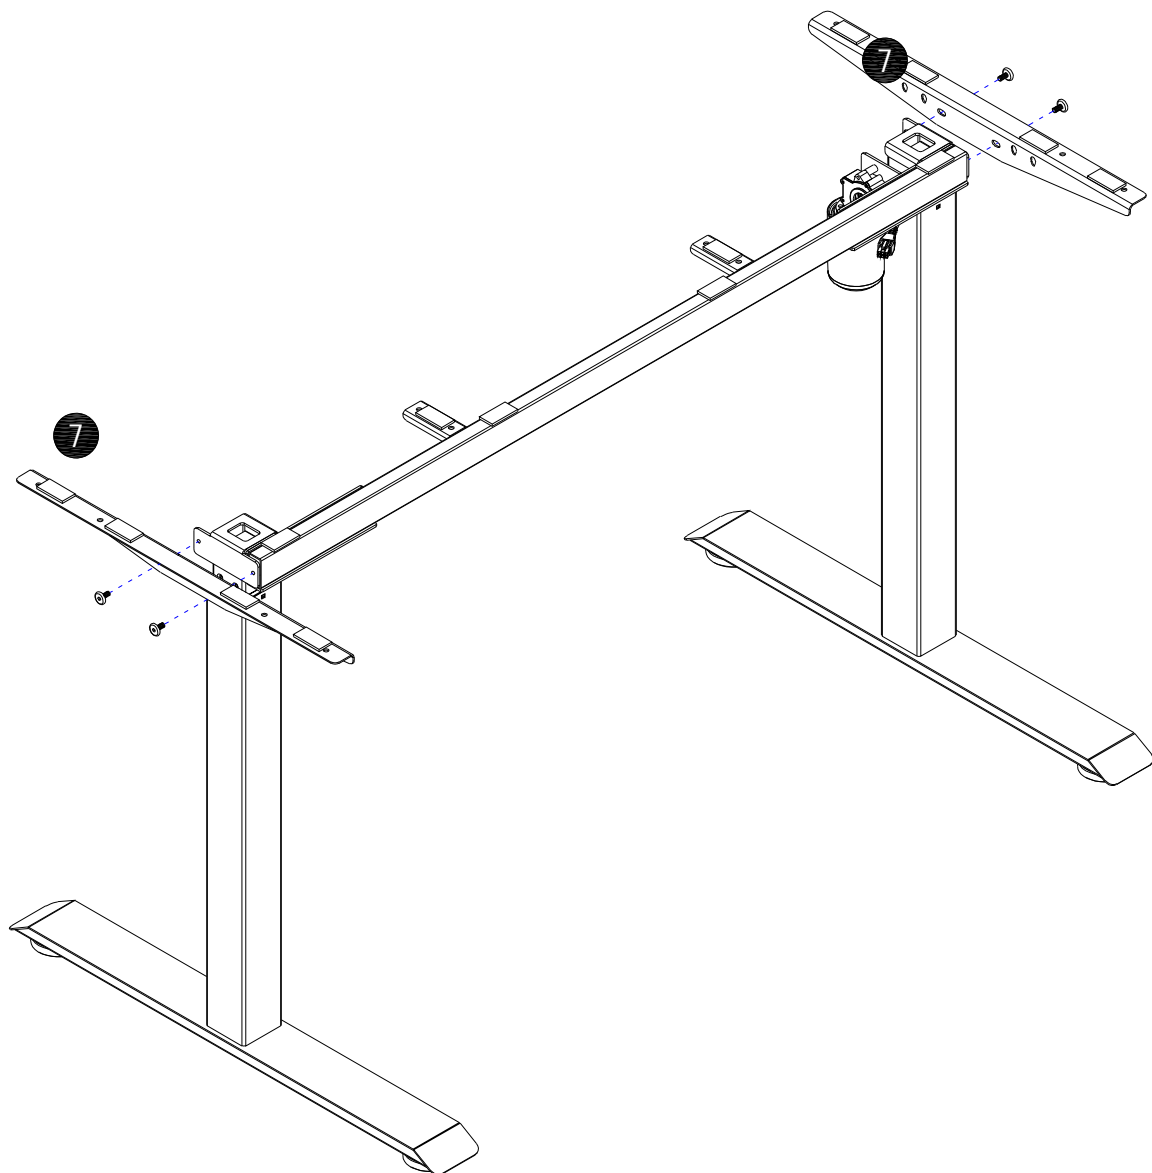

 
B. 1/2" Small Machine Screw - 4



G. Wrench - 1

STEP 4

 1. Expand the rod's length until both ends are fixed in the marked location.
2. Then expand the rod a little more until the tension creates a stable hold on both side.
3. Tighten by twisting both screw nuts.

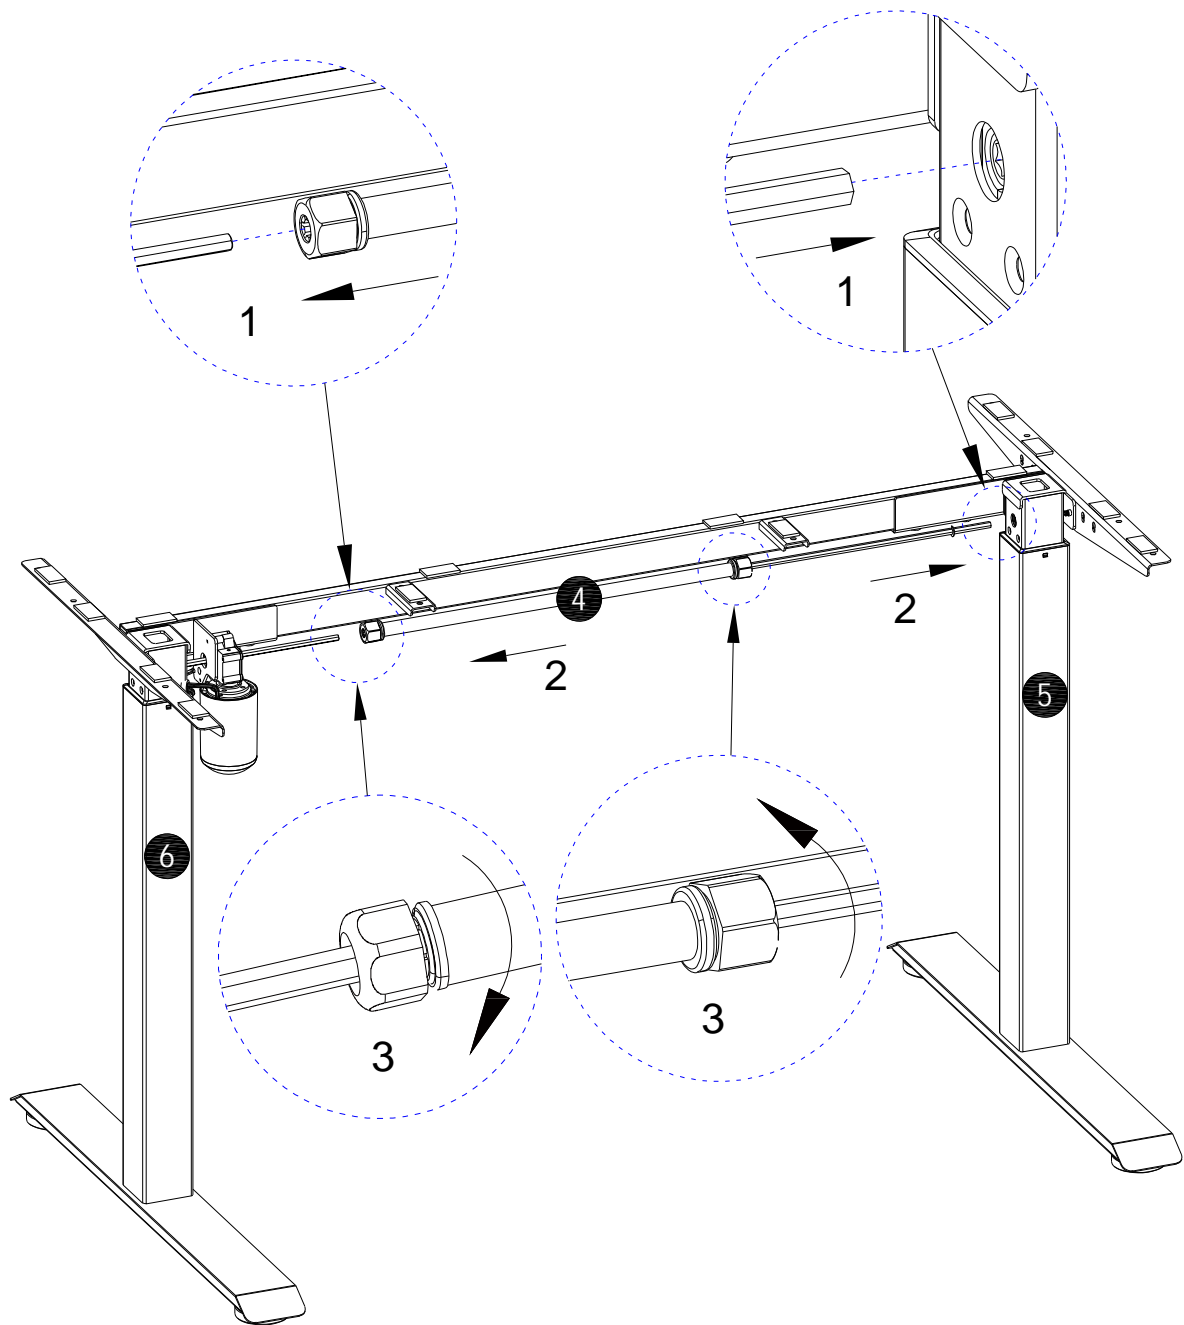


M.Spanner - 1


STEP 5



 Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.

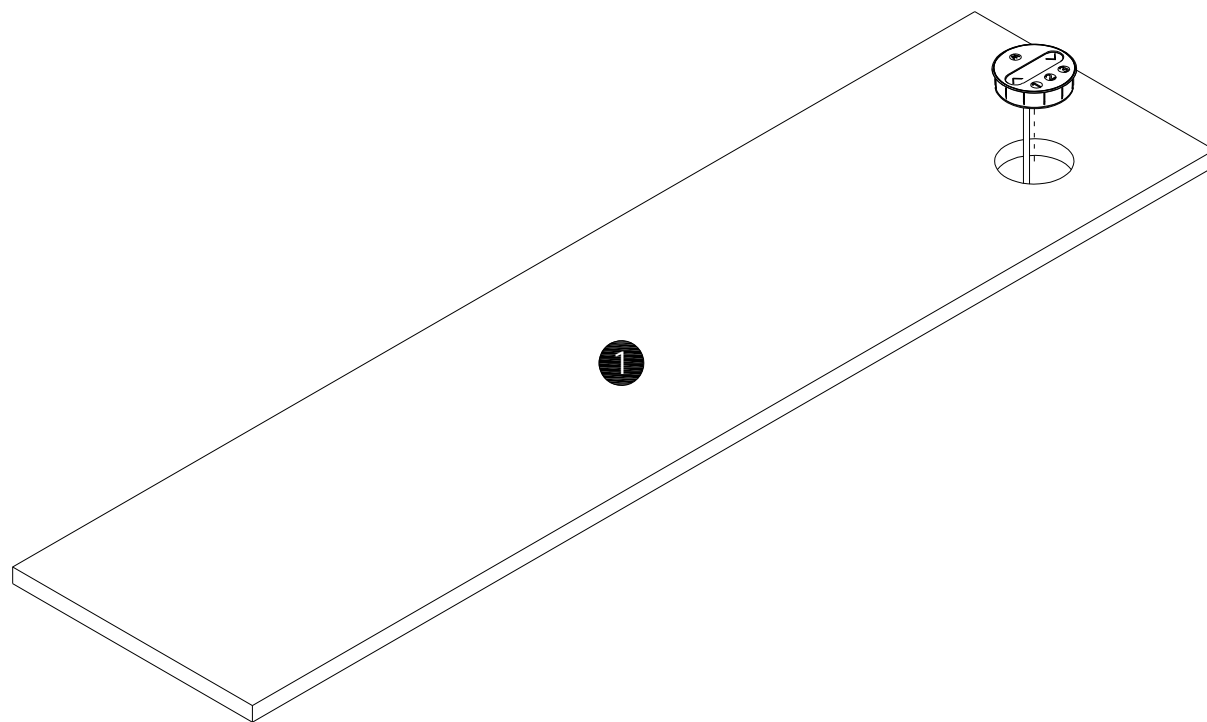

Please ensure handset right facing you

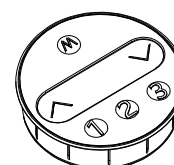 


I.Handset - 1


STEP 6



 
AVOID Excessive Tightening Screws

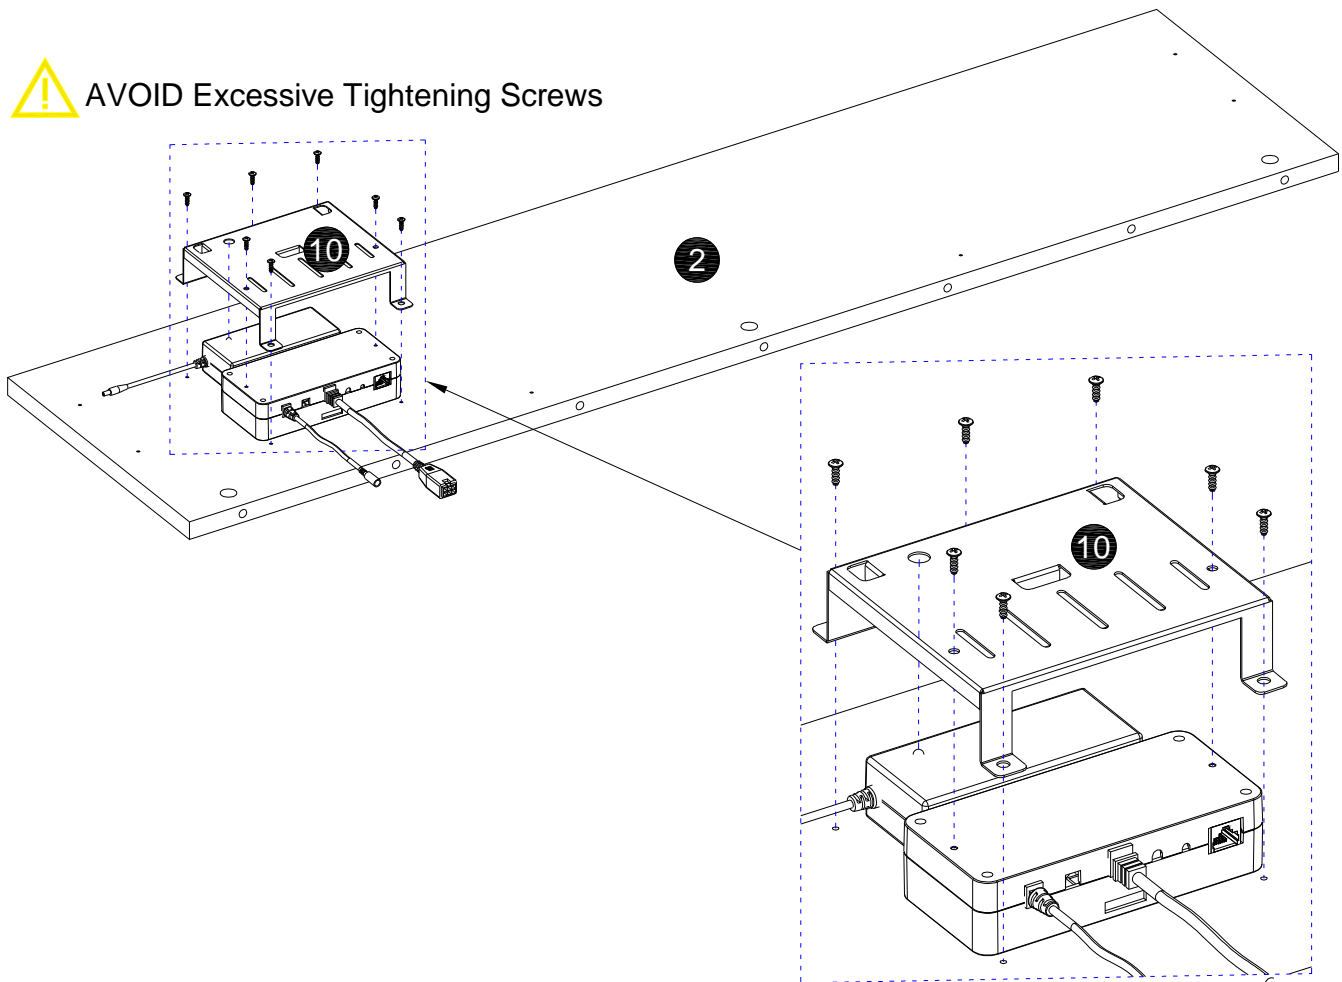

 J. 1/2" Small Wood Screw - 7

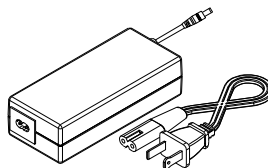


 K. Power Adapter - 1

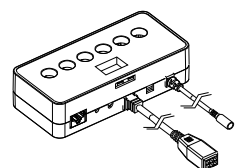


L. Control Box - 1

 
STEP 7

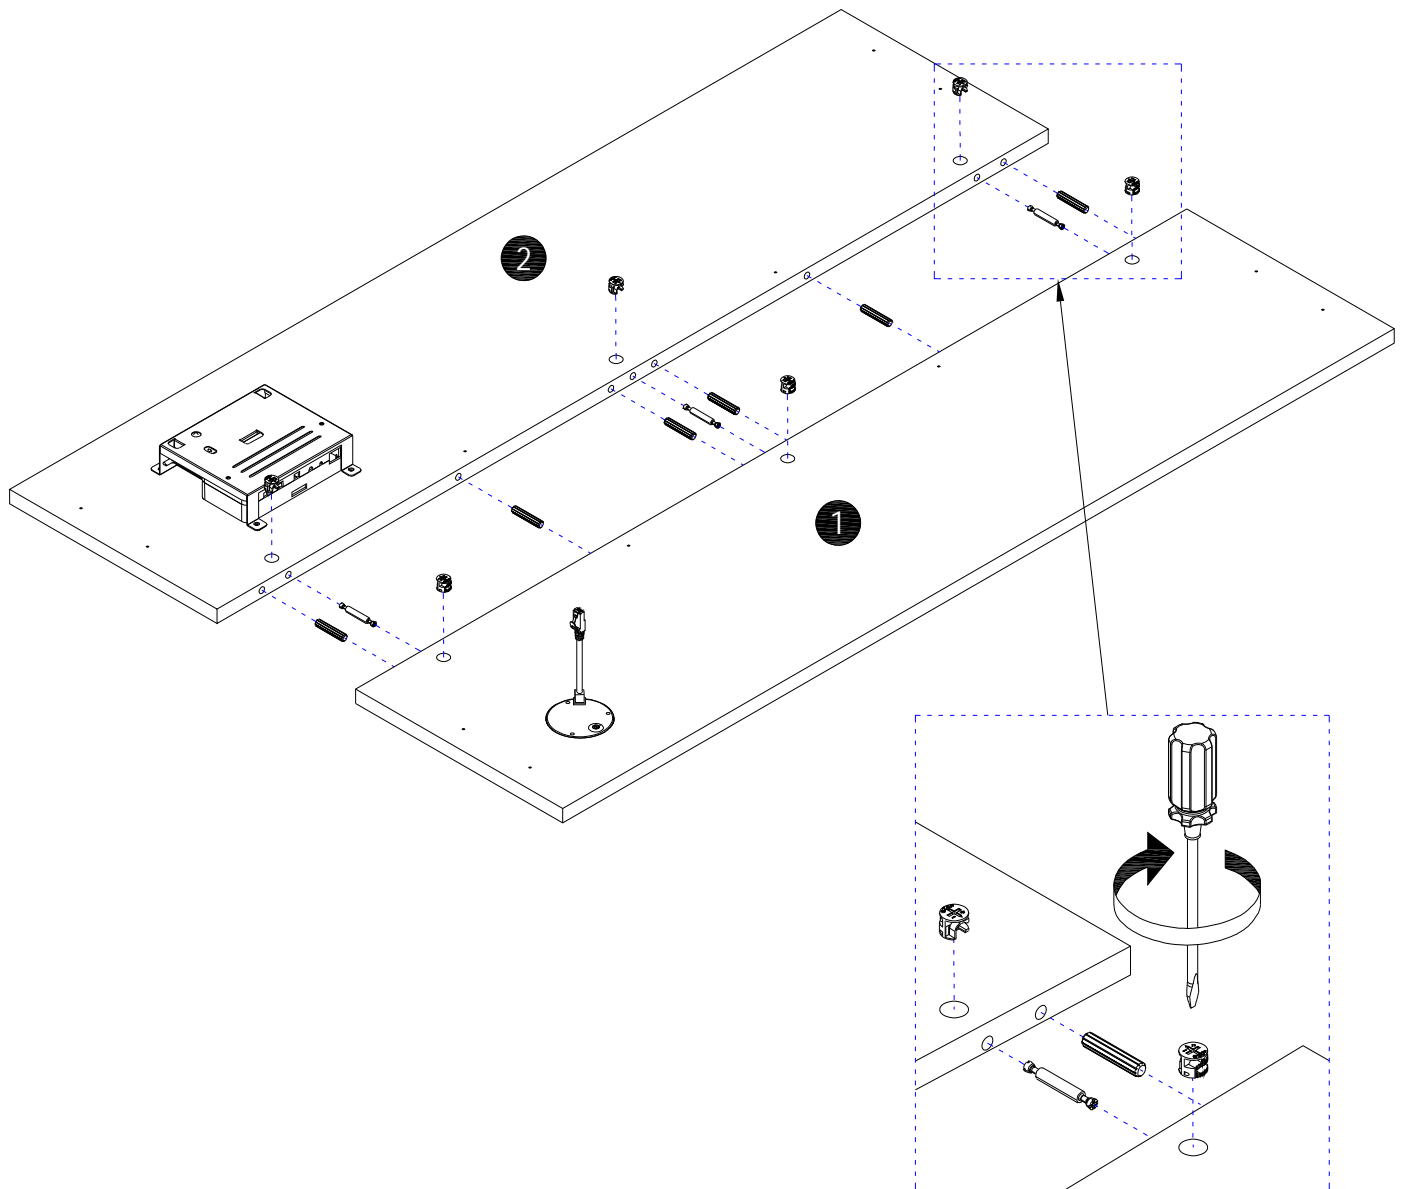

D.Double End Cam Lock Screw - 3

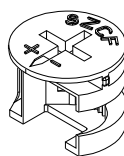 

E.Cam Lock - 6


 


F.Wood Dowel - 6

STEP 8




  AVOID Excessive Tightening Screws



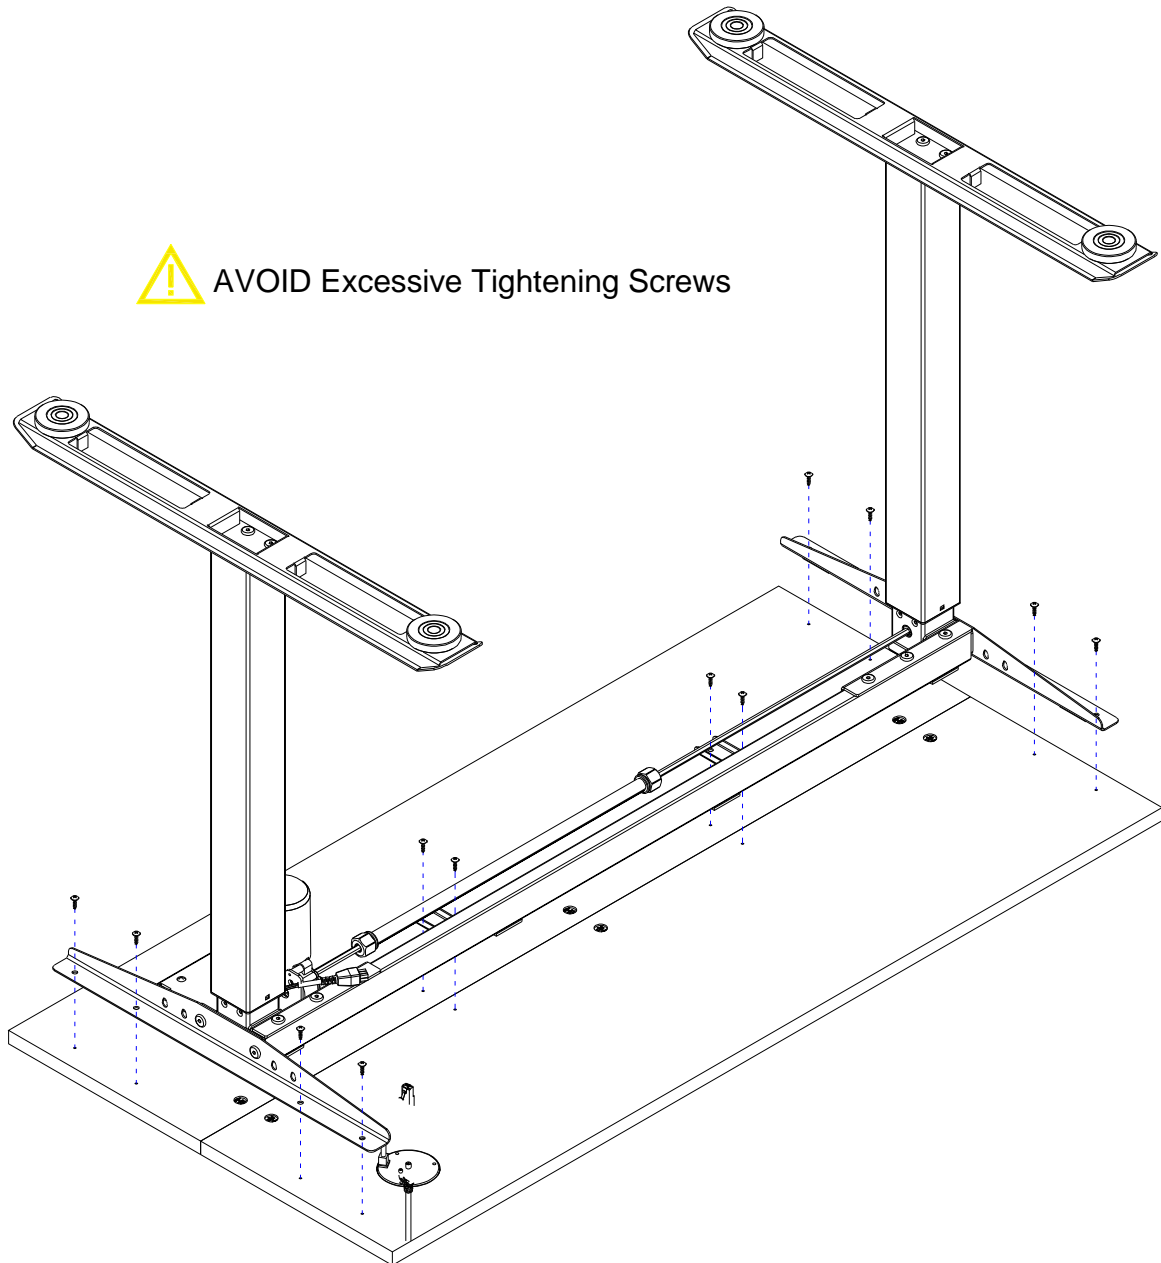


C.9/16" Medium Wood Screw - 12

 STEP 9

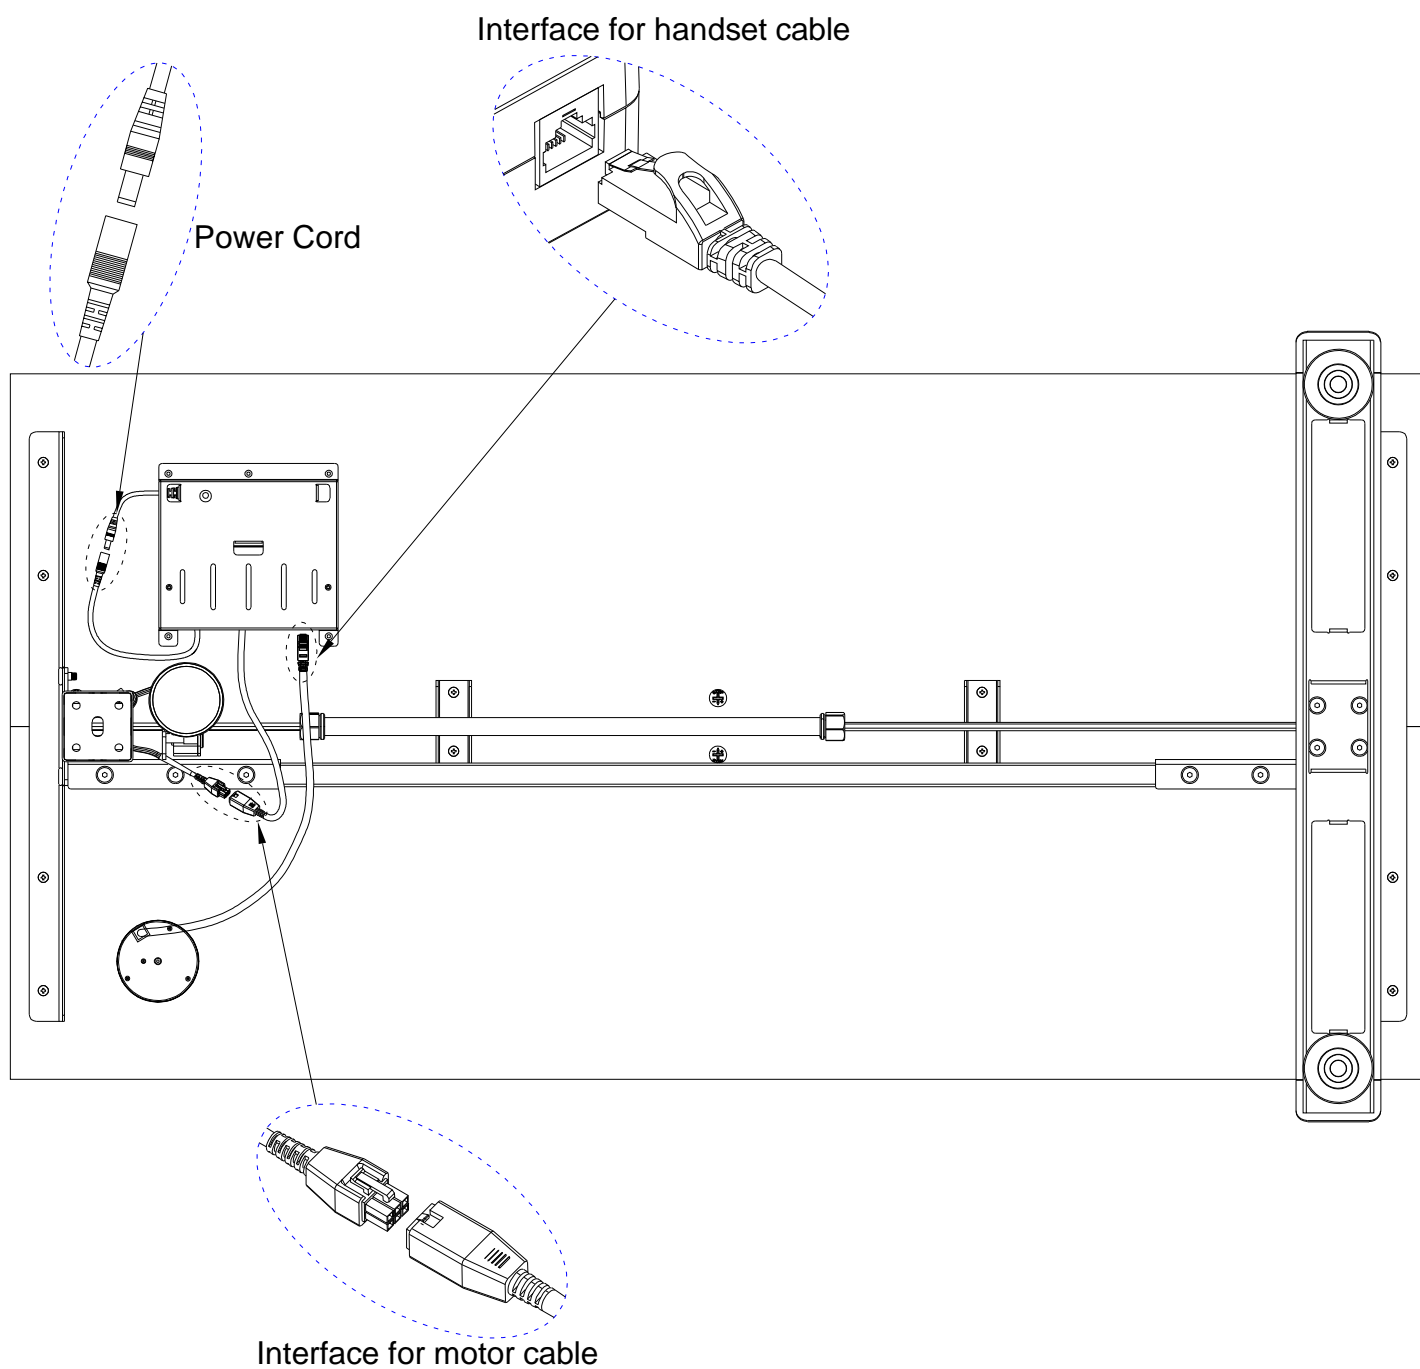


   STEP 10

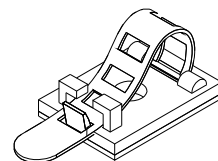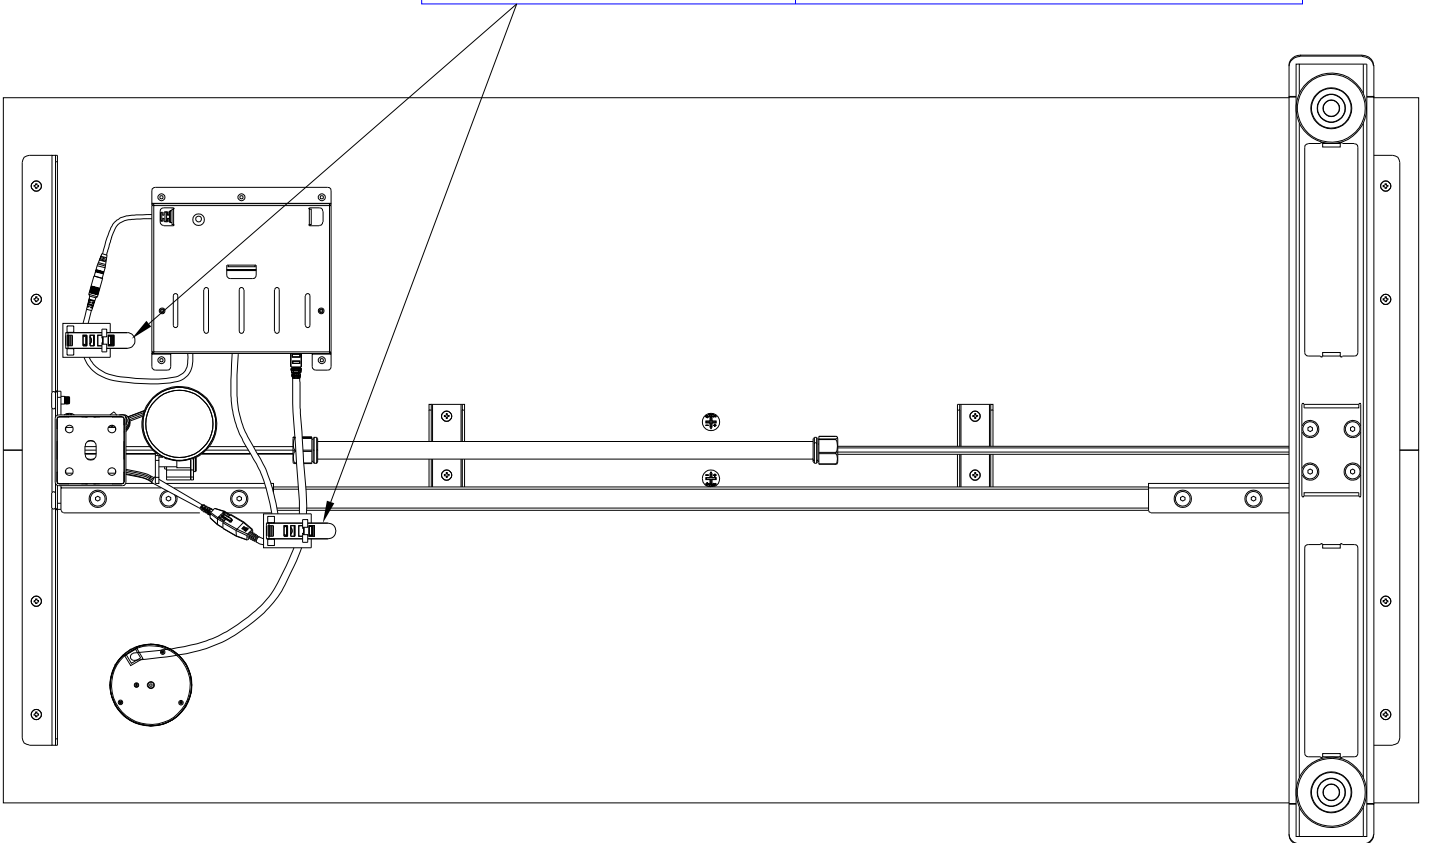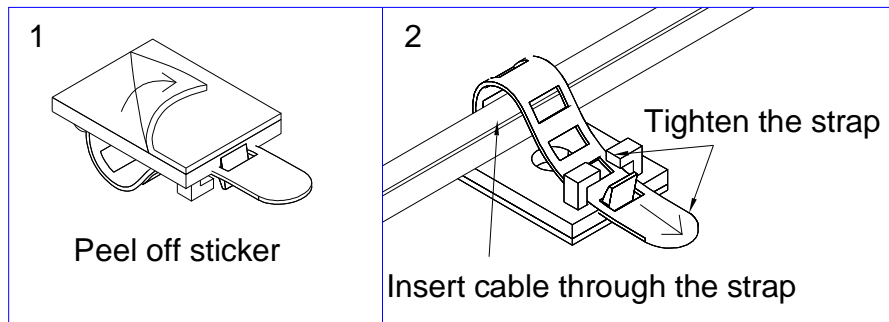


H. Self-adhesive Cable Strap - 3

 STEP 11

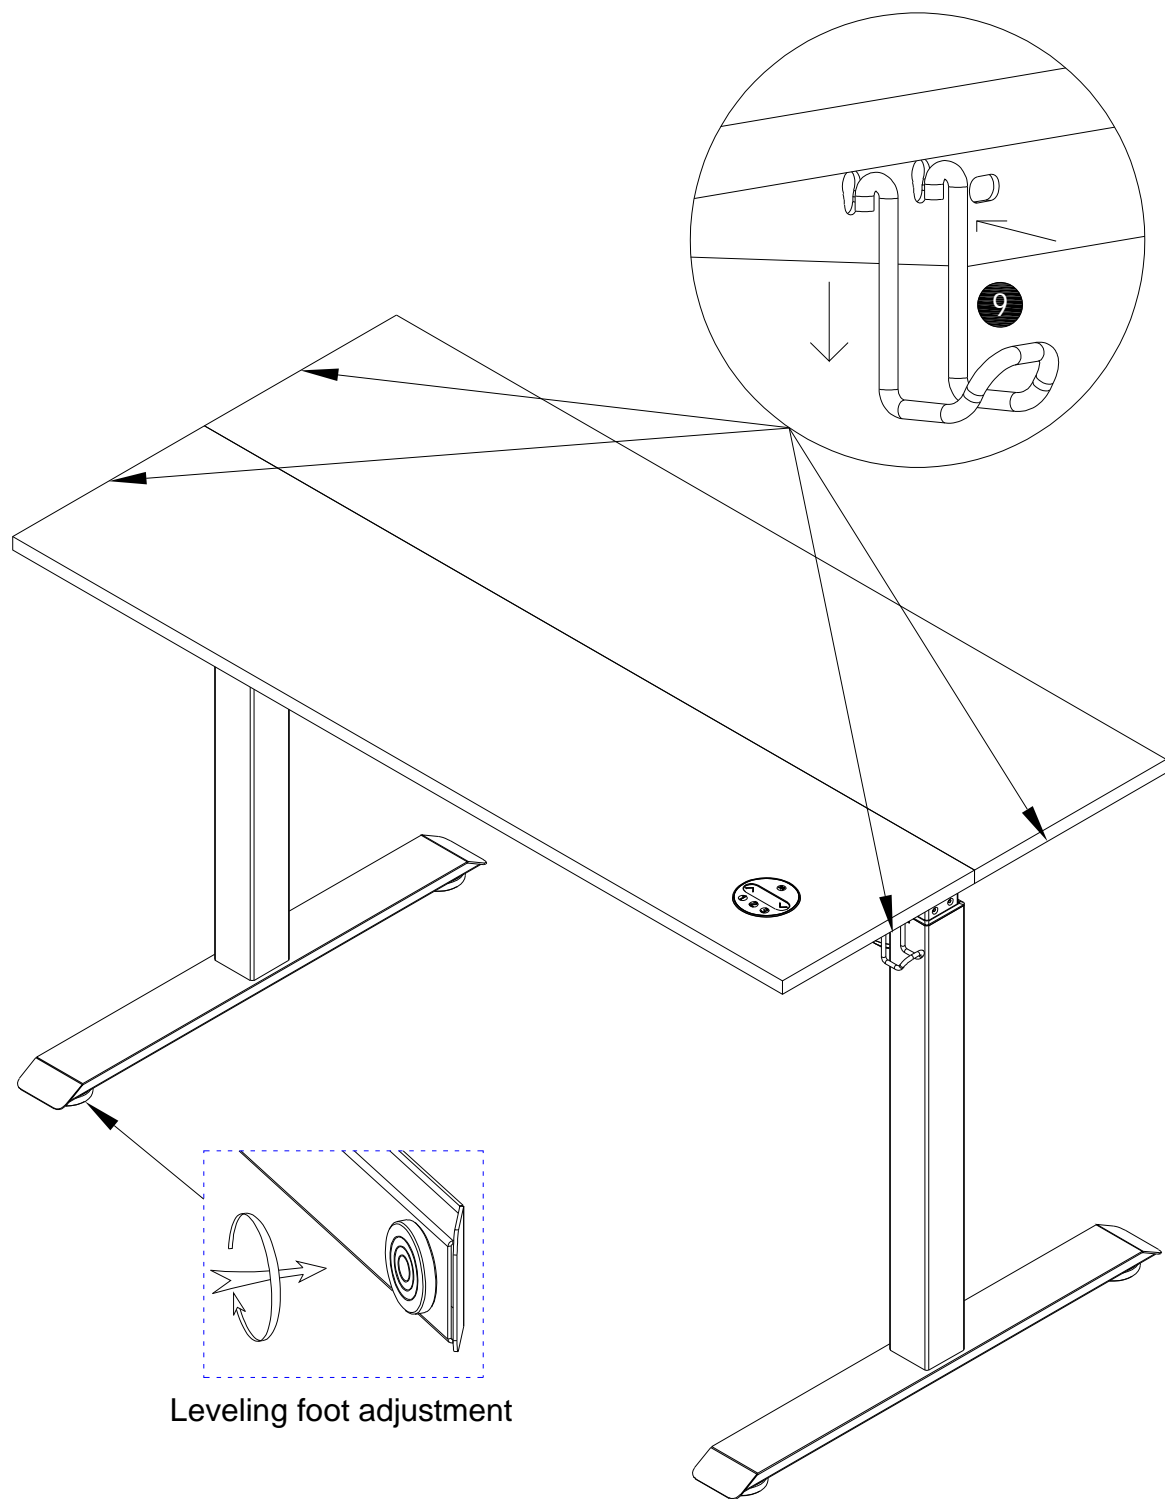


Leveling foot adjustment


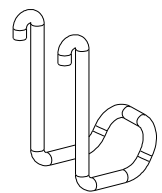 


9 Hook - 2

 STEP 12

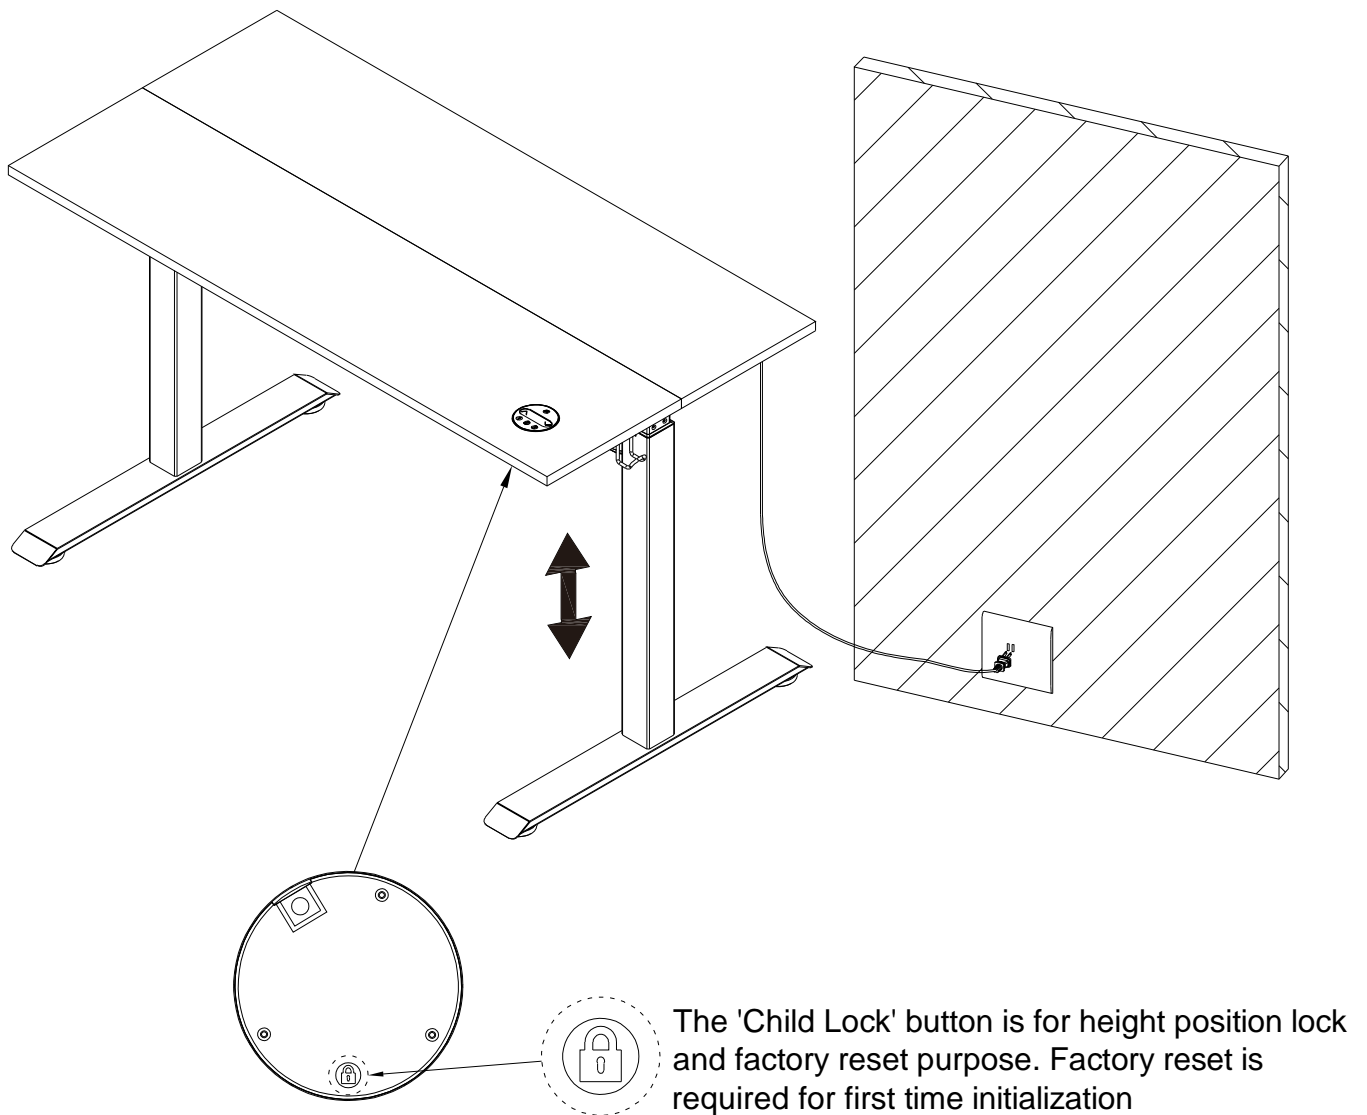

  STEP 13

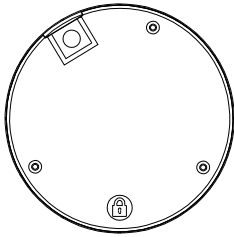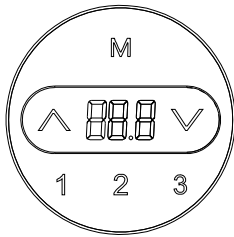

| Handset Instruction | |
|---------------------|--|
| Button | Functionality |
| M | REMINDER button, used to activate the " Long-Time Sitting Reminder " function |
| ^ | UP Button, used to lift the desk surface |
| v | DOWN Button, used to lower the desk surface |
| 88.8 | LED Display |
| 1 | Position 1, User saves the 1st Height Position |
| 2 | Position 2, User saves the 2nd Height Position |
| 3 | Position 3, User saves the 3rd Height Position |
| 🔒 | Child Lock button, used to Lock/Unlock height position, and factory reset purpose. |

Operation Guide

- Reset Process
 - a. Factory reset is required for first time initialization or when power cut off due to electrical problems.
 - b. Make sure all cables are connected properly before initialization.
 - c. Press and hold the "🔒" button. (Please do not release the button until connects to power)
 - d. Connect outlet to the power supply.
 - e. LED display shows "RES" then release the "🔒" button, desktop goes down automatically until it reaches its lowest height then rebound to factory reset height.
 - f. LED display shows "88.8", the initialization is completed.
- After the reset process, press the **UP** or **DOWN** button to lift or lower the height of desktop. The LED display shows the real time numerical value. The range of numerical value: 28.5"-47.2".
- Memory setting for height position
 - a. Press the **UP** or **DOWN** button to lift or lower height of desktop. For instance, you can adjust the height to 35".
 - b. Press button "1" for 5 seconds, LED display starts flashing and save the 1st height position to 35".
 - c. Repeat the same process to save 2nd and 3rd height position accordingly.
 - d. Press button "1", "2" and "3" to reach the saved height position.
- Long-Time Sitting Reminder
 - a. Press REMINDER button "M" to activate the function. The LED display start flashing and shows "88"
 - b. Press **UP** or **DOWN** button to adjust countdown time setting. Re-press the "M" button to confirm and LED display stops flashing, countdown timing is set.
 - c. When the countdown finished, the buzzer will activate automatically with sound.
 - d. To de-activate the countdown, press "M" button and set timing to "88" by using the **UP** or **DOWN** button, then press "M" button to confirm.
- The 🔒 button is to lock height position from preventing further adjustment. To unlock it, simply press it again.

Troubleshooting

This list is used for checking and solving common faults and errors. The LED displays an error code with warning sound when problem occurs. In most cases, problem should be resolved by reconnecting cables and run a factory reset mode. If problem you encounter is not on the list below, please contact the manufacture for assistance.

| Error Code | Faults | Solution |
|------------|------------------------------|---|
| E1 | Excessive overtime operation | Automatic recovery after stop using for 18 minutes |
| E2 | Overloading | Reduce weight of loading |
| E3 | Connection cable failure | Check all cables (Power cord, handset cable, motor cable) and power plug are connected properly |
| E4 | Power voltage unmatched | Check voltage of power supply or contact manufacture |
| RES | Factory reset mode request | Run a factory reset process (Page 16) |
| E11 | Handset fault | Reconnect handset cable, or contact manufacture if problem does not solve |
| E12 | Control box fault | Run a factory reset process, contact manufacture if problem does not solve |

Attention

- Power supply: AC120V \pm 10%, frequency 60HZ;
- Working environment: 32° - 104° F ;
- Before cleaning, you have to unplug the power supply cable. Clean with a slightly damp cloth to wipe away the surface dust. Keep all electrical components away from liquids. Do not damage the connection line and keep the plug in a safe position.
- Inside the control box, there are electronic components, metal parts, plastic parts, wires and so on. They should be disposed in accordance with the local laws and regulations. They cannot be disposed as household waste.
- Before using the product, please make sure the product has been installed correctly.
- Before starting use of the product, please read the instructions to fully understand all the product's functions and settings.
- Keep children away from electric height-adjustable desks, control units and handsets. Manufacturer is not responsible of any damages that result from children's unpredictable behaviour.
- Slight noise caused by the multi wedge belt or brake system will not impact the use of this product.
- Do not use corrosive or abrasive materials to clean this product and please dispose of cleaning solutions in an environmentally friendly manner.
- Understand the risks associated with using this product. Children or those with cognitive impairment should not use this product without supervision.
- If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a relevant specialist to avoid any injuries.
- Please operate in a clean and safe environment. For example, do not left around your tools. And always be careful to deal with packaging materials, in order to avoid any kinds of possible danger. Potential choking risk exists when children play with plastic bags!
- If necessary, retain the original package for future transportation.

Recycling and Disposal



This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contact the distributor or manufacturer for recycling assistance.