 


Assembly Instructions

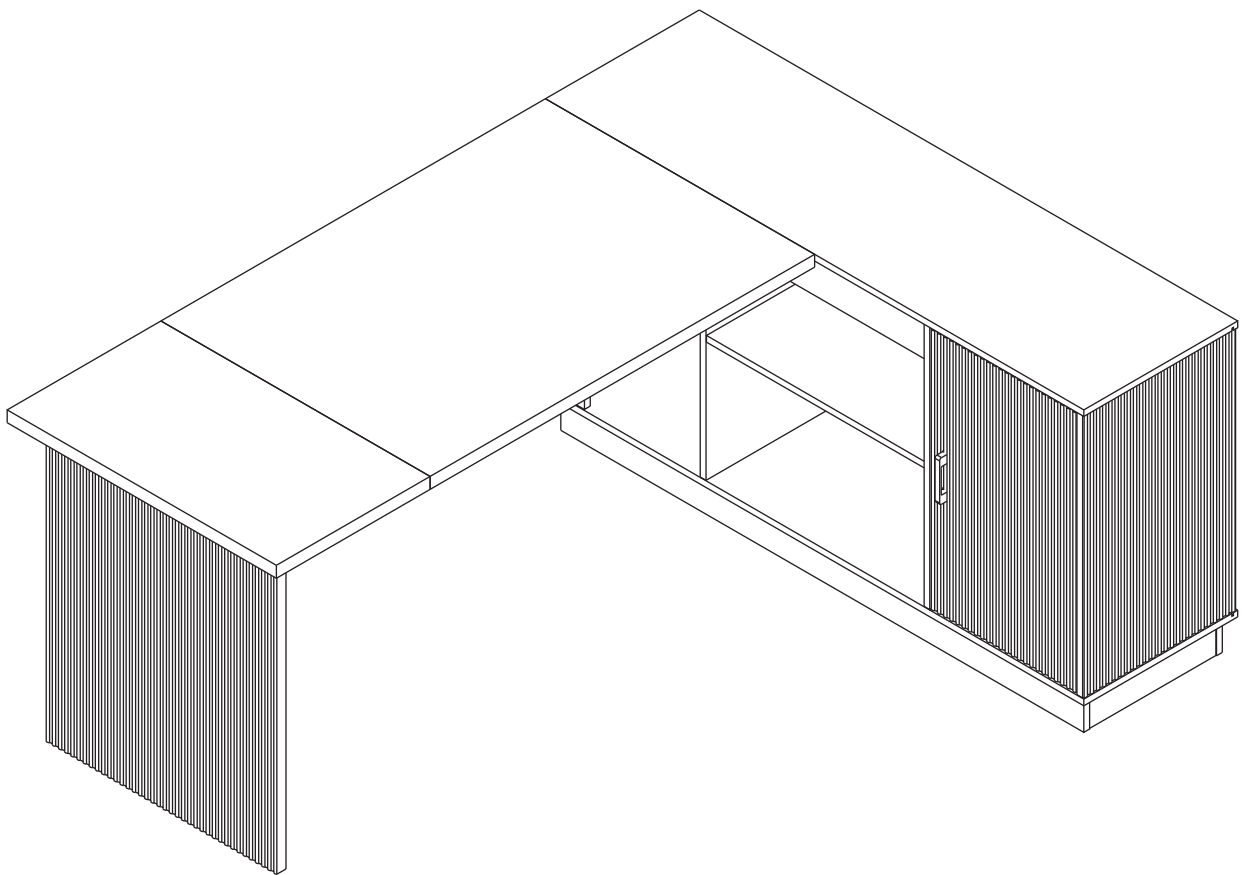 


Executive Desk

Model No.
HOGA-F2336-A
HOGA-F2336-B

Contact Us

 
 
 
We're here to help you.

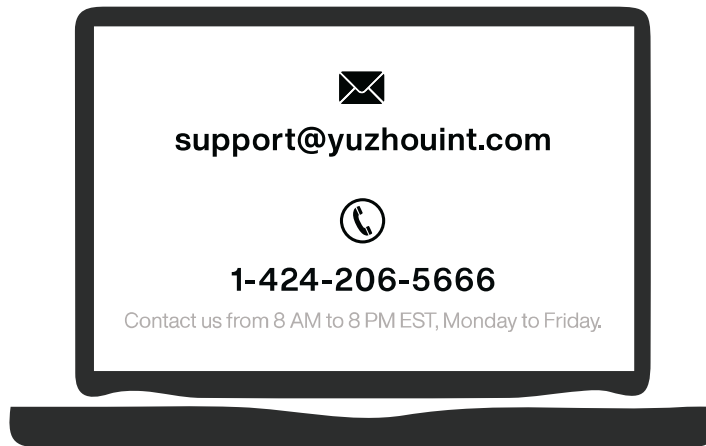

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

 
Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

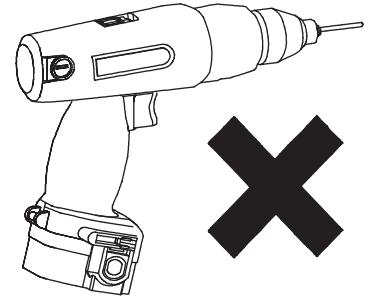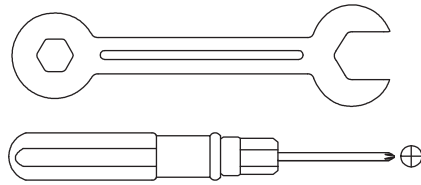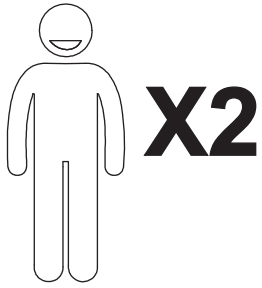

 
 
We recommend using hand tools for assembly.

 
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

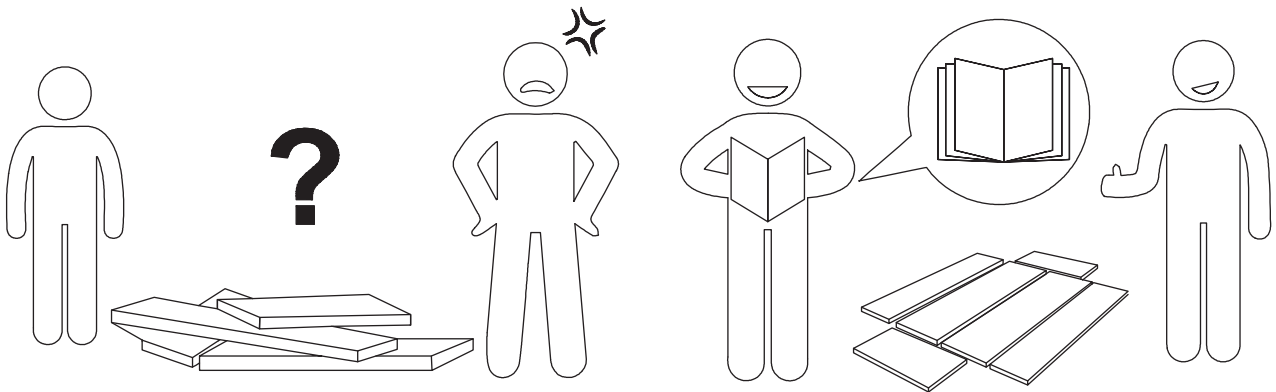

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

 
 
 
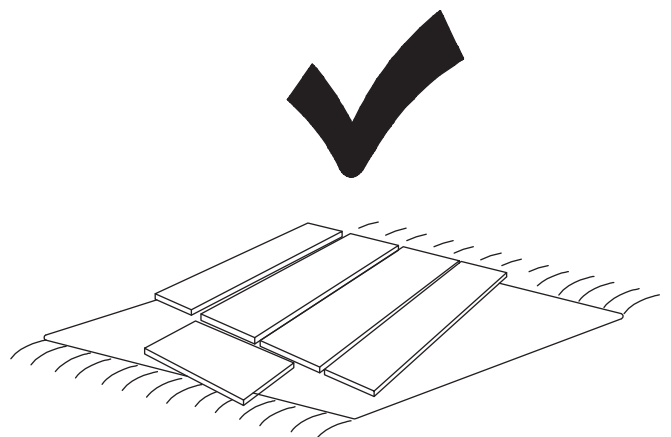 
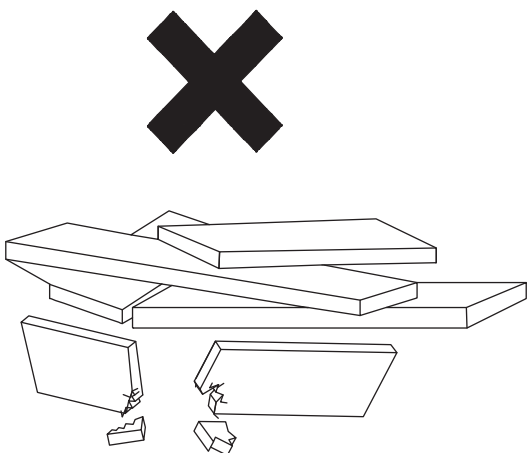 


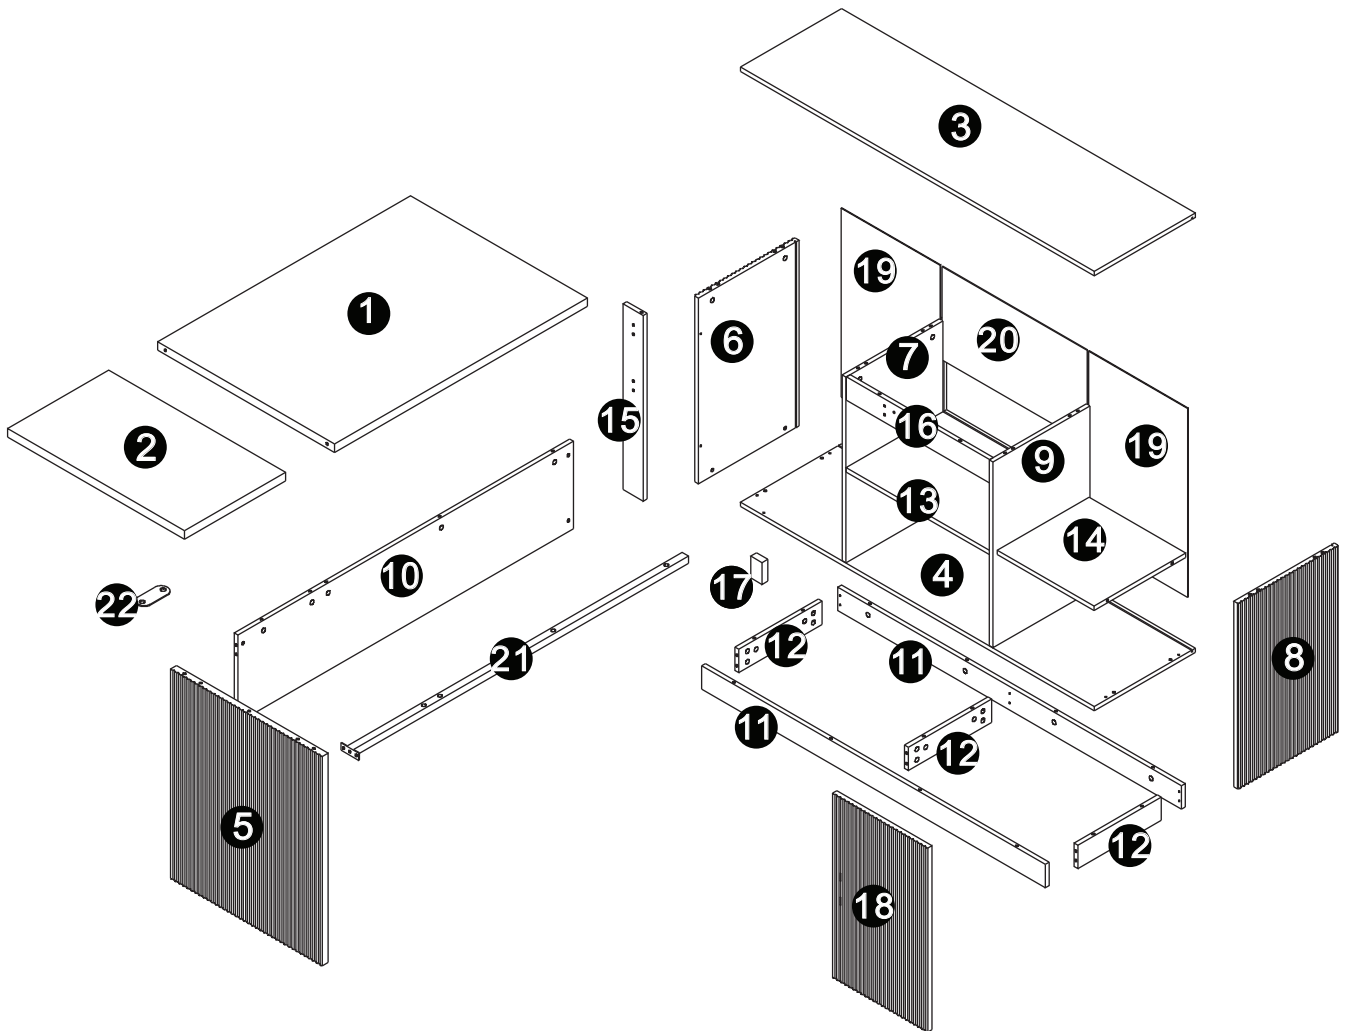

 
 
 

 

 



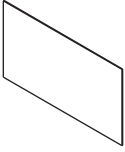 
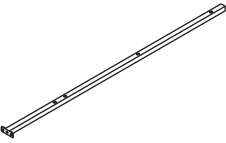 


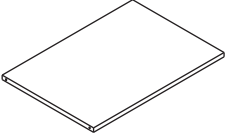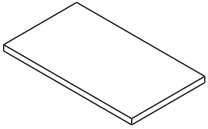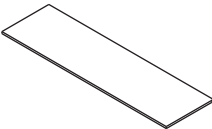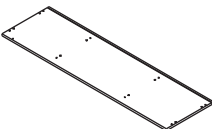


 
 


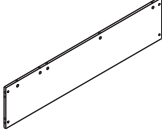

⚠ Caution

 



 

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

 


Parts List

<p>1</p>  <p>1 pc</p>	<p>2</p>  <p>1 pc</p>	<p>3</p>  <p>1 pc</p>	<p>4</p>  <p>1 pc</p>	<p>5</p>  <p>1 pc</p>
<p>6</p>  <p>1 pc</p>	<p>7</p>  <p>1 pc</p>	<p>8</p>  <p>1 pc</p>	<p>9</p>  <p>1 pc</p>	<p>10</p>  <p>1 pc</p>
<p>11</p>  <p>2 pcs</p>	<p>12</p>  <p>3 pcs</p>	<p>13</p>  <p>1 pc</p>	<p>14</p>  <p>1 pc</p>	<p>15</p>  <p>1 pc</p>
<p>16</p>  <p>1 pc</p>	<p>17</p>  <p>1 pc</p>	<p>18</p>  <p>1 pc</p>	<p>19</p>  <p>2 pcs</p>	<p>20</p>  <p>2 pcs</p>
<p>21</p>  <p>1 pc</p>	<p>22</p>  <p>1 pc</p>			

Hardware List

 
 
A	B	C	D	E	F
					
M6x40mm	M6x35mm	M6x12mm	M4x19mm	M5x38mm	M4x25mm
8 pcs	5 pcs	4 pcs	2 pcs	4 pcs	2 pcs

G	H	I	J	K	L
					
M3.5x14mm	M6x44.5mm	Ø15mm	Ø8x30mm		
36 pcs	61 pcs	61 pcs	30 pcs	1 pc	2 pcs

 
M	N	O			
					
Ø21mm					
24 pcs	24 pcs	1 pc			

Installation of Cams and Pins

 
Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

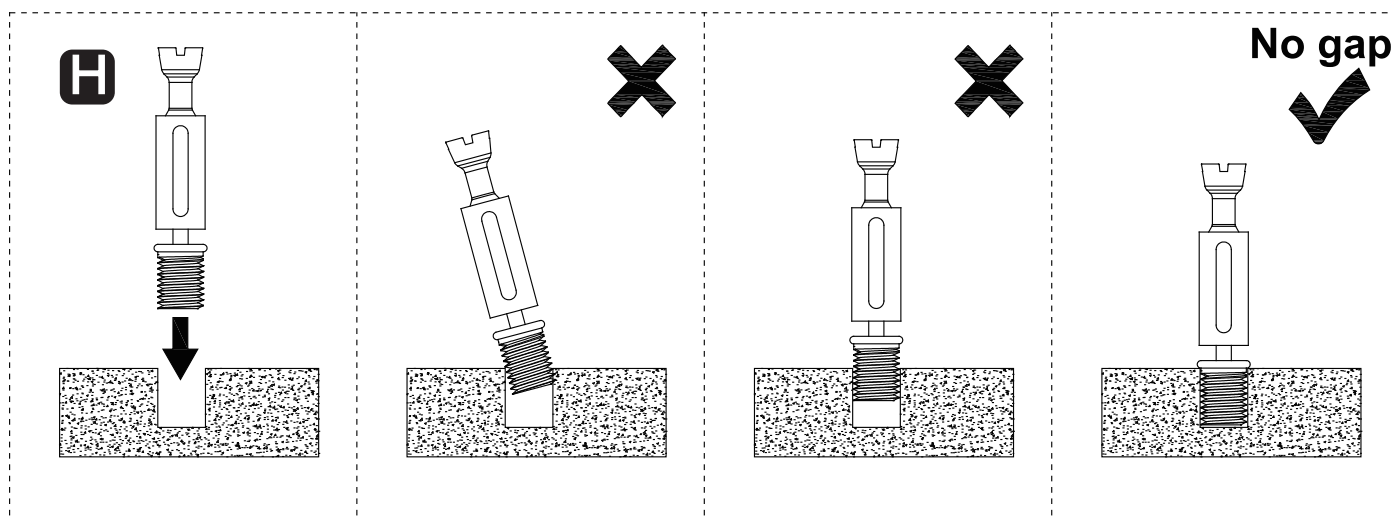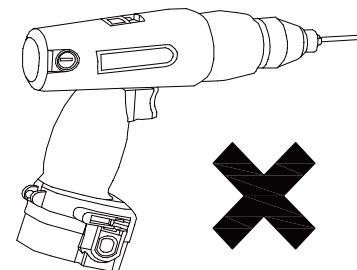


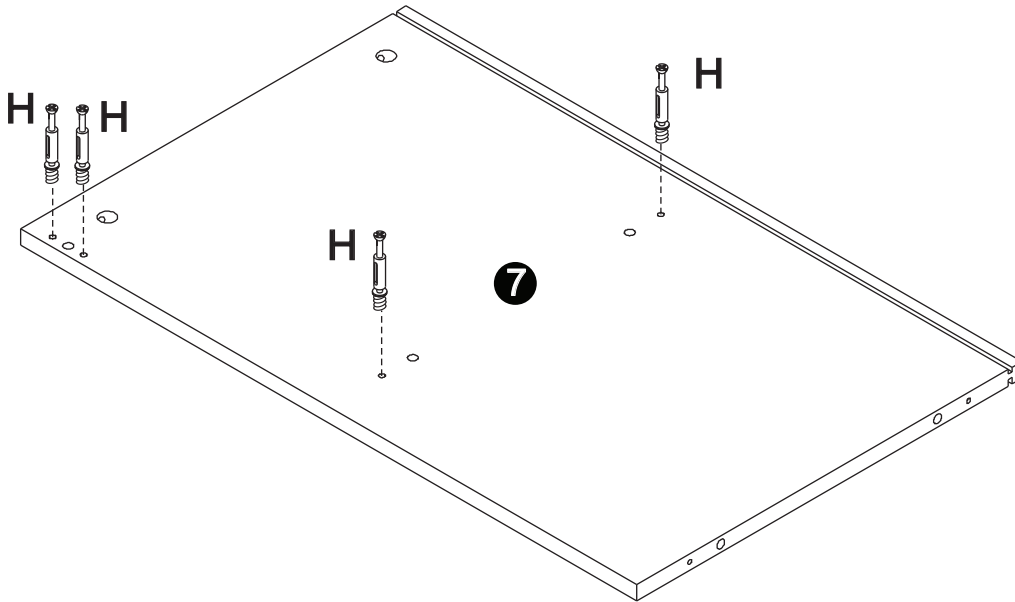 
Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

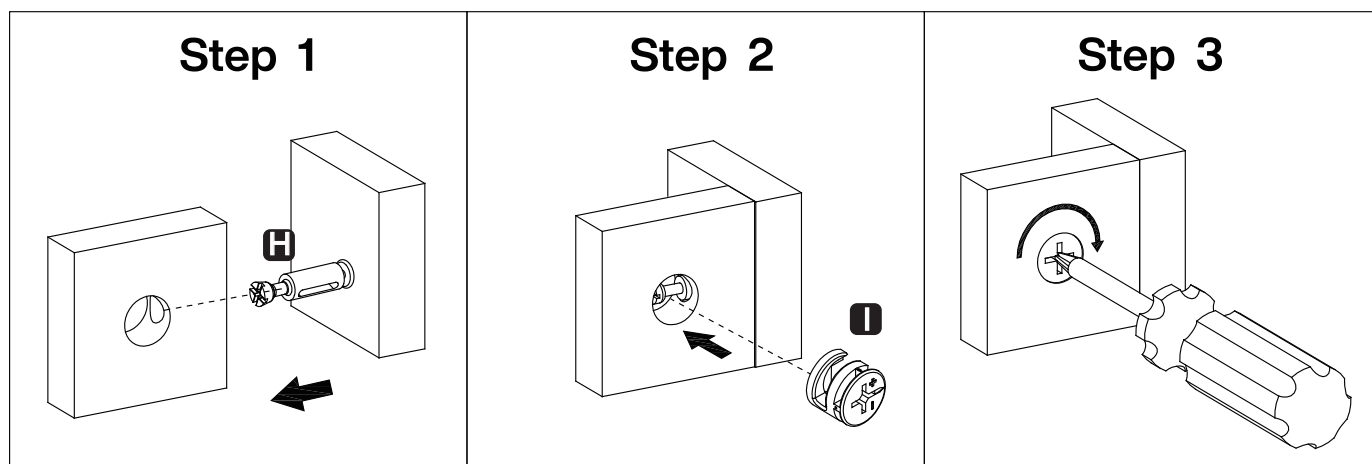

 
1

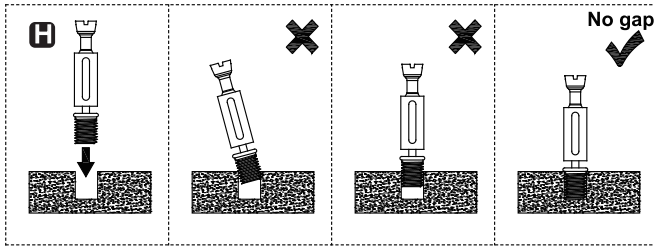


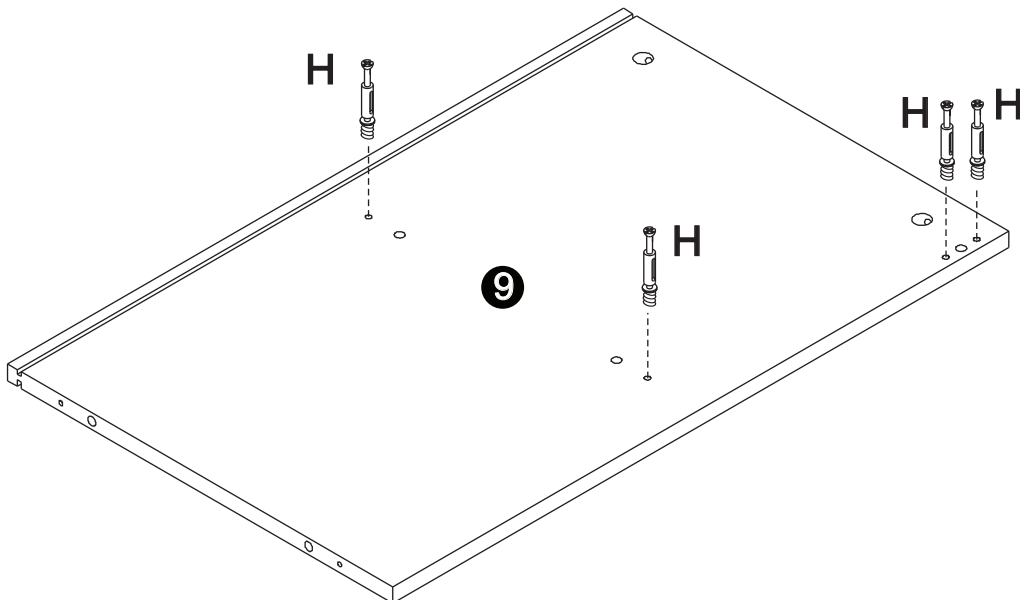 
H

M6x44.5mm
4pcs

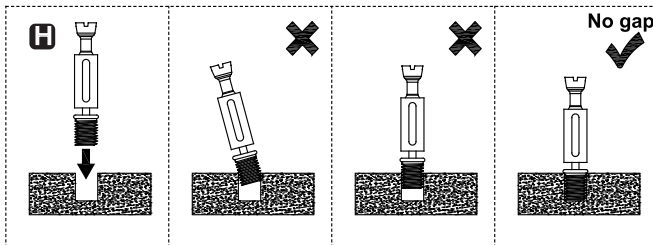


2

 


H

M6x44.5mm
4pcs




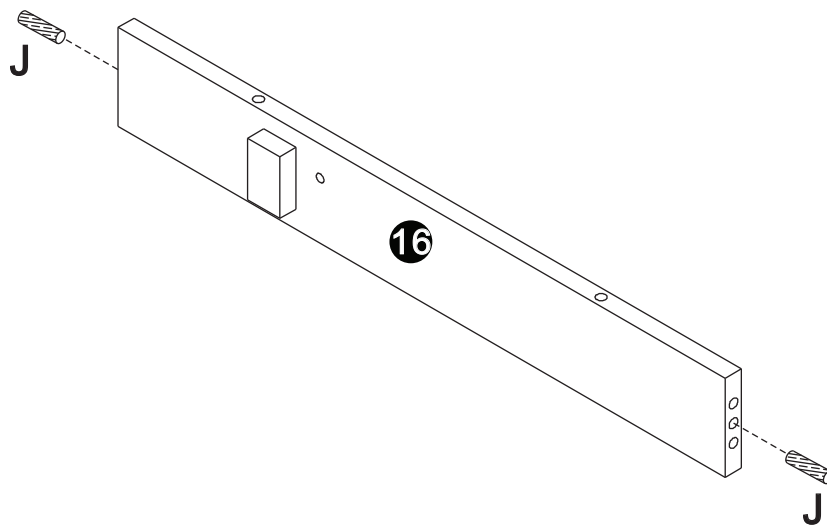 
3

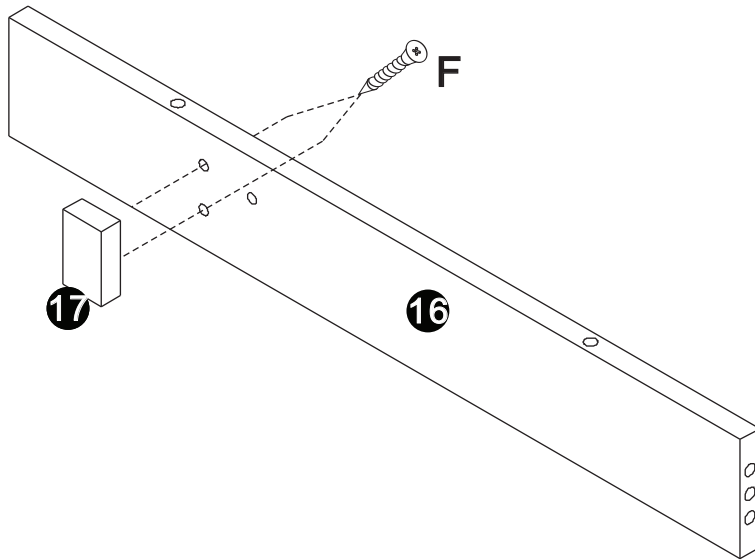F

M4x25mm
2pcs

 



4

J

Ø8x30mm
2pcs

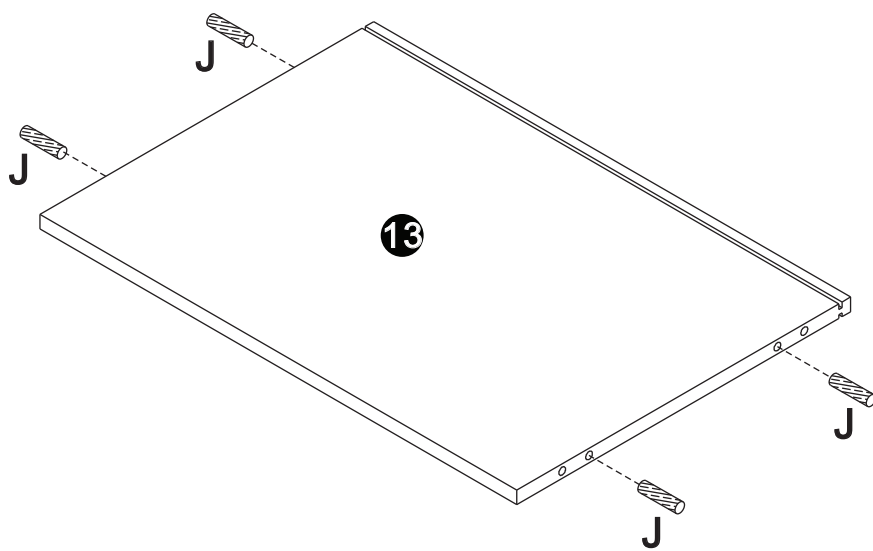 



5

 


J

Ø8X30mm
4pcs

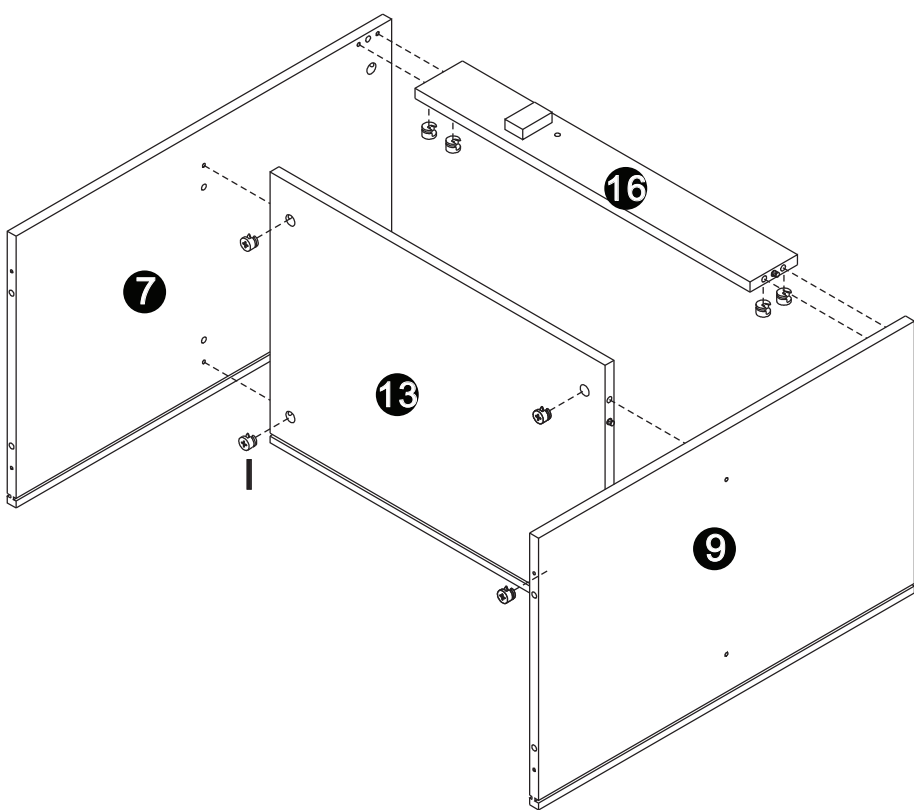 
6

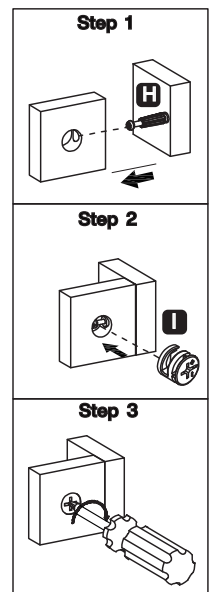


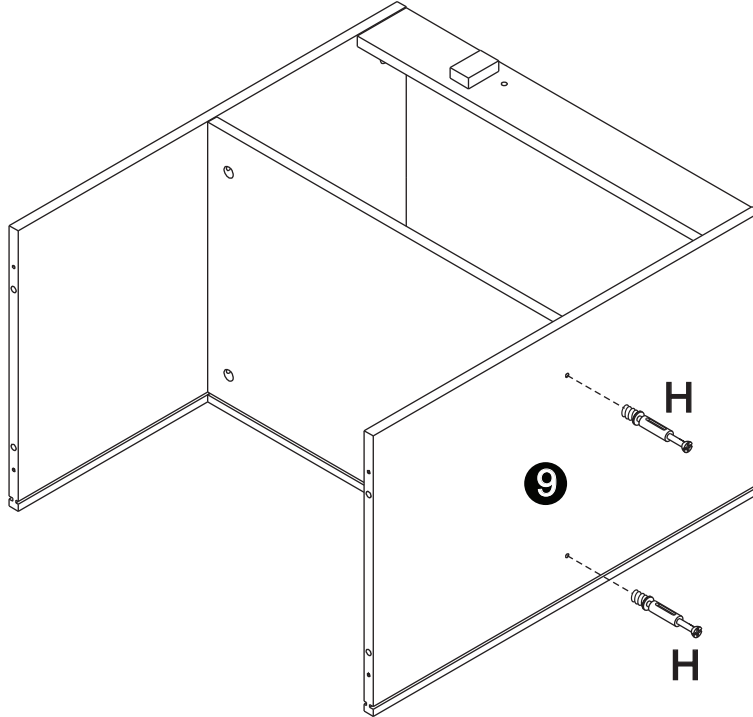 
I

Ø15mm
8pcs

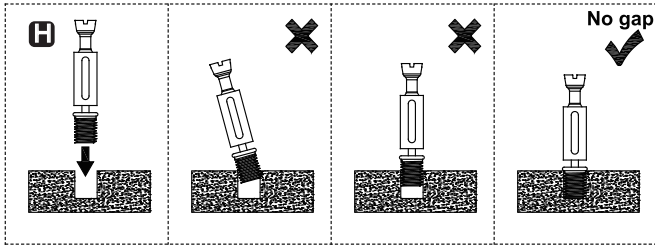

 
7




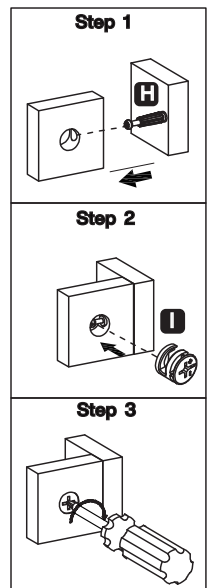 
H

M6x44.5mm
2pcs

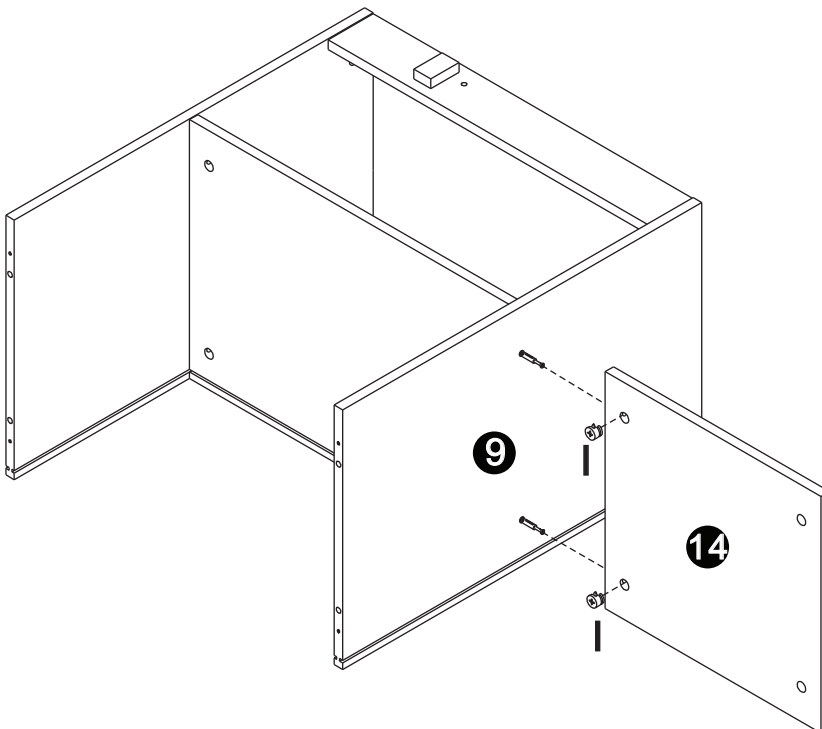

 
8




I

Ø15mm
2pcs

 


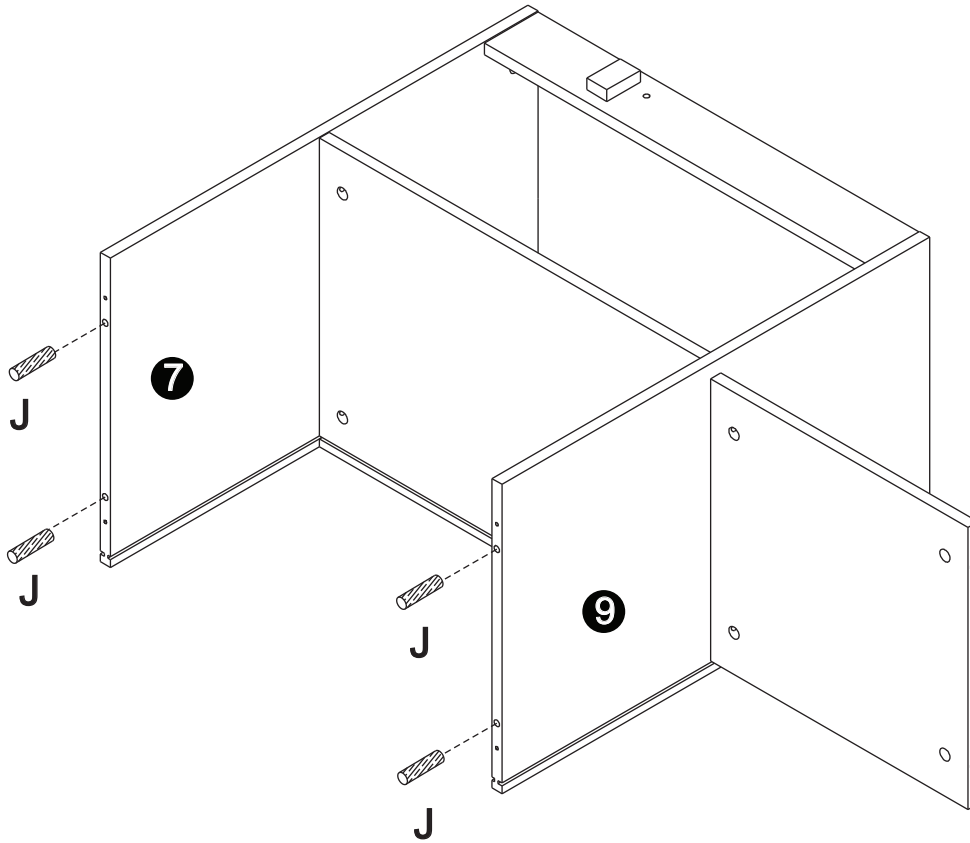

9

 


J

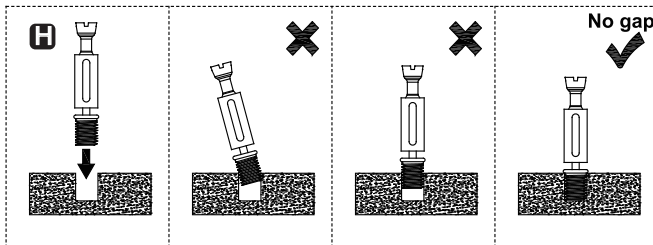Ø8X30mm
4pcs

 
10

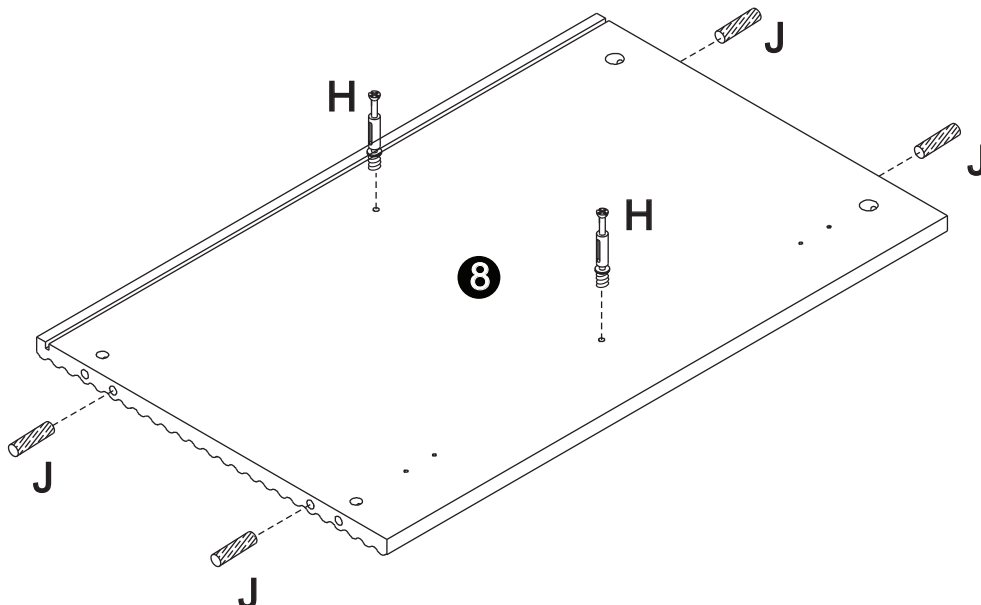

 
J	H
	
Ø8X30mm	M6x44.5mm
4pcs	2pcs



 
11

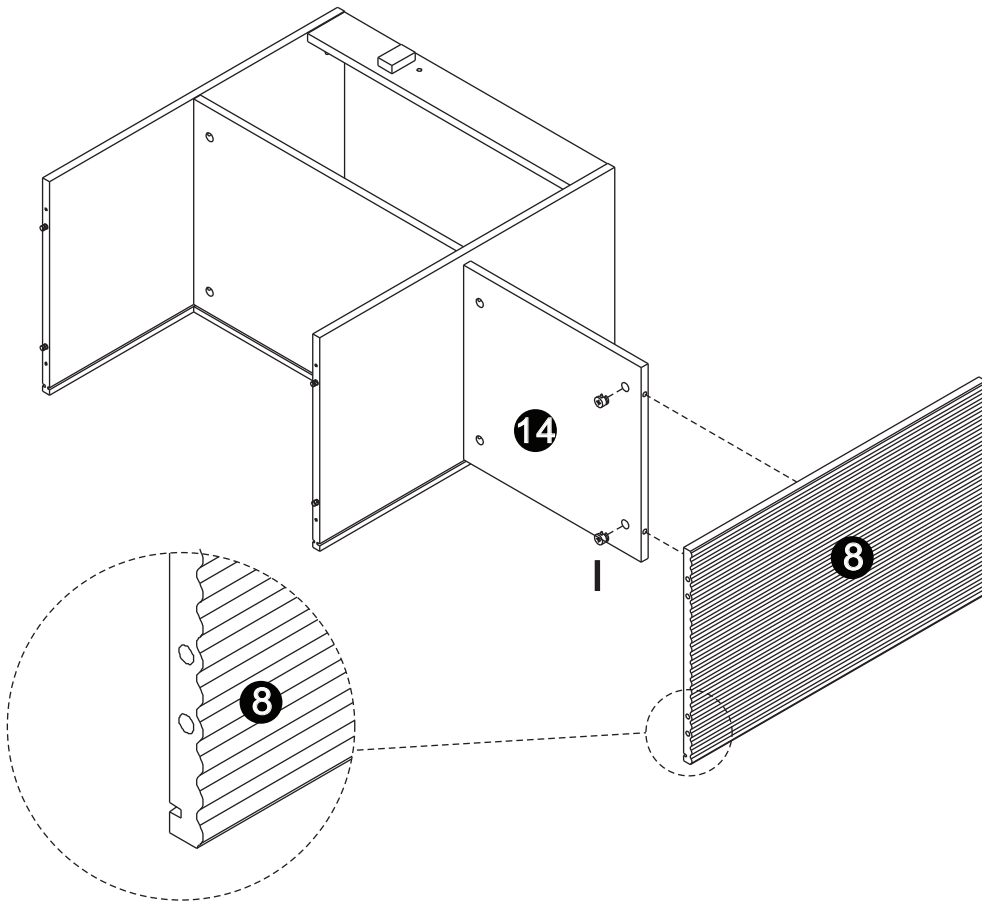

 
I
Ø15mm
2pcs

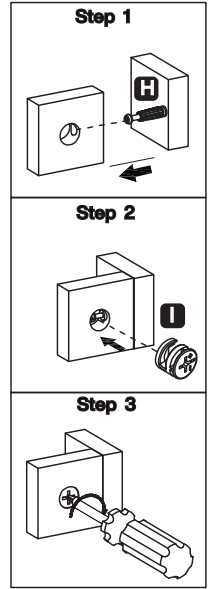

 
12

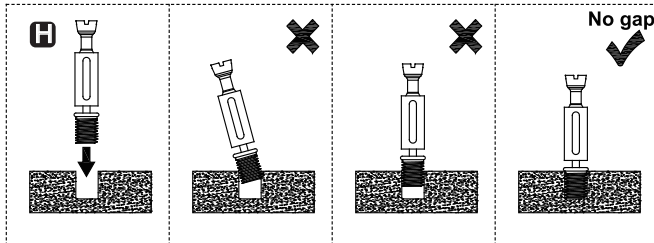


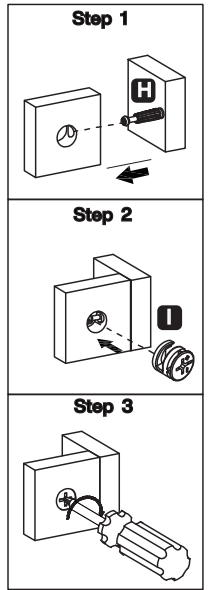 
J	H
Ø8X30mm	M6x44.5mm
4pcs	2pcs

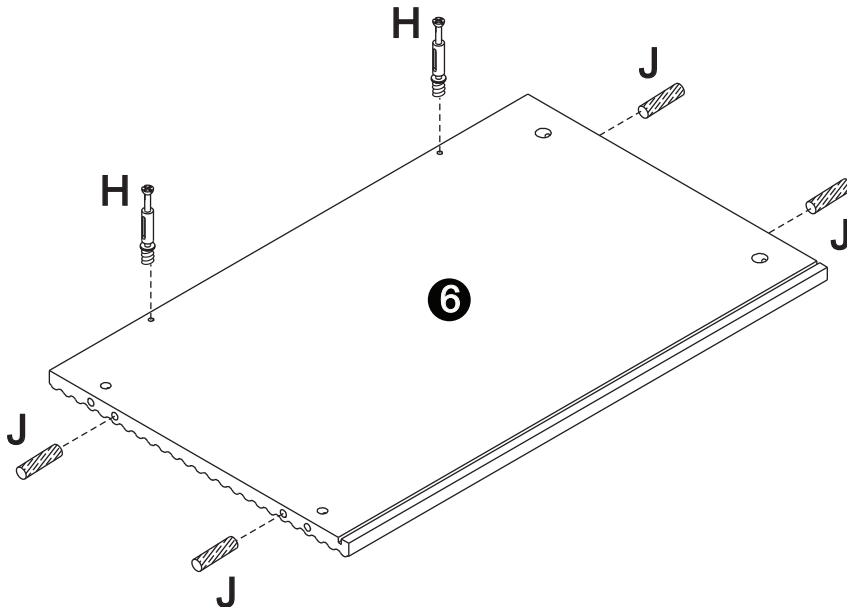

 
13

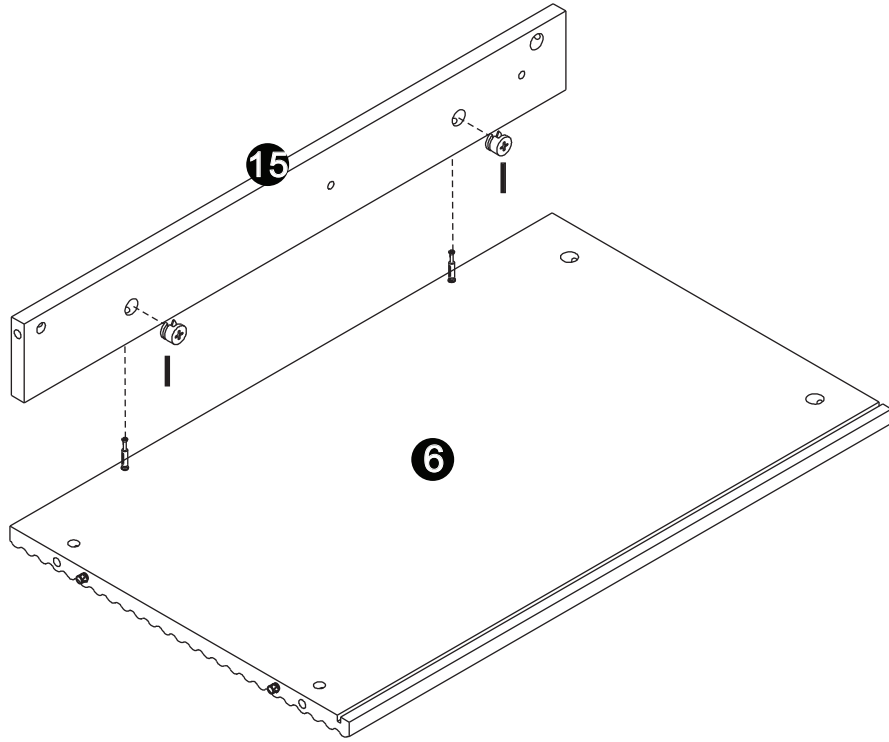

 


I

Ø15mm
2pcs

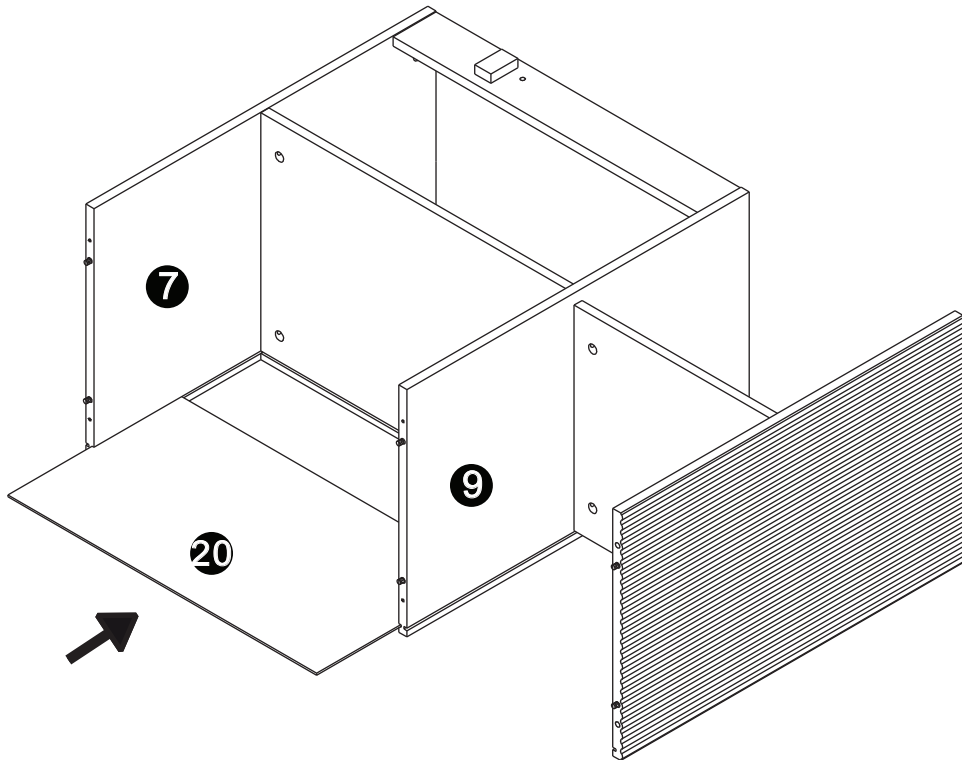 


14

 



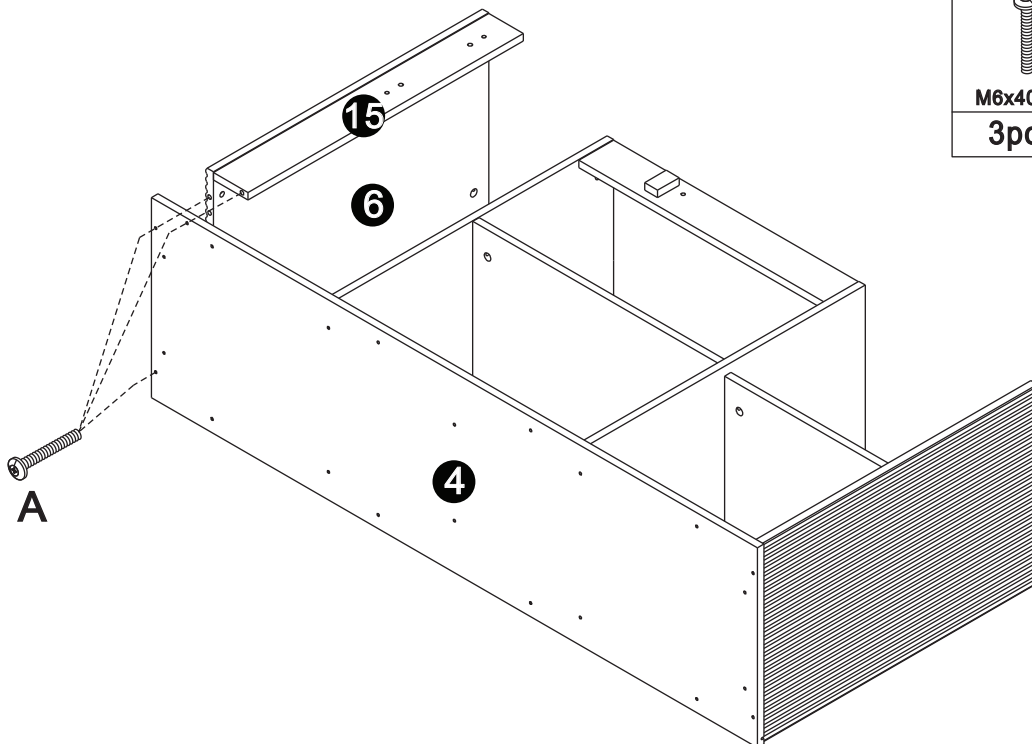 
15

A	B	E
		
M6x40mm	M6x35mm	M5x38mm
2pcs		4pcs

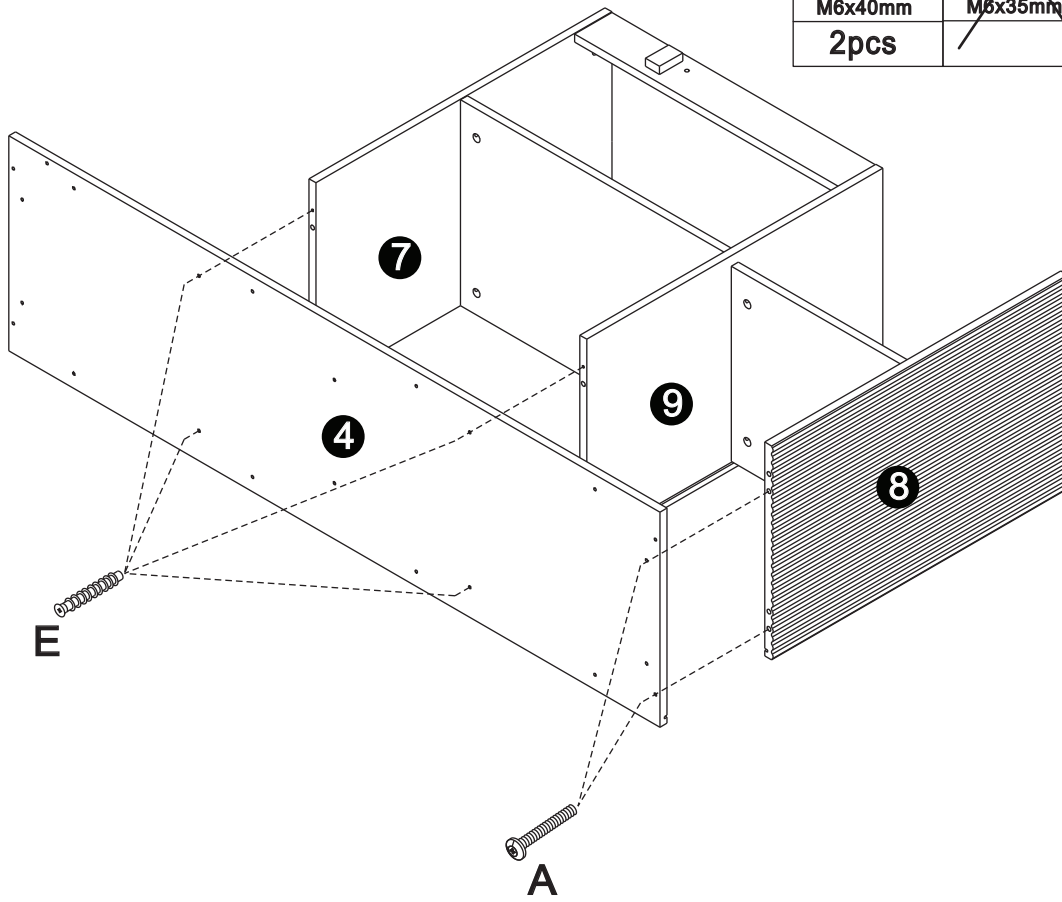 



16

 
A	B
	
M6x40mm	M6x35mm
3pcs	



17

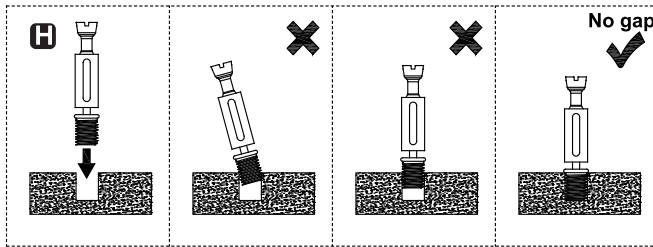 



H

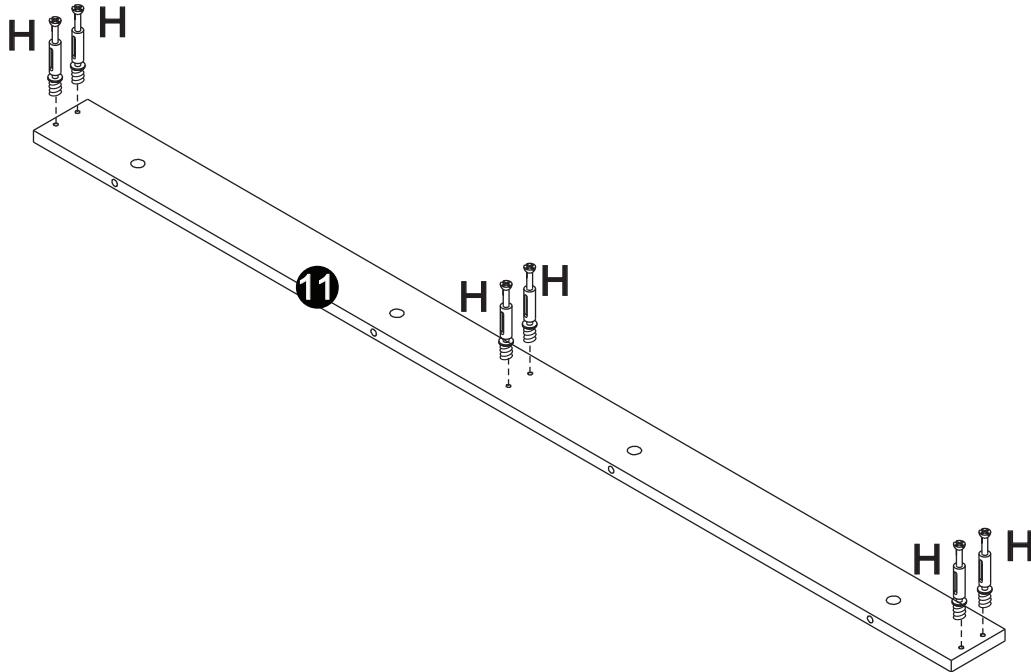M6x44.5mm
12pcs

 


X2

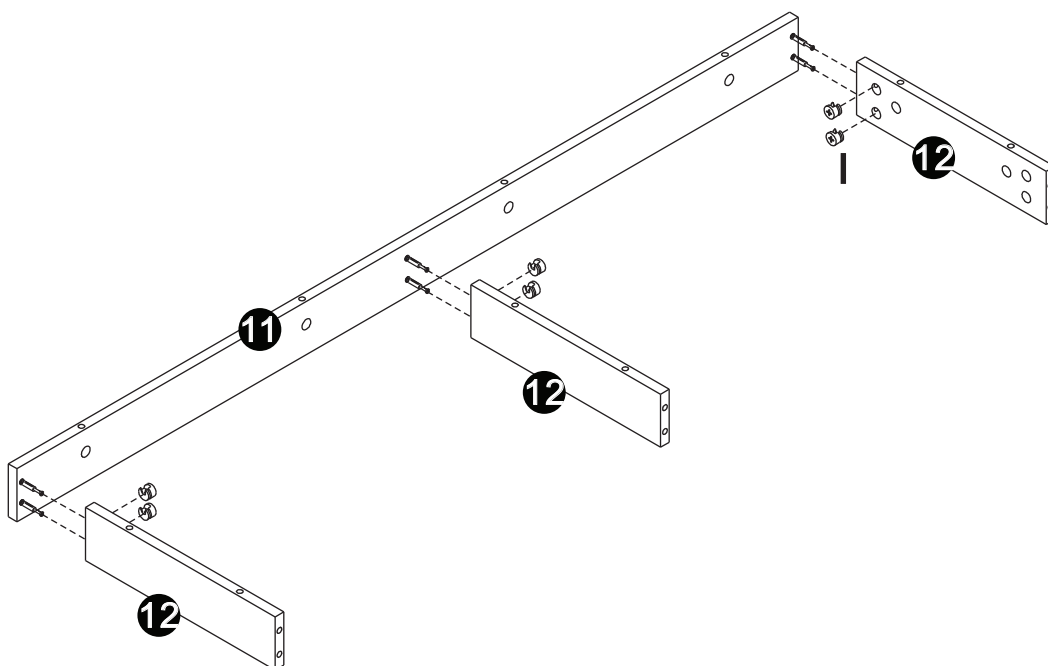 
18




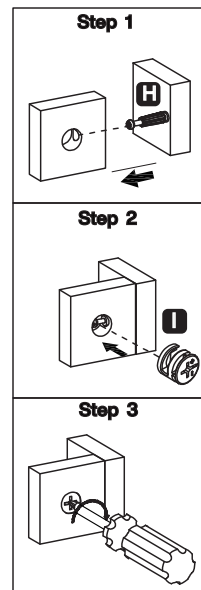 
I

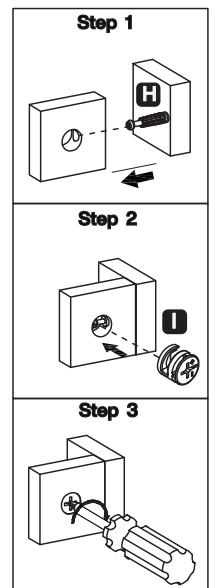Ø15mm
6pcs

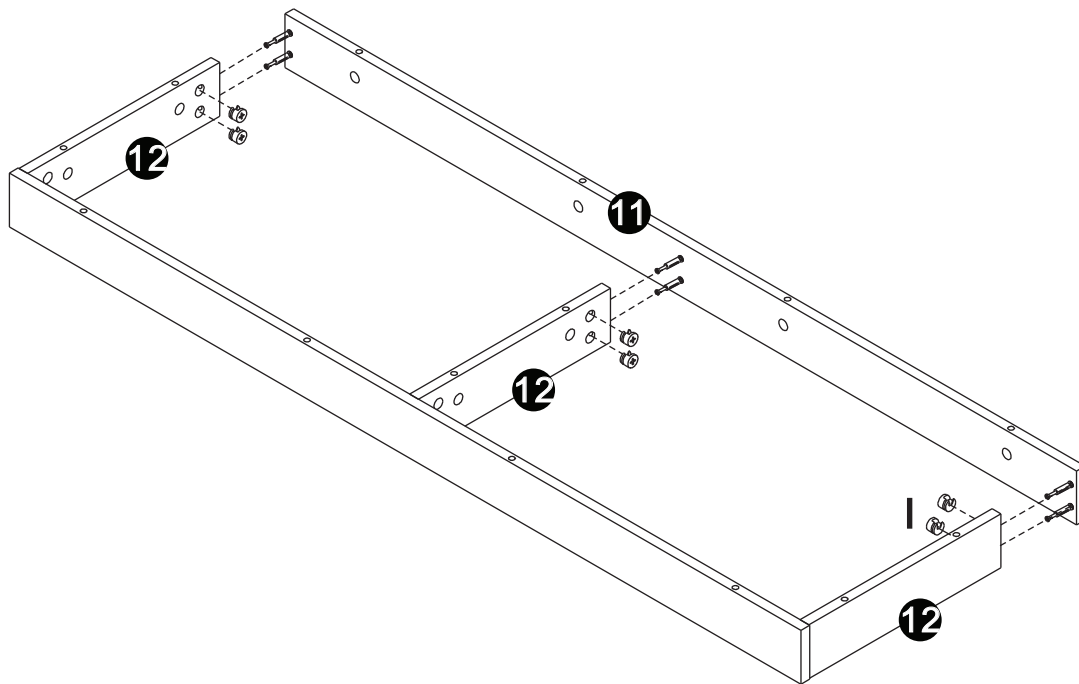

 
19




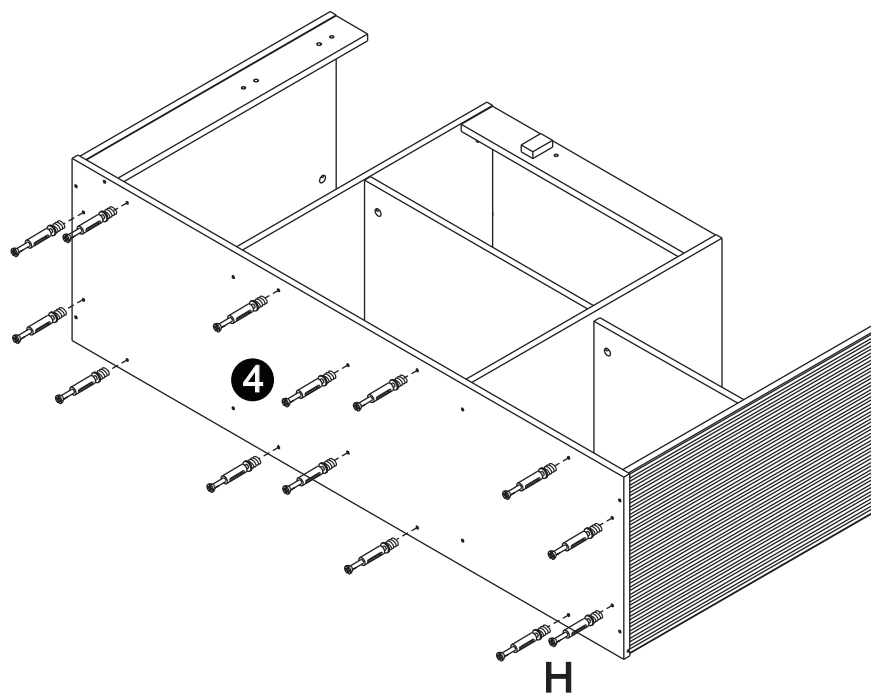 
I

Ø15mm
6pcs

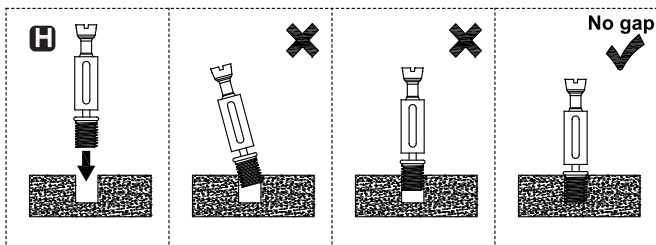

 
20



 
H

M6x44.5mm
14pcs

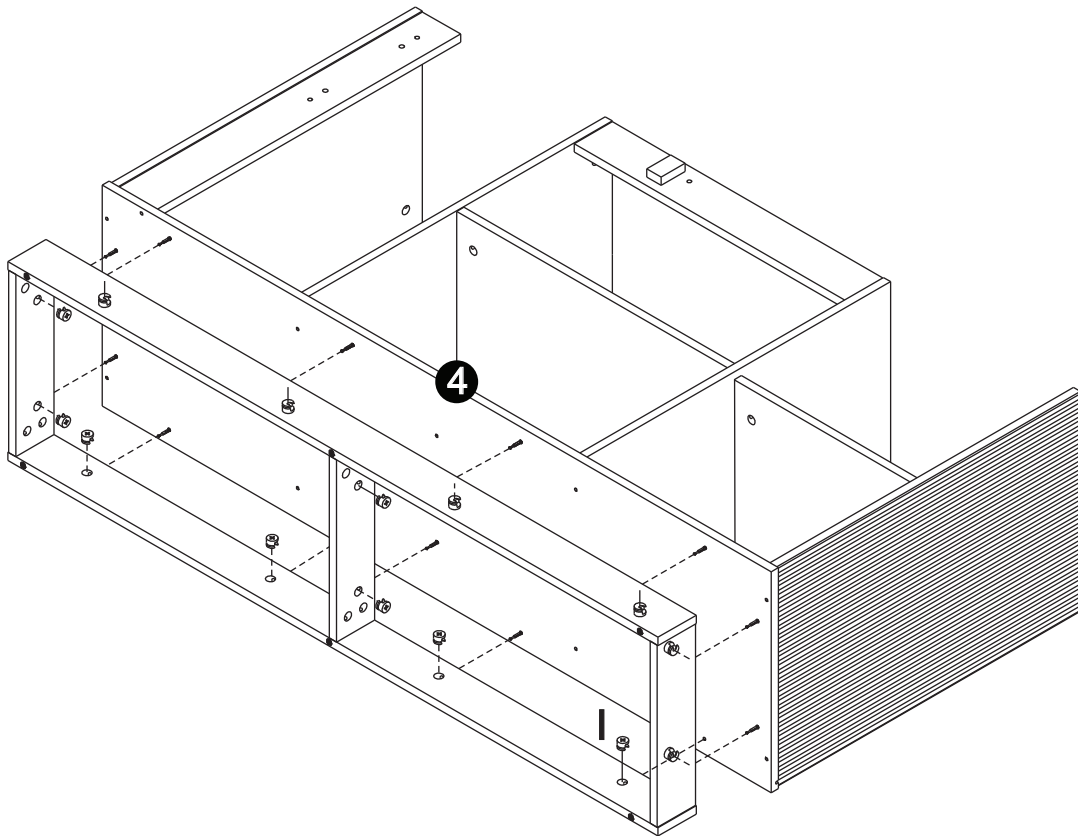

 
21

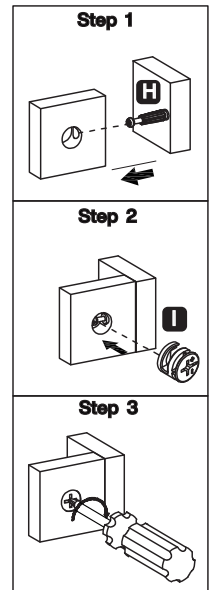

I
Ø15mm
14pcs

 


22

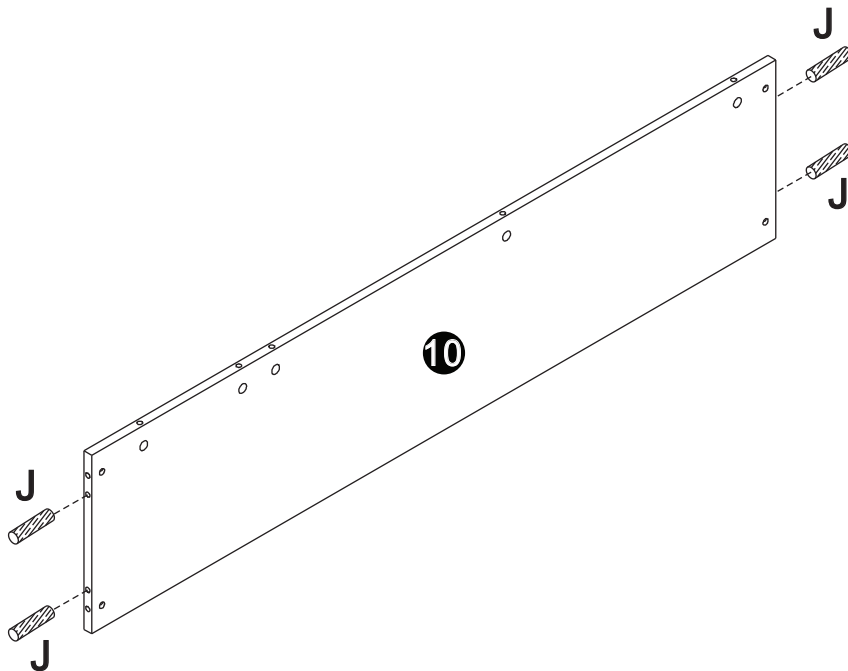 


J
Ø8X30mm
4pcs

23

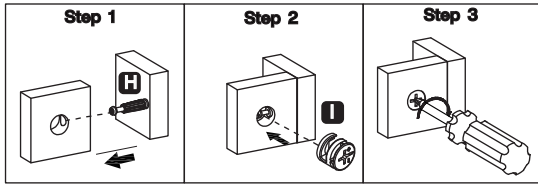

 
H
M6x44.5mm
2pcs

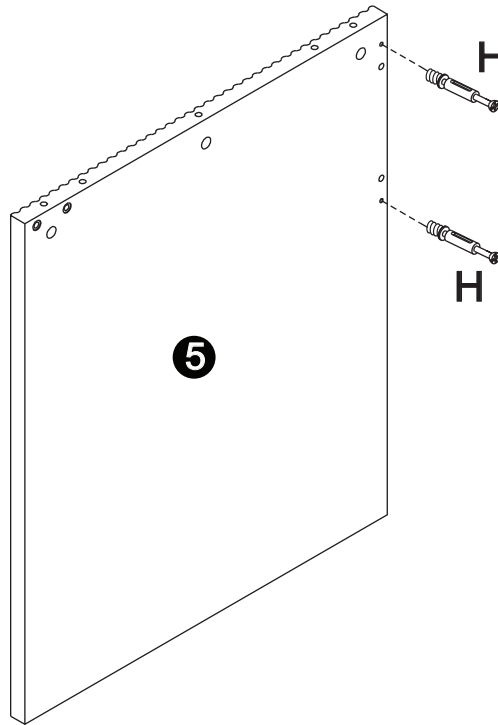

 
24


A	B
	
M6x40mm	M6x35mm
3pcs	

C
M6x12mm
2pcs
I
Ø15mm
2pcs

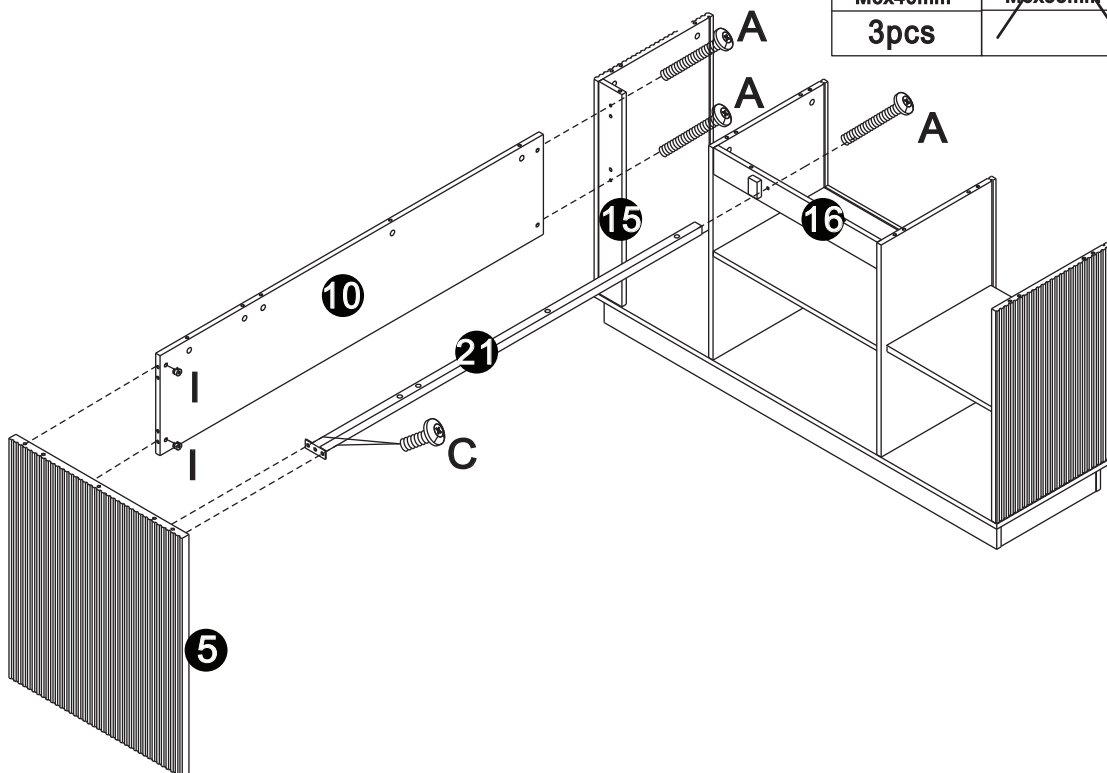 



25

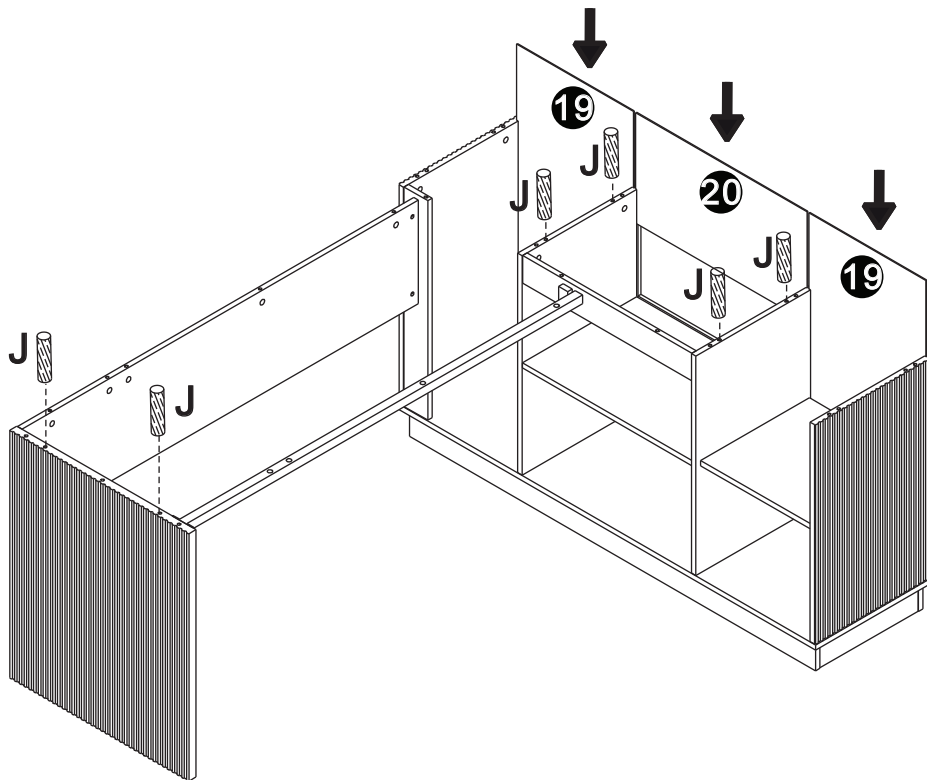 


J

Ø8x30mm
6pcs

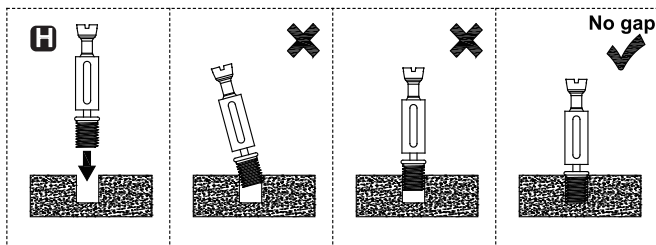 
26

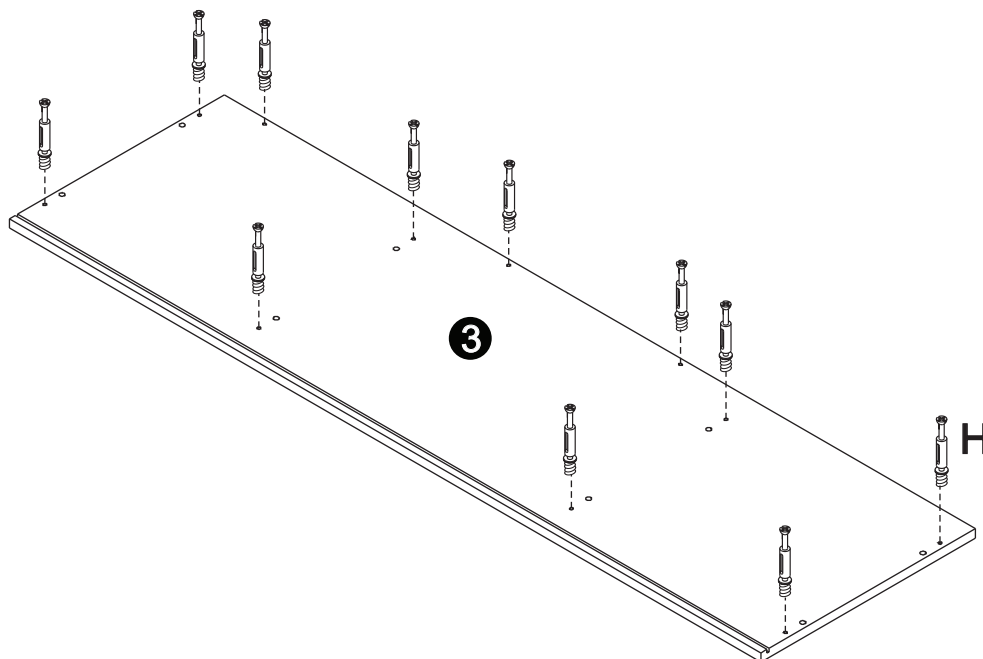

H

M6x44.5mm
11pcs

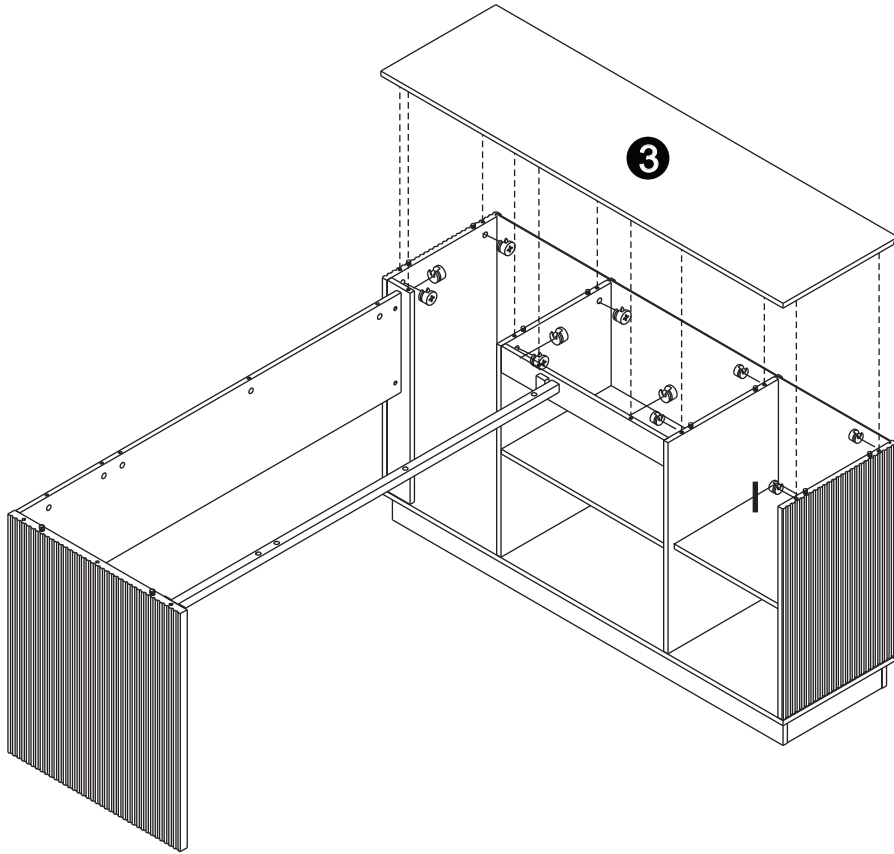

27



 
I
11pcs

Step 1

Step 2

 
 
Step 3


28

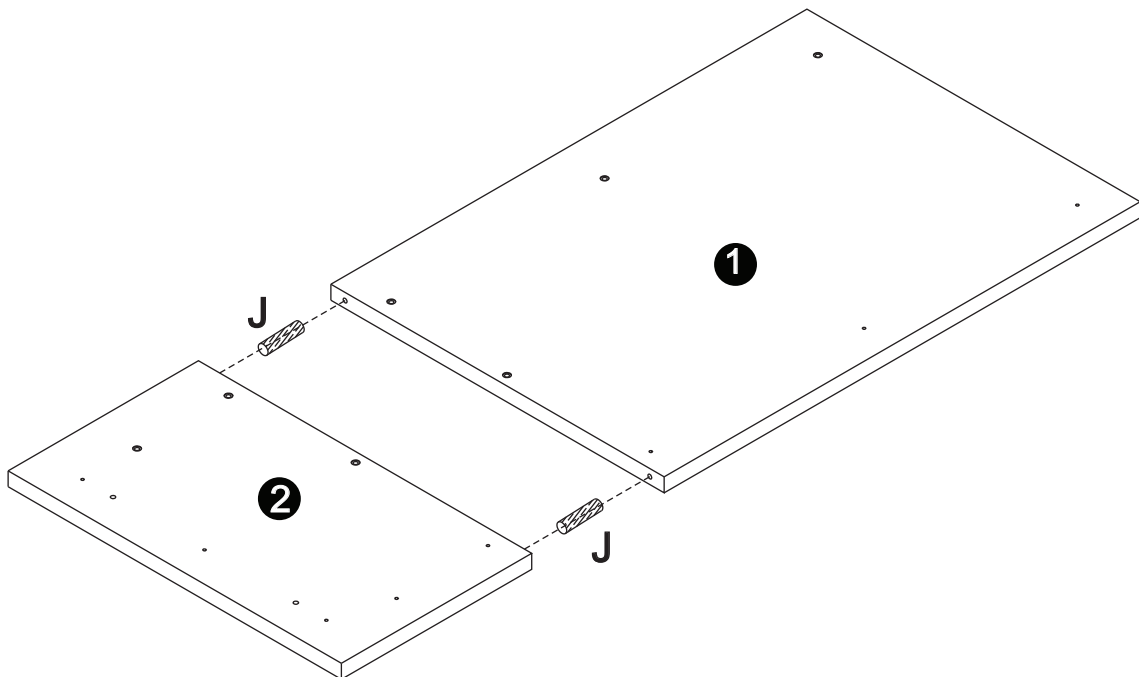

 
 
J
Ø8X30mm
2pcs


29

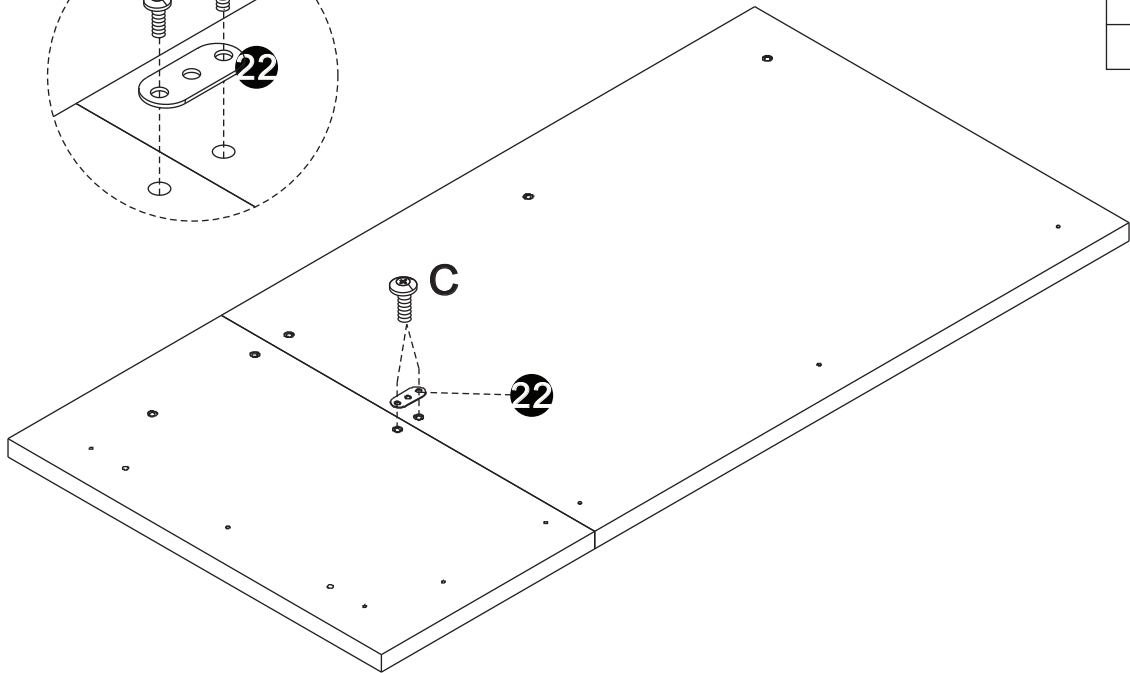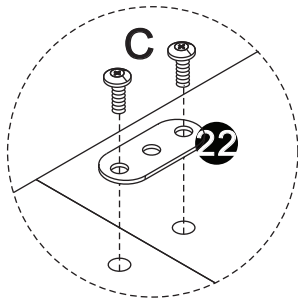

 
C

M6x12mm
2pcs

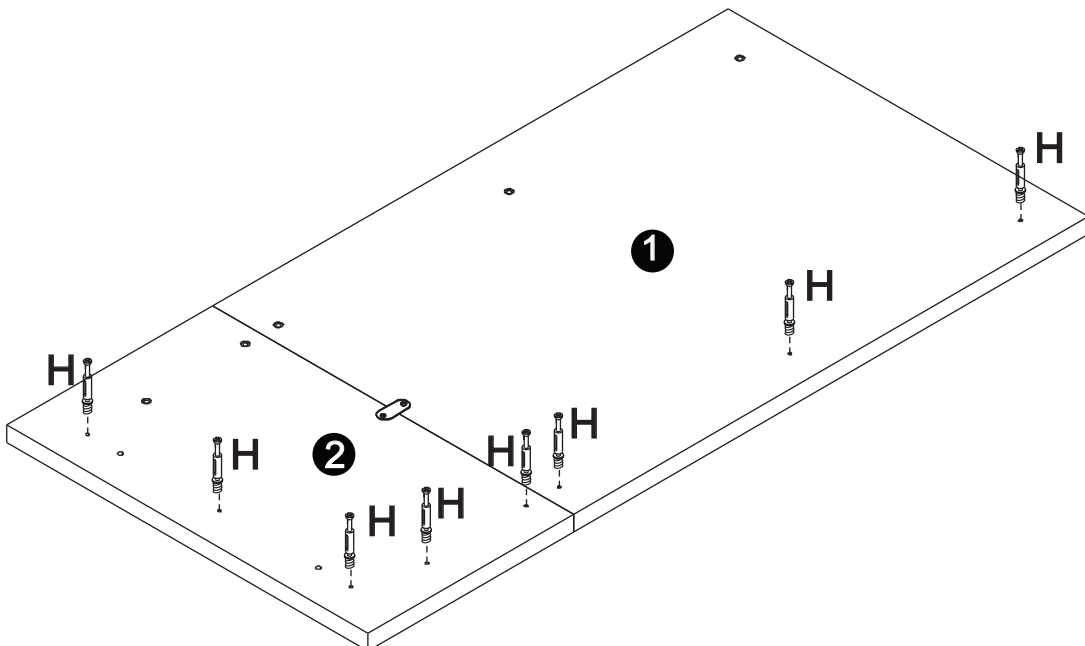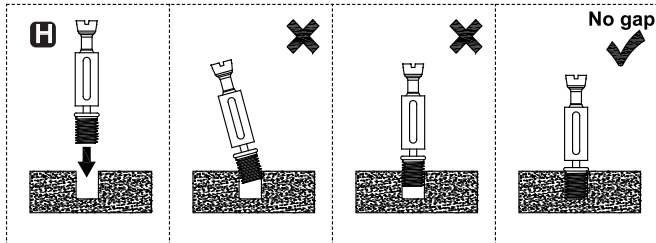
30

 


H

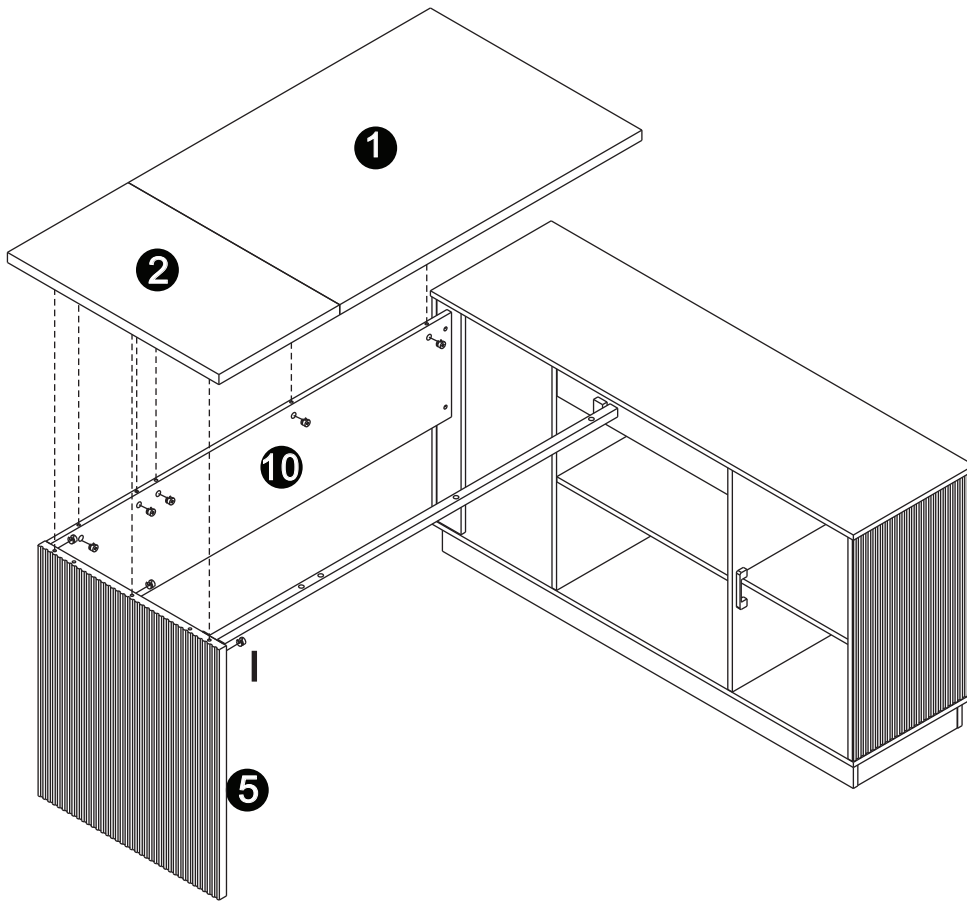M6x44.5mm
8pcs

 
31

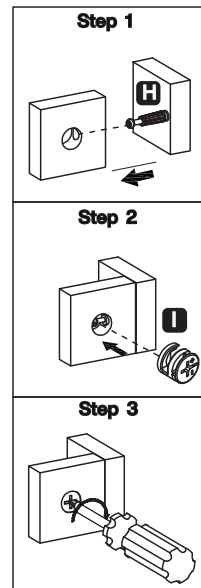


I

Ø15mm
8pcs



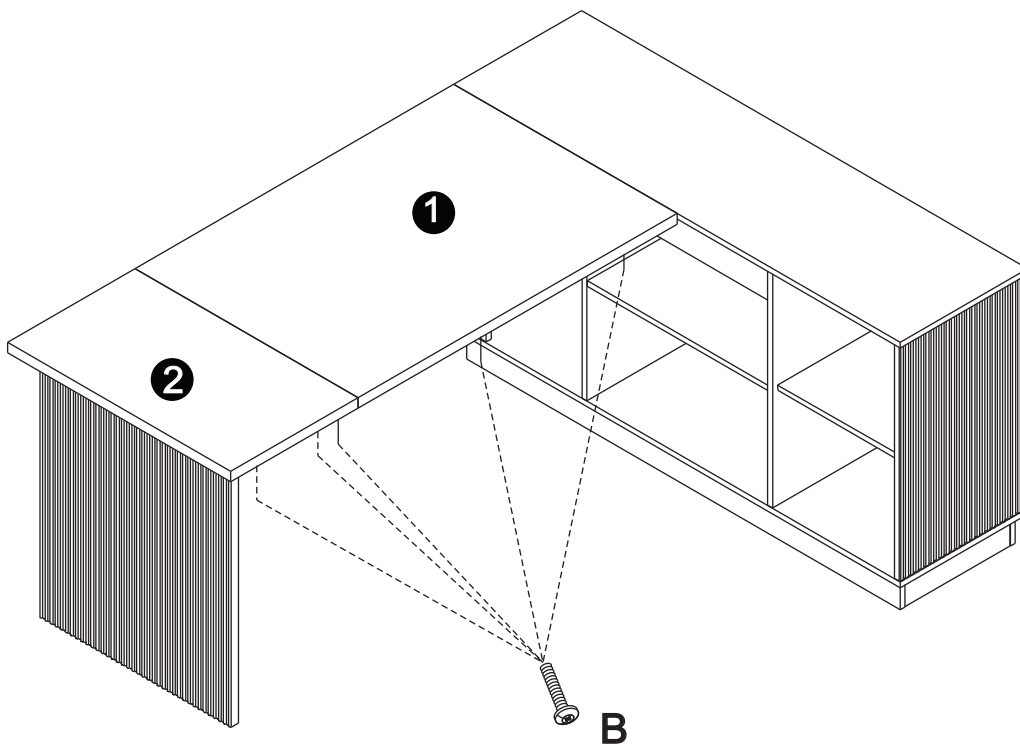



 
32



 

B

M6x35mm
5pcs

 
 
 
33

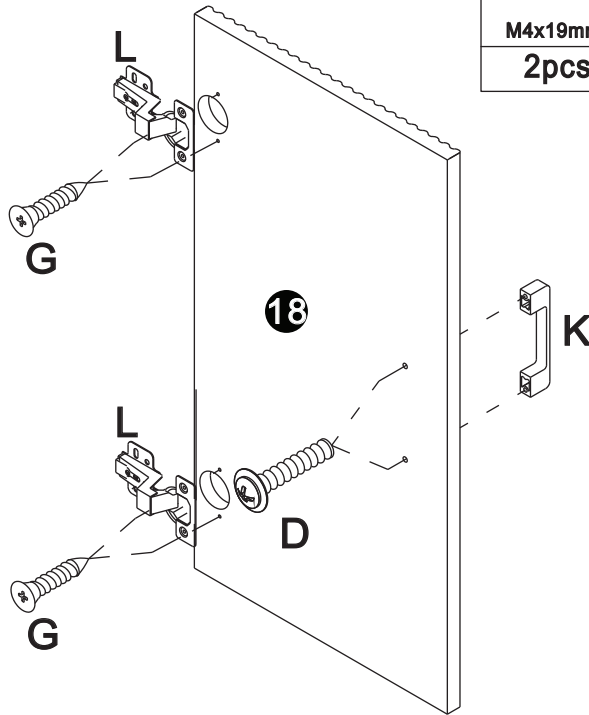D	L	K	G
			
M4x19mm			M3.5x14mm
2pcs	2pcs	1pc	4pcs



 
34

M	G
	
Ø21mm	M3.5x14mm
24pcs	8pcs

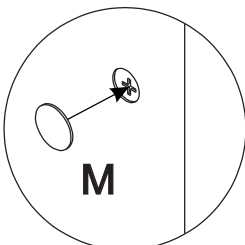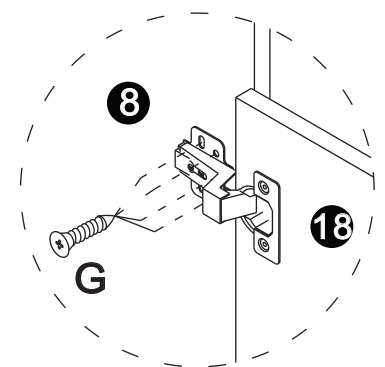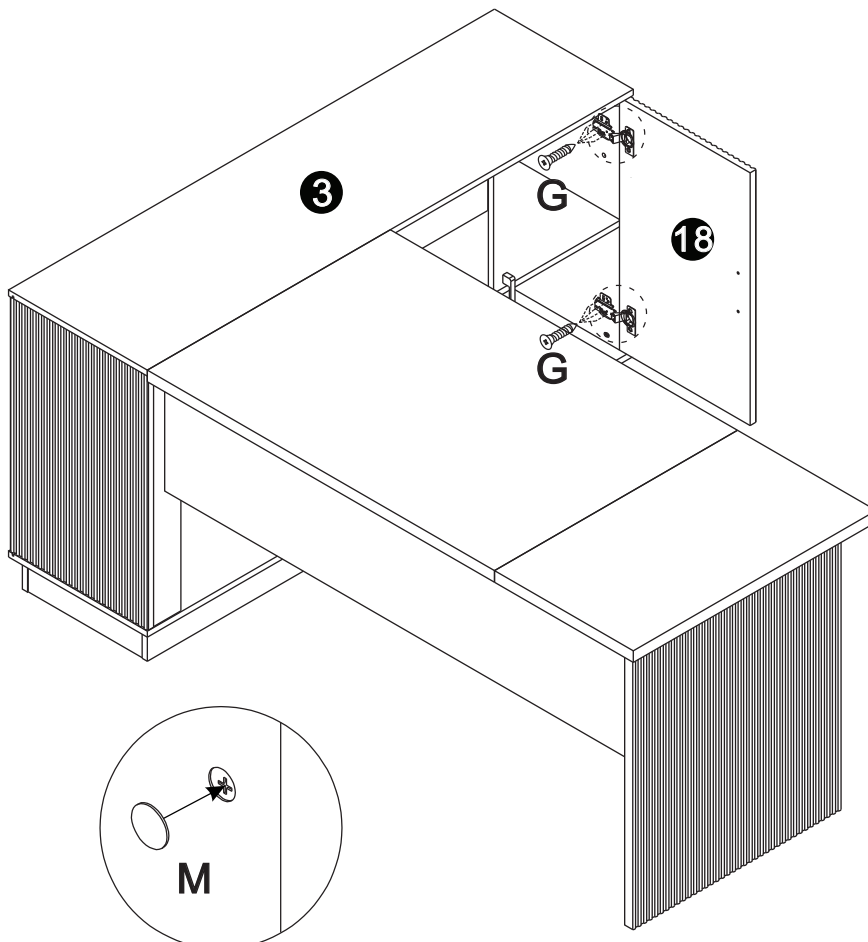

Step 1

 
Open the door.

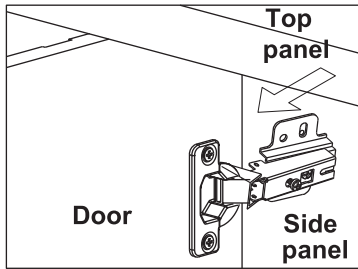

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

 
 
Step 2

Adjust the door panel to be flush with side panel and top panel edge.

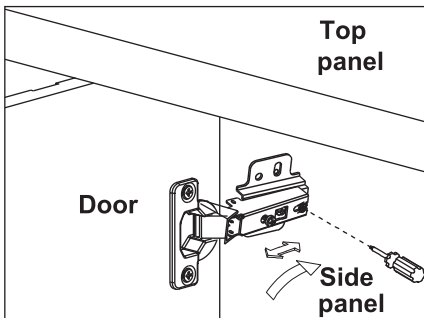

 
 
Loosen the screw indicated a little, adjust the hinge to the right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT

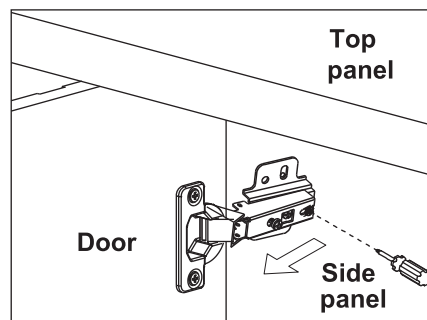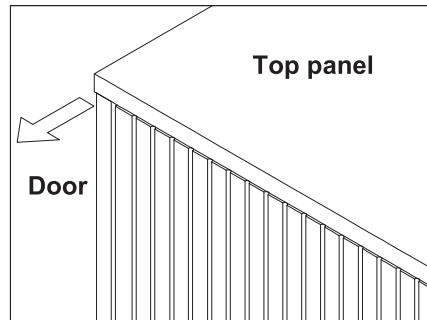

Pull the hinge forward a little.

 
Step 2b MOVE DOOR IN

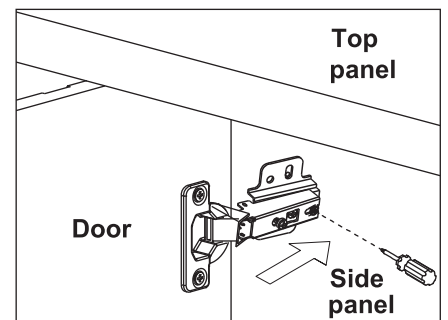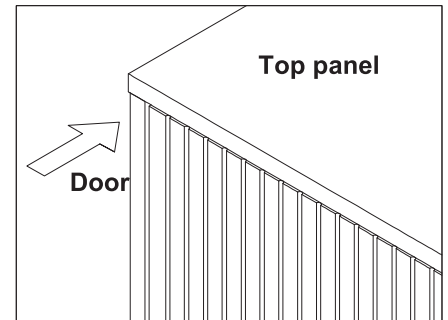

Push the hinge back a little.

 
 
Step 3

Adjust the gap between the door panel and the side panel.

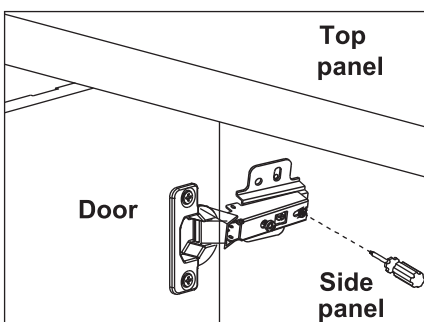

 
 
Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to the right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT

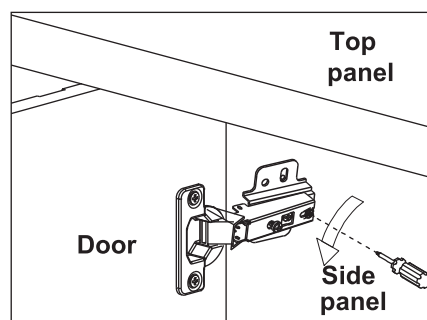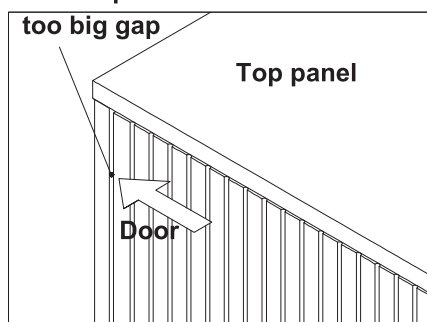

 
Turn the screw clockwise a little as shown to make the gap smaller

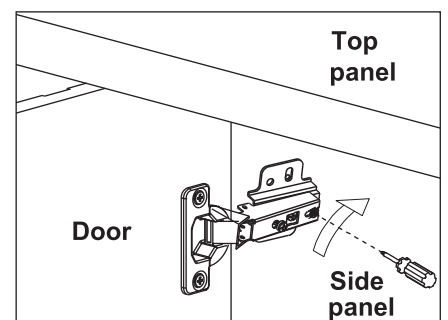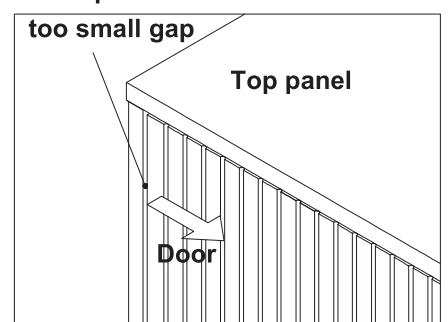

Step 3b MOVE DOOR RIGHT

 


Turn the screw counterclockwise a little as shown to make the gap bigger

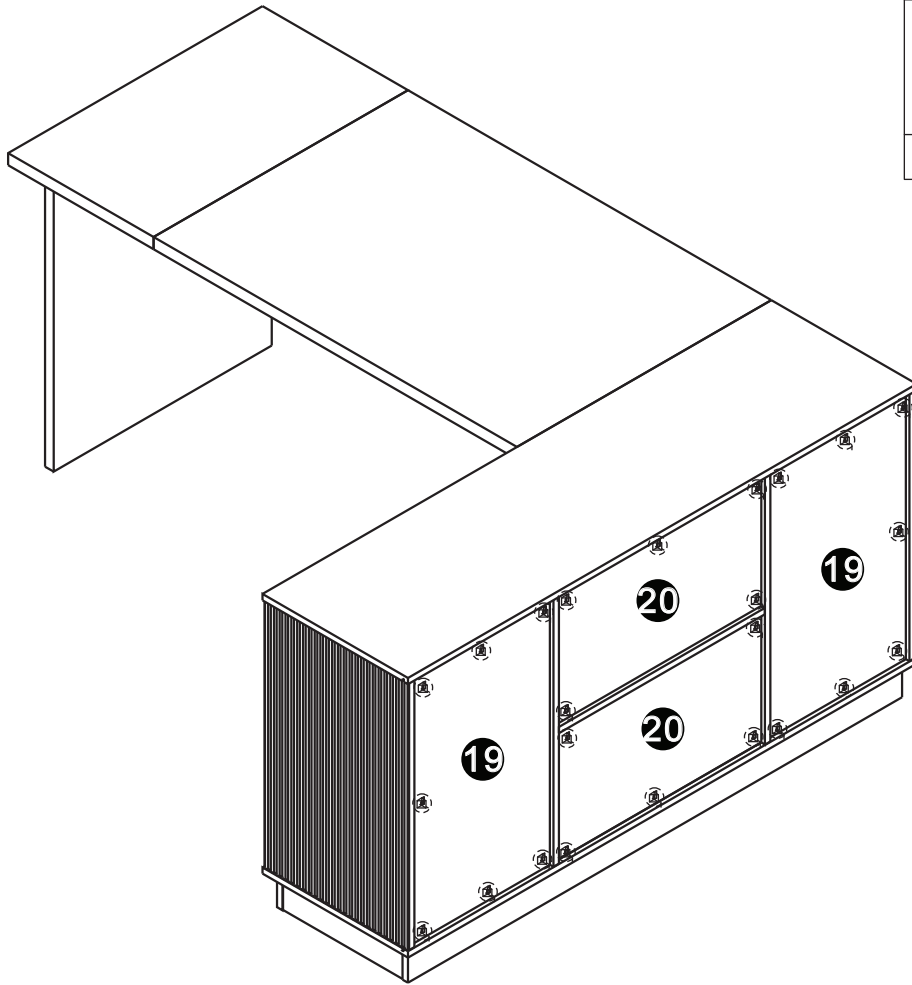35



G	N
	
M3.5x14mm	
24pcs	24pcs

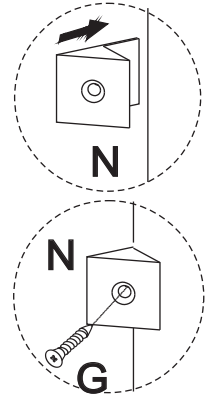

Thank you for your support!

