

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.



- Children should not climb or jump on the furniture.



- Do not write on furniture without a padded barrier to protect the surface.



- To obtain the longest lifespan of outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and/or place under patio or awings.

 


- Stains may be removed with mild soap solution and damp cloth.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

DINING CHAIR





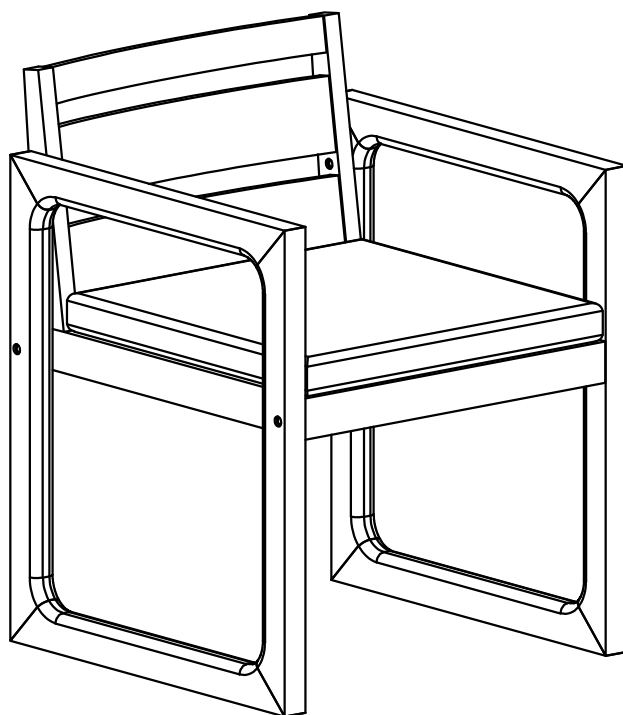


CAUTION: This DINING CHAIR is NOT a TOY.


Keep your child / children at bay during the assembly process.

Whenever lifting or moving the DINING CHAIR and to prevent any damage to it, two adults may be needed to execute these actions.

     PART LIST (N776P466783)

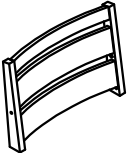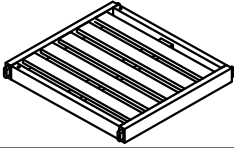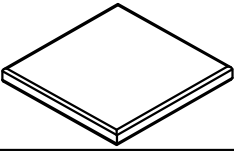Label	Picture	Description	QTY
A		Backrest	1pc
B		Seat Frame	1pc
C1		Leg Frame- Left	1pc
C2		Leg Frame- Right	1pc
D		Seat cushion	1pc

 
HARDWARE LIST (N776P466783)

Label	Picture	Description	QTY
①		Bolt M6 x 35 mm	2+1
②		Bolt M6 x 75 mm	6+1
③		Nuts M6x13xØ10mm	6+1
④		Flat washer Ø14xM6x1mm	8+1
⑤		Spring washer Ø12xM6x2mm	8+1
⑥		Allen wrench M4	1
⑦		Screw Driver (Not Provided)	

ASSEMBLY PREPARATION


Before Beginning Assembly:

 A

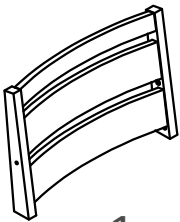


x 1

 B

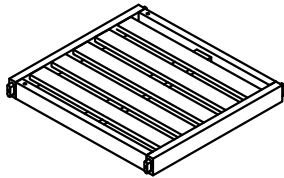


x 1

 C1

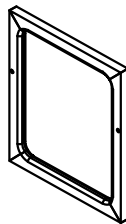


x 1

 C2

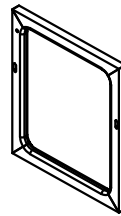

x 1

 D

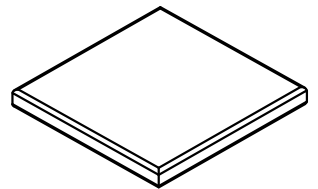

x 1



x 3



x 7



x 7



x 9



x 9



x 1



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-



 
• Assemble on a clean non - marring surface (packing foam)-



• Save all packaging until finished-


ASSEMBLY PREPARATION

Overview

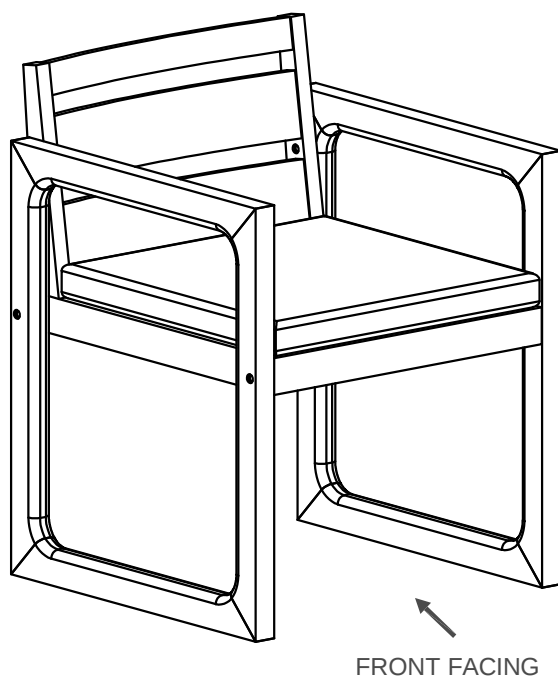

This DINING CHAIR has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the DINING CHAIR parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

 Step 1:

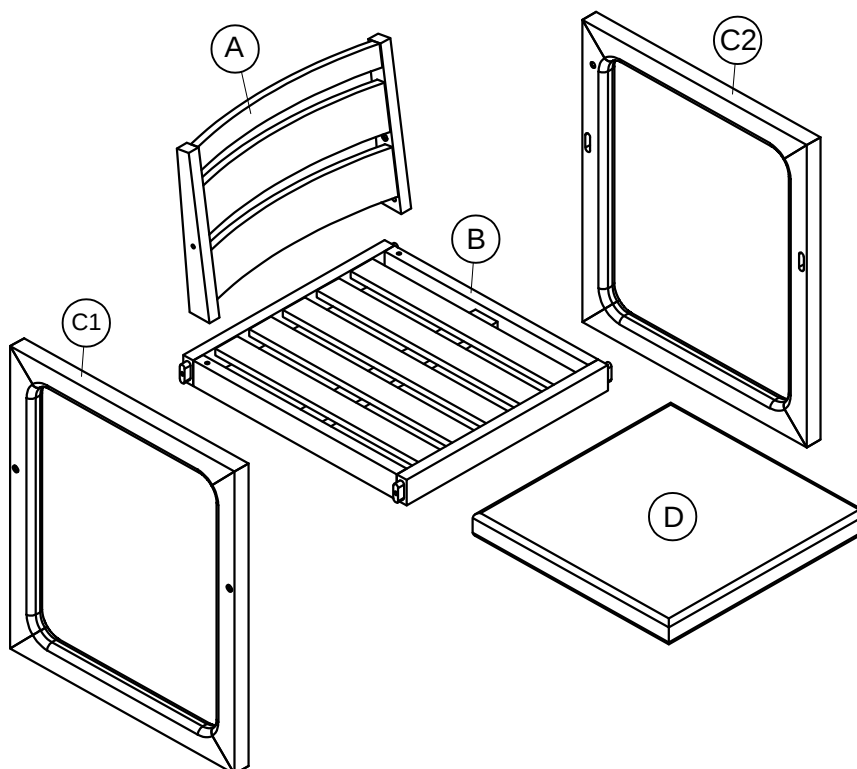


Unpack and place all parts on a clean, non-marring surface.

STEP 2: Following below illustration

- Using hardware #2,#3 and #4,#5 connect B with C1





2		2
3		2
4		2
5		2
6		1

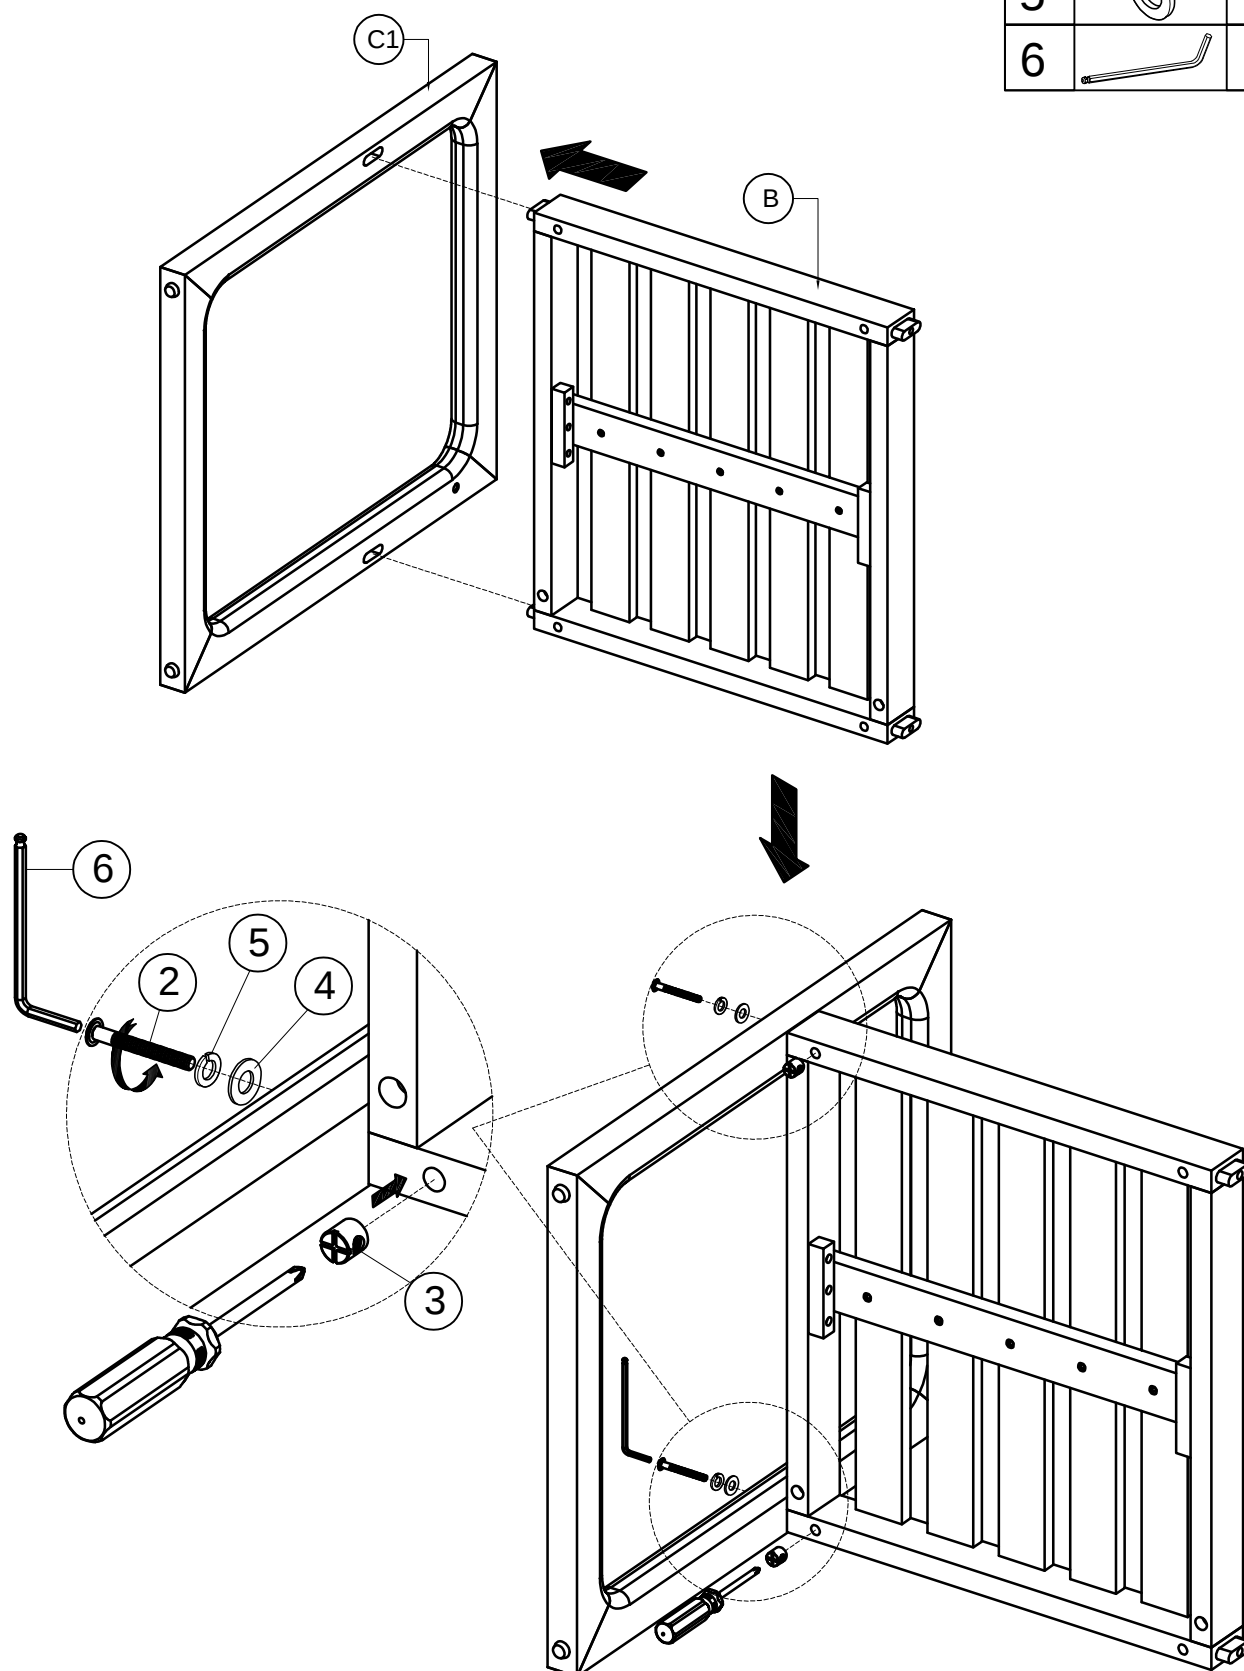 

STEP 3: Following below illustration

- Using hardware #1, #2, #3 and #4, #5 connect A with C1 assembly step 1


1		1
2		2
3		2
4		3
5		3
6		1

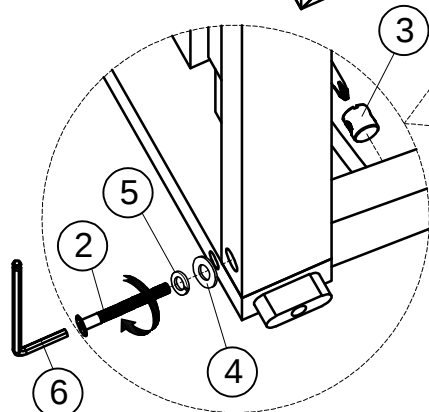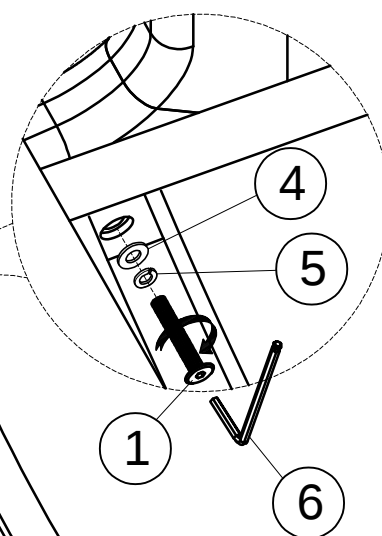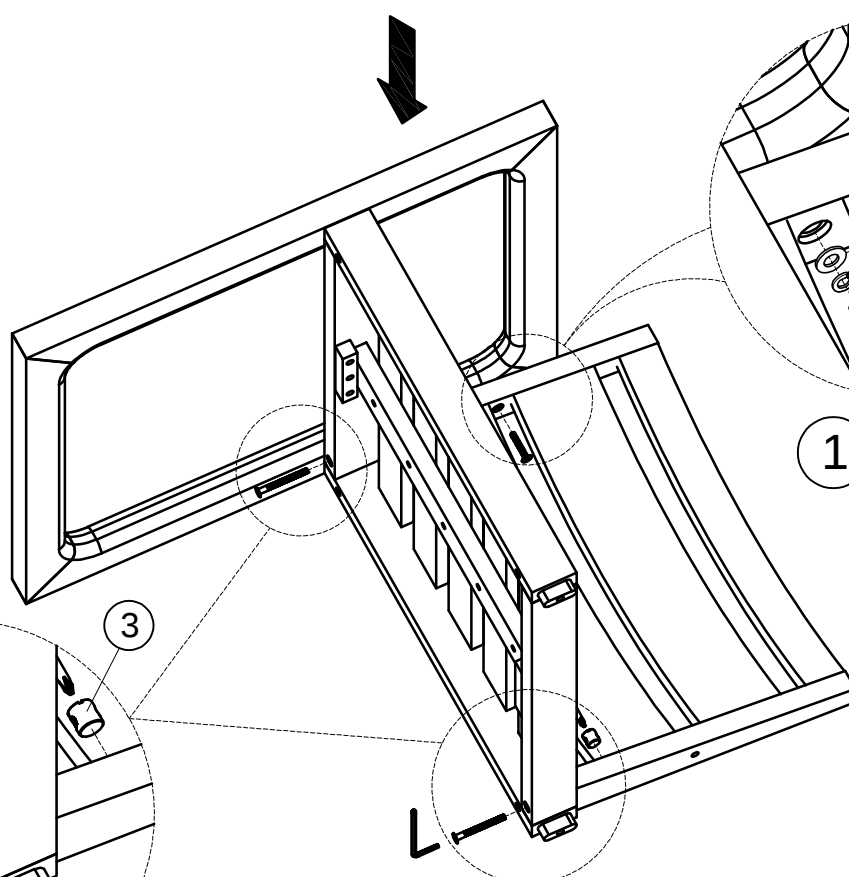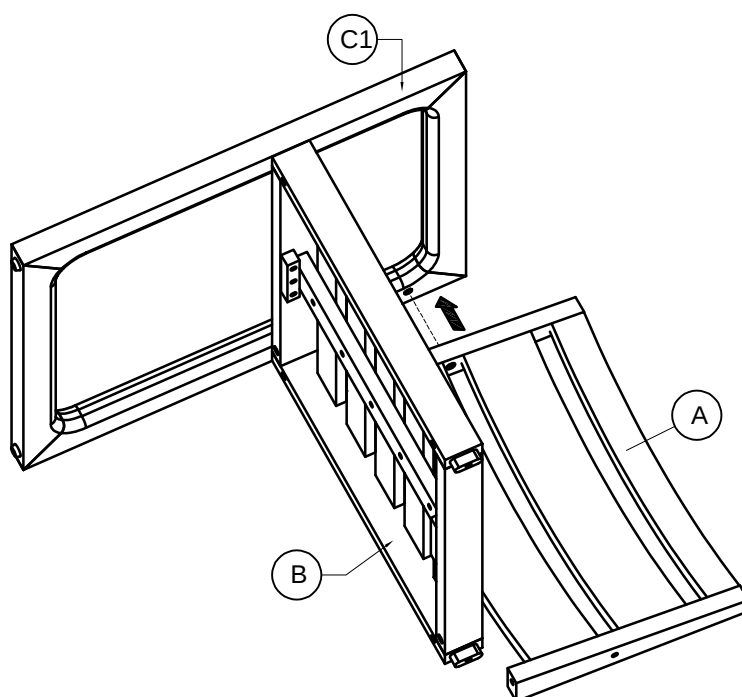    



STEP 4: Following below illustration

- Using hardware #1, #2, #3 and #4, #5 connect C2 with A and B
assembly step 2

1		1
2		2
3		2
4		3
5		3
6		1

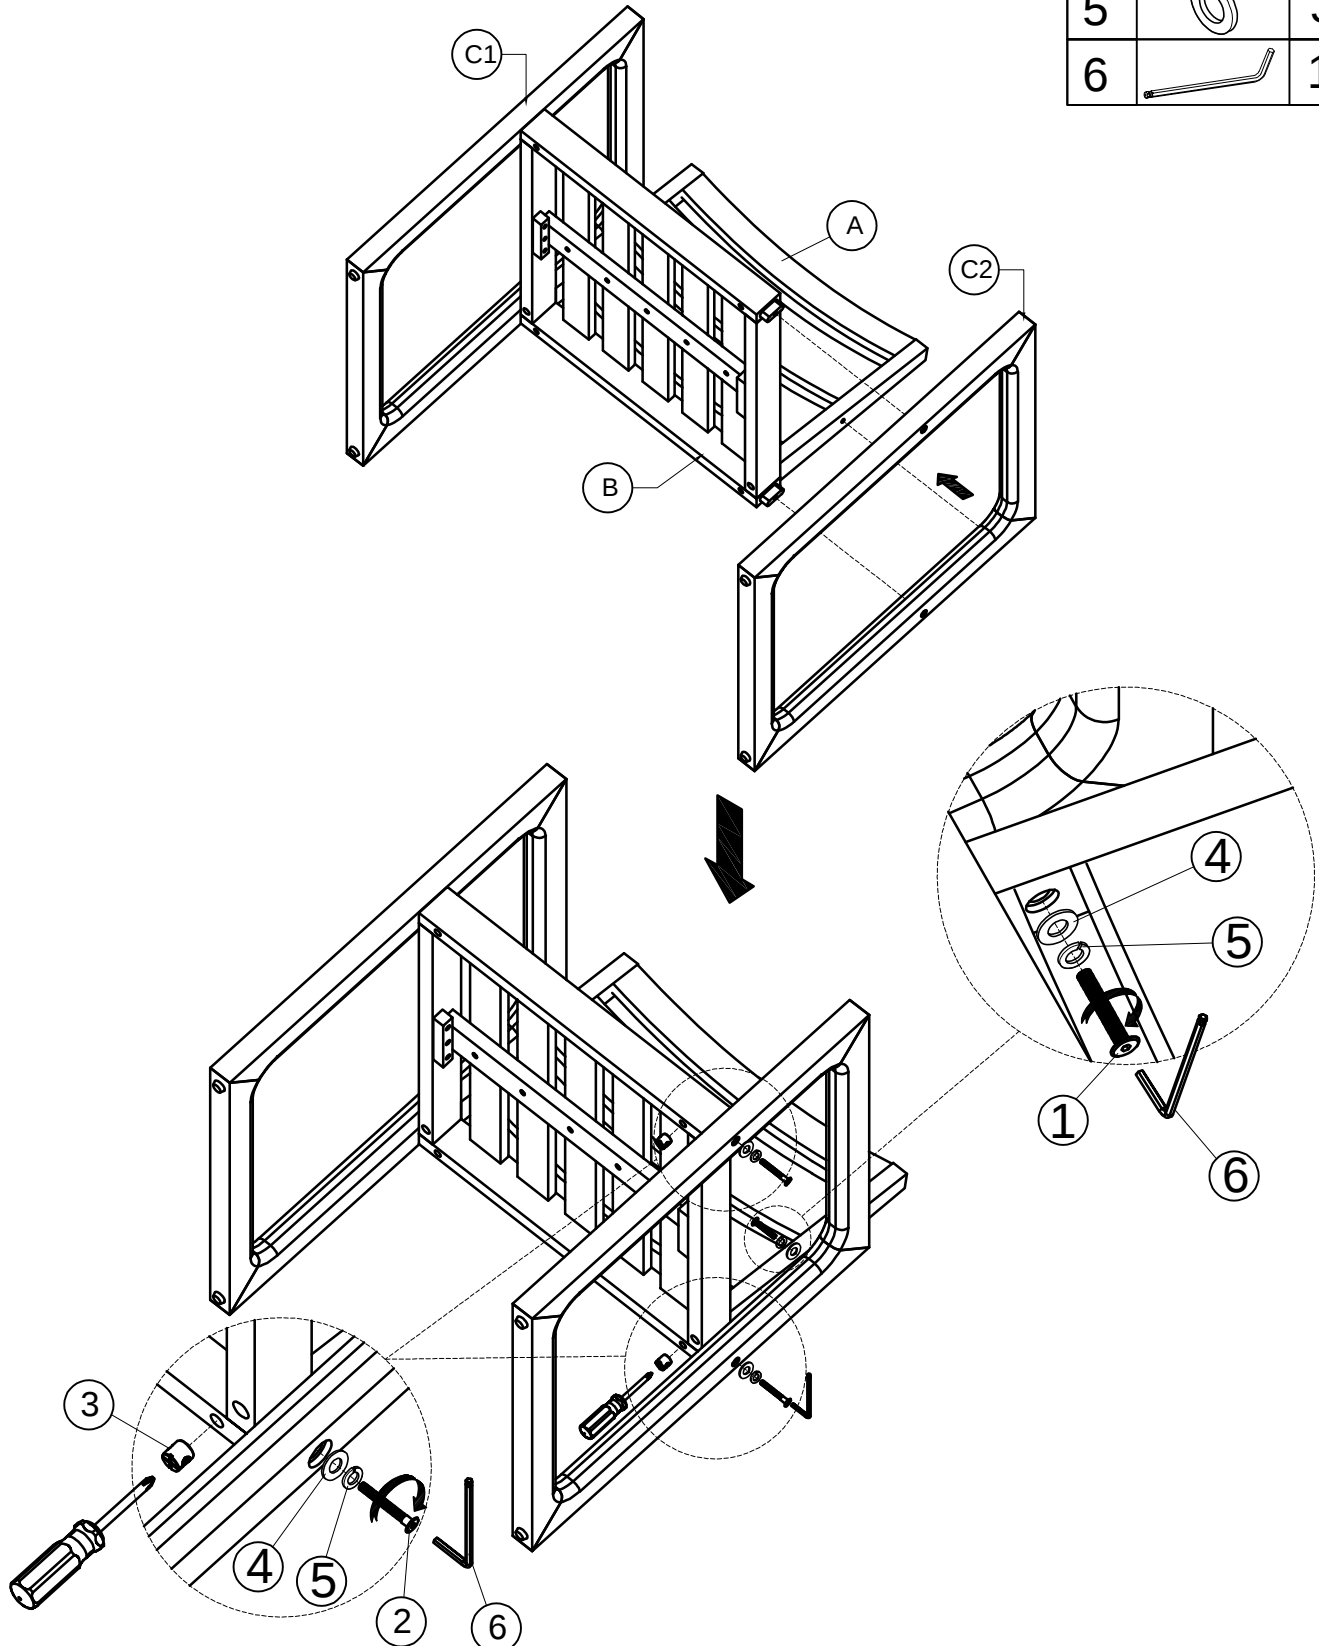 

  STEP 5: Following below illustration

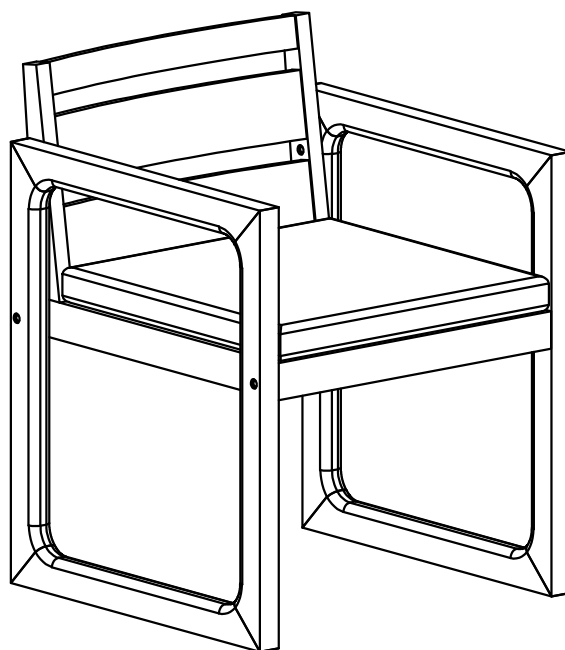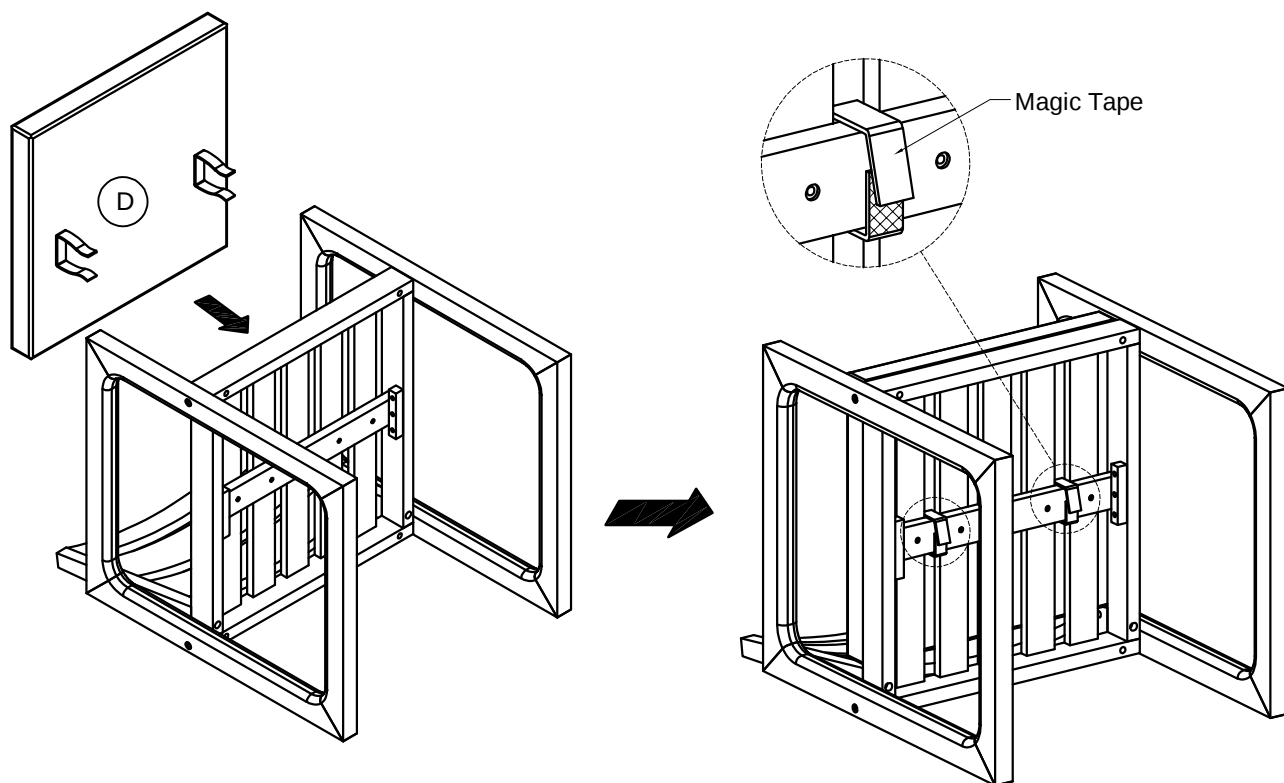

Turn the DINING CHAIR right side up
Place the DINING CHAIR on a flat, level surface to make sure it is balance.
Inspect the DINING CHAIR and make sure all parts are adequately connected. Then EXERT pressure, floorwards onto the DINING CHAIR with both hands or carrefull sit onto the DINING CHAIR. This pressure will help align all parts at all joints. Check for wobbles on a LEVEL surface.
If no wobbles are found proceed to tighten the screws or bolts in a sequential manner, until evenly secured.

CAUTION 1: When tightening these screws or bolts, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one. This would cause the frame to warp.

WARNING ! IF THE DINING CHAIR IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.
Your **DINING CHAIR** is ready to be used.

CAUTION 2: This DINING CHAIR can only be used on a flat, level surface.