 
 


1870100387

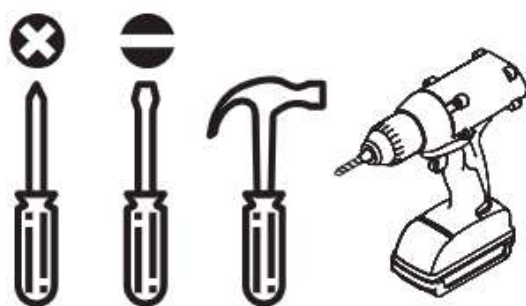

Tools required
(not included)

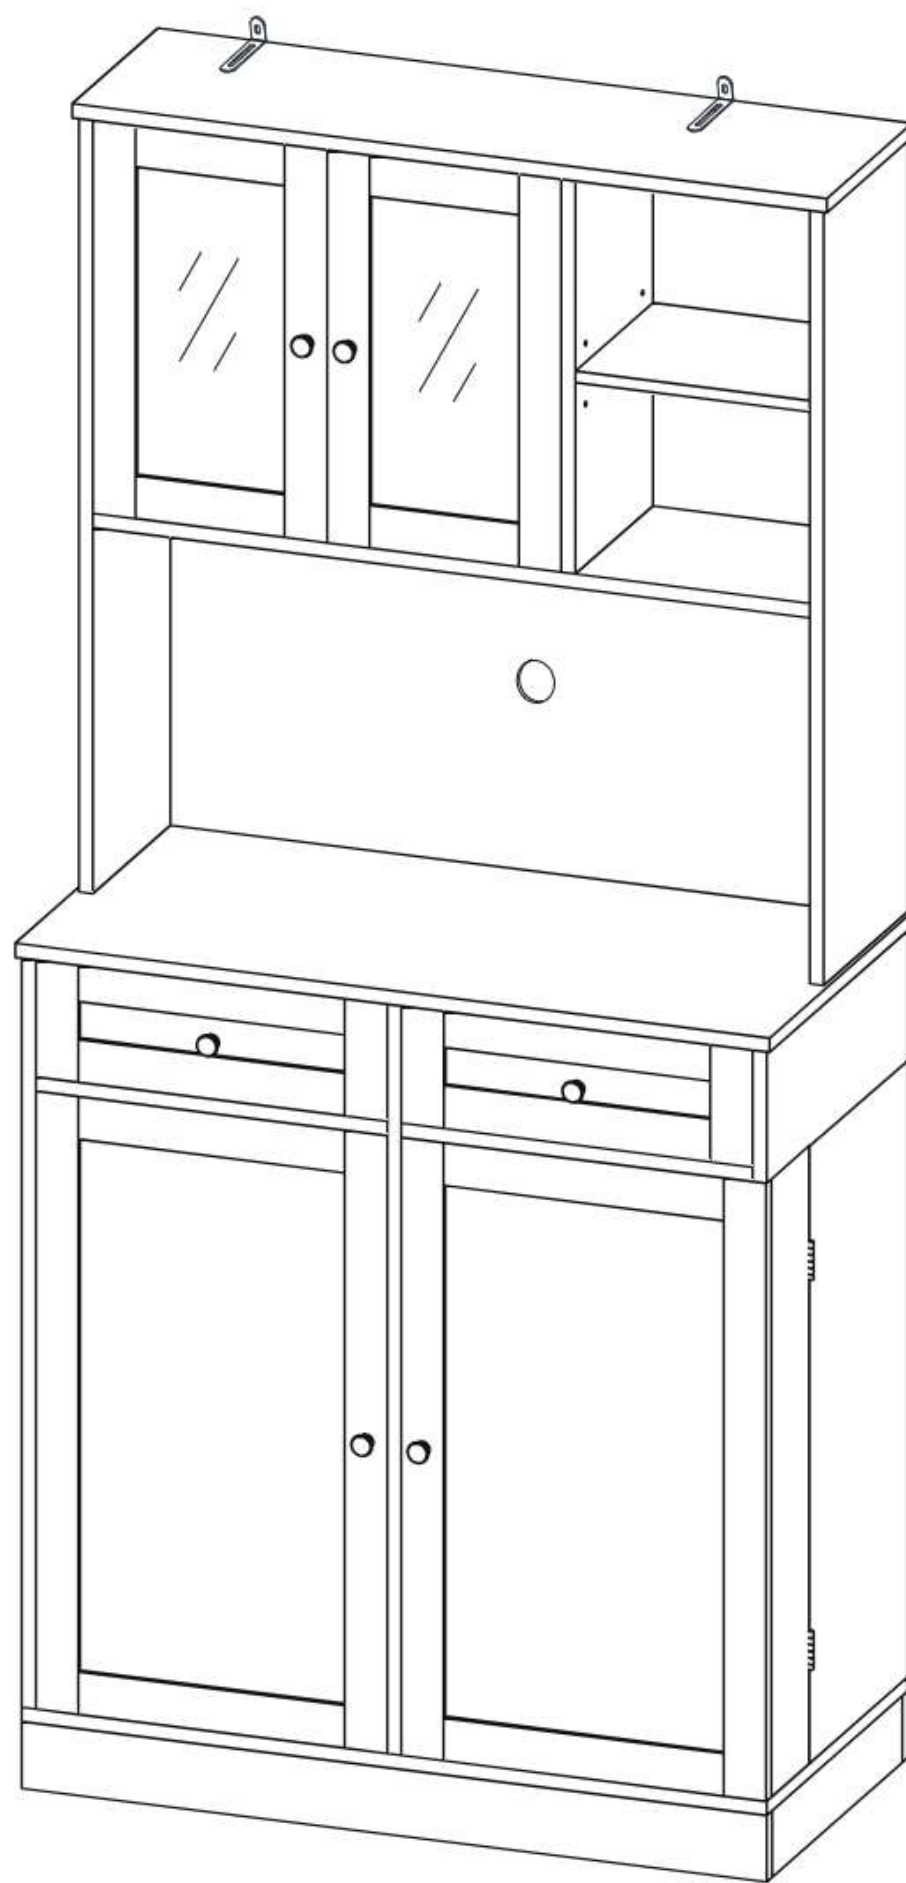

2 people for assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING **In order to help prevent overturning –** **please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

 
Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

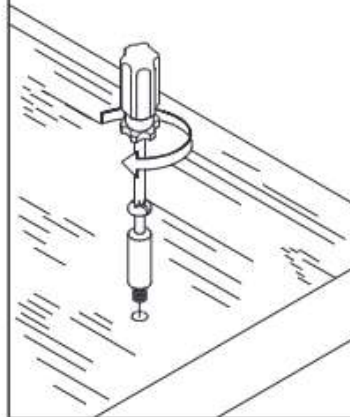

Step 2

Push the male camlock into the entry hole.

 2

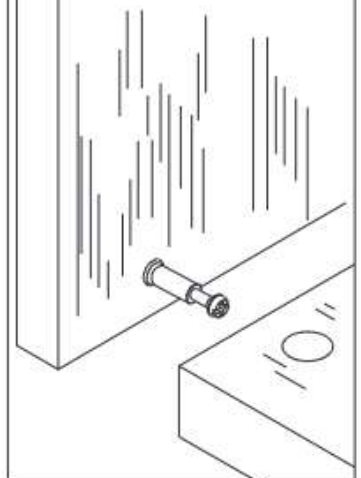


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

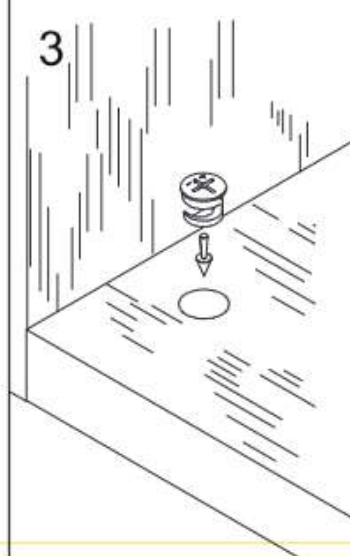


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

 4

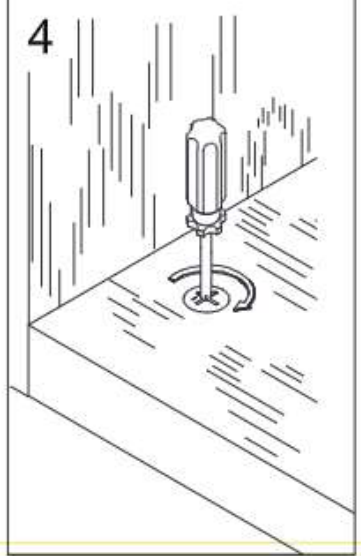

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

 
- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label.
Do not remove!


Parts List

①

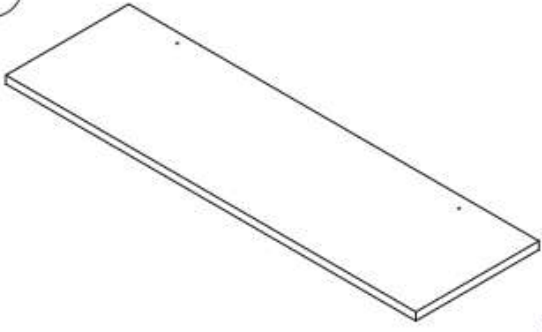


x1

 ②

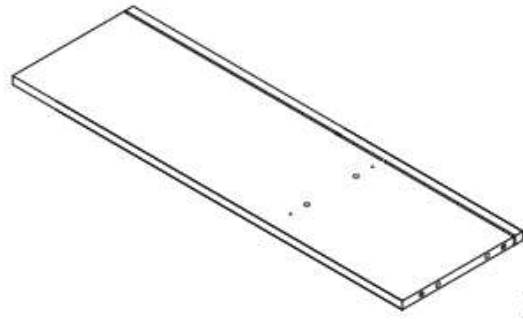


x1

 ③

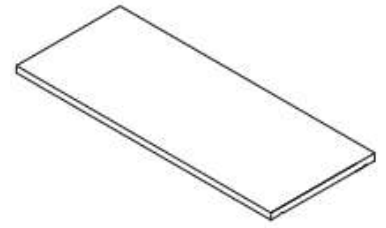


x1

 ④

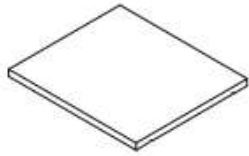


x1

 ⑤

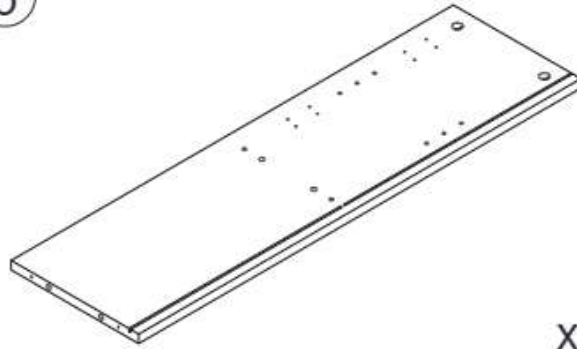


x1

 ⑥

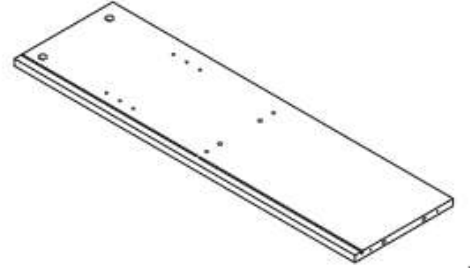


x1

 ⑦

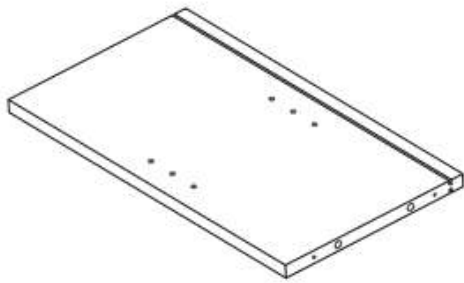

x1

 ⑧

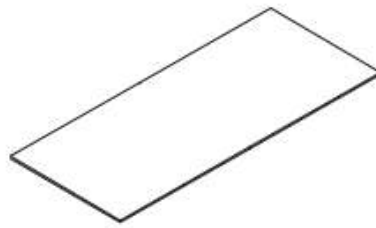


x2

⑨




x1

 ⑩

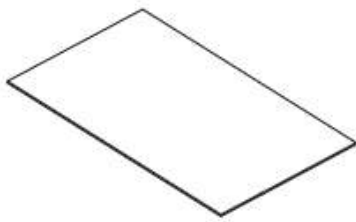


x1

 ⑪

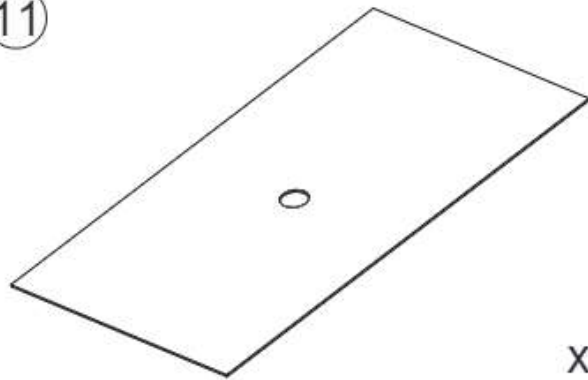


x1

 ⑫

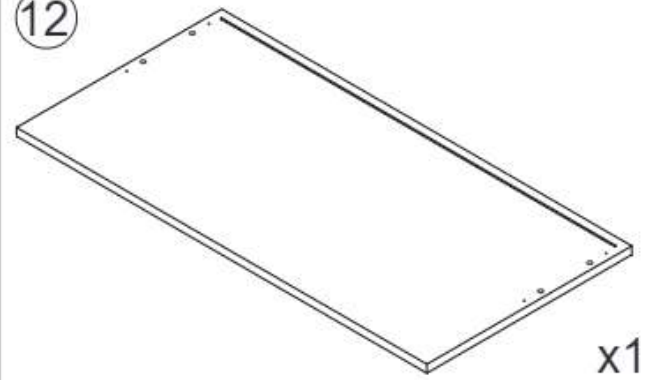


x1

 ⑬

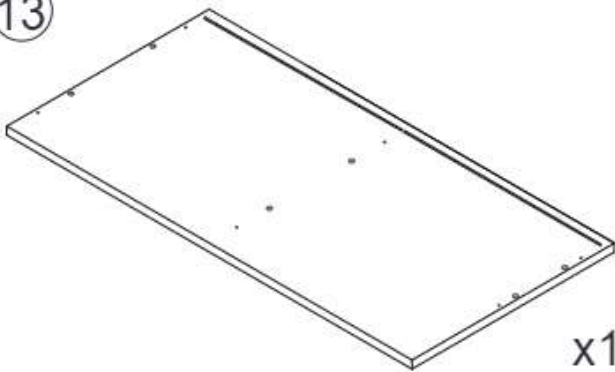


x1

 ⑭

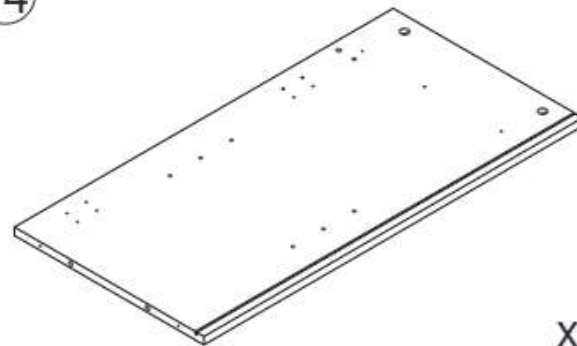


x1

 ⑮

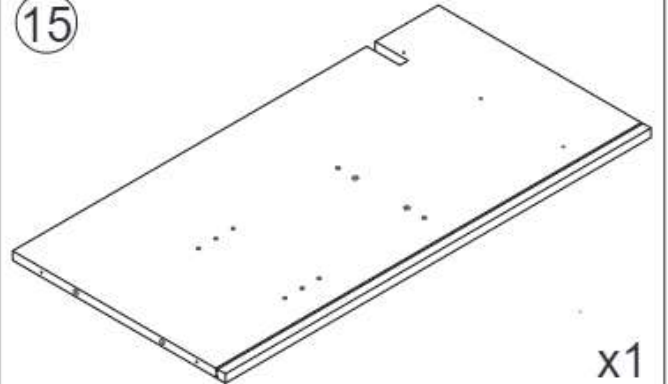


x1

 ⑯

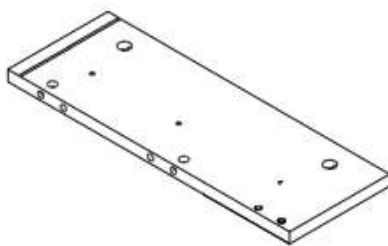


x1

 ⑰

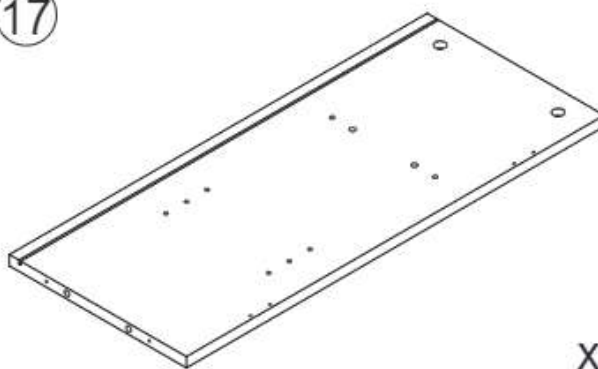

x1

 
⑱

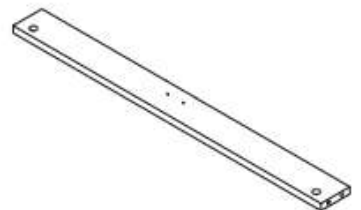

x1

Parts List

 19

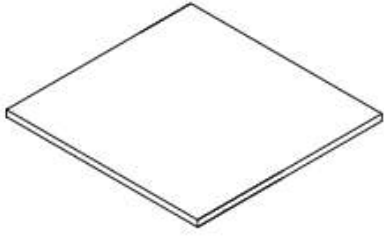


x1

20




x1

 21

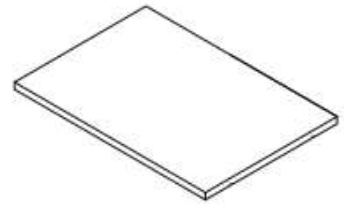

x1

 22

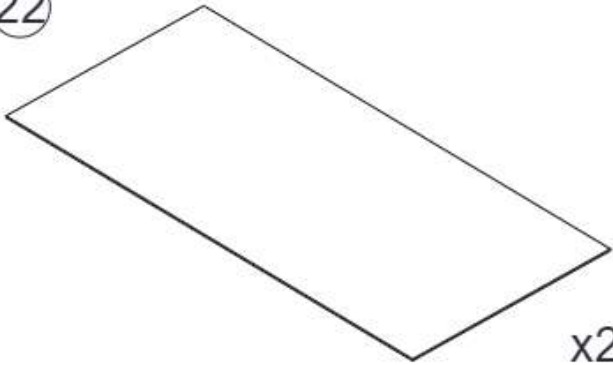


x2

23




x1

 24

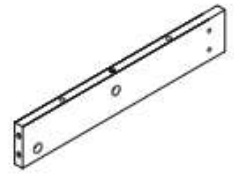


x1

 25

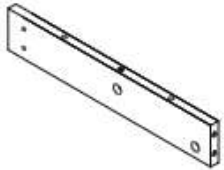


x1

 26

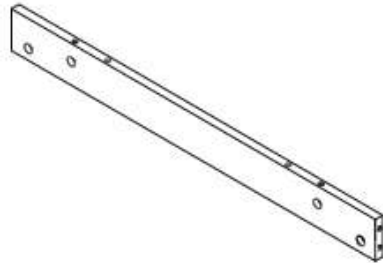


x1

 27

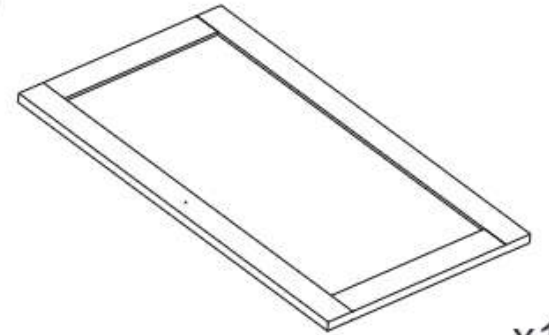


x1

 28

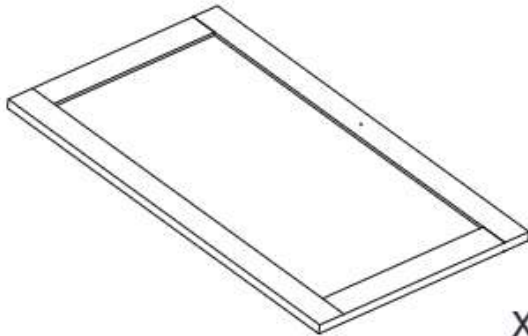

x1

 29

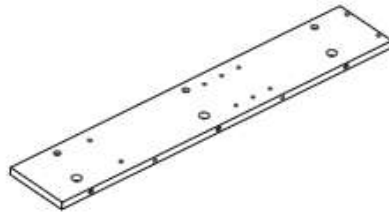


x1

30




x1

 31

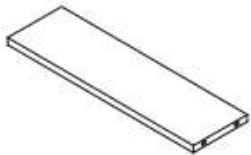

x2

 32

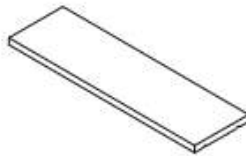


x1

33




x3

 34

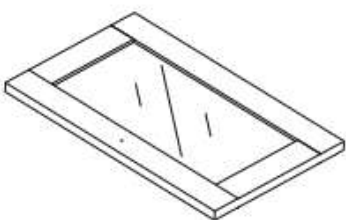


x2

 35

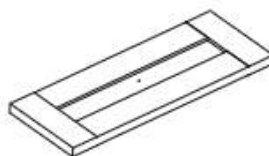

x2

 
36

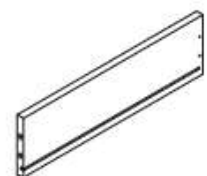

x2


Parts List

 37

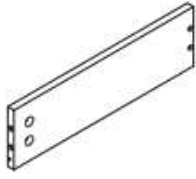


x2

 38

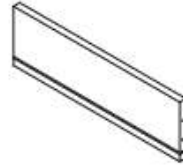

x2


 
39

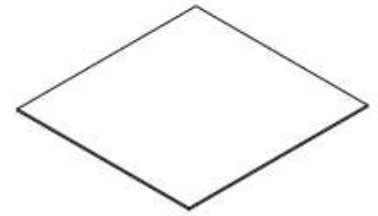





x2

(A) x50+2 M6x35mm	(B) x52+2 Φ15x9mm	(C) x56+2 Φ6x30mm	(D) x20+2 M4x35mm	(E) x64+2 M3.5x12mm	(F) x2 M3x12mm	(G) x20+2	(H) x20+2
(I) x1	(J) x1	(K) x6	(L) x12+1	(M) x2	(N) x6	(O) x4 M4x16mm	(P) x2 M4x8mm
(Q) x2	(R) x2 M6x50mm	(S) x2	(CL) x2	(CR) x2	(DR) x2	(DL) x2	






 
 
1

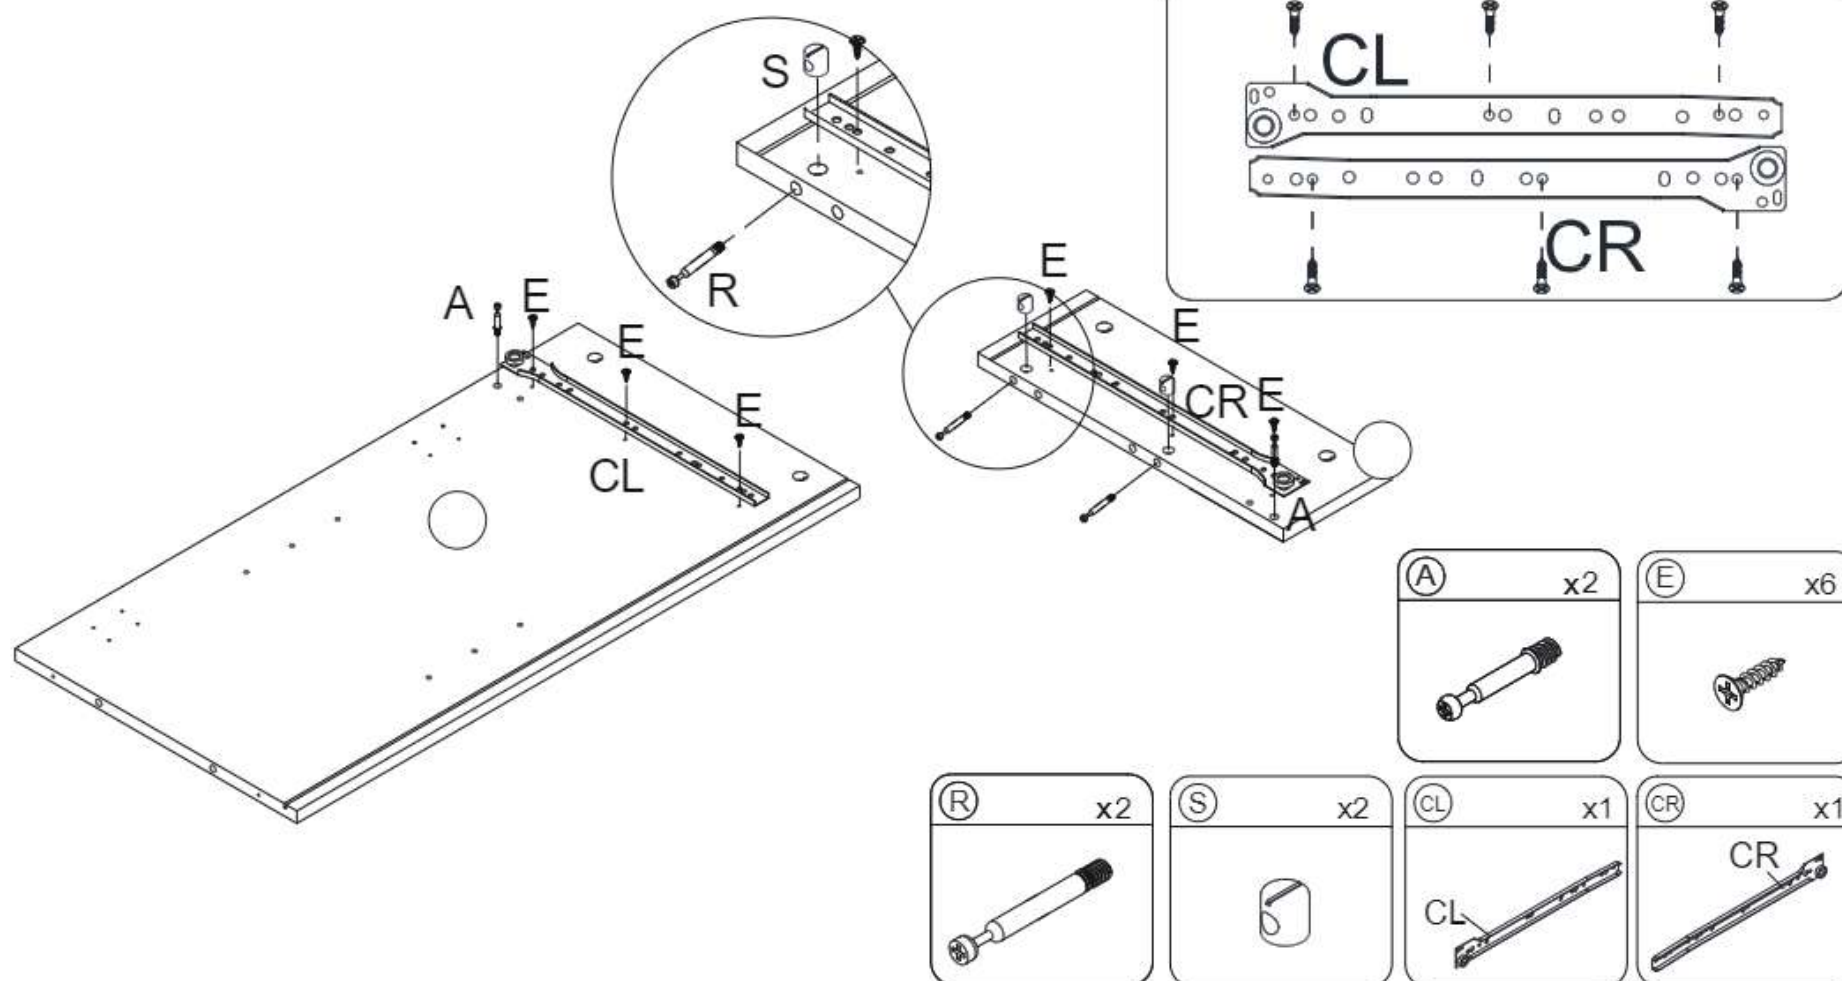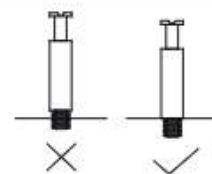


2

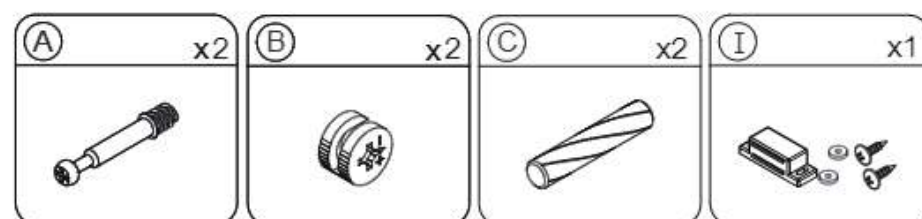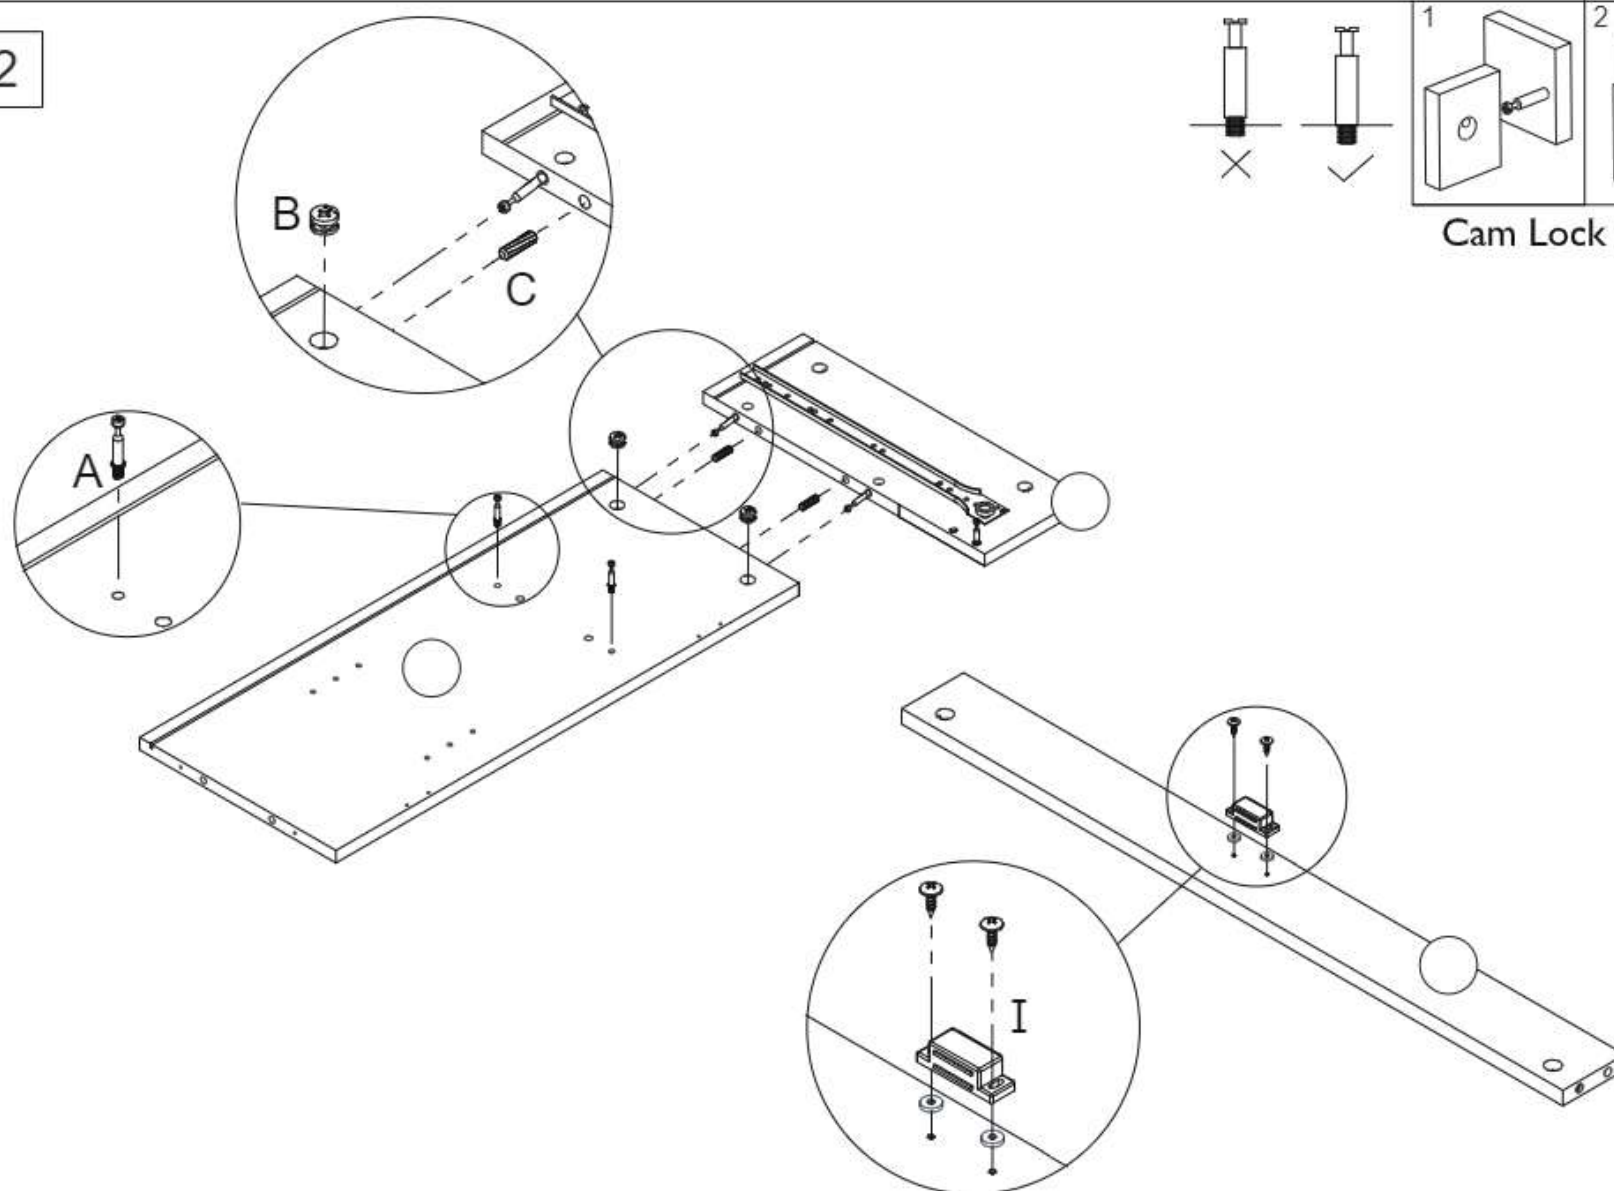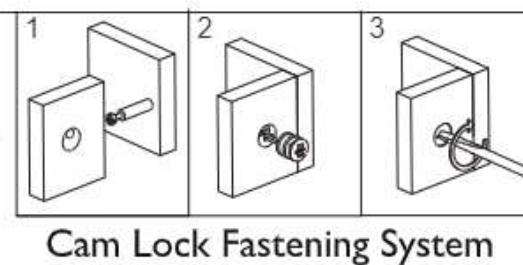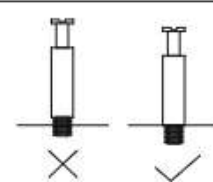    




3

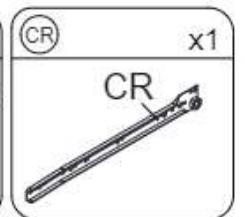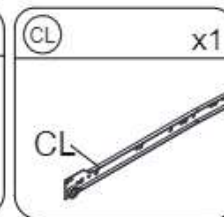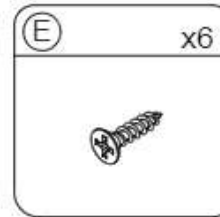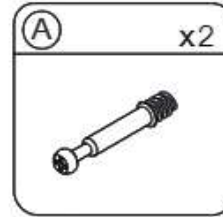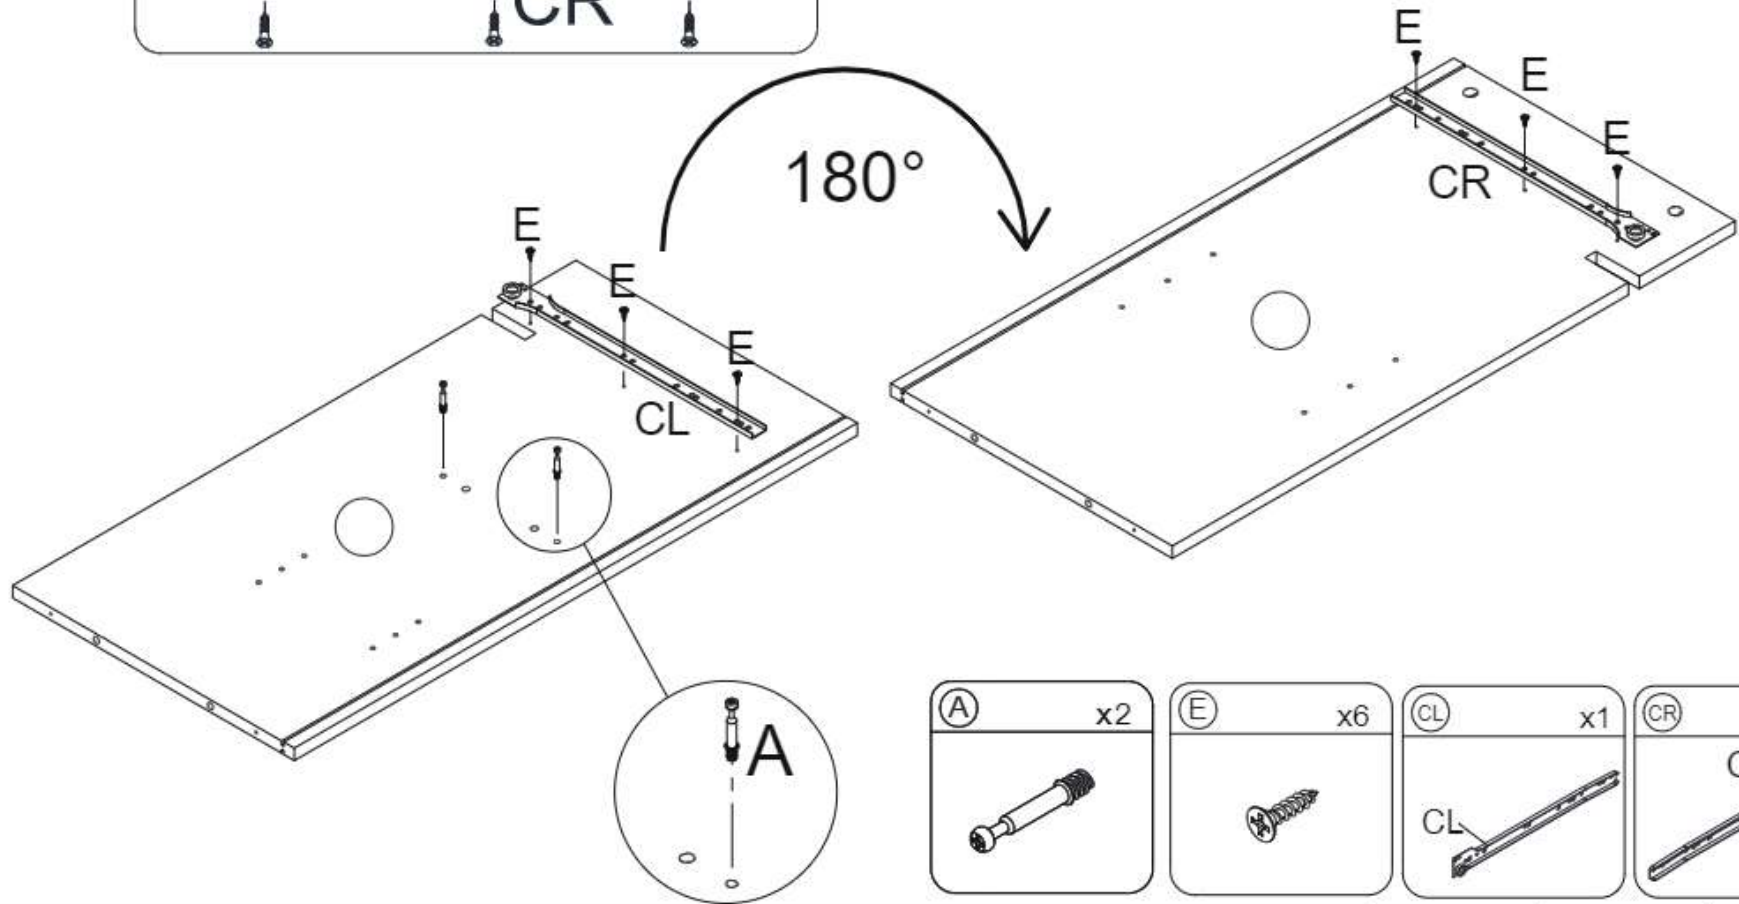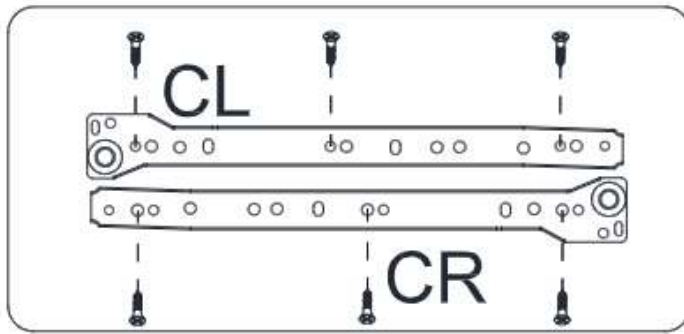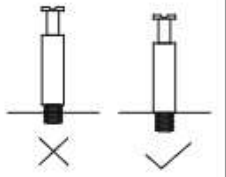       



4

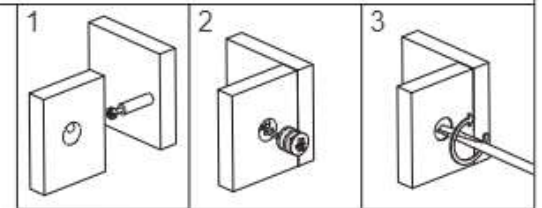 



Cam Lock Fastening System

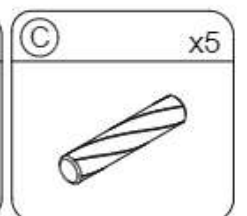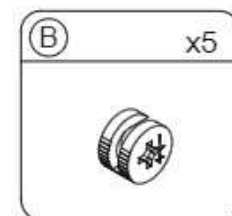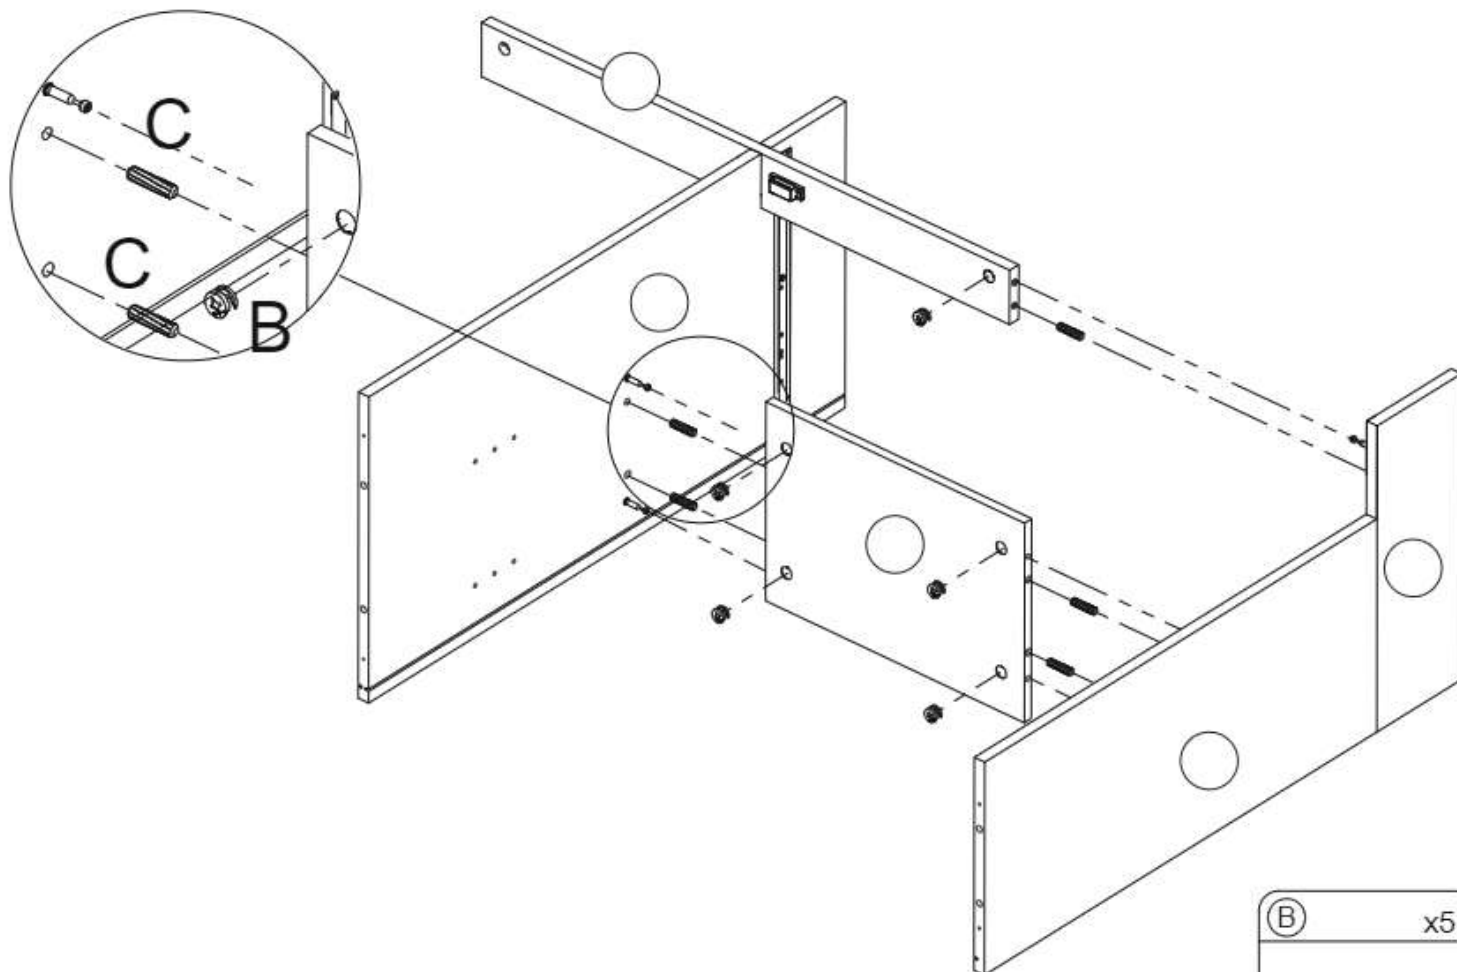   



5

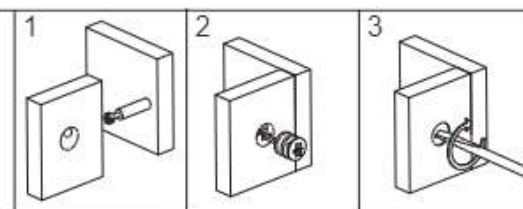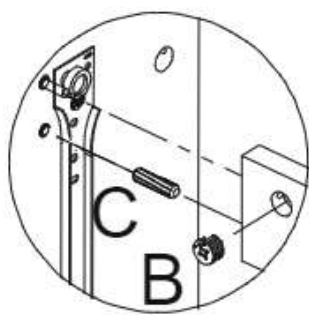  


Cam Lock Fastening System

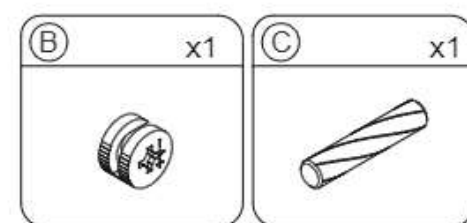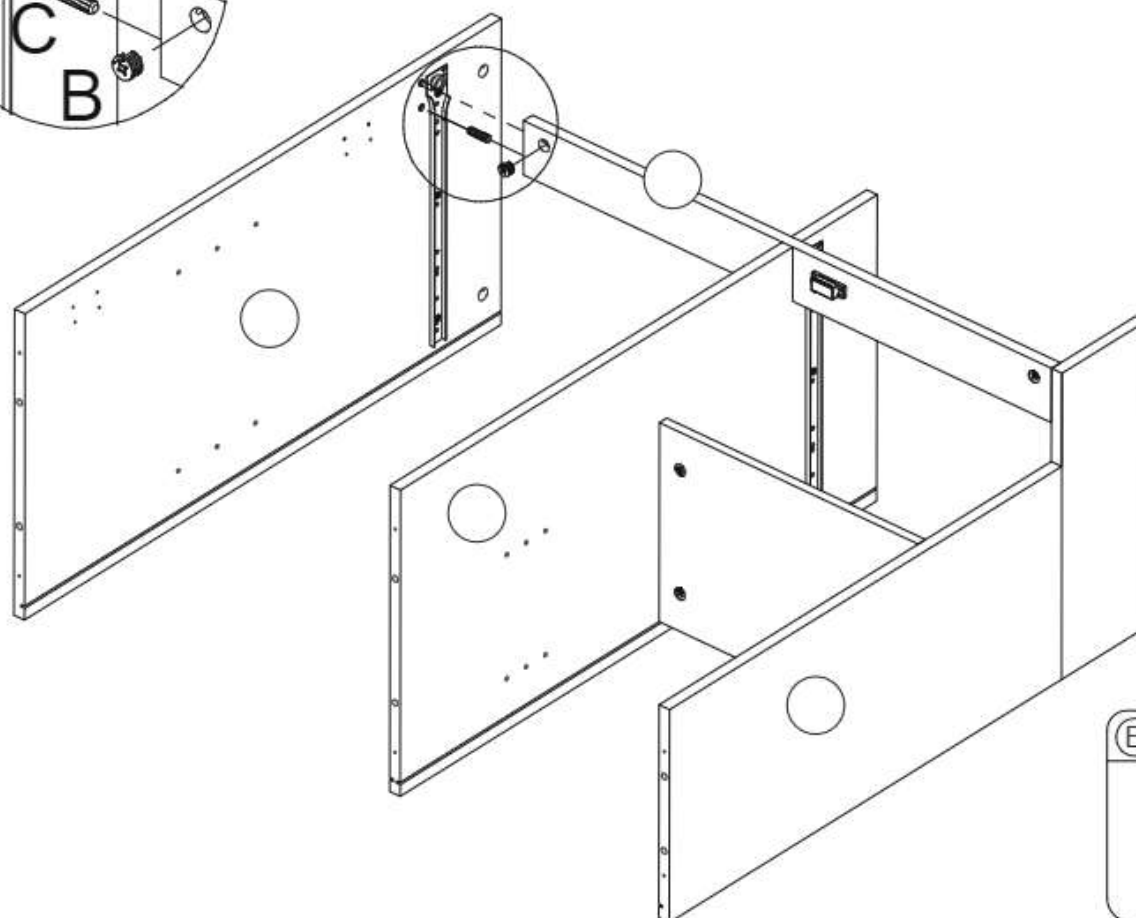  


6

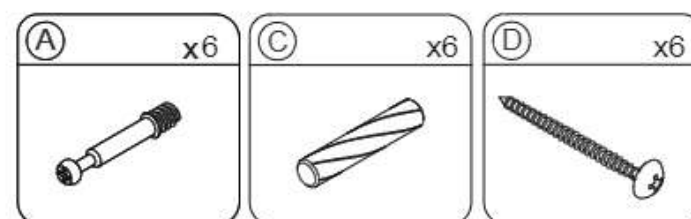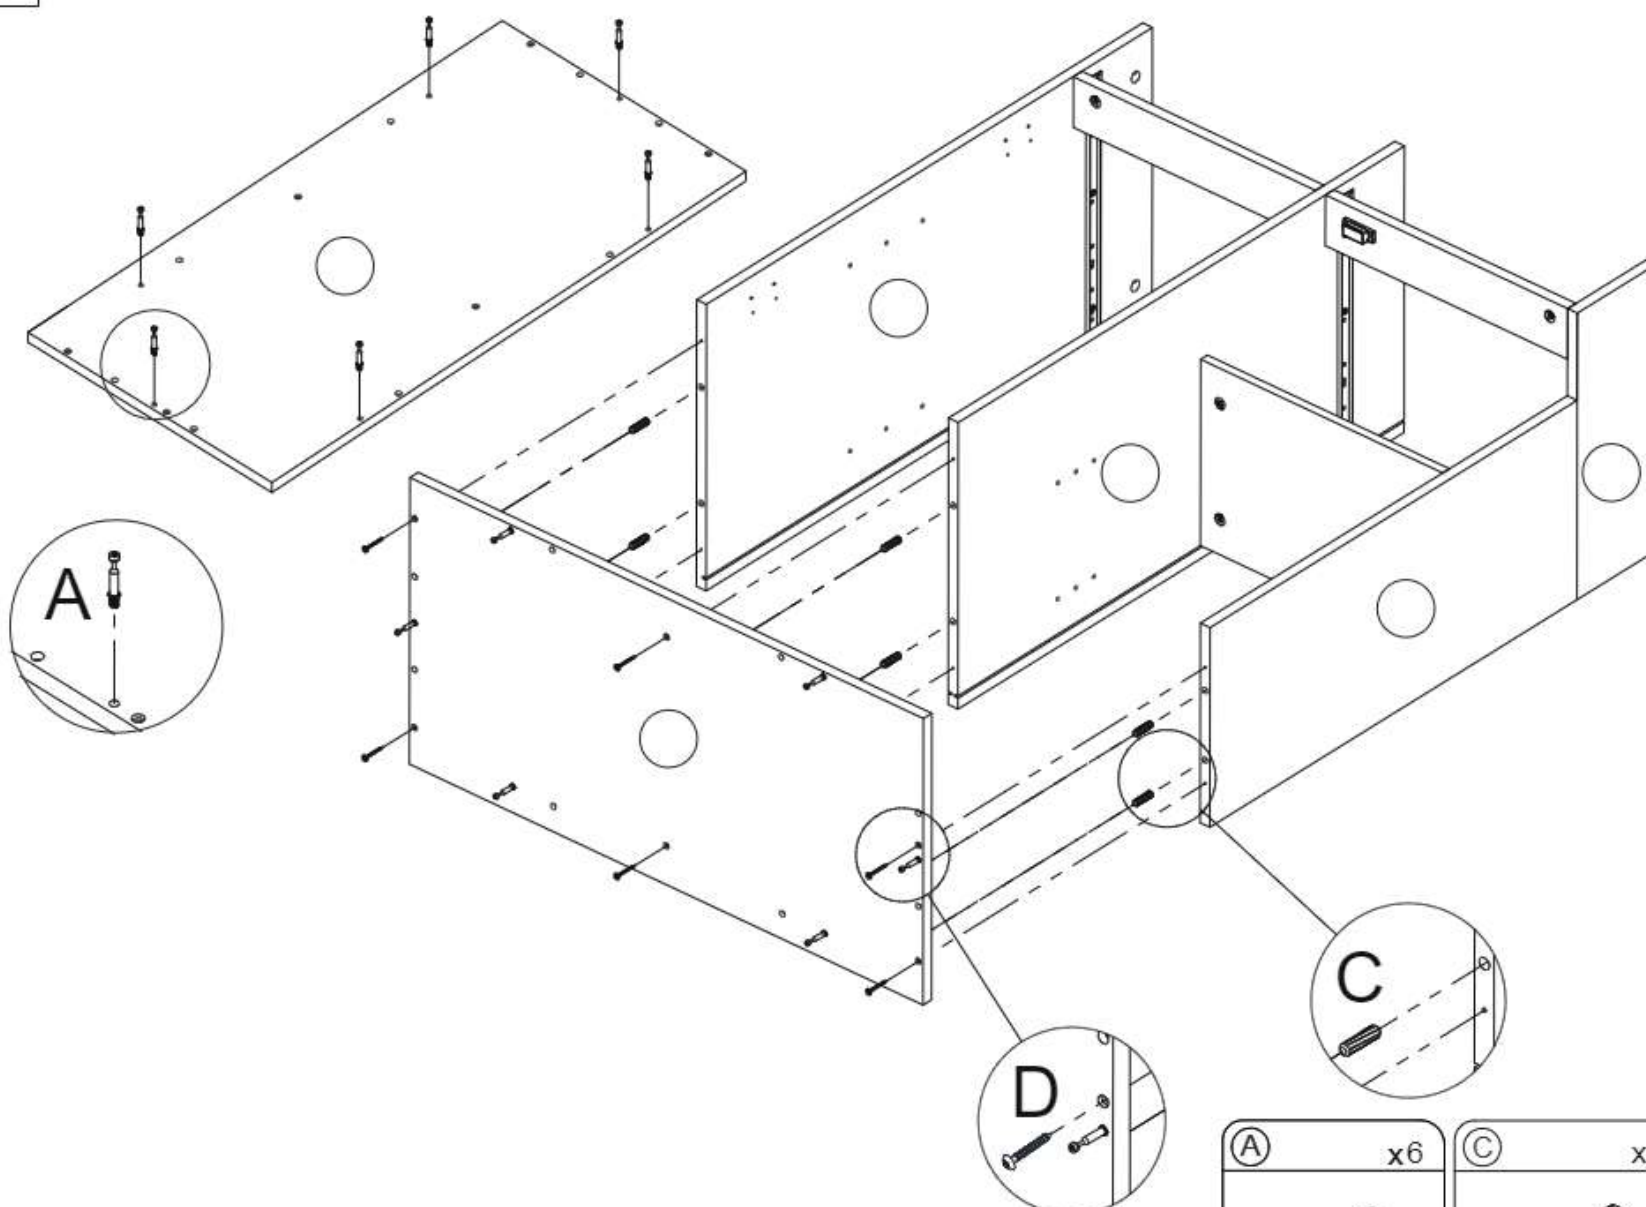  


7

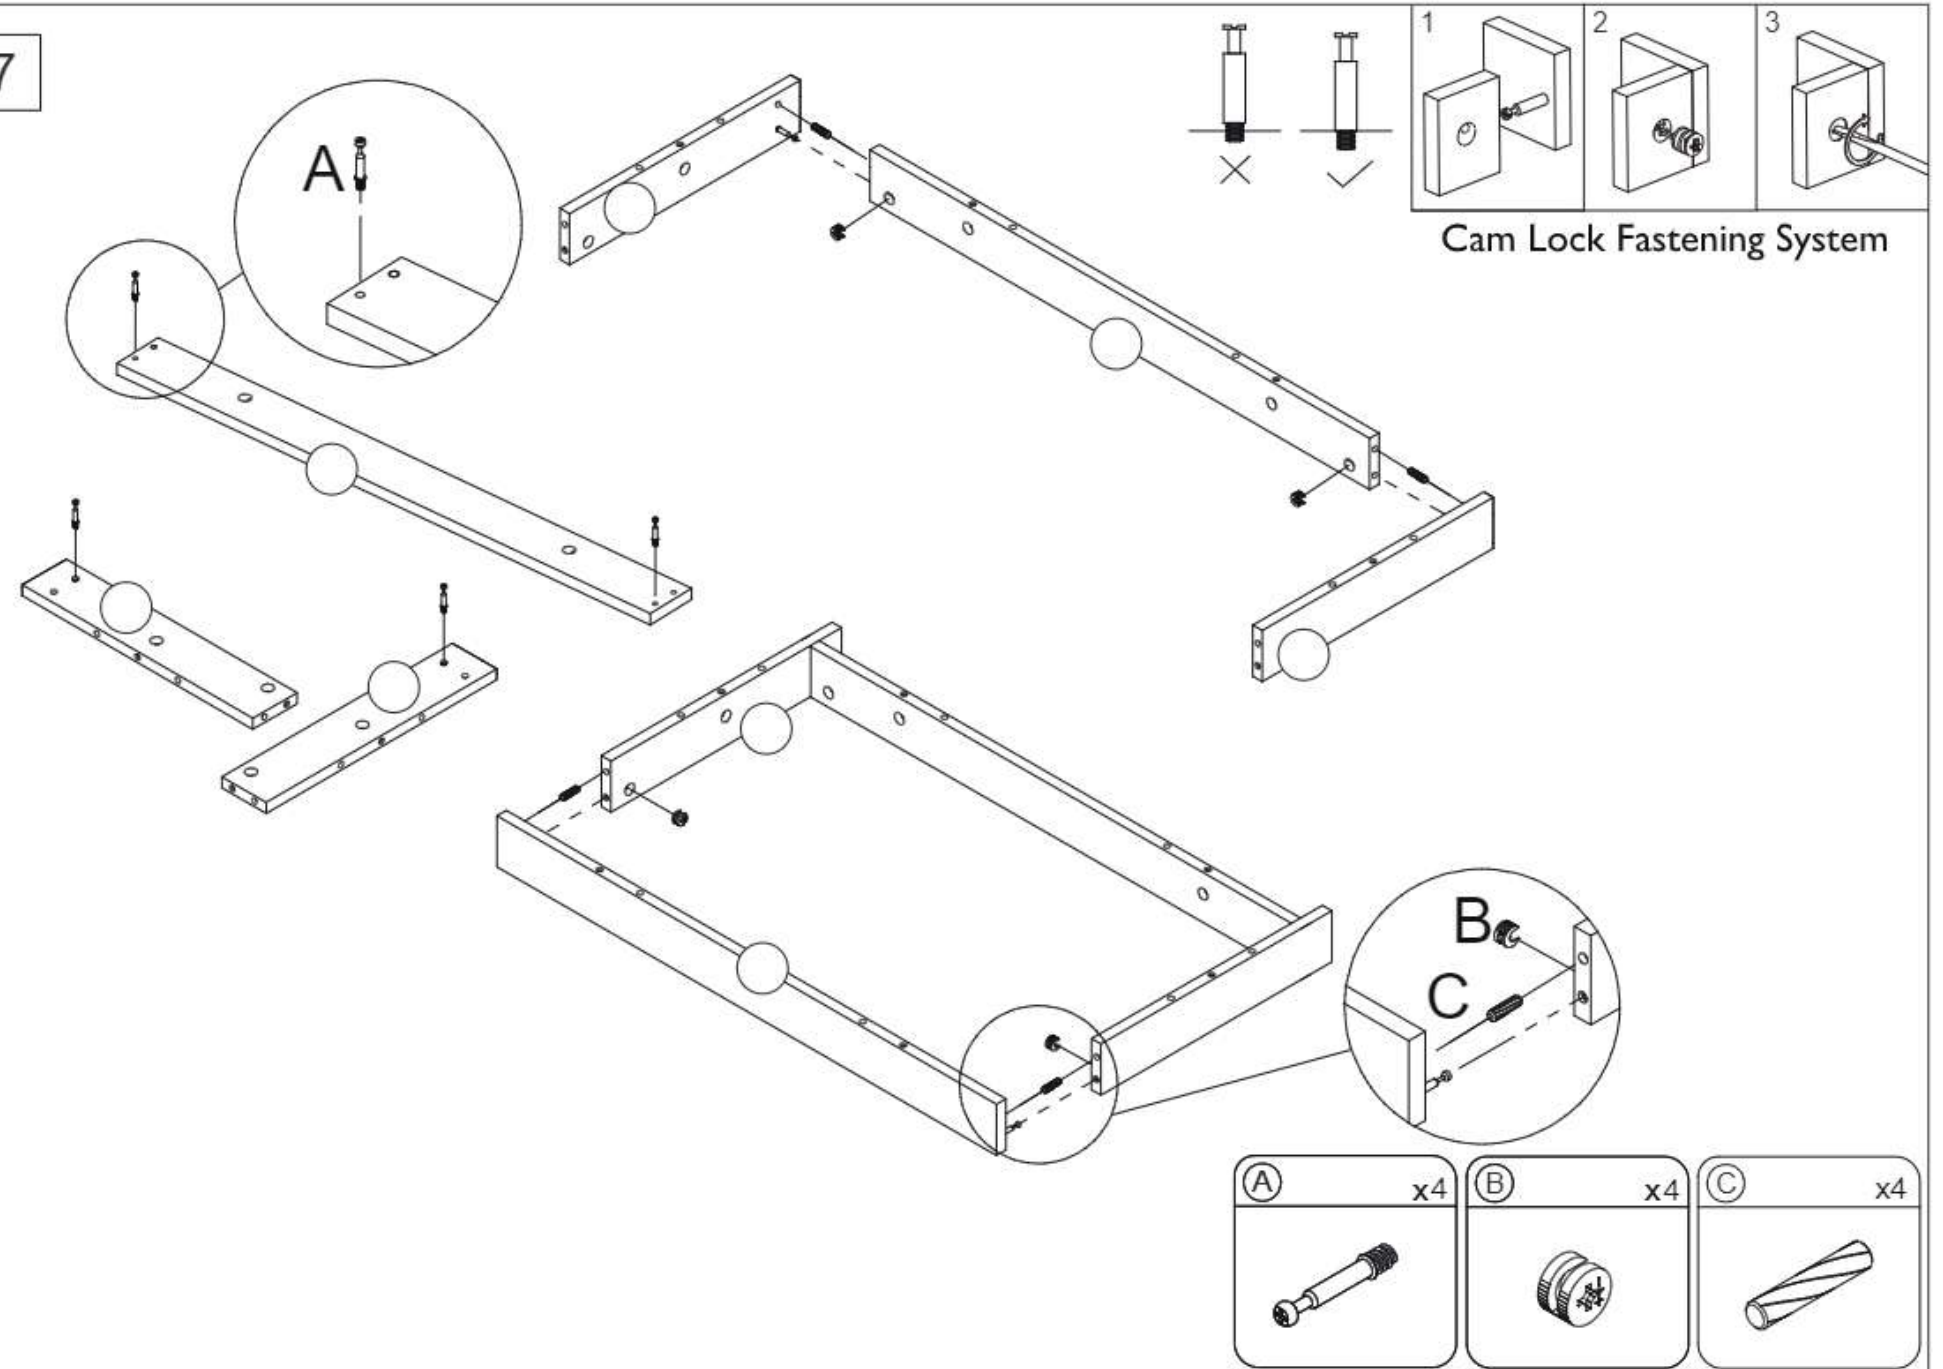 



8

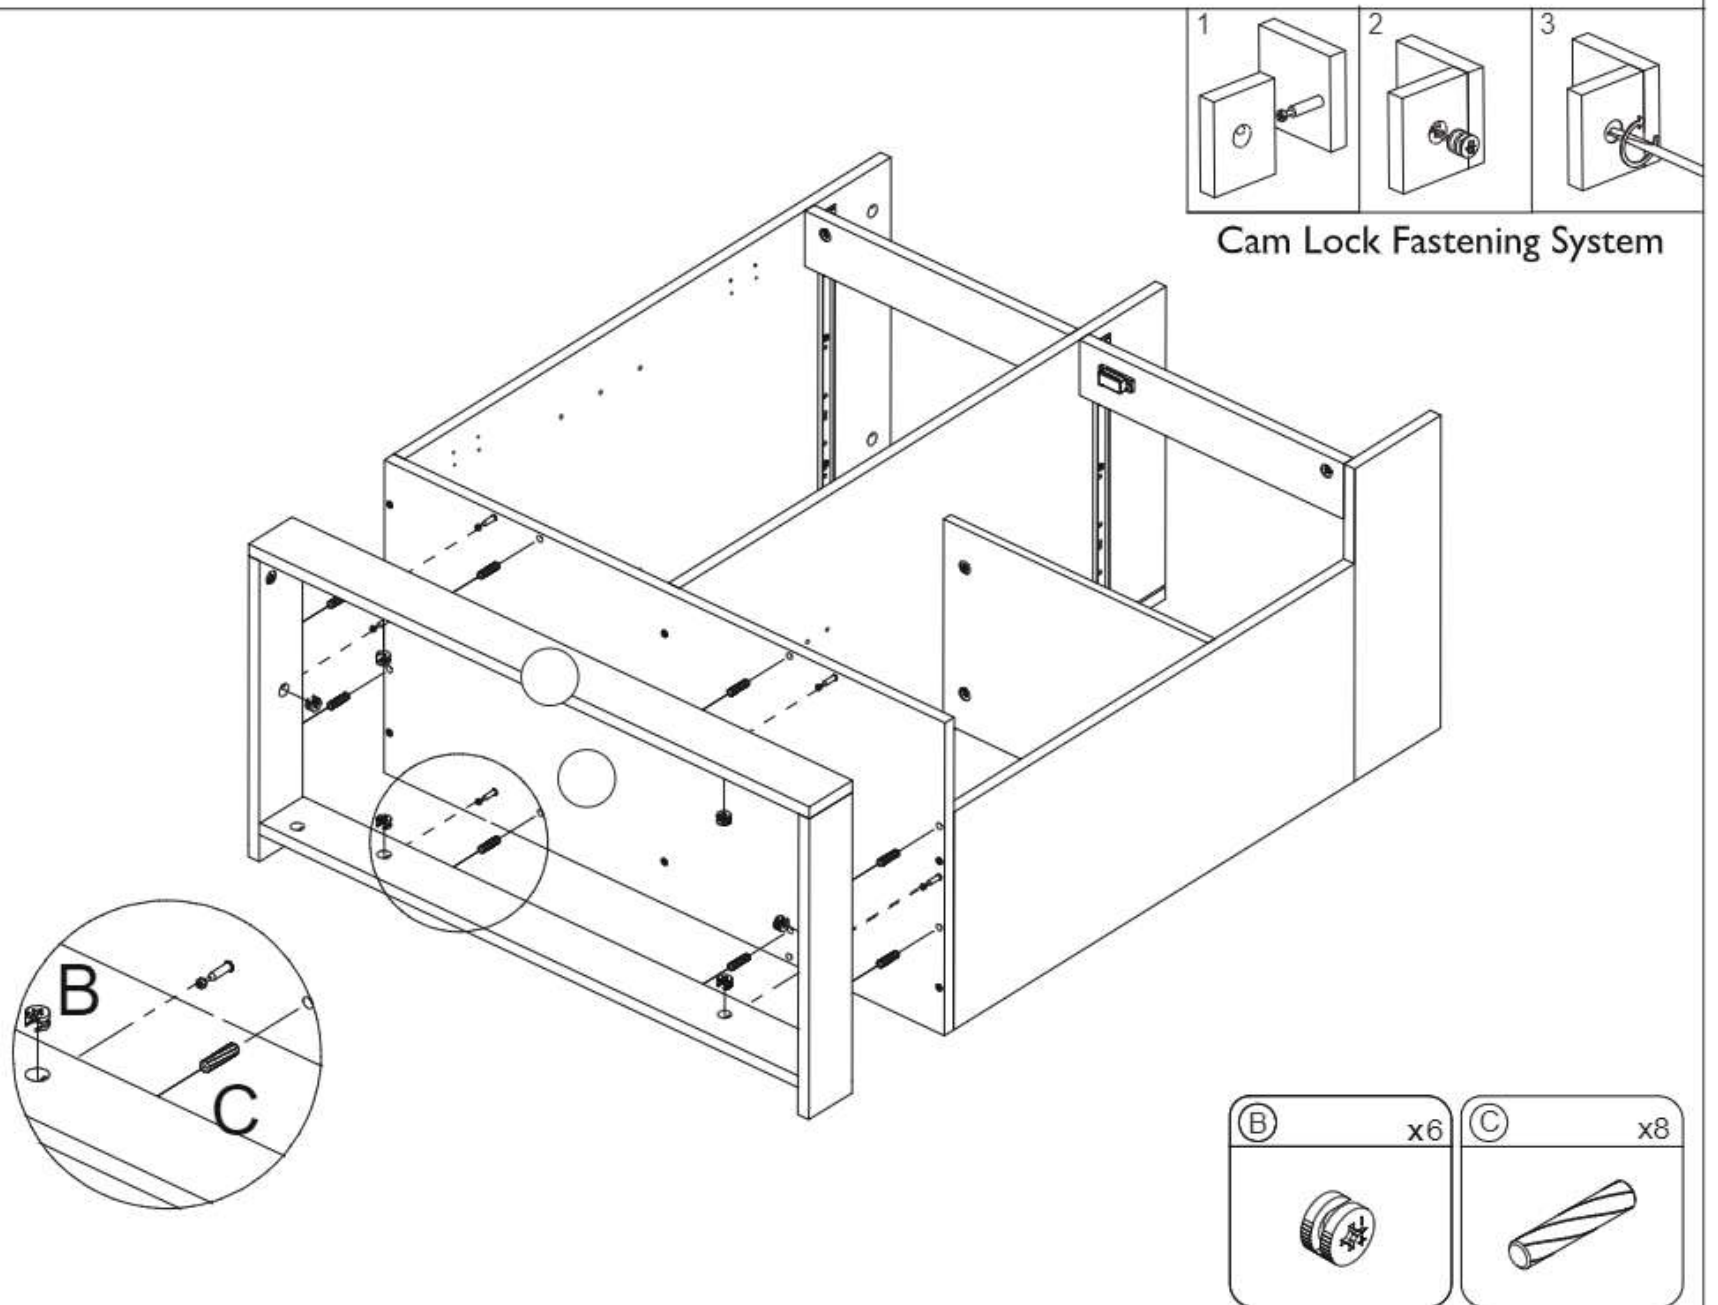 




9

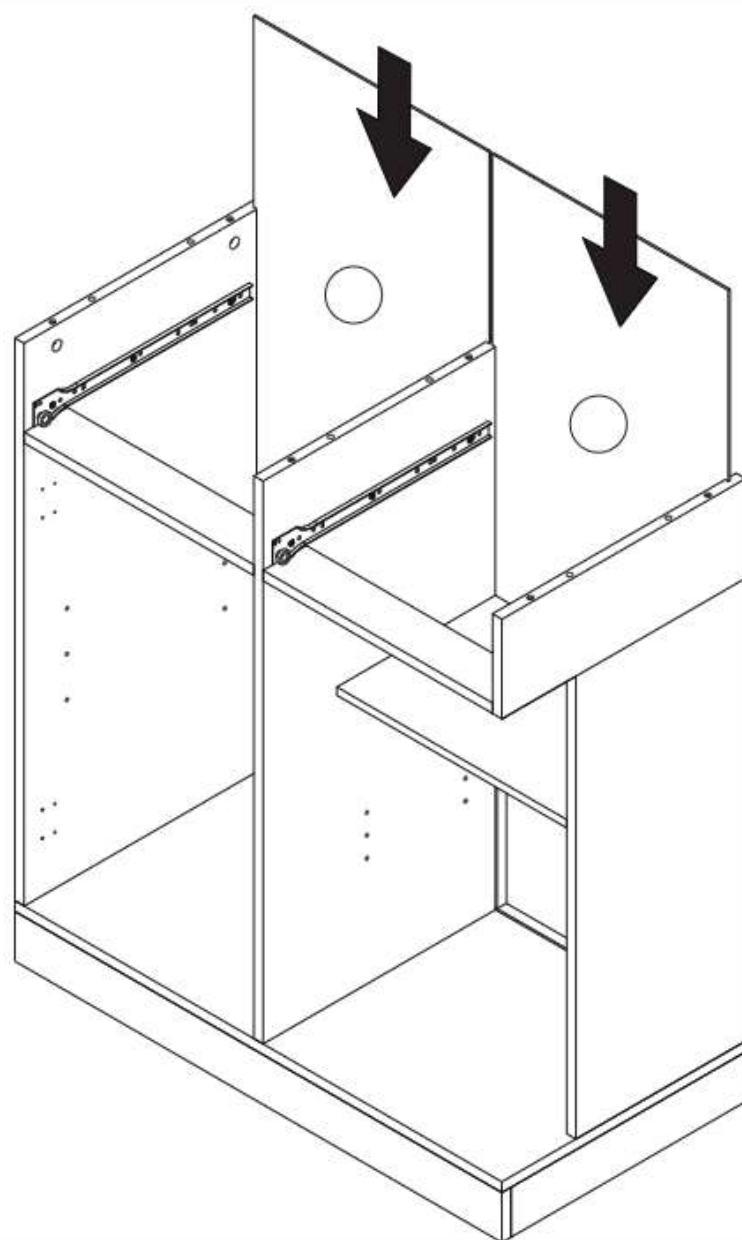 


10

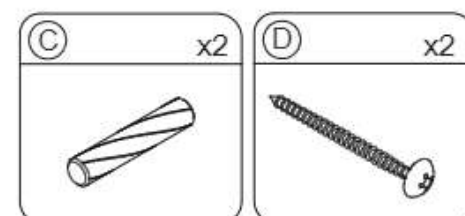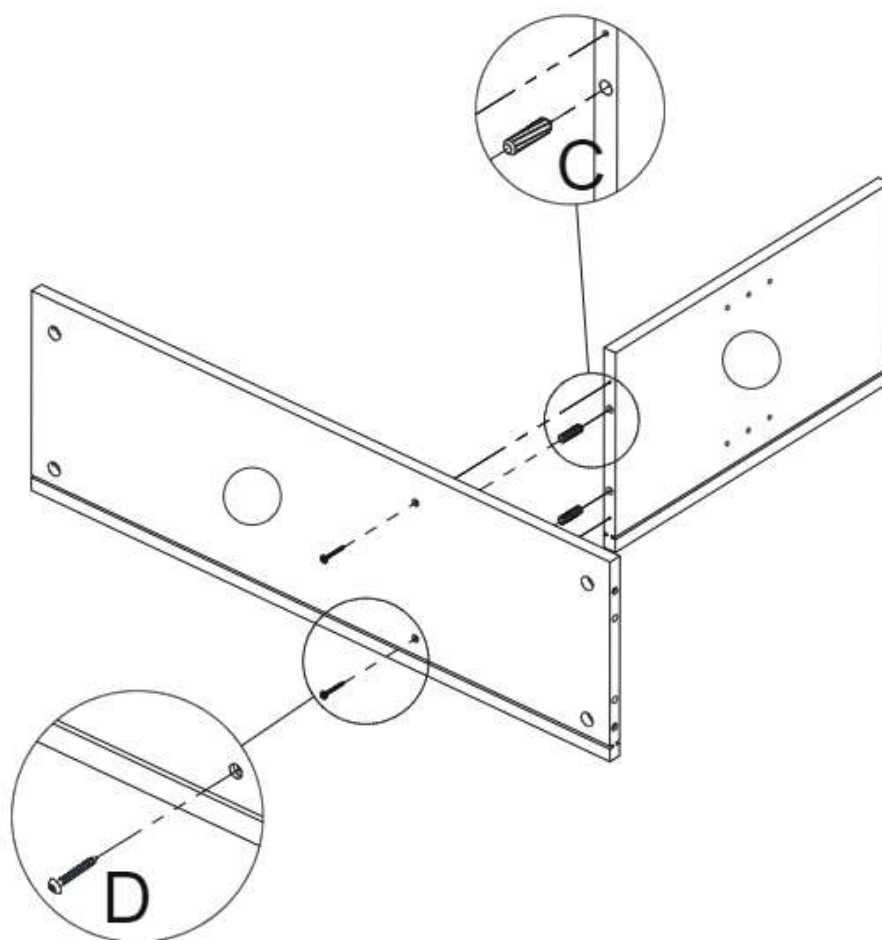  




11

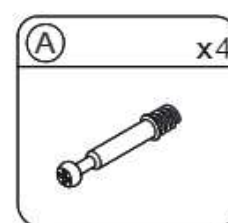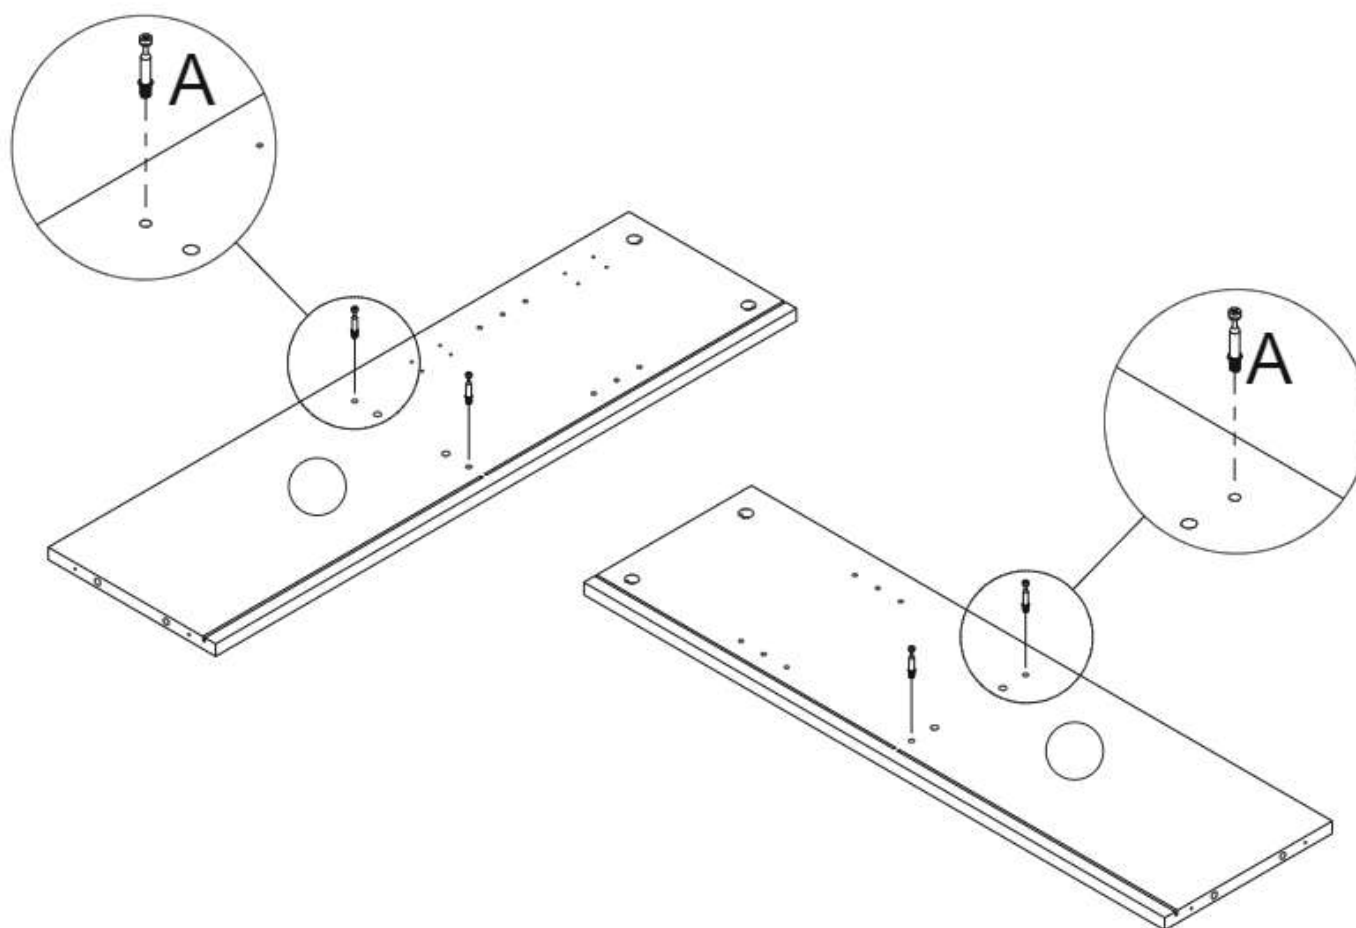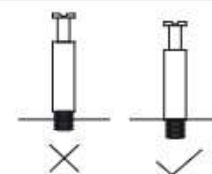   


12

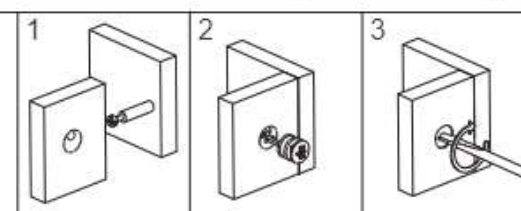 



Cam Lock Fastening System

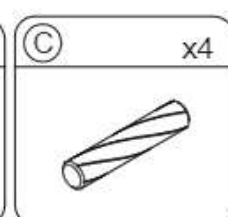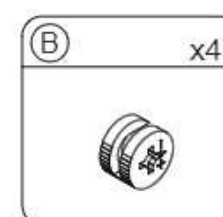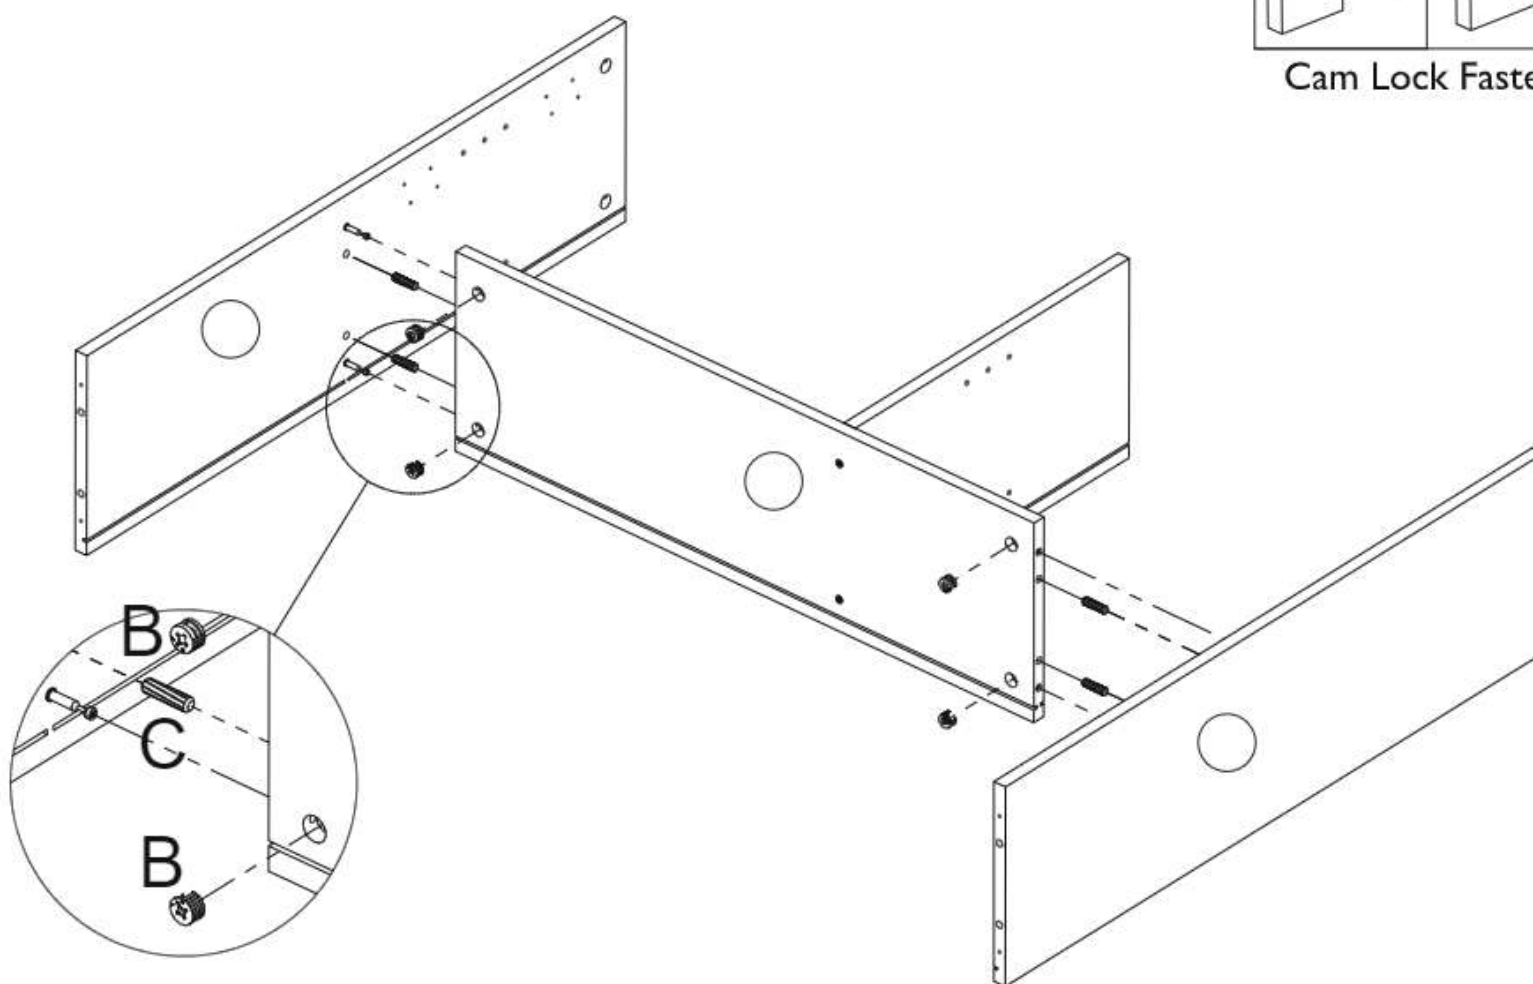   


13

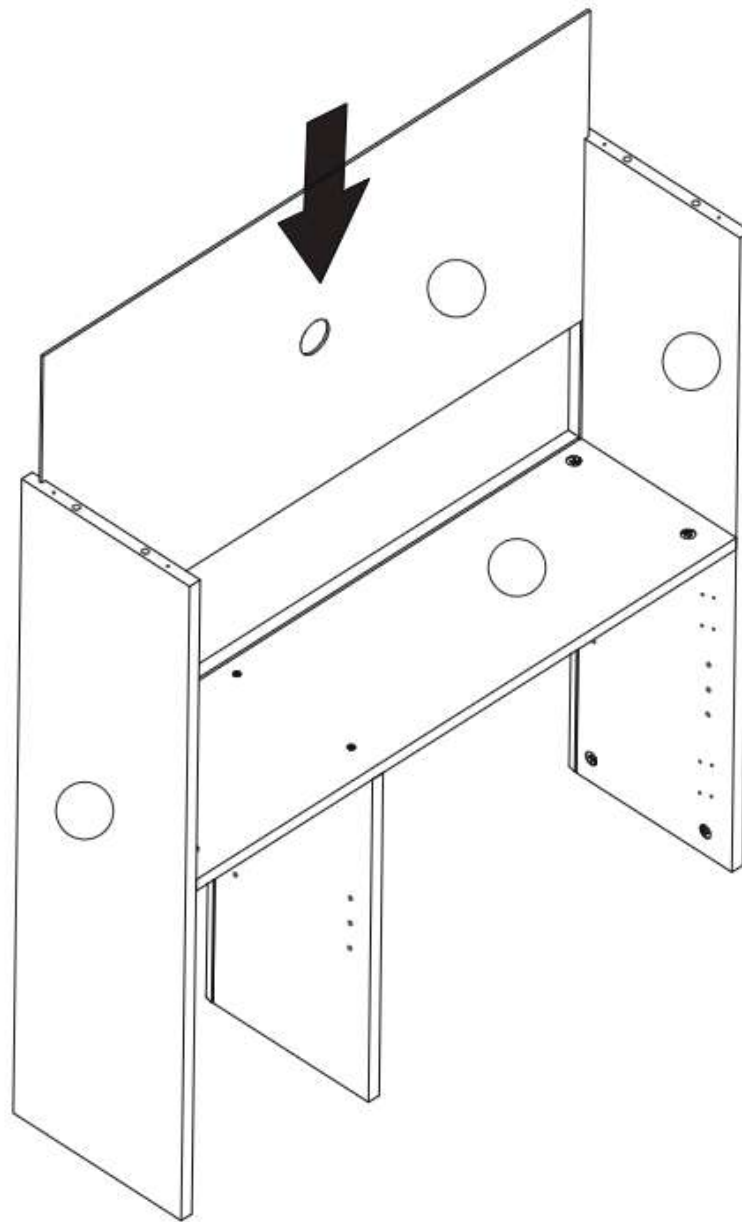 




14

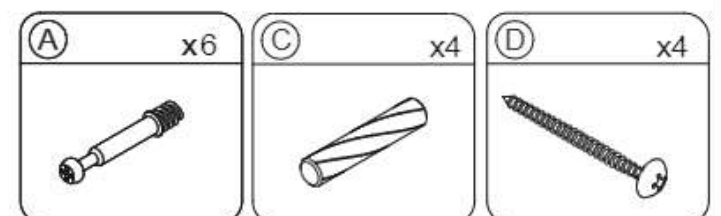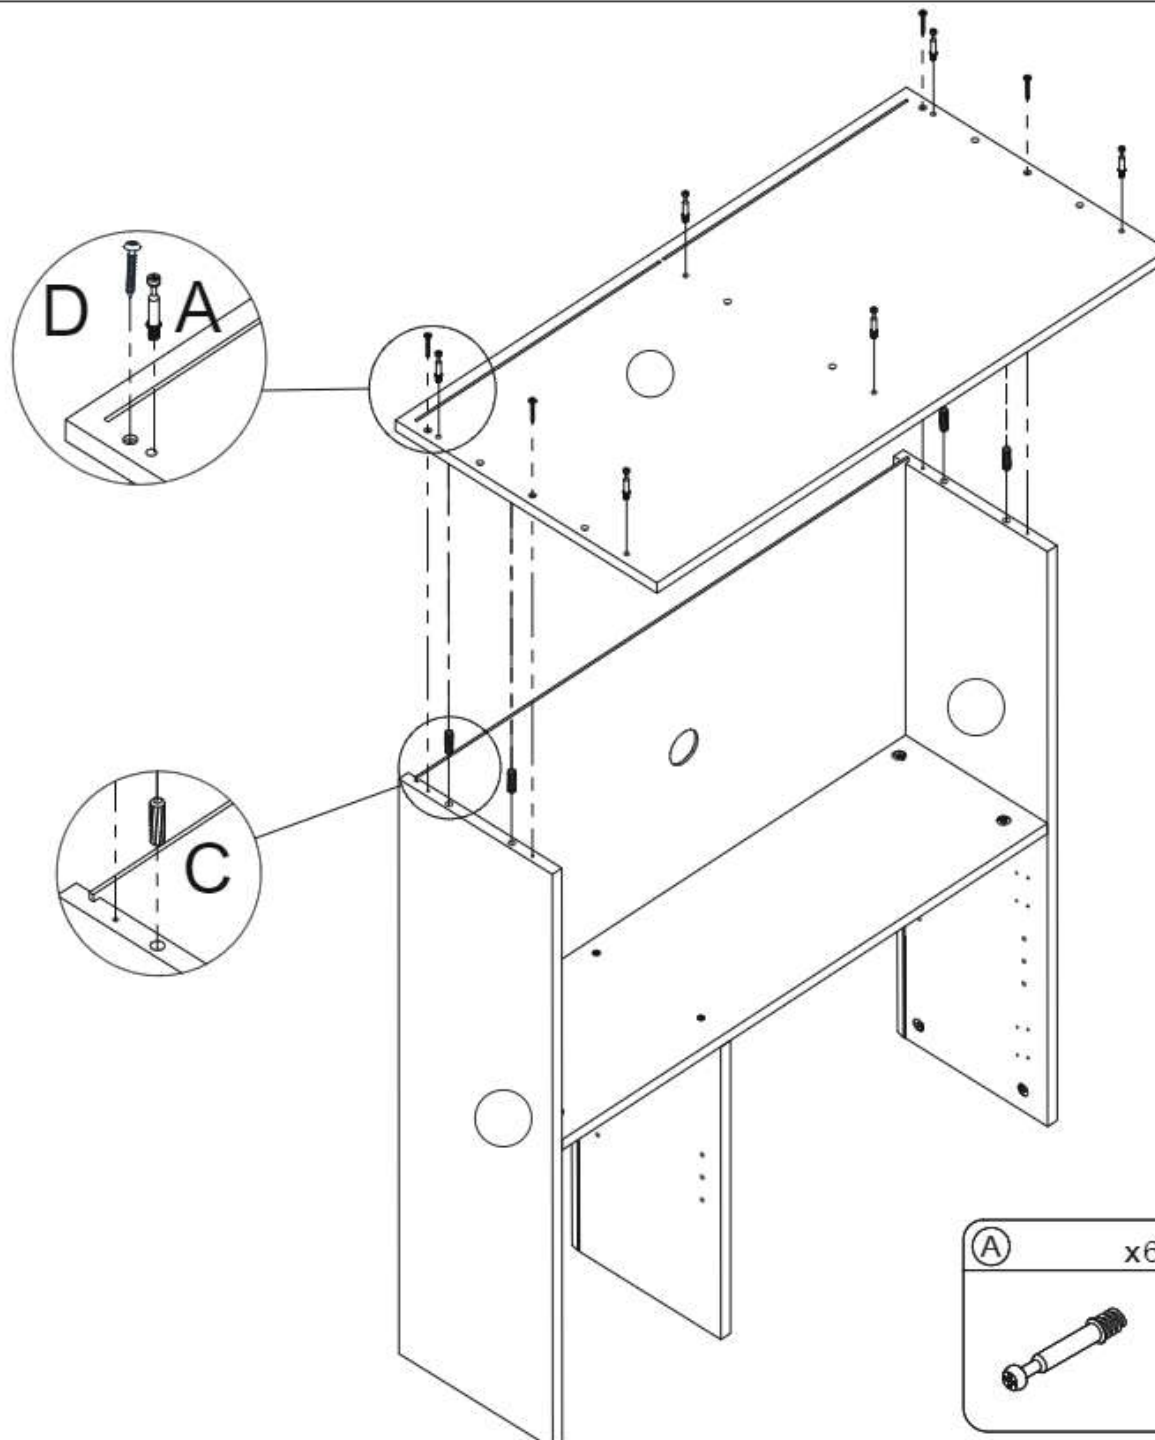  


15

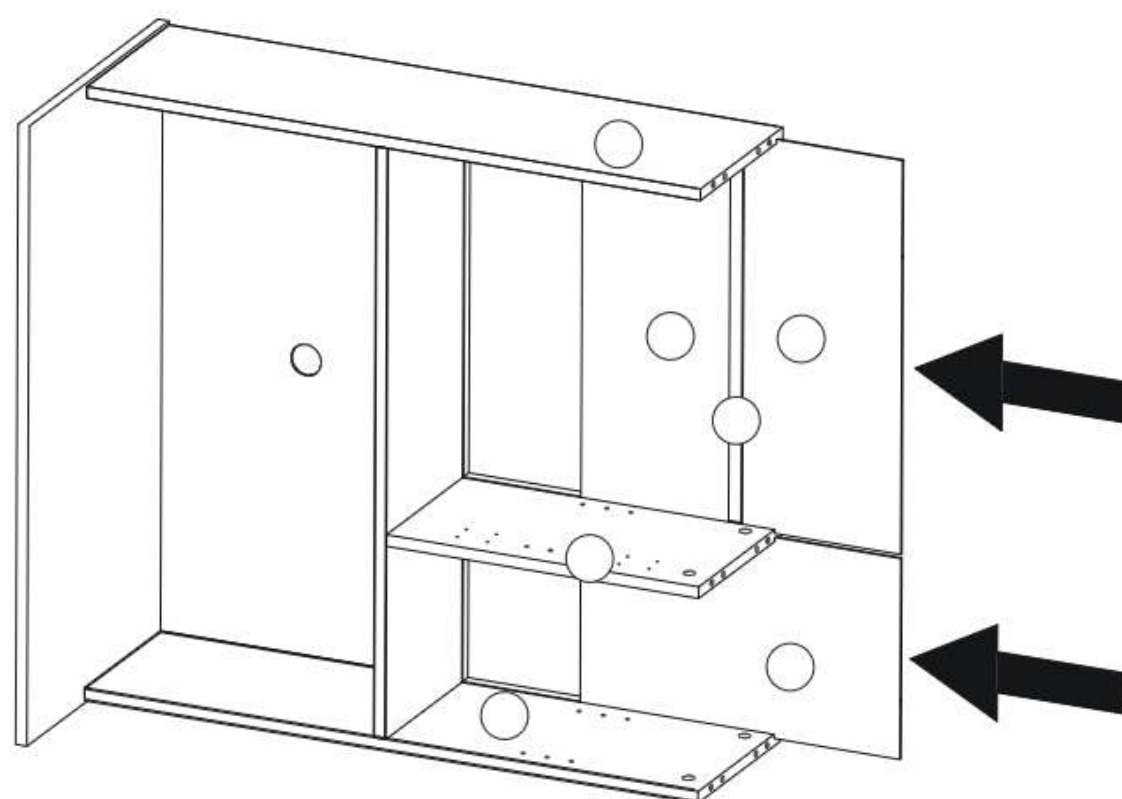 


16

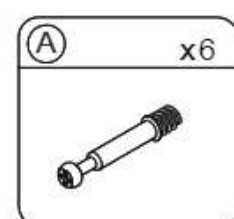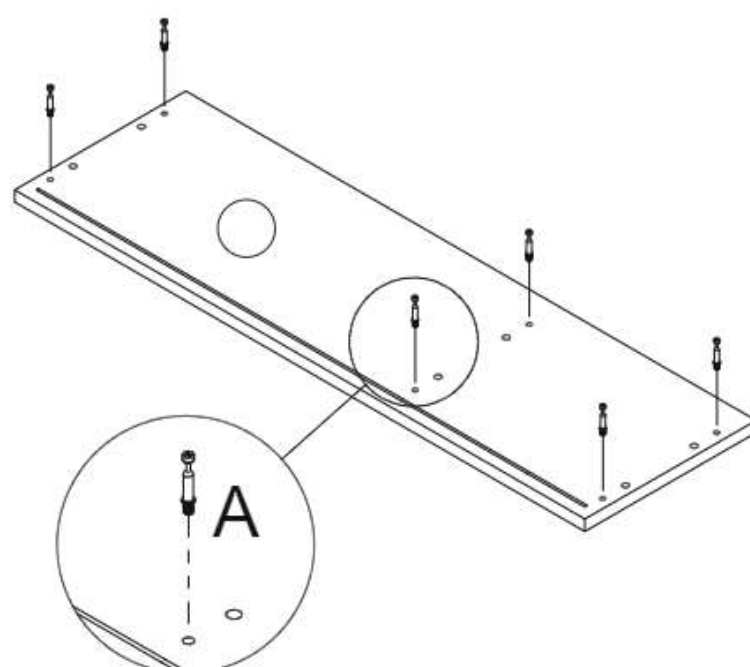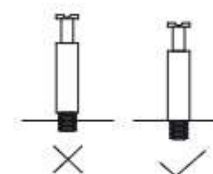   





17

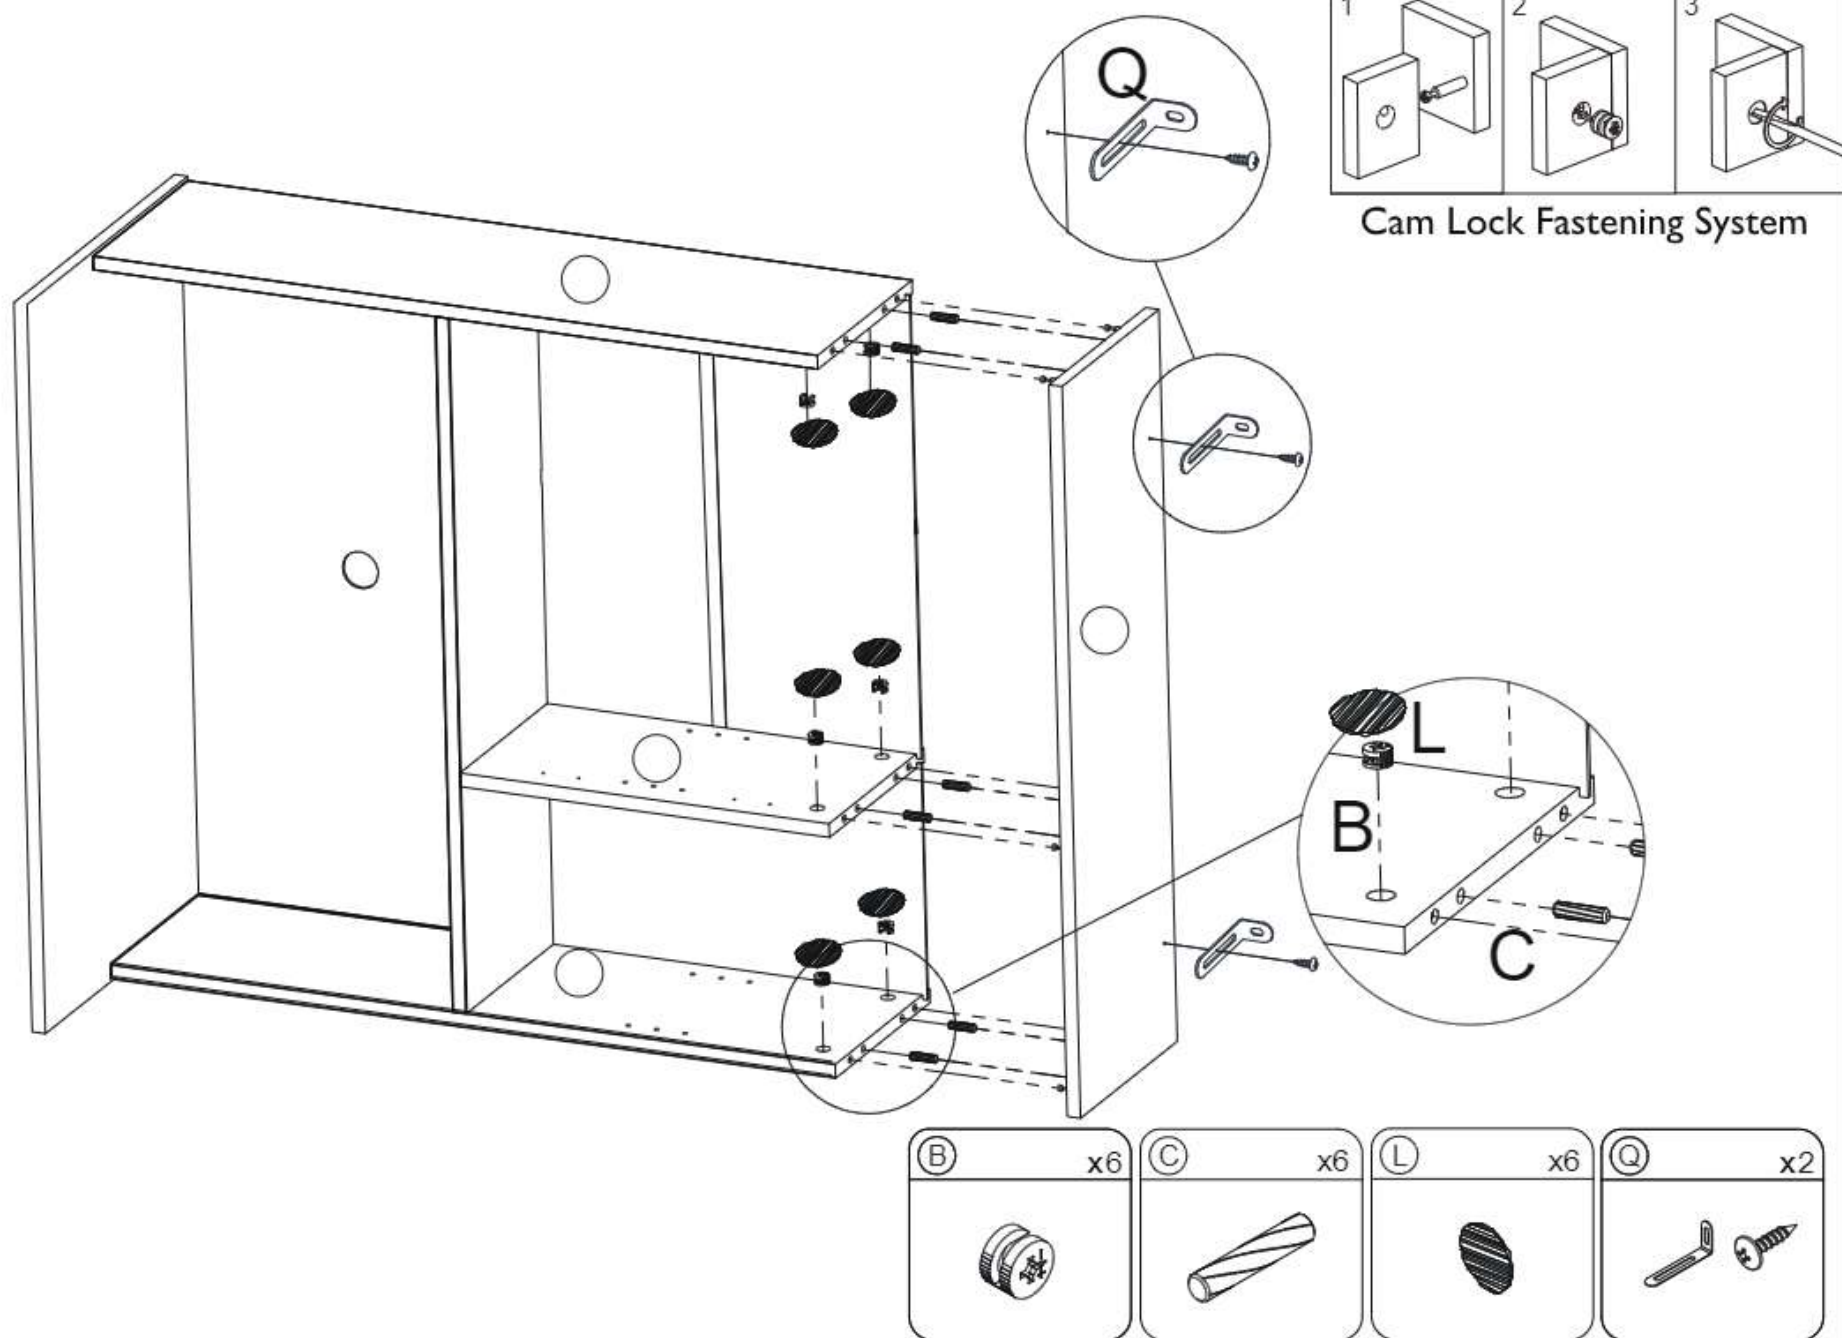 

18

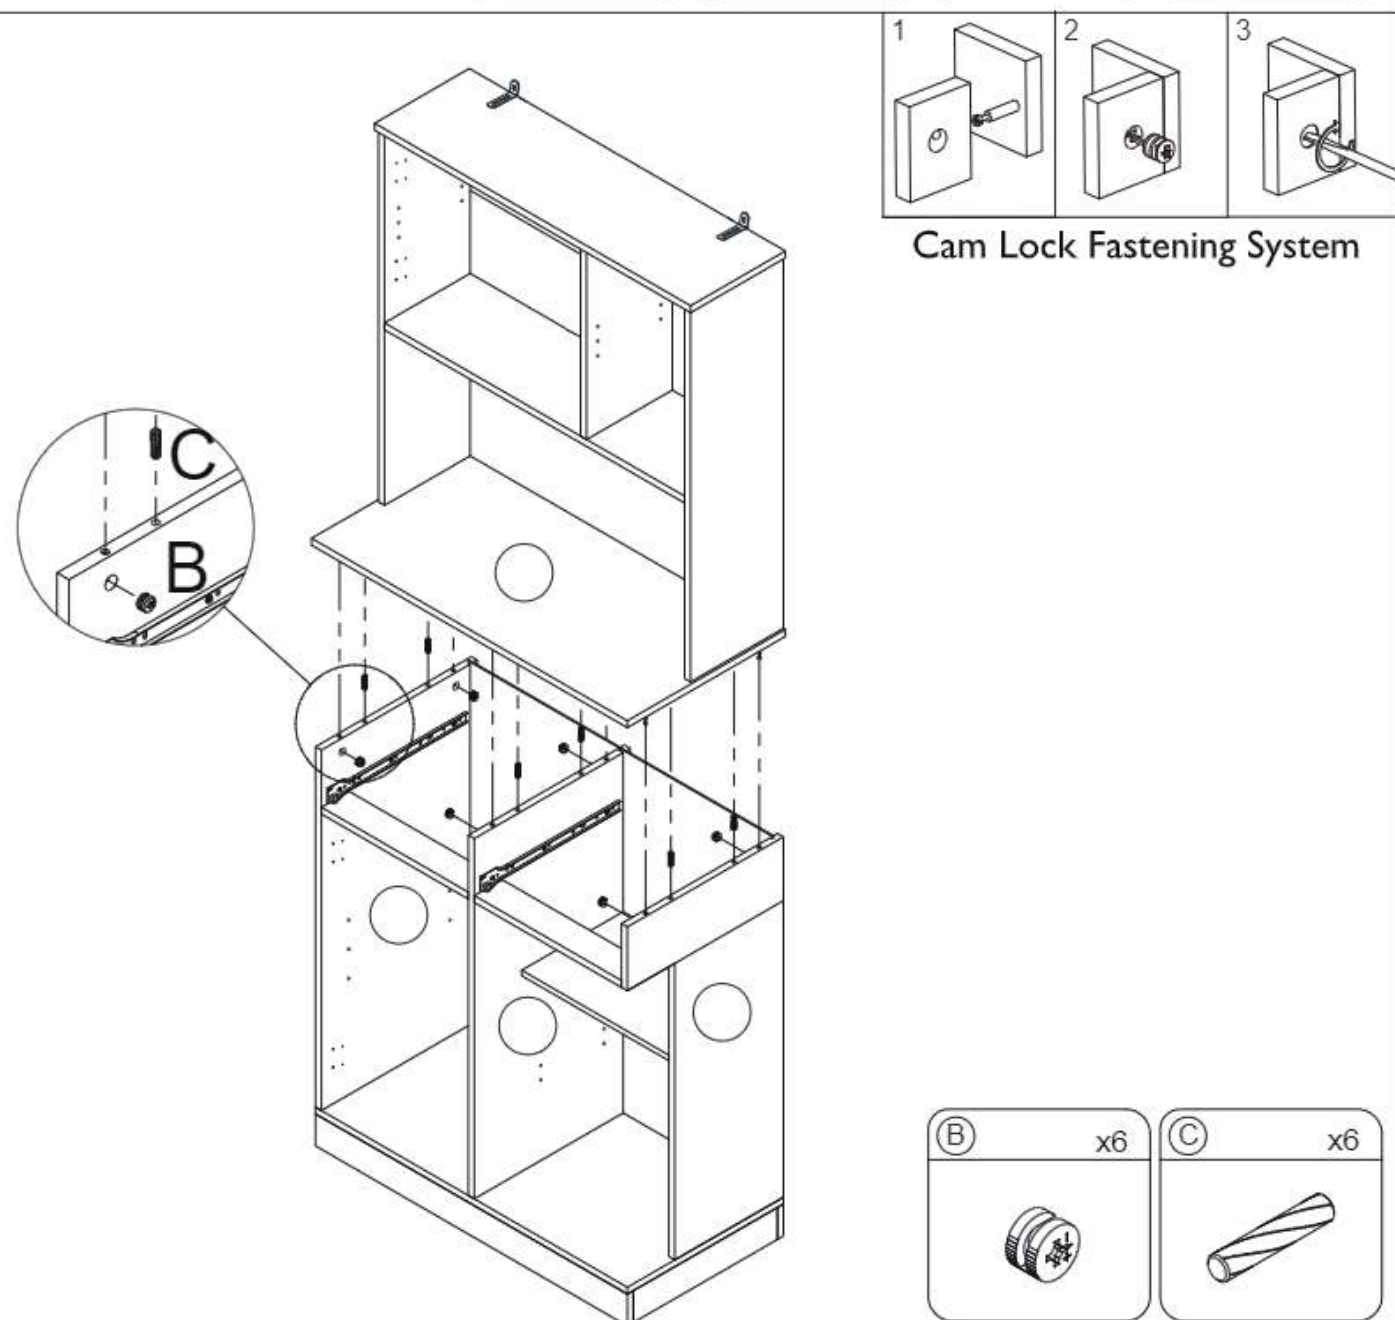 

19

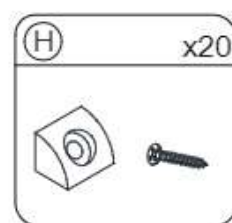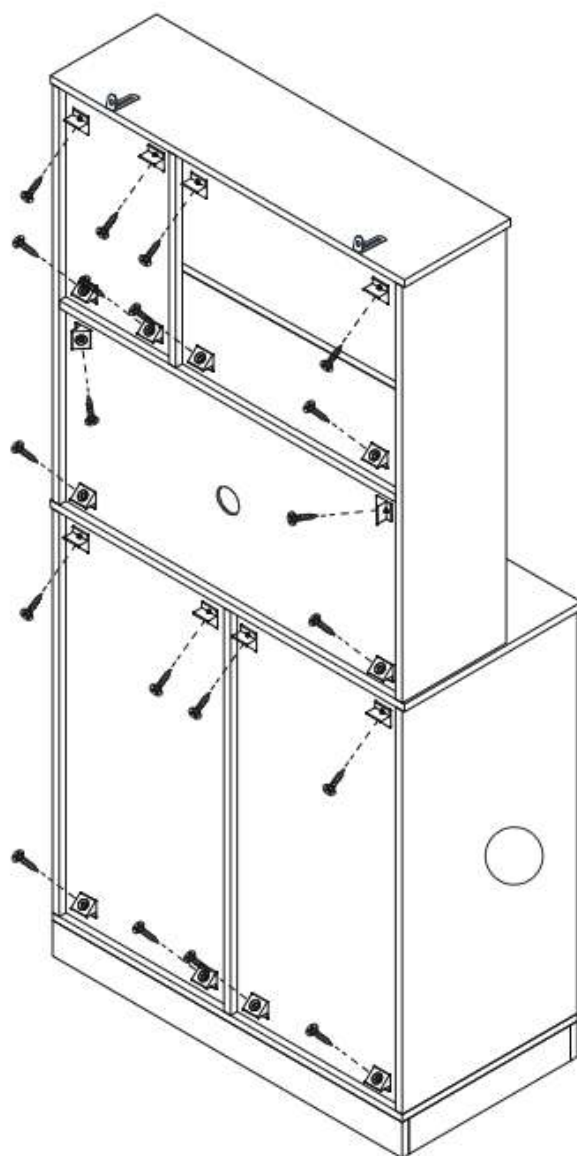  
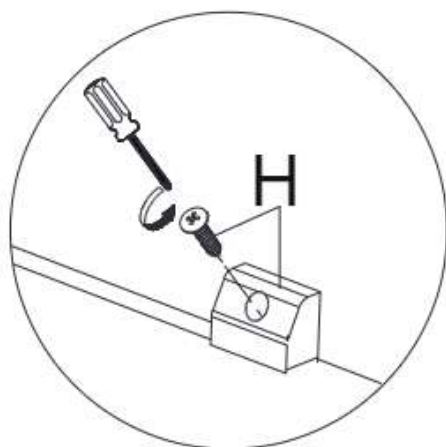 
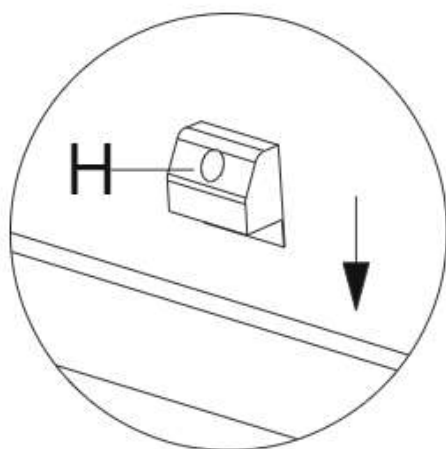 


20



**WARNING!**

   IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH THE
WALL ATTACHMENT DEVICE PROVIDED




WARNING: Before
drilling, check wall
for hidden pipes and
cables

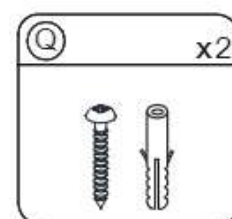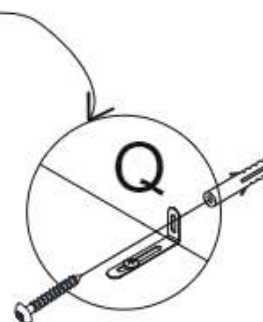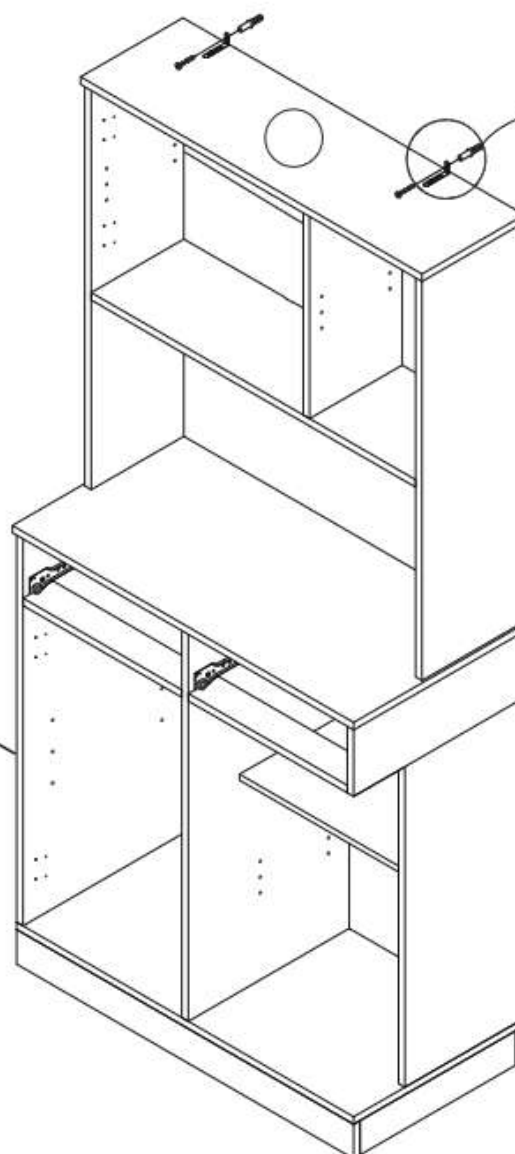



21

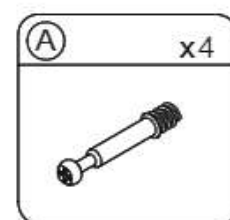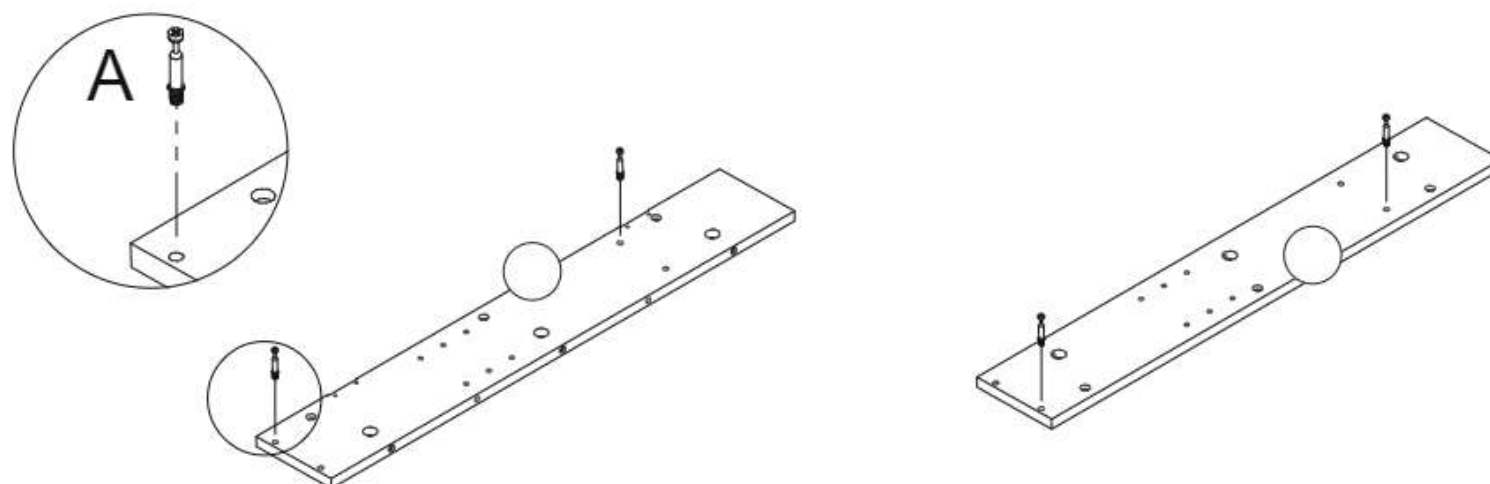  






22

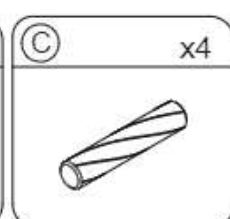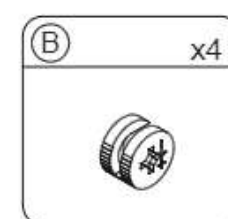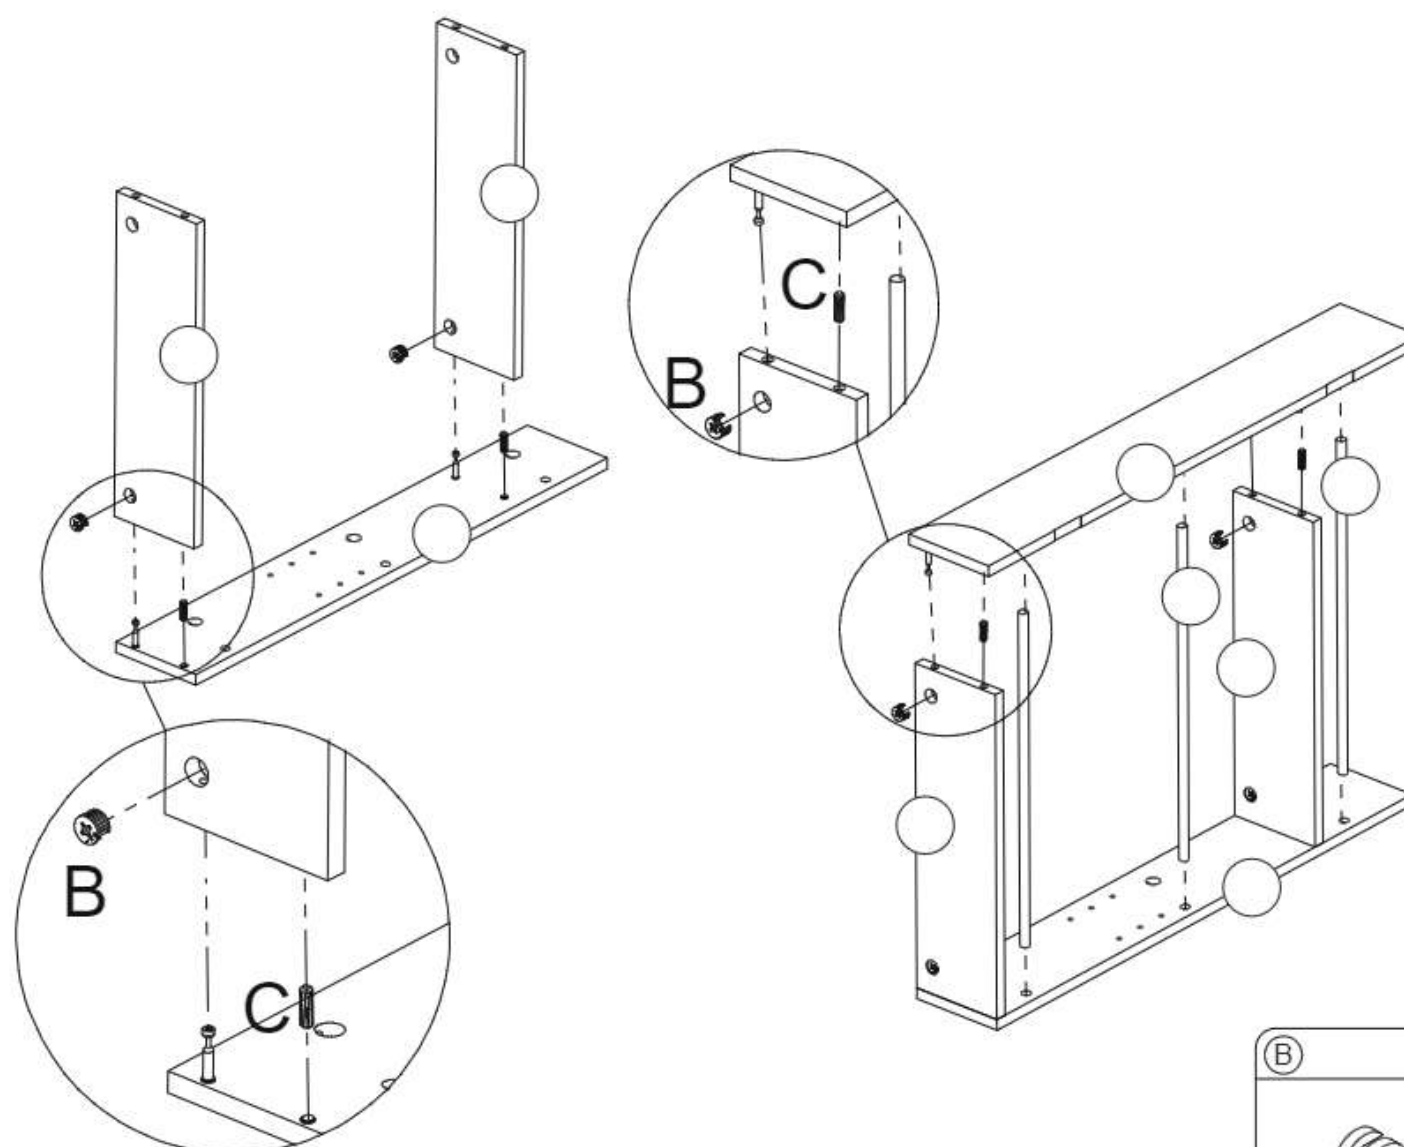   



23

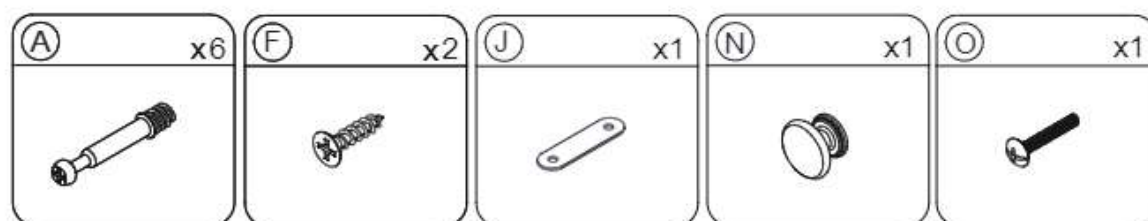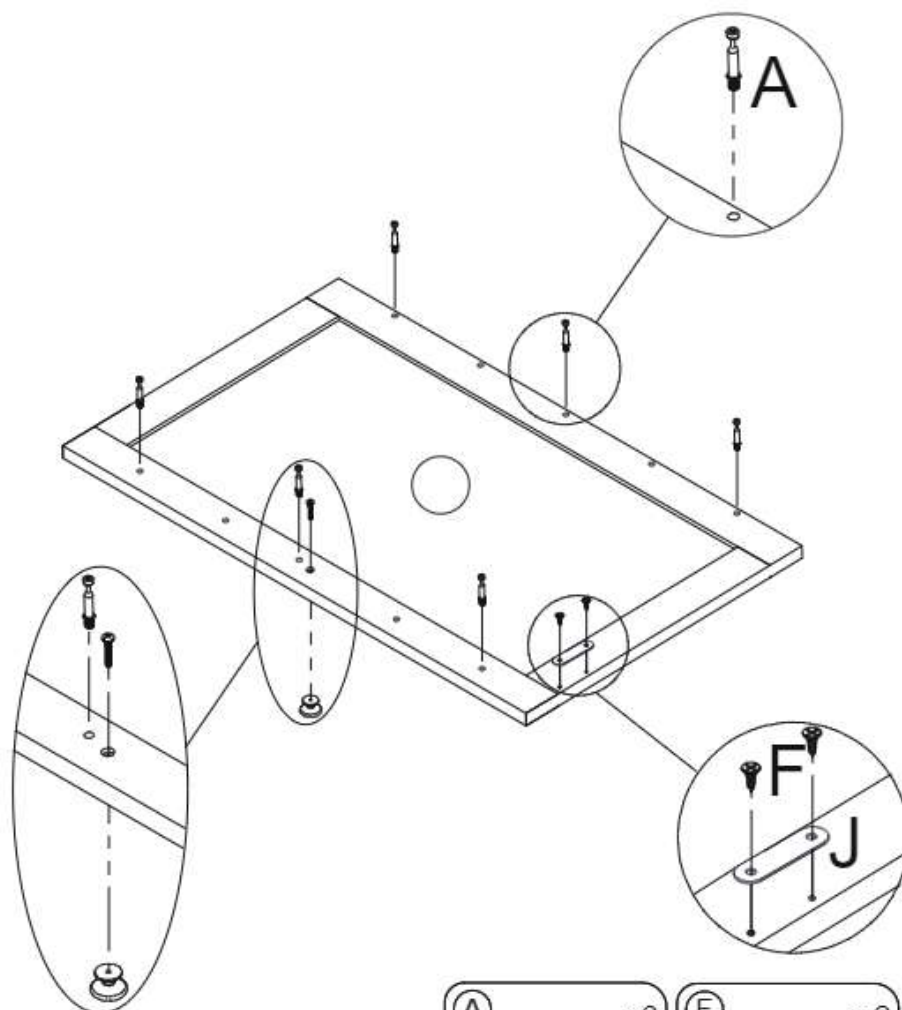  

24

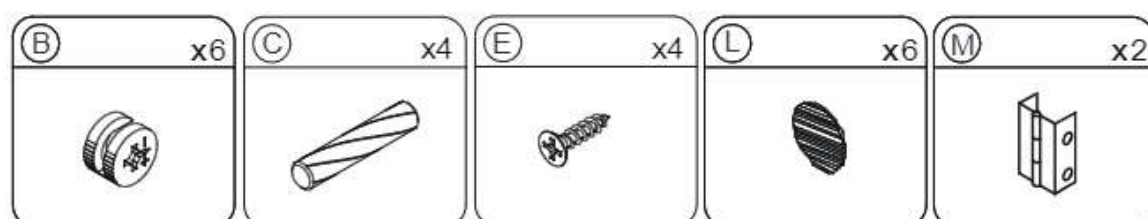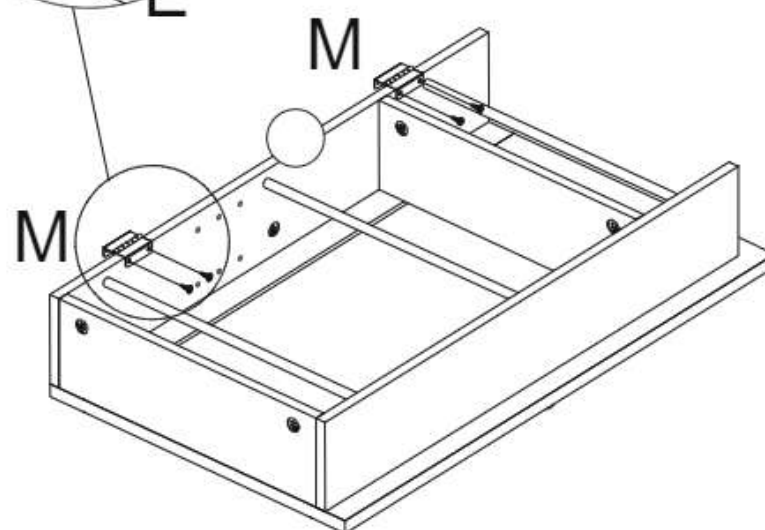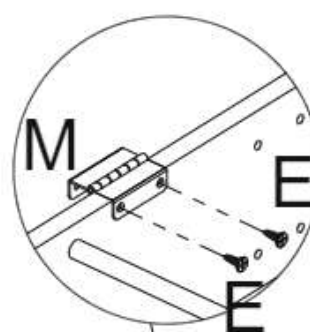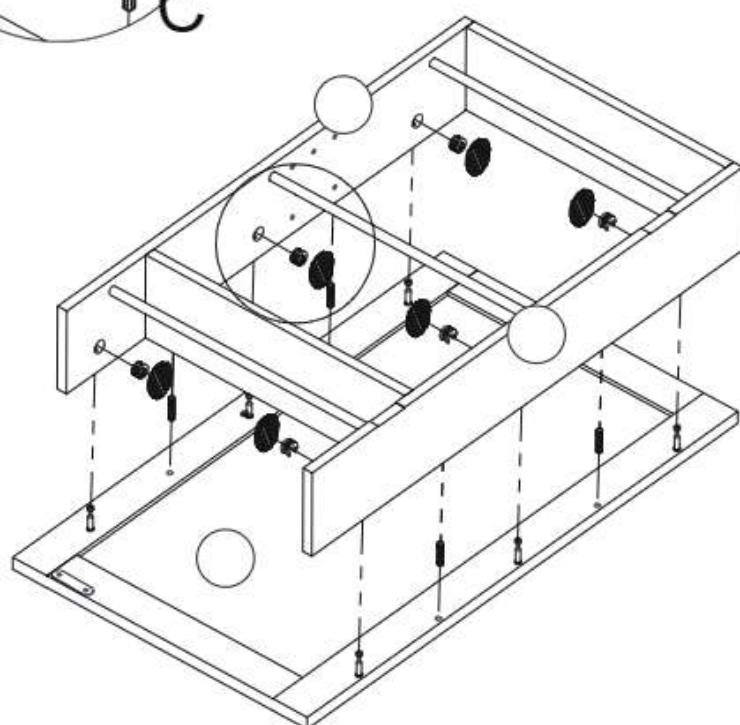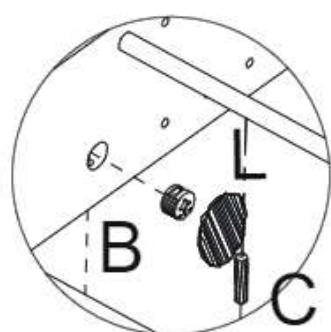     



25

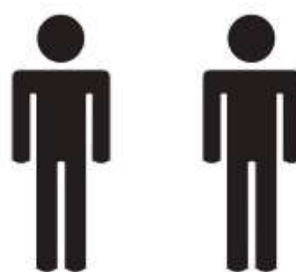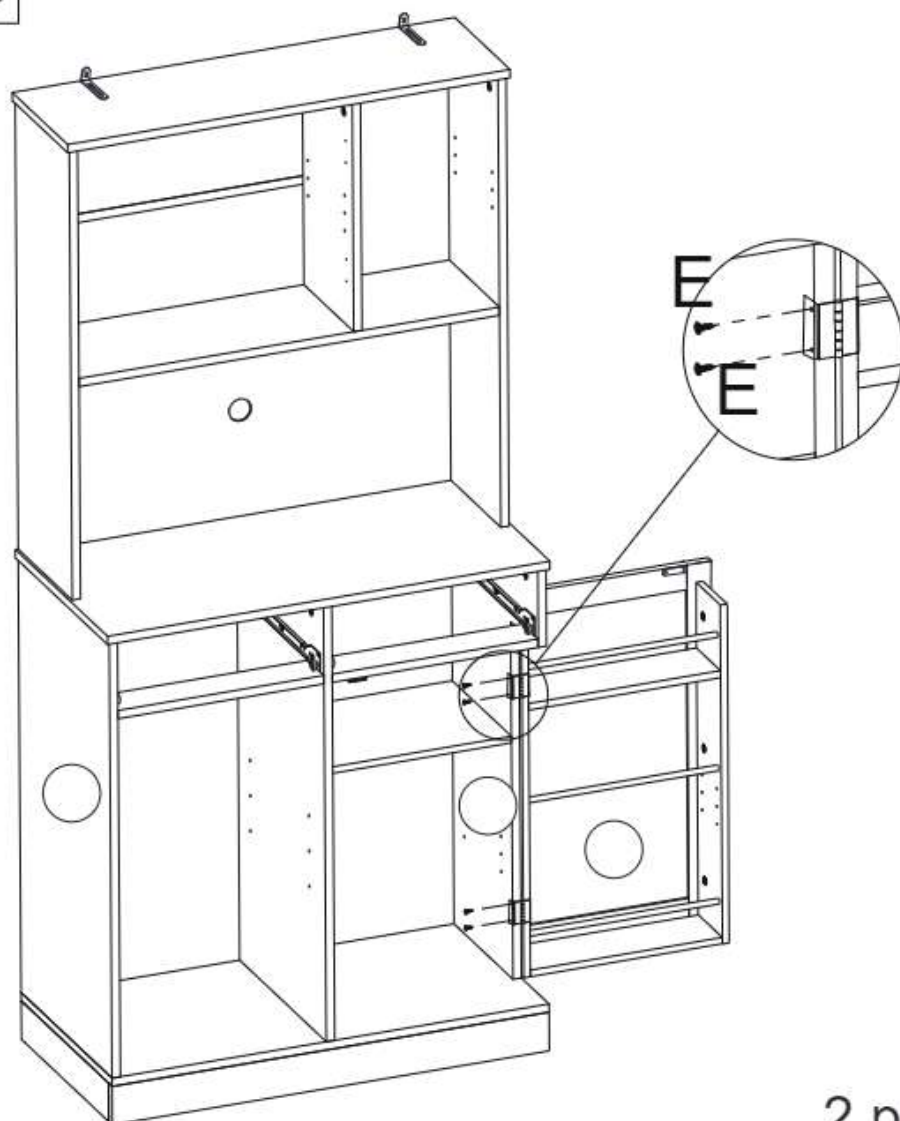  


2 people for assembly



  
26

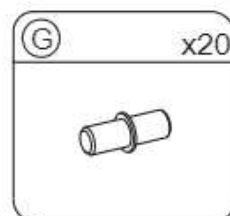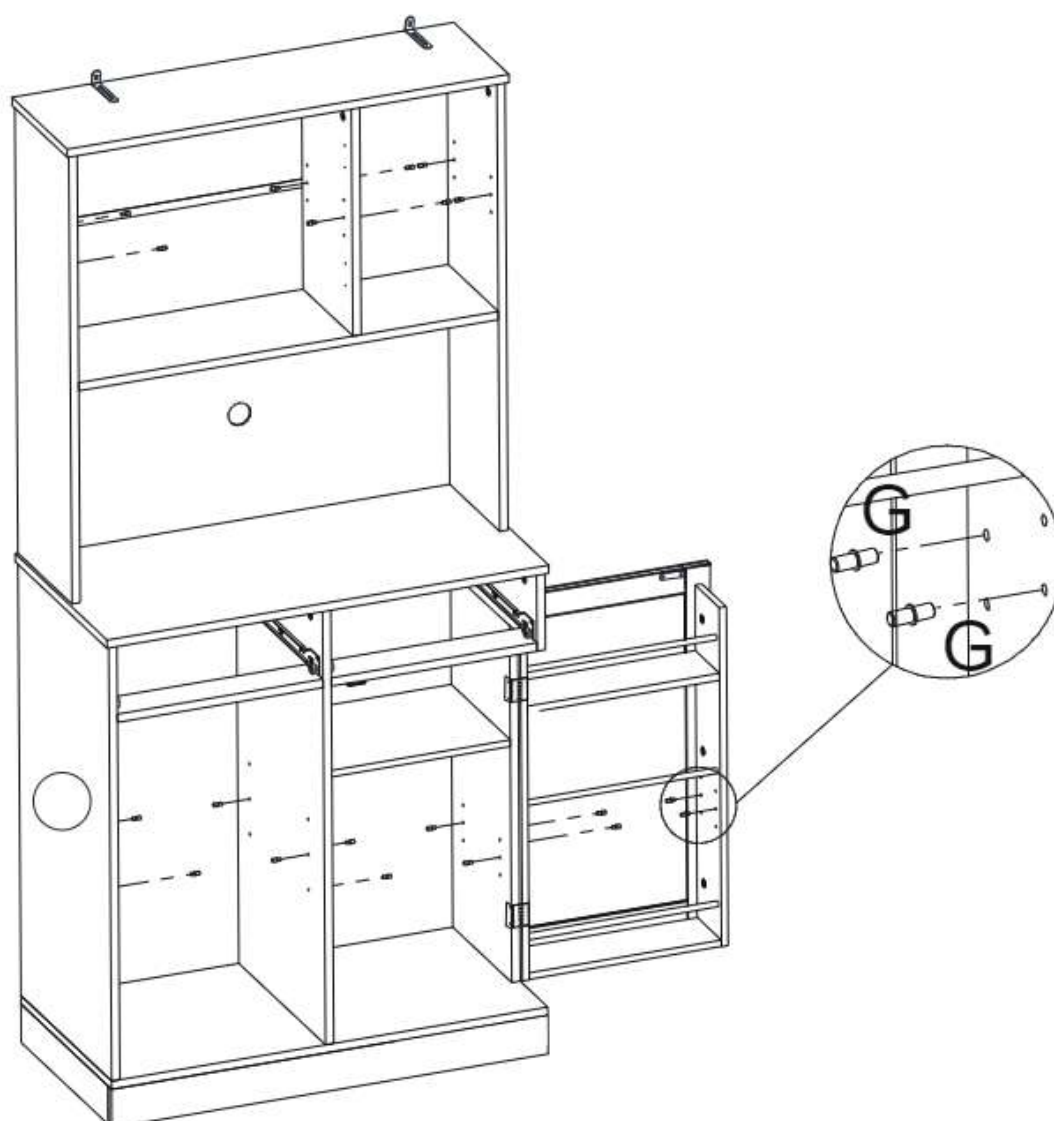

27


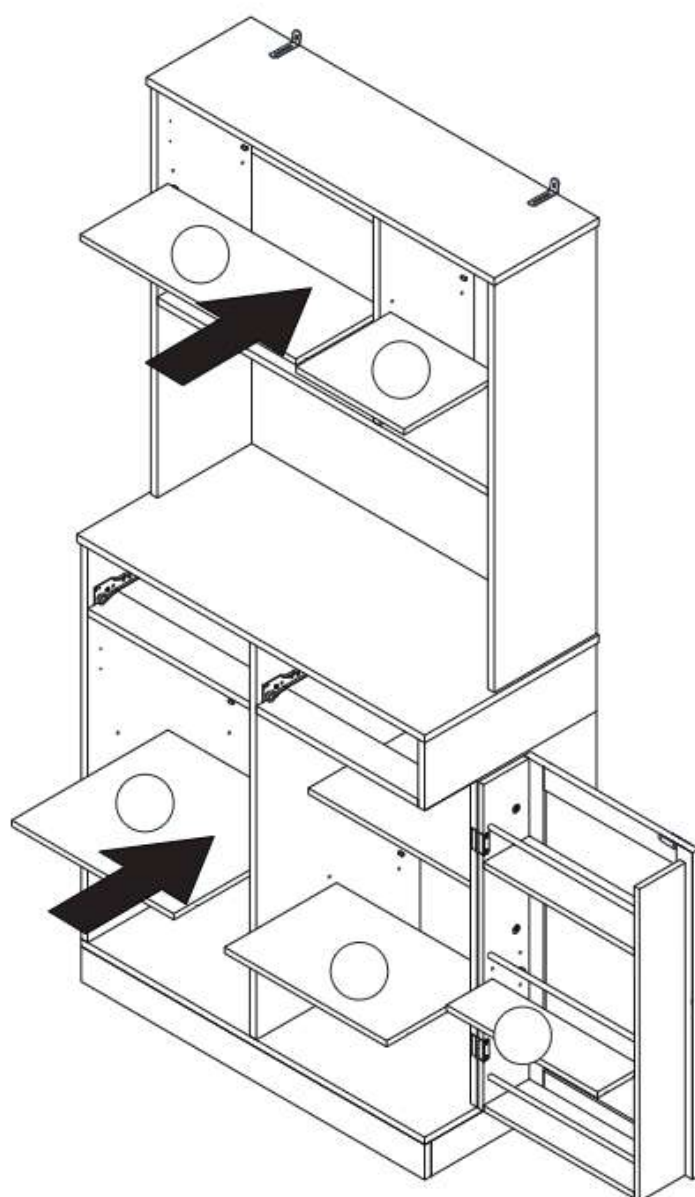 


28

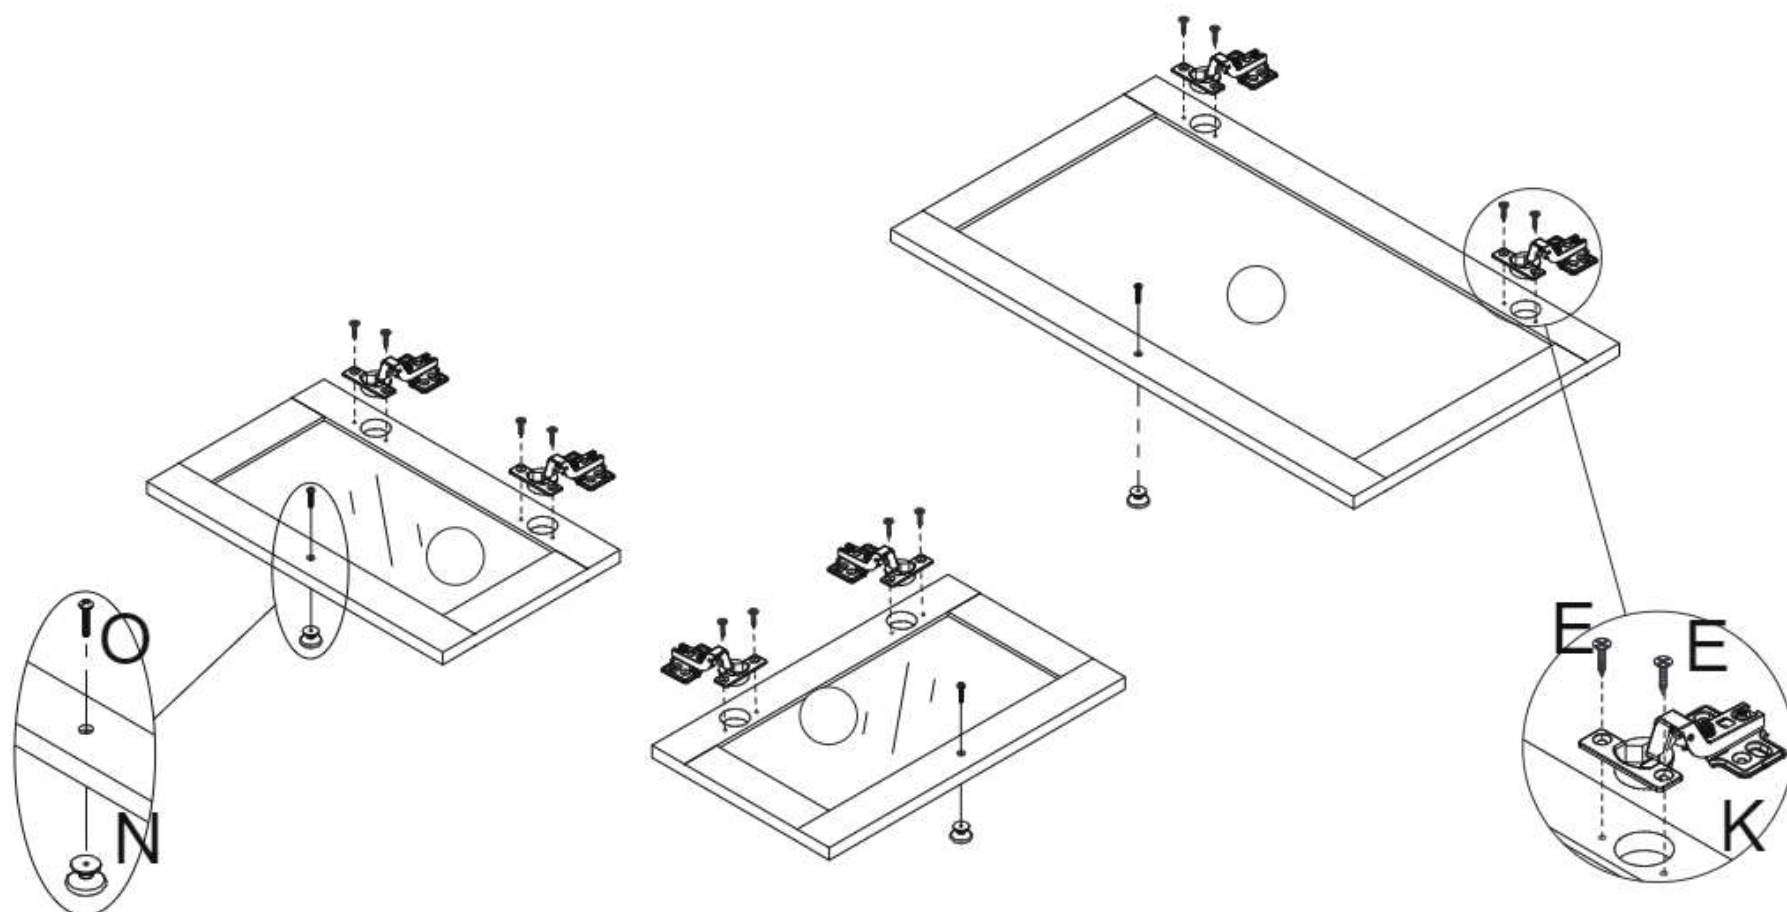 



(E)	x12	(K)	x6	(N)	x3	(O)	x3

  29



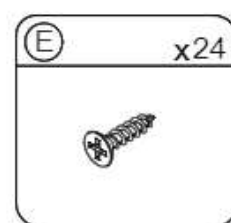
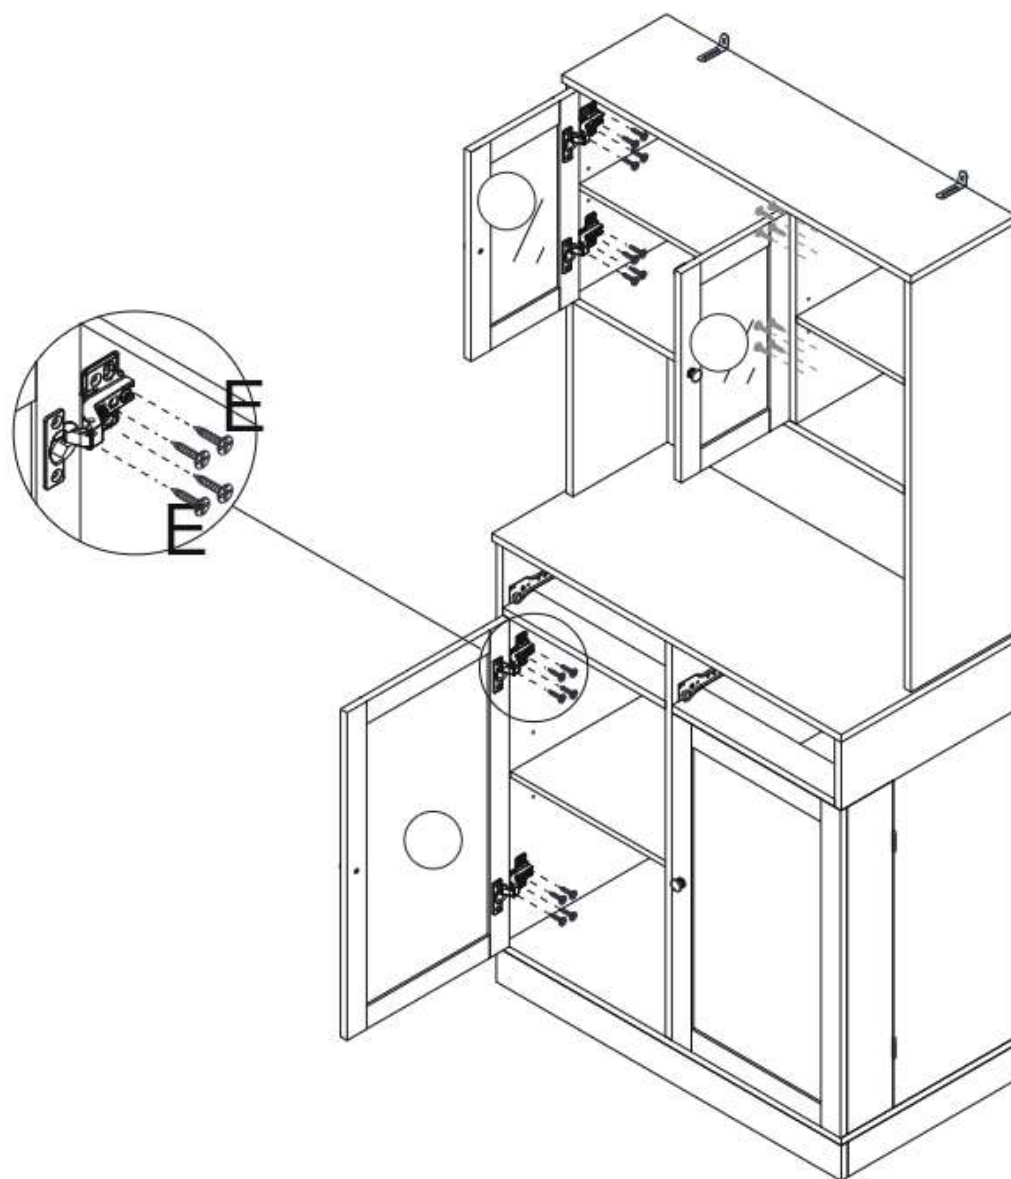


30

  
x2

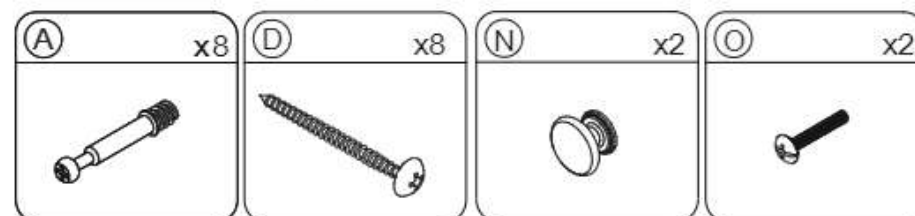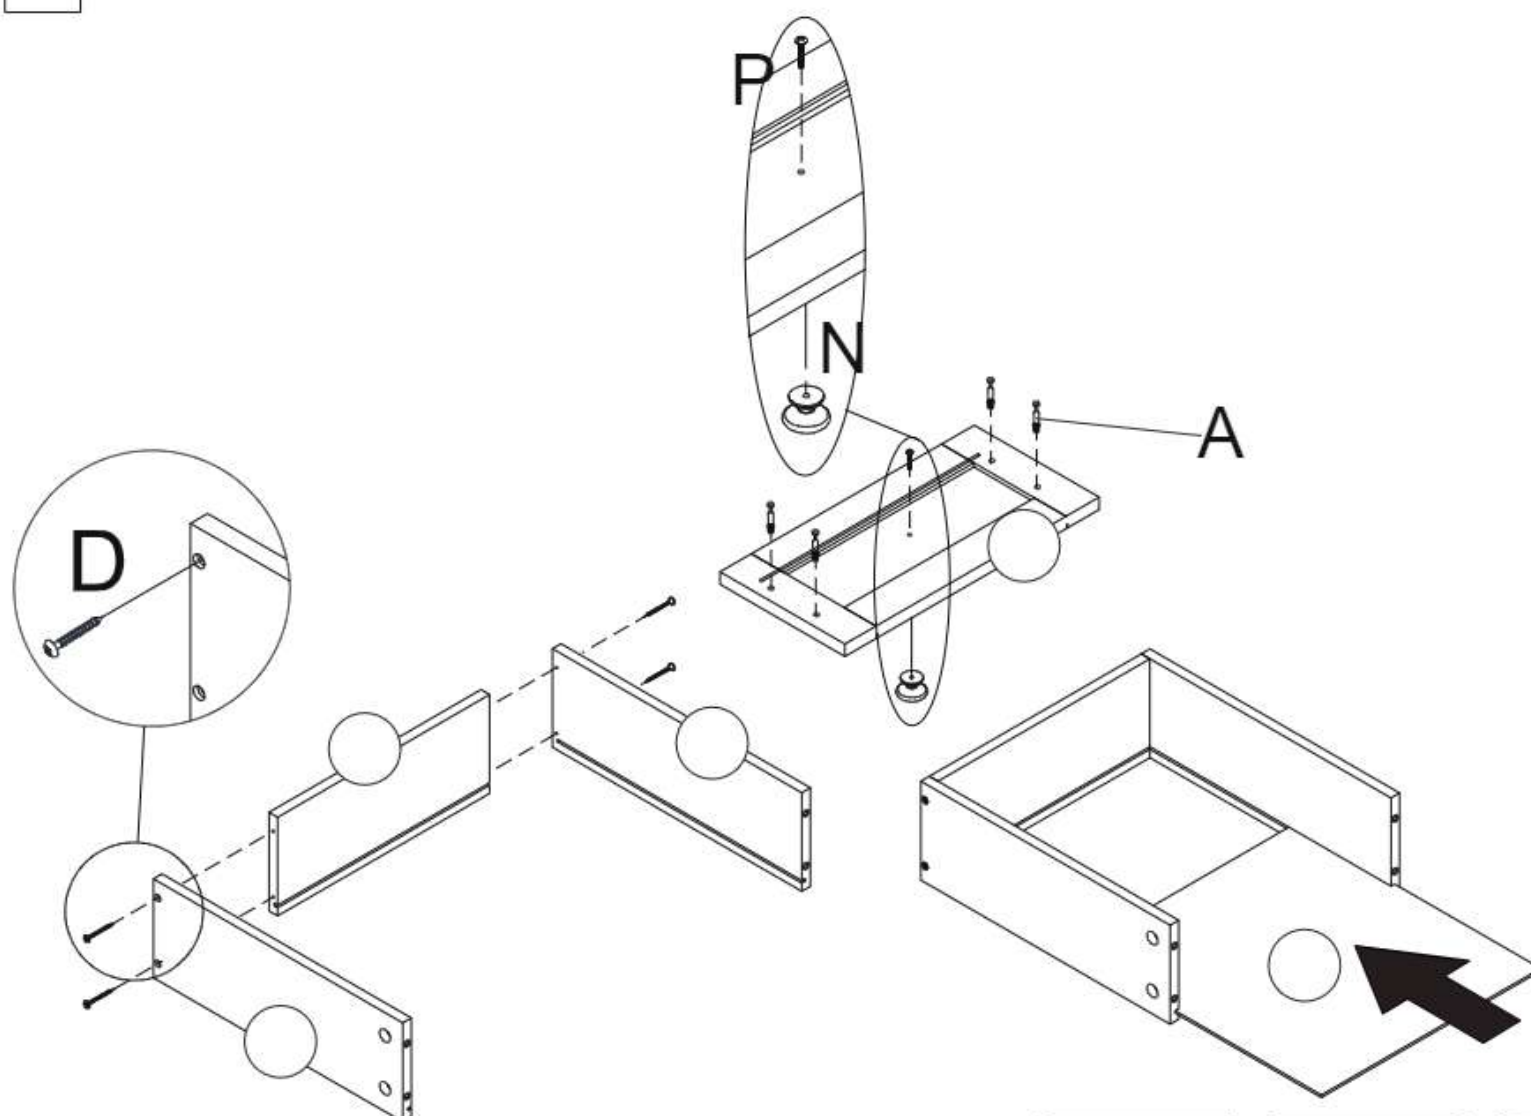

31

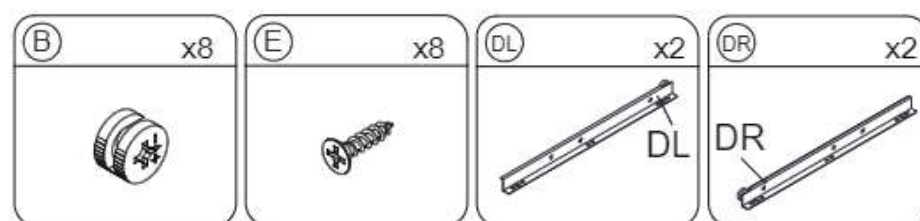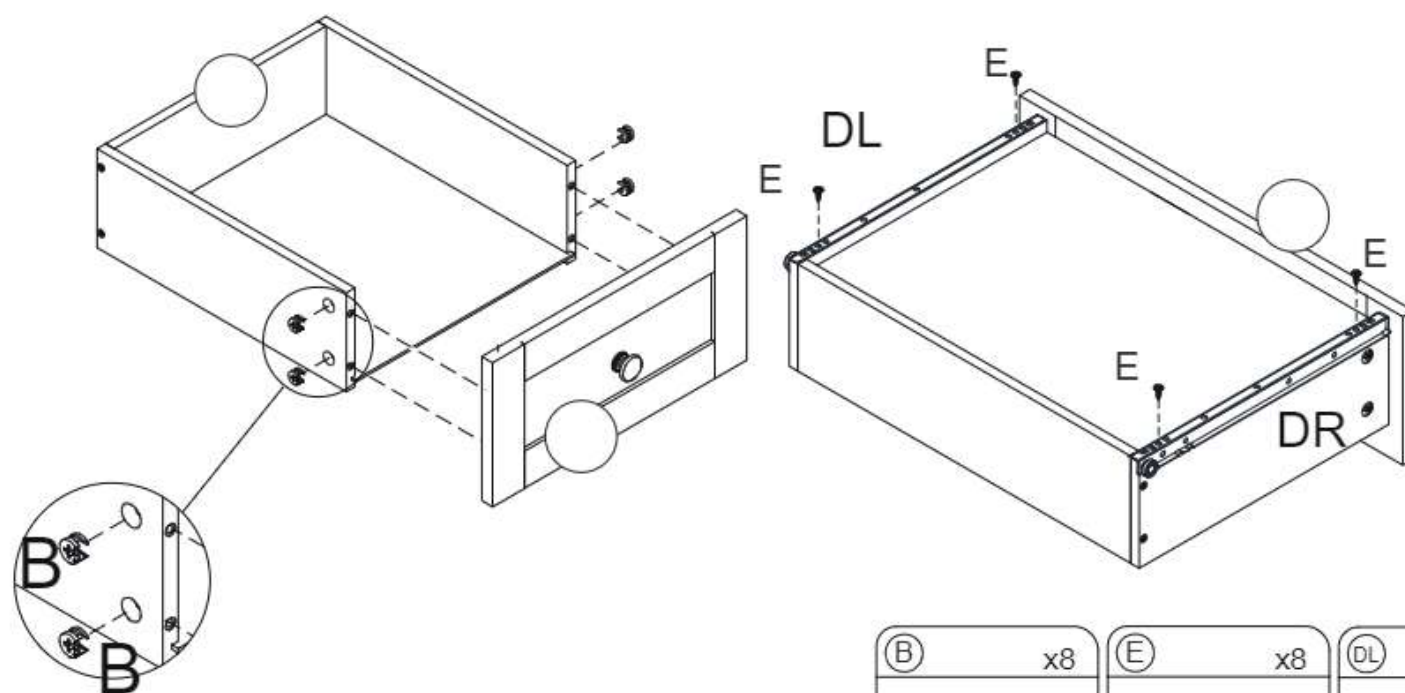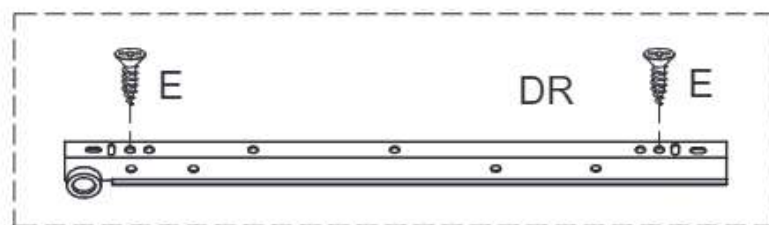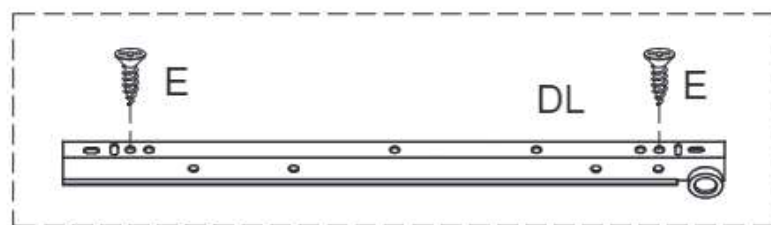    


32

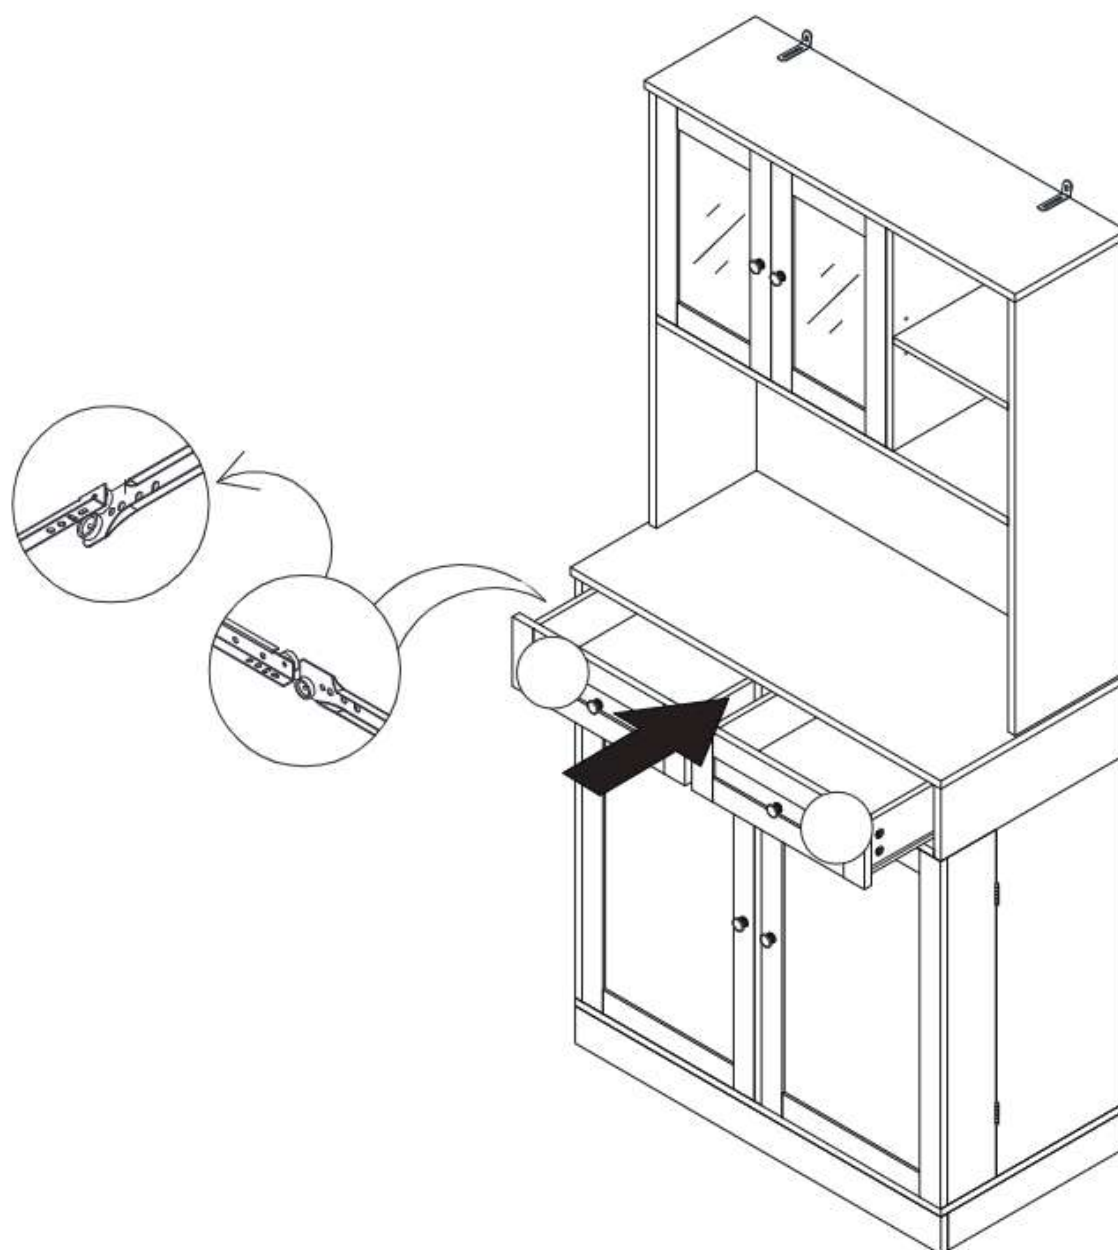 


The ways to adjust the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position. Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.


 
Components Name

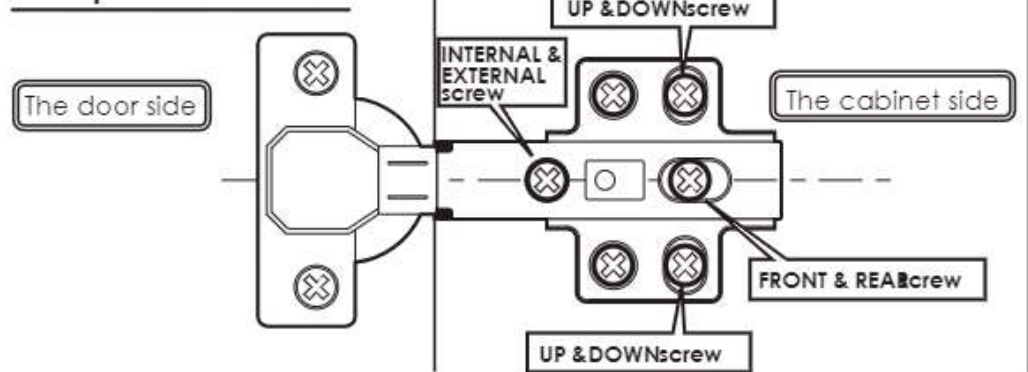

 Obvious gaps between doors or Doors don't look closed

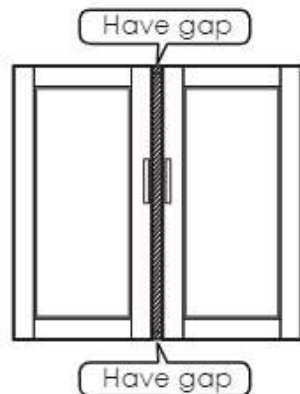

  - 1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little.

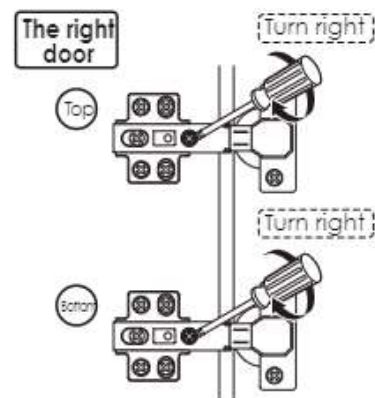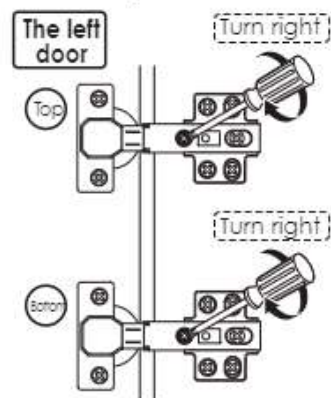


※ If the 2 doors are overlap, please turn the "internal & external screw" to the left.

When door is crooked




Please take the following steps to adjust first.

 - 1 Rotate the "front and rear screws" to the left

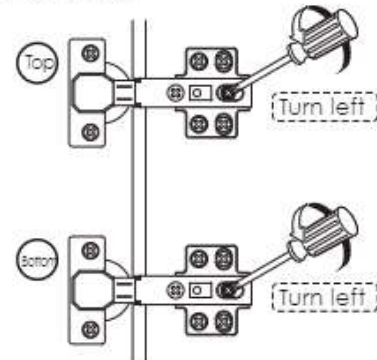


- 2 Push the door to the cabinet

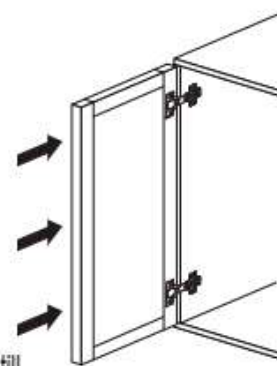 


※ After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.

 
- 3 Rotate the "front and rear screws" to the right

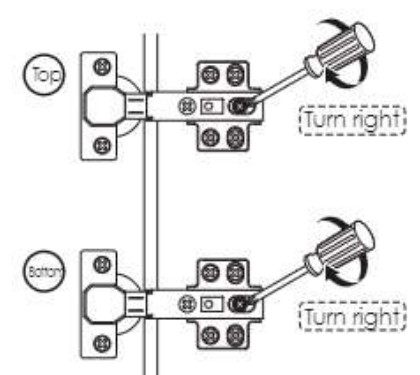


When door is leaning

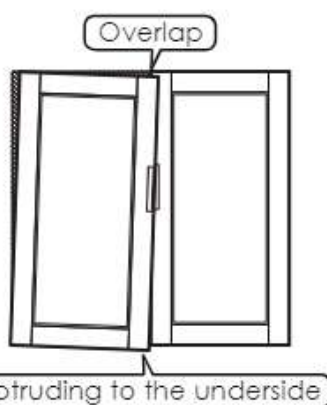 

 
- 1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

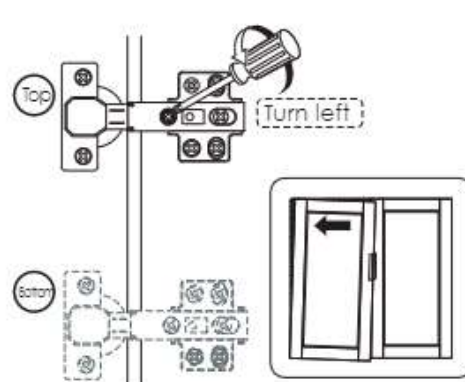


Protruding to the upside

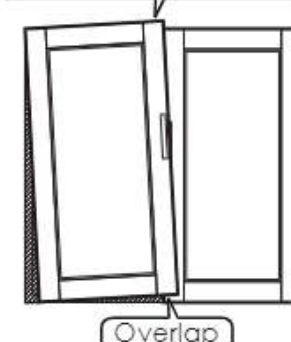 

 
- 1 Turn "internal & external screw" to the left can make the bottom of the door tilted outward.

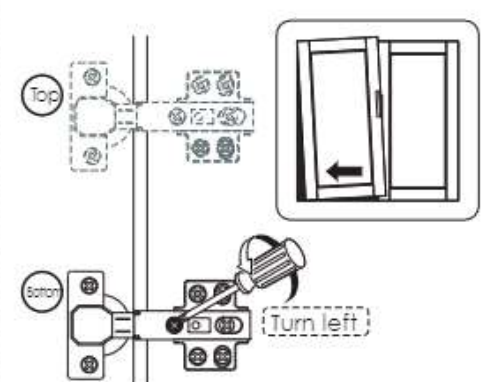


When the door is higher on top

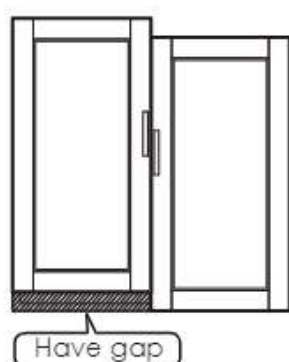 


- 1 Turn "up & down screw" to the left

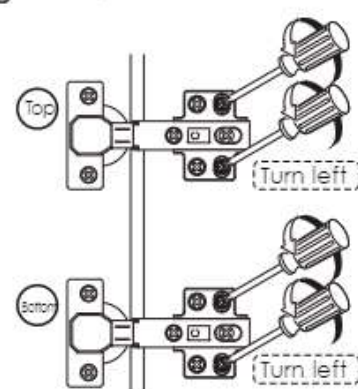 

 - 2 Lower the door's height so that 2 doors are of the same height.

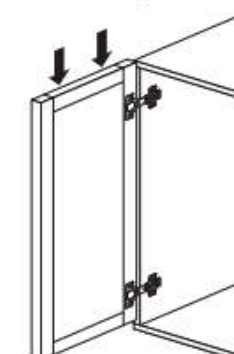

- 3 Turn "up & down screw" to the right

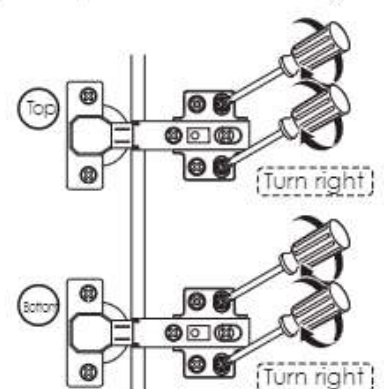 

※ If the door is lower on bottom, please lift up the left door slightly on step 2

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, eg:



- these are suitable for use in masonry walls

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.



 
Hints:

1. General rule: always use a larger screw and wall plug if you are not sure.
2. Ensure you use the recommended drill bit to match the wall plug and hole size.
3. Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
4. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5. Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No. 1 "General Purpose" wall plug

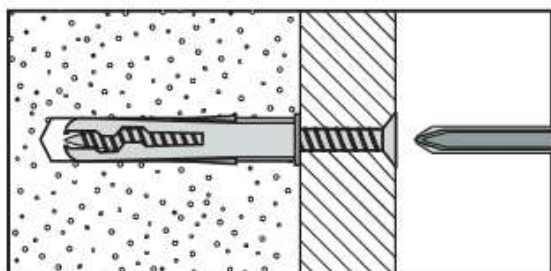


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No. 3 "Cavity Fixing" wall plug

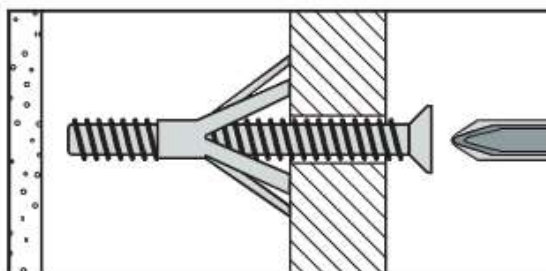


For use with plasterboard partitions or hollow wooden doors.

 No. 5 "Hammer Fixing" wall plug

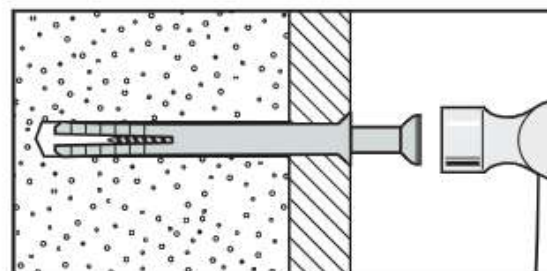


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No. 2 "Plasterboard" wall plug

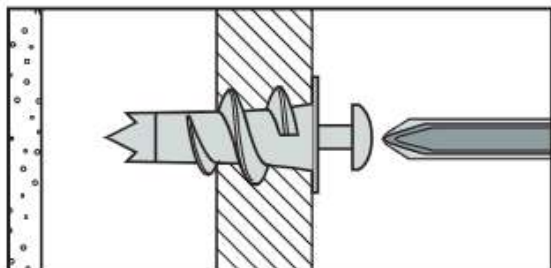


For use when attaching light loads onto plasterboard partitions.

 No. 4 "Cavity Fixing - Heavy Duty" wall plug

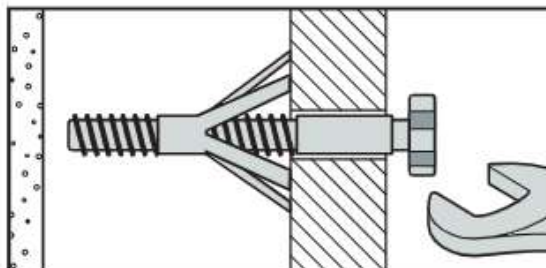

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No. 6 "Shield Anchor" wall plug - heavy loads

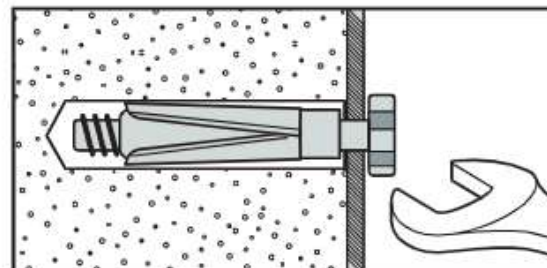

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.