


# We Put Kids First.

# **ASSEMBLY INSTRUCTIONS**

**NE 4569L** 

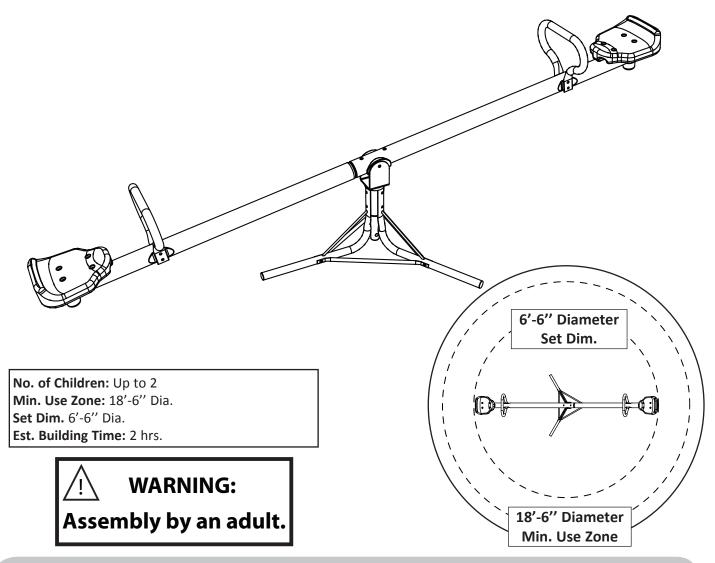

To register your product visit:

## http://www.swing-n-slide.com

Other benefits include information on product warranties, assembly plan updates, joining our mailing list for new products and promotions, receiving our newsletter, and providing feedback on products.

Swing•N•Slide • 1212 Barberry Drive • Janesville, Wisconsin 53545 Visit our web site at: www.swing-n-slide.com or call us at

# 1-800-888-1232



Safety Checklist for Swing-N-Slide Play Sets and Accessories

Observing the following statements and warnings reduces the likelihood of serious or fatal injury	
Installation Safety – Have You:	
	Consulted the assembly instructions supplied with your particular model?
	Noted this accessory is to be used only on Swing•N•Slide approved designs? (Do not alter its design or add/remove components, this accessory is intended
	for wooden playsets only, do not install on metal frame playsets).
	Made sure all hardware is tightened securely? (Supplied bolt covers must also be fastened securely.)
	Using a hacksaw, cut off all protruding threaded ends of bolts and other fasteners and remove any sharp edges with
	a metal file as needed, and coated fastener ends with lead free paint?
	Placed the equipment on level ground, not less than six feet (1.8 meters) from any structure or obstruction such as a fence, garage, house, overhanging
	branches, laundry lines, or electrical wires?
	Made sure home playground equipment is not installed over concrete, asphalt, packed earth or any other hard surface? (A fall onto a hard surface can re-
_	sult in serious injury to the equipment user.)
	Verified that suspended climbing ropes, chain, or cable are securely anchored at both ends and cannot be looped back unpon itself?
	Consulted in assembly instructions of your particular model for minimum use zones?
	Used a water sealant on your play set to protect the wood and prevent cracking and warping? (Apply water sealant directly after assembly is complete. If
_	you live in a coastal area, it is advisable to apply a clear coat finish to all metal parts to discourage rust).
	Followed all anchoring and shock absorbing surfacing requirements on the back of this sheet as they apply?
	Made sure not to allow children to use equipment until it is properly installed?
	Made sure to adjust all swings so there is a minimum 8" clearance between the swing and the ground surface?
	If project requires more than one day to complete, made certain to anchor the tower as soon as it is constructed?
Onora	Do not leave the tower unanchored overnight.
	ting Safety – Have You:
	Determined that on-site adult supervision is provided for children of all ages?
	Warned children the following before allowing them to use the equipment? Not to walk close to, in front of, behind or between moving items.
	<ul> <li>Not to walk close to, in front of, behind or between moving items.</li> <li>Not to twist swing or any other accessory chains or ropes or loop them over the top support bar since this will reduce the strength of chain or rope.</li> </ul>
	Not to stand on swing seats.
	<ul> <li>Not to swing empty seats or other accessories.</li> </ul>
	<ul> <li>Not to slide down swing chains.</li> </ul>
	Be sure to sit in the center of the swing seat and other accessories with full weight on the seat.
	Not to attach items to the playground equipment that are not specifically designed for use with the equipment such as but not limited to, jump
	ropes, clotheslines, pet leashes, cables and chain. They may cause a strangulation hazard.
	<ul> <li>Not to climb or walk on the top of swing beams, railings or roof.</li> </ul>
	<ul> <li>Not to use equipment in a manner other than intended.</li> </ul>
	Not to get off equipment while it is in motion.
	Not to climb on the equipment when it is wet.
	Be sure to go down slides feet first.
	Determined that only one child per planned occupant seat should be allowed on this set at one time.
	Determined children must be dressed appropriately for play. Avoid hooded jackets, bicycle or other sports helmets, clothing with draw strings and loose
	fitting clothes which could become entangled or snagged on equipment.
	Determined that suspended climbing ropes, chain, or cable are securely anchored at both ends and cannot be looped back upon itself.
	Made certain the slide is placed so that it is not in direct sunlight.
Safety	Maintenance – Follow these preventive maintenance instructions at the intervals required:
	Use of weed trimmers too close to board surfaces will cause damage to the wood and compromise protection against rot and insect infestation.
	To prevent the deterioration of materials, remove plastic swing seats and other plastic accessories when outdoors temp dips down to or below 32° F and
_	take indoors. Reinstall these plastic elements at the beginning of each play season.
	At the beginning of each play season check metal parts for rust. If found, sand and repaint using a non lead-based paint meeting the
_	requirements of 16 CFR 1303 or SOR/2005-109.
	At the beginning of each play season and once a month during each play season, check all moving parts for wear, rust or other
_	deterioration. Replace as needed. If any of these conditions exist, call 1-800-888-1232 to order replacement accessories.
님	At the beginning of each play season and once a month during each play season lubricate metallic moving parts.
	At the beginning of each play season and twice a month during each play season, check all protective coverings on bolts, pipes, edges, and corners.
_	Replace if they are loose, cracked, or missing.
	At the beginning of each play season and twice a month during each play season, rake and check depth of loose fill protective
_	surfacing material to prevent compaction and maintain appropriate depth. Replace as necessary.
님	At the beginning of each play season and twice a month during each play season tighten all hardware.
	At the beginning of each play season and twice a month during each play season, check all wood members for deterioration and
	splinters. Sand down splinters and replace deteriorating wood members.

#### **Disposal Instructions**

When the equipment is taken out of service, it must be disassembled and disposed of in such a way that no unreasonable hazards will exist at the time the set is discarded.

> Important! Additional Safety Instructions for all Swing-N-Slide Playground Equipment. Save this instruction sheet in the event the manufacturer needs to be contacted.

This product is intended for single family home/residential use only and not intended for use in any public setting. Placement in any public setting constitutes a misuse of this product.

#### IMPORTANT! ADDITIONAL REQUIRED SAFETY INSTALLATION INSTRUCTIONS

According to ASTM requirements, all kits must be anchored to the ground and, if the unit has a climbing rope, the rope end must be anchored to the ground. If soil conditions permit stakes to be pulled out easily, cementing into ground is necessary.

- To anchor the unit to the ground, Follow the instructions included in this plan for applying Anchor-It devices to your unit, or use 2" x 4" x 18" (45mm x 95mm x 457mm) pressuretreated stakes. Pound stakes into ground at least 12" (305mm) at all inside corners of the posts (including A-frame legs and climbing unit posts). Attach with four (4) 2-1/2" galvanized screws per stake into each tower and/or A-frame upright. NOTE: Leave the soil around anchors as intact as possible. Do not excavate more soil than is necessary to place anchors.
- If the unit has a climbing rope, securely anchor the rope at both ends.
- Once the unit is completely assembled and before children are allowed to play on it, proper shock-absorbing surfacing material must be installed. This may be accomplished by
  using loose-fill materials at a sufficient depth. The Consumer Product Safety Commission "Handbook for Public Playground Safety" lists the following materials and required depths
  that are sufficient for home/residential application. Supplemental information may be found in ASTM F1292. For fall height protection up to 9 ft. (2.742m) [recommended for
  Swing•N•Slide kits]:

LOOSE FILL MATERIAL Wood Mulch Double Shredded Bark Mulch Uniform Wood Chips REQUIRED (UNCOMPRESSED) DEPTH<sup>1</sup> in. (mm) 9" (229mm) 9" (229mm) 12" (305mm)

These depths were derived from the CPSC Handbook. Swing•N•Slide has not done independent tests to determine these required depths. When properly installed, shock absorbing material will completely cover the horizontal baseboards on climbing units. This protective surfacing must extend a **minimum** of 6 ft. (1.828m) in all directions from the perimeter of the equipment or from the outermost edges of any component. For example, a slide extending beyond the platform must have protective surfacing at least 6 ft. (1.828mm) out from both sides as well as the end. For swings, the protective surface must extend <u>at least 14 ft. (6m)</u> out from <u>both</u> the back and front of the swing when the swing is in its rest position.

For further information on playground safety, the Consumer Product Safety Commission (CPSC) publishes the Outdoor Home Playground Safety Handbook which can be downloaded for free from www.cpsc.gov. An additional resource is the American Society of Testing and Materials (ASTM) Standard Consumer Safety Performance Specification for Home Playground Equipment (ASTM F1148) which can be purchased and downloaded from www.astm.org.

#### Swing-N-Slide® MANUFACTURERS LIMITED WARRANTY

Swing-N-Slide® takes great pride in the quality and durability of our products. Our Manufacturer's Limited Warranty provides confidence and demonstrates our commitment to providing quality residential playground products.

#### MANUFACTURER'S LIFETIME LIMITED WARRANTY

Swing-N-Slide® warrants its thermoformed slides and climbing mountains to be free from defects in workmanship and materials, under normal use and conditions, for the lifetime of the product.

#### **MANUFACTURER'S 5 YEAR LIMITED WARRANTY**

Swing-N-Slide® warrants its Custom Ready-to-Build Play Set kits and accessories to be free from defects in workmanship and materials, under normal use and conditions, for a period of 5 years.

#### **MANUFACTURER'S 5 YEAR LIMITED WARRANTY**

Swing-N-Slide® warrants its No-Cut and Wood Complete Ready-to-Assemble Play Set kits against wood rot and termite damage, and to be free from defects in workmanship and materials, under normal use and conditions, for a period of 5 years for structural wood components.

**Cosmetic defects** that do not affect the structural integrity of the product, or natural defects of wood such as warping, splitting, checking, twisting, shrinkage, swelling or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

#### MANUFACTURER'S ONE YEAR WARRANTY

Swing-N-Slide® warrants its canopy roofs and/or tarps, playhouses and Timber GLOVE lumber wrap to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year.


Swing-N-Slide® will repair, or at its discretion, replace any part within the stated warranty period which is defective in workmanship or materials. This decision is subject to verification of the defect upon delivery of the defective part to Swing-N-Slide® at 1212 Barberry Drive, Janesville, Wisconsin, 53545. Any part(s) returned to Swing-N-Slide® must have prior approved Return Authorization Number and proof of purchase, including the date of purchase. This warranty is valid only if the product is used for the purpose for which it was designed and installed at a residential, single family dwelling. This warranty is void if the product is put to commercial or institutional use. This warranty does not cover (a) products which have been damaged by acts of Nature, negligence, misuse, or accident, or which have been modified or repaired by unauthorized persons; (b) the cost of labor; or the cost of shipping the product, any part, or any replacement product or part.


Swing-N-Slide® DISCLAIMS ALL OTHER REPRESENTATIONS AND WARRANTIES OF ANY KIND, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE. Swing-N-Slide® WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty is non-transferable and does not extend to the owners of the product subsequent to the original purchaser. Some states do not allow limitations on implied warranties or exclusion of incidental or consequential damages, so these restrictions may not be applicable to you. This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.


#### This warranty also does not apply to:


- Structures not erected, maintained or inspected in conformance with Swing-N-Slide® installation plans
- Structures that have had parts added or substituted not in conformance with Swing-N-Slide® installation plans
- Parts that have been modified, altered or misused
- Parts that have not been used as designed or intended
- Damage due to acts of Nature, vandalism, abnormal use or abuse as determined by **Swing-N-Slide®**

# **TOOLS AND HARDWARE**

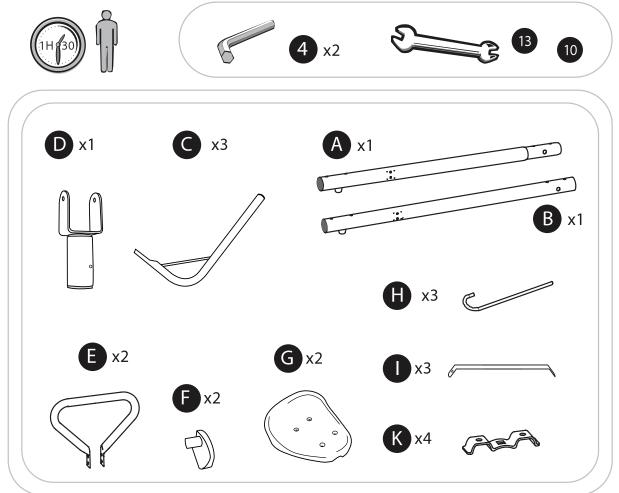


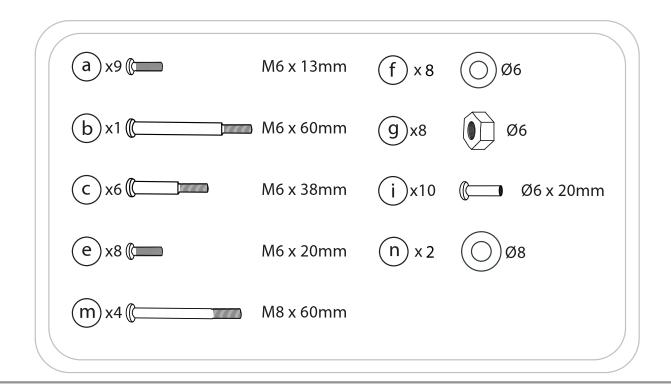

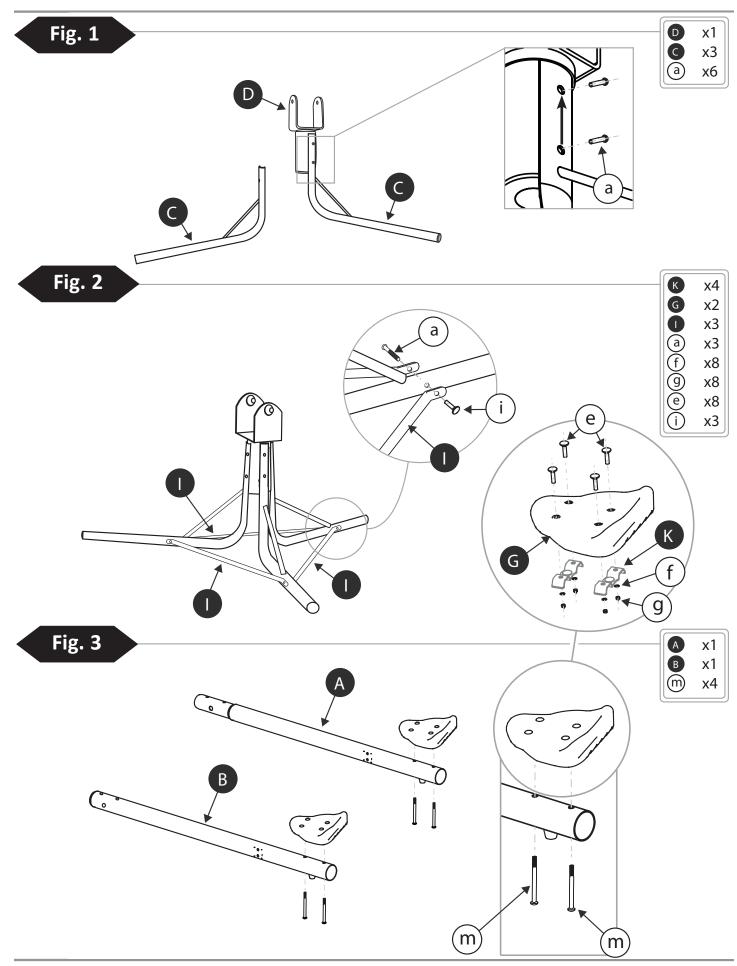

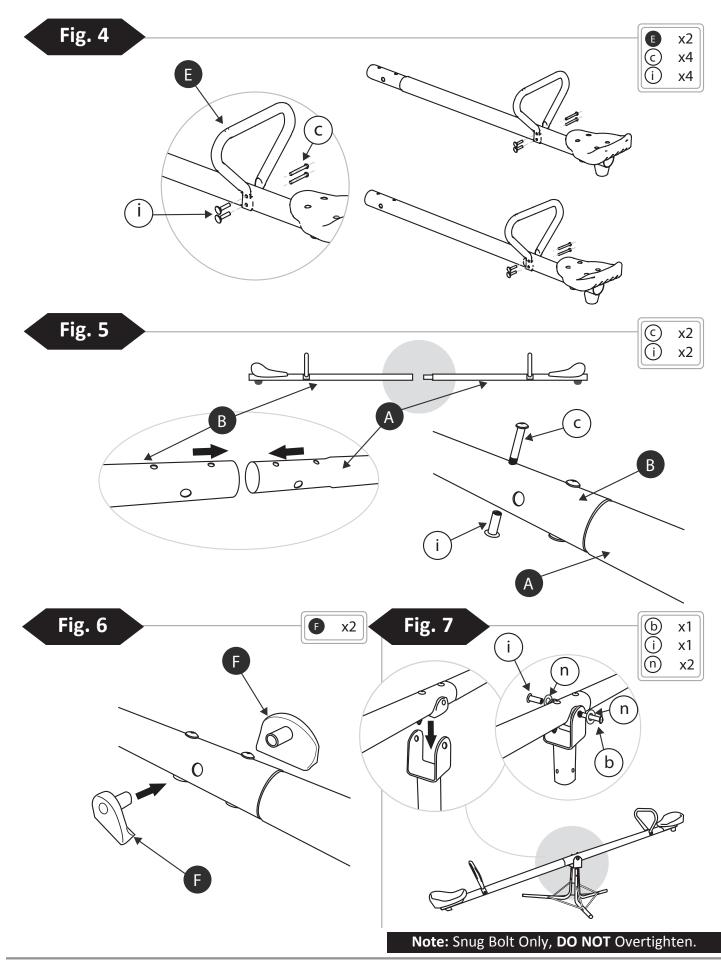


х3

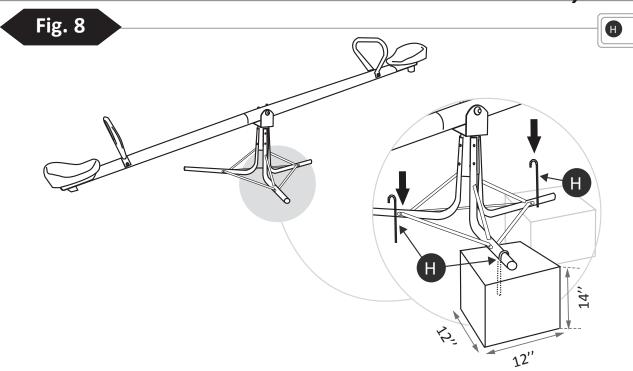

#### **Optional Seesaw Anchoring Method:**

- 1. Place the Seesaw in the desired position. Mark a 12" x 12" square around each of the Seesaw feet and, using these guidelines, dig holes 14" deep.
- **2.** Fill each hole with a minimum of 12" of concrete. Do not exceed the ground level.
- **3.** Place Seesaw back in desired position so that ends of legs are centered over cement fill.
- Fit the anchor into the center of the concrete so that their tops rise out of the concrete and loop over ends of legs.
   Note: Remove anchors before concrete sets, creating a mounting hole in the cement.
- Once concrete is dry, slide anchors into mounting holes. Fill in remaining area of holes with surfacing and compact until firm.
   Note: Do not use the Seesaw until the concrete is completely dry and holes are filled.

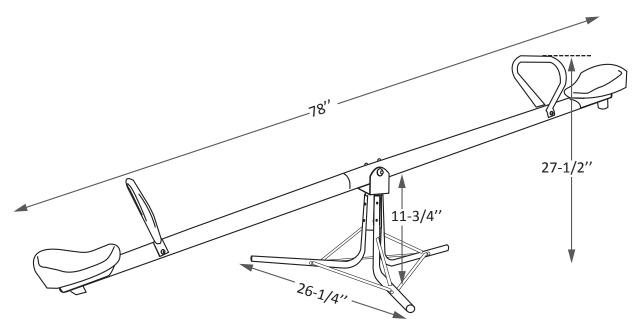

Weight Limit: 85 lbs Per Child

Questions???... **Call our Customer Service Department** at 1-800-888-1232

