

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help.

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

 
*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discolouration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

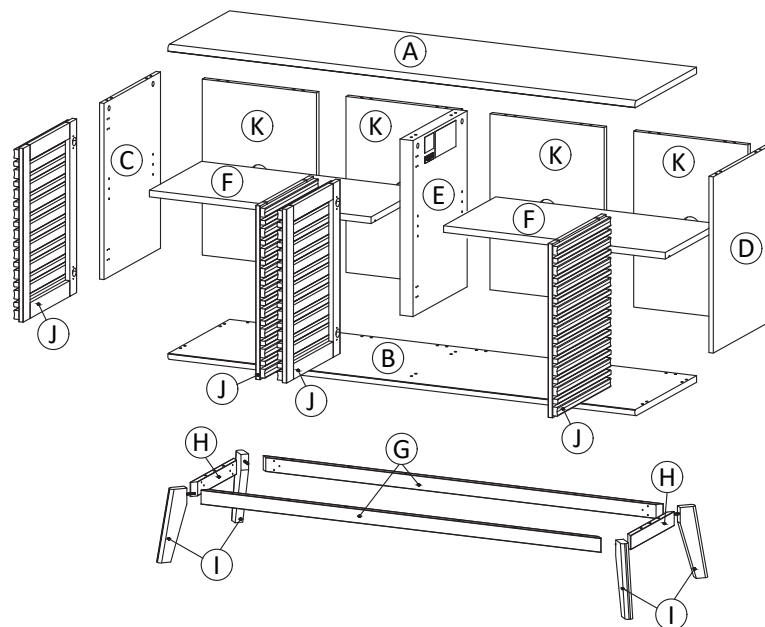

Product Dimensions: 62"Wx18"Dx33"H

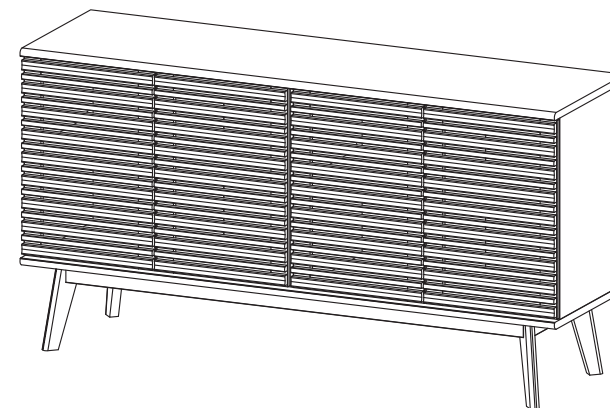 




 
 
 






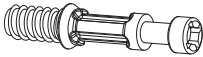


 
 

 

⚠ WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 65 inches
Weight Limit: 101 lbs
Shelf Load Limit: 41lbs
Drawer Load Limit: - lbs
Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

⚠ WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on the child.

Hardware List

HW1x14  \varnothing 6 x 35 mm	HW2x14  \varnothing 15 mm	HW3x38  \varnothing 8 x 30 mm	HW4x12  M 6.4 x 53 mm	HW5x48  M 4.5 x 12.5 mm	HW6x14  M 7 x 50 mm
HW7x2  L 4	HW8x14  M 6 x 12.5 mm	HW9x8 	HW10x2 	HW11x4 	HW12x1 
HW13x4 	HW14x8  M 3.5 x 13 mm	HW15x4 	HW16x4 	HW17x24  M 4 x 16 mm	HW US12x1 
HW BC410x4 	HW HS26Ax8 				

Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	1 of 2
B	Bottom Board	1	1 of 2
C	Side Board Left	1	1 of 2
D	Side Board Right	1	1 of 2
E	Center Board	1	1 of 2
F	Adjustable Shelf	2	1 of 2
G	Support Leg 1	2	1 of 2
H	Support Leg 2	2	1 of 2
I	Leg	4	1 of 2
J	Door	4	2 of 2
K	Back Board	4	2 of 2

Piece	Description	Qty	Carton Call
HW1	Cambolt	14	1 of 2
HW2	CamLock	14	1 of 2
HW3	Dowel	38	1 of 2
HW4	Screw M 6.4 x 53 mm	12	1 of 2
HW5	Screw M 4.5 x 12.5 mm	48	1 of 2
HW6	Screw M 7 x 50 mm	14	1 of 2
HW7	Allen Key	2	1 of 2
HW8	Screw M 6 x 12.5 mm	14	1 of 2
HW9	Shelf Pin	8	1 of 2
HW10	Screw Cap	2	1 of 2
HW11	Screw Cap	4	1 of 2
HW12	Wrench	1	1 of 2
HW13	Floor Protector	4	1 of 2
HW14	Screw M 3.5 x 13 mm	8	1 of 2
HW15	Flange Nut	4	1 of 2
HW16	Magnet	4	1 of 2
HW17	Screw M 4 x 16 mm	24	1 of 2
HW US12	Anti-Deflection Bar	1	1 of 2
HW BC410	Corner Brace	4	1 of 2
HW HS26A	Hinge	8	1 of 2

PREPARATION

 
*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help.

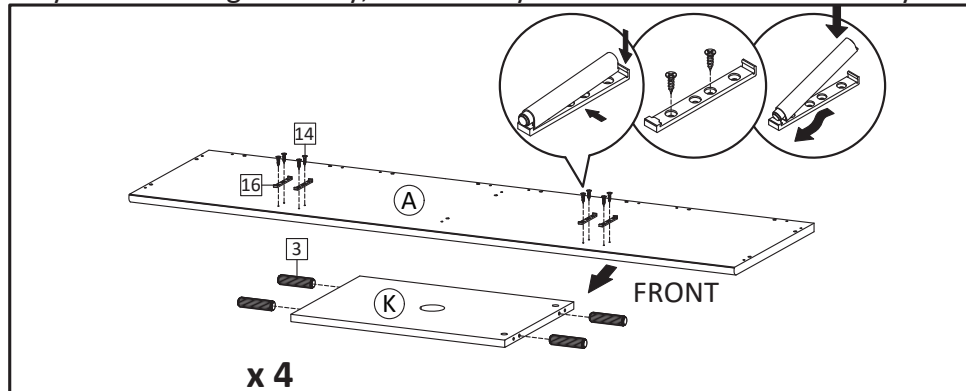

 
STEP1: Please separate Push Tool (HW 16) by pressing down the hook at back. Please the separate base, with front hook (see figure) at the edge of front side, secure with screw 3,5 x 13 mm (HW 14). Put the Push tool body by align the front part with bumper to the hook then press down the back part of push tool. Insert Dowel (HW3) to Back Board (K).

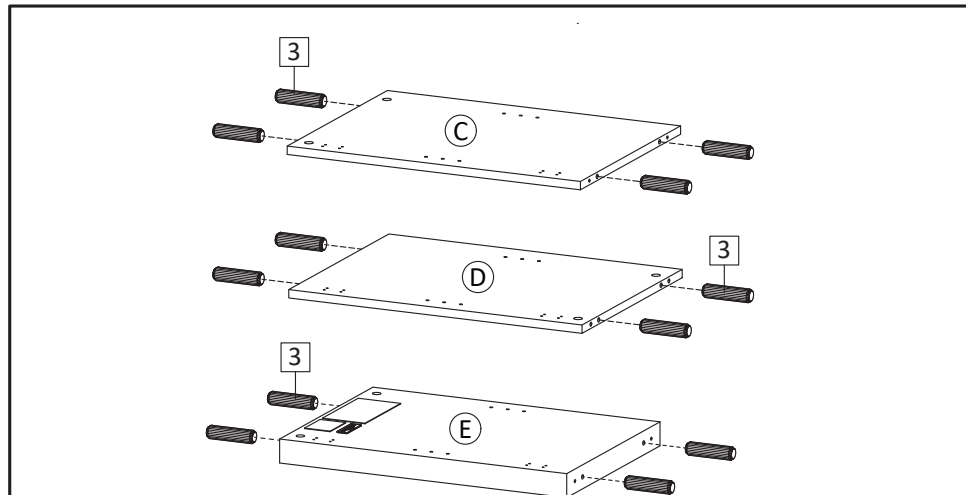

 STEP3: Insert Dowel (HW3) into Center Board (E), Side Board Left (C) and Side Board Right (D).

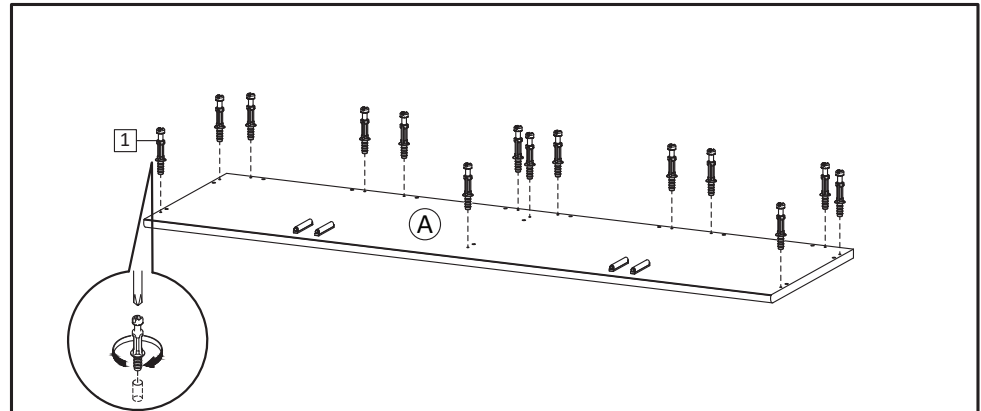

 
STEP2: Insert Cambolt (HW1) onto Top Board (A).

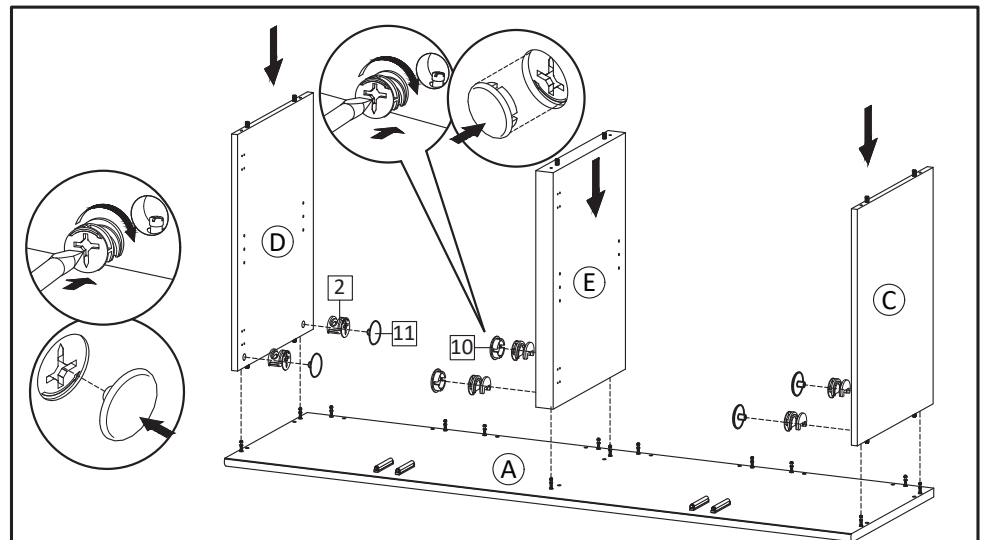


STEP4: Attach Side Board Left (C) , Side Board Right (D), Center Board (E) into Top Board (A). Insert Camlock (HW2) then tighten using screwdriver. Put Screw Cap (HW10) over the screw on Center Board (E), and put Screw Cap (HW11) over the screw on Side Board (C&D).

PREPARATION

 
- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help.

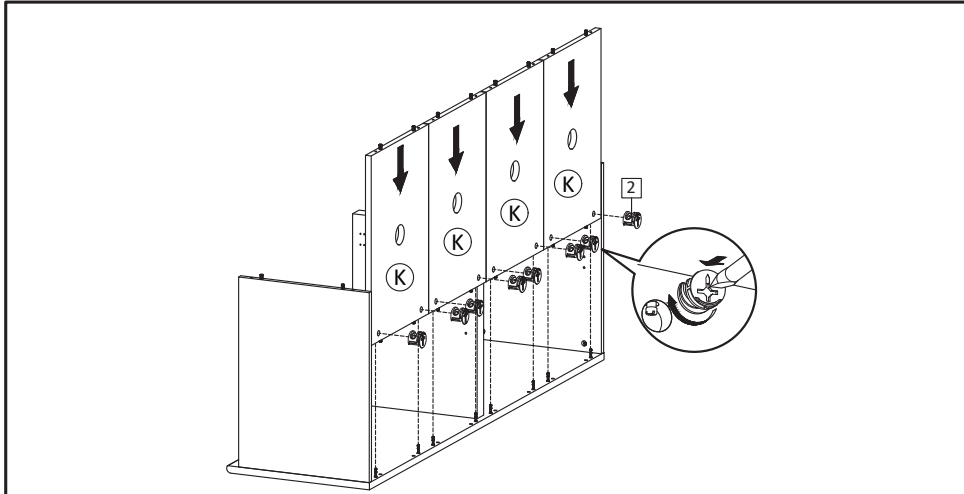

 
STEP5: Insert Backboard (K) onto the Top Board (A), Insert Camlock (HW2) then tighten using screwdriver.

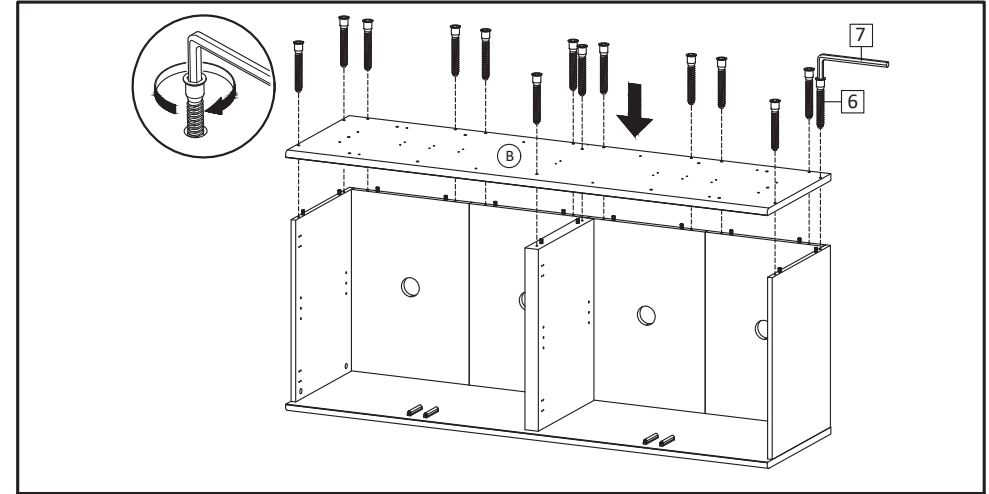

 STEP6: Insert Bottom Board (B) and secure with Screw M7x50 (HW6), tighten screws using Allen Key (HW7).

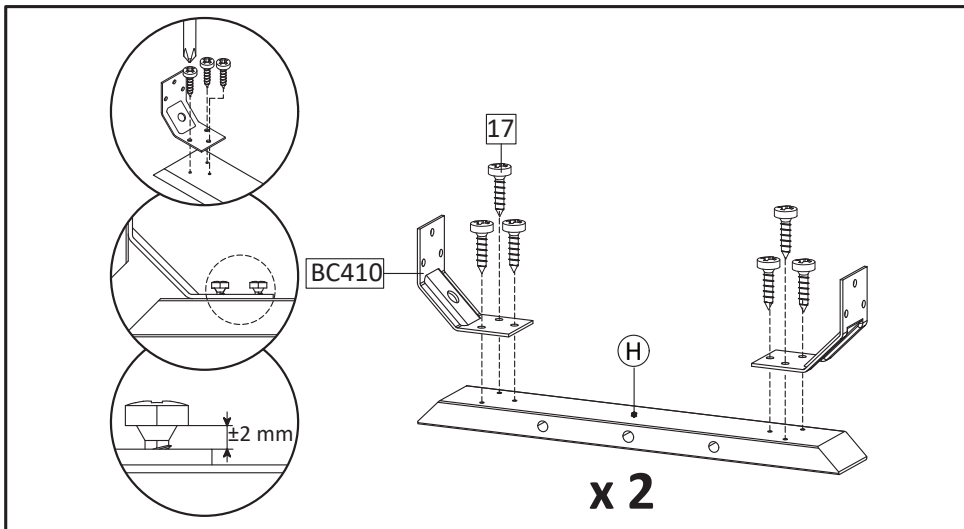

 STEP7: Now let's combine the bottom skirt. Start with installing Corner Brace (HW BC410) into Support Leg 2 (H) using Screw M4x16 (HW17). Do not overtight screw yet, leave around 2mm gap

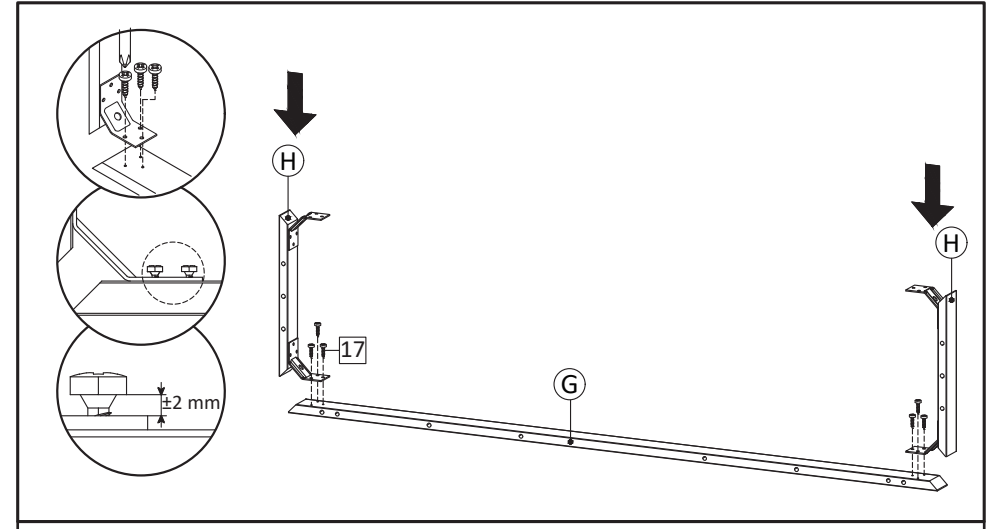

STEP8: Combine components from step 7 with remaining Support Leg 1 (G), using Screw M4x16 (HW17). Do not overtight screw yet, leave around 2mm gap.

 
PREPARATION

- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help.

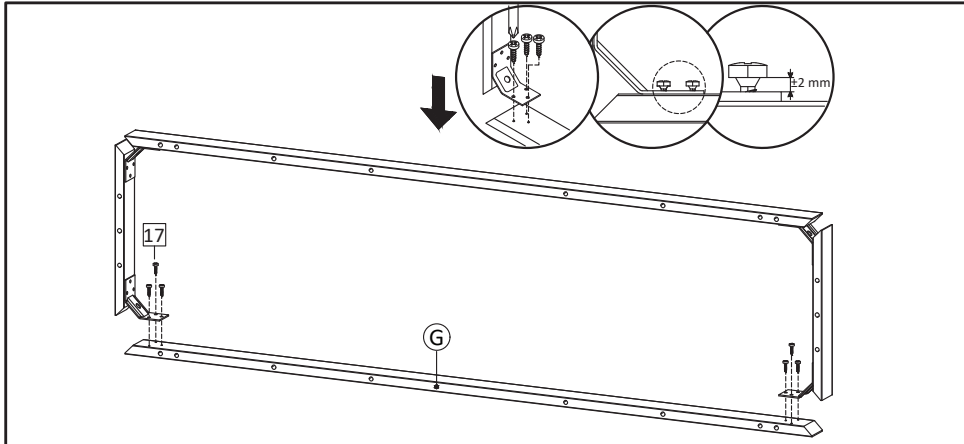

 
STEP9: Combine the Support Leg 2 from step 8 with remaining Support Leg 1 (G), using Screw M4x16 (HW17). Do not overtight screw yet, leave around 2mm gap.

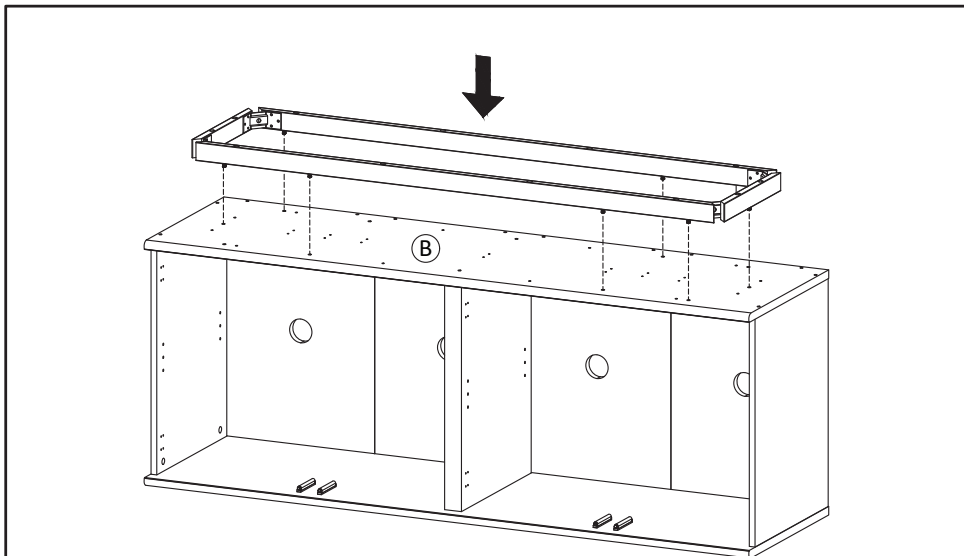

 STEP11: Bring the assembled bottom skirt and insert into Bottom Board of the cabinet.

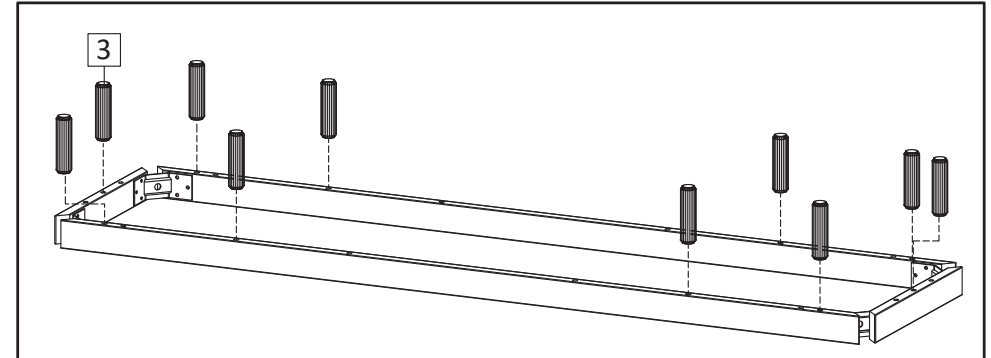

 STEP10: Insert Dowel (HW3) into assembled bottom skirt.

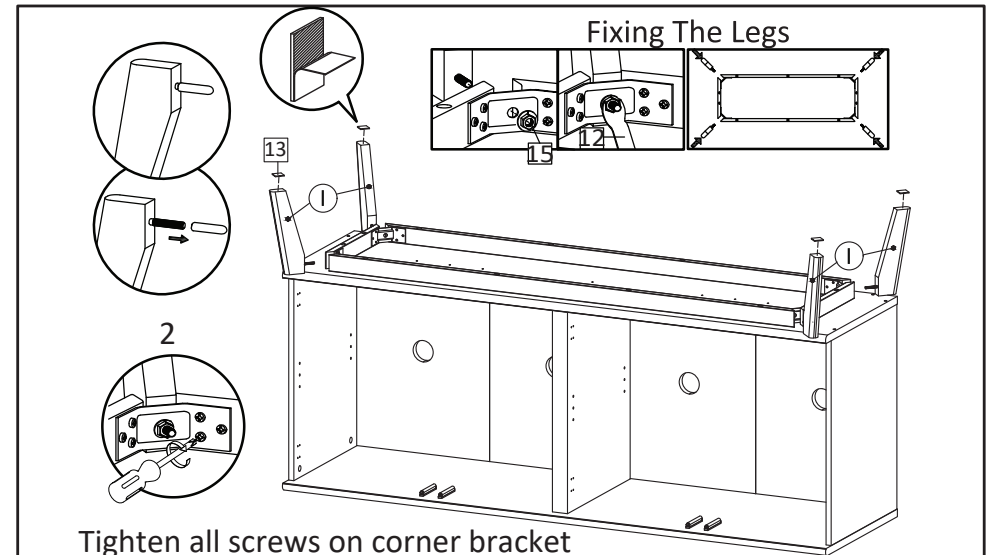

STEP12: First, let's fix the leg by inserting leg to Corner Brace, Insert Flange Nut (HW15) first into the hanger bolt of leg, tighten all the Flange nut using provided Wrench (HW12). Second, after Ensuring that all legs has been tightened, continue with tighten all screws on the corner brace. Peel off paper from Floor Protector (HW13) and stick it onto the leg.

PREPARATION

 
*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help.

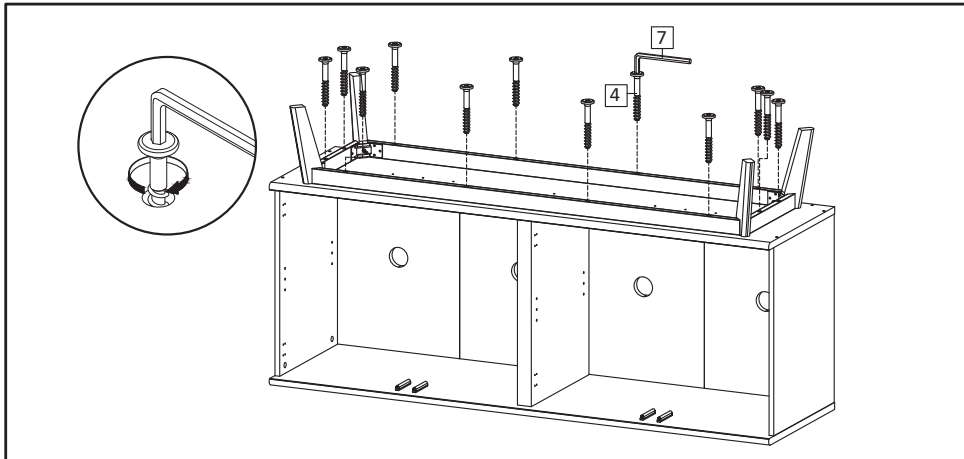

 
STEP13: Insert Screw M6.4 x 53 (HW4) using Allen Key (HW7) into assembled bottom skirt and bottom board.

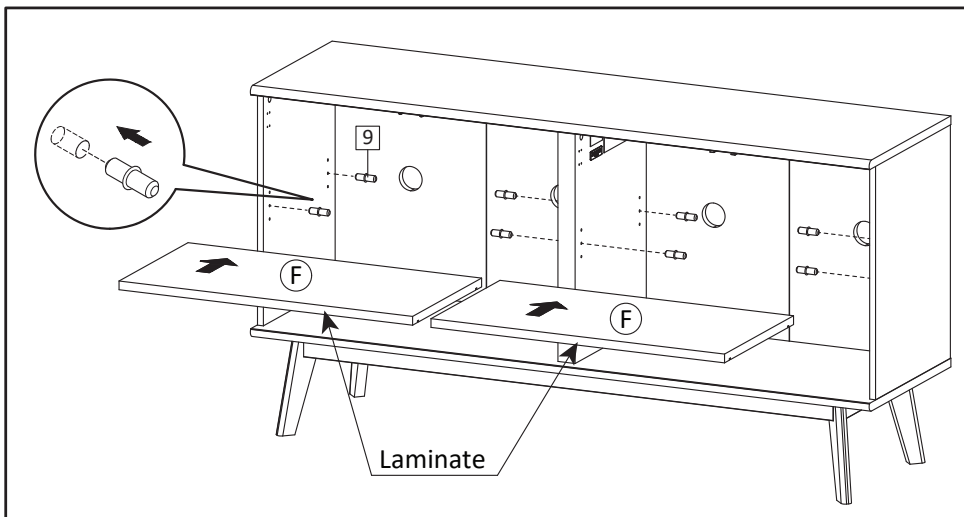

 STEP15: After bringing the product upright, insert Shelf Pin (HW9) into the holes on Sideboard & Centerboard, on the desired level. Then place the Adjustable Shelf (F) by inserting the hole on the shelf into the shelf support

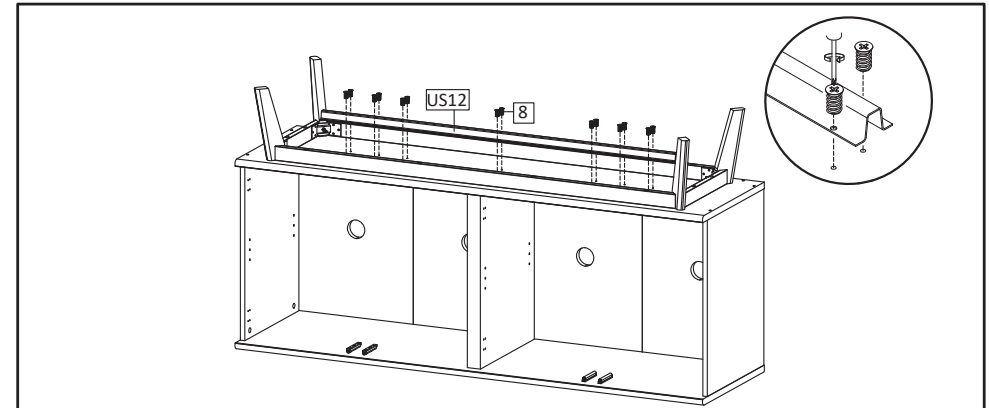

 
STEP14: Insert Anti Deflection Bar (HW US12), Screw M6x12.5 (HW8) into Bottom Board.

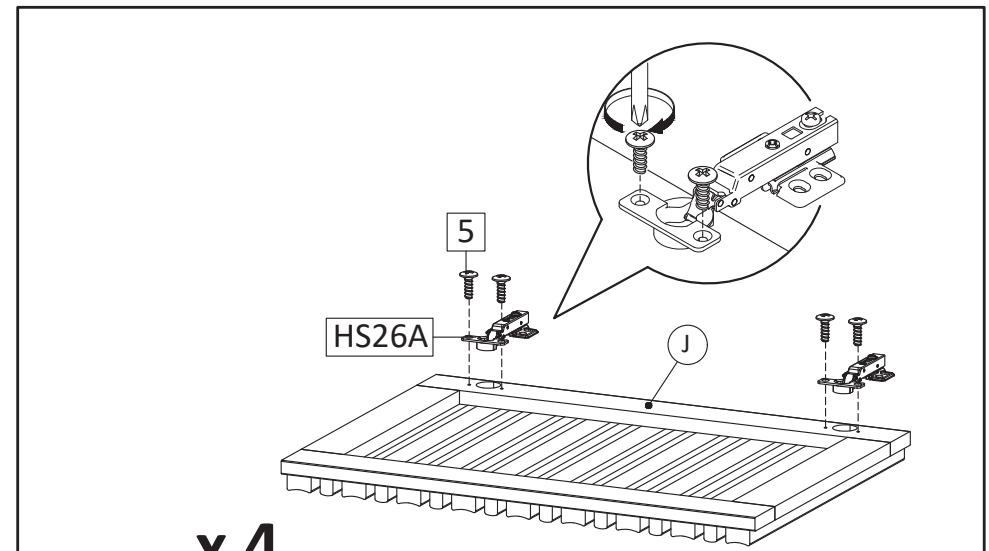


STEP16: Insert Hinge (HW HS26A) into pre-hole on 2 pcs Door (J). Secure with Screw M4.5 x 12.5 mm (HW5).

PREPARATION

 - *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help.

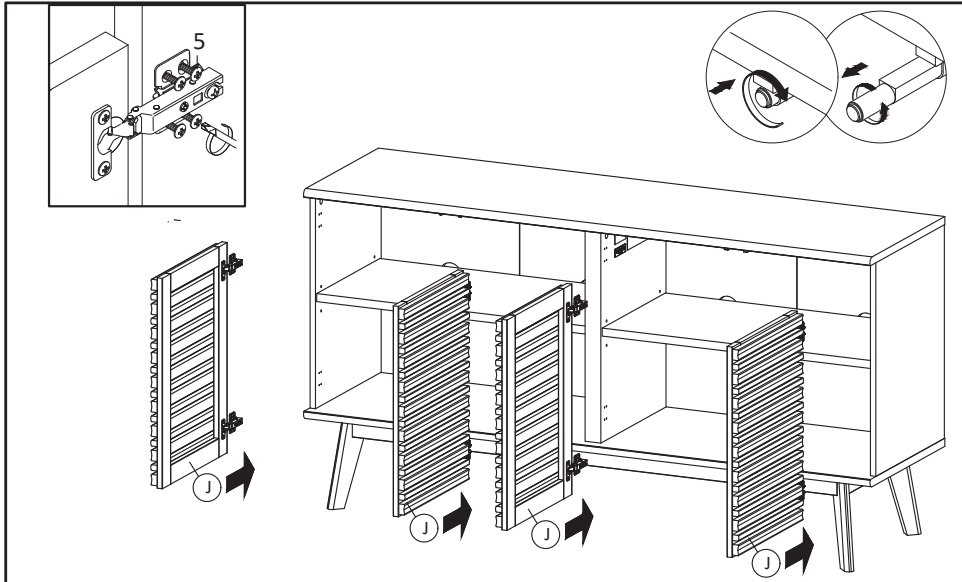

 STEP17: Install Door (J) into Side Boards and Center Boards. Please see the above images carefully. Secure with Screw M4.5 x 12.5 mm(HW5). Please refer to the last page for more guide on how to adjust hinges. Adjust the push tool as needed to ensure doors opening and closing smoothly.

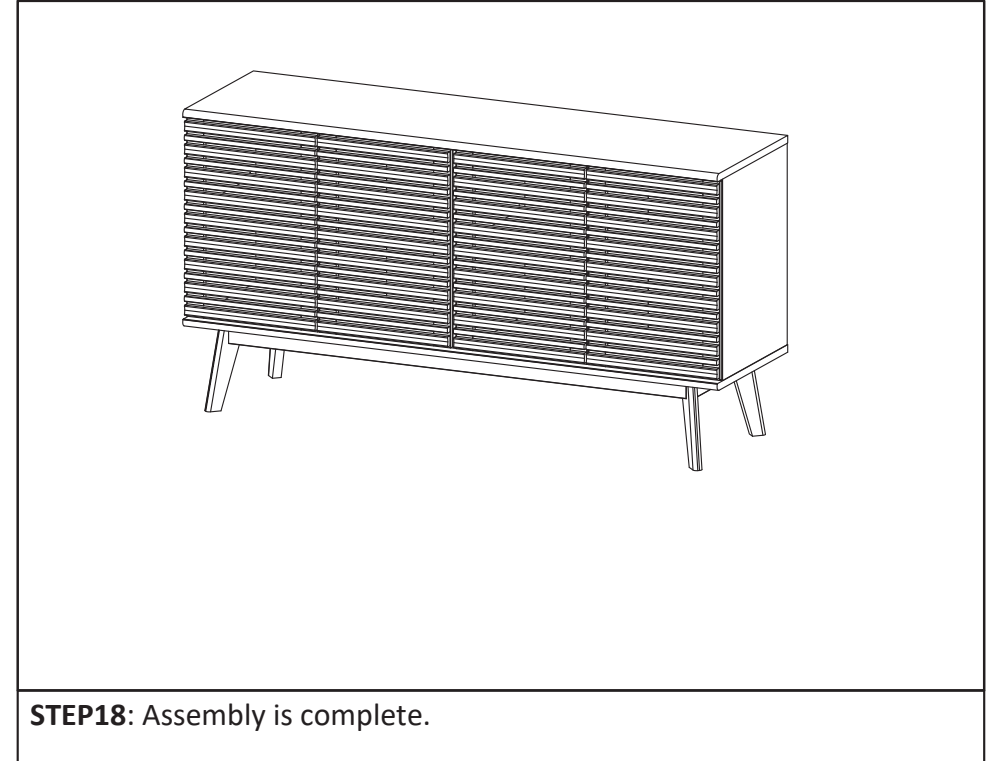









STEP18: Assembly is complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.



The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

        Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

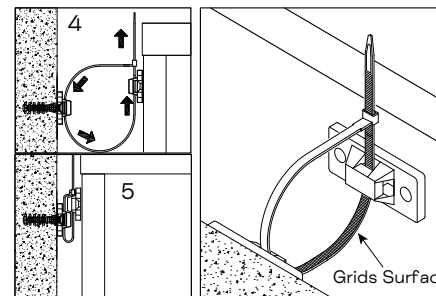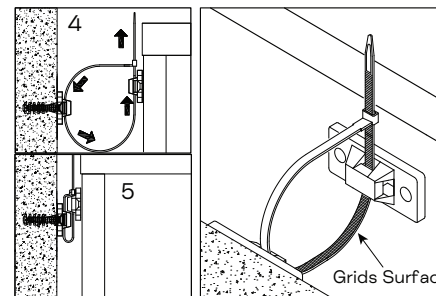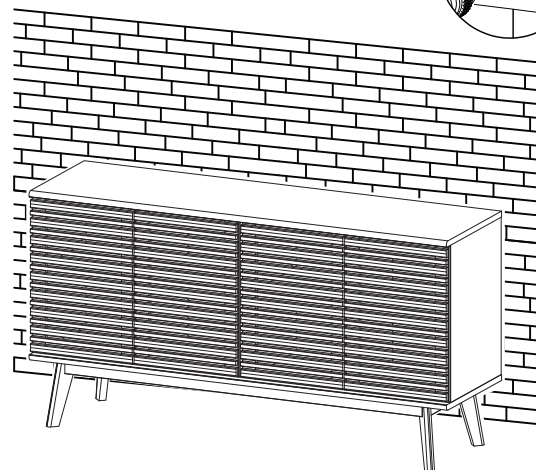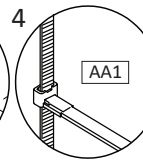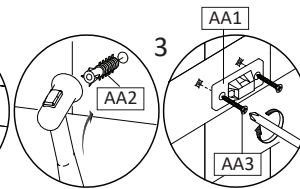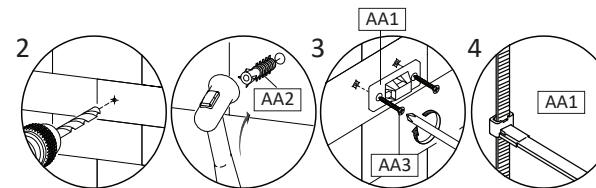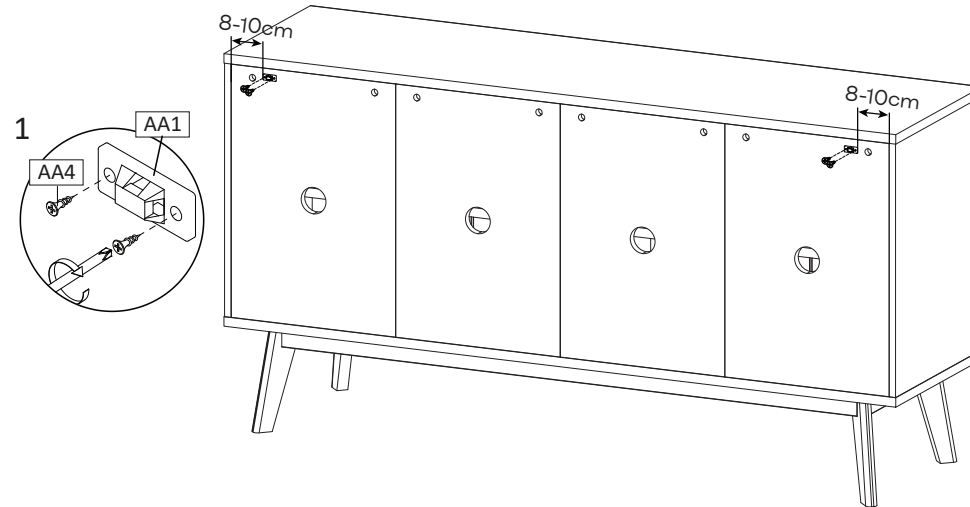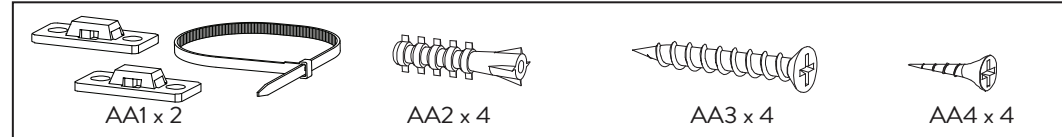


Grids Surface

  HOW TO ADJUST HINGES

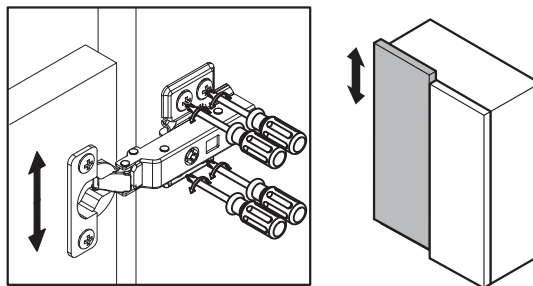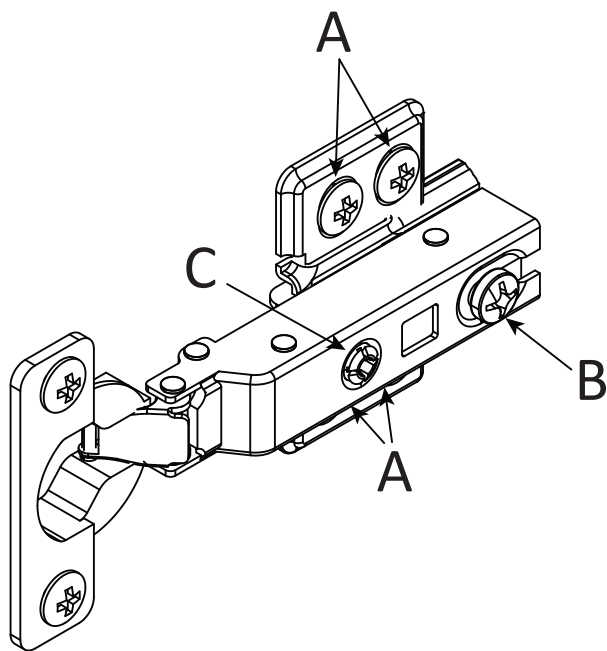


To adjust the vertical height.

 Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

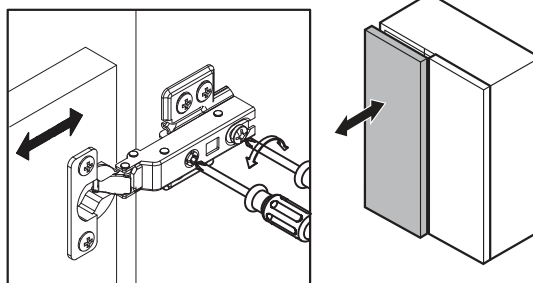

To adjust depth.

 Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

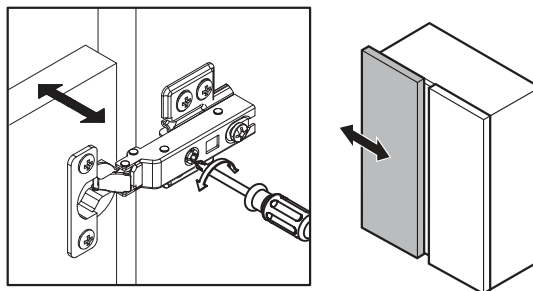

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.