

 
**2 ADULTS ASSEMBLY REQUIRED**  
**Se necesitan dos adultos para ensamblar**

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**


# BUYING TIPS




If you have any questions below, please feel free to contact us. We will respond within 24 hours.

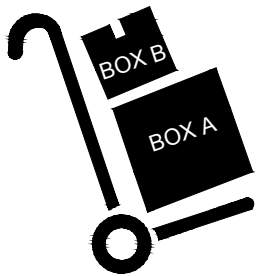

 
Attention  
our product comes with TWO PACKAGES with TWO TRACKINGS  
may NOT be delivered at the same time.

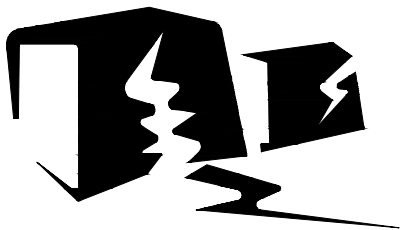

ANY DAMAGE

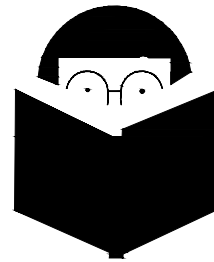 

READ INSTRUCTIONS  
CAREFULLY

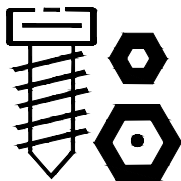 

MISS SOME PARTS




OTHER QUESTIONS

## GENERAL INFORMATION, TIPS AND TRICKS

 1. Please read the Assembly Instructions prior to assembling this product.
2. Remove all hardware from the box and sort by size.
3. Check to see that all hardware and parts are present BEFORE assembling.
4. Ask a friend to assist you with the assembly of this furniture.
5. To avoid damage, assemble the product on a sturdy, level and protective surface.
6. Please wait until all steps are completed before fully tightening bolts.
7. Make sure all screws and bolts are tightly fastened before the unit is used.

## MAXIMUM RECOMMENDED WEIGHT LOADS

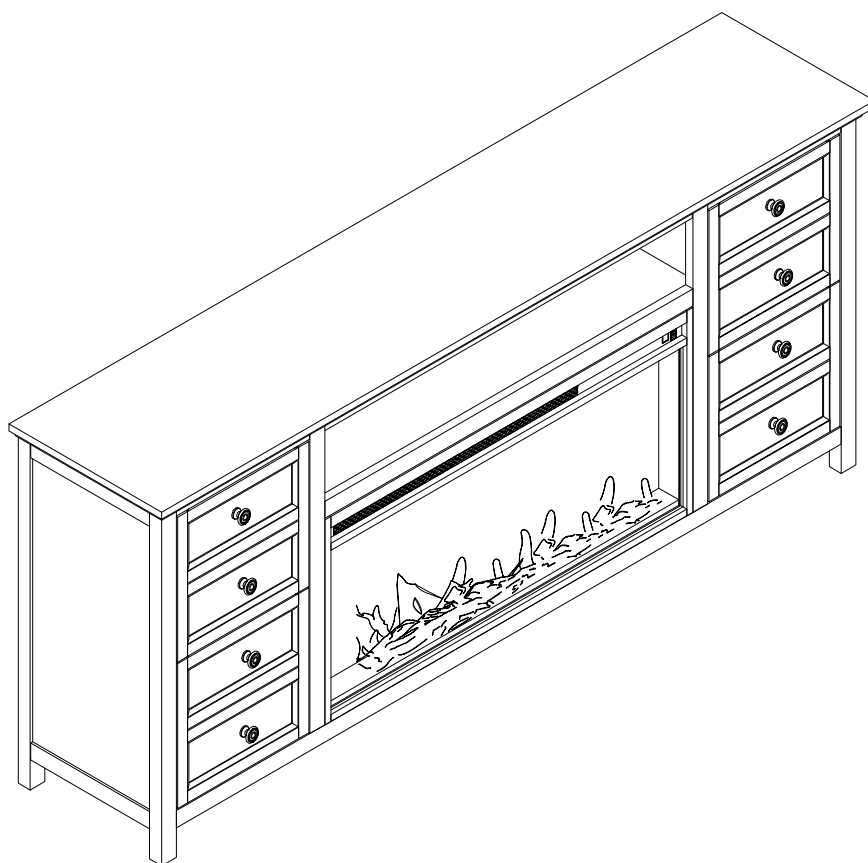


THIS UNIT IS NOT INTENDED FOR USE WITH CRT TVS. USE ONLY WITH FLAT PANEL TVS AND AUDIO/VIDEO EQUIPMENT MEETING RECOMMENDED SIZE AND WEIGHT LIMITS. NEVER USE WITH LARGER/HEAVIER THAN RECOMMENDED FLAT PANEL TVS OR EQUIPMENT. TO AVOID INSTABILITY, PLACE FLAT PANEL TV IN THE CENTER OF THE UNIT; THE BASE OF THE TELEVISION MUST BE ABLE TO REST ON THE SUPPORTING SURFACE OF THE UNIT WITHOUT OVER-HANGING THE EDGES. IMPROPERLY POSITIONED FLAT PANEL TVS, OR FLAT PANEL TVS INCLUDING OTHER EQUIPMENT THAT EXCEED RECOMMENDED SIZE AND WEIGHT LIMITS COULD FALL OFF OR BREAK THE UNIT, CAUSING POSSIBLE SERIOUS INJURY. FOR USE WITH TELEVISIONS WEIGHING 130LBS (59 KG) OR LESS. USE WITH HEAVIER TELEVISIONS MAY RESULT IN INSTABILITY CAUSING TIP OVER RESULTING IN DEATH OR SERIOUS INJURY.

## IMPORTANT

 
Before you begin: Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface.

NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH THE DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH A DAMP CLOTH.

Insert Dowel at least half way by tapping lightly with a rubber mallet (not included), IF NECESSARY.

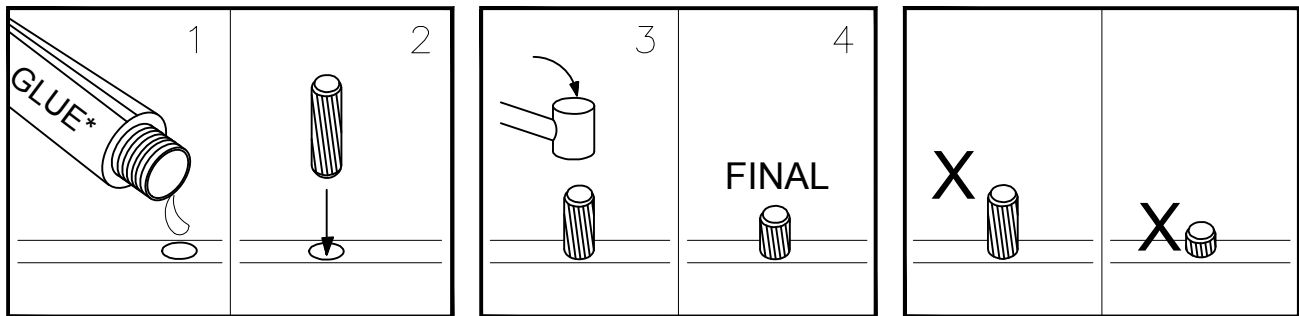


## CAM LOCK SYSTEM OPERATION

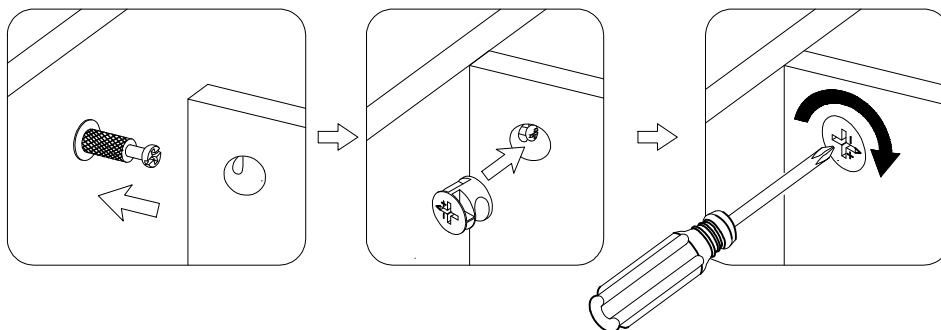 

## HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


1. Screw the Cam Bolt into the pre-drilled small holes on the panel. Connect both panels together; making sure the Cam Bolt goes into the pre-drilled hole at the end of the panel with the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole in the panel. Make sure the arrow on the Cam Lock is pointed towards the Cam Bolt.
3. Once the Cam Bolt is connected inside the Cam Lock, take a Phillips screwdriver (not included) and tighten the Cam Lock clockwise.
 
## BOARD IDENTIFICATION-1

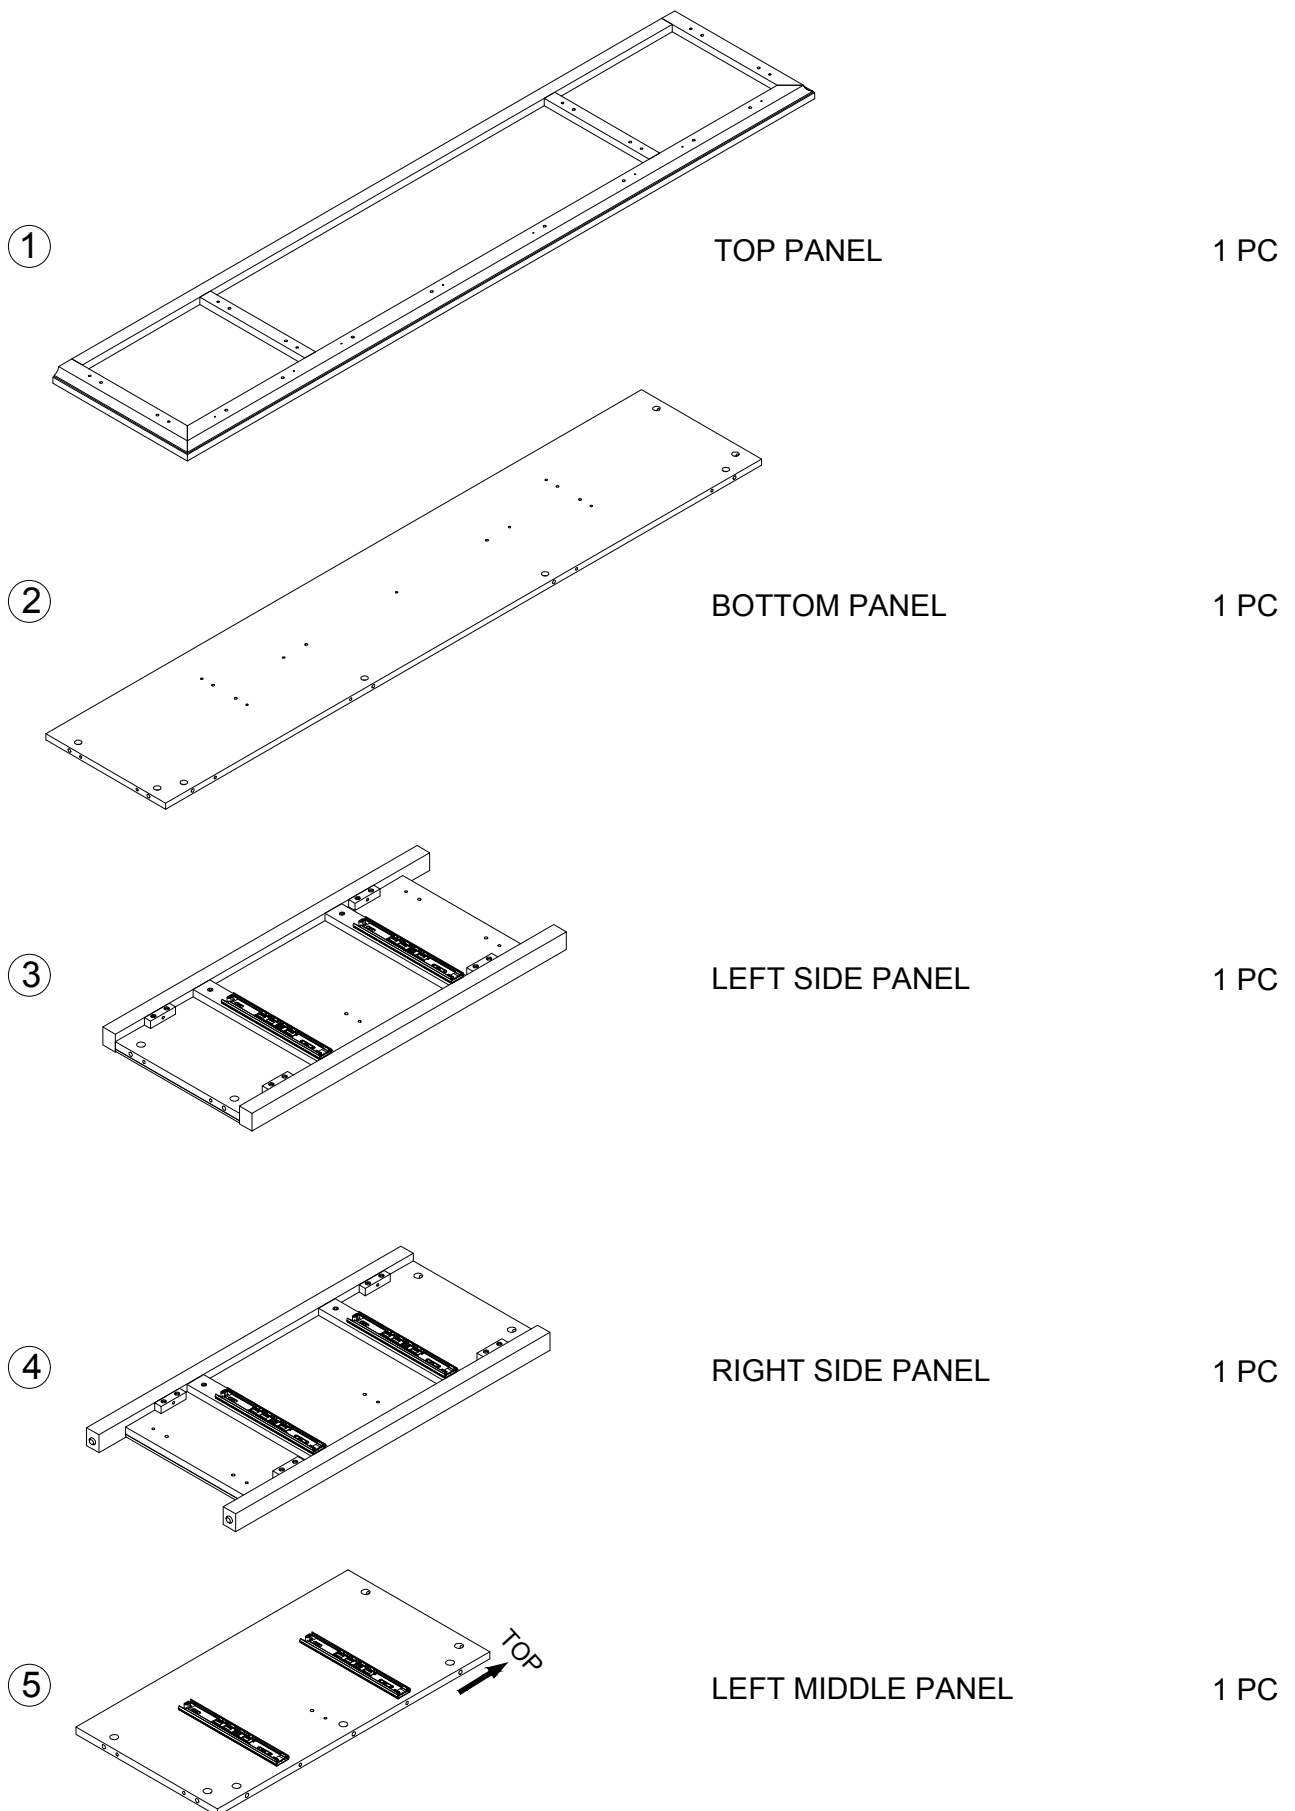

## BOARD IDENTIFICATION-2

 
⑥

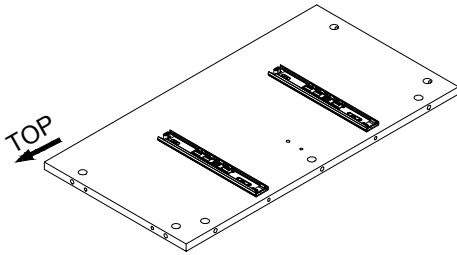

RIGHT MIDDLE PANEL

1 PC

 
⑦

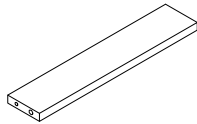

DRAWER BOTTOM CROSSBAR

2 PCS

 
⑧

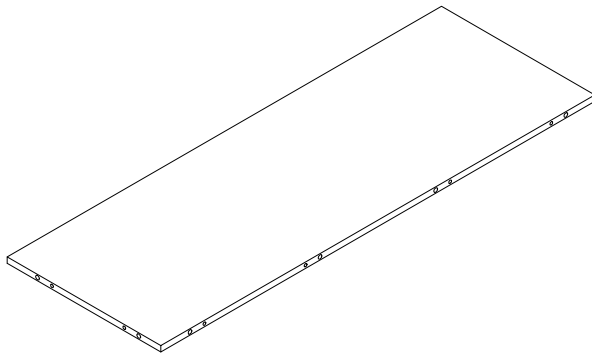

MIDDLE SHELF PANEL

1 PC

 
⑨



SIDE FRONT RAIL

2 PCS

 
⑩

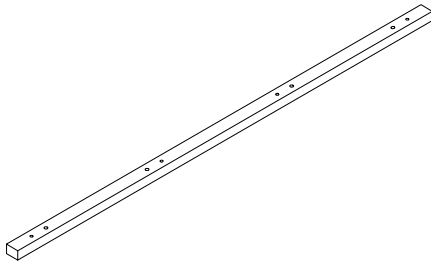

MIDDLE FRONT RAIL

1 PC

 ⑪

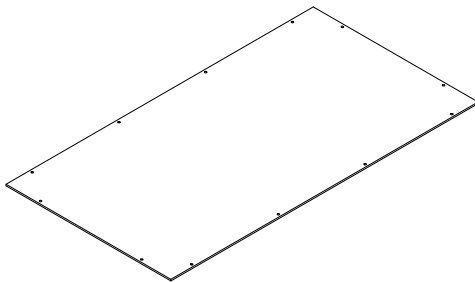


SIDE BACK PANEL

2 PCS

## BOARD IDENTIFICATION-3

 
12

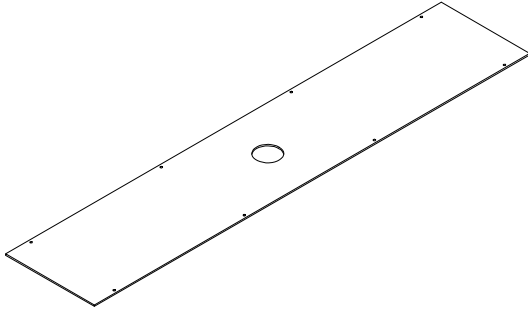

MIDDLE BACK PANEL

1 PC

 
13

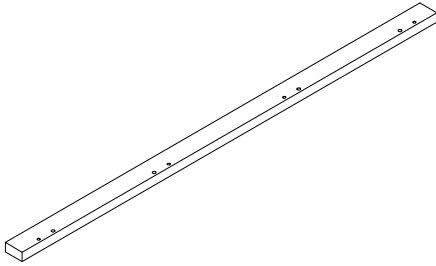

MIDDLE SHELF RAIL

1 PC

 
14

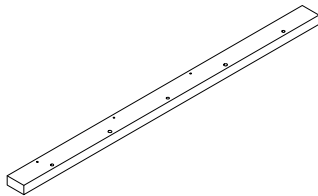

LEFT SIDE PANEL RAIL

1 PC

 
15

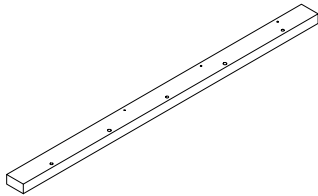

RIGHT SIDE PANEL RAIL

1 PC

 
16

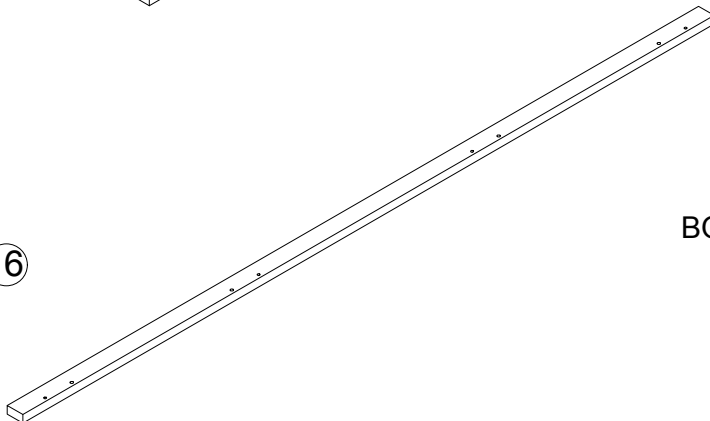

BOTTOM KICK SUPPORT

1 PC

 17




BOTTOM SIDE SUPPORT

2 PCS

## BOARD IDENTIFICATION-4

 
18

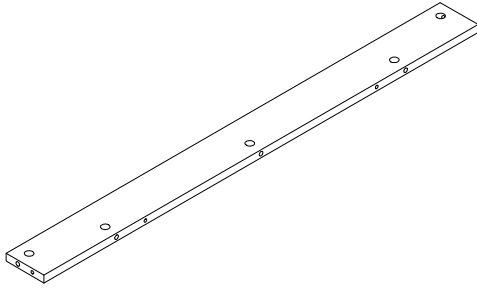

BOTTOM MIDDLE SUPPORT

1 PC

 
19

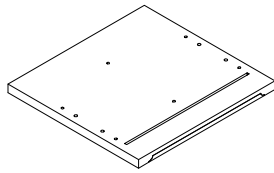

DRAWER FRONT PANEL

4 PCS

 
20

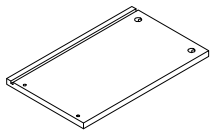

DRAWER LEFT PANEL

4 PCS

 
21

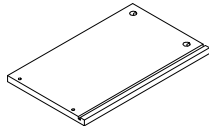

DRAWER RIGHT PANEL

4 PCS

 
22

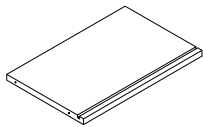

DRAWER BACK PANEL

4 PCS

 23

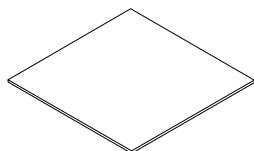


DRAWER BOTTOM PANEL








   

4 PCS

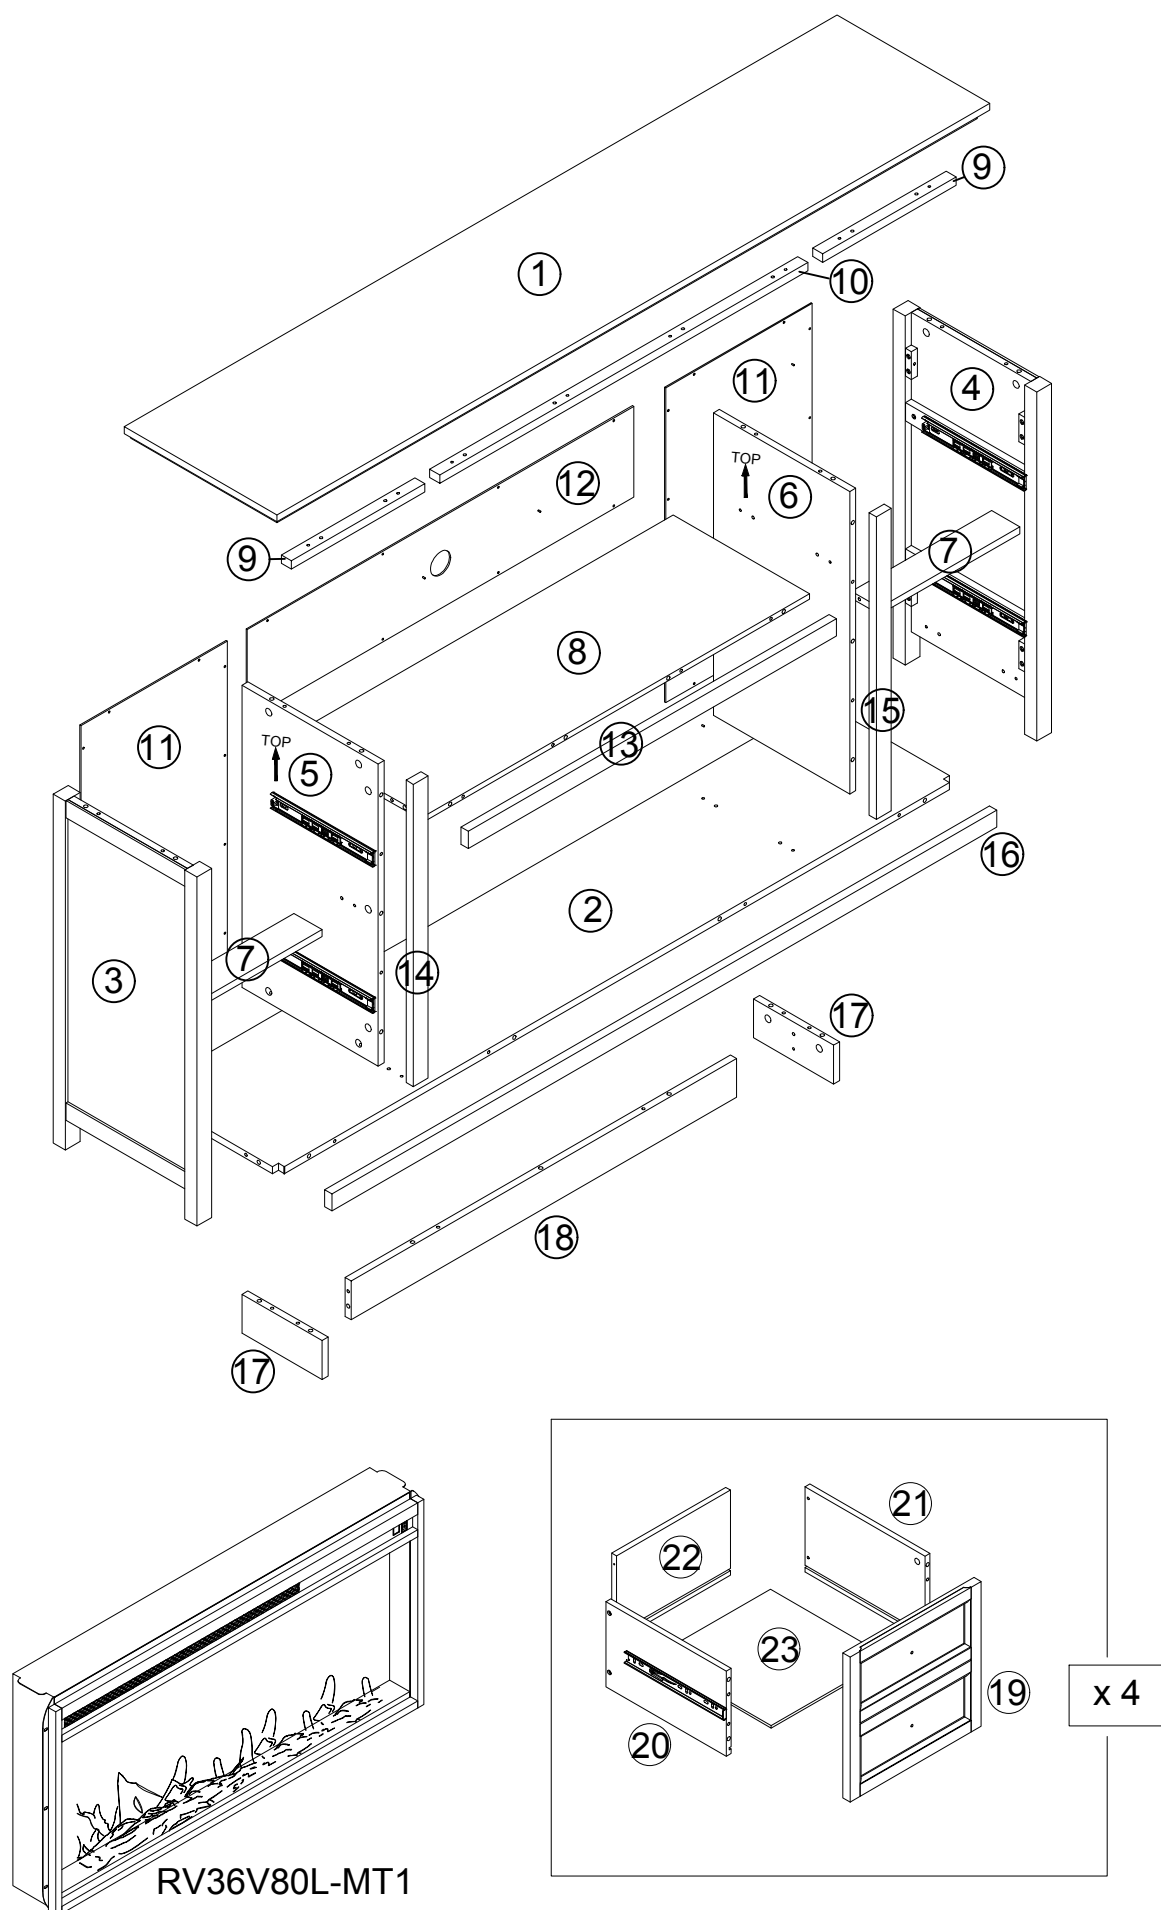


 

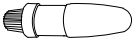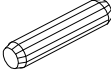
# BOARD IDENTIFICATION

 


## HARDWARE IDENTIFICATION-1

A		GLUE	2 PCS
B		WOODEN DOWEL Ø6 x 30mm	68 PCS
C		CAM LOCK Ø15 x 9mm	63 PCS
D		CAM SCREW Ø7 x 34mm	63 PCS
E		WOOD SCREW Ø4 x 30mm	24 PCS
F		WOOD SCREW Ø3.5 x 16mm	32 PCS
G		HANDLE	8 PCS
H		HANDLE BOLT Ø5/32x20mm	8 PCS
I		4x12x8mm WOOD SCREW	6 PCS

WALL MOUNTING KIT		
	Metal	4
	Steel cable	2
	Short screw Ø4*20mm	2
	Long screw Ø4*38mm	2
	Drywall anchor	2


# STEP 1

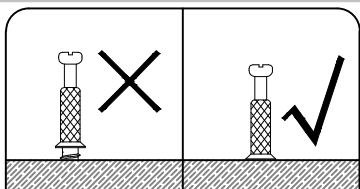

**B**  
8 x





 **D**  
4 x

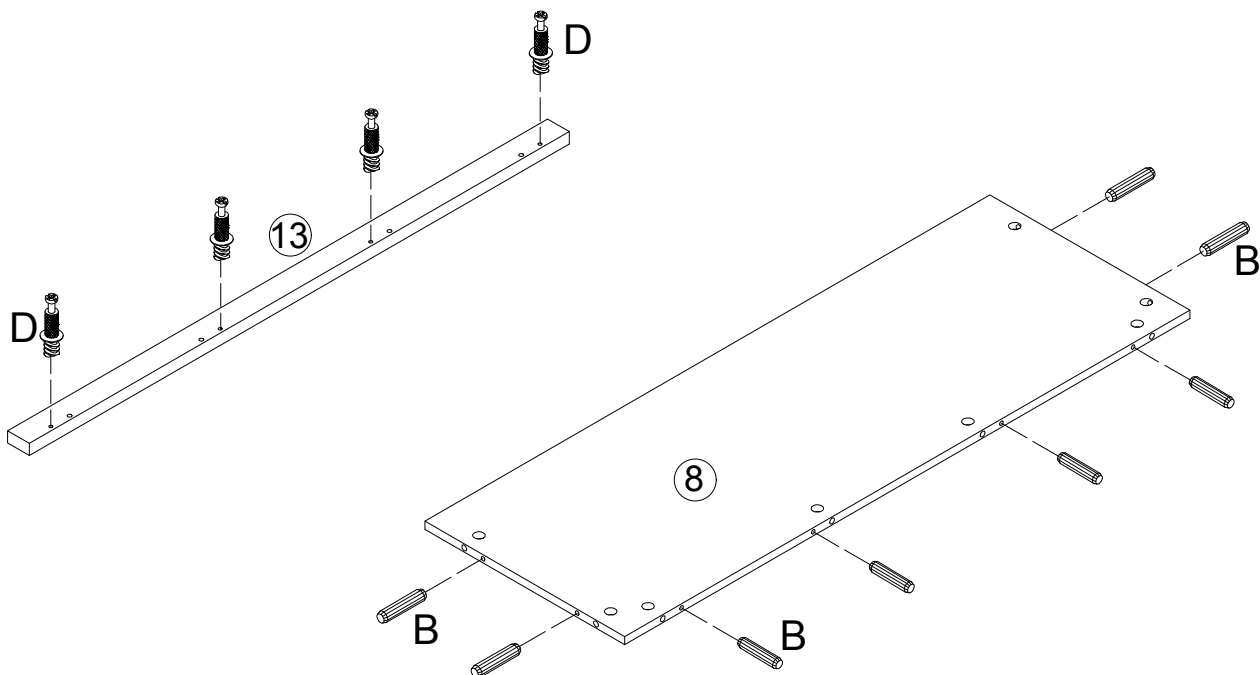


# STEP 2

 
 
**C**  
4 x

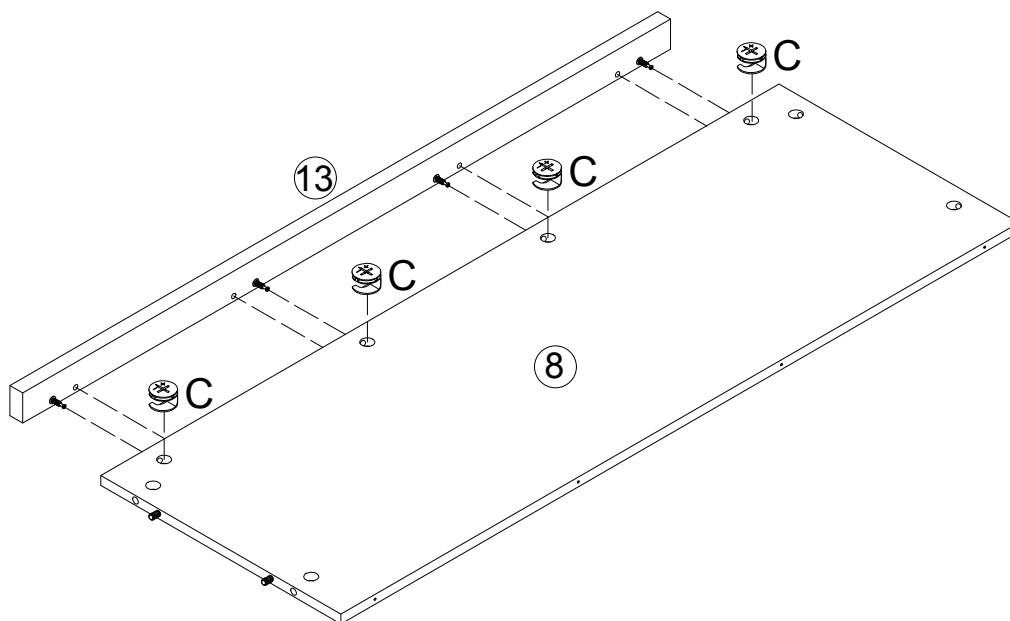


# STEP 3

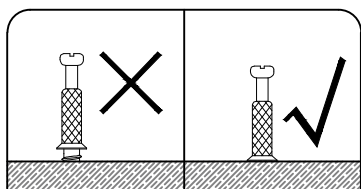 


**D**  
**6 x**

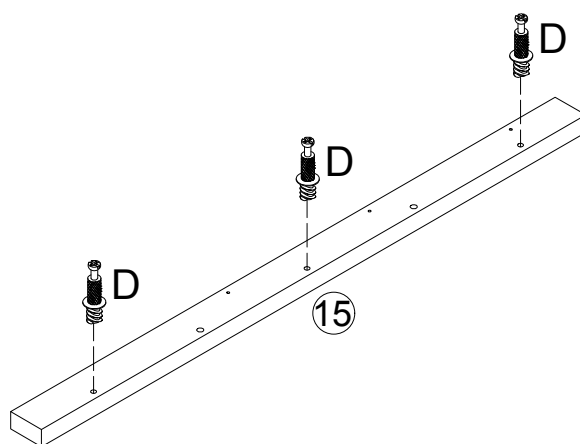 
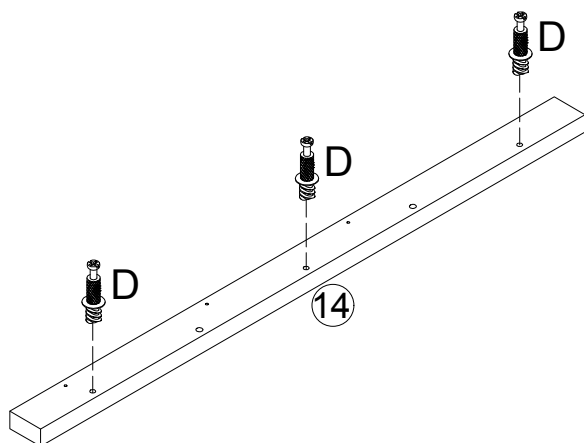 
# STEP 4

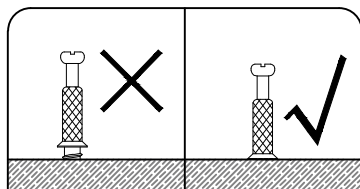 


**B**  
**6 x**



  **D**  
**3 x**

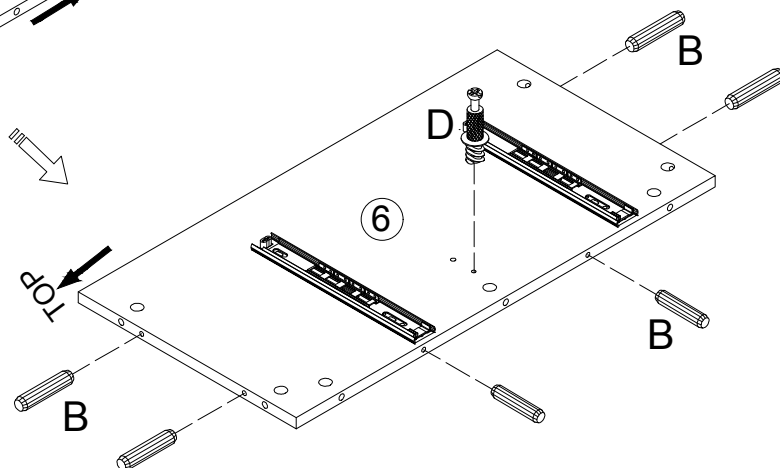
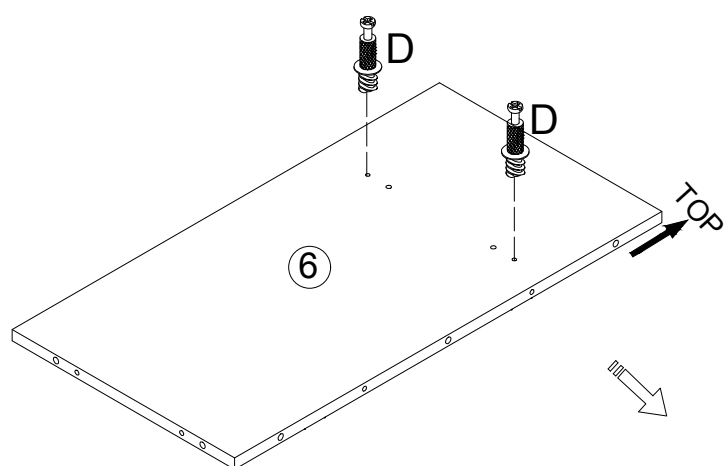
# STEP 5

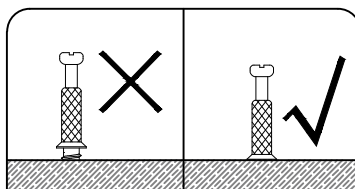 

**B**  
**6 x**






  **D**  
**3 x**

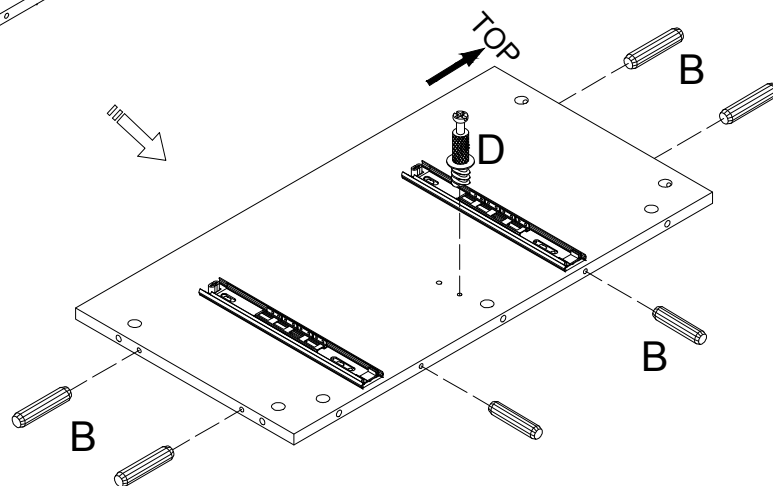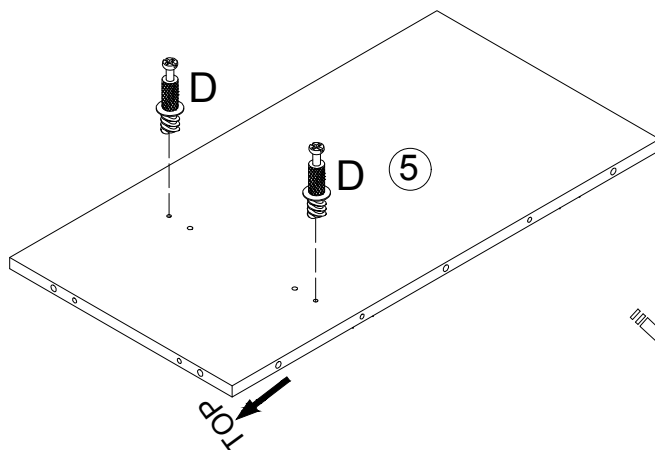



# STEP 6

   **C**  
**6 x**

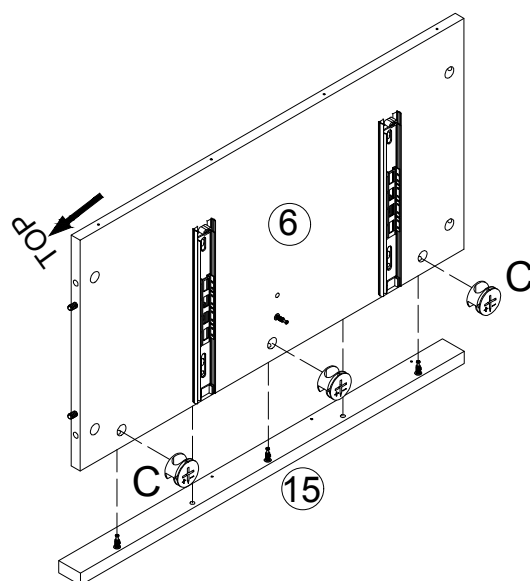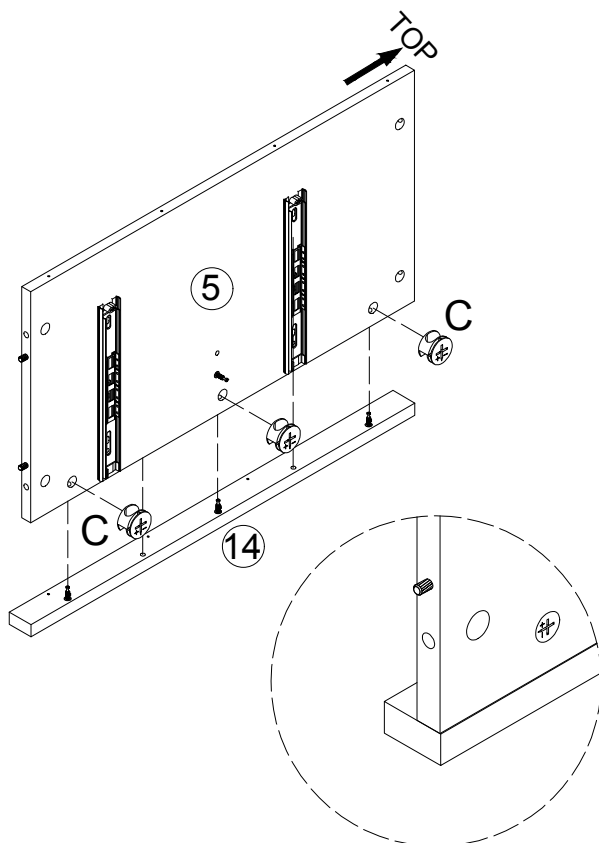


# STEP 7

 **C**  
**4 x**

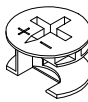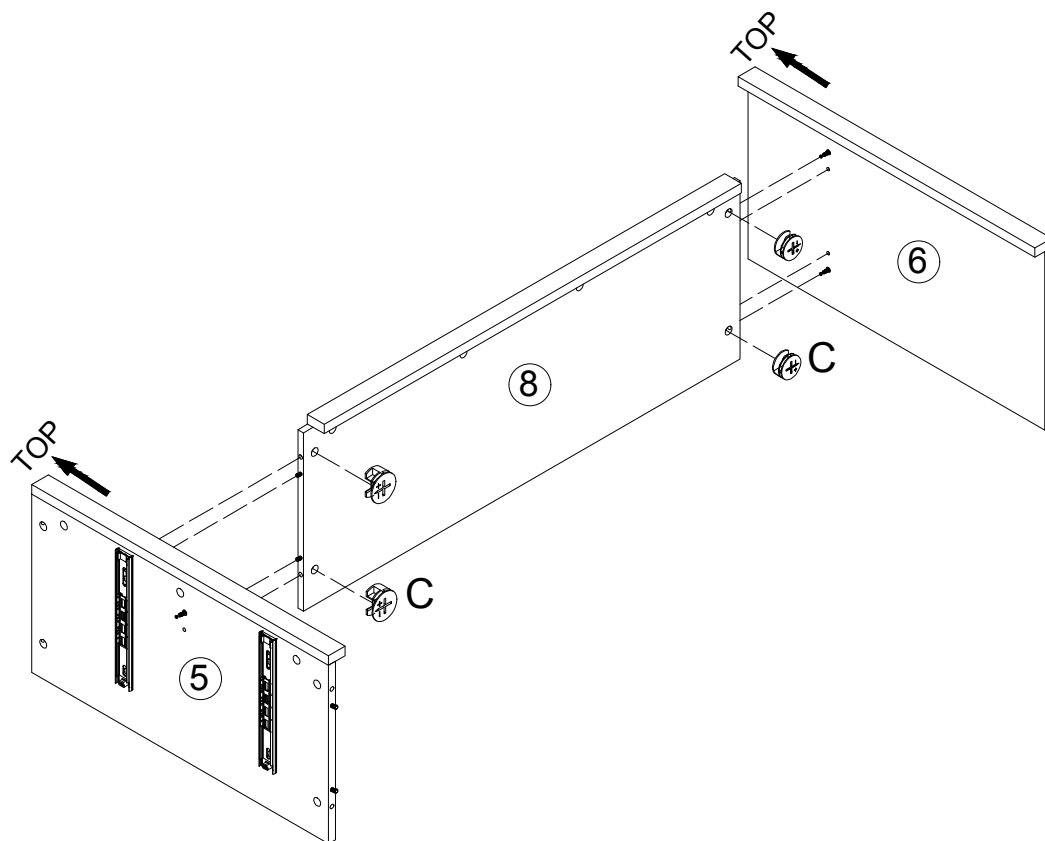



# STEP 8

 **D**  
**4 x**
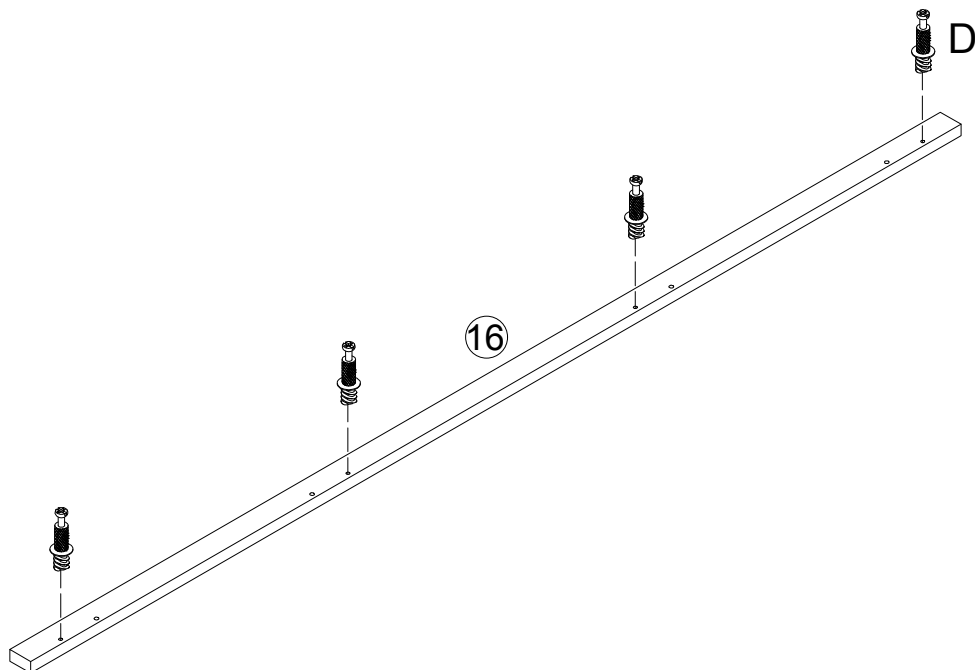
# STEP 9

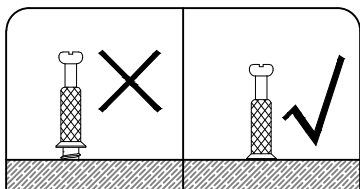 


**B**

**8 x**



**D**


 
**7 x**

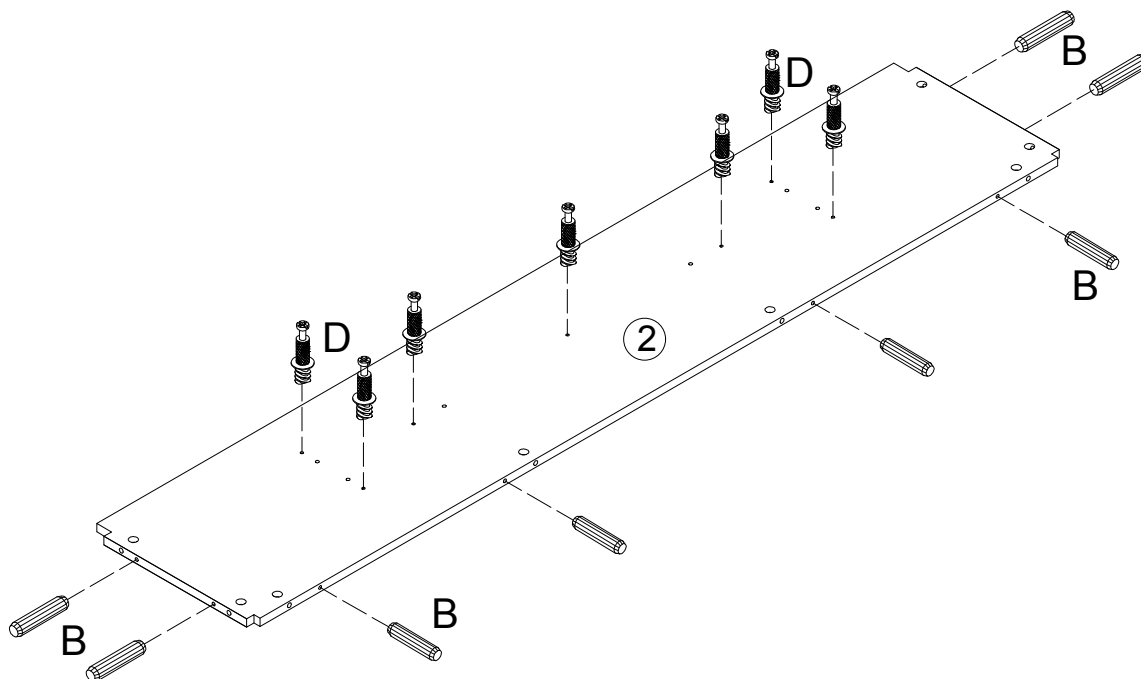


# STEP 10

**C**

  **4 x**

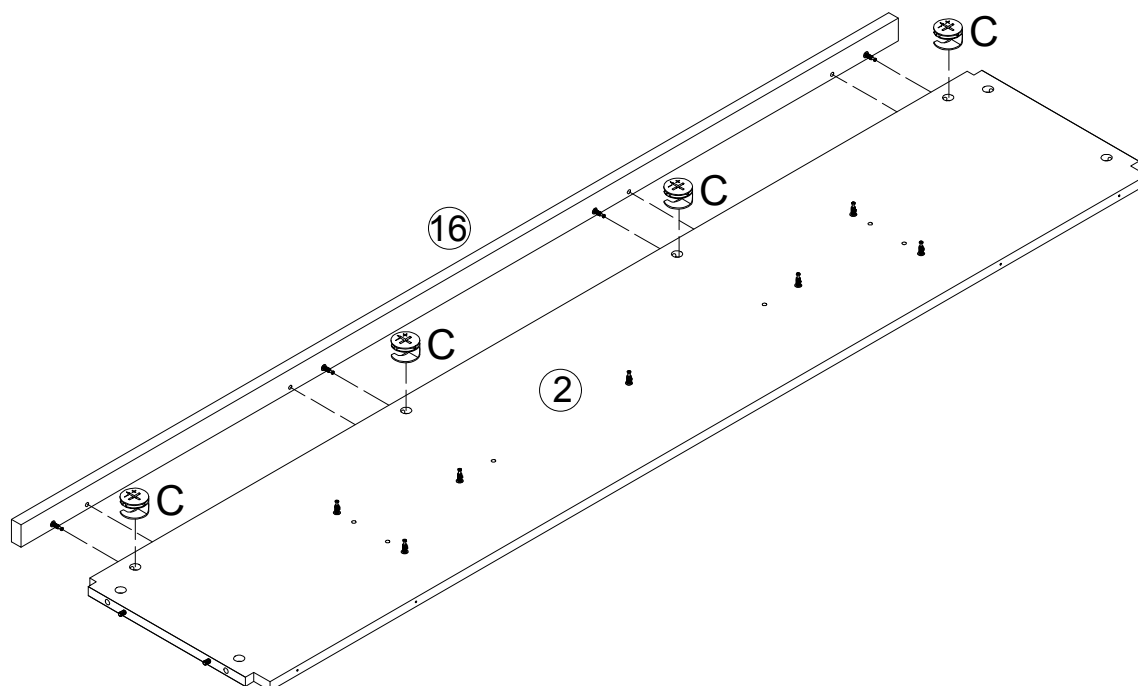

# STEP 11

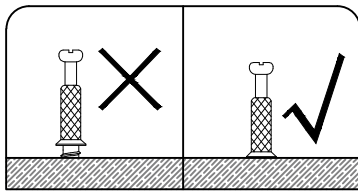 




**B**

**12 x**



**D**

  
 
**2 x**

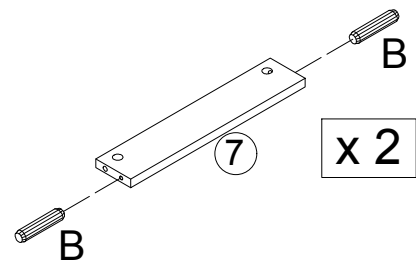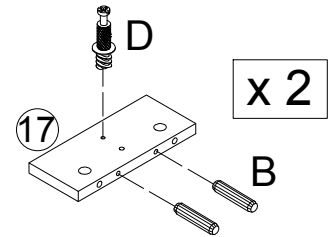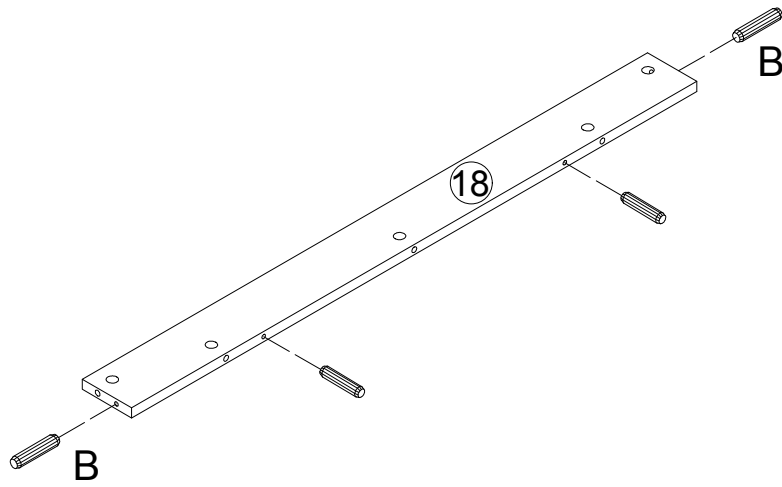

# STEP 12

**C**

  
**2 x**

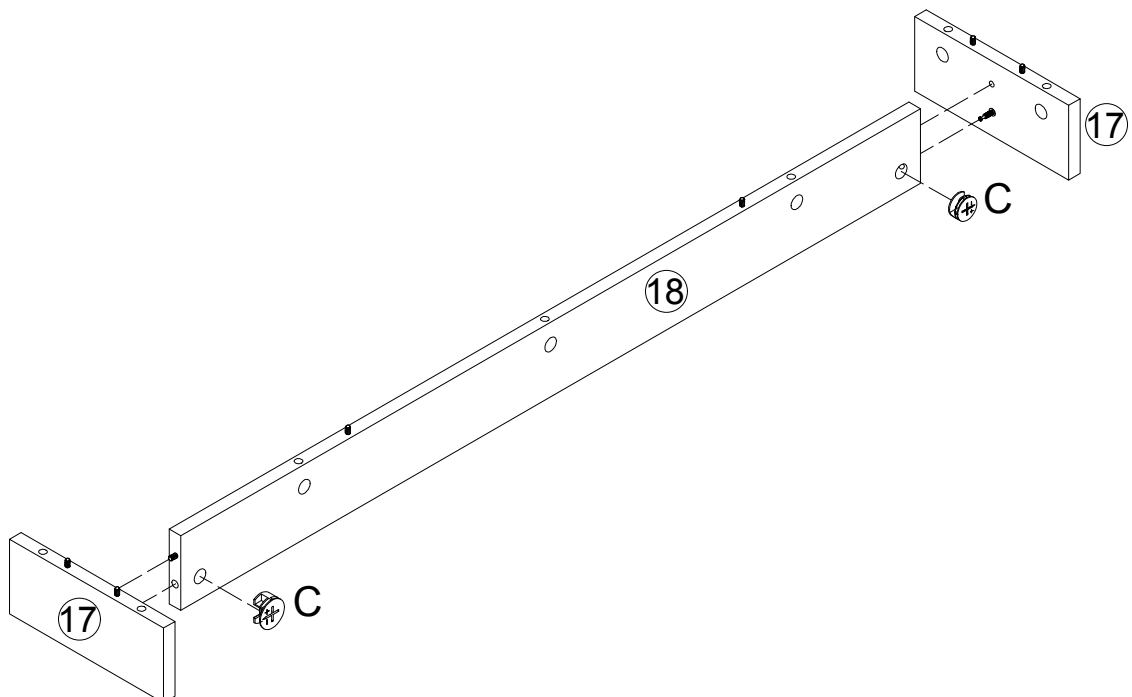




# STEP 13

 
**C**  
**7 x**

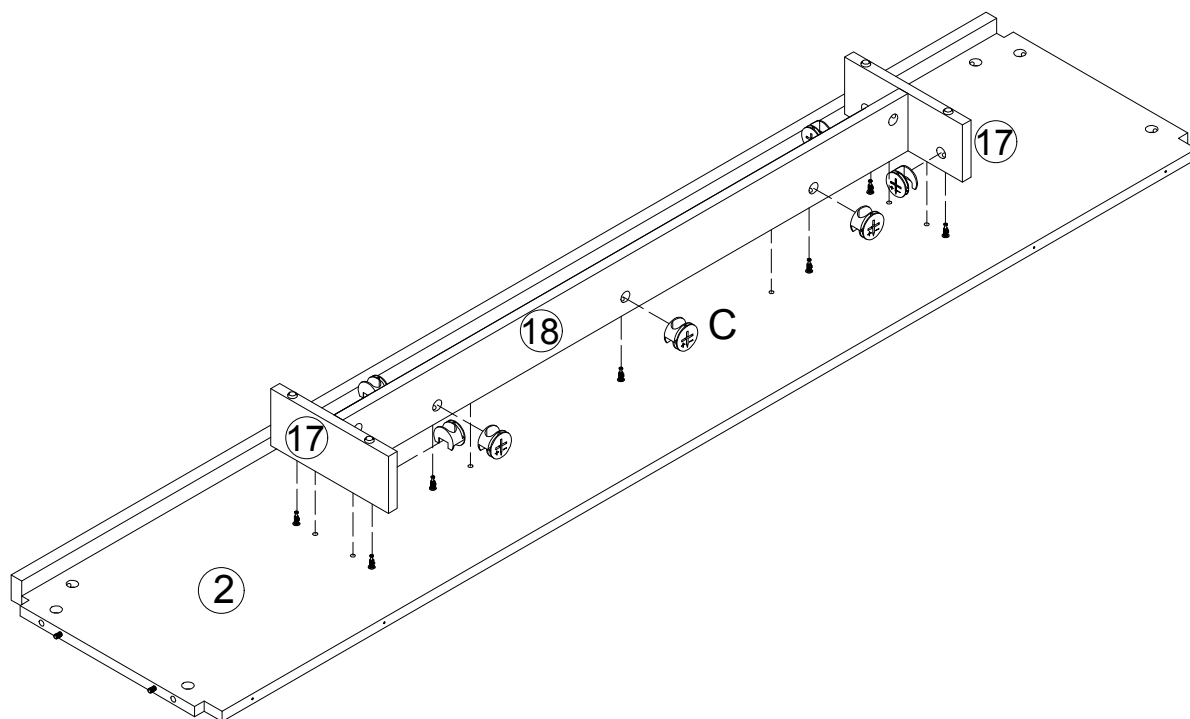

# STEP 14


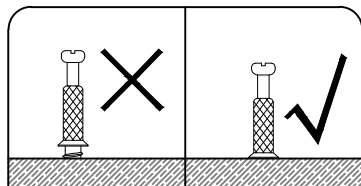 


**D**  
**4 x**

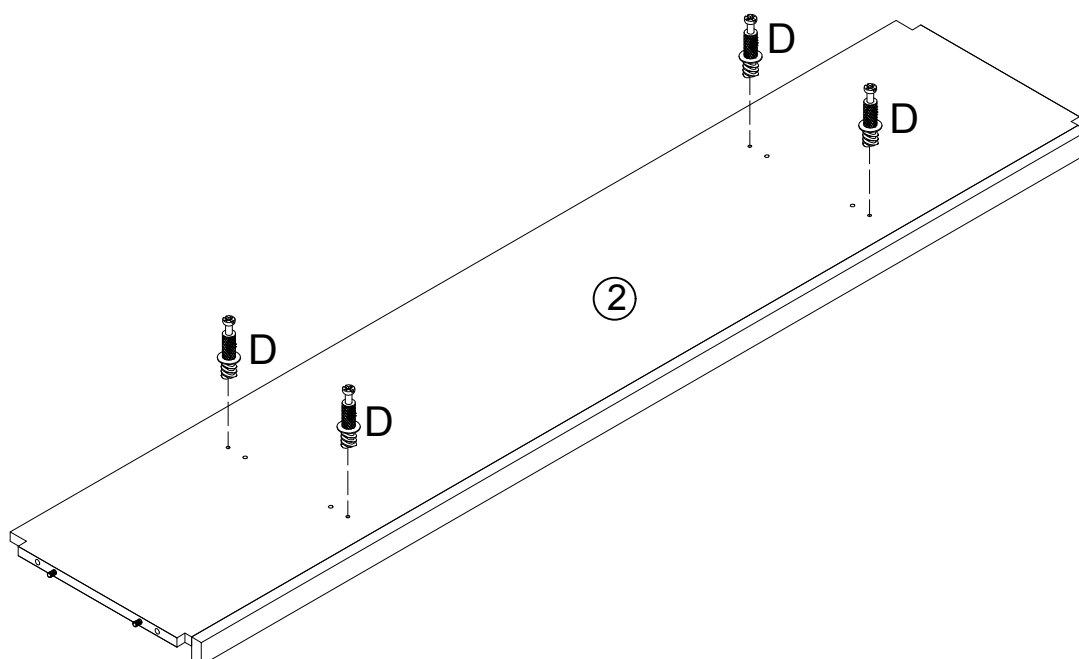 



# STEP 15

 **C**  
**4 x**

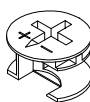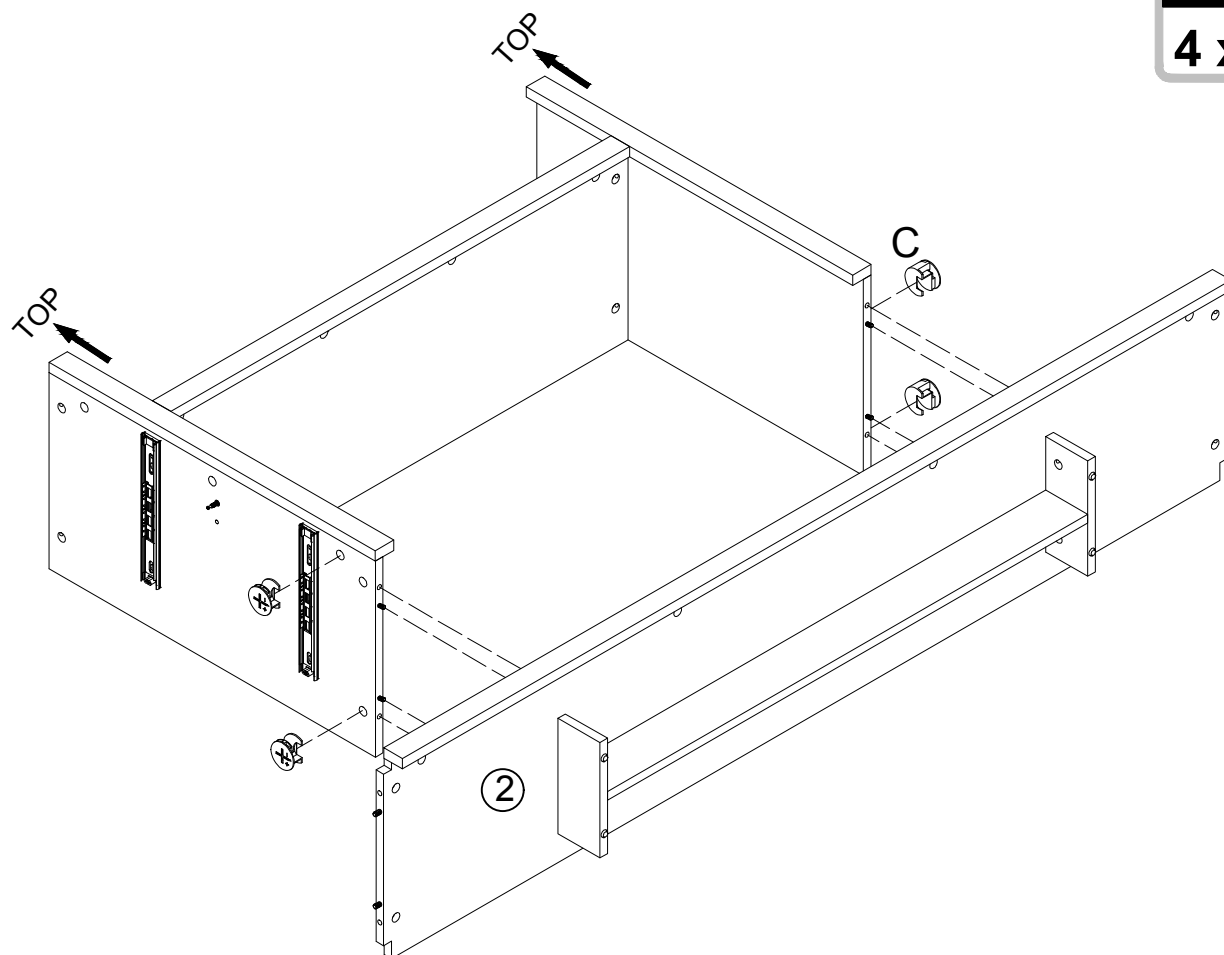



# STEP 16

 **C**  
**2 x**
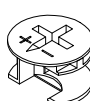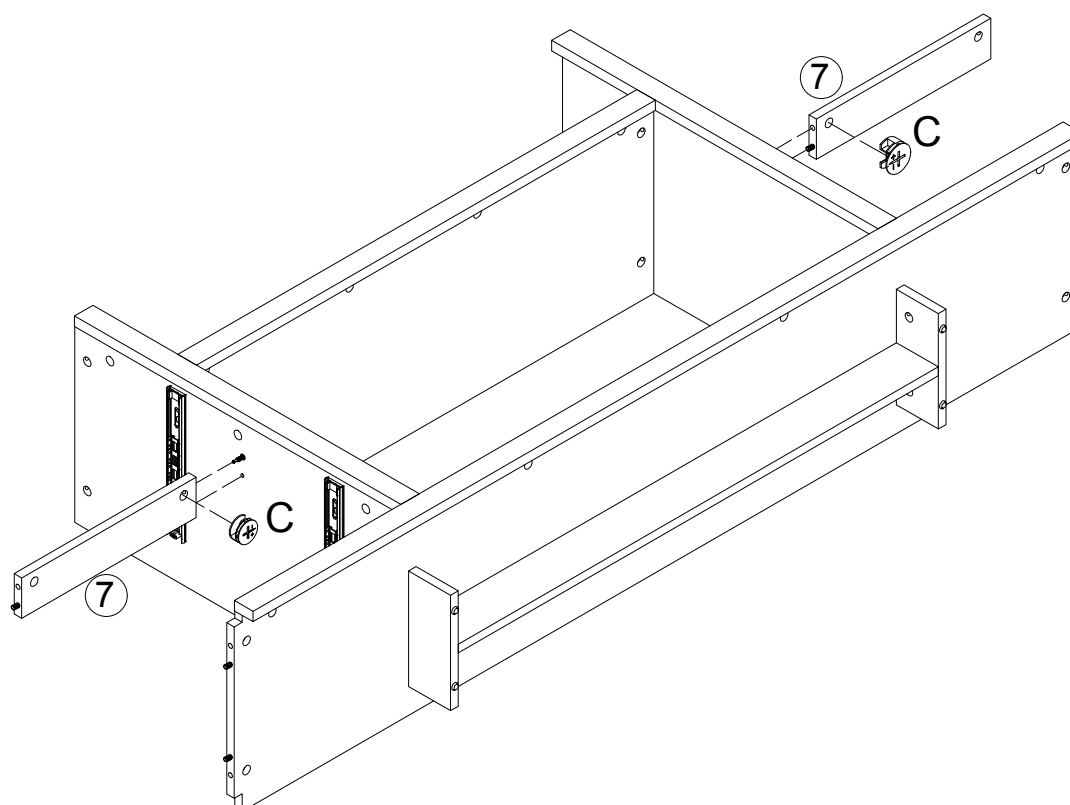
# STEP 17

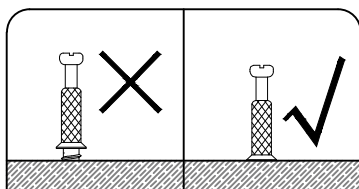 



**B**

**4 x**



**D**

 
 
**6 x**

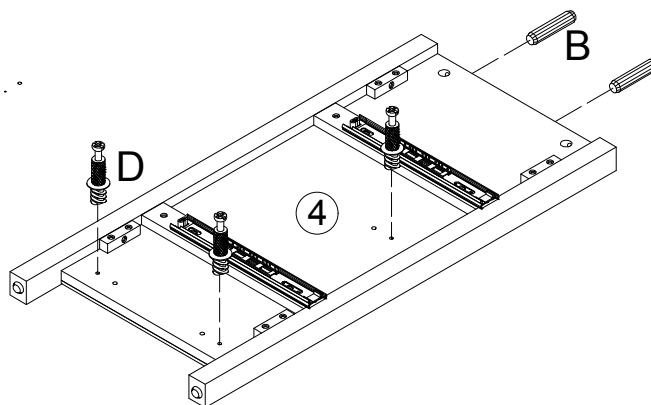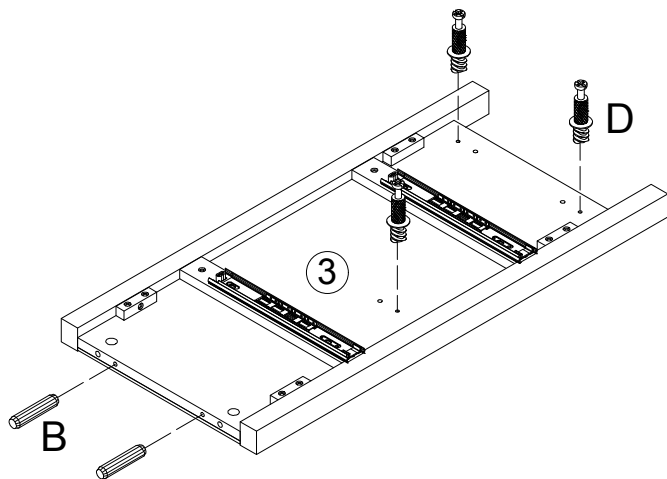

# STEP 18


**C**

  **6 x**

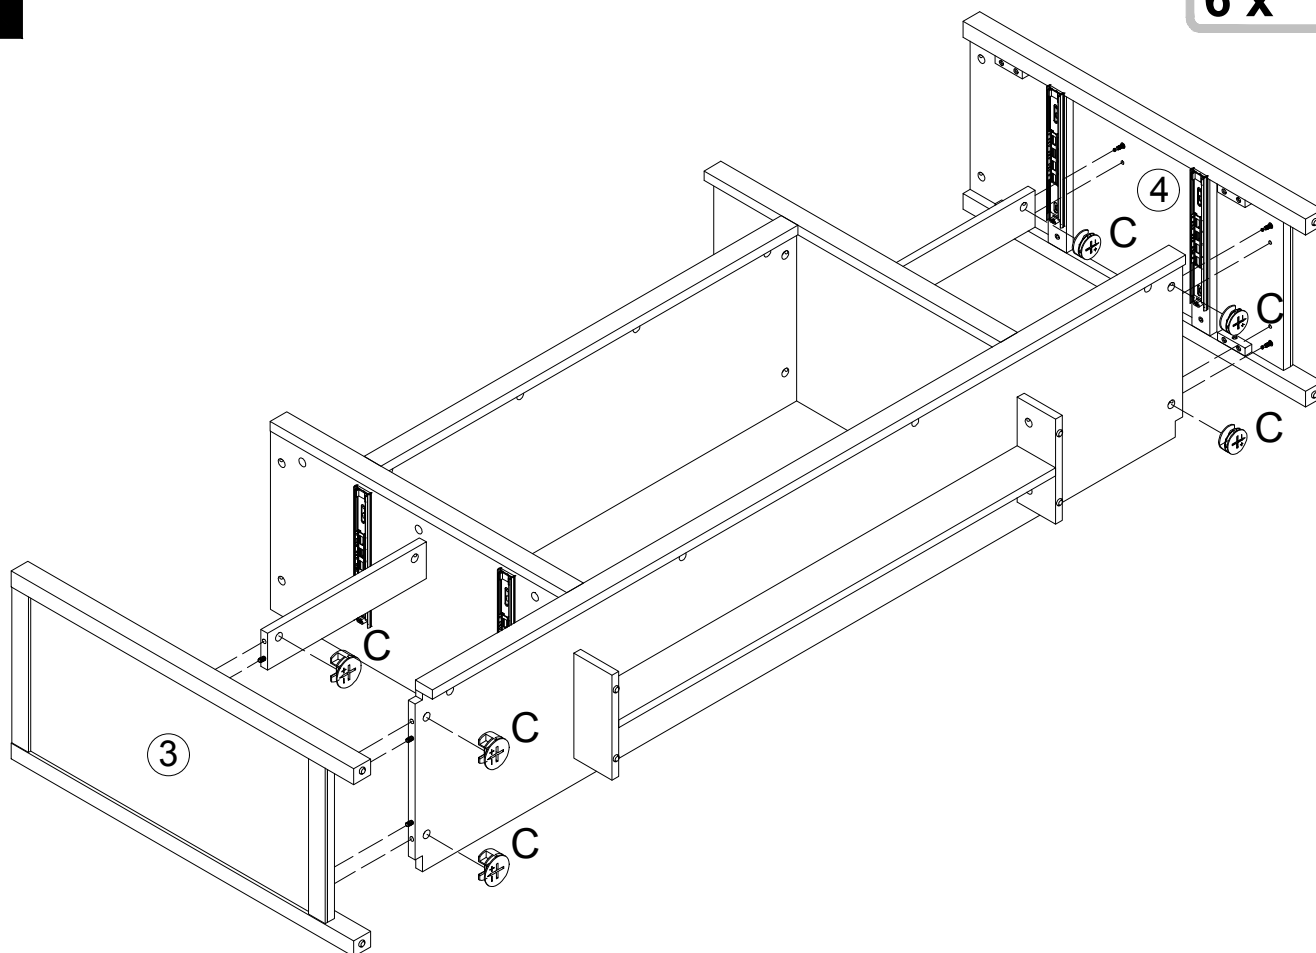



# STEP 19

 **B**  
**8 x**



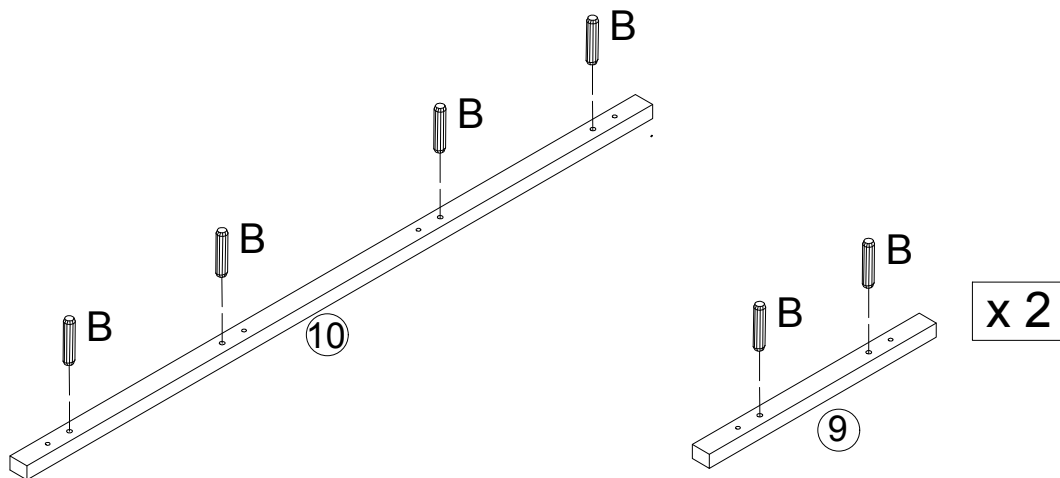
# STEP 20

**D**  
**8 x**


# STEP 21

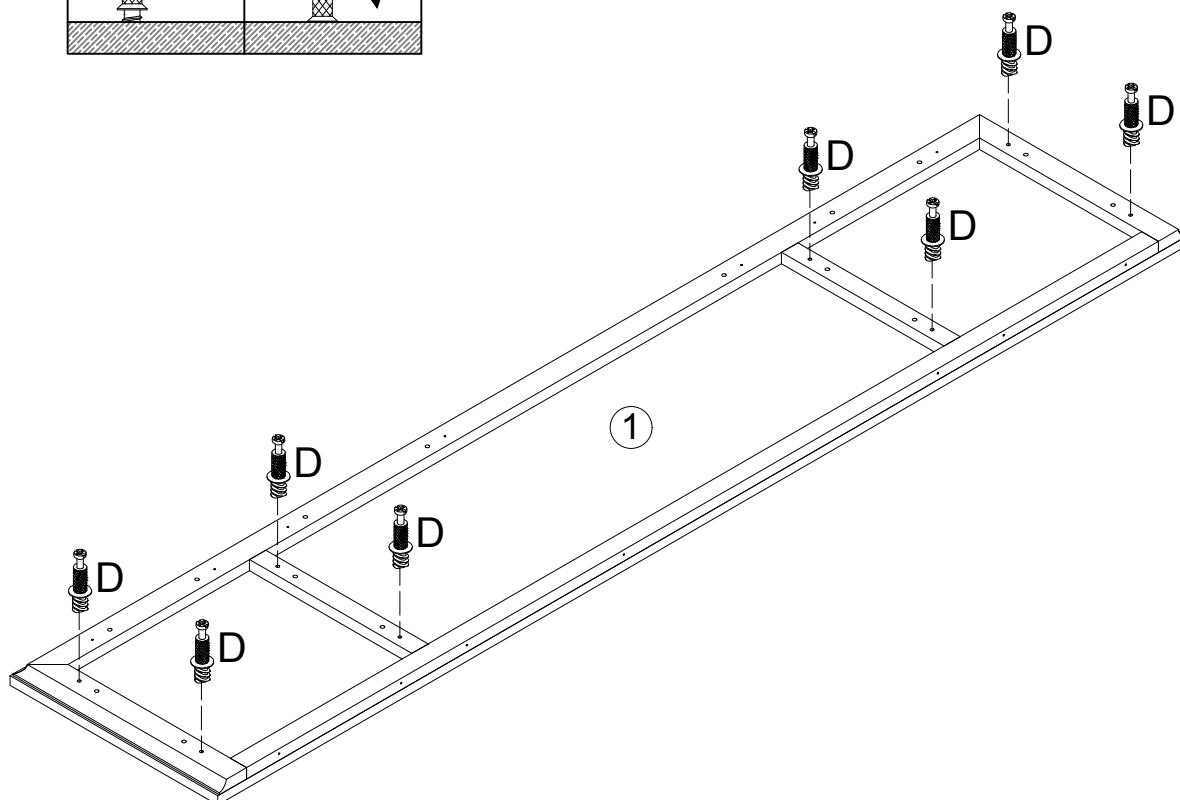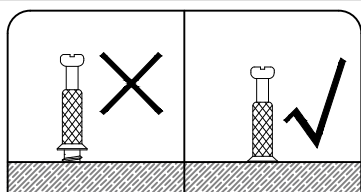  **C**  
**8 x**

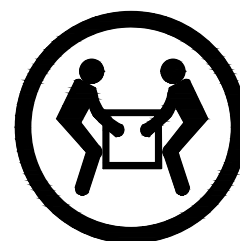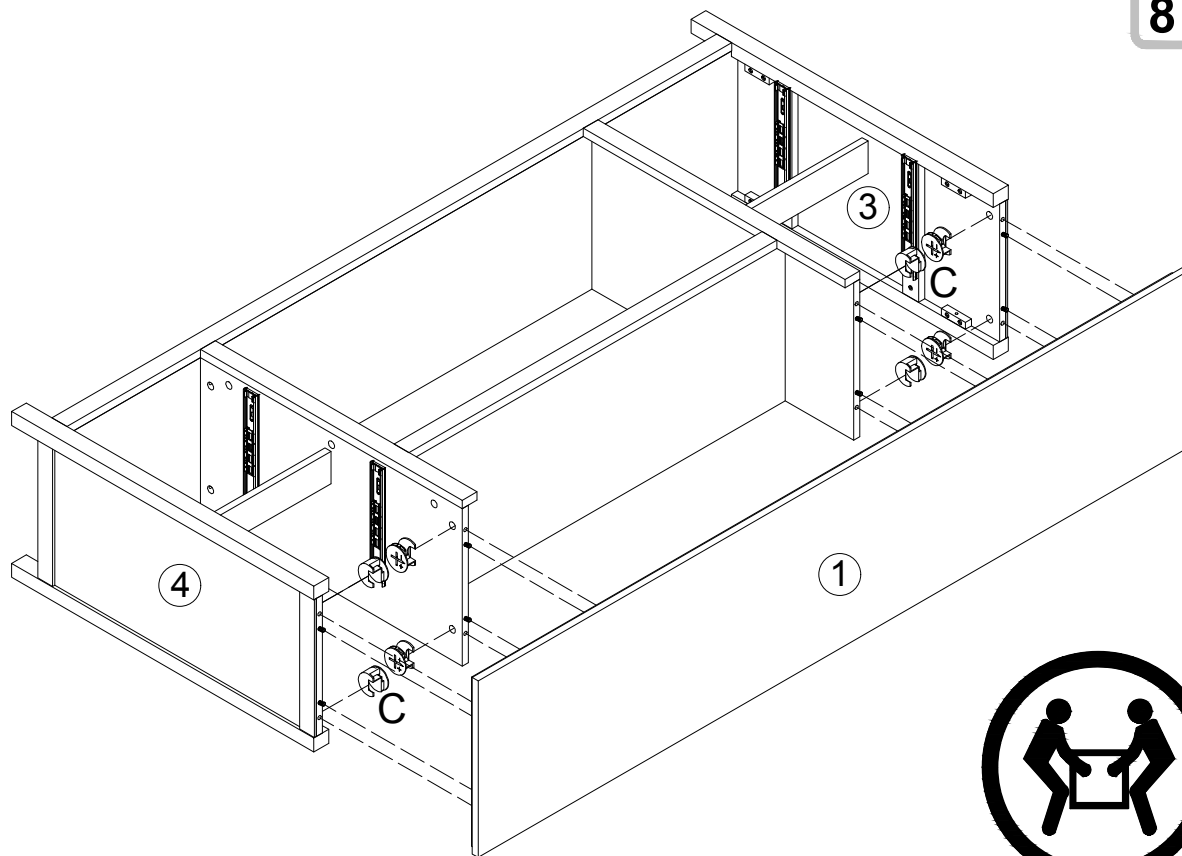   


# STEP 22

 **E**  
**8 x**

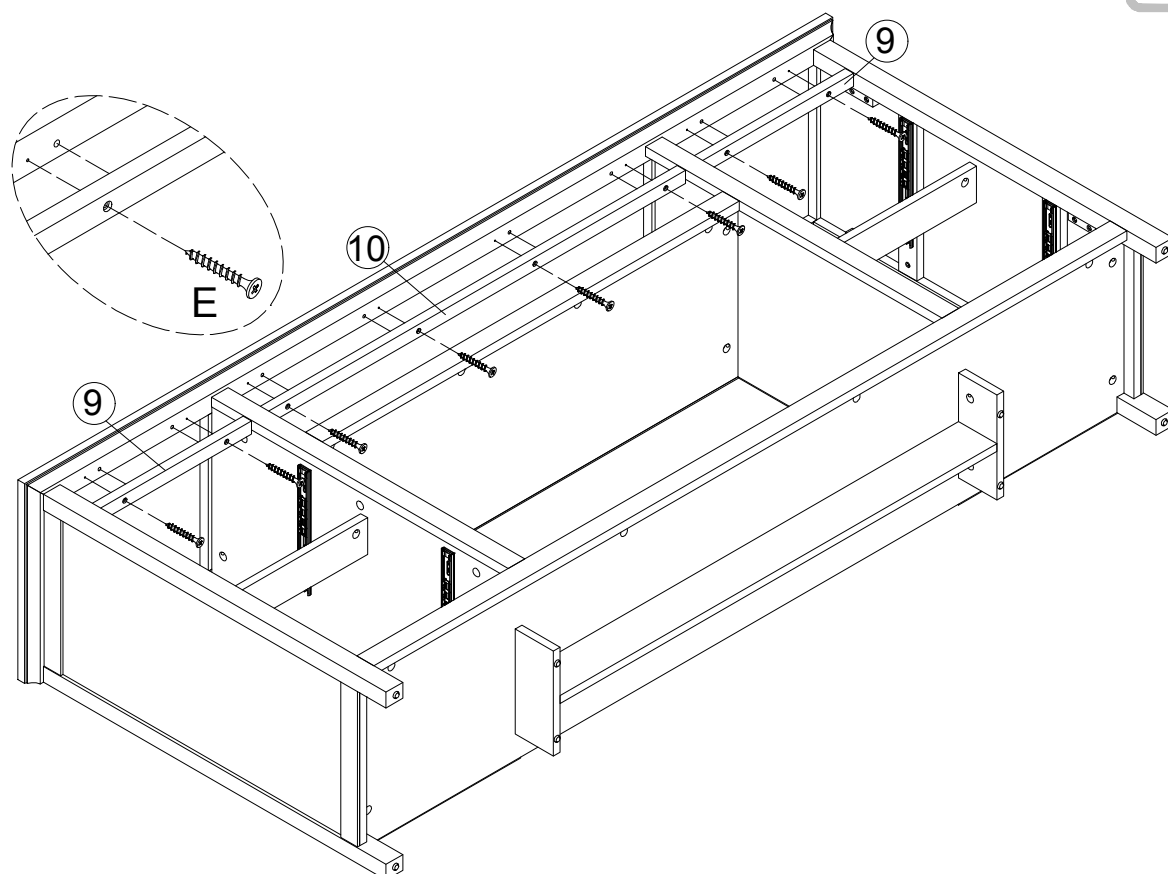

# STEP 23


 
**F**  
**32 x** 

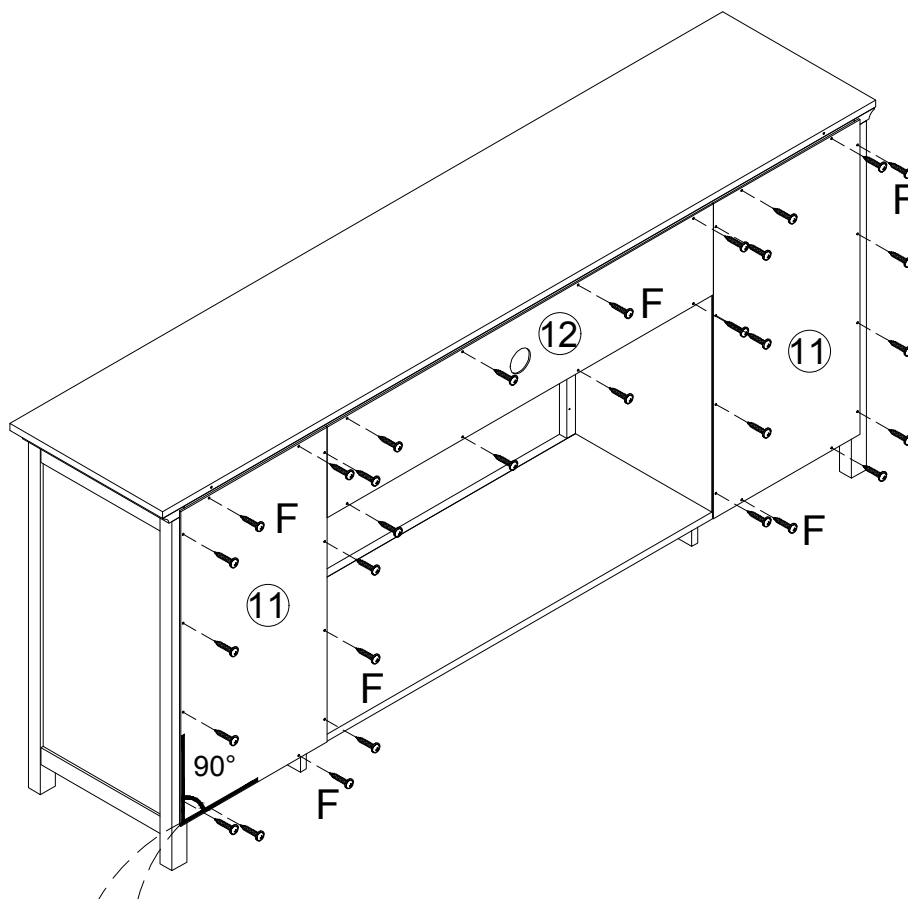


Before attaching the back panel make sure that it is square to the unit .

# STEP 24

  **B**  
**16 x** 

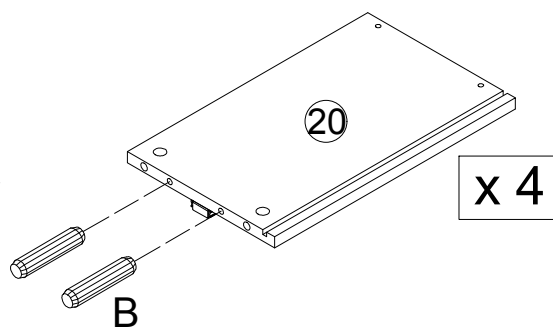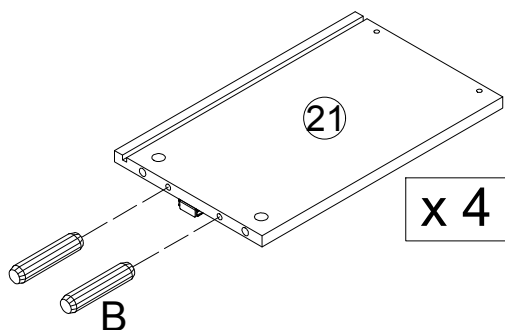

# STEP 25

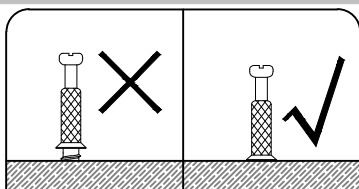 



**D**  
16 x



**G**  
8 x




  **H**  
8 x

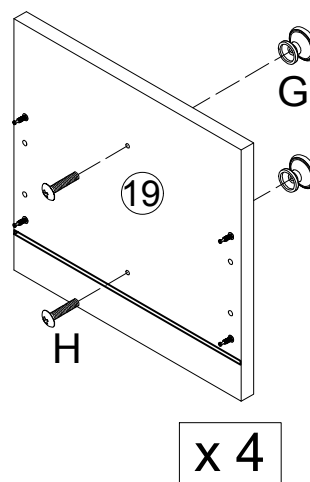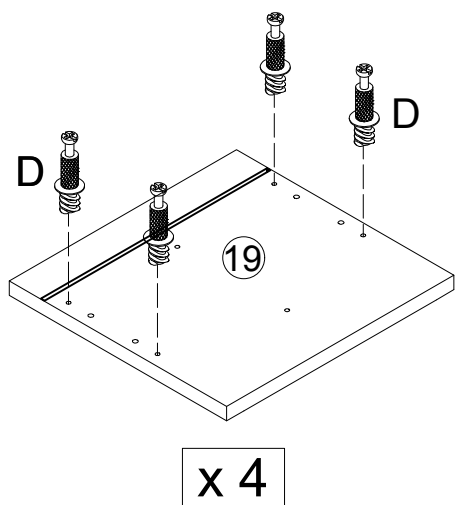


# STEP 26

 **E**  
16 x

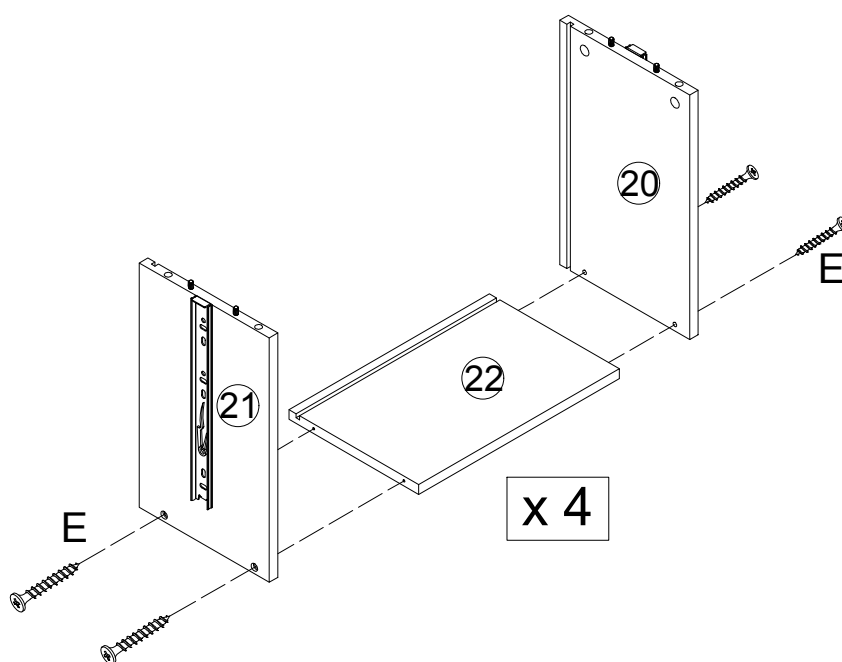


# STEP 27

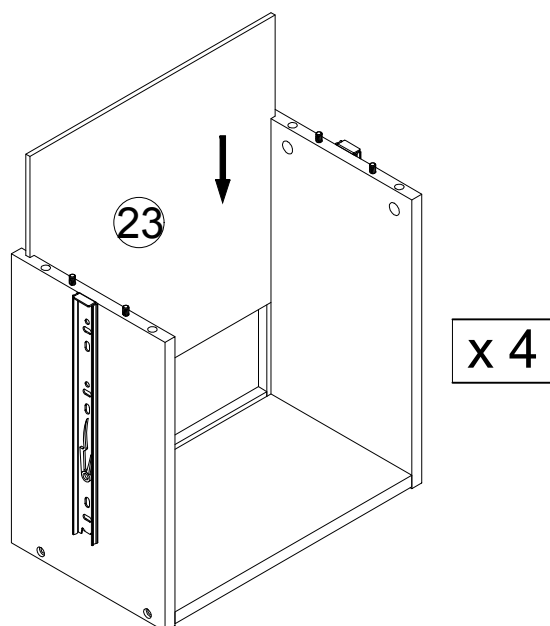 



# STEP 28

 **C**  
**16 x**

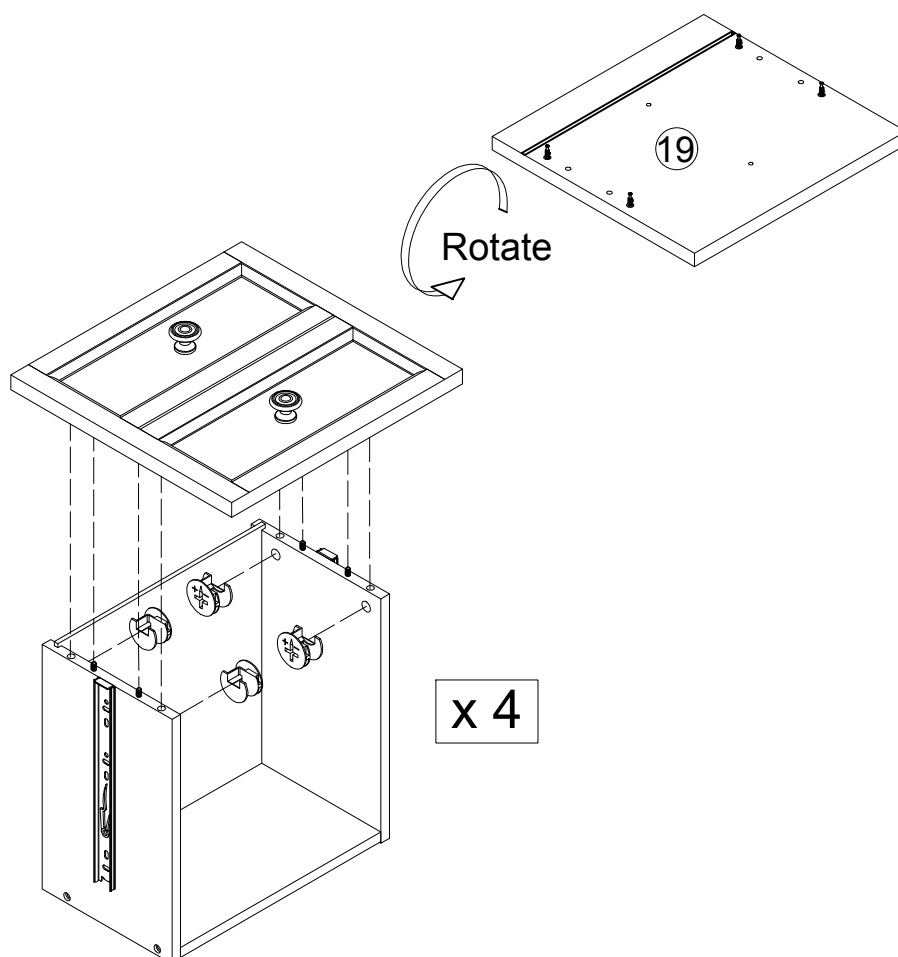




# STEP 29

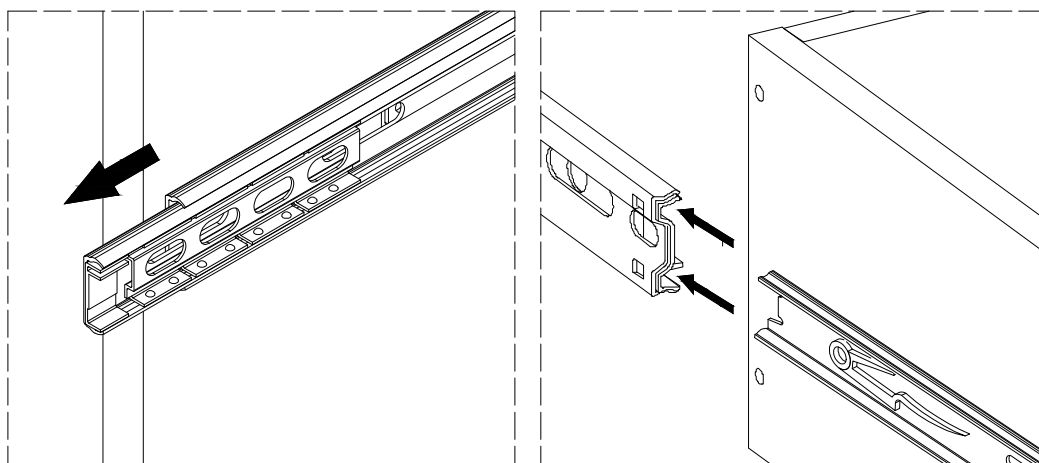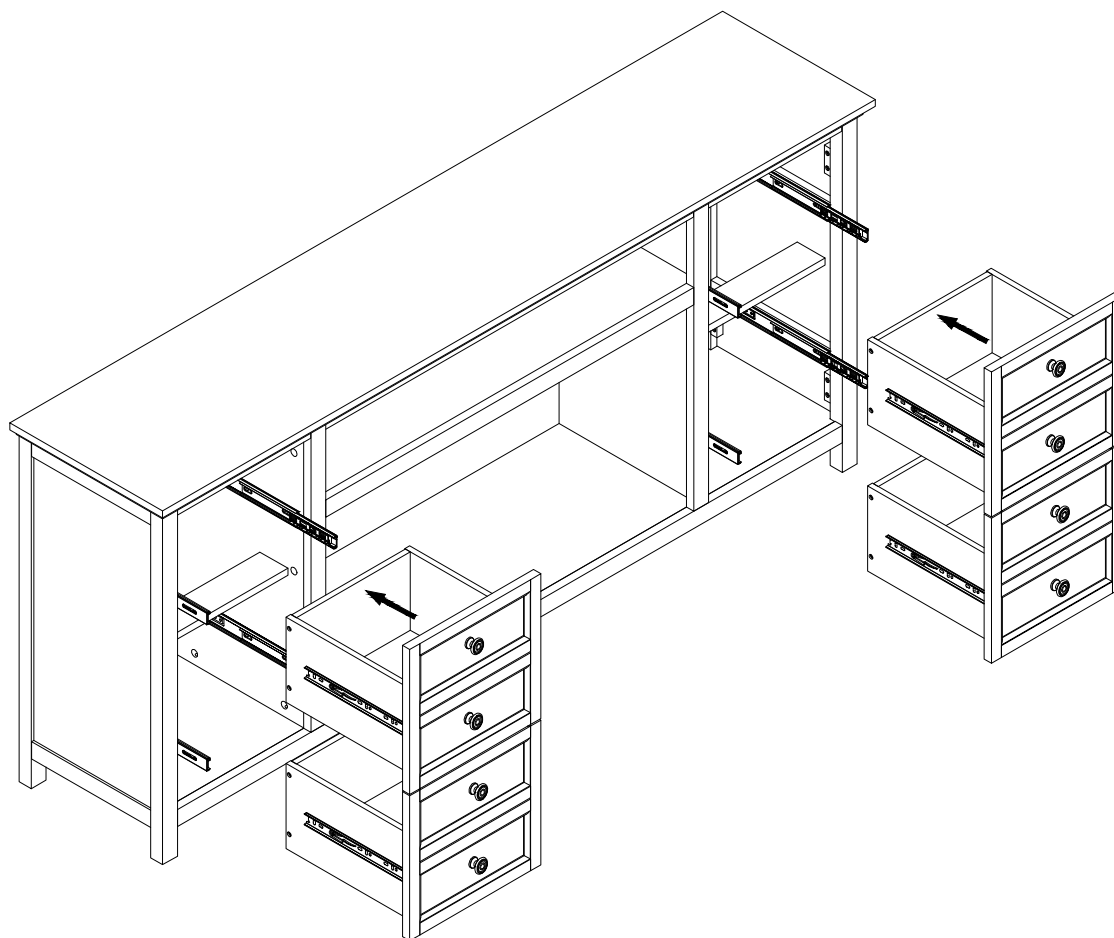  


## File Drawer Installation
 
### CORRECT 1

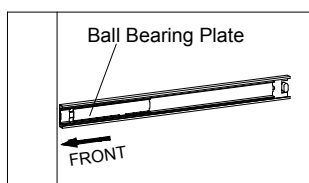


Before inserting the Drawer, make sure to slide the ball bearing plates located on the Side Frames to the FRONT of the unit as illustrated.

### INCORRECT 2

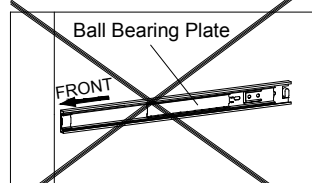 


## File Drawer Removal
 
### 3

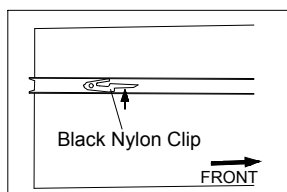


### 4

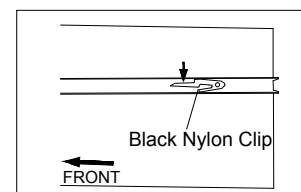 



To release the glides, pull the Drawer out until you can see/feel the black nylon clips. Now press the clip on the Left Glide UPWARD while lifting the clip on the Right Glide DOWNWARD. This will release the Drawer to be easily removed.

 **STEP  
30**

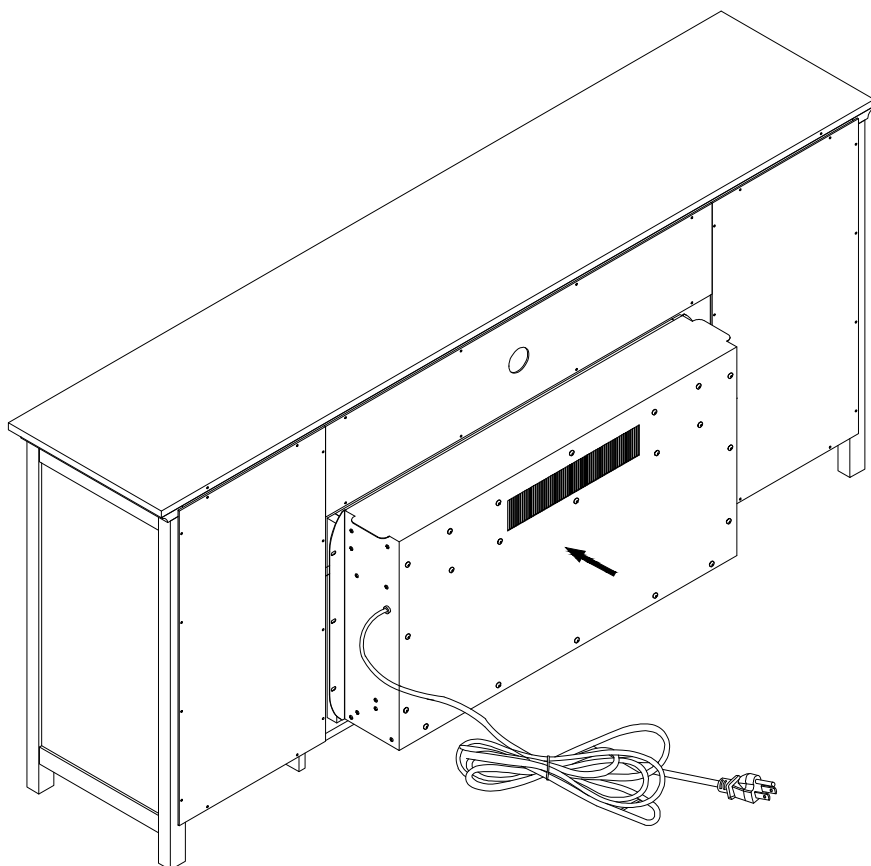

**STEP  
31**

  **I**  
**6 x**

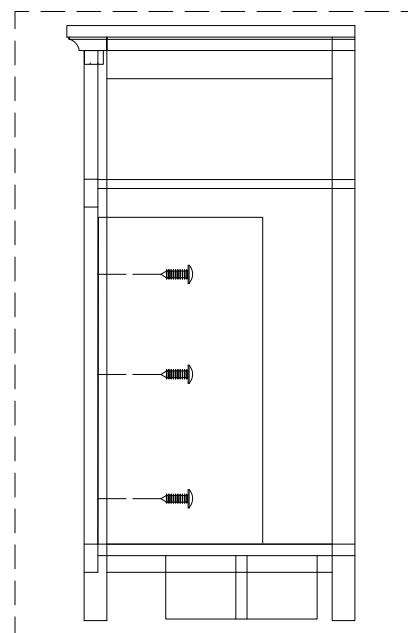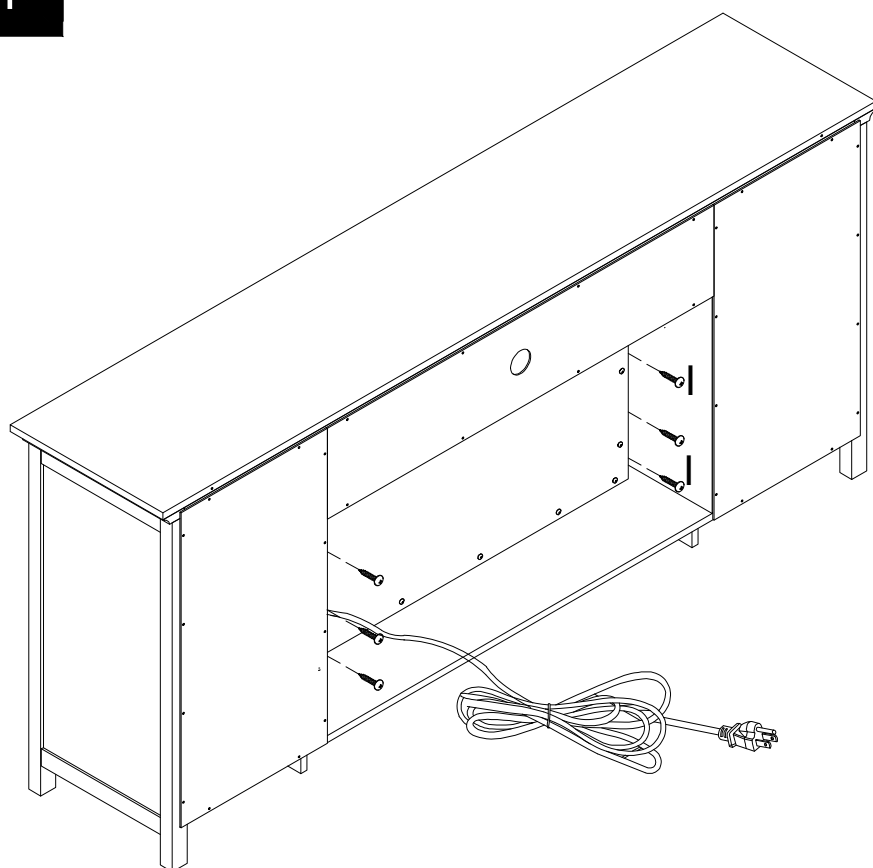


( SIDE VIEW )

**BEFORE CONNECTING THE UNIT TO A WALL ELECTRIC OUTLET**

 Please carefully read and follow instructions and safety warnings in "Fireplace Homeowners Operating Manual" to operate your fireplace.

**WARNING**


IF THE INFORMATION IN THE FIREPLACE OPERATING MANUAL IS NOT FOLLOWED, AN ELECTRIC SHOCK OR FIRE MAY RESULT IN PROPERTY DAMAGE, PERSONAL INJURY , OR LOSS OF LIFE .

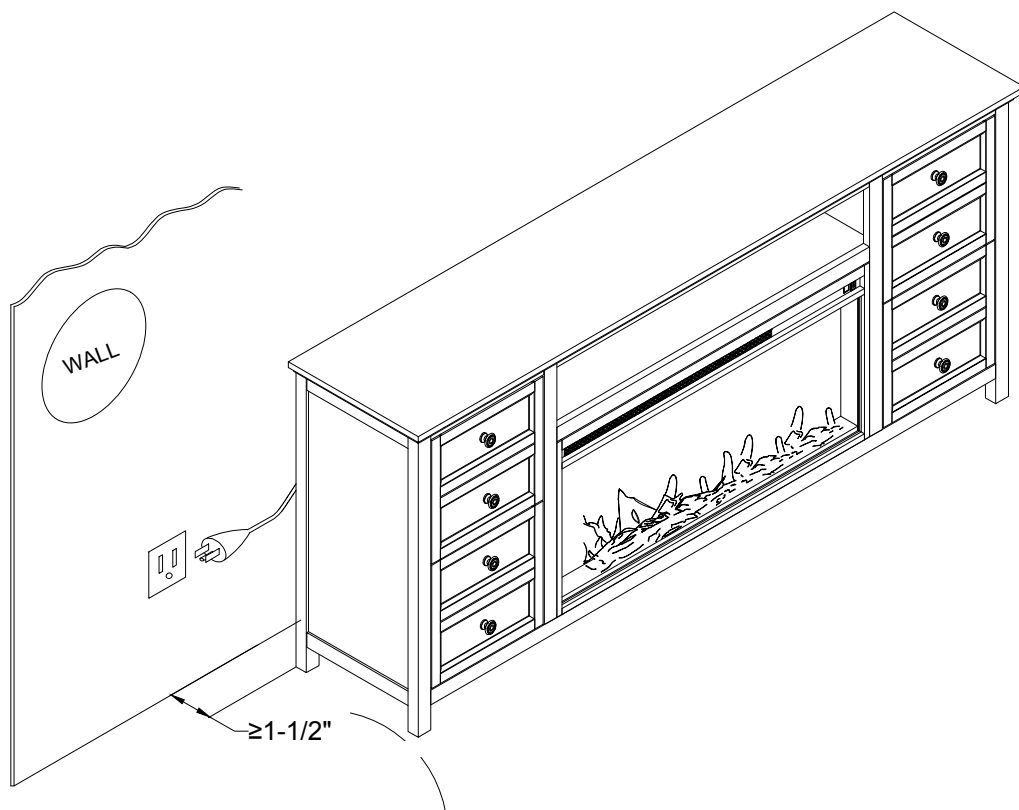

To allow proper heater ventilation, this unit must be located a minimum of 1-1/2" away from a back wall.

## WARNING

 Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

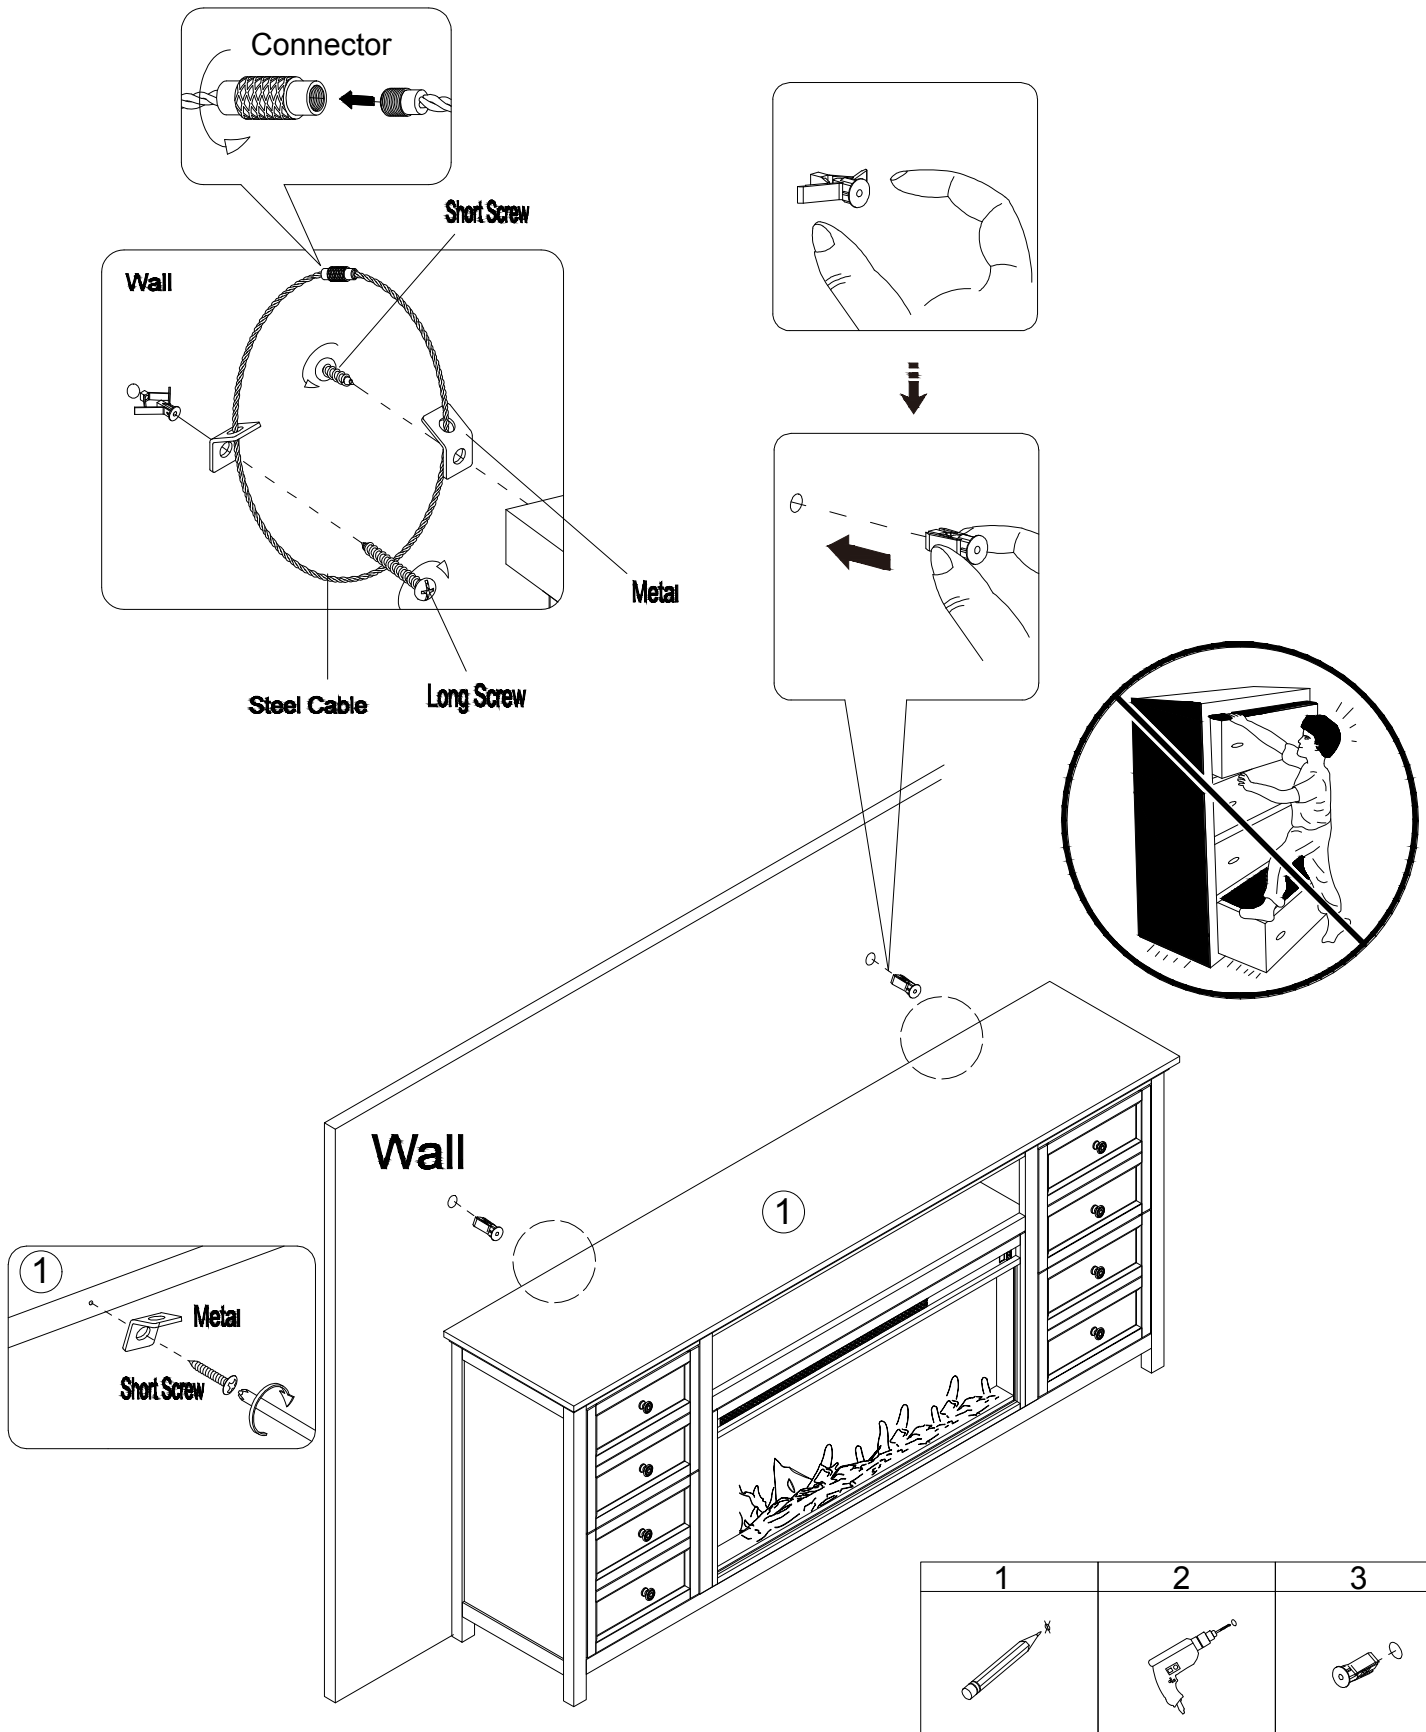

## Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws and nuts periodically and tighten them if necessary.

## Caring for Wood Furniture

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

## Cleaning the Fireplace Trim

Clean the metal trim using a soft cloth, slightly dampened with citrus oil based product and buff with a clean soft cloth. DO NOT use brass polish or household cleaners as these products will damage the metal trim. Citrus oil based products can be obtained at supermarkets or hardware stores.