 


ASSEMBLY INSTRUCTIONS

PLEASE KEEP THIS FOR FUTURE REFERENCE

Outdoor Fire Pit

Prior to assembly, please read these instructions carefully. We recommend you carry out assembly on a soft surface to avoid scratching any surfaces.

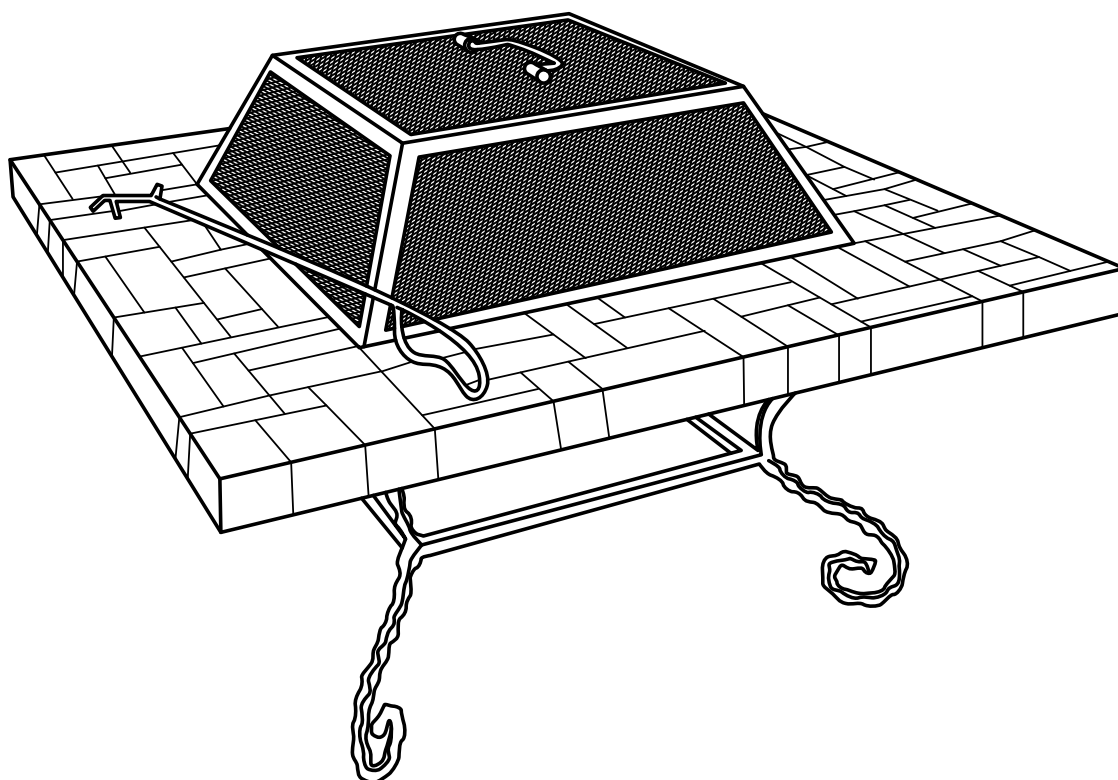

For Outdoor Use Only
(outside any enclosure)

WARNING

Please do not destroy, damage or dispose of any packaging until you have completely satisfied yourself that this product meets with your satisfaction and is in perfect condition. Doing so will result in problems returning the item to your supplier.

Warning and Caution :

- FOR OUTDOOR USE ONLY. NEVER LEAVE A FIRE PIT UNATTENDED.
- Supervise Children & Pets when the fire is in use.
- DO NOT use this unit on a wooden deck or on any combustible surface such as dry grass, leaves, mulch etc and place it no closer than 2 feet from walls during use. Always use the safeguard spark screen when the fire is lit. Always use the hook tool to remove the spark screen
- Burn only wood or charcoal in the firepit. DO NOT use gasoline, kerosene or lighter fluid to start the fire. Light the fire using a match or lighter.
- DO NOT touch the outside of your firepit while it is in use.
- DO NOT extinguish your firepit with water. The water may cause distortion, rust or flaking paint. Allow the attended fire to die out on its own.
- DO NOT use a fire extinguisher unless in an emergency. Allow the attended fire to die out on its own.
- DO NOT use in inclement weather.
- Burning must be inside the metal bowl. Never burn material on the faux stone fire pit body as this could cause irreparable damage





Care and Maintenance :

- To extend the life of your firepit, clean the bowl after each use and cover the unit to protect it from the elements. Please ensure the firepit has completely cooled down before covering.
- To best maintain the metal coating colour, cover the bottom of the fire bowl with small stones or sandstones before each use. After repeated use, a slight discoloration of the finish can occur. To clean metal surfaces, use a soft cloth or nylon scrubbing brush using a mild dishwashing detergent or baking soda.
- Clean the surface of the faux stone body using only a dry brush to wipe away any dust. Never use water or other liquids to clean the fire pit body.
- If metal is scratched, the fireplace may need touch up paint. Ask your local paint store representative which paint is best for your type of fireplace. To prevent rusting, coat the exposed surface immediately. In most cases, we recommend using a steel brush on the affected area before spray coating with a quality anti rust paint.
- Although firepits in general do well in adverse weather conditions, store it in an enclosed structure during longer periods of non use.

WARNING


Please do not destroy, damage or dispose of any packaging until you have completely satisfied yourself that this product meets with your satisfaction and is in perfect condition. Doing so will result in problems returning the item to your supplier.

Parts List

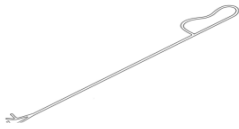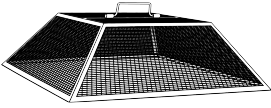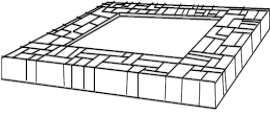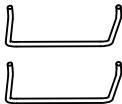Part	Description	Image	Qty
A	Firebowl		1
B	Rack		1
C	Poker		1
D	Mesh		1
E	Screw		12
F	Gaskets		12
G	Iron Feet		4
H	Screwdriver		1
I	Iron Frame		1
J	Table Top		1
K	Grill		1
L	PVC Cover		1
M	Iron Handle		2


STEP 1

Fit the 4 Iron Feet to the Iron Frame with Screws (E) and Gaskets (F)

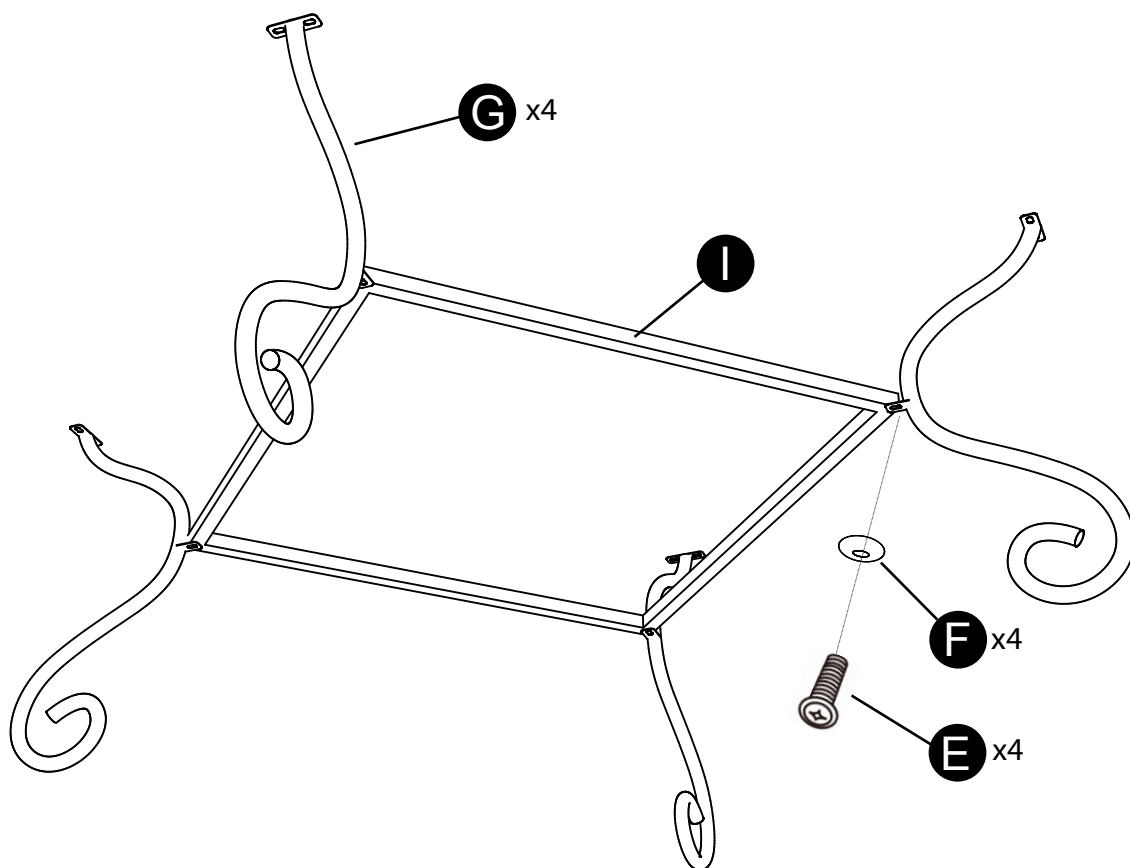


STEP 2

Secure Iron Feet and Table top with Screws (E) and Gaskets (F)

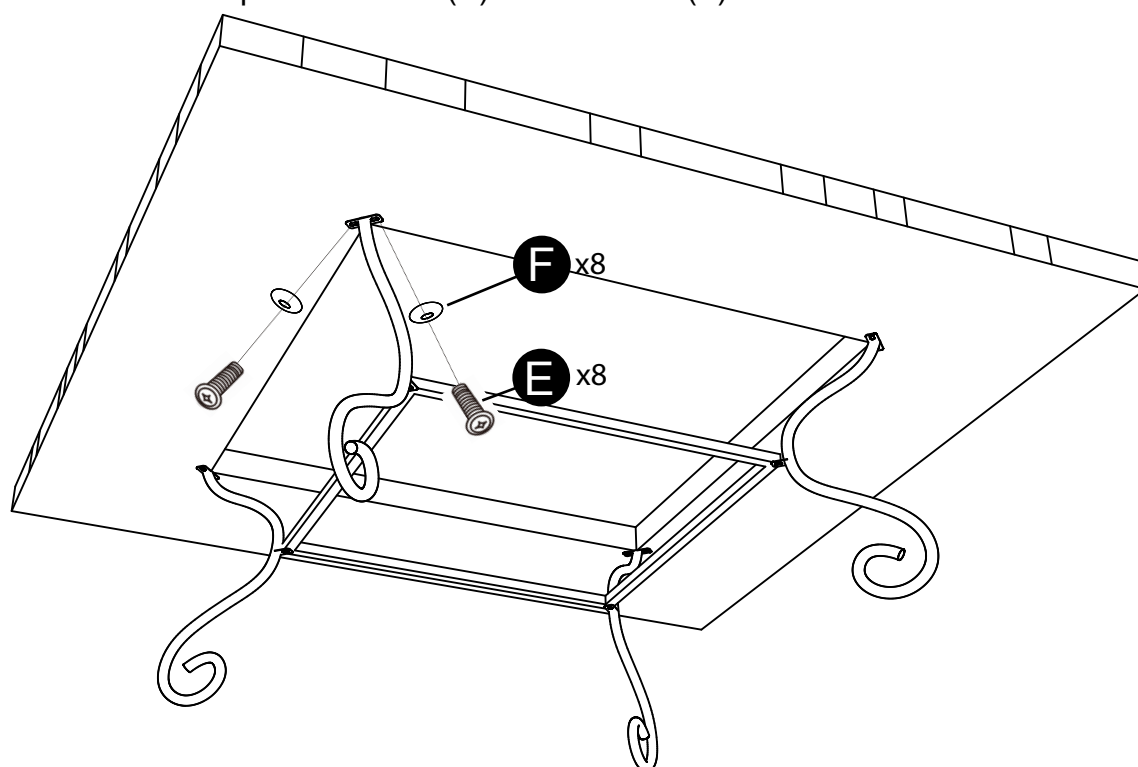


STEP 3

Place in the Firebowl

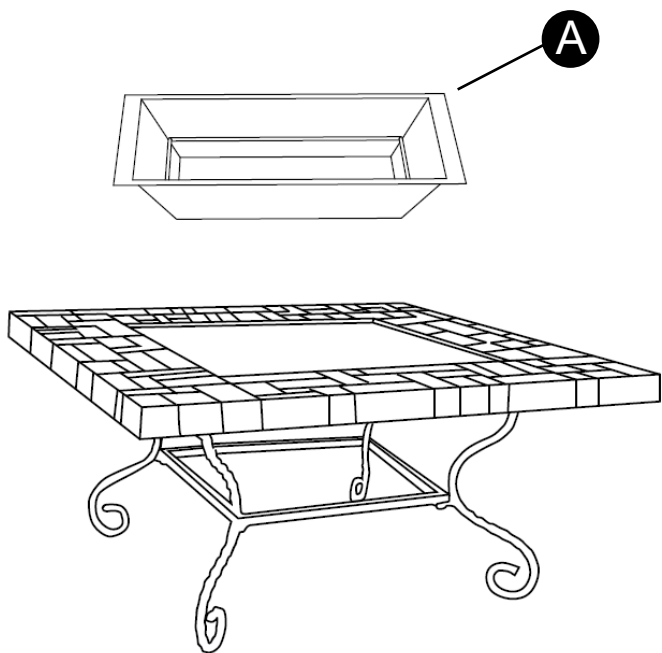


STEP 4

Place in the Rack

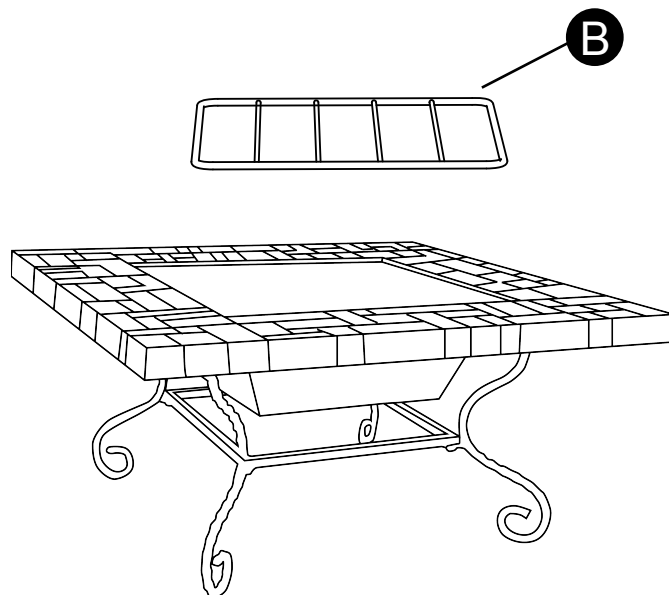

STEP 5

Place the grill into the metal bowl

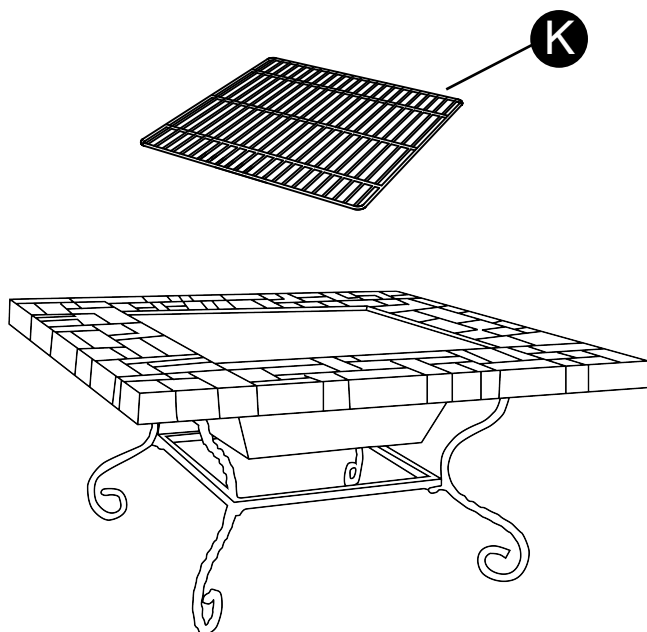

STEP 6

Place in the Mesh

