 


Wardrobe

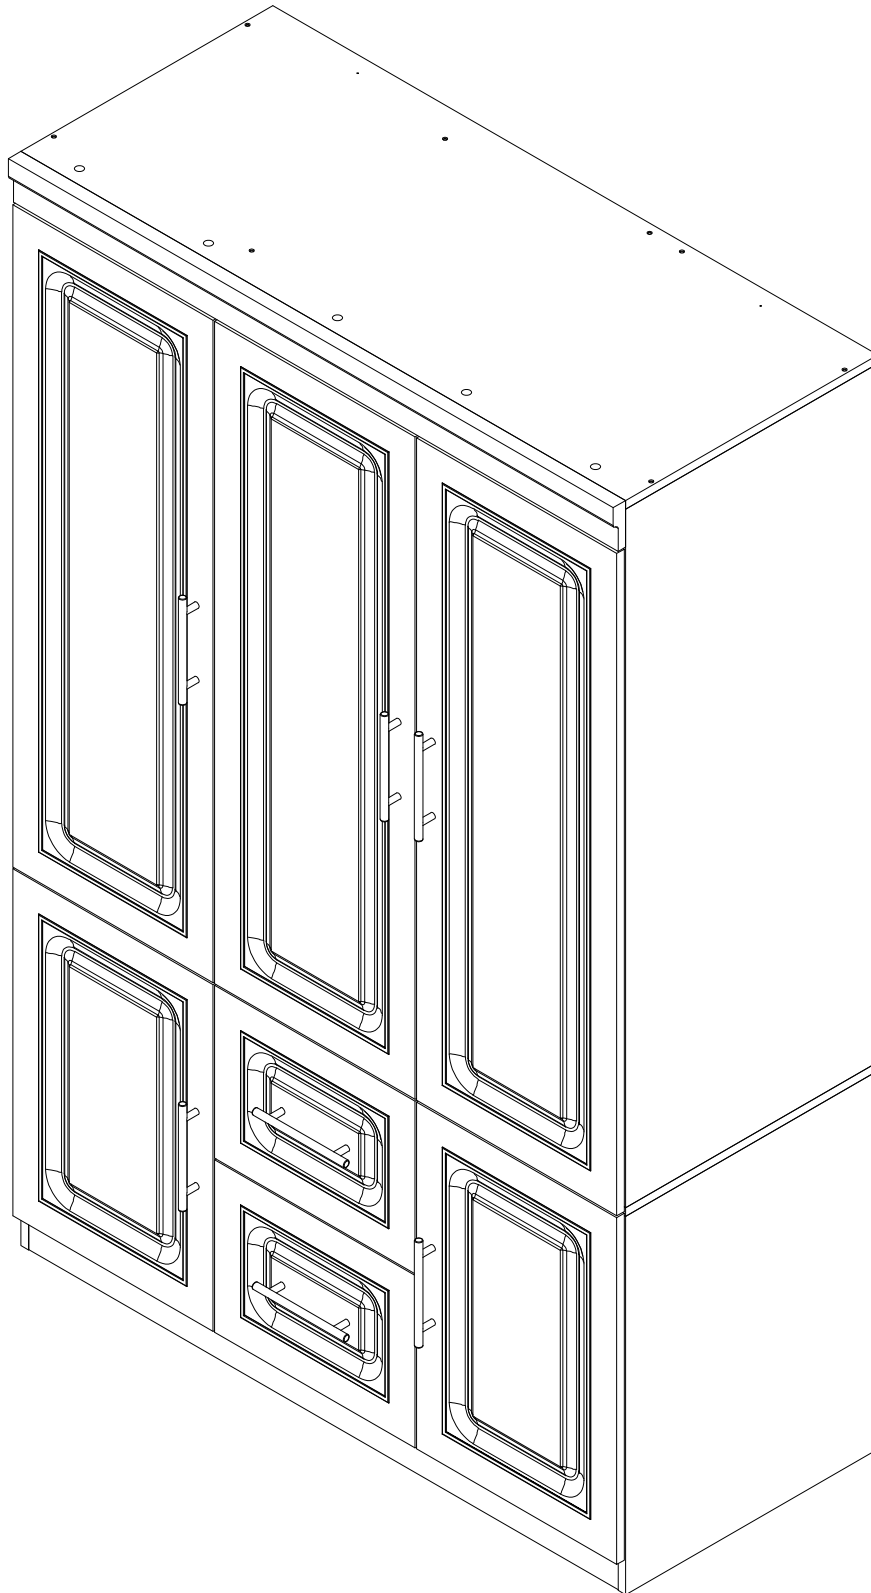

IMPORTANT INFORMATION!

- please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

AVOID SCRATCHES!

- In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

IMPROVE EFFICIENCY !

- Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

IMPORTANT !

 
- It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

- For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.





- Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

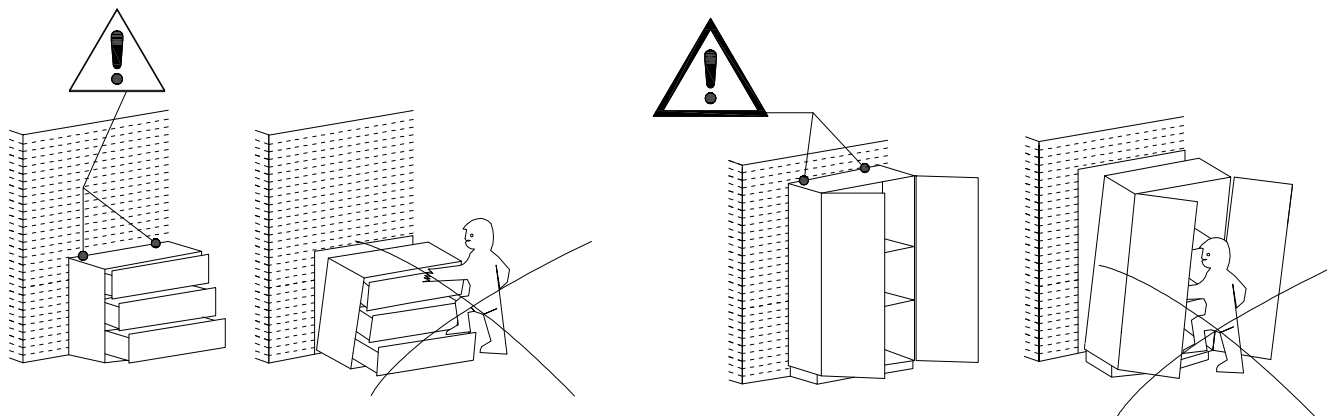

Please prepare the following tools

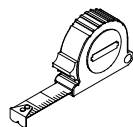    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 49



 
Ø6 x 34mm

B x 49



Ø15 x 10mm

C x 48



Ø8 x 30mm

D x 20



 
Ø4 x 40mm

E x 8




Ø4 x 30mm

F x 8



Ø35mm

 G x 2




Ø35mm

H x 64



Ø3.5 x 14mm

 J x 2




350mm

K x 16



Ø3.5 x 12mm

 L x 7



128mm

M x 14



Ø4 x 18mm

N x 2



 
47 x 18 x 12mm

P x 1



770mm

Q x 48



14x13x10mm

 
R x 48



Ø3 x 16mm

S x 2




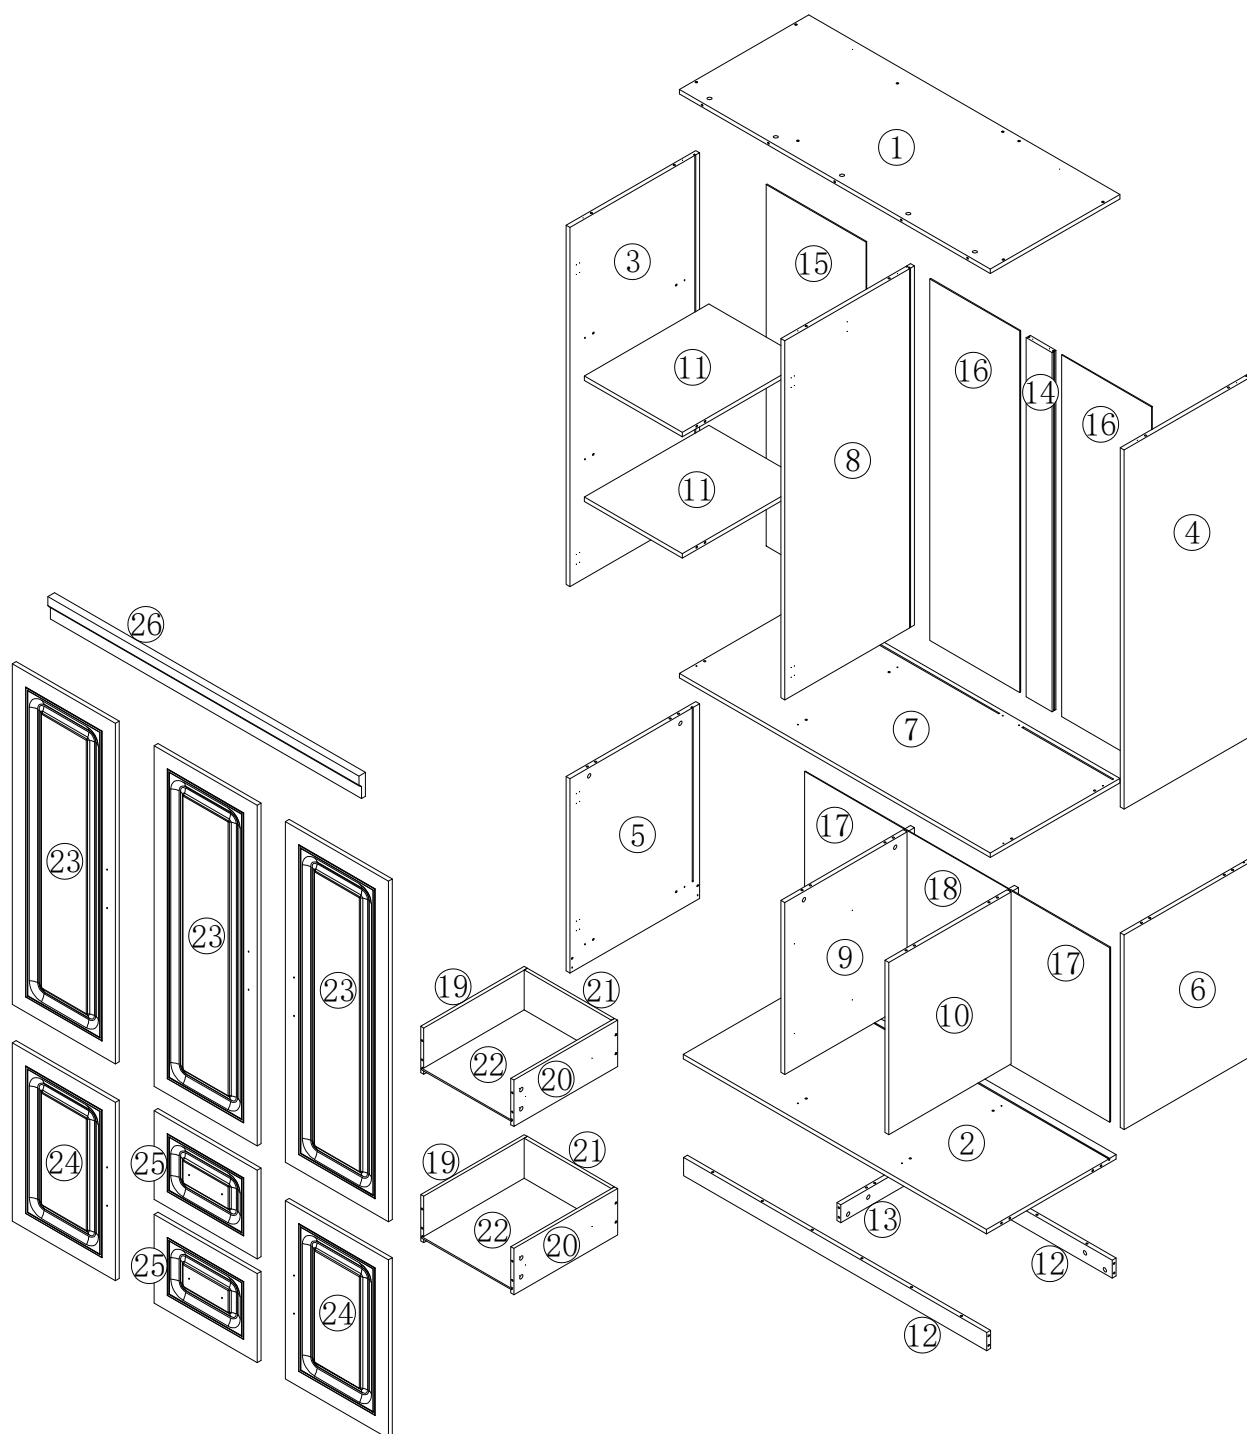


**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

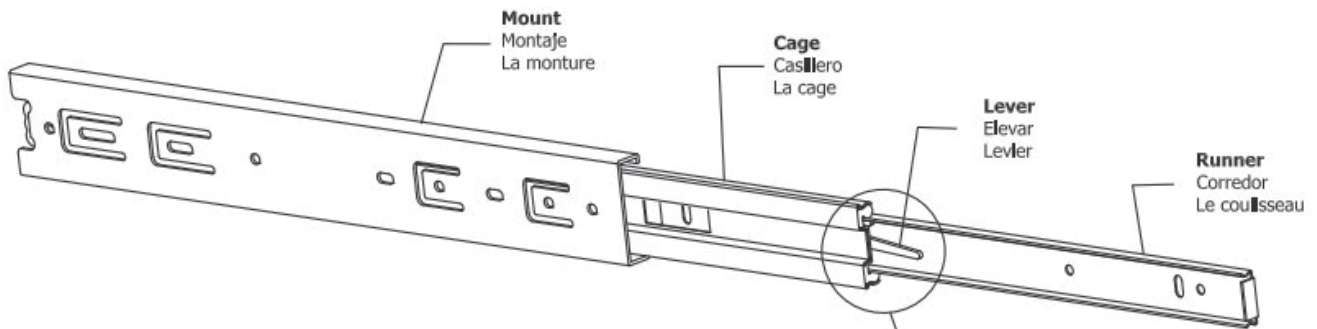

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

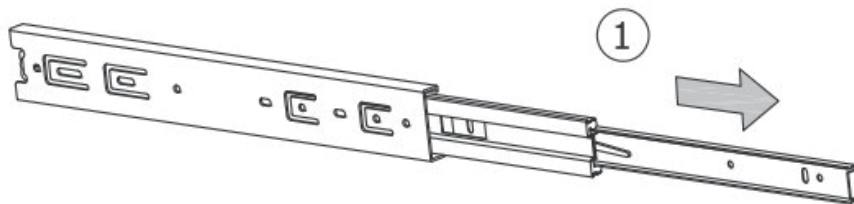

 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

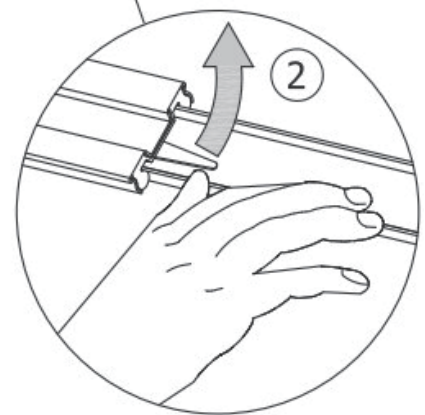

 STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur



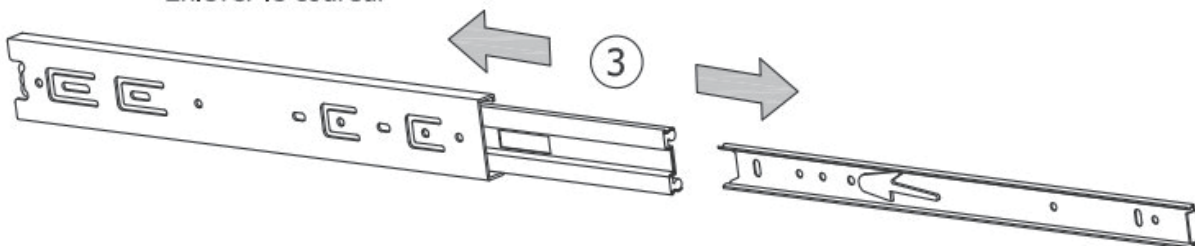


1

A x 4



   Ø6 x 34mm

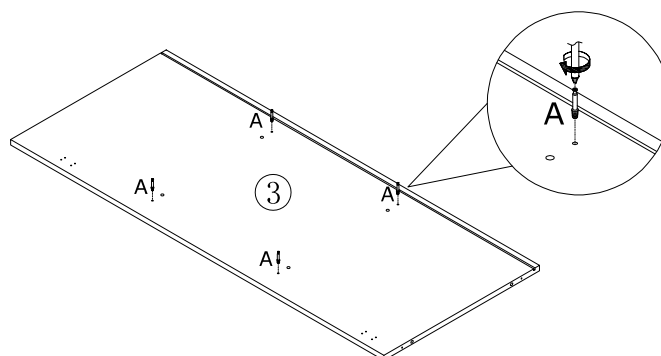


2

B x 4






Ø15 x 10mm

 C x 4



Ø8 x 30mm

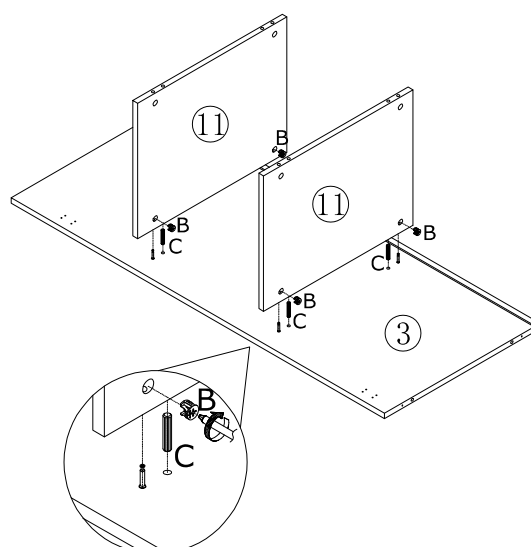 
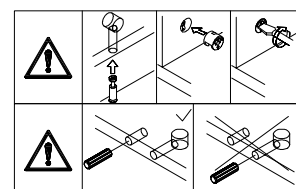 
 


3

A x 4



   Ø6 x 34mm

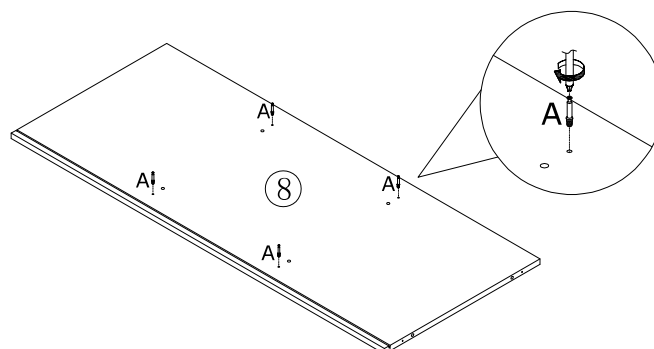


4

B x 4






Ø15 x 10mm

 C x 4



Ø8 x 30mm

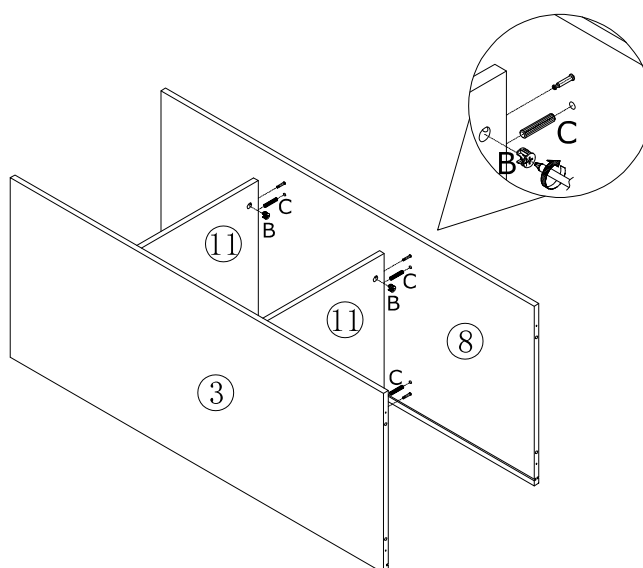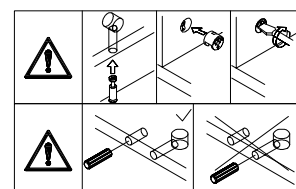   

5

H x 2

 
 


Ø3.5 x 14mm

N x 1




47x18x12mm

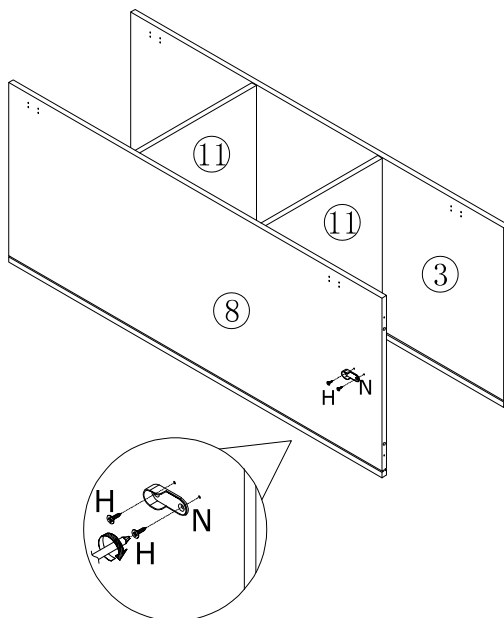

6

 C x 4





Ø8 x 30mm

D x 4



  Ø4 x 40mm

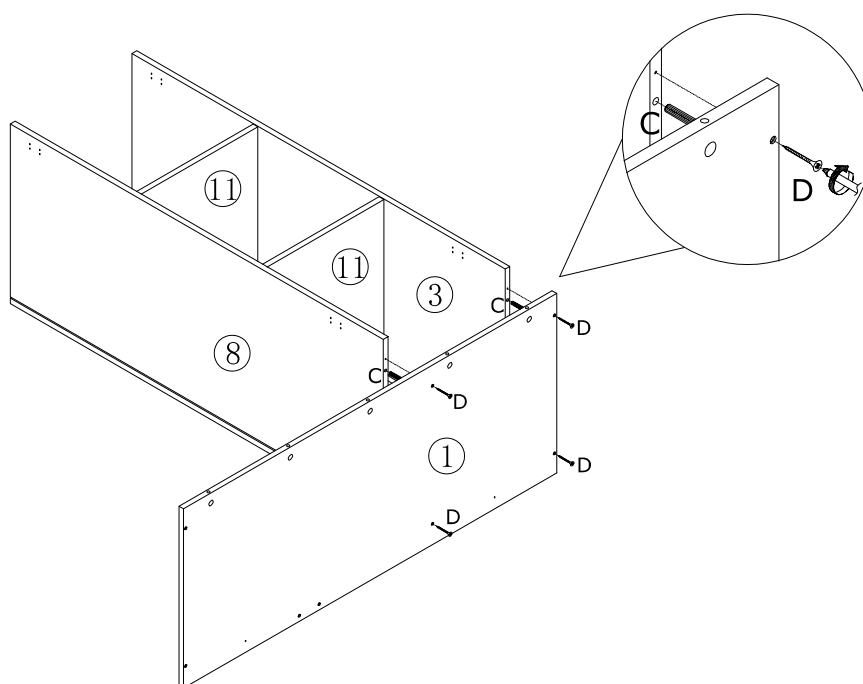



7

D x 2



  Ø4 x 40mm

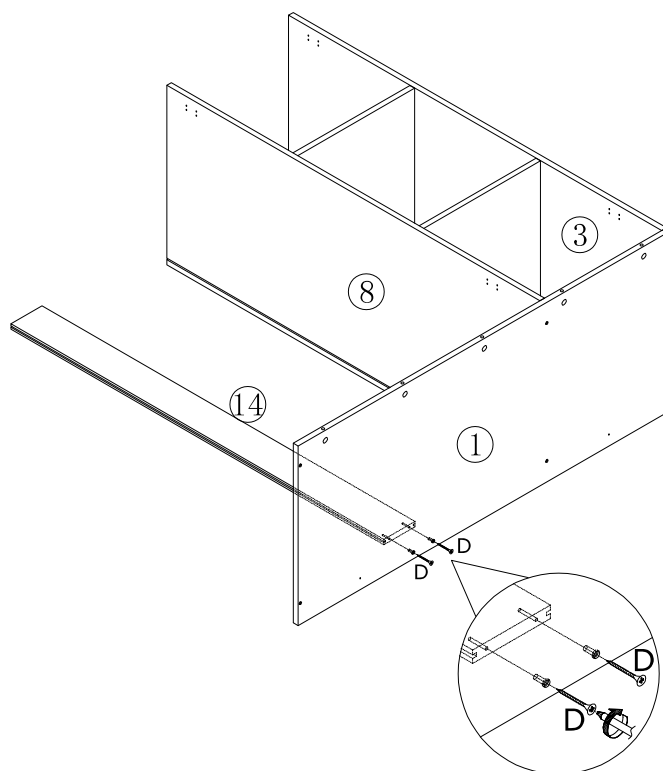

8

H x 2

 
 


Ø3.5 x 14mm

N x 1




47x18x12mm

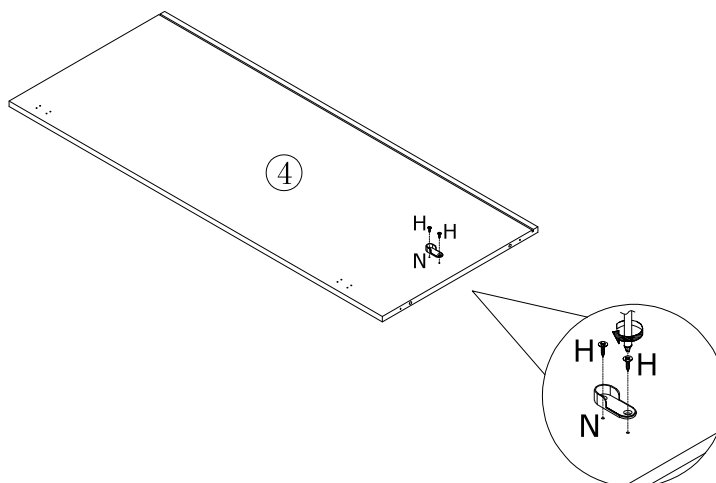

9

 C x 2





Ø8 x 30mm


D x 2



  Ø4 x 40mm

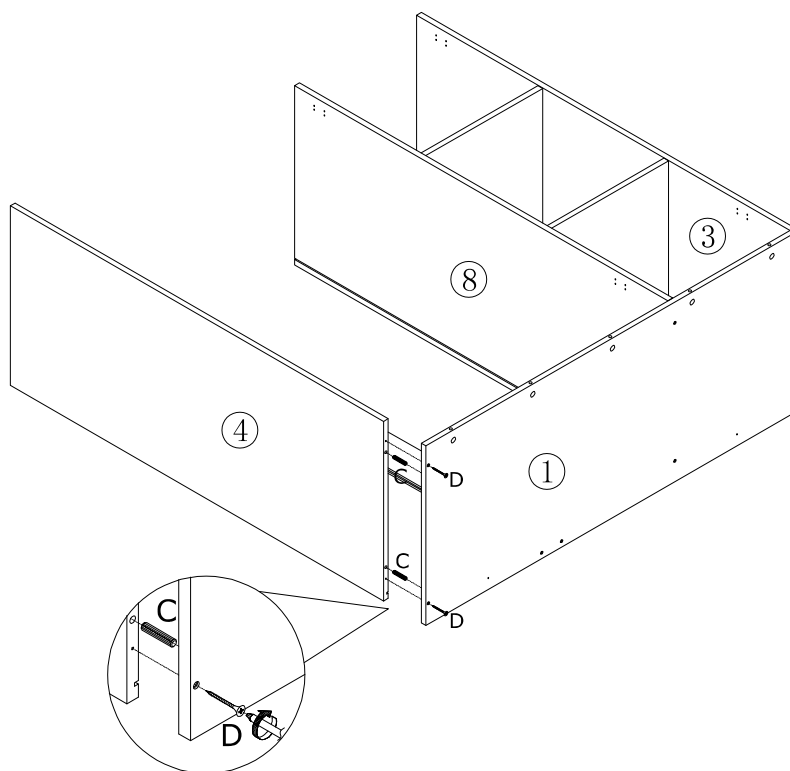

10



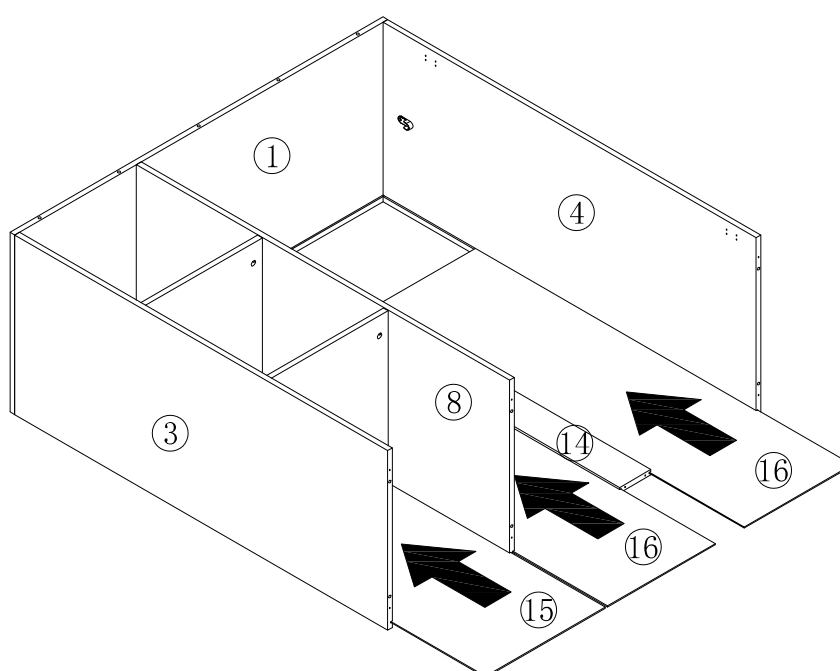 


11

A x 8




   Ø6 x 34mm

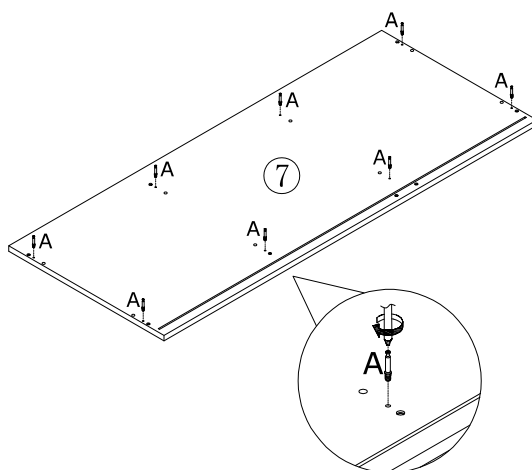

12

 C x 6





Ø8 x 30mm

D x 8



  Ø4 x 40mm


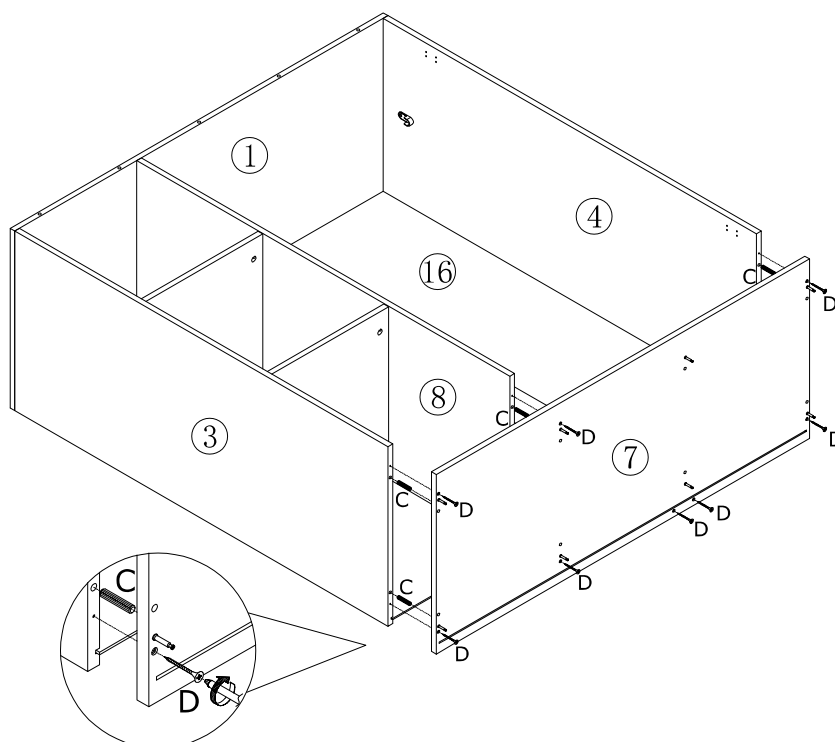



13

A x 5



   Ø6 x 34mm

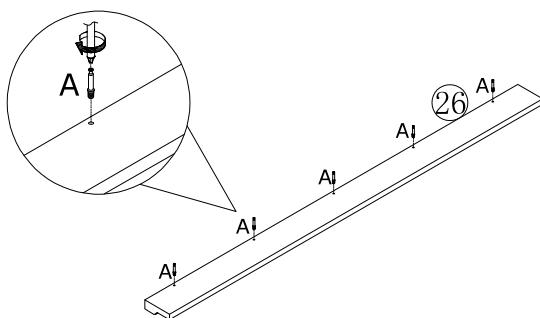




14

B x 5



   Ø15 x 10mm

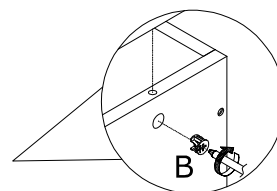
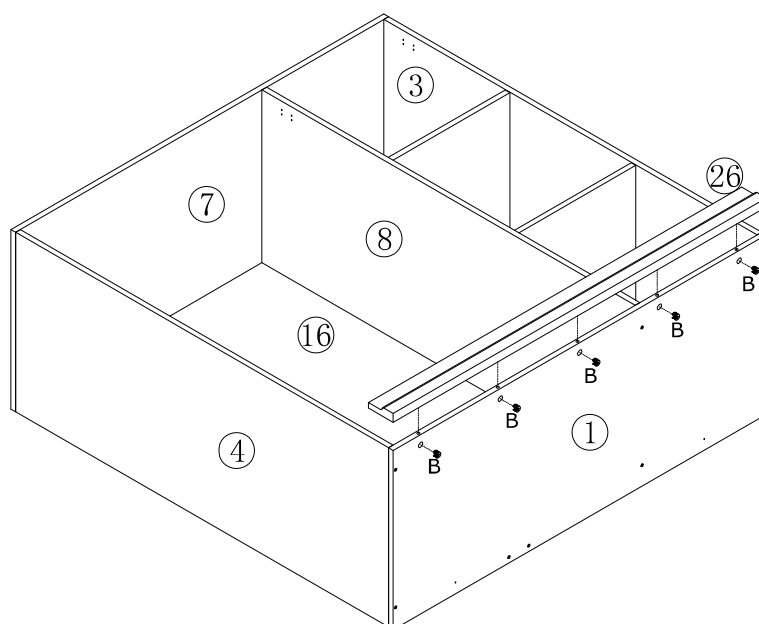



15

A x 2



   Ø6 x 34mm

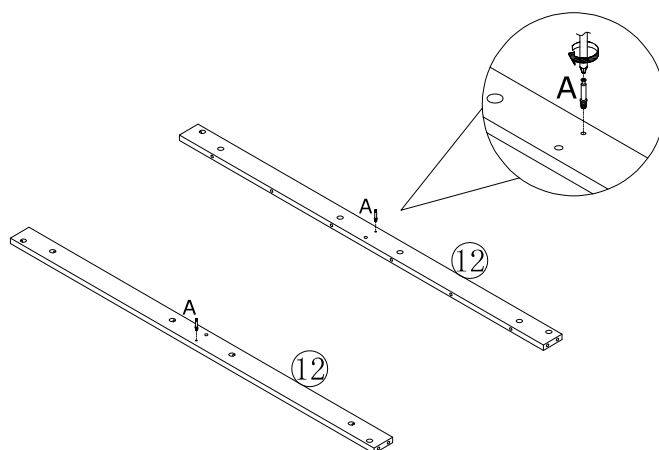


16

B x 2






Ø15 x 10mm

 C x 2



Ø8 x 30mm

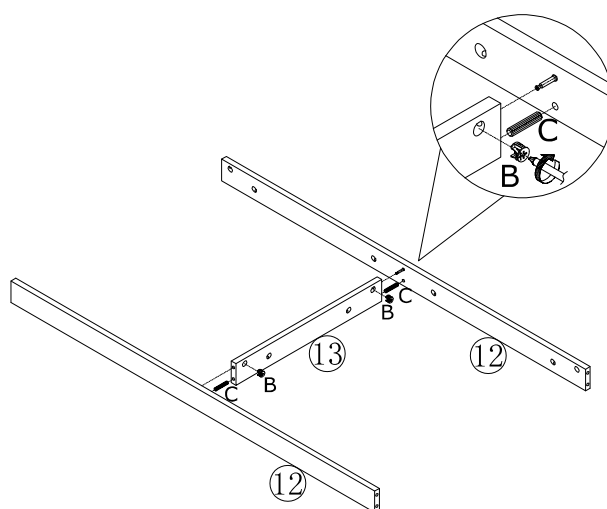 
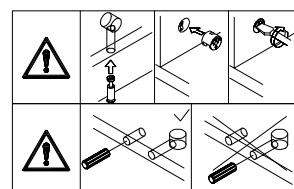 
 


17

A x 10



   Ø6 x 34mm

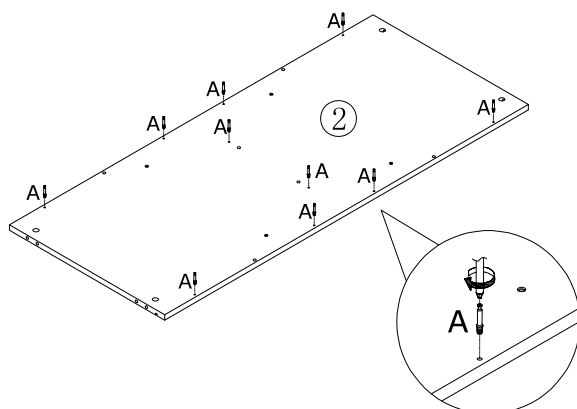


18

B x 10






Ø15 x 10mm

 C x 6



Ø8 x 30mm

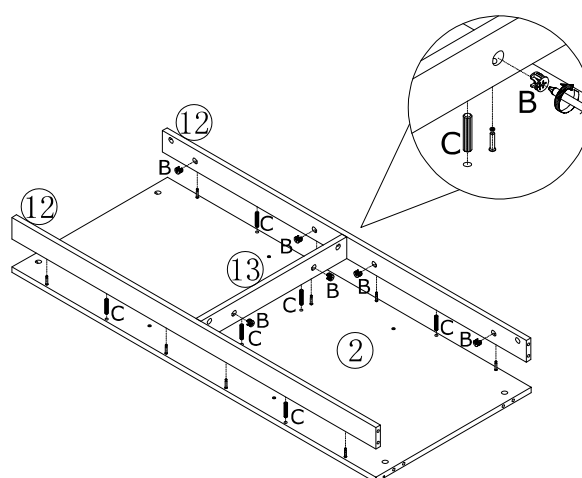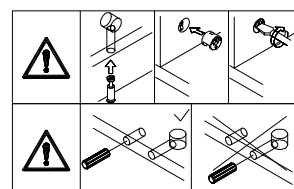   

19

J x 2

 
 
 


350mm

K x 8




Ø3,5 x 12mm

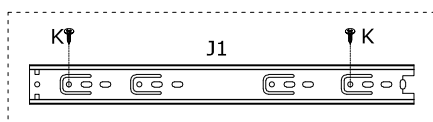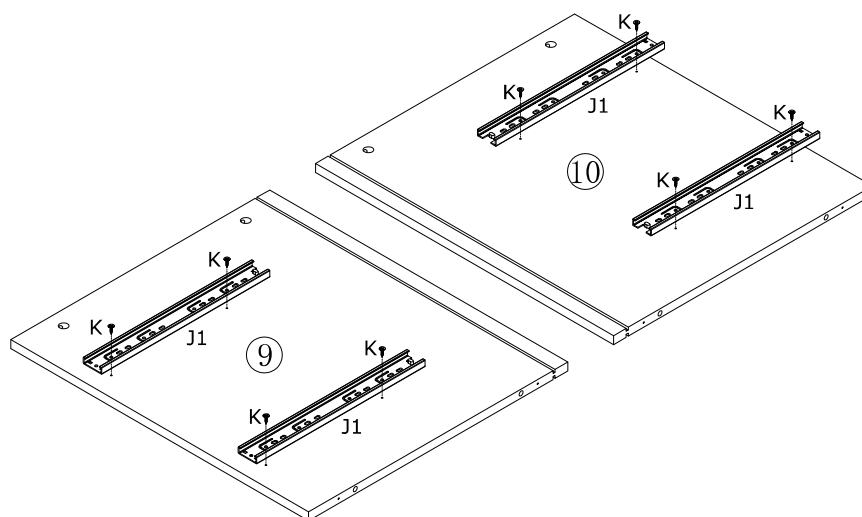

20

 C x 4





Ø8 x 30mm

D x 4



  Ø4 x 40mm


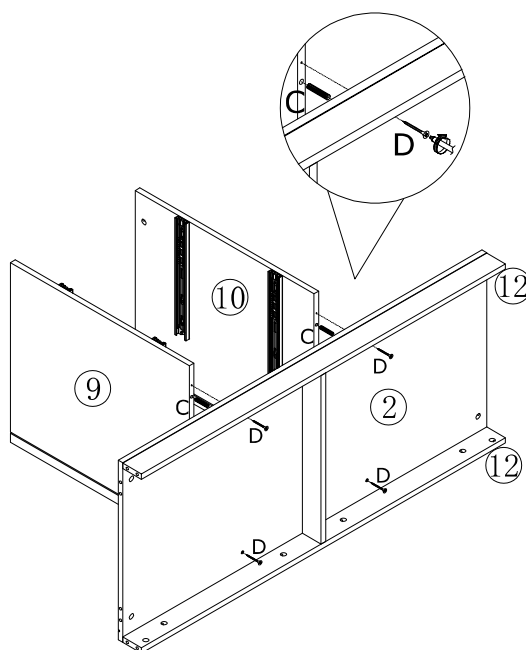



21

A x 8



   Ø6 x 34mm

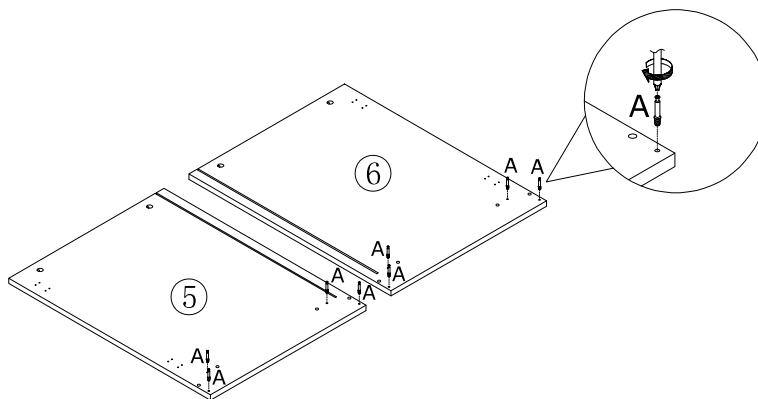


22

B x 4






Ø15 x 10mm

 C x 4



Ø8 x 30mm

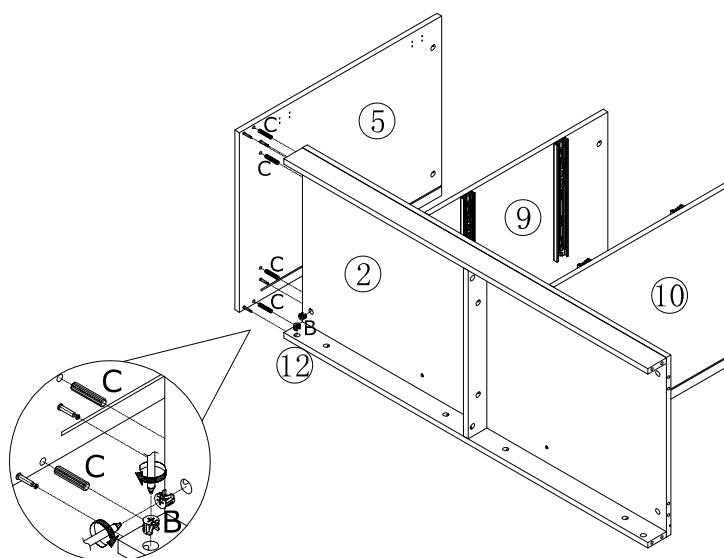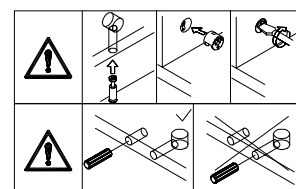   


23

B x 4






Ø15 x 10mm

 
C x 4



Ø8 x 30mm

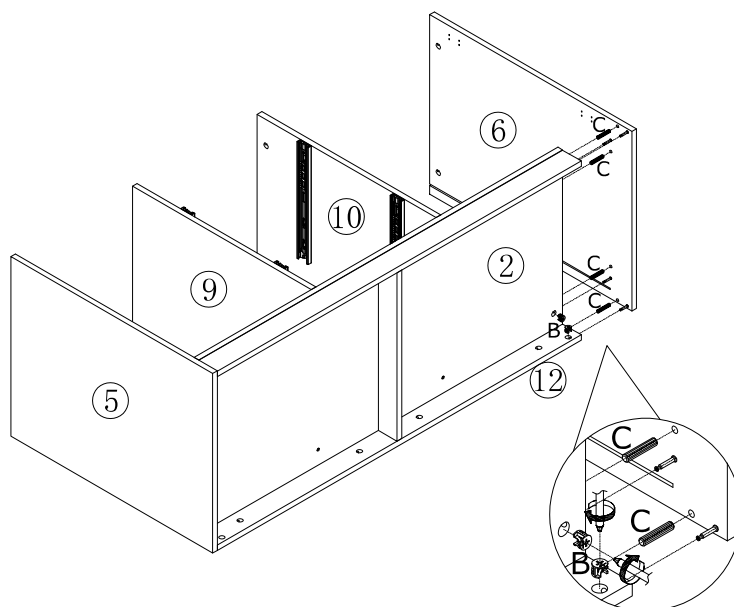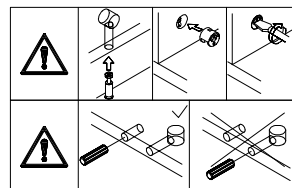   

24

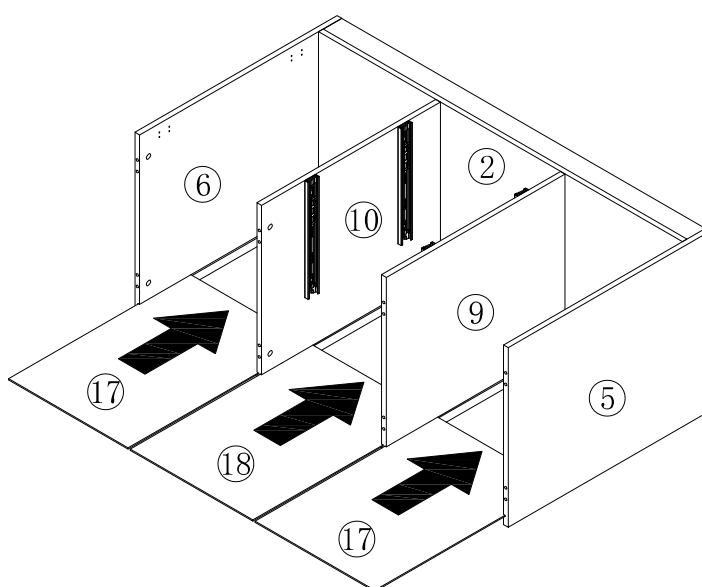 


25

B x 8






Ø15 x 10mm

 C x 8



Ø8 x 30mm


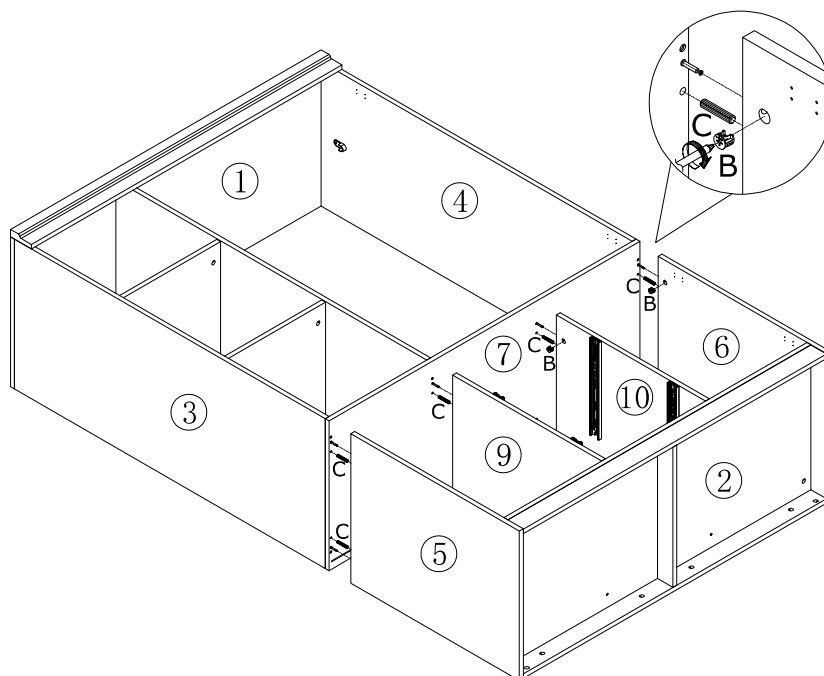 
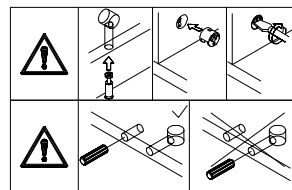 
 


26

P x 1



    770mm

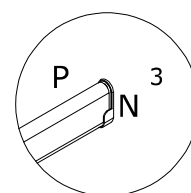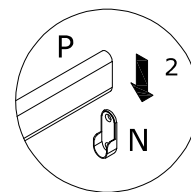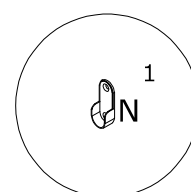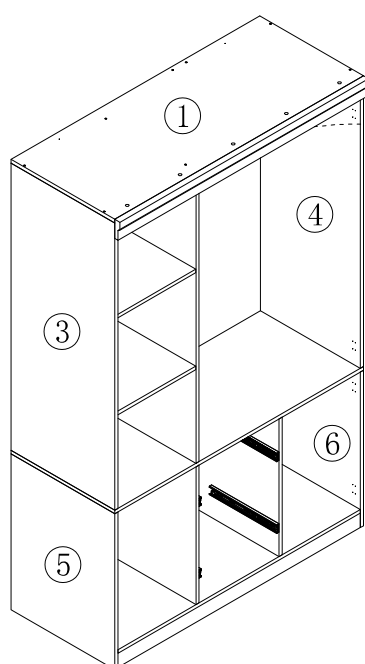

27

J x 2

 
 
 


350mm

K x 8



Ø3,5 x 12mm

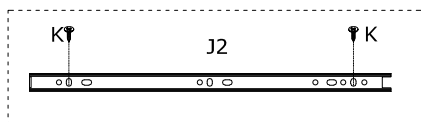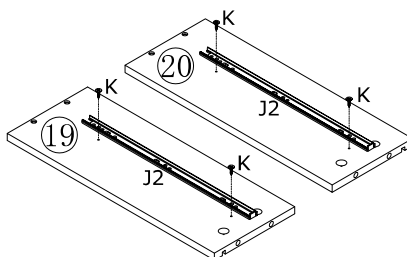



x2

28

E x 8




  Ø4 x 30mm

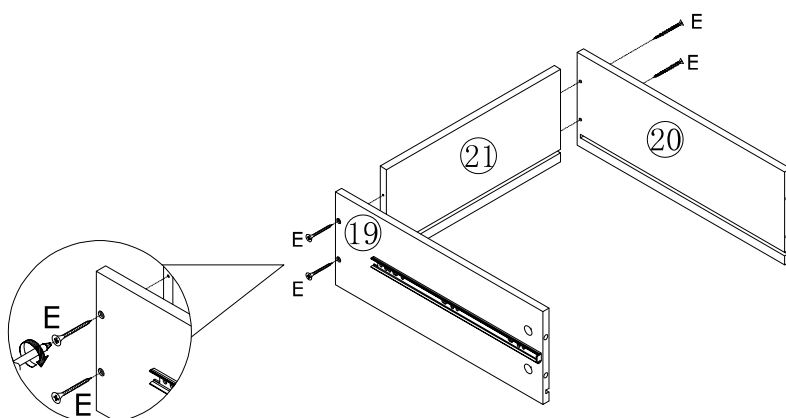

x2



 
29

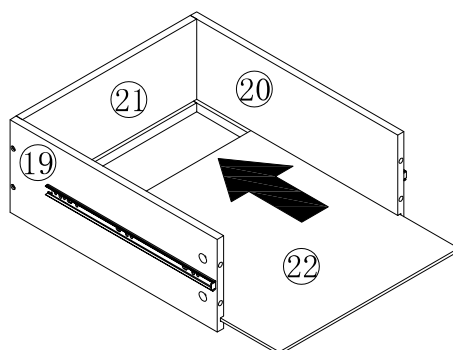

x2

30

   A x 8
Ø6 x 34mm

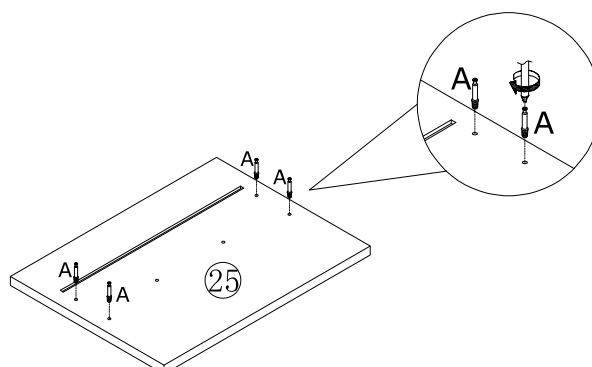





x2

31

B x 8



    
Ø15 x 10mm

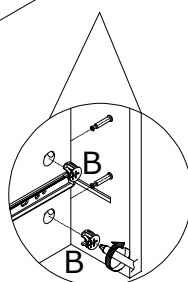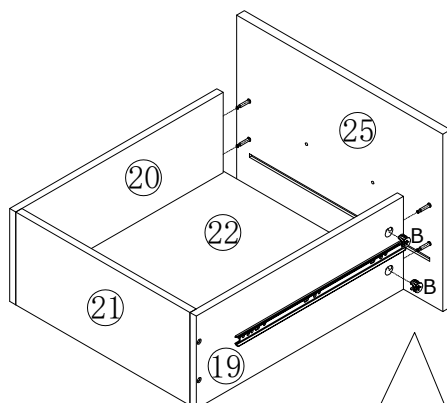

x2

32

 L x 2






128mm

M x 4




   Ø4 x 18mm


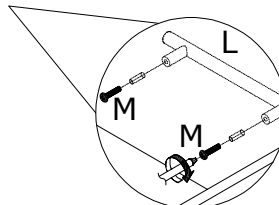
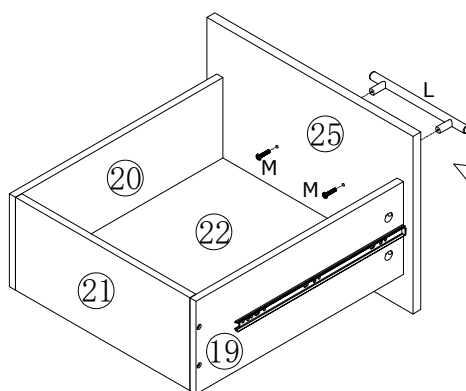



x2

 33




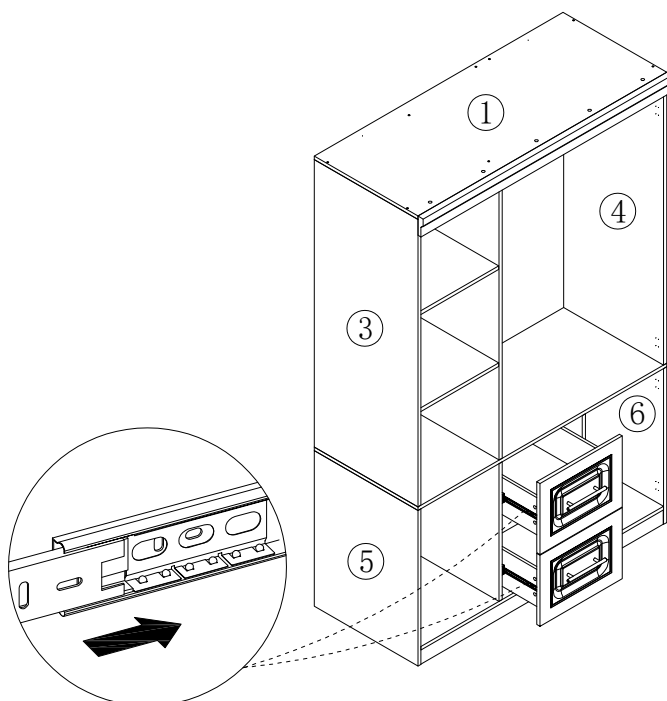


34

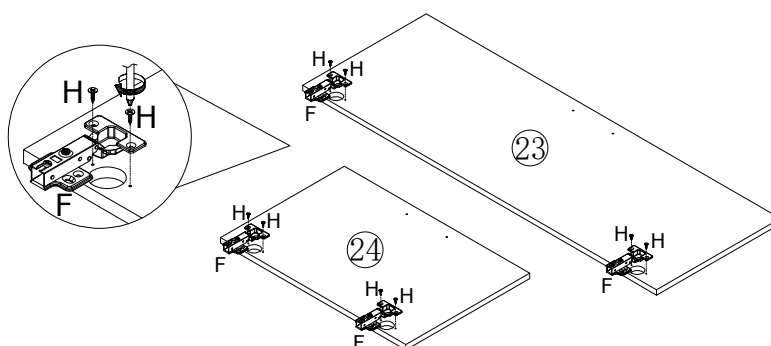 
 
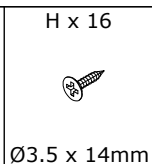 
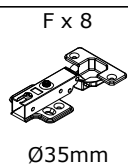 


x2

    35

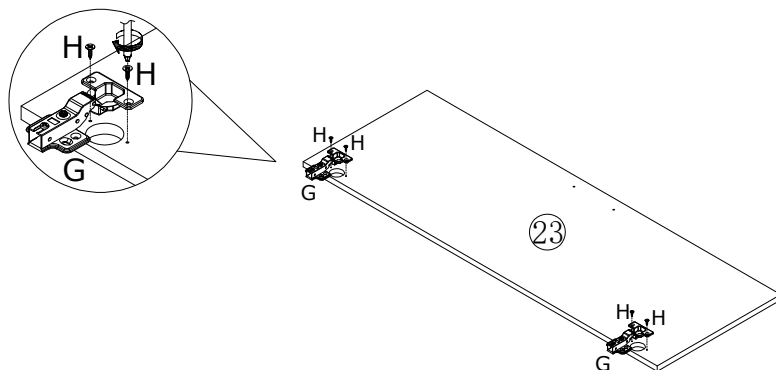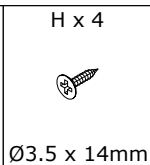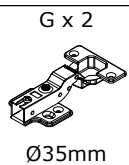

36

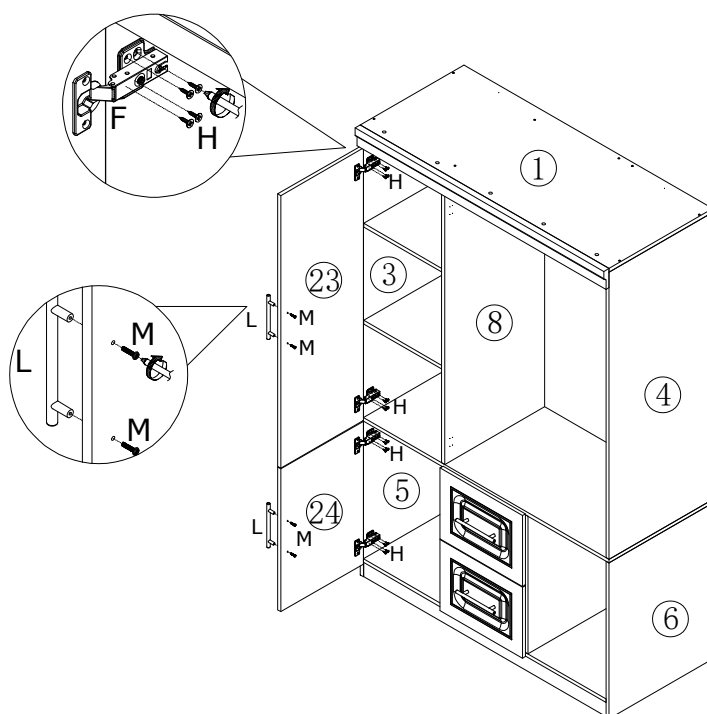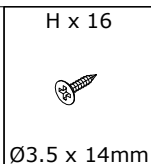    


37

H x 16



Ø3.5 x 14mm

 L x 2





128mm

M x 4



  Ø4 x 18mm

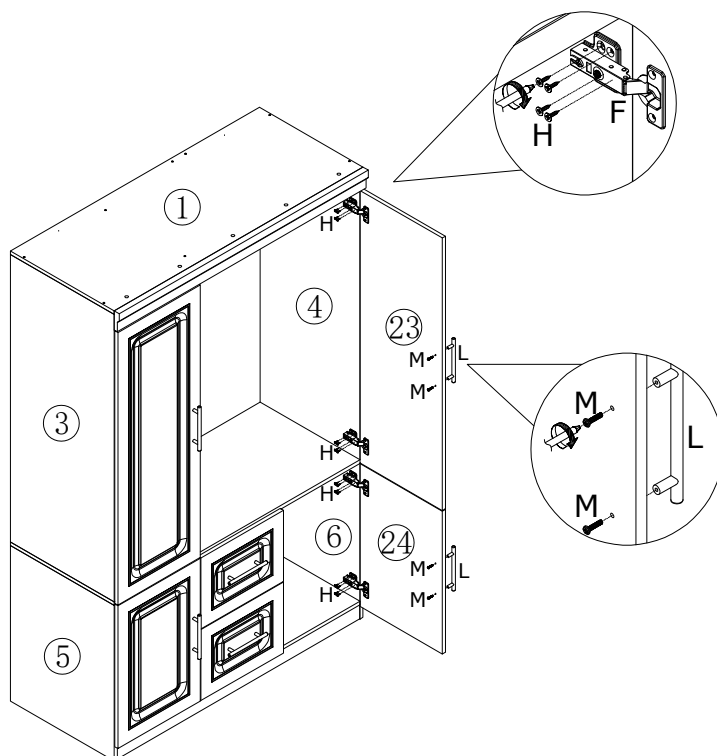


38

H x 8



Ø3.5 x 14mm

 L x 1





128mm

M x 2



  Ø4 x 18mm

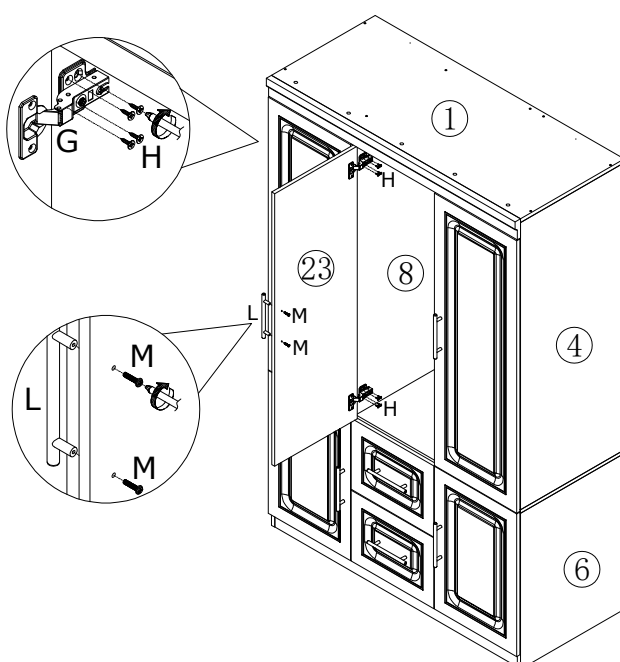

39

Q x 48

 
 


14x13x10mm

R x 48

















Ø3 x 16mm

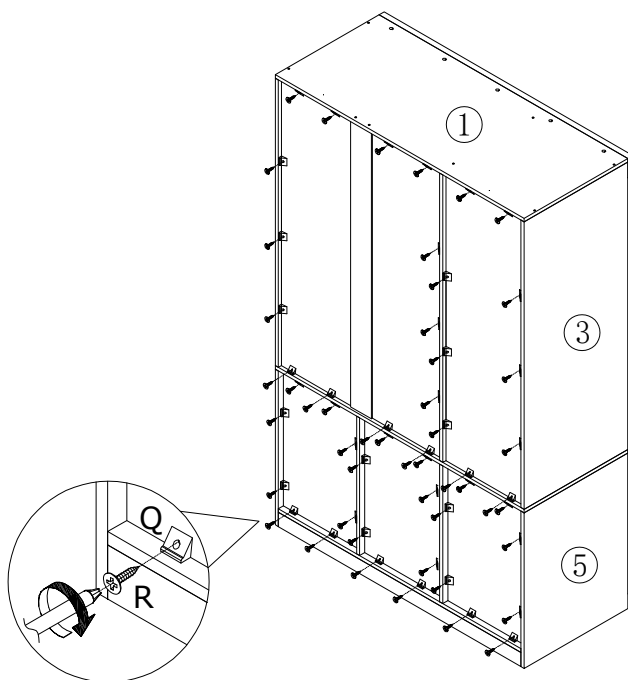

40

              S x 2

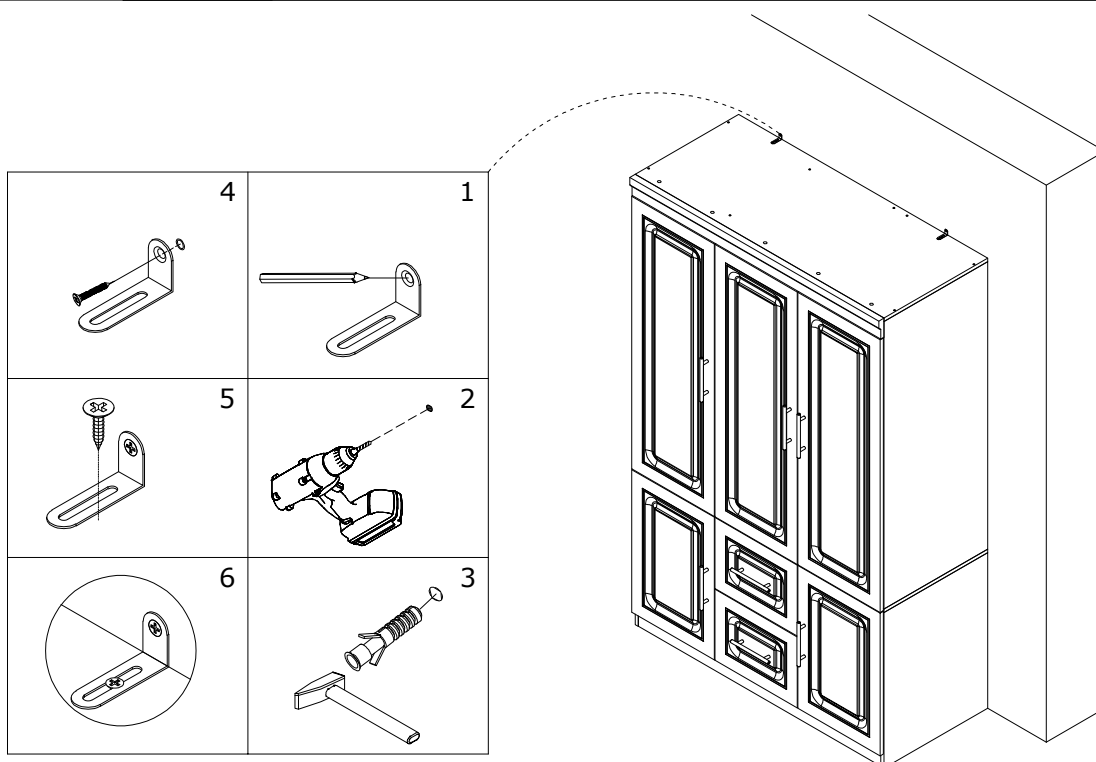

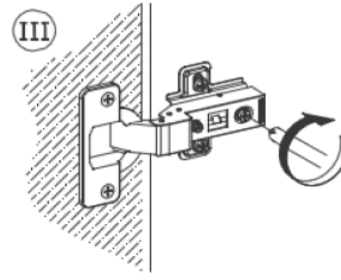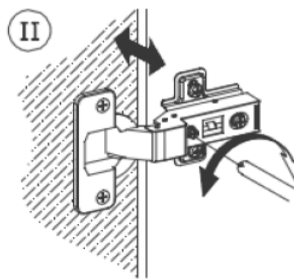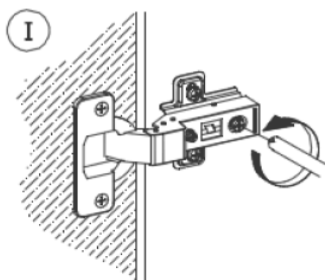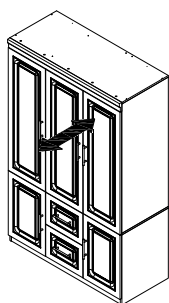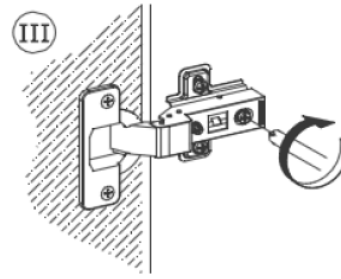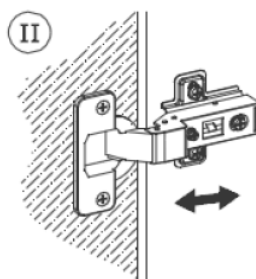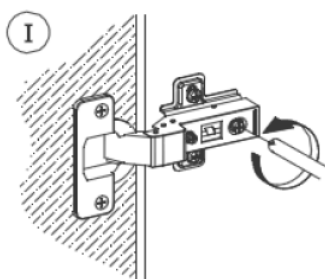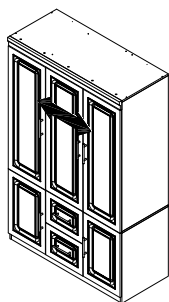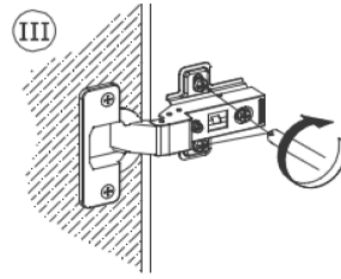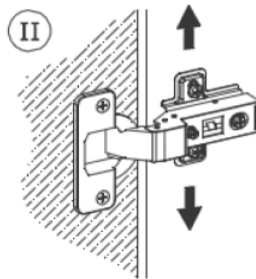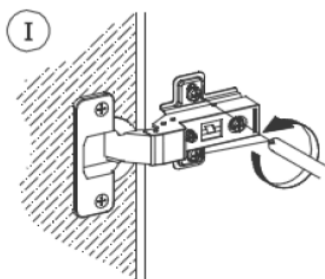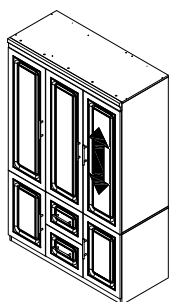

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at feedbackstation@163.com as there may be a simple solution to the issue.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
- In all circumstances please save all packaging material and paperwork for the order.
- Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.