


ASSEMBLY INSTRUCTIONS FOR

PLEASE READ AND SAVE THESE INSTRUCTIONS :

Be careful when unpacking the lamp since the wires are connected. If the wires are pulled out of their connectors, the lamp will not turn on.

1. Begin at the bottom of the lamp.
2. Unscrew preassembled finial (E) from harp (C).
3. Squeeze harp (C) and insert it into the saddle of socket (A).
4. Place shade (D) onto harp (C) and tighten by finial (E).
5. Install bulb (B) (not included).

NOTE: Socket switch is dimmable.

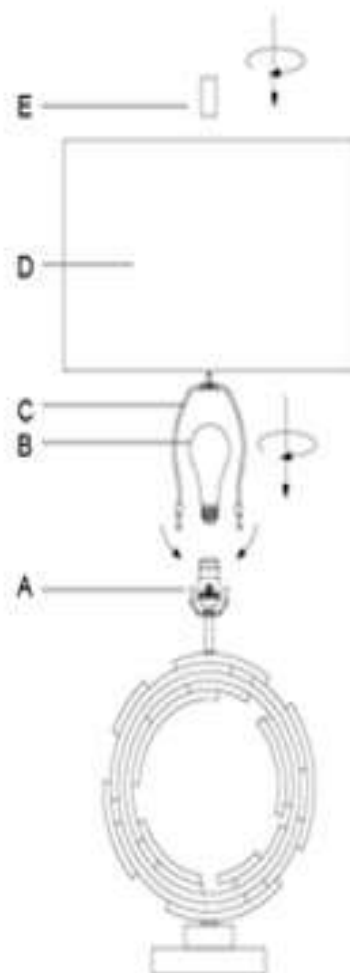

Caution:

1. Use only with maximum of 1*100 watt type A incandescent bulb. Bulbs not included.
2. Only self-ballasted lamps that are suitable for use with lamp dimmers shall be used when replacing lamps.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.