

ASSEMBLY INSTRUCTIONS TV Stand

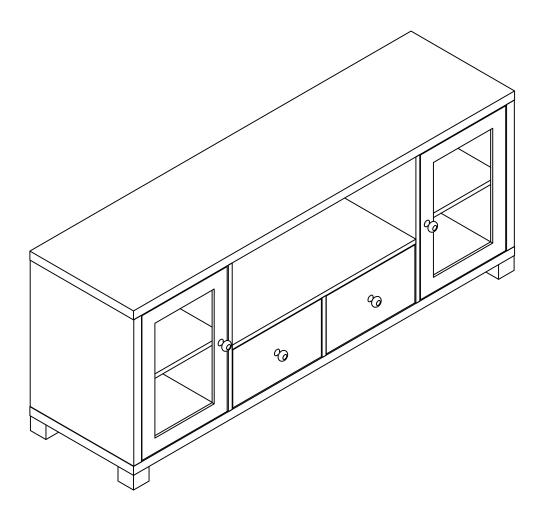

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

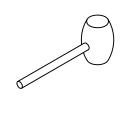








WOODEN DOWEL INSTALLATION PROCEDURE


Gently tap dowel into hole with rubber mallet

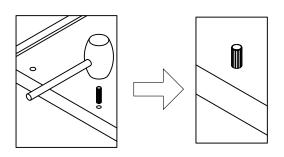


 HIDDEN CONNECTOR.....ASSEMBLY TECHNIQUES




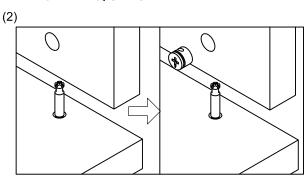

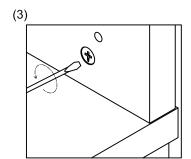

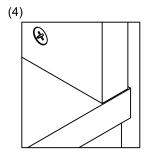

Disassemble the slide rail diagram

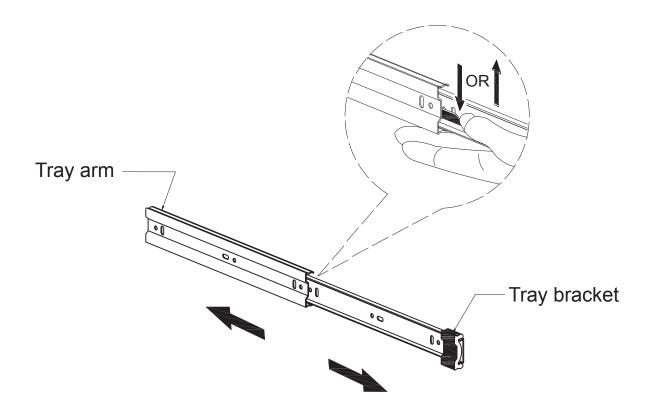

For disassemble drawer tray, by sliding the tray arm and the tray bracket out. Press and tick the small lever on the tray bracket and carefully pull the two piece apart.

PARTS LIST					
A Carton part list					
A:Top panel 1 pc	B:side panel 2 pc	C:Partition 1 pc	D: Fixed Shelf 1 pc		
F.Dettern panei 4 pe	Frahalf 2 na	G:right mid panel 1 pc	Hiloft mid papal 1 pa		
E:Bottom panei 1 pc	F: shelf 2 pc	Singir ma paner 1 pe	H:left mid panel 1 pc		
I:Mid leg 1 pcs	J:Door 2 pcs	K:Drawer front panel 2 pcs	L:Drawer letf side 2 pcs		
M:Drawer right side 2 pcs	N:Drawer back 2 pcs	O:Drawer bottom 2 pcs	P:Side Back panel 1 pc		
Q:Side Back panel 1 pc	R: up Back panel 1 pcs	S: Lower Back panel 1 pcs	HARDWARE PKG 1 pc IA 1 pc		

PARTS LIST					
A Carton part list					
HARDWARE LIST					
1:Cam lock 32 pcs	2:Cam bolt 32 pcs	3:Wood plug 24 pcs	4:Wood screw 38pcs		
Ø15*11.5	Ø6*35	Ø8*30	(B)		
5.Sticker 24 pcs	6.Touch-up marker 1pcs	7.Full dental screw 1pc	Ø3.0*12 8: Glue tube 3pc		
		M6*30	D(C)		
9:Pull knob 4 pcs	10:Screw 4 pcs	11.Hinge 4pcs	12.Screw 24 pcs		
6	(}				
Ø24*21	Ø4x18	Ø26	Ø4x12		
13:Drawer screw 24 pcs	14.Keyboard tray slider 4pc	15.Keyboard tray slider 4pc	16.Screw 8PC		
Ø3.0*12			<i>√aam</i> (3		
Ø3.0°12		,	Ø4x25		
17:Wood screw 16 pcs	18.Shelf support pin 8pc	19.leg 4pc			
Ø3.0*14	Ø8x5x16				

