 
 





USER GUIDE

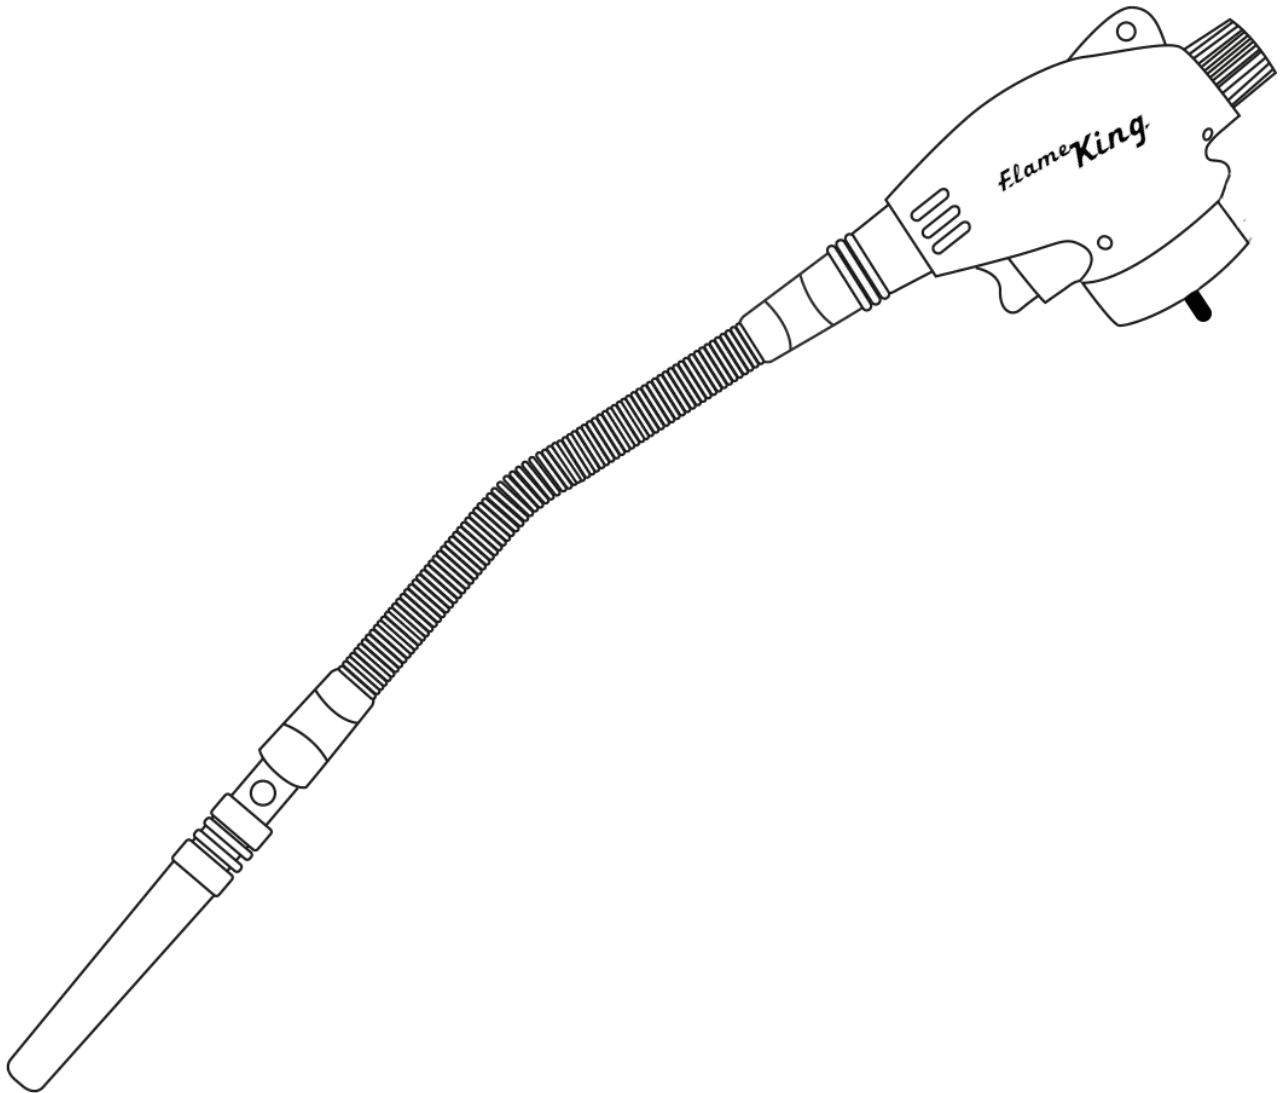


Twist Torch Model: FK-FM-6007CGA

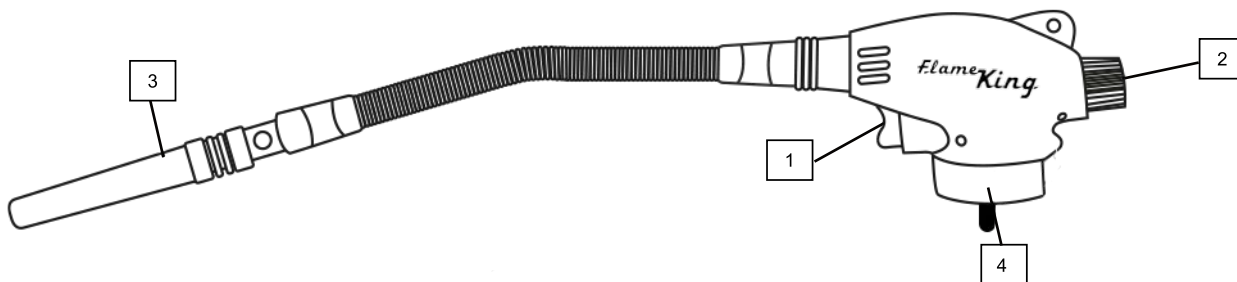

 
- 1.**
Control knob.

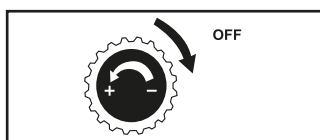


- 2.**
Rotate torch clockwise until secure.

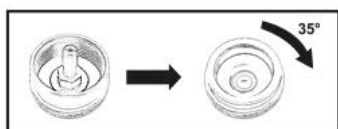

- 3.**
Installation propane cylinder.

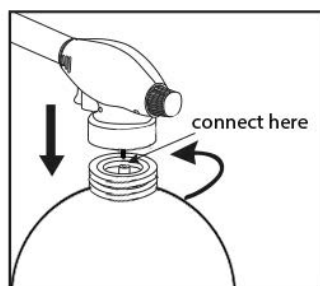

- 4.**
To ignite propane, press a trigger until it clicks.

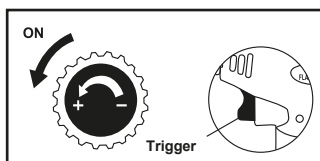

INSTRUCTIONS FOR USE PROPANE TORCH.

1. Turn rear control knob to OFF position "-". (see figure 1)
2. Check the seals before connecting a propane cylinder to the appliance.
3. Change or reconnect the propane cylinder outside away from other people.
4. Be sure to check that no propane leaks. If there is a propane leak on the appliance (smell, hissing), remove immediately and take it into well ventilated place. flame free location. If you wish to check for propane leaks on your appliance, do it in well ventilated place. Do not try to detect propane leaks with a flame, use soapy water.

IGNITION

1. Turn knob slowly in a counter clockwise direction "+" to start propane flowing
2. Repeat to ignite if it fails to light. (see figure 4)

TO SHUT OFF

1. The appliance is now ready for use. Adjust the flame between
2. Be aware of flaring which may occur within two minutes during the warm-up
3. Close propane supply off completely by turning propane control knob to "clockwise" direction.

AFTER USE

1. Check the appliance is clean and dry.
2. Store in a cool, well ventilated place after separating the propane cylinder from the appliance.

CLEANING AND MAINTENANCE

1. Keep clean and free of dust which it may affect performance.
2. Clean with damp towel and mild detergent. Do not submerge in fluids or put in dishwasher.
3. Keep dry after cleaning. Separate appliance from propane cylinder before cleaning.
4. Do not modify this appliance.

