

nickelodeon



pinkfong **BABY SHARK**™

Inflatable Waterslide with Pool

**Instruction
Manual &
Safety Guide**



AGES 3 - 8



WARNING: Read thoroughly and understand the Instruction Manual & Safety Guide before anyone is allowed to enter the inflatable. Failure to follow these instructions could result in serious injury or death.

CAUTION - electrically operated product. Operation of blower not recommended for children under 18 years of age. As with all electronic products, precautions should be observed during handling and use to prevent electric shock.

a product of:
FUNORMOUS
WE INFLATE FUN.



WE INFLATE FUN™

Congratulations on your purchase!


You have made a great decision in choosing FUNormous as your source for high quality inflatable fun. Check out our website to view our newest inflatable collection.

This Instruction Manual is your guide to the safe and successful operation of your inflatable. Please READ THE MANUAL IN DETAIL BEFORE USING YOUR INFLATABLE in order to avoid the risks of accidents and injuries. Be sure to review the contents of this manual in detail with, and provide a copy hereof, to anyone who will be using or supervising children.

Please contact FUNormous Customer service at (877) 710-1777 for any questions that may arise about the inflatable or this manual.

Your Inflatable

3/4 View:

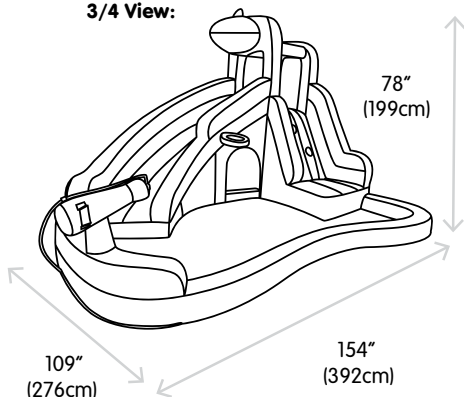

Baby Shark Inflatable Waterslide with Pool

Specifications:


Item Number	504136PS
Net Weight	24.3 lbs. (11 kg)
Gross Weight	41.9 lbs. (19 kg)
Dimensions	140" x 114" x 94" (l x w x h) 356 x 290 x 240cm (l x w x h)
Blowers Required	1 (450w Blower)
Sandbags (Indoor Use)	6 x 50 lbs ea. (23 kg ea.)
Stakes (Outdoor Use)	6
Max Children	3
Child Height (min/max)	24" / 42" (61cm / 107cm)
Max Weight per Child	60 lbs. each (27 kg)
Quantity Per Unit	1 Piece

Description:

This bounce and slide is intended for the amusement of children ages 3-8. The inflatable bounce surface is soft and allows for safe bouncing and sliding. The bounce house also features an inflatable basketball hoop and a ball pit. This product can be used with water or as dry inflatable.

Use this diagram to easily locate the parts of your inflatable.

Top View:

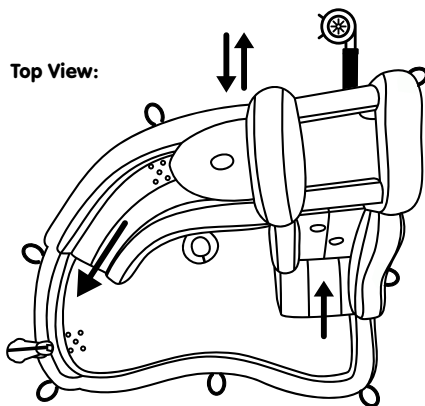


Legend:


Anchor Point	Entrance/Exit	Basketball Hoop
Inflation Tube	Water Sprayer	Blower

What's Included

Baby Shark Inflatable Waterslide with Pool

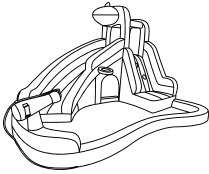

Water Sprayer

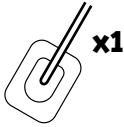


x1

Storage Bag



Blower

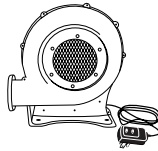

3.8A 450W Blower with GFCI Adapter

Manual



Read thoroughly before operating the inflatable


Blower Stakes

Used to anchor the blower




x4

Repair Kit

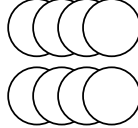

Easily repair minor damages such as tears and holes. (See page 12 for instructions.)

 Stakes for Inflatable



x7

Used to anchor the inflatable

Safety Warnings | Set-up

ADULT SUPERVISION AND SET UP REQUIRED. This inflatable should be inflated or deflated only by a competent adult. Follow all instructions provided.

- ☀ **WARNING!** Falls onto hard surfaces can result in head or other serious injuries. Never place on concrete, asphalt, tiles, packed earth, gravel or other hard surfaces. Carpet over floors may not prevent injury.
- ☀ **WARNING!** Intended for residential family use only. Not for use in public areas or as a rental.
- ☀ **Inflatable is heavy.** Use caution when lifting.
- ☀ **Inflatable should NEVER be dragged across concrete, pavement or other rough surfaces.**
- ☀ **WARNING!** Keep away from fire. Keep fabric clear of all flame and ignition sources.
- ☀ **DO NOT set up in windy or rainy conditions:** sudden gust of wind may lift the inflatable off of the ground.
- ☀ The slide should not face the sun as sunshine can glare the children's eyes when they are sliding down along the slide.
- ☀ **Set-up in outdoor location only that meets the following criteria:**
 - Place on level ground and firm grass or soil to allow proper use of stakes.
 - Placing on slanted or uneven surfaces will cause the inflatable to tip.
 - Minimum clearance zones: Place at least 6.6 ft (2m) in any direction from other objects. Objects to be avoided include but are not limited to: fences, buildings, trees, overhead branches, laundry lines, electrical wires, walls, sources or bodies of water.
- Electrical cord must not be passed under inflatable and interfere with its operation.
- ☀ The inflatable uses an electrical powered blower to maintain pressure which should be turned ON/OFF by an adult only.
- ☀ Only the blower provided should be used for inflation.
- ☀ **DO NOT** use extension cords with this inflatable.
- ☀ **CAUTION:** the blower is capable of moving large volumes of air very quickly. Place the blower in an area where it will not draw in dirt or leaves. Keep blower and power cord away from children, water and foot traffic. The blower should be securely anchored to the ground before use outdoors.
- ☀ **ATTENTION:** Blower should remain on and continuously inflate bouncer during use. Airflow through seams is normal and not a product defect.
- ☀ **Keep power cord away from water.**
- ☀ Do not use the inflatable if wind speed exceeds 15mph or in windy conditions as illustrated below:

WIND SPEED JUDGMENT



- ☀ **Use an anemometer to check wind speed.** A digital anemometer can help in monitoring live wind conditions before setup & during use.

Children Safety Rules

- **BEFORE ENTERING** remove shoes, eyeglasses, jewelry, and loose objects.
- **DO NOT ENTER** unless there is adult supervision.
- **NO** food, gum, drinks, pets, sprays, or sharp objects inside the inflatable.
- **NO** cables, chains, jump ropes, pet leashes, and other items that may cause strangulation.
- **NO** tumbling, flipping, wrestling, chasing, or piling on others.
- **NO** mixing children unevenly matched in weight and height.
- **DO NOT** play near the entrance or exit.
- **DO NOT** jump against, climb, or play near the sides or containment walls.
- **DO NOT** jump onto or off the inflatable.
- **DURING INCLEMENT WEATHER** or if the inflatable begins to deflate, stop playing and exit.
- **FOLLOW** adult instructions and posted safety rules.
- **DO NOT** jump off of the slide.
- **DO NOT** stand on the top of the slide, on the slide rails, or on the slide itself.
- **DO NOT** grab or hang on to the arch while sliding, doing so will damage or tear the arch and will cause injury.
- To avoid serious injury, the sliding path and landing area must be clear of all obstacles and other users before sliding.
- Climb up the climbing wall of the slide and sit at the top of the slide with your feet pointing down the slide.
- Scoot forward and slide down the slide feet first.
- Only slide down feet first and never slide down head first to avoid the risk of a serious injury or death.
- Children are required to slide down with both hands on their laps and feet together when sliding down.



WARNING: THIS INFLATABLE IS AN AMUSEMENT DEVICE. WITH ALL AMUSEMENT DEVICES, THERE ARE INHERENT RISKS. FAILURE TO FOLLOW THESE WARNINGS WILL RESULT IN INJURIES OR DEATH!

Safety Warnings

- **ADULT SUPERVISION** of children is required at all times.
- **MAINTAIN CLEANLINESS** inside and around the inflatable. Make sure inflatable is clear of objects that may cause accidents and/or injuries.
- **CHECK FOR AIR LOSS** before and during use. Make sure the blower is properly connected. Air loss through seams is normal.
- **PERFORM A MAINTENANCE CHECK** before and after use of inflatable. *See Page 11*
- **CHECK THE INFLATABLE AND ALL ITS ANCHOR POINTS** before and during use, and to re-secure as appropriate.
- **DO NOT ALLOW CHILDREN TO ENTER THE INFLATABLE UNTIL IT IS FULLY INFLATED AND ANCHORED.**
- **PREVENT DROWNING.** Children are at high risk of drowning. Closely monitor children in or near inflatable.
- **NO DIVING.** Shallow water, diving into shallow water can result in serious injury or death.
- **THE BLOWER SHOULD RUN CONTINUOUSLY** after inflation, while children are playing.
- **TOTAL WEIGHT OF EACH CHILD** must not exceed 60 lbs. (27 kg)
- **NO MORE THAN 3 CHILDREN SHOULD PLAY ON THE INFLATABLE AT THE SAME TIME.**
- **PRIOR TO DEFLATING**, make sure all children exit the inflatable.
- **ALWAYS DEFLATE INFLATABLE AFTER USE AND STORE INDOORS.**

Safety Warnings: Electrical Blower



DANGER

CAUTION: ELECTRICALLY OPERATED PRODUCT



WARNING:

FAILURE TO FOLLOW THESE INSTRUCTIONS WILL RESULT IN SERIOUS INJURY OR DEATH. ADULT SET-UP AND SUPERVISION REQUIRED.



DANGER - TO PREVENT ELECTRIC SHOCK, DO NOT IMMERSE IN WATER.



CAUTION: The blower is a high volume blower, and is capable of moving lots of air very quickly. Place the blower in an area where it will not suck in dirt or leaves. Keep away from water and foot traffic. Keep children away from the blower. Only the blower provided should be used for inflation.

Safety Warnings: Electrical Blower

INSTRUCTIONS FOR BLOWER INSTALLATION

NOTE: Set up as close to power source as possible.

The blower should be periodically examined for potentially unsafe conditions such as: damaged cord, plug, housing or parts, and that in the event such damage is found, the blower should not be used until properly repaired.

Never leave the blower outside in the rain or exposed to the elements when not in use.

When in use, do not place the cord across traffic areas, water or damp areas.

The blower should be placed on a stable surface and anchored per product instructions.

The power cord of the blower is equipped with a Ground Faulty Circuit Interrupter (GFCI) adapter.



WARNING: FAILURE TO FOLLOW THESE WARNINGS WILL RESULT IN INJURIES OR DEATH!

- Cautionary statements should be read before beginning assembly.
- ADULT SET-UP AND SUPERVISION REQUIRED.
- Only use included blower which has a GFCI adapter.
- This blower is for residential use only. It is not intended to be used in commercial or industrial settings.
- Never insert fingers, pencils or any other object through the grill at ANY time.
- Do not operate blower with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not operate in the presence of explosive and/or flammable fumes.
- To reduce the risk of electric shock, do not use this blower with any solid-state speed control device. Never connect the blower to any solid-state speed control device.
- Always unplug the blower before servicing.



WARNING: FOLLOW ANCHORING INSTRUCTIONS

User must read and follow anchoring instructions to ensure the proper number of anchors used, soil conditions, and stake installation.




WARNING: ELECTROCUTION HAZARD

DO NOT USE EXTENSION CORDS WITH THIS BLOWER.



CAUTION: USE ONLY ON GFCI PROTECTED RECEPTACLES GROUNDING INSTRUCTIONS FOR ALL GROUNDED, CORD-CONNECTED BLOWERS

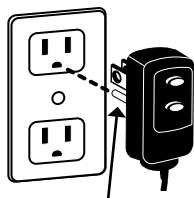

**Grounding
Pin**

This blower should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric circuit. This blower is equipped with a cord having a grounding wire with an appropriate grounding plug. This plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances. DANGER - Improper installation of the grounding plug can result in a risk of electric shock. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either blade terminals. The wire with insulation having

an outer surface that is green, with or without yellow stripes, is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the blower is properly grounded. Do not modify the plug provided; if it will not fit the outlet, have the proper outlet installed by a qualified electrician. For a grounded, cord-connected blower, rated less than 15 amperes and intended for use on a nominal 110-120-volt supply circuit, these instructions should be followed. This blower is for use on a nominal 110-120-volt supply circuit, and has a grounding plug that looks like the plug illustrated. Temporary adapters should not be used. Do not use blower until a properly grounded outlet can be installed by a qualified electrician.


Step #1

Select a Suitable Location

1 Minimum Clearance Zones


Choose a flat and non-abrasive area that has adequate space for the inflatable to fit comfortably allowing for **6 ft. (1.8 m) clearance on all sides**. See page 1 for the inflated dimensions of your inflatable.

TOP VIEW

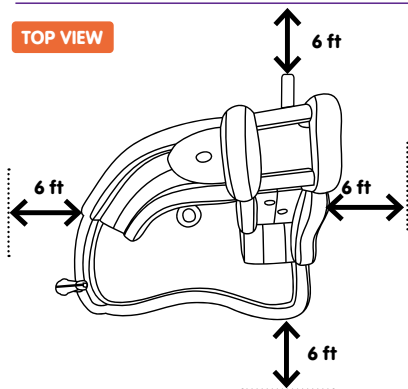


FRONT VIEW

OUTDOOR SETUP

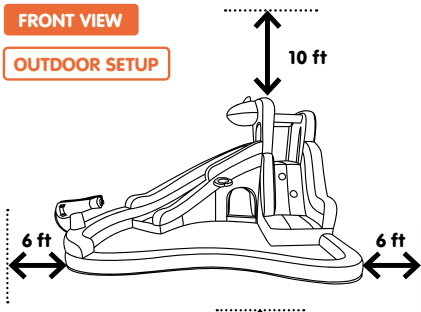


INDOOR SETUP

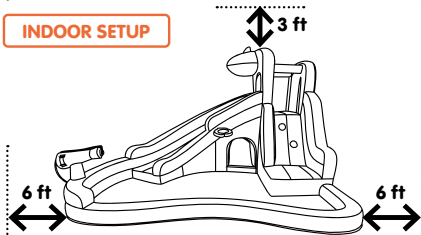

WARNING: The inflatable should never be setup or operated during inclement weather or if the winds exceed 15 mph (24 km/h), since serious injury, death, and damage will result. Never setup and operate during rain or snow conditions. It is always wise to check your local weather forecast before installation.


2 Preferred Indoor Locations

Carpeted or hardwood floor

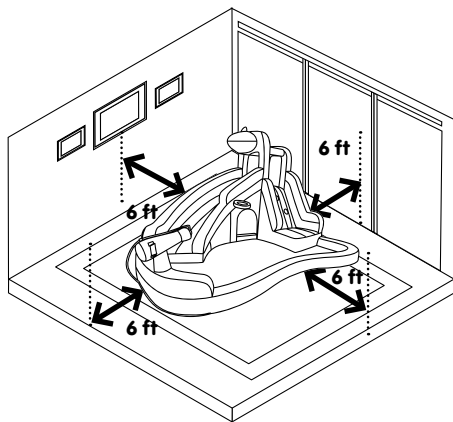

3 Preferred Outdoor Locations

Flat grassy surface which has well compacted soil and trees or buildings nearby which can provide shade.

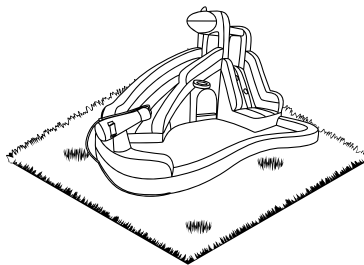

Make sure that the area is clear of all protrusions and sharp objects that may damage the inflatable.

Bystanders should be at a safe distance during setup.




WARNING: Check for overhead obstructions such as utility lines before setup. Keep in mind that the inflatable might move during use, and proper clearance should be maintained at all times. Make sure there are no utility lines within 10 ft. (3 m) of the inflatable.


Step #2

Set-up


- 1 Remove inflatable from storage bag.

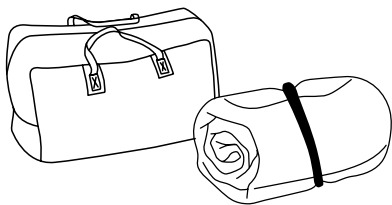

- 2 Unroll the inflatable.

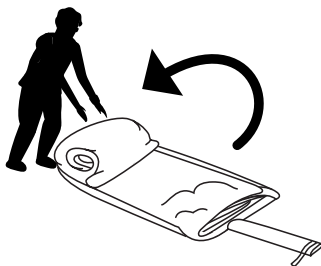

- 3 Unfold the inflatable until it is completely flat.

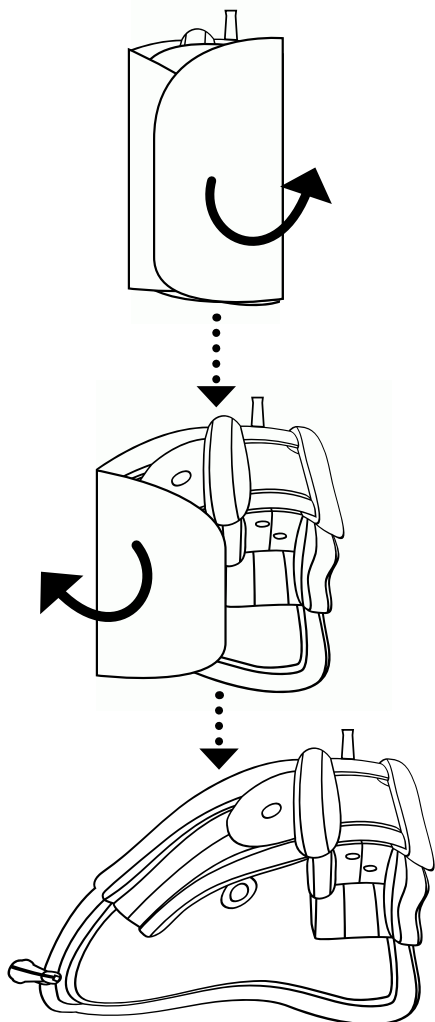

TIP

Take note of how the inflatable is folded as this will minimize guess work during teardown.



NOTICE

DO NOT drag the inflatable across the ground and other rough surfaces

Always have sufficient personnel and equipment to move the inflatable clear off the ground to the setup location.


Never leave the inflatable unattended, whether inflated or deflated.

Step #3

Connect the Blower

1 Position the blower

This inflatable requires one blower. Position the blower so that the inflation tube is straight and at a 90° angle to the inflatable allowing for ease of airflow.

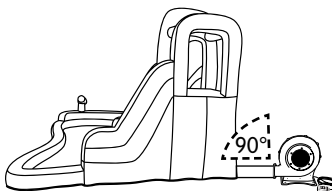


CAUTION

Read the blower's manual completely before using.

DO NOT SWITCH POWER ON YET


2 Attach inflation tube

Attach **inflation tube** to blower. Make sure the tube is not twisted. Tie the drawstring to tightly secure the inflation tube.

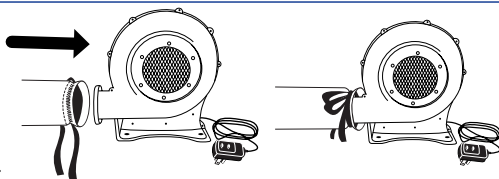

3 Test the blower GFCI Adapter


1. Plug GFCI into receptacle.
2. Press reset button.
3. Press test button.
4. Press reset button to use the blower.
5. Do not use if the button fails to disable blower.

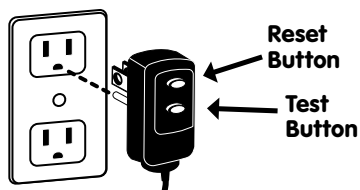

Step #4

Inflation

1

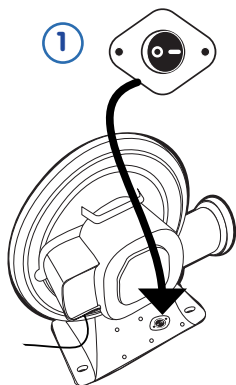

Switch the blower's power on.

 
It may take anywhere from 5 to 10 minutes to fully inflate.

If blower does not operate when switched ON, press the reset button on the GFCI adapter.



CAUTION: DO NOT allow children to play in the inflatable until it is fully inflated and anchored to the ground.

2



Blower should remain on and continuously inflate the bouncer during use. Airflow through seams is normal.



WARNING: DO NOT USE THE BLOWER if the power remains ON when the test button is pushed. If unit is NOT working properly, take the blower to a certified electrician immediately.


Step #5

Anchoring

Anchoring Indoors

Use **sandbags** (sold separately) as anchors when using the inflatable indoors.

- 1 Check page 1 for correct sandbag weight and anchor location for your inflatable.
- 2 Use tethers to securely tie sandbags to anchor loops.

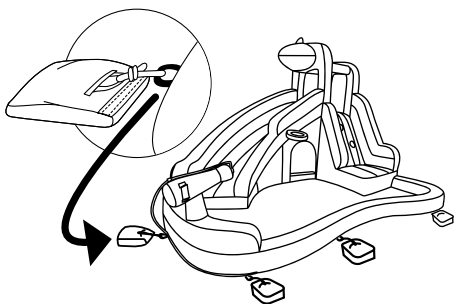


Anchoring the Blower

Outdoors


Secure the blower to the ground with the provided stakes.

Make sure the blower air intake is clear of leaves or any debris during use.

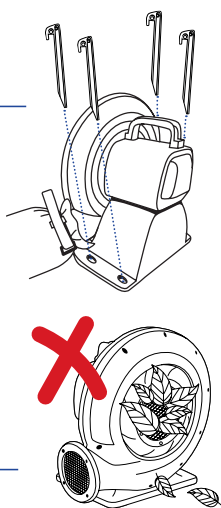

Indoors

Use cones around the blower area to mark it as a No Play Zone.

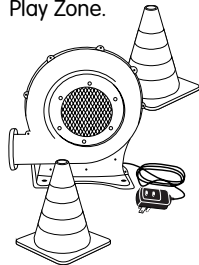


WARNING: When used indoors, regularly monitor blower to prevent from moving and possibly tipping over. This can affect the result of the blower performance and create a safety hazard. Failure to follow will result in injuries or death.


Anchoring Outdoors

Use the provided **stakes** to secure the inflatable to the ground. Follow these easy steps:

- 1 Tightly pull the stake loops away from the inflatable.
- 2 Gently use a hammer to drive stakes completely into the ground.

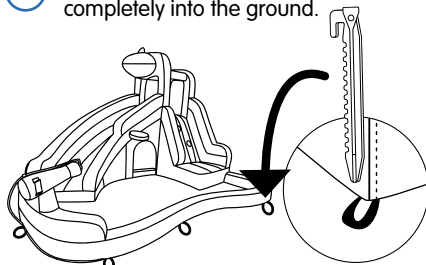


Correct **Incorrect**

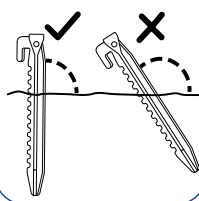

Make sure to anchor stakes at a 90° angle.

ANCHORING REQUIREMENTS: This inflatable has several anchoring locations which must ALL be anchored and tethered whenever children are using this inflatable, including both indoor and outdoor installation. See illustration below for anchor locations.

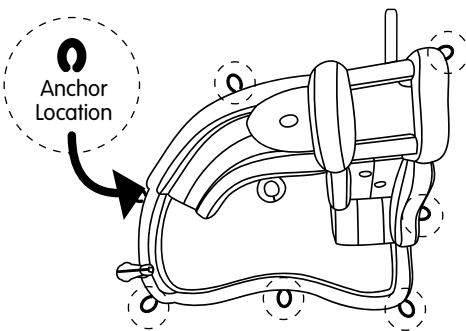


CAUTION: Check with local utility companies for locations of any water pipes, gas pipes, sewer pipes, and other underground materials before pounding stakes into the ground.


Step #6

Connect the Water Sprayer


- 1 Install Water Sprayer by locating white fasteners on inflatable. Follow diagram below for correct location of Water Sprayer.

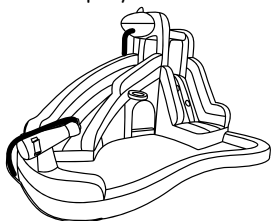

- 2 Locate the end of the Water Sprayer that should be positioned by bottom of slide.

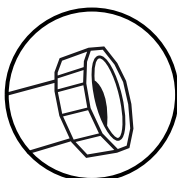

- 3 Attach the screw cap on the hose assembly to your garden hose.

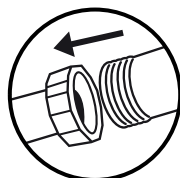

- 4 Turn on the water slowly. It may take a few moments until water begins to spray.

- 5 Adjust the water pressure so that the water sprays on the sliding surface of the inflatable, keeping the inflatable wet.


Step #7

Teardown


WARNING:

Never store the inflatable when wet. Allow to thoroughly dry before rolling up. Inflatable must be stored dry, or mold will develop and cause irreparable damage to material. Move the product every day to prevent browning or damage to the lawn. Follow all previous instructions each time you set up the product.

- 1 Ensure everyone has exited the inflatable before teardown.

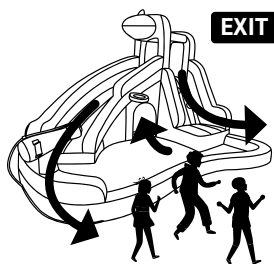


- 2 Inspect inside the inflatable and ensure to remove items that may have been left behind.

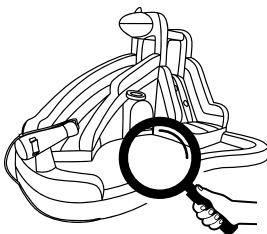


- 3 It's recommended to perform maintenance again before beginning teardown. Review checklist provided in this manual.



- 4 Before turning the power off, confirm all children and bystanders are clear of the no-walk perimeter.

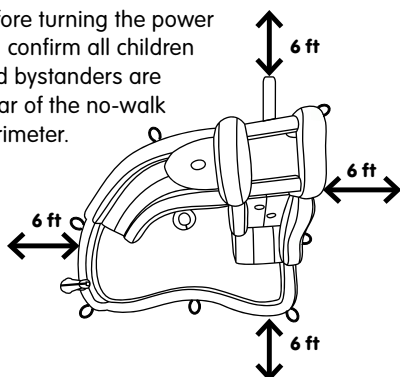


- 5 Switch off the blower and remove the blower from the inflation tube. Untie the deflation tube and unplug the blower power cord.

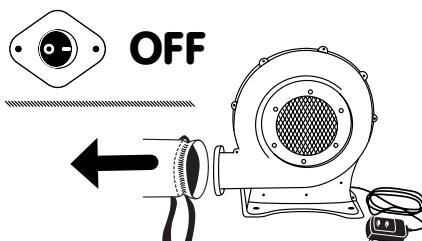


- 6 It takes 5 to 10 minutes for the inflatable to fully deflate. Make sure the inflatable deflates onto itself so the weight is equally distributed.

5-10
mins

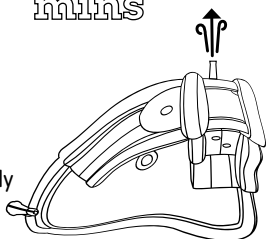


- 7 Unfasten the tethers and pull all the anchors out.

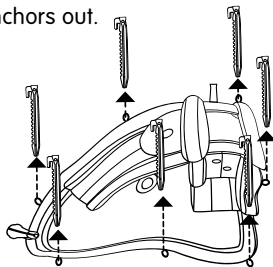

Follow the instructions for folding and storage.


Step #8 Fold Your Inflatable

- 1 Fold the opposing sides inward, making sure the inflation tube is not being folded as well.

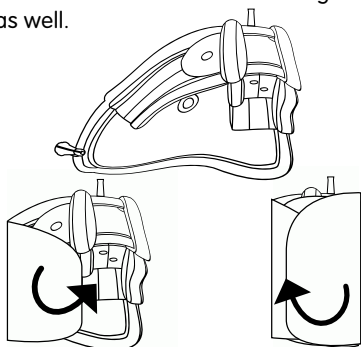


- 2 Step on the folded inflatable opposite the inflation tubes. Begin stomping out the air.


Fold in half and continue to push air out until it is completely deflated.

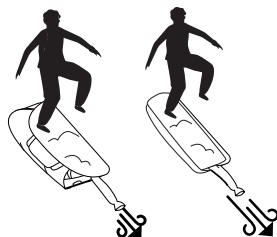

- 3 Roll the inflatable towards the inflation tubes. One person can roll as a helper continues to stomp air out.

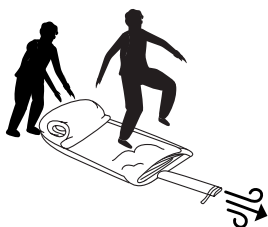

- 4 Tie rolled up inflatable with straps and insert into storage bag.

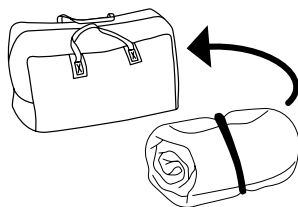

Step #9 Properly Store Your Inflatable



50 - 90°F
10 - 33°C



Proper storage is key to protecting your inflatable.

- Store your inflatable in a enclosed location free of rain and extreme heat.
- Ideal indoor temperature should be between 50 to 90°F (10 to 33°C).
- Ensure your storage area is free of rodents as they can chew on the fabric and damage your inflatable.
- Storing your inflatable wet will cause mildew and void warranty. Always thoroughly dry before storing.

Inflatable Maintenance

- **Inspect for signs of fabric failure; weak or torn surfaces must be repaired promptly.**
As an outdoor inflatable, the inflatable is subject to wear and deterioration.
- **To keep the inflatable clean:** wipe the inflatable or blower using a dry cloth or a cloth dampened with a neutral, non-flammable, non-toxic cleaning and sanitizing solution or pure water.
- **The inflatable should be periodically examined for potentially unsafe conditions** such as: damaged cord, plug, housing, or parts, and that in the event such damage is found, the inflatable should not be used until properly repaired. Never leave the blower outside in the rain or elements when not in use. Minor repairs can be made using the enclosed repair patches.

Blower Maintenance


- Blower must be unplugged before servicing.
- Inflatable should be periodically examined for potentially unsafe conditions such as damaged cord, plug, housing, or parts, and that in the event such damage is found, the inflatable should not be used until properly repaired. If these checks are not carried out, the inflatable could overturn or otherwise become a hazard.
- The blower does not require any lubrication and has no user serviceable parts. Do not attempt to service the blower.
- Do not immerse the blower in water. To clean, wipe with a damp cloth. Unplug before cleaning.
- Regularly check the intake and output openings and keep free of dirt, leaves, etc.
- When not in use, store the blower indoors in a dry place.
- Store the blower upright on a stable surface.
- Loosely coil the cord and place it beside the blower.
- When in use, do not place the cord across traffic areas, water, or damp areas.
- The blower is a high volume blower, and is capable of moving large volumes of air very quickly. Place the blower in an area where it will not draw in dirt or leaves.
- Do not operate the blower with a damaged cord or plug. Discard blower or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rug, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Discard blower or return to an authorized service facility for examination and/or repair

Cleaning the Inflatable

Keep your inflatable looking and performing like new by cleaning it thoroughly. If inflatable is wet, DO NOT store away, as this will cause mold and mildew and permanently damage the fabric. Make sure to thoroughly dry wet inflatable within three days. Follow the steps below:

1

Clean inside debris/trash with a shop vacuum.

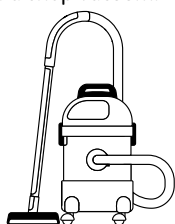

2


Clean inside and outside using damp rag.

If inflatable has stains, use cleaning solution.



3

Disinfect the inflatable after every use.

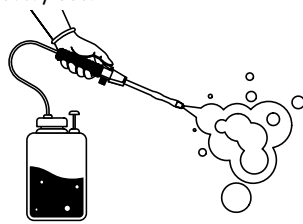


Repair Kit Instructions

Small cuts and tears on your inflatable can be patched using the repair kit provided.


Follow the steps below.

WARNING:
NOT A TOY. ADULT USE ONLY.
Keep away from children.

- ① Deflate the inflatable.

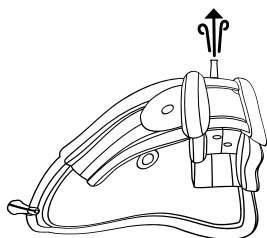


- ② Get the repair kit, a *sewing needle, and thread.

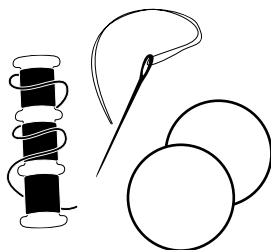


*Thread and needle not provided in kit


- ③ Get a patch that matches the color of the area that needs to be repaired.

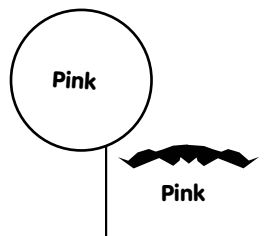

- ④ Position the patch over the damaged area.

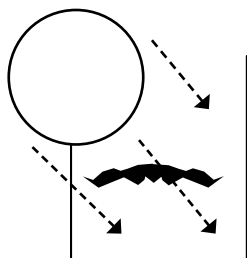

- ⑤ Using a needle and thread, sew the patch onto the inflatable.

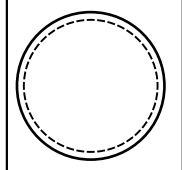

Note:

- Be sure not to leave any needles on the product after sewing.
- It's not suggested to patch the same repair more than twice.

Disposal




DISPOSAL OF INFLATABLE:

We recommend finding a recycling facility that will accept PVC. If no facility is available to you, dismantle and dispose of the inflatable in a way that no hazardous conditions exist at the time you do so.



DISPOSAL OF BLOWER:

Take the blower to a collection facility capable of processing electrical/electronic waste.

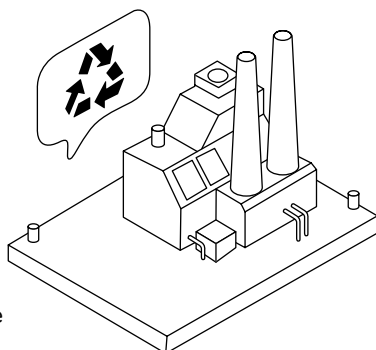

Troubleshooting

The chart below provides some of the common problems that occur with the operation of the inflatable. In most cases a problem can easily be solved by a supervising adult.

Common Problems	Possible Cause	Solution
Inflatable deflates or loses pressure	Insufficient power supply	Check power outlet, circuit breakers or electrical source.
	Inflation tube connected to blower	If kinked, entangled, or loose: adjust and tighten.
	Blower air intake blocked	Clear all debris from blower intake. Ensure nothing is blocking blower air intake.
	Blower device malfunction	Check blower manual for solution or possibly replace.
	Damage to inflatable	Remove all children and deflate inflatable. Minor repairs can be done on location. Major repairs must be performed by repair center.
Inflatable moves from setup location	Tethers have become loose	Remove all children and adjust tethers.
	Damaged anchor points, tethers, stakes or sandbags	Remove all children. Repair or replace damaged equipment.

If you are not able to solve a problem call FUNormous Customer Service at (877) 710-1777. Be prepared with the following information:

1. The inflatable serial number and model.
2. The owners manual.
3. All calls should be made by the same person to avoid confusion. Be sure to get the name of the person to whom he/she is speaking to at FUNormous. All calls should then be directed to that person.
4. Provide a phone number where you can be reached.
5. The person calling the factory must be familiar with the problem and be able to describe the problems of the inflatable. (i.e.; Was the problem gradual? Are there any noises occurring that are not normal? Was it a one time problem, or does it occur regularly?)

Many times the problem that completely stops an inflatable from working is one of the many simple things that are forgotten or overlooked. It can save several phone calls or a more expensive repair, as well as valuable time to double check everything.

Emergency Procedures

Emergencies can arise for various reasons. It is important that an adult be trained to implement emergency procedures should the need arise.

The following are examples of emergencies and how they can be handled.



WEATHER:

Inclement weather can be rain, lightning, or strong wind which makes usage unsafe for children. In each case an adult should evacuate the inflatable as quickly and safely as possible. After everyone has exited the inflatable, the supervising adult must follow the procedures for shutting down the inflatable.



LOSS OF ELECTRIC POWER:

When a loss of power occurs, the inflatable will slowly start to deflate. The adult will have to assist children to quickly and safely exit the inflatable. The supervising adult should be notified to check the problem. Do not leave the inflatable unattended. When the problem is corrected, inspection and maintenance should be performed before the inflatable is put back in service.



INJURIES:

If the injury is minor, a supervising adult can assist the injured child to exit the inflatable and the parent or guardian can give needed assistance. If a major injury has occurred, the adult should evacuate children from inflatable and assist the injured child out of the inflatable. The supervising adult should contact appropriate first aid personnel or emergency. The supervising adult should assist in crowd control to make way for emergency personnel and vehicles.



DAMAGE TO INFLATABLE:

Should the inflatable receive damages during use, the supervising adult should immediately evacuate the children. The inflatable should not be operated until the damage can be assessed and repaired. When the problem is corrected, inspection and maintenance should be performed before the inflatable is put back in service.

pinkfong
BABY SHARK™
Inflatable Waterslide
with Pool



© The Pinkfong Company. © 2024 Viacom.

FUNORMOUS™
WE INFLATE FUN™

FUNormous.com • (877) 710-1777

© 2023 FUNormous, All Rights Reserved.

All content included in this manual, such as text, graphics, product design, icons, images and trademarks, is the exclusive property of FUNormous and protected by U.S. and international copyright laws. Any use, including the reproduction, modification, distribution, transmission, republication, display or performance, of the content in this manual is strictly prohibited, except with the express written permission of FUNormous.

FUNormous® is a registered trademark of Magic Jump, Inc.® in the U.S. and other countries.

Printed in China