 
 



# ASSEMBLY INSTRUCTION

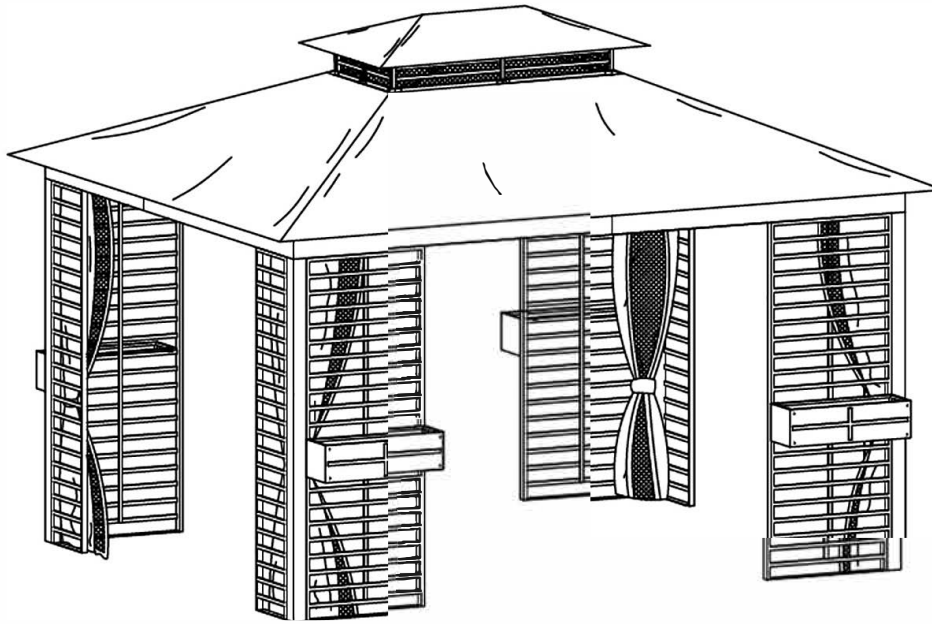

PACKAGE CONTENTS

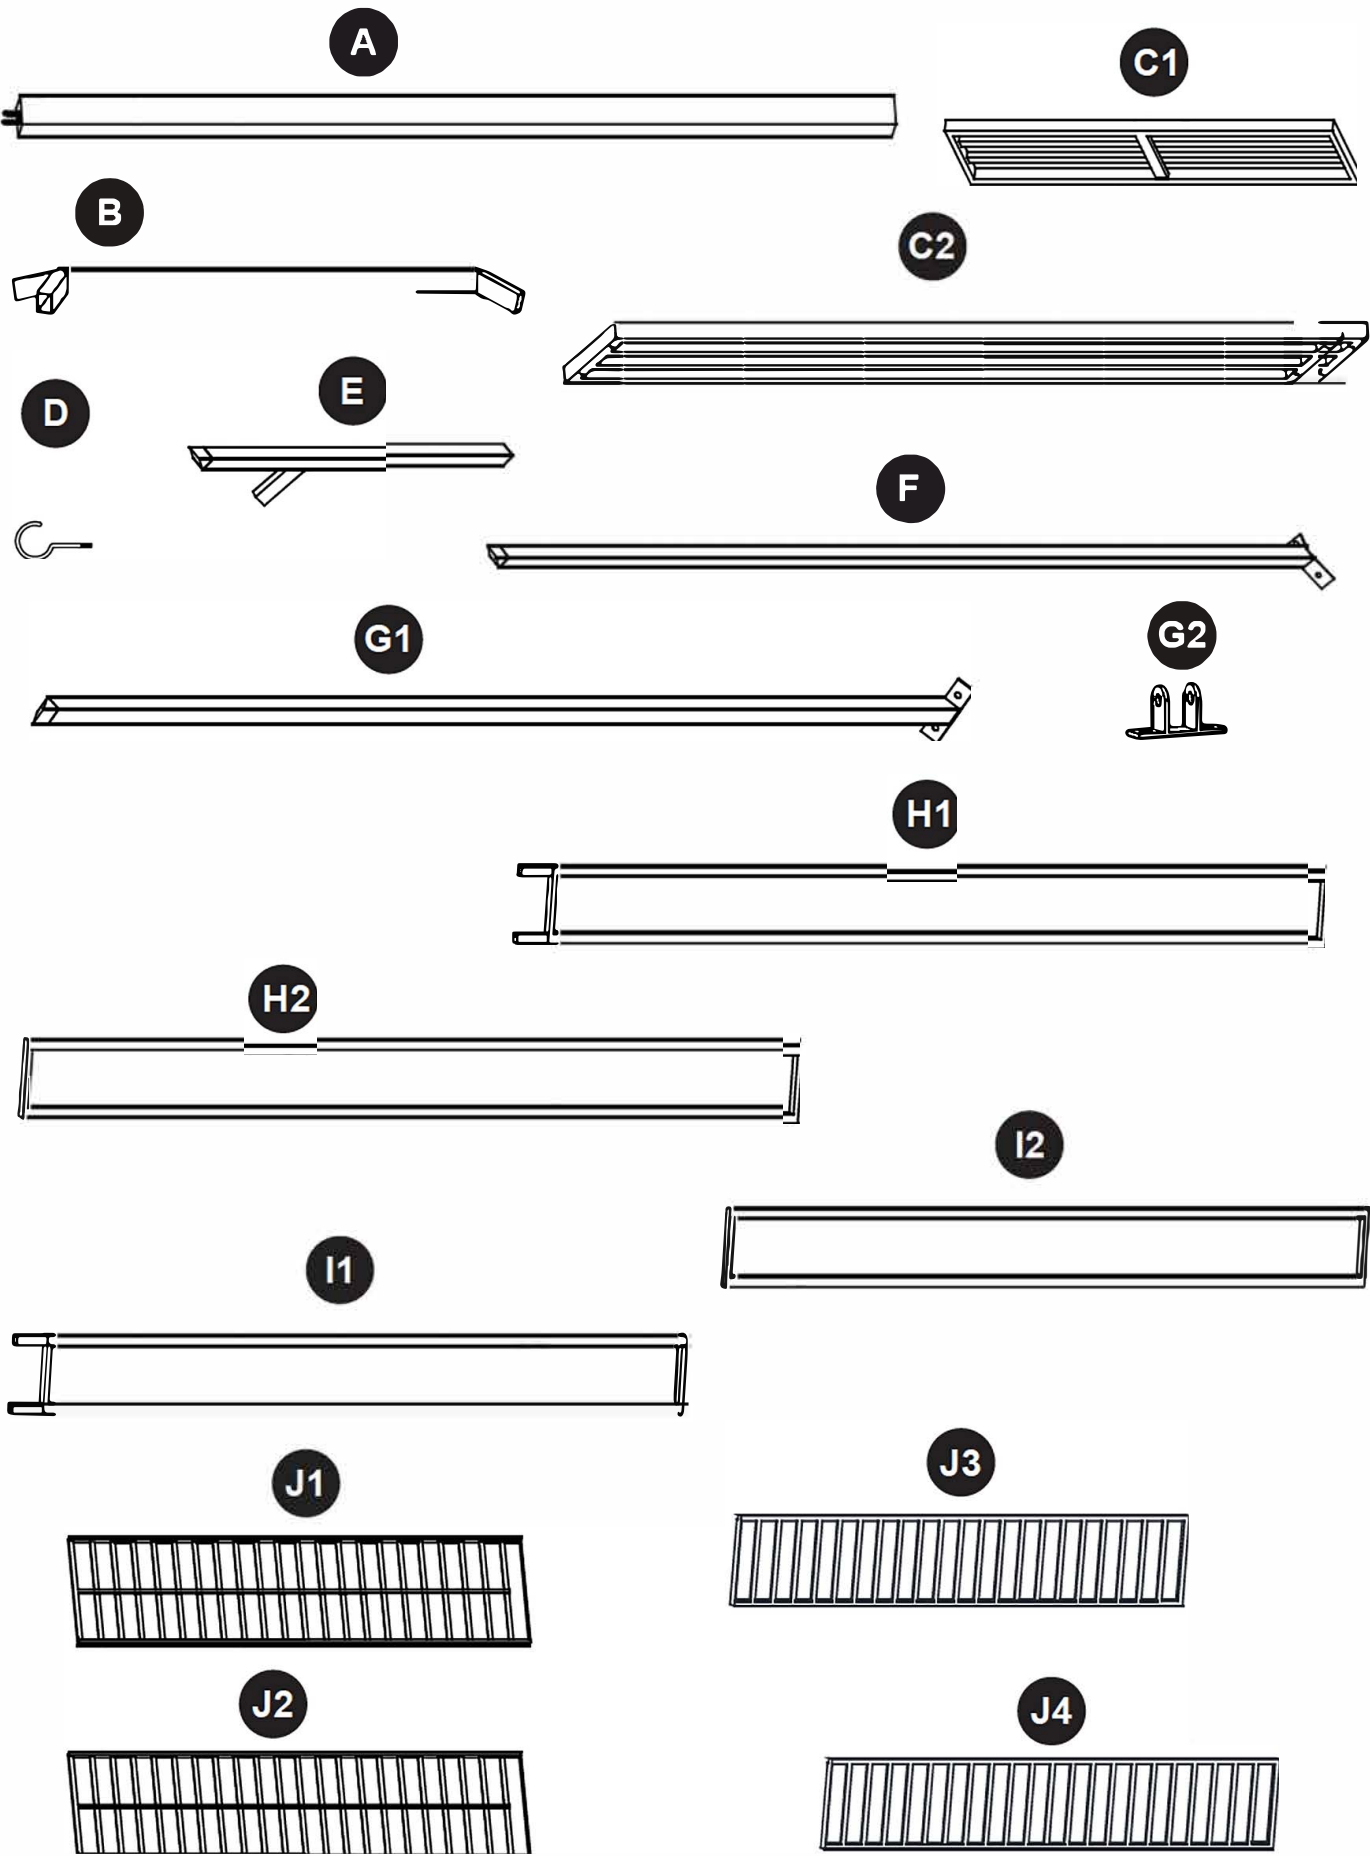
 
## PACKAGE CONTENTS

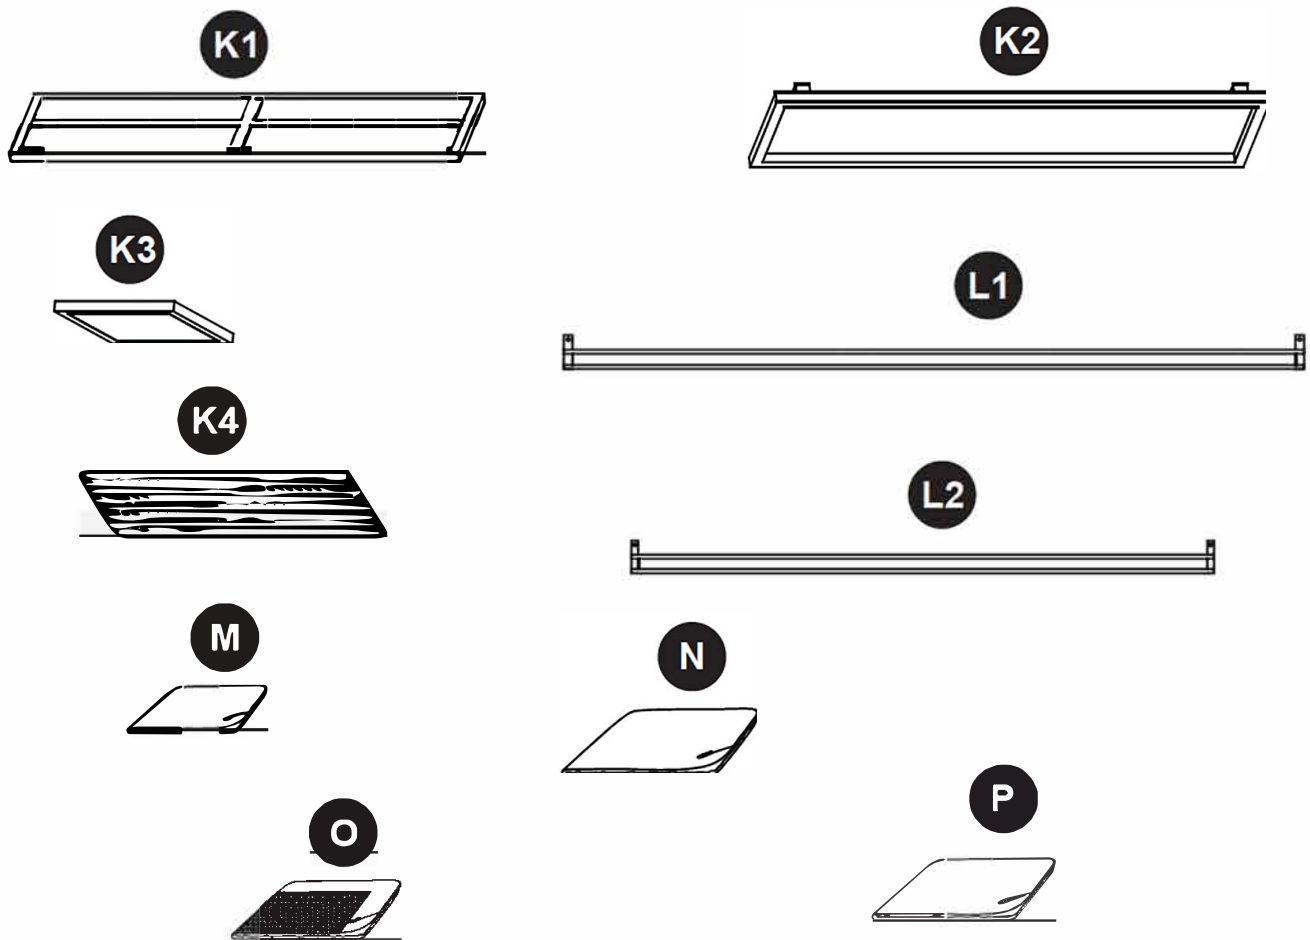

PART	DESCRIPTION	QUANTITY
A	Post	4
B	Small Top Connector	1
C1	Top Frame Short Panel	2
C2	Top Frame Long Panel	2
D	Hook	1
E	Small Roof Beam	4
F	Big Roof Sloped Beam	4
G1	Big Roof Middle Beam	4
G2	Middle Beam Connector	4
H1	Long-Side Long Screen	2
H2	Long-Side Short Screen	2
I1	Short-Side Long Screen	2
I2	Short-Side Short Screen	2
J1	Big Vertical Screen 1	2

PART	DESCRIPTION	QUANTITY
J2	Big Vertical Screen 2	2
J3	Small Vertical Screen 1	2
J4	Small Vertical Screen 2	2
K1	Flower Basket Panel	4
K2	Flower Basket Rear Panel	4
K3	Flower Basket Side Panel	8
K4	Flower Basket Inner Panel	4
L1	Long Netting Tube	4
L2	Short Netting Tube	4
M	Small Canopy	1
N	Large Canopy	1
O	Mosquito Net	1
P	Curtain	1

## HARDWARE CONTENTS

---

**AA**



M6 x 15 Bolt

QTY: 40 + 2 spare

**BB**



M6 Big Flat Washer

QTY: 132 + 7 spare

 
**CC**



M6 Spring Washer

QTY: 60 + 3 spare

**DD**



M6 x 25 Bolt

QTY: 24 + 2 spare

**EE**



M6 x 35 Bolt

QTY: 44 + 3 spare

**FF**



M6 Nut

QTY: 16 + 1 spare

**GG**



M6 x 30 Bolt

QTY: 8 + 1 spare

**HH**



Ring

QTY: 104 + 6 spare

**II**



Ø6 x 230 Stake

QTY: 12

 
**Z**



M6 Wrench

QTY: 2

**KK**



M6 x 25 Bolt

QTY: 32 + 2 spare

**Z1**



M6 Allen Key

QTY: 1

## Important Safety Instructions



**Warning!** To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.

Please check with your local governing authority/local municipal codes regarding installation of structures before assembly.

**Caution!** Proper placement of your gazebo is essential.

Do not place the product underneath electrical lines.

Keep children away during assembly.

 
This product contains small parts which can be swallowed by children.

Keep fingers away from the places where they can be pinched or trapped. Do not attempt to assemble the gazebo if any parts are missing.

- This product is intended for domestic outdoor use only.
- The product should be placed on flat, horizontal ground.
- Ensure enough clearance around the product. Before assembling the product, find level ground not less than 6' (1.8 m) away from any structures or obstructions, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- This gazebo is not to be regarded as part of a building/house structure. The gazebo is to be anchored onto the ground for added safety. Do not assemble the gazebo onto soil/earth ground. It is best advisable to have the gazebo built onto a wooden deck or concrete ground for stability. If it is to be build onto a wooden deck/ground, do ensure that the wooden deck/ground has a strong foundation. It is advisable to use appropriate floor plugs (not provided) to anchor the gazebo onto the wooden/concrete ground.
- Some structures may require two or more people to install safely. Check for underground utilities before digging or driving stakes into the ground.
- During installation, follow all safety warnings provided with your tools, and use safety glasses.
- In case you set up more than one gazebo, keep a minimum distance of 10' (3 m) between the gazebos.
- Any assembly or maintenance of the product must be carried out by adults only.
- Arrange necessary manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Keep children and pets away while setting up the gazebo.
- Check all nuts and bolts periodically to ensure bolts/nuts are tightened.
- Repairing and replacing parts should be done by a qualified technician.
- This gazebo is intended for decorative and sunshade purposes only, and it is not designed to withstand harsh weather, including high winds, rain, and snow.
- Do not light any fires inside or near the product!
- Stay calm if fire breaks out. Search for the nearest exit. Do not return to the gazebo before firemen allow you to do so.
- Do not hang heavy weights on the roof frame.
- Do not climb onto the roof of the gazebo. Falling off the gazebo can result in serious injury.
- Retain the original packaging to store the gazebo.

**IMPORTANT:**


- Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list.
- If any part is missing, or if you have any questions, contact the service centre at
- When assembling wooden parts, do not overtorque the bolts to avoid splitting the wood. See image illustration.
- Place all parts from the box in a cleared area and position them on the floor in front of you.
- Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete.
- Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance
- Needed for assembly: (The following tools are not included)

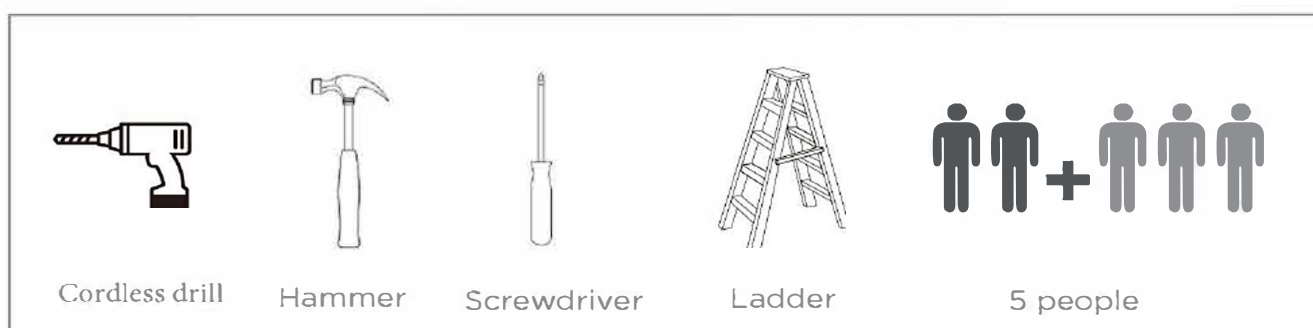


This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.

**Use Level**

 Check that set or assembly is properly level before proceeding.

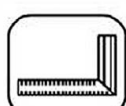**Square Assembly**

 
Check that assembly is square before tightening bolts.

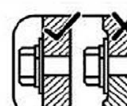**Tighten Bolts**


Do not overtighten mounting bolts. Over tightening may cause the wood to crack creating splinters and other structural damage.

**Measure Distance**
 
# ASSEMBLY INSTRUCTIONS

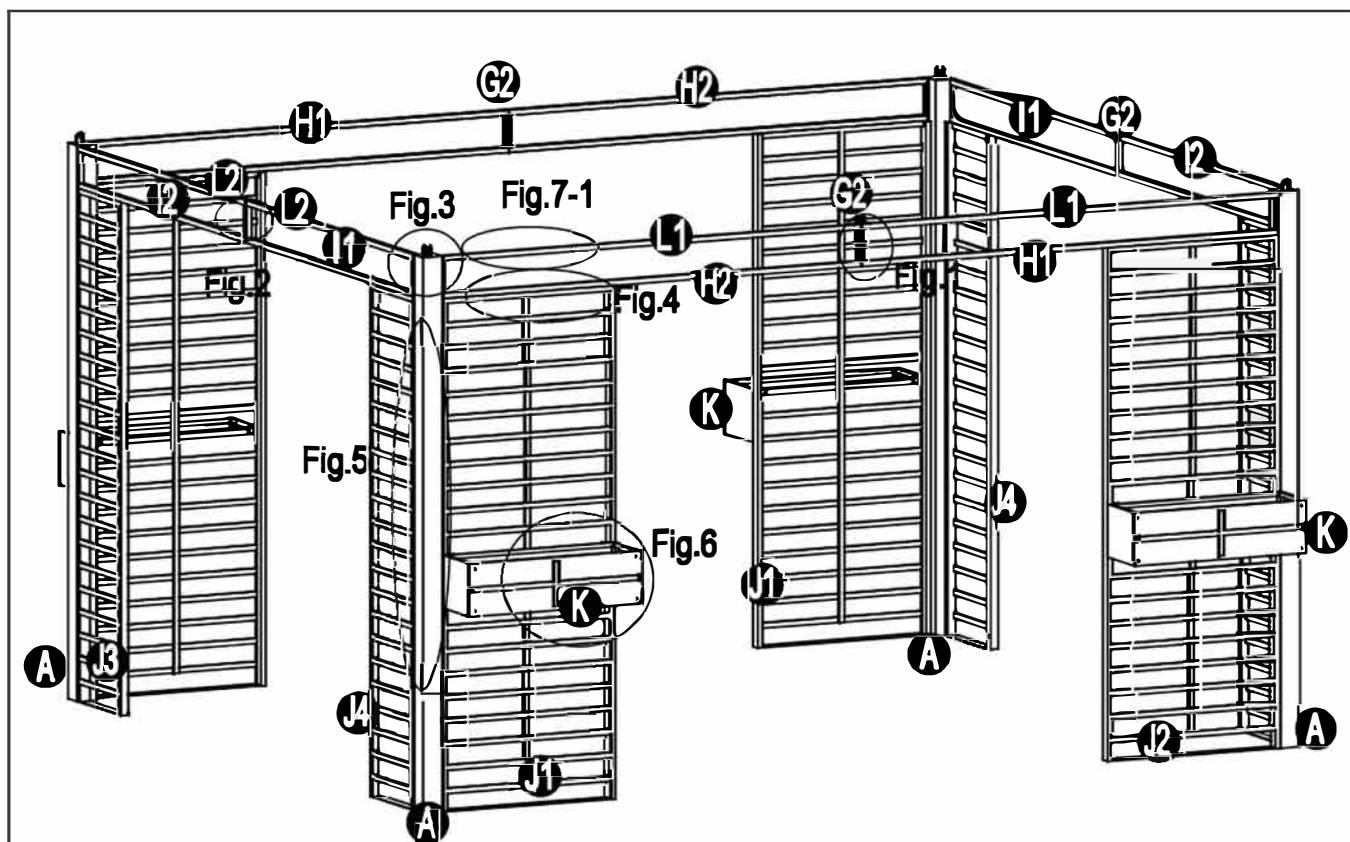

  
1. Insert the long-side long screen (H1) into the long-side short screen (H2). Repeat this step for short-side screens (I1/I2).

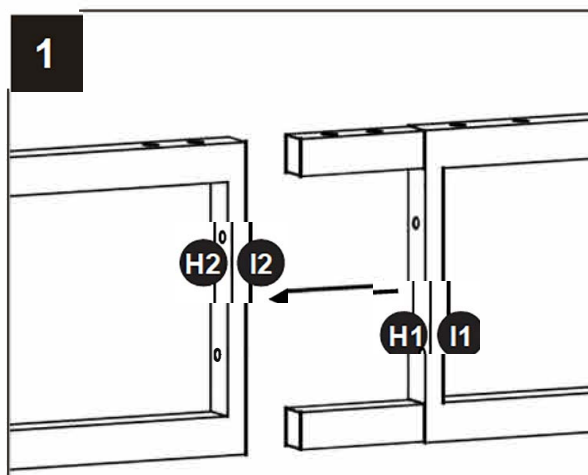






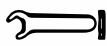 

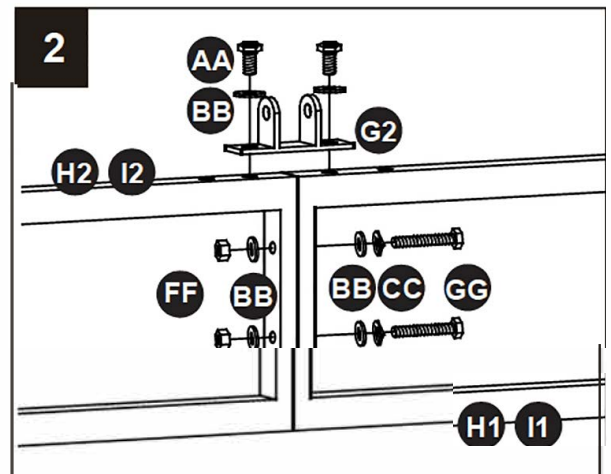
## ASSEMBLY INSTRUCTIONS

2. Connect the short-side long screens (I1) with short-side short screens (I2) using bolts (GG), spring washers (CC), flat washers (BB) and nuts (FF) as fig. shown, then attach the middle beam connector (G2) to the short-side screen assemblies (I1/I2) with bolts (AA) and flat washers (BB), tighten with wrench (Z). Repeat this step for long-side screen assemblies (H1/H2).








### Hardware Used

<b>AA</b>	M6 x 15 Bolt		x 8
<b>GG</b>	M6 x 30 Bolt		x 8
<b>BB</b>	M6 Flat Washer		x 24
<b>CC</b>	M6 Spring Washer		x 8
<b>FF</b>	M6 Nut		x 8
<b>Z</b>	M6 Wrench		x 1

 3. Attach the long-side short screens (H2) and the short-side long screens (I1) to the posts (A) with bolts (DD), spring washers (CC) and flat washers (BB), tighten with wrench (Z). Repeat this step for the long-side long screens (H1) and the short-side short screens (I2)
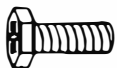
### Hardware Used
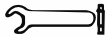 
<b>DD</b>	M6 x 25 Bolt		x 16
<b>BB</b>	M6 Flat Washer		x 16
<b>CC</b>	M6 Spring Washer		x 16
<b>Z</b>	M6 Wrench		x 1

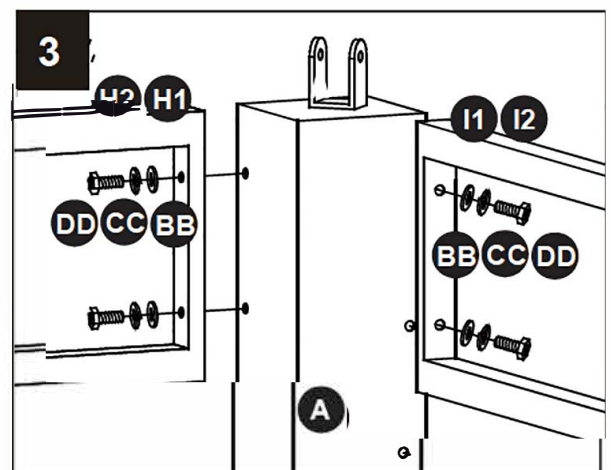 








## ASSEMBLY INSTRUCTIONS

   4. Attach the big vertical screens (J1/J2) to the long-side screens (H2/H1) with bolts (EE), spring washers (CC) and flat washers (BB), tighten with wrench (Z). Repeat this step for attaching the small vertical screens (J3/J4) to the short-side screens (I2/I1).

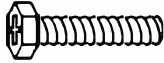

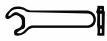
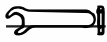 
### Hardware Used

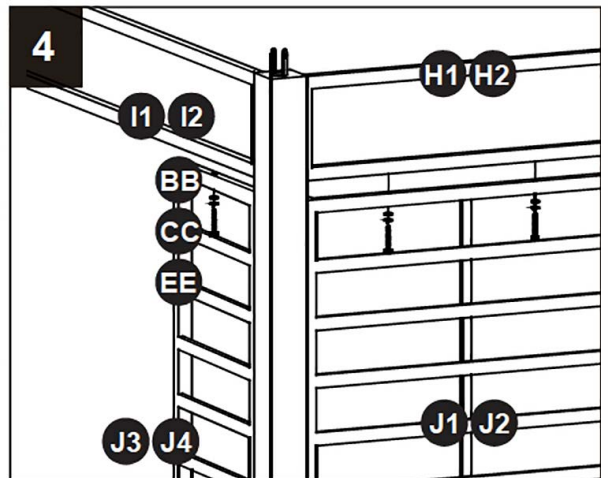
- EE** M6 x 35 Bolt  x 12
- BB** M6 Flat Washer  x 12
- CC** M6 Spring Washer  x 12
- Z** M6 Wrench  x 1



5. Attach the vertical screens (J1/J2/J3/J4) to the posts (A) with bolts (EE), spring washers (CC) and flat washers (BB), tighten with wrench (Z).



### Hardware Used

 
- EE** M6 x 35 Bolt  x 24
- BB** M6 Flat Washer  x 24
- CC** M6 Spring Washer  x 24
- Z** M6 Wrench  x 1

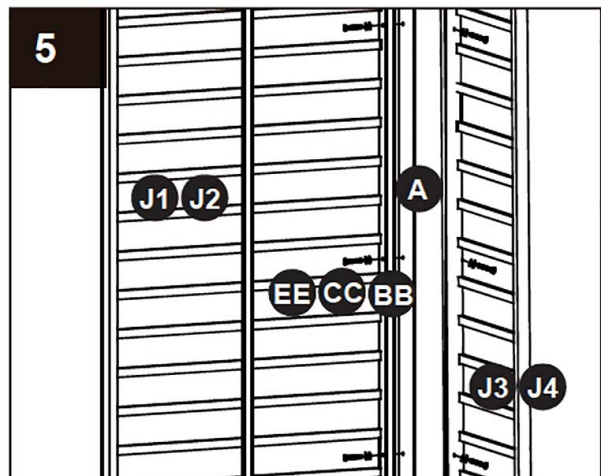

- 6-1. Attach the flower basket side panel (K3) to the flower basket panel (K1) and flower basket rear panel (K2) with bolts (KK), tighten with allen key (Z1). Then put the flower basket inner panel (K4) into the flower basket.

### Hardware Used

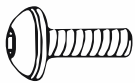  - KK** M6 x 25 Bolt  x 16
- Z1** M6 Allen Key  x 1

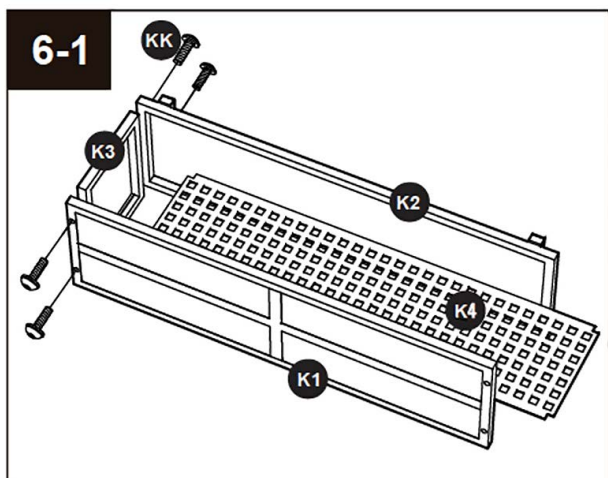


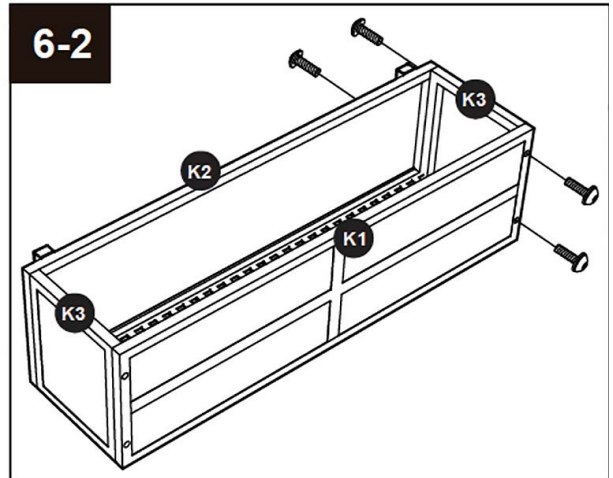 
## ASSEMBLY INSTRUCTIONS

- 6-2. Attach another flower basket side panel (K3) to the flower basket panel (K1) and flower basket rear panel (K2) with bolts (KK) , tighten with allen key (Z1).


### Hardware Used

 **KK** M6 x 25 Bolt  x 16

**Z1** M6 Allen Key  x 1



- 6-3. Hang the assembled flower basket to the vertical screens (J1/J2).

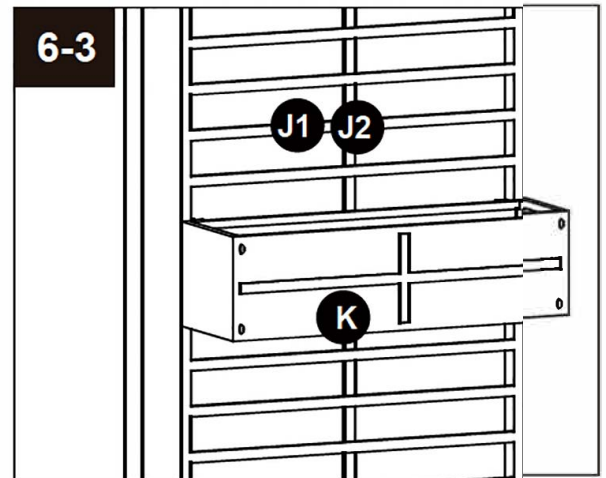


- 7-1. Attach the long netting tubes (L1) to the long-side screens (H1/H2), and short netting tubes (L2) to the short-side screens (I1/I2) with bolts (AA) and flat washers (BB), tighten with wrench (Z).

### Hardware Used

  
**AA** M6 x 15 Bolt  x 16

**BB** M6 Flat Washer  x 16

**Z** M6 Wrench  x 1

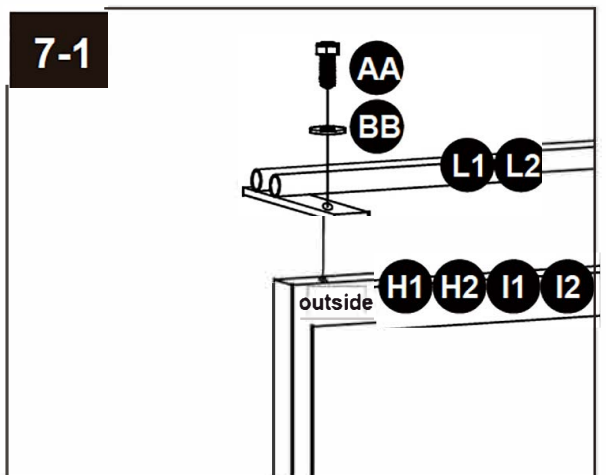

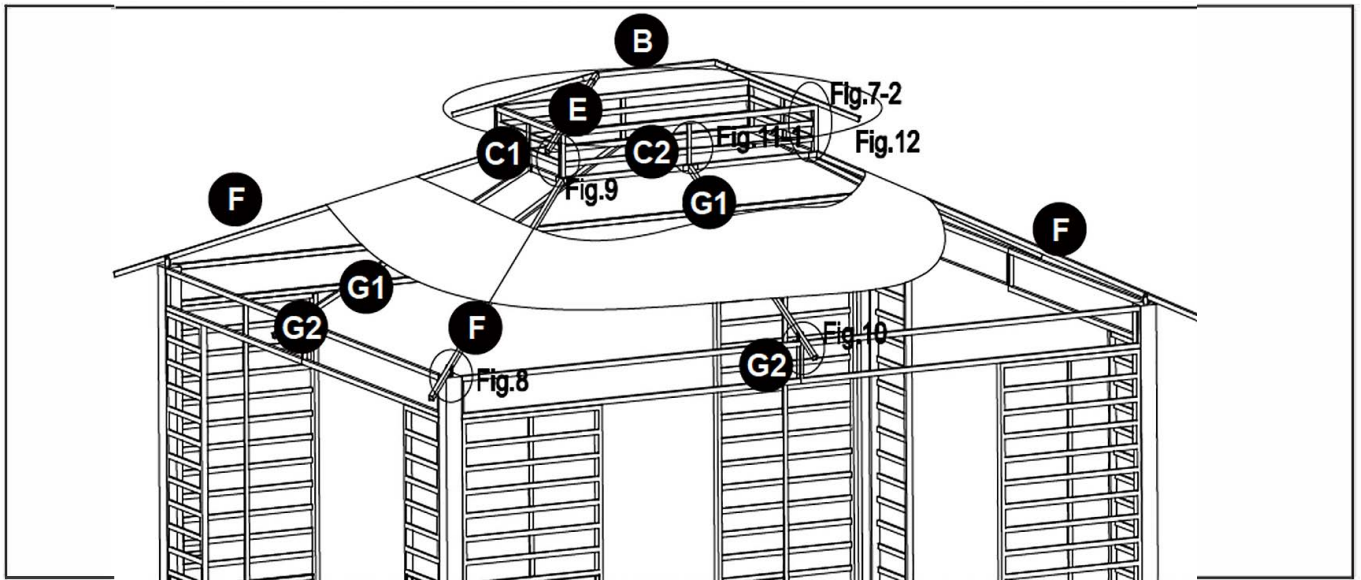


# ASSEMBLY INSTRUCTIONS



 7-2. Connect the top frame short panels (C1) and top frame long panels (C2) using bolts (DD) and flat washers (BB), tighten with wrench (Z).




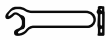 
## Hardware Used

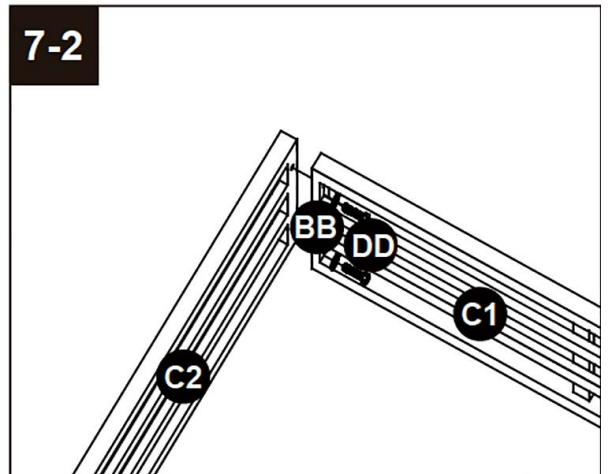
<b>DD</b>	M6 x 25 Bolt		x 8
<b>BB</b>	M6 Flat Washer		x 8
<b>Z</b>	M6 Wrench		x 1



8. Attach the big roof sloped beams (F) to posts (A) using bolts (EE), nuts (FF) and flat washers (BB), tighten with wrench (Z).

## Hardware Used
 
<b>EE</b>	M6 x 35 Bolt		x 4
<b>BB</b>	M6 Flat Washer		x 8
<b>FF</b>	M6 Nut		x 4
<b>Z</b>	M6 Wrench		x 2

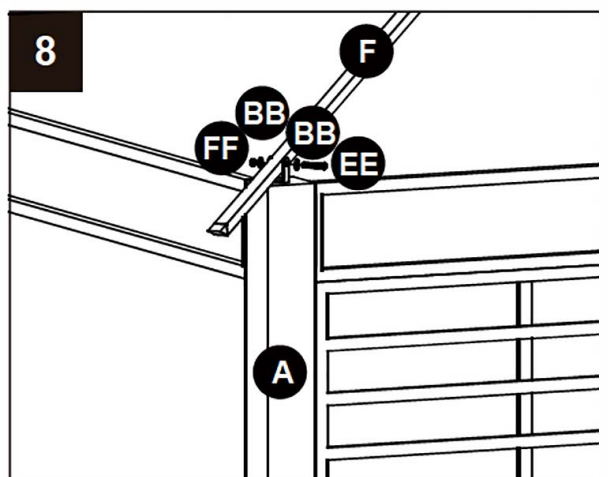


## ASSEMBLY INSTRUCTIONS

9. Attach the other end of the big roof sloped beams (F) to the big top frame using bolts (AA) and washers (BB), tighten with wrench (Z).




 
### Hardware Used

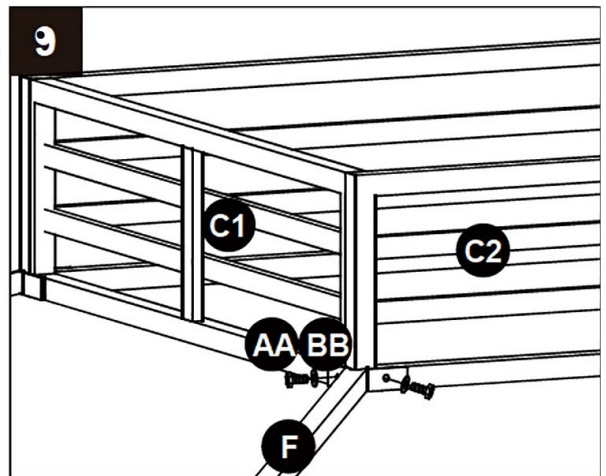
<b>AA</b>	M6 x 15 Bolt		x 8
<b>BB</b>	M6 Flat Washer		x 8
<b>Z</b>	M6 Wrench		x 1



 10. Attach the big roof middle beams (G1) to the middle beam connectors (G2) using bolts (EE), nuts (FF) and flat washers (BB), tighten with wrench (Z).

### Hardware Used


<b>EE</b>	M6 x 35 Bolt		x 4
<b>BB</b>	M6 Flat Washer		x 8
<b>FF</b>	M6 Nut		x 4
<b>Z</b>	M6 Wrench		x 2

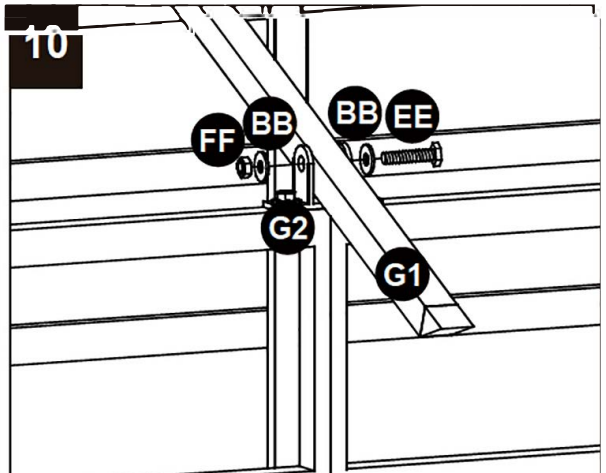 


## ASSEMBLY INSTRUCTIONS


11-1. Attach the other end of middle beams (G1) to the top frame long panels (C1/C2) using bolts (AA) and flat washers (BB), tighten with wrench (Z).

### Hardware Used

 
<b>AA</b>	M6 x 15 Bolt		x 8
<b>BB</b>	M6 Flat Washer		x 8
<b>Z</b>	M6 Wrench		x 1

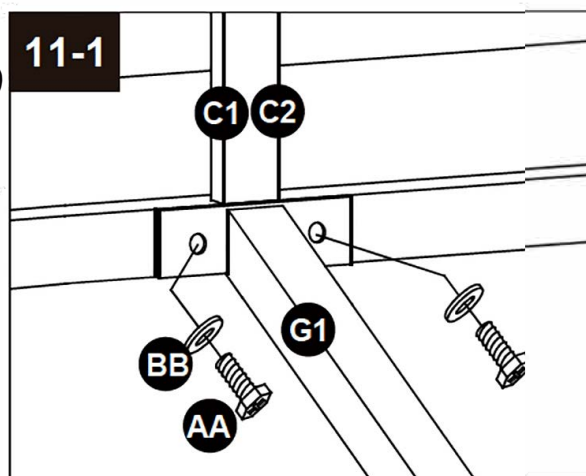

 11-2. Place large canopy (N) onto the big top assembly, but do not attach it yet.

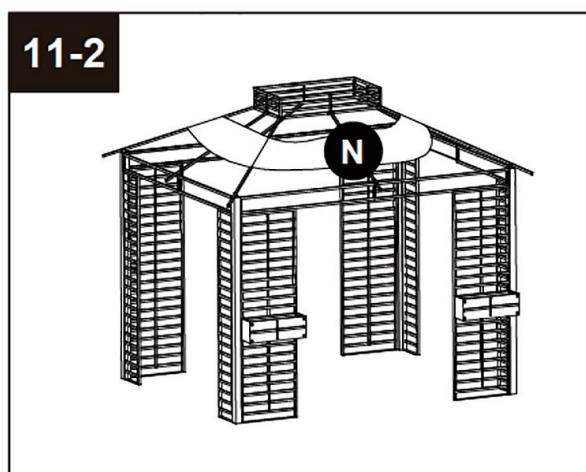

 
12-1. Insert the small roof beams (E) into the small top connector (B) and attach the hook (D).

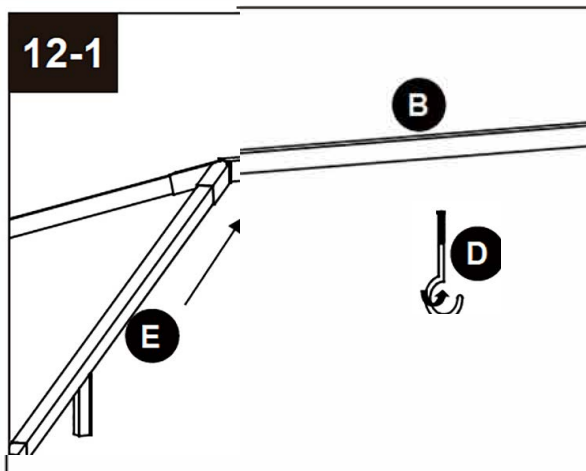




## ASSEMBLY INSTRUCTIONS

 
12-2. Place small canopy (M) on small top, then attach four corners of small canopy to small roof beams (E).

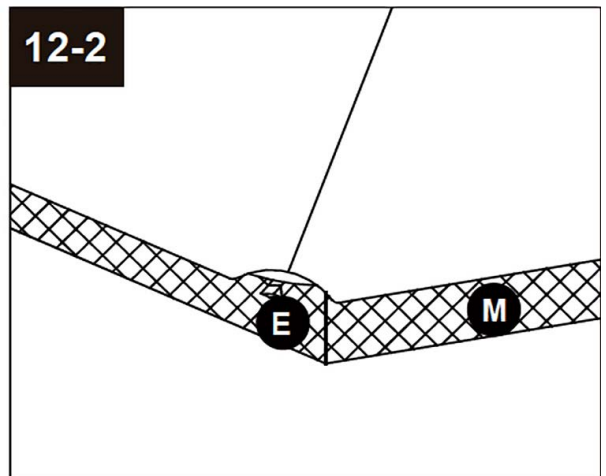


12-3. Attach small top assembly by inserting the tubes of small roof beams (E) into the big top frame.

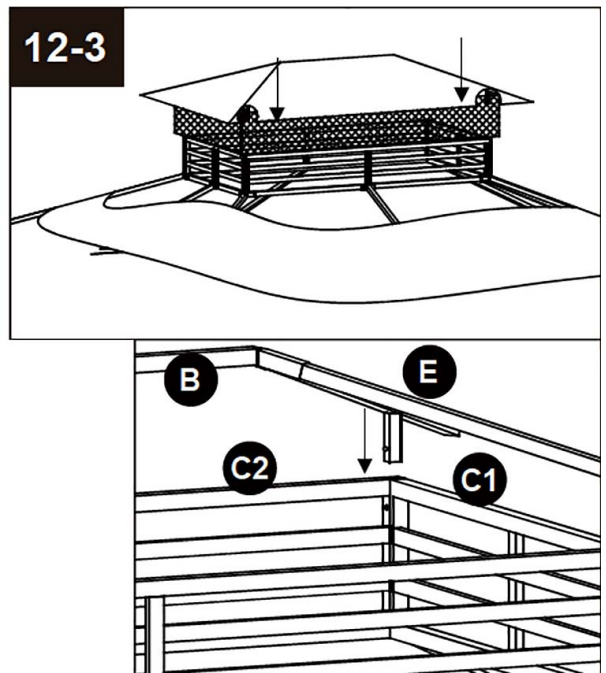 

 
12-4. Secure the magic tape on the small roof netting with the magic tape on the big top frame to avoid the wind lift the netting.

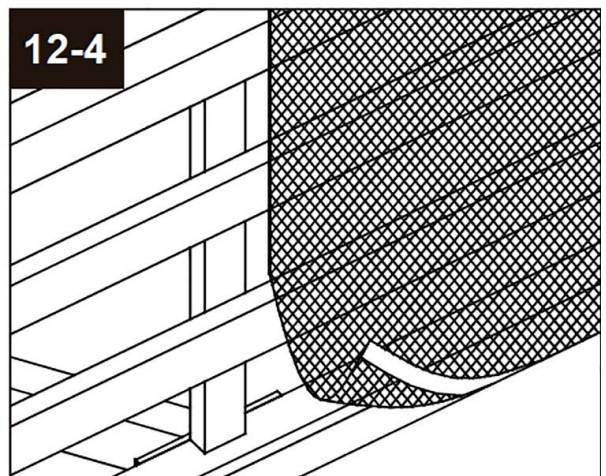



# ASSEMBLY INSTRUCTIONS

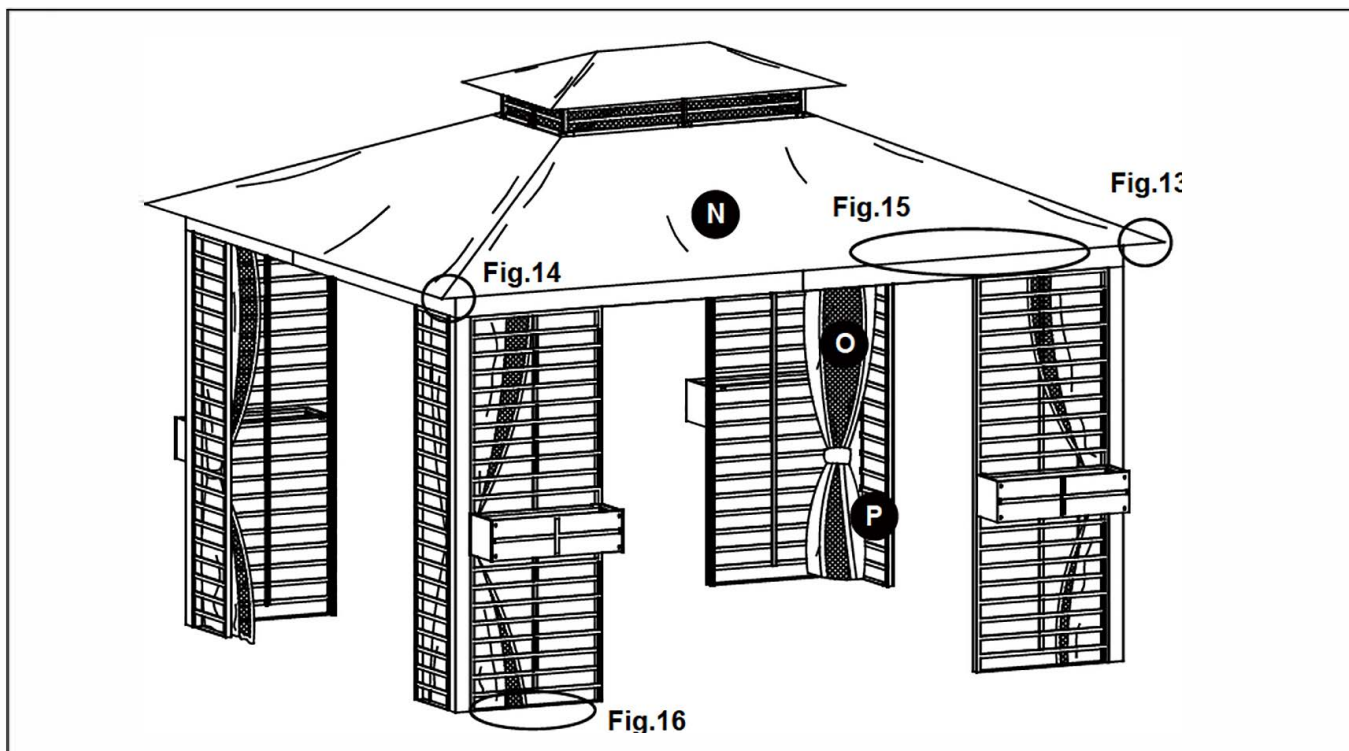 

 
13. Spread the large canopy (N) and attach corners onto the end of big roof sloped beams (F).

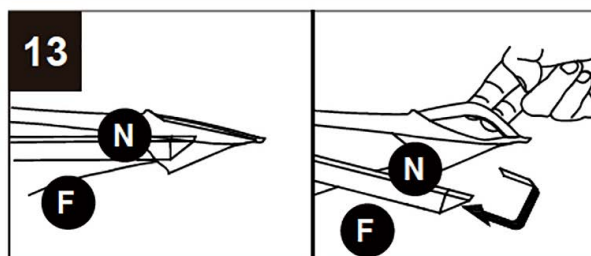

  14. Secure the magic tapes on the canopy corners and mid-points as figures 14-1 and 14-2 shown.

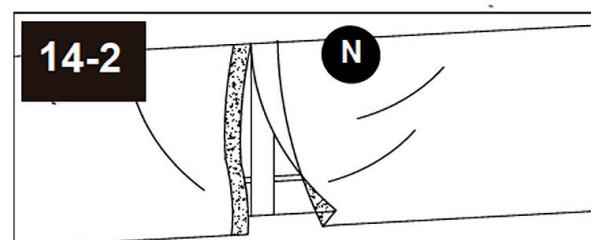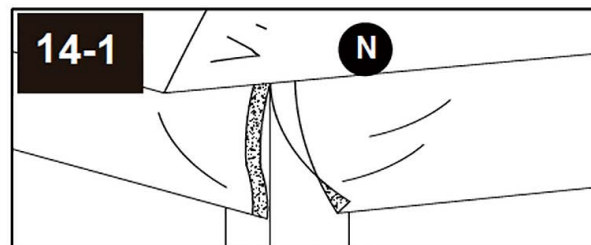

 15. Hang the mosquito net (O) and curtain (P) onto the netting tubes with rings (HH).

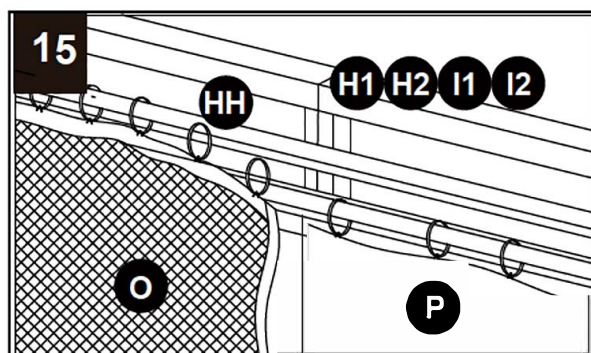

## Hardware Used

**HH** Ring  x 104



## ASSEMBLY INSTRUCTIONS

 
---

16. Secure the gazebo to ground using stakes (II).


### Hardware Used

---


II Ø6 x 230 Stake  x 12

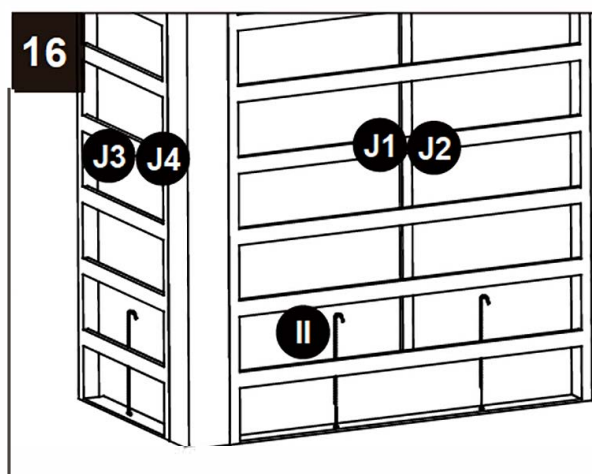

## REPLACEMENT PARTS LIST

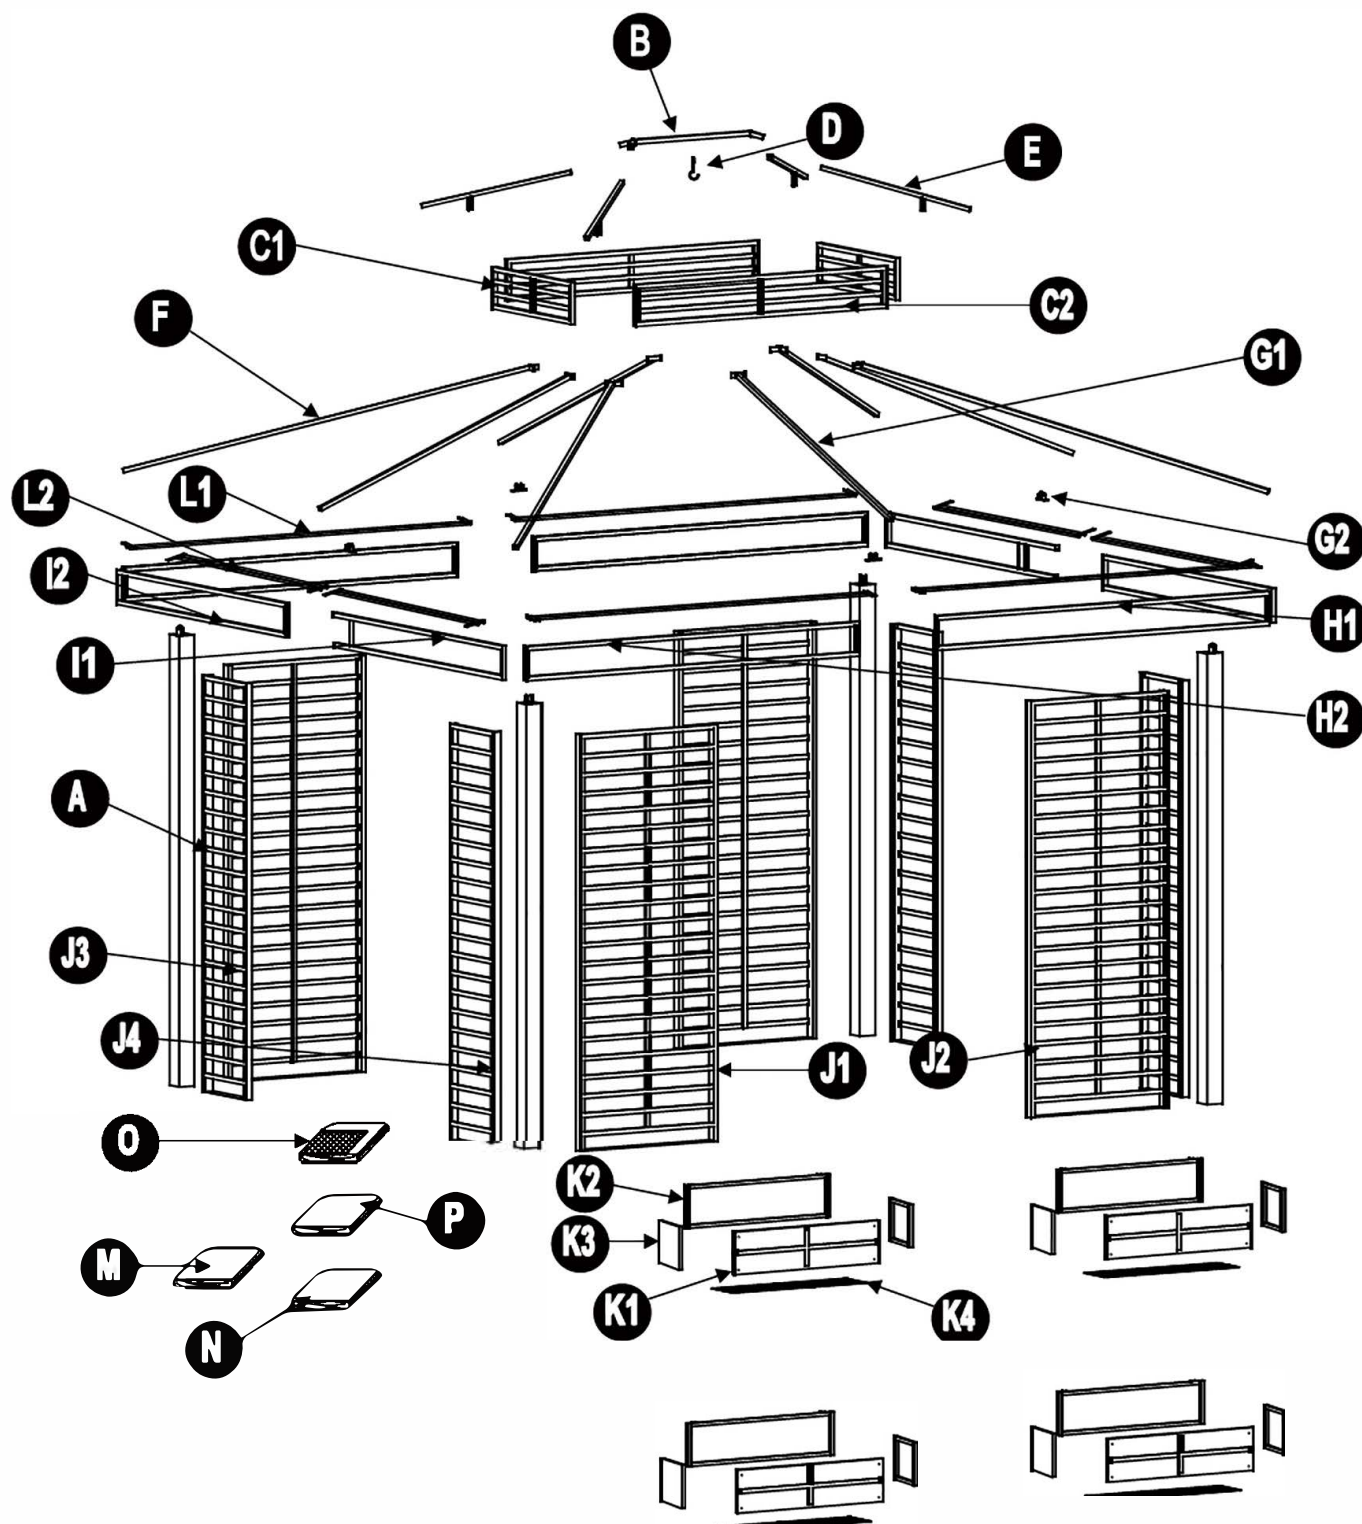 

## REPLACEMENT PARTS LIST

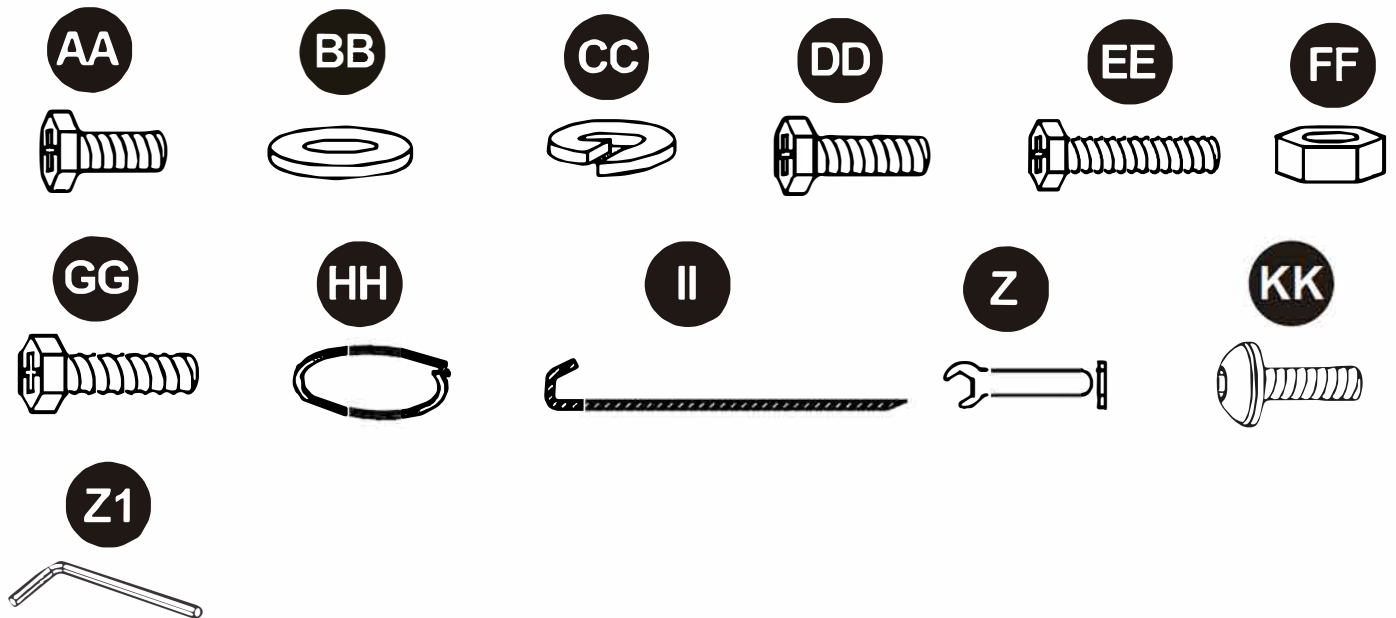 

PART	DESCRIPTION
A	Post
B	Small Top Connector
C1	Top Frame Short Panel
C2	Top frame long panel
D	Hook
E	Small Roof Beam
F	Big Roof Sloped Beam
G1	Big Roof Middle Beam
G2	Middle Beam Connector
H1	Long-Side Long Screen
H2	Long-Side Short Screen
I1	Short-Side Long Screen
I2	Short-Side Short Screen
J1	Big Vertical Screen 1
J2	Big Vertical Screen 2
J3	Small Vertical Screen 1
J4	Small Vertical Screen 2
K1	Flower Basket Panel
K2	Flower Basket Rear Panel
K3	Flower Basket Side Panel

PART	DESCRIPTION
K4	Basket Inner Panel
L1	Long Netting Tube
L2	Short Netting Tube
M	Small Canopy
N	Large Canopy
O	Mosquito Net
P	Curtain
AA	M6 x 15 Bolt
BB	M6 Big Flat Washer
CC	M6 Spring Washer
DD	M6 x 25 Bolt
EE	M6 x 35 Bolt
FF	M6 Nut
GG	M6 x 30 Bolt
HH	Ring
II	$\varnothing 6$ x230 stake
Z	M6 Wrench
KK	M6 x 25 Bolt
Z1	M6 Allen key