

SEWING FURNITURE

Where Creativity Meets Color!

JUDY

 
SEWING MACHINE CABINET

OWNER'S MANUAL

Assembly Instructions

Model Numbers:

101 | White

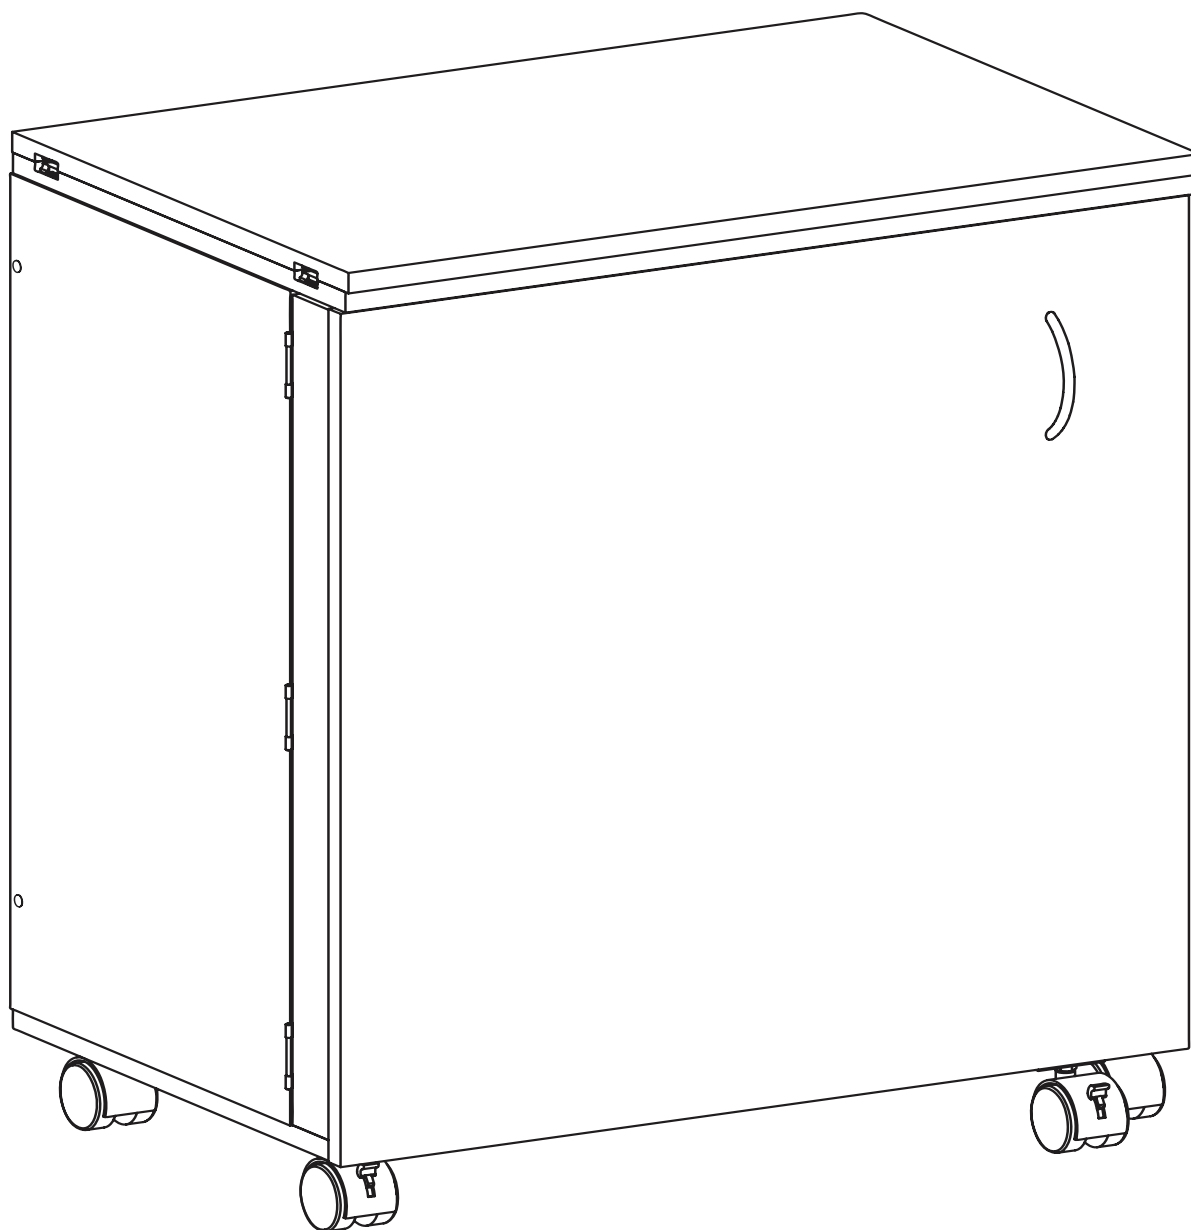

IMPORTANT: Please read these instructions before assembling!



LIMITED WARRANTY

Arrow™ Sewing Furniture 10-Year Warranty

WHAT THIS WARRANTY COVERS: Arrow Companies, LLC (Arrow) provides limited warranty coverage to the original purchaser of this product against defects in materials or workmanship of Arrow furniture components for a period of ten years from the date of purchase. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

HOW TO GET SERVICE: Simply contact Arrow at 1-800-533-7347 or CS@ArrowCabinets.com. When you request warranty service, you must also present proof of purchase documentation, which includes the date of purchase (detailed receipt), and photos of the product. Arrow will replace any defective part (at its sole option), excluding labor. Replacement parts will be warranted for only the remaining period of the original Warranty.

Replacement parts will be shipped freight prepaid on any initial warranty claim during first year of Warranty only. Warranty applies only to defects confirmed by Arrow Companies, LLC and will be replaced or repaired at Arrow's option. In the event parts are no longer available for a warranty claim, customer may receive brand new cabinet at a price equal to 60% off the MSRP of a current comparable model.

WHAT'S NOT COVERED: There is no warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, or care, or neglect, cuts or scratches. Caster damage as a result of moving furniture fully loaded or with locked casters. Damage resulting from electrical surge or lightning. Use in commercial or education environments. Arrow Sewing Furniture is designed for residential use only.

ARROW SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS WARRANTY, such as loss of use, disassembly, transportation, labor or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.

ADDITIONAL LIMITATIONS:

THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Arrow and all implied warranties, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you. This limited warranty gives you specific legal rights. This limited warranty does not, in any way, affect the rights given to you by law.

REGISTER YOUR PRODUCT: Original purchaser should register the purchase online at www.ArrowCabinets.com/warranty.

Notice to Customer:

Before beginning assembly, remove all parts from the carton. Please review the illustrations below to determine that all parts are Included.

For assembly or operating assistance, or to report any missing or damaged parts, you may call or write to:

cs@arrowcabinets.com

1-800-533-7347 Ext. 1

Arrow Cabinets

P.O. Box 307, Delavan, WI 53115

TO ORDER REPLACEMENT PARTS CALL

 
1-800-533-7347

NOTE: To assure proper handling of replacement parts please include the following information:

- **Model Number of Unit**
- **Production ID Number**
- **Number of Part Required**
- **Your Name, Address, and Phone Number**

Wooden Materials

Parts are labeled with capital letters. To reference letters, turn to the Wood Parts List in the back of your manual.











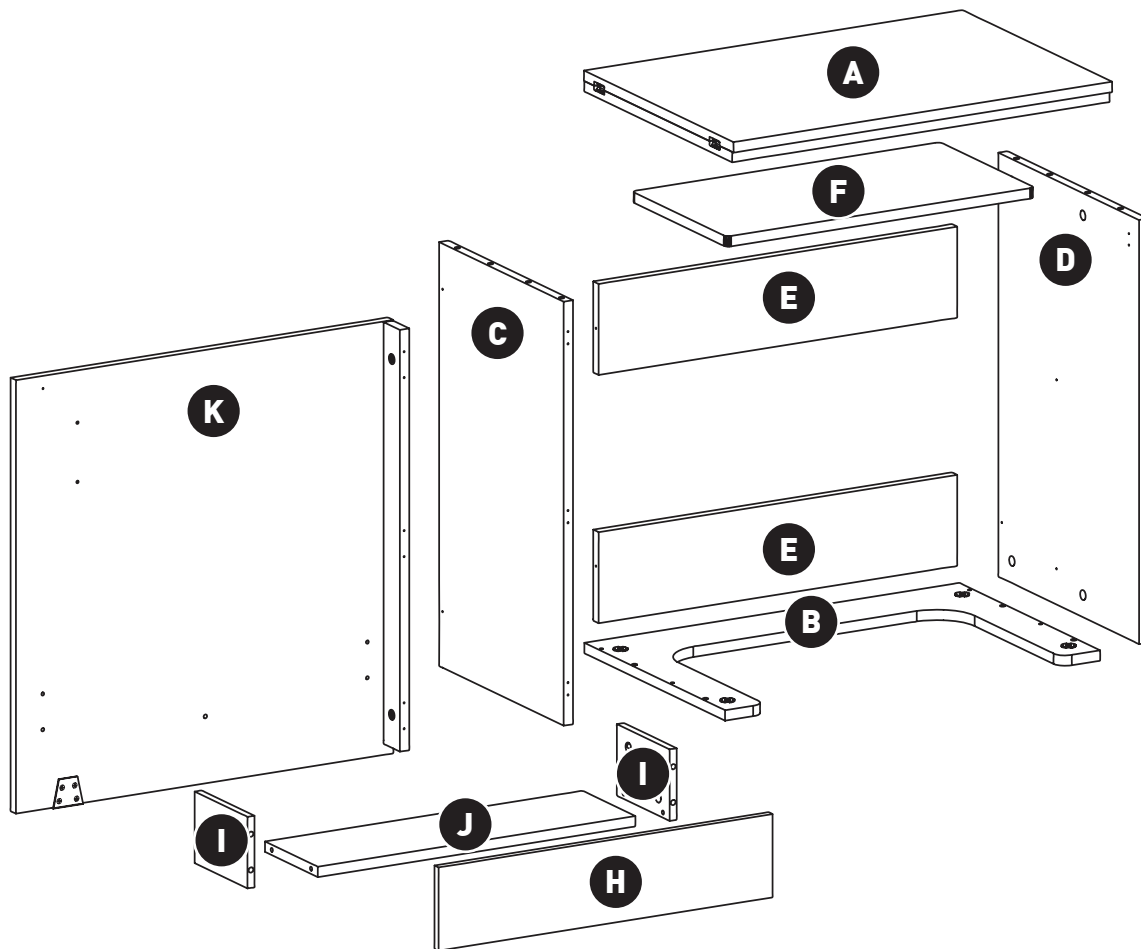


- | | | |
|---------------------------|---------------------------------|--------------------------|
| A Top/Leaf | E Back Top/Bottom Panels | I Door Bin Sides |
| B Bottom Panel | F Platform | J Door Bin Bottom |
| C Left Side Panel | H Door Bin Front Panel | K Door |
| D Right Side Panel | | |

If any of these parts arrived damaged, please call us at **1-800-533-7347** and we will send a replacement part out.

For additional strength dab wood glue on tip of screws before attaching.

           Hardware Included

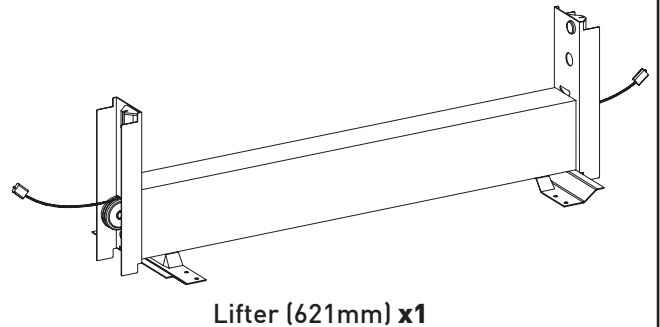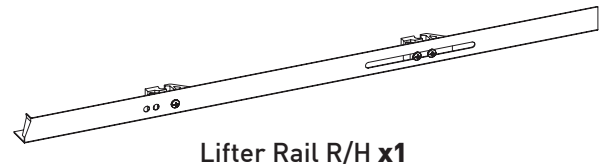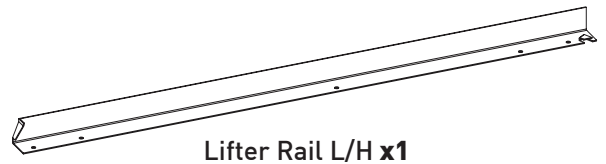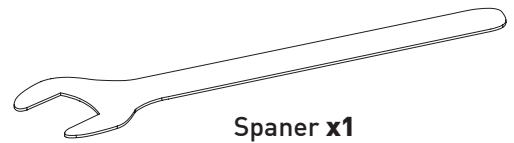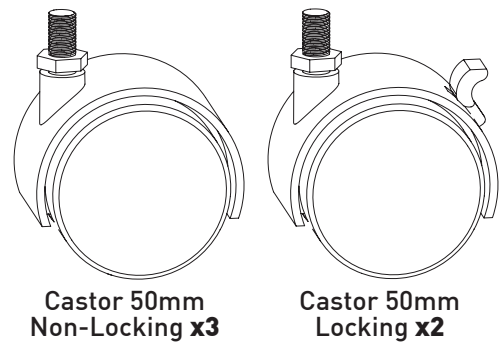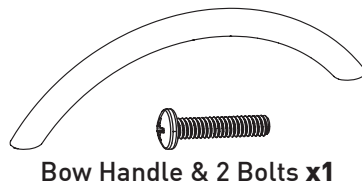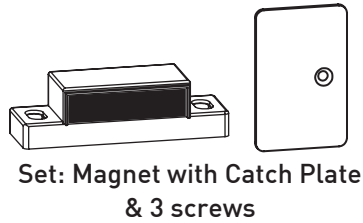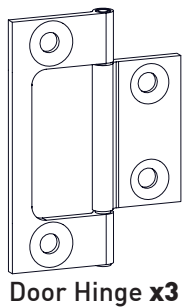

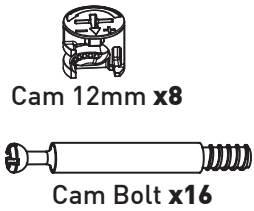


*Screws are NOT separated into individual bags, they are in the bags with the item you will use them with.
Example: Screws for the door hinges are in with the door hinges.





*Items not drawn to scale.



   Tools required

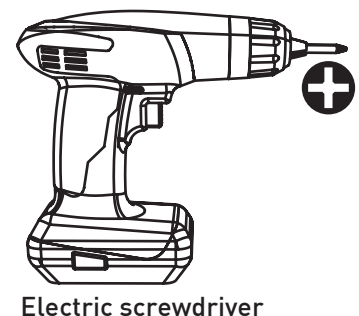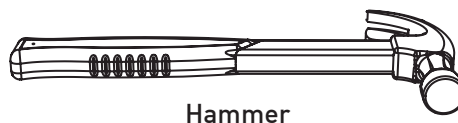

   
 
Understanding How the "ARROW-LOC" Cam Fastener Works

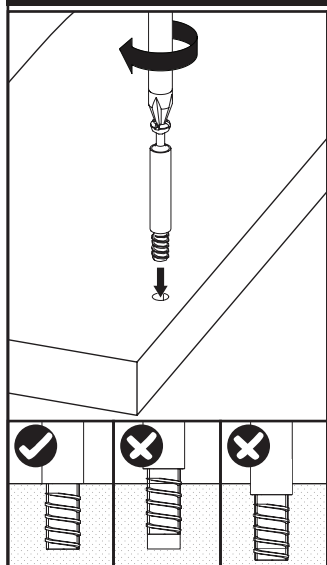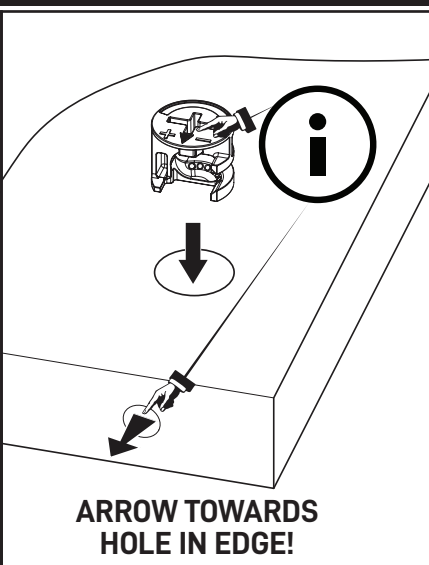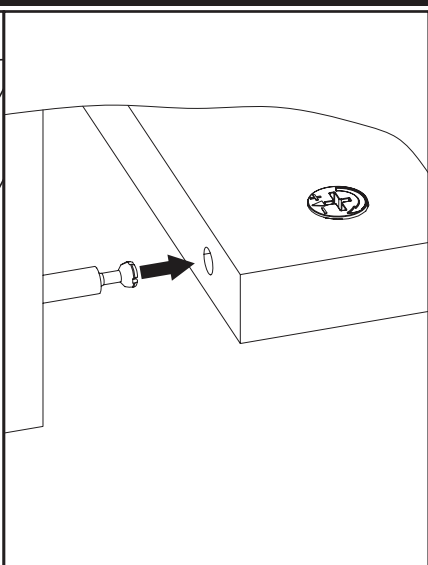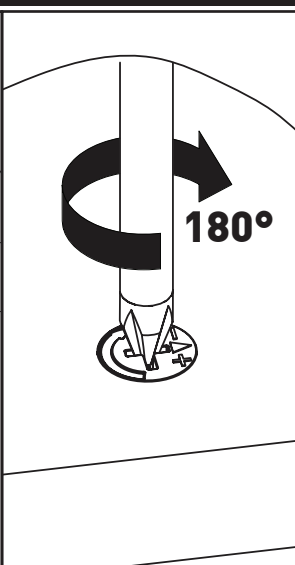	 <p>ARROW TOWARDS HOLE IN EDGE!</p>		
<p>Position bolt in pre-drilled hole and turn until tight.</p>	<p>Press cam into pre-drilled hole until flush with surface.</p>	<p>Insert bolt through pre-drilled hole in edge of panel.</p>	<p>To lock, rotate cam until tight, using screwdriver.</p>

Cabinet Assembly

Step 1. Place Top (A), Bottom (B), Door (K) and Door Bin Front Panel (H) on a flat protected surface to prevent scratching of parts, thread cam bolts (16 total) into pre-drilled holes (as shown In FIG. 1).

  
FIG. 1

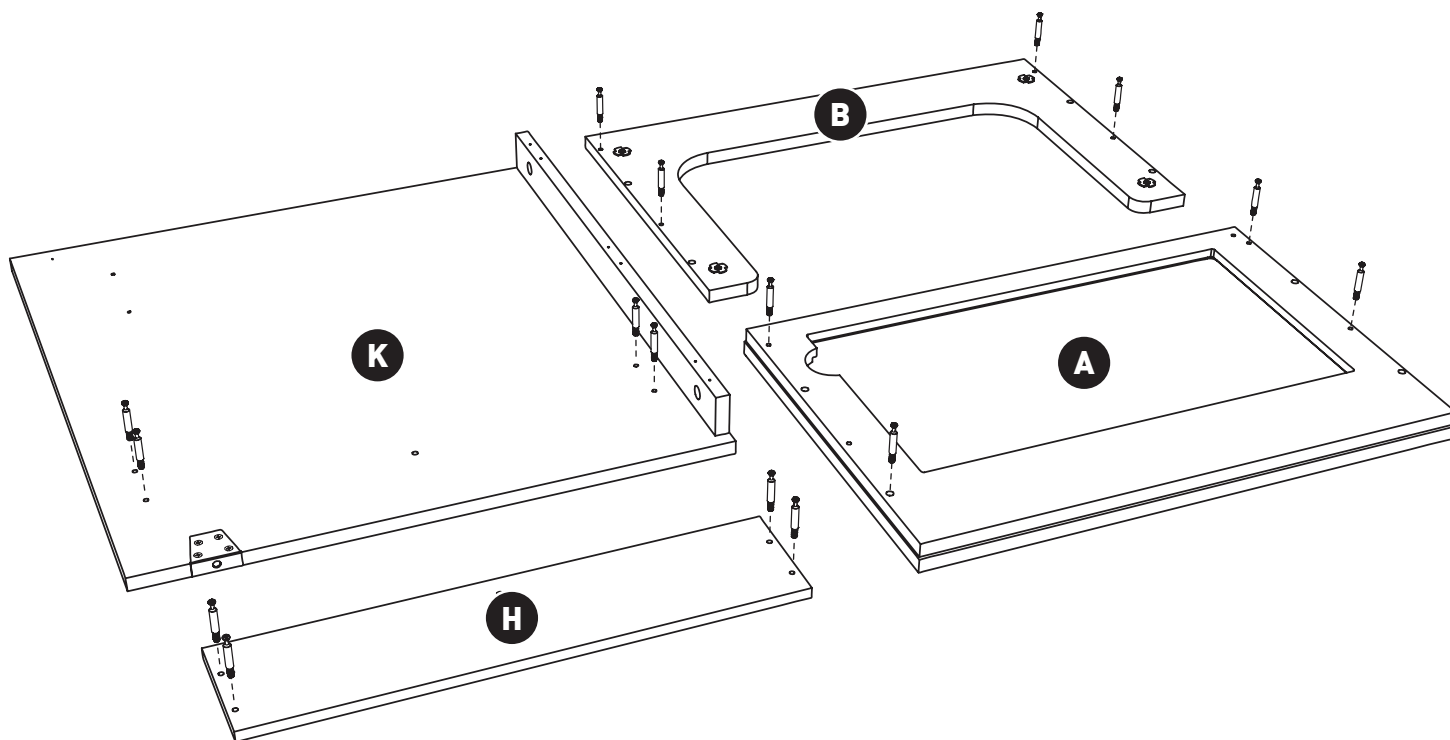

Step 2. Install Cams (8 total) by pushing a cam into each hole flush with surface, the arrow on the cams should be turned (using a regular screwdriver) to face the hole in each edge where the cam bolts will enter.


After installing the cams, insert the Dowels 8x30 (x8) in the both Side panels (C & D) as shown in FIG. 2.

 FIG. 2

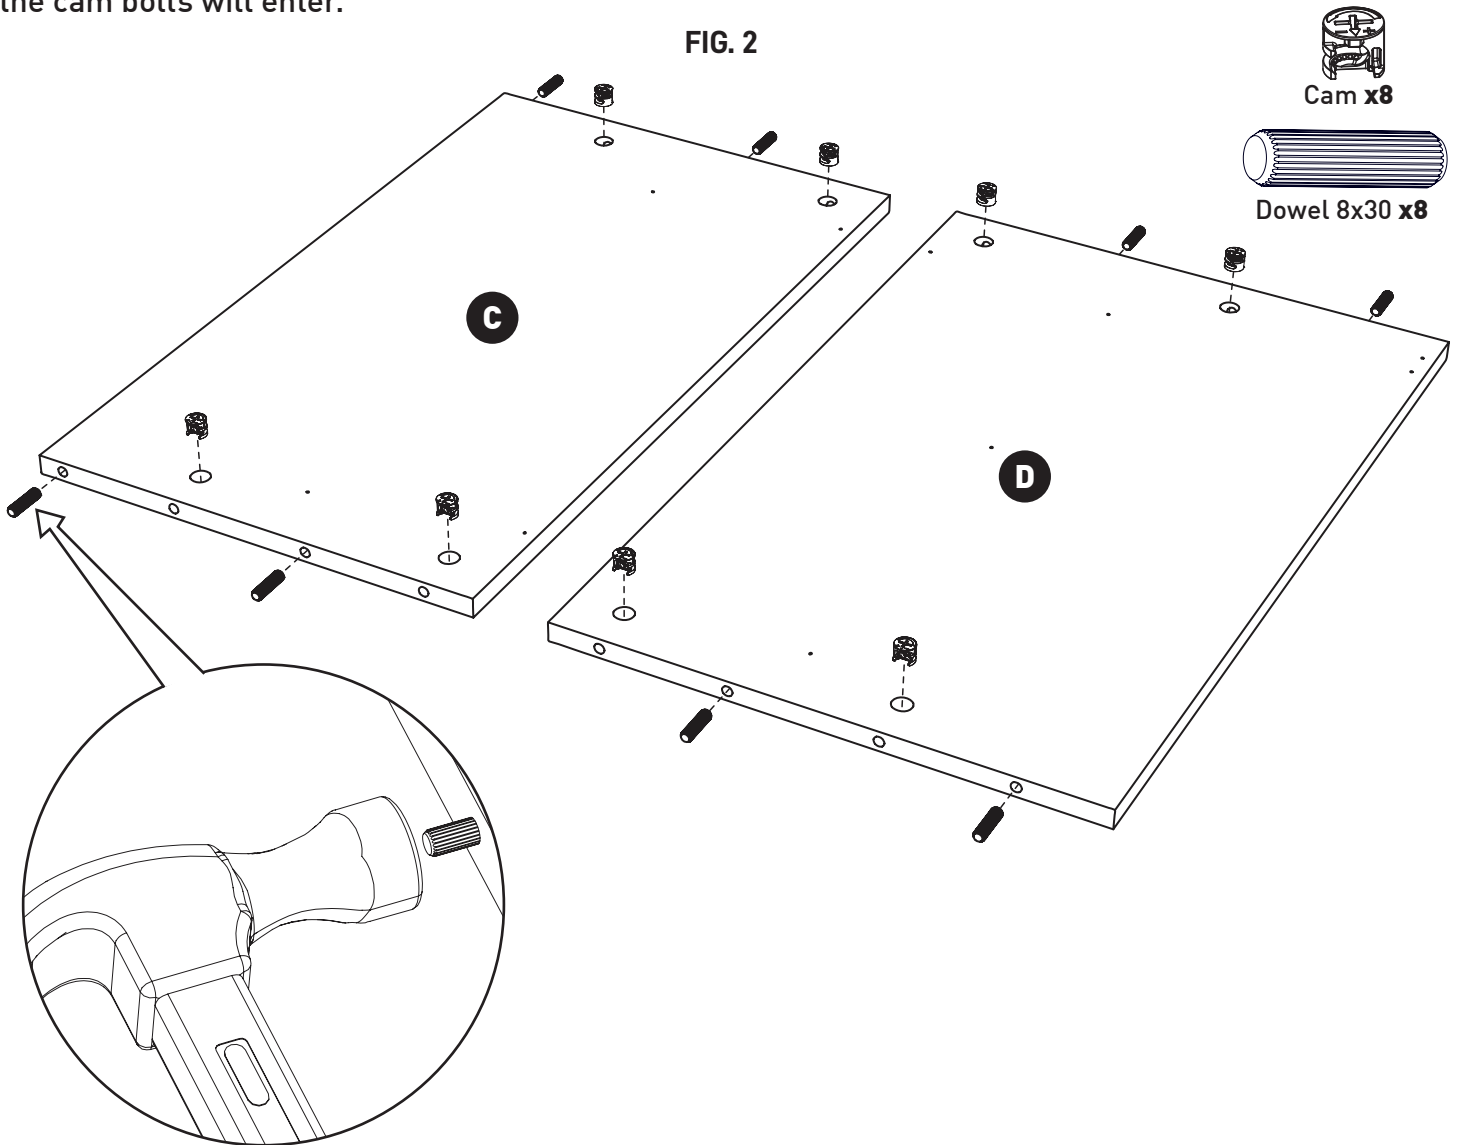

Step 3. Attach magnet with #5x5/8 Brass Panhead Screws (x2) packed with magnet to Right Side Panel (D) into the pre-drilled holes so that the metal part is facing front edge.

 
FIG. 3

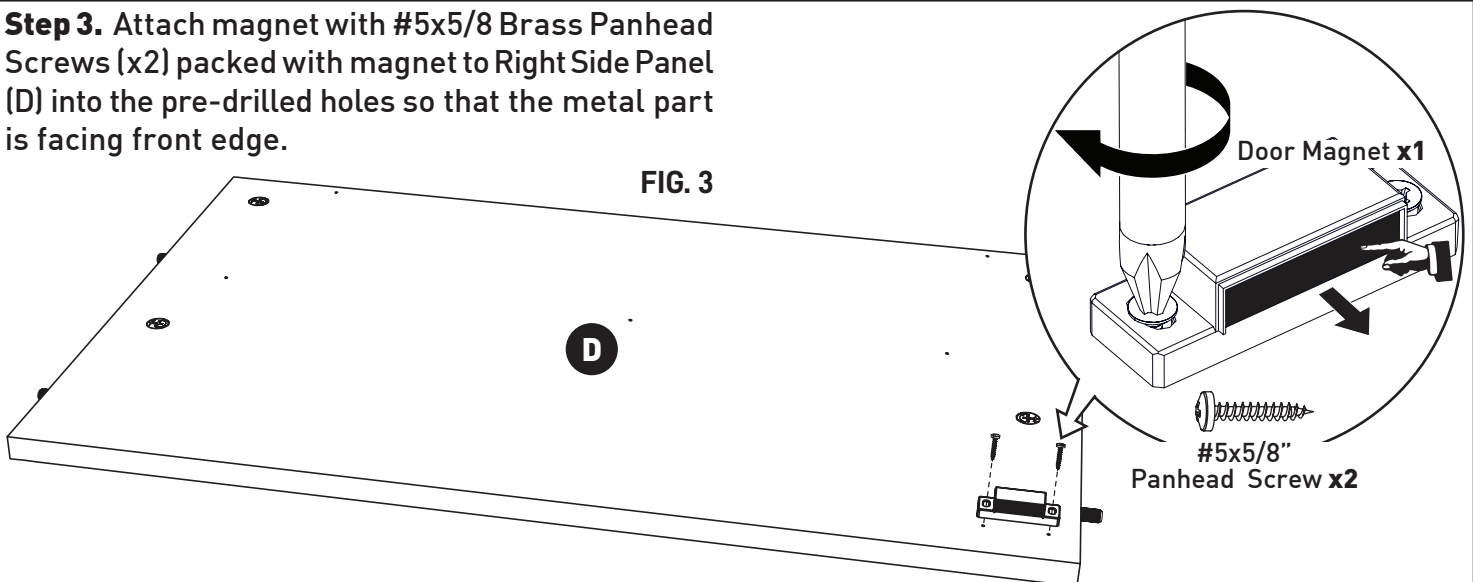

Step 4. Turn Bottom (B) panel over and install the Locking caster on right front and Non-locking casters in the back and left front. Using


the preinstalled threaded seats, place the caster washer between caster and cabinet bottom and tighten with spanner.

 FIG. 4

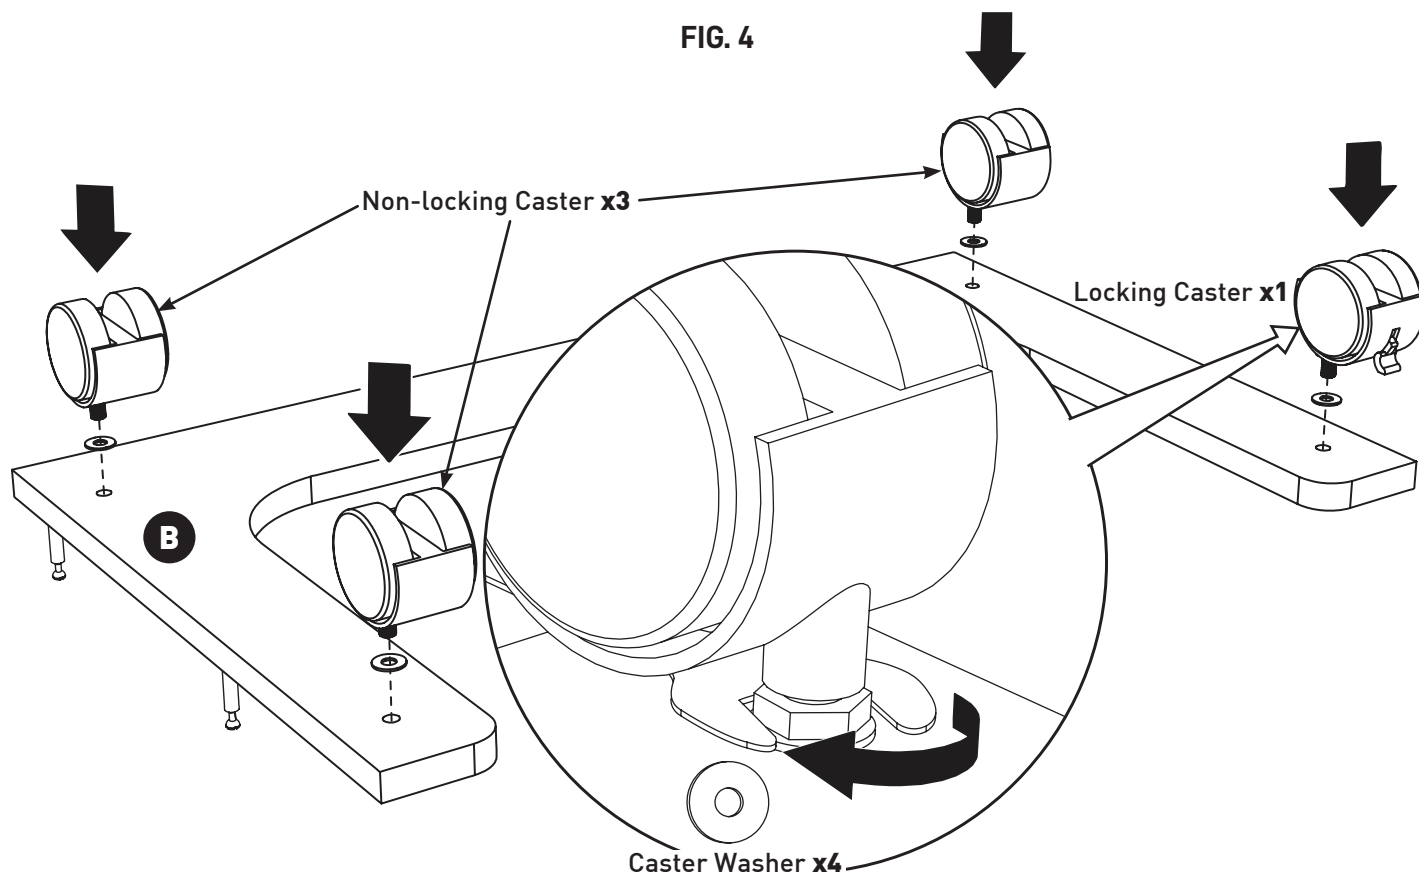

Step 5. Install Lifter rails on Left (C) and Right (D) Side Panel using pre-drilled holes with 6 Screws M4x14mm. Top of rail is even with top of panel.

 FIG. 5

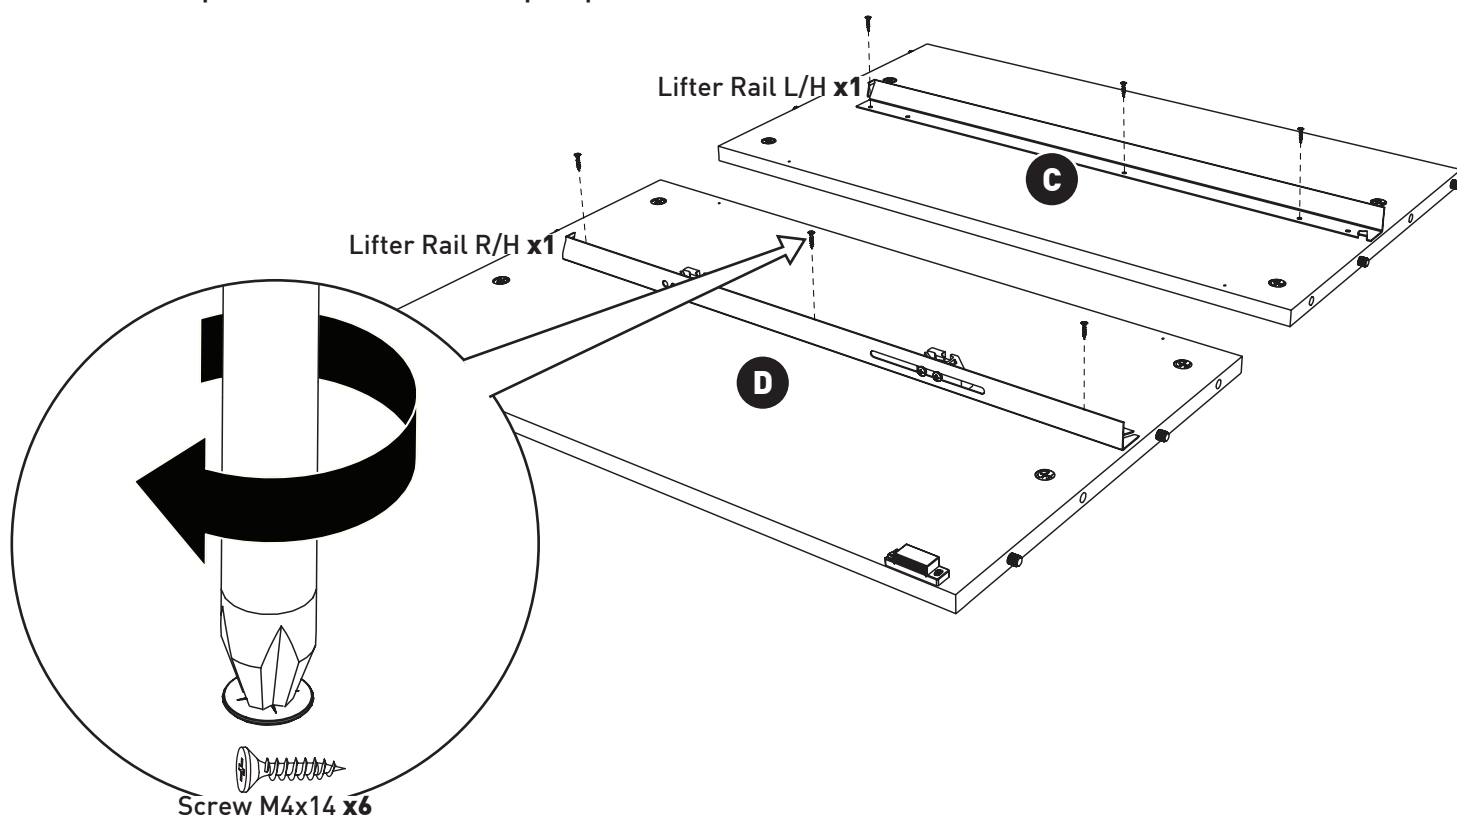

Step 6. In each of the two Door Bin Sides (I) panels, install 10 mm cams (x8) with arrow on cam pointing to hole on outer edge as shown in FIG. 6.

In Door Bin Bottom Panel (J) install Wood dowels (x6) in the holes on all sides.

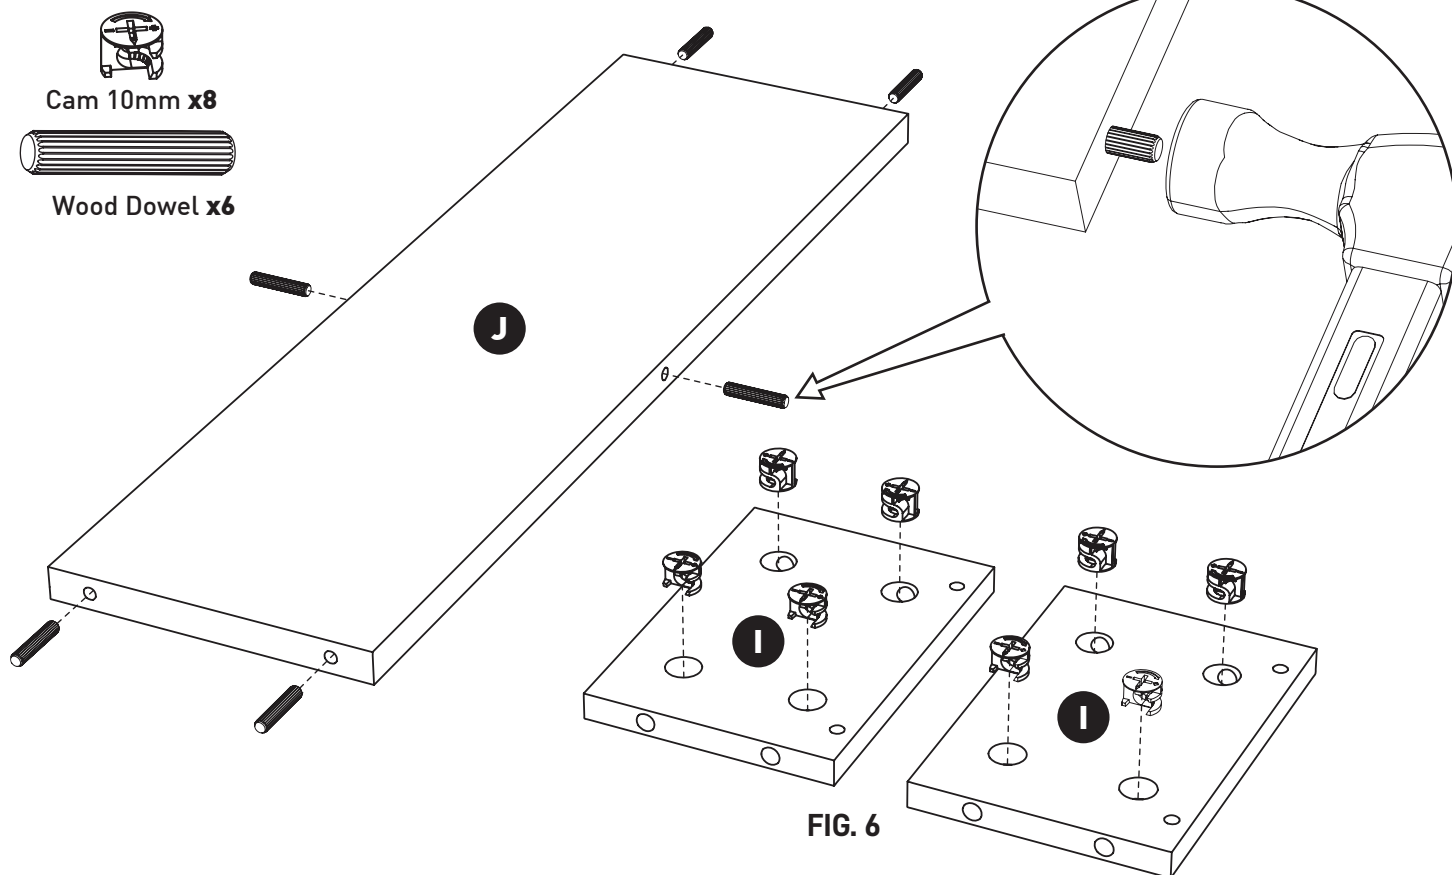 


FIG. 6

Step 7. Attach Sides (I) to Bottom panel (J) by pushing dowels on short sides of J into holes on sides I (FIG. 7).

Attach Front Panel (H) to unit by inserting cam bolts into Sides (I) and seating dowel from Bottom (J) (FIG. 8).


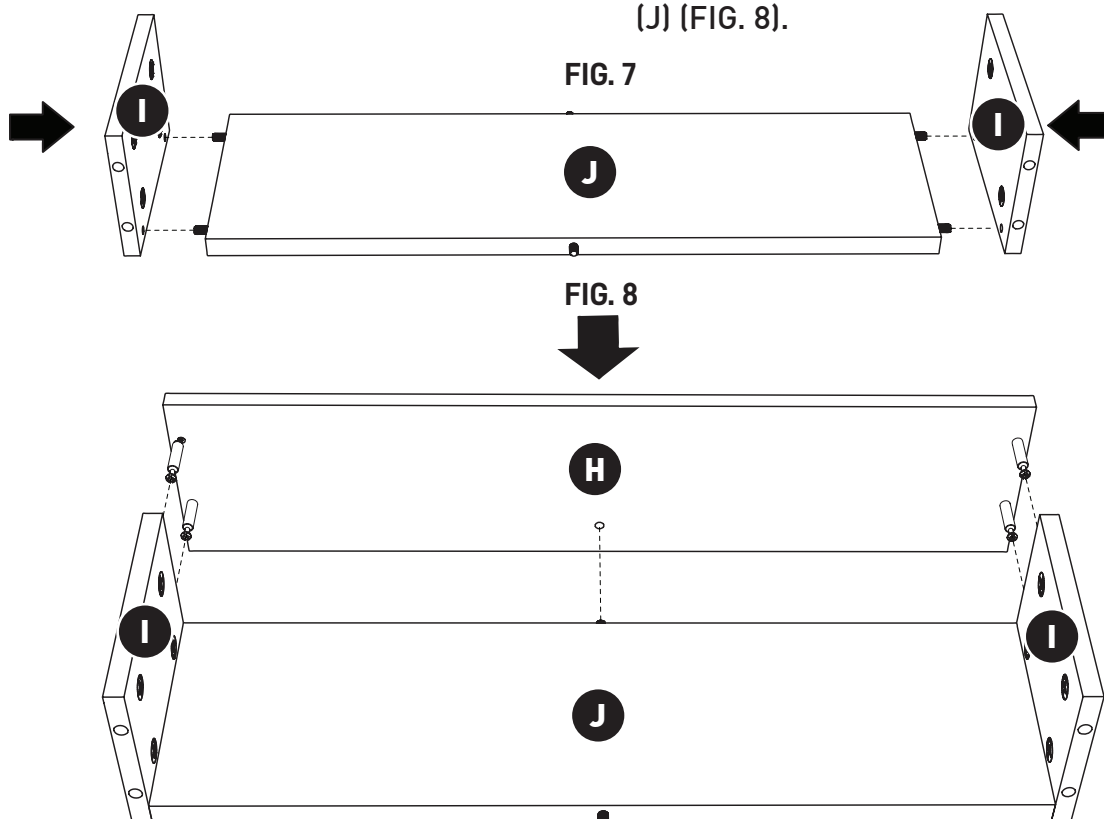 


FIG. 7

FIG. 8


Step 8. Using 2 Screws (M4x14mm) for each door hinge attach hinges to raised section of Door (K). Attach Door catch plate with screw included in

 hardware bag (#5 x 5/8 Brass Flathead Screw). Install the Locking caster through caster plate on bottom of Door (K).

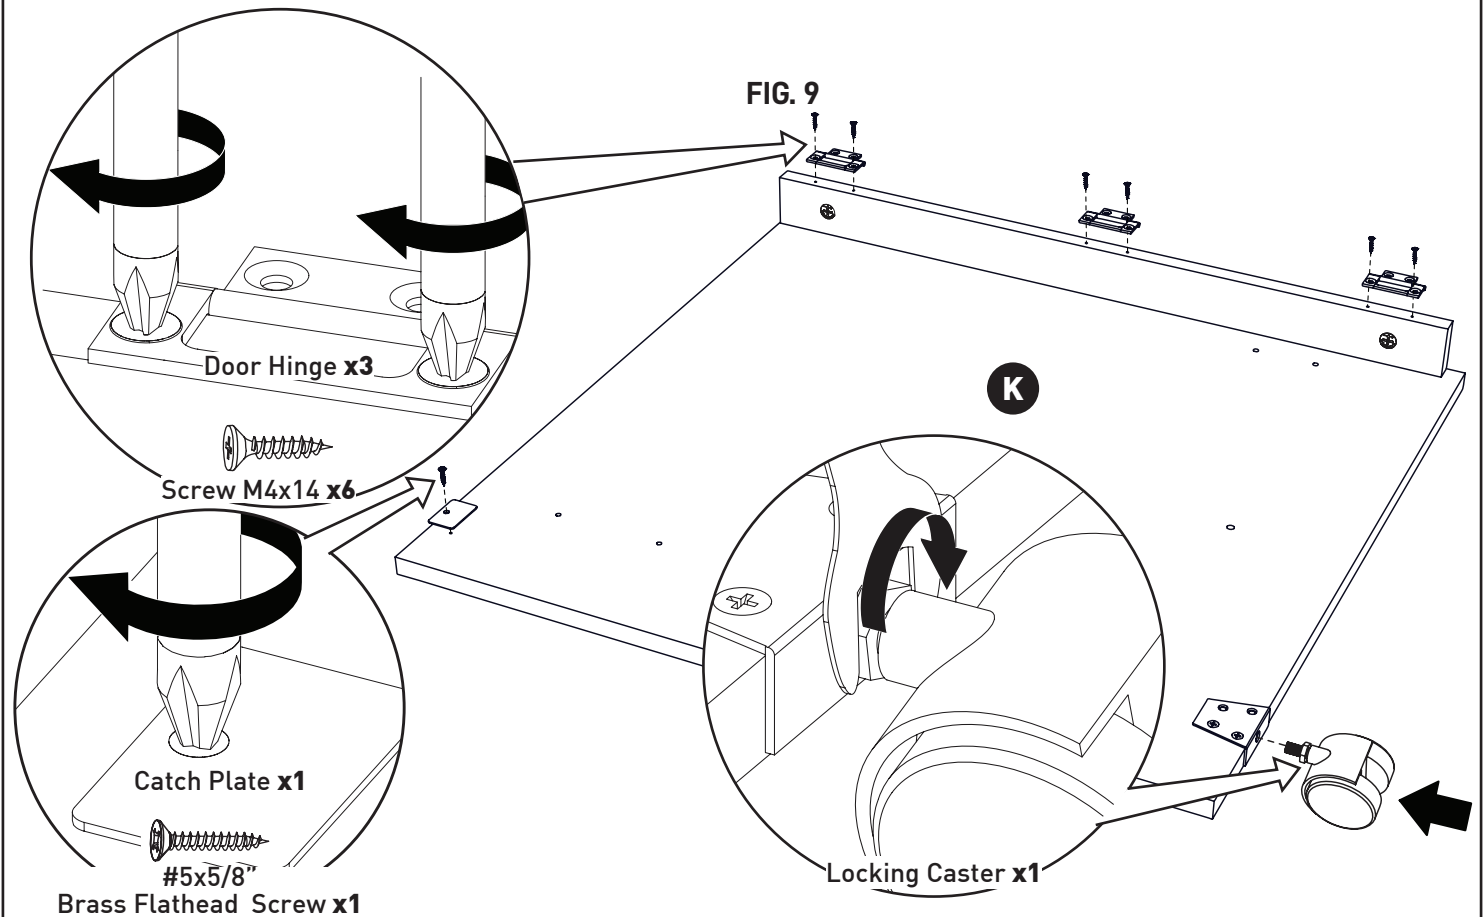


Step 9. Place Bottom Panel (B) on level surface with cam bolts and dowels up. Place Left (C) and

 Right (D) Side Panel on Bottom (B) with cam bolts in cam holes and dowels aligned. Tighten 4 cams.

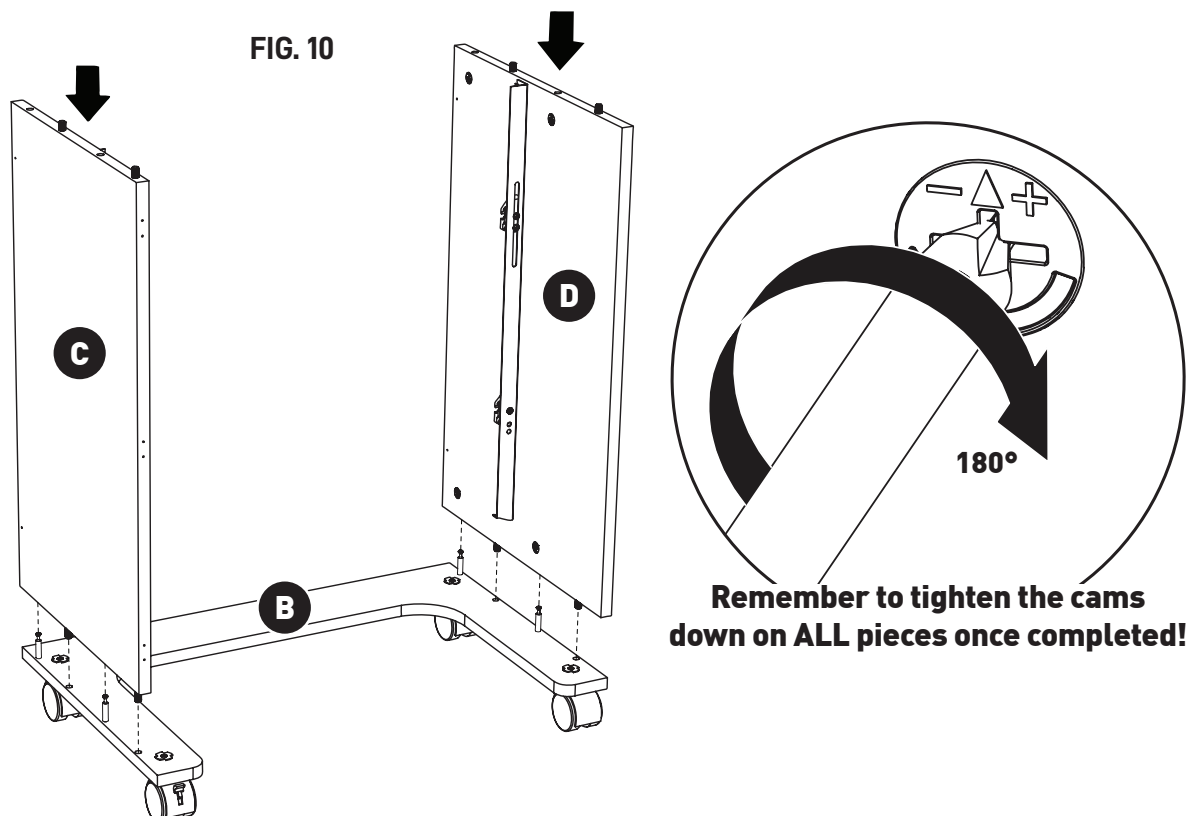


Step 10. Set Back Panels (E) between panels C and D. Insert the Screw 10x60mm (x4) through

 holes in side panels into back and tighten 2 screws on each side. Press screw head covers in place.

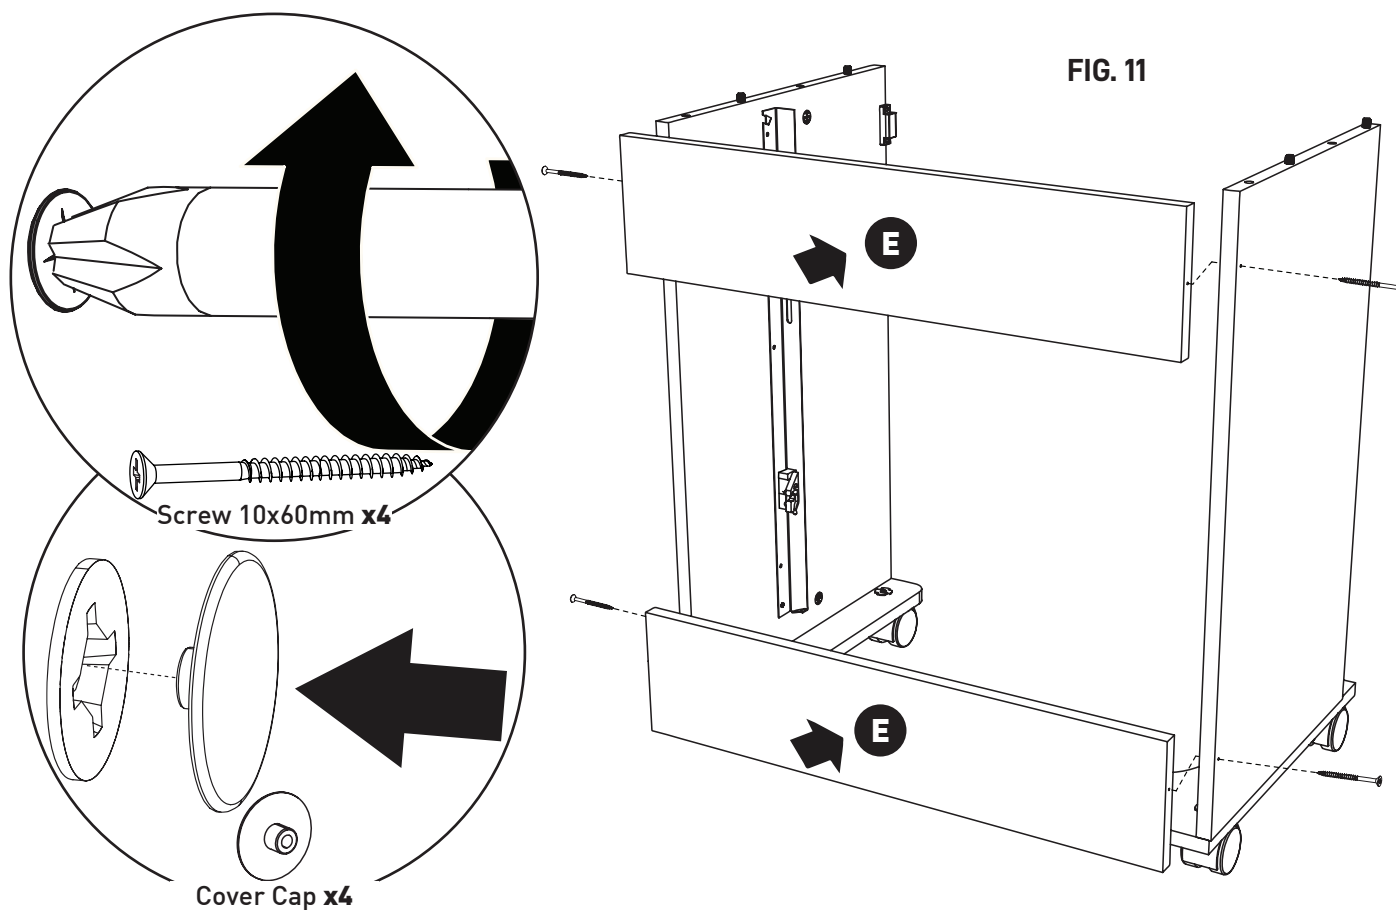

Step 11. Attach the Platform (F) to Lifter unit with Screws M4x14mm (x4).

 FIG. 12

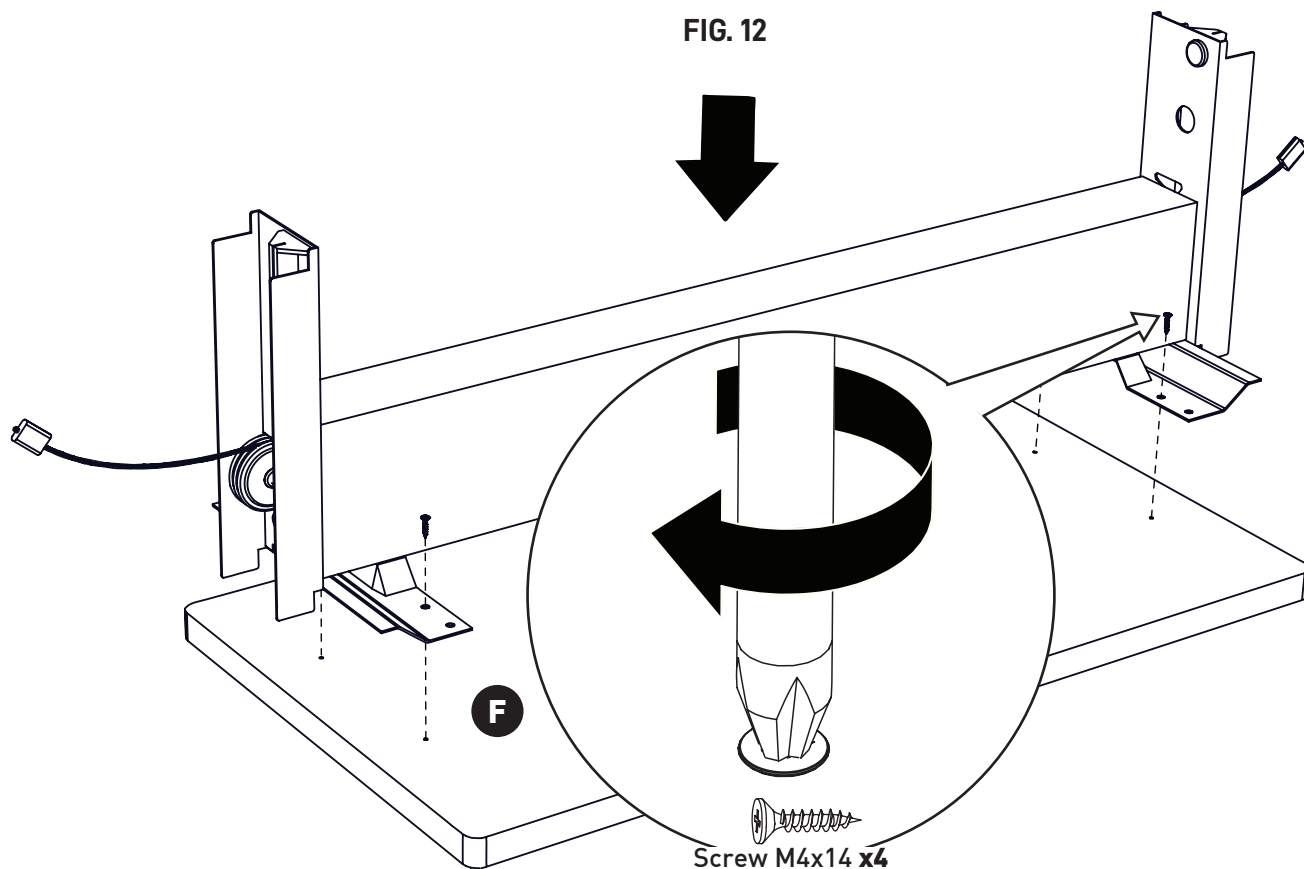


Step 12. Install the lift onto side rails following these steps.

A. Position lift guides (white plastic) over rails and gently slide the lifter into position.


B. Loop cable through metal tab on top of each lifter rail and secure. A flat screwdriver can be

used to push cord into tab. Push platform down until it clicks into first position. When lift has locked into the first position, a small block of wood will disengage from the rear of the lift where it was holding the cylinder, be sure to remove and discard it.

 If wood block is dislodged during shipping, please view our video "alternative Airlift" at www.arrowcabinets.com Assembly videos or call 1-800-533-73747.

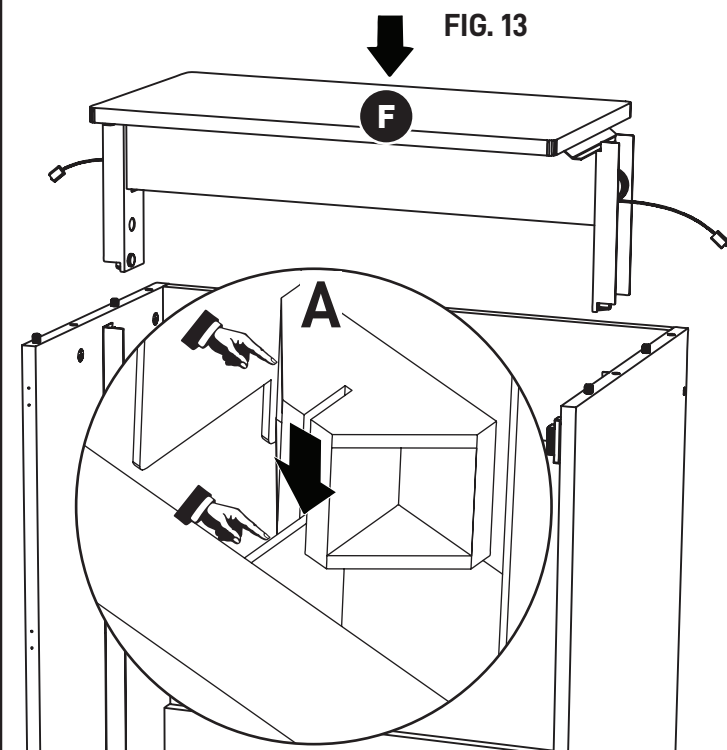

 Step 13. Place Top (A) onto the cabinet and tighten 4 cams inside to secure the top.

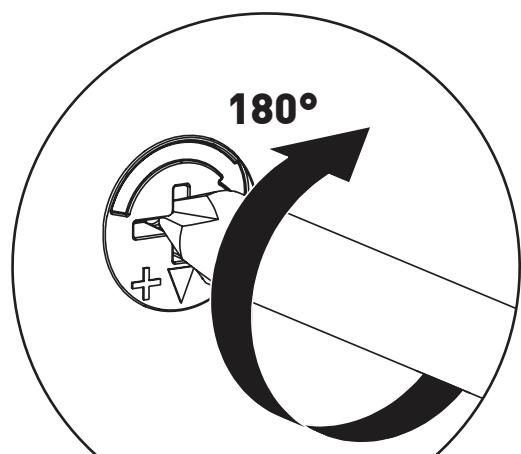

Remember to tighten the cams down on ALL pieces once completed!


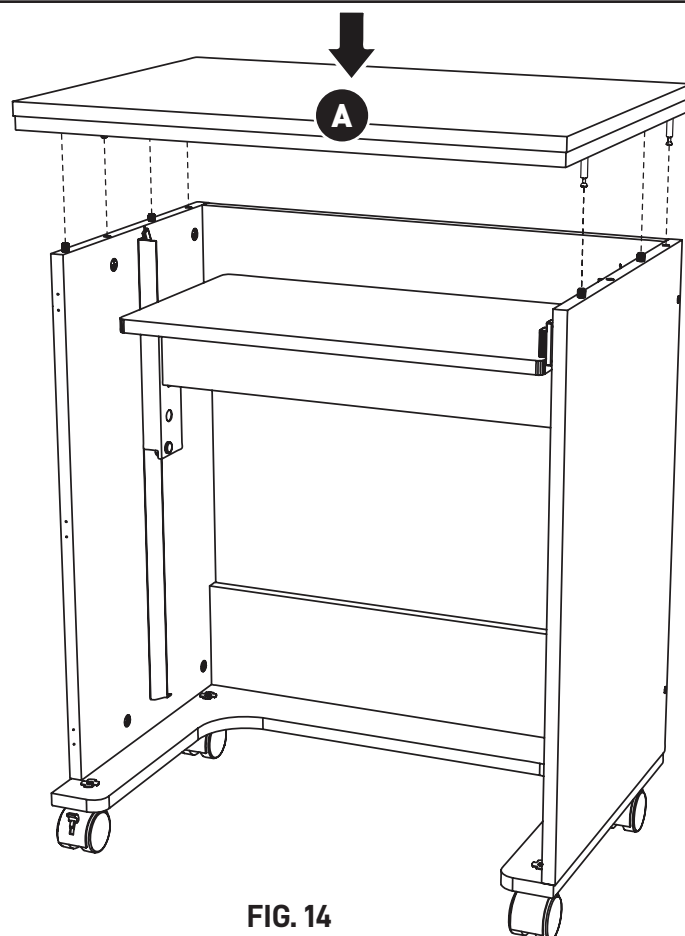 


FIG. 14


Step 14. Attach the Door (K) to Left Side Panel (C) with 3 flush door hinges using the 6 remaining Screws M4x14mm.

 FIG. 15

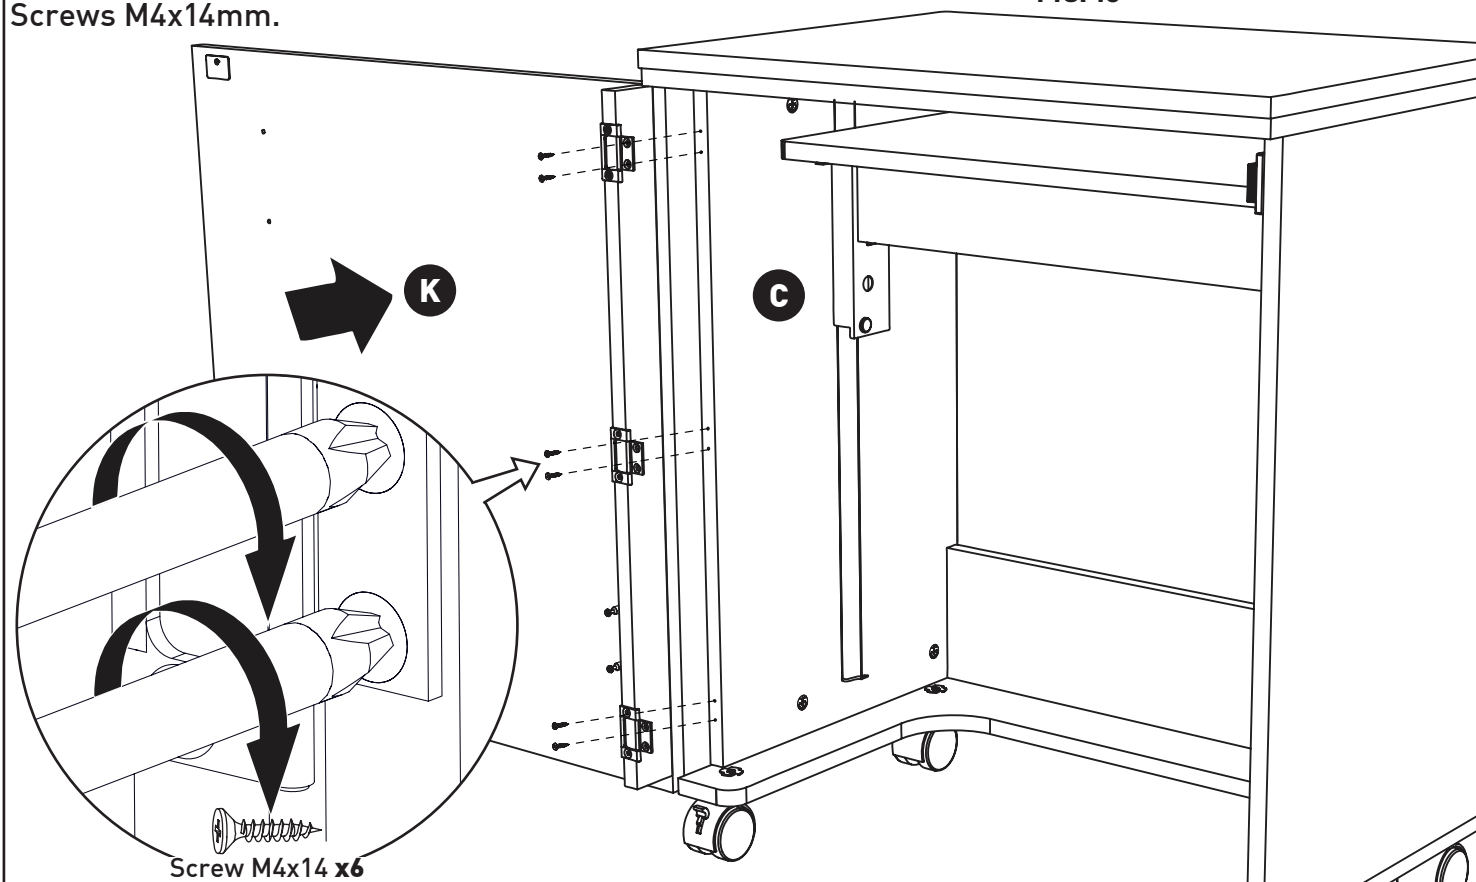

Step 15. Add door handle using bolts found with handle.

 FIG. 16

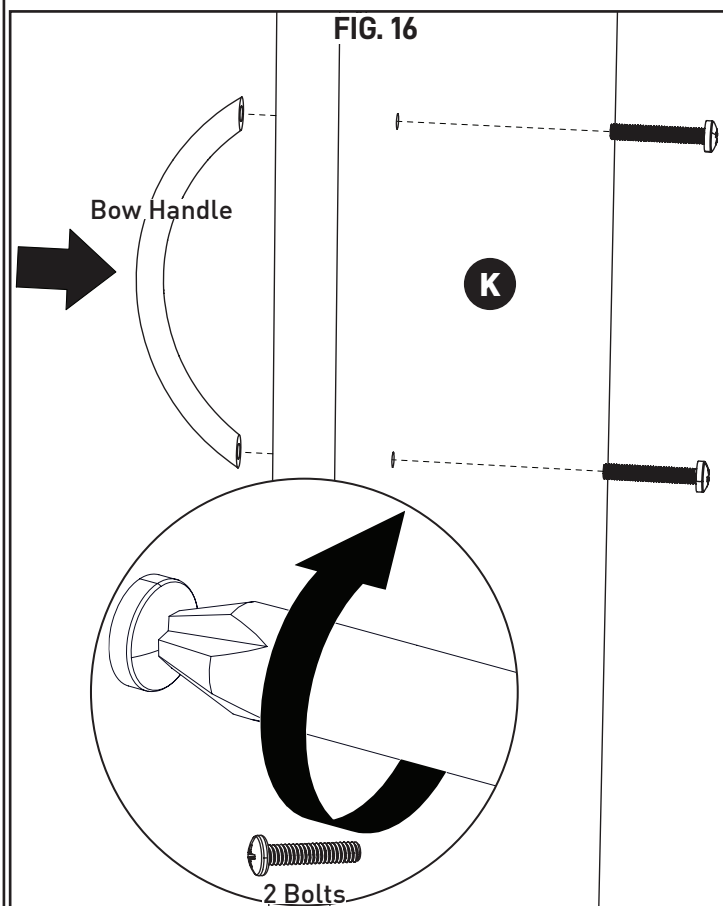

Step 16. Slide the preassembled door bin over the 4 cam bolts and 1 wood dowel found in the Door (K). Tighten the cam bolts to secure.


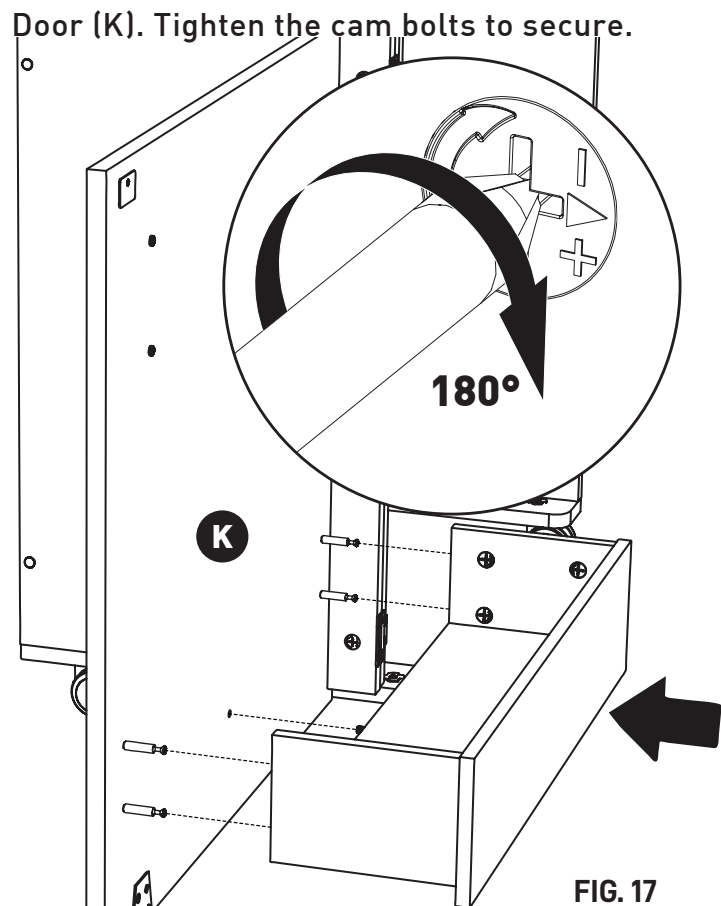 


FIG. 17

 


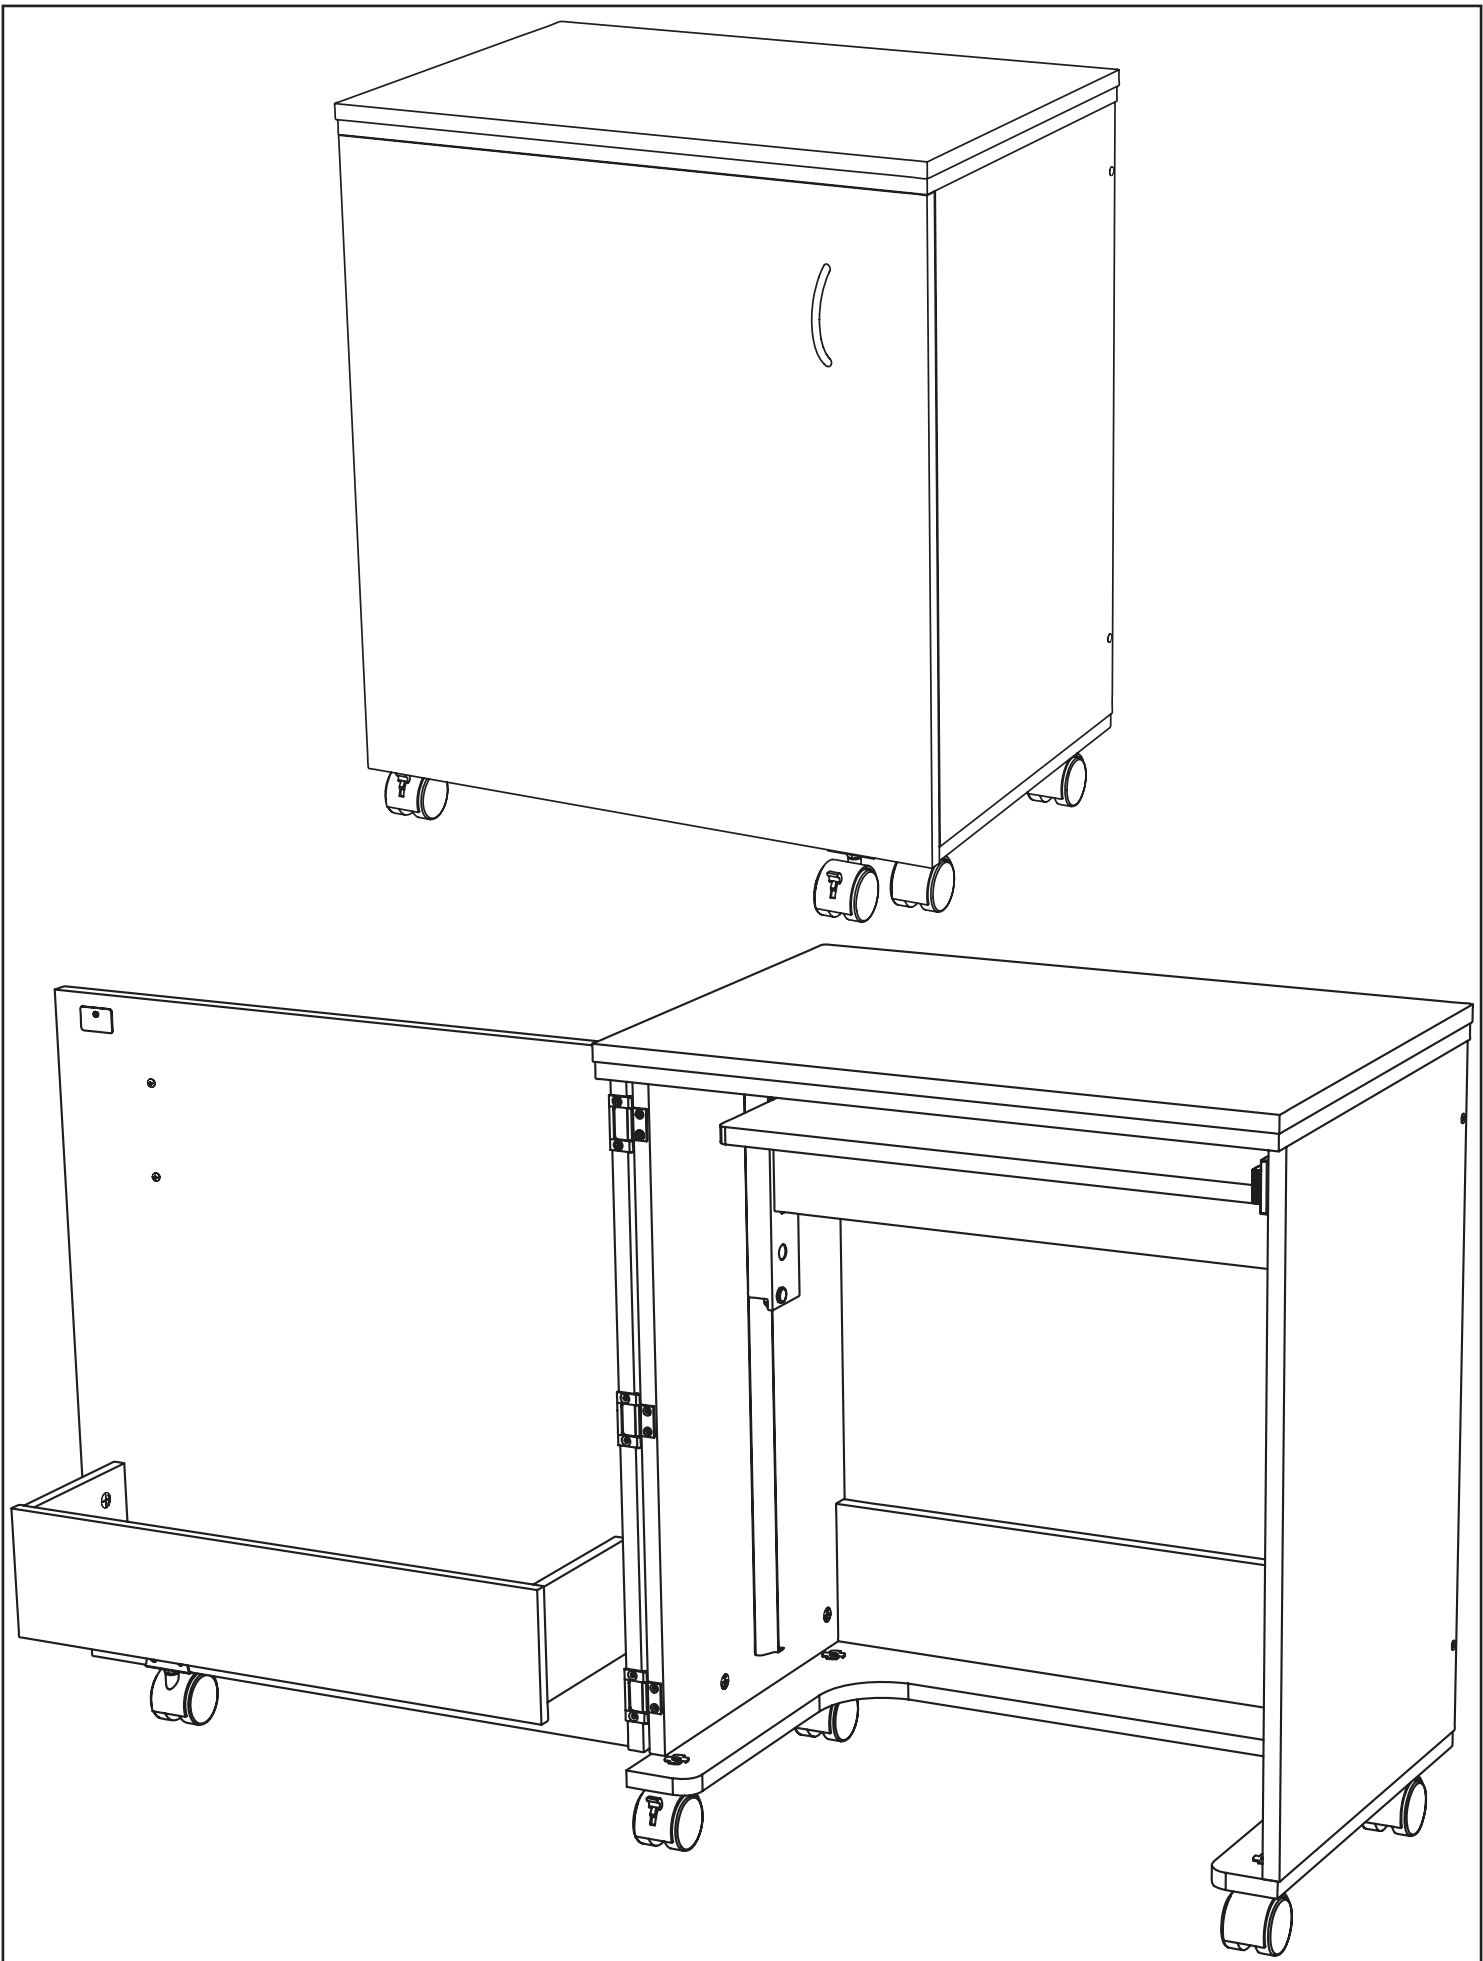

Accessories to Complete Your Sewing Experience

Custom Insert

 
Enhance your sewing experience with a custom-made insert for your Arrow or Kangaroo cabinet. Inserts are designed to reduce the gap between the machine and cabinet opening. This provides an ergonomic work surface for the free arm of the sewing machine, allowing for straighter stitches, less fatigue and an overall better experience using your machine and cabinet.

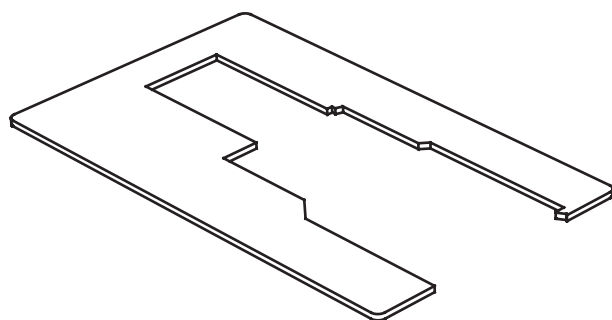

Insert

Arrow Sewing Chairs

 Our adjustable height sewing chair is a perfect accessory for any craft and sewing room. The chair's height is adjustable with easy to use controls and the cushions provide perfect lumbar support and comfort for those long sewing hours. Chair features five casters on a star base for greater movement at your sewing cabinet or crafting surface. Lift the seat cushion to reveal a hidden storage compartment for your small notions or patterns.

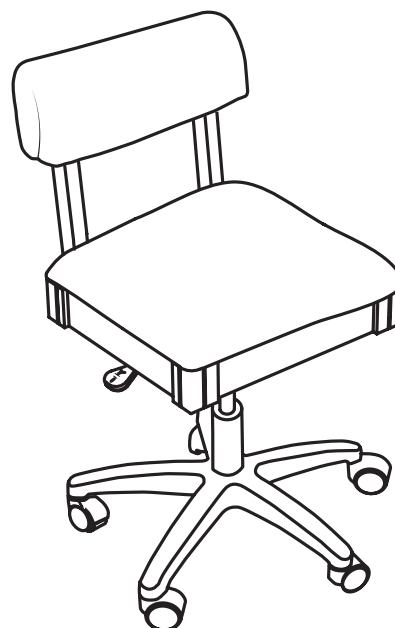

Hydraulic Sewing Chair

P.O. Box 307 Delavan, WI 53115
1-800-533-7347 Ext. 1
cs@arrowcabinets.com
www.arrowcabinets.com