 
 


ASSEMBLY INTRODUCTION

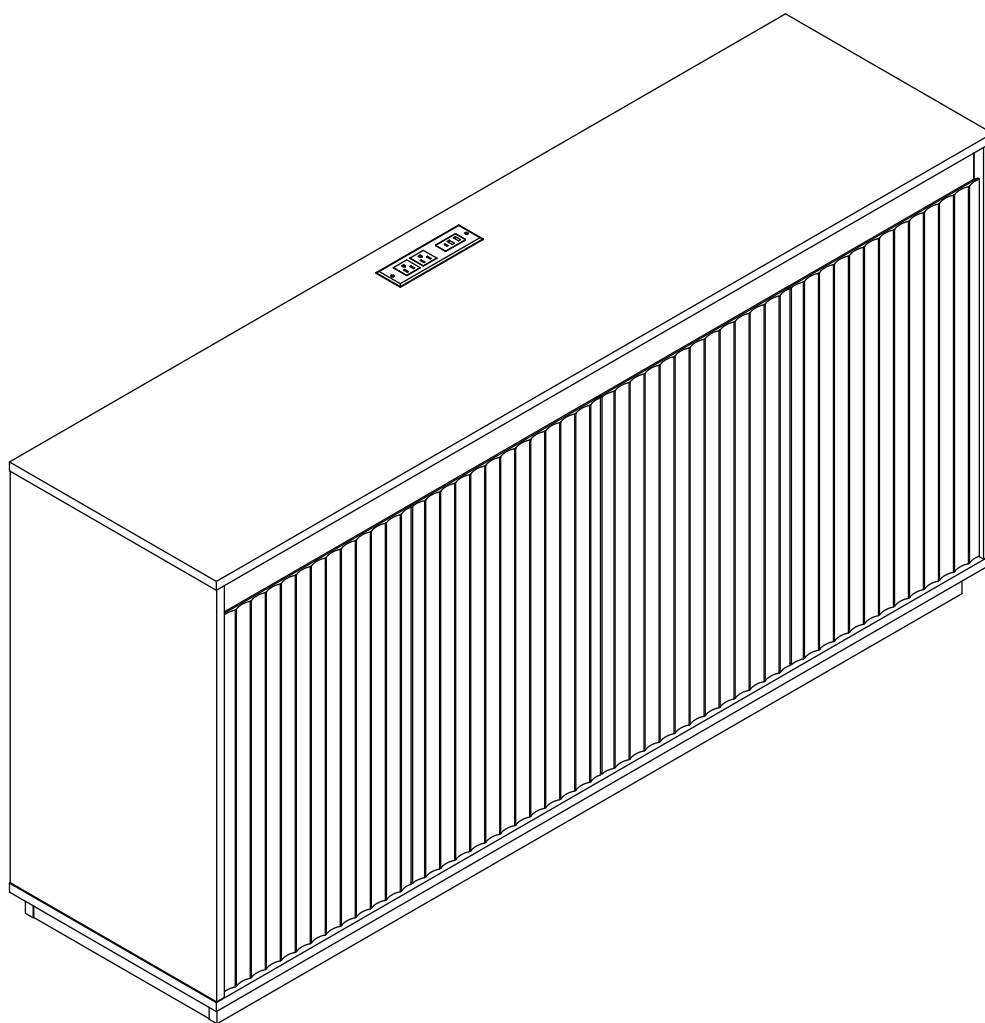

Exploded View

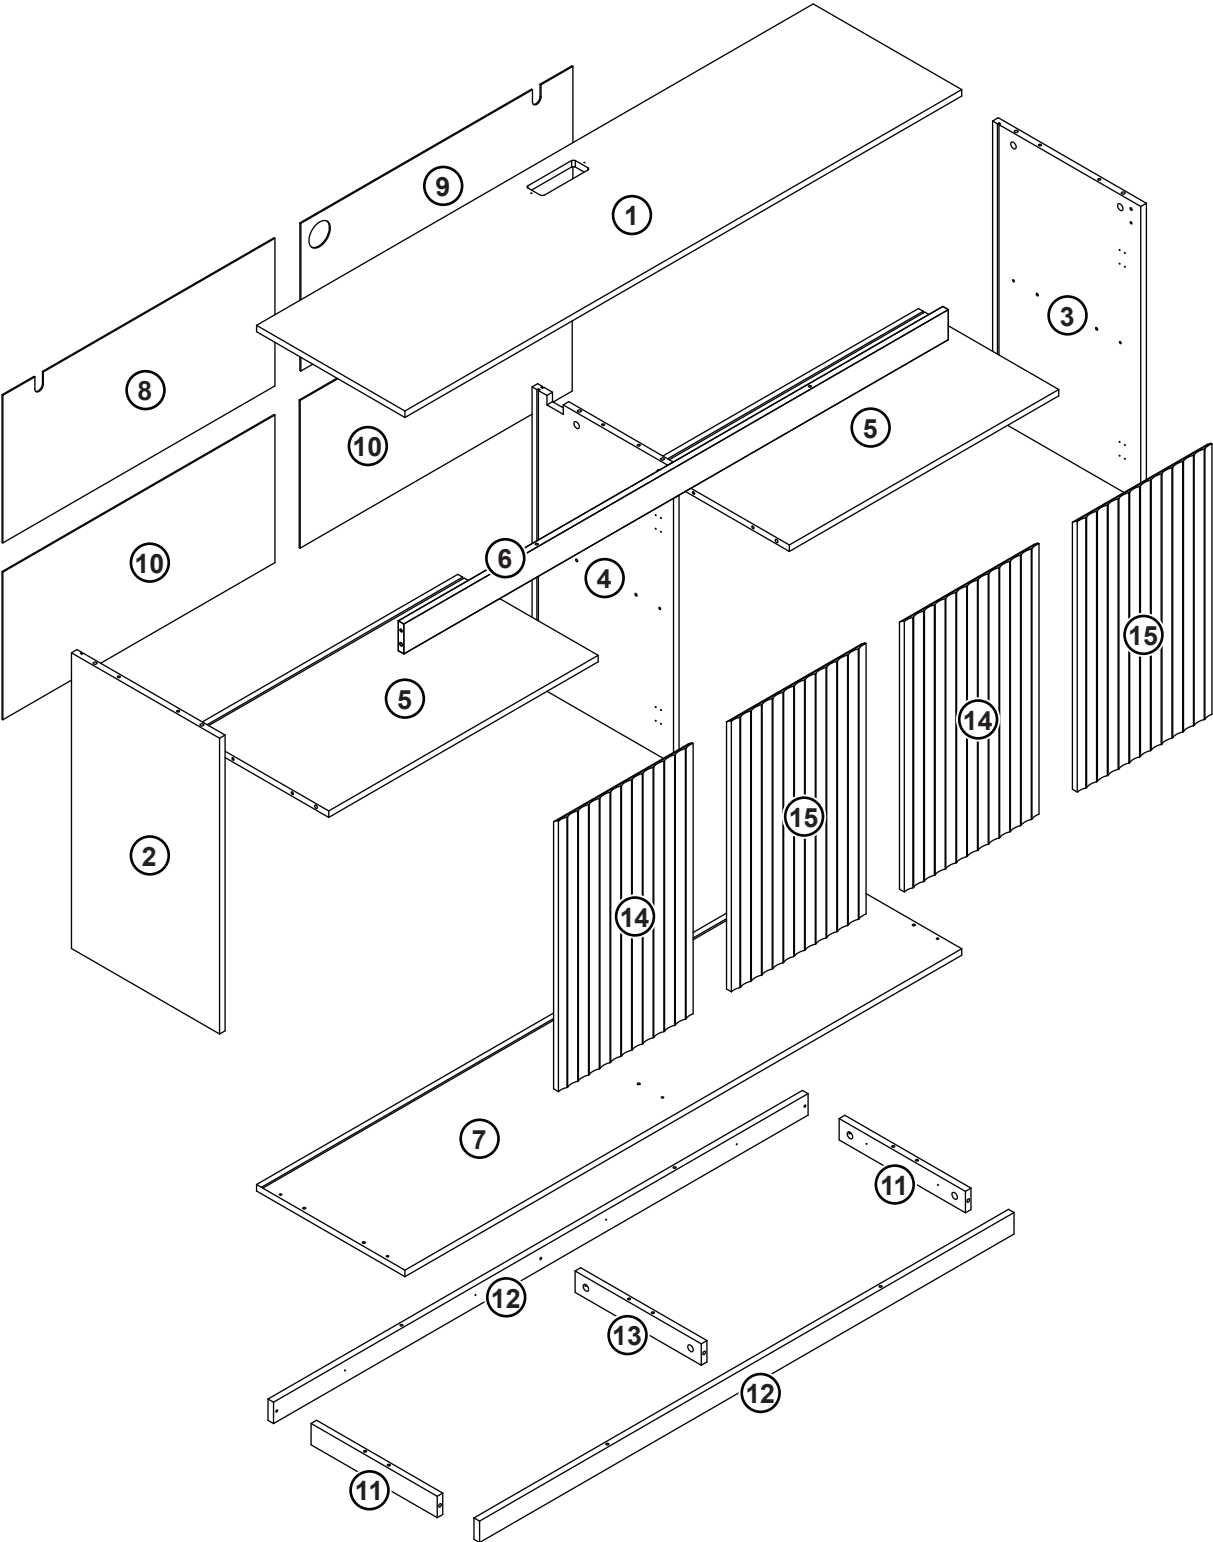

Fitting



A x 22
M6 x 35 mm



B x 22
φ15 x 9.5 mm



C x 30
φ6 x 30 mm



D x 6
φ4 x 40 mm



 
E x 32
φ3 x 12 mm




F x 2
φ6 x 50 mm



G x 2



H x 16
φ3 x 14 mm

 

I x 2
φ4 x 40 mm



J x 16



K x 4
35 mm



L x 4
35 mm



M x 48
φ3.5 x 12 mm

 
 


N x 1






O x 2
φ3 x 12 mm



Step 1

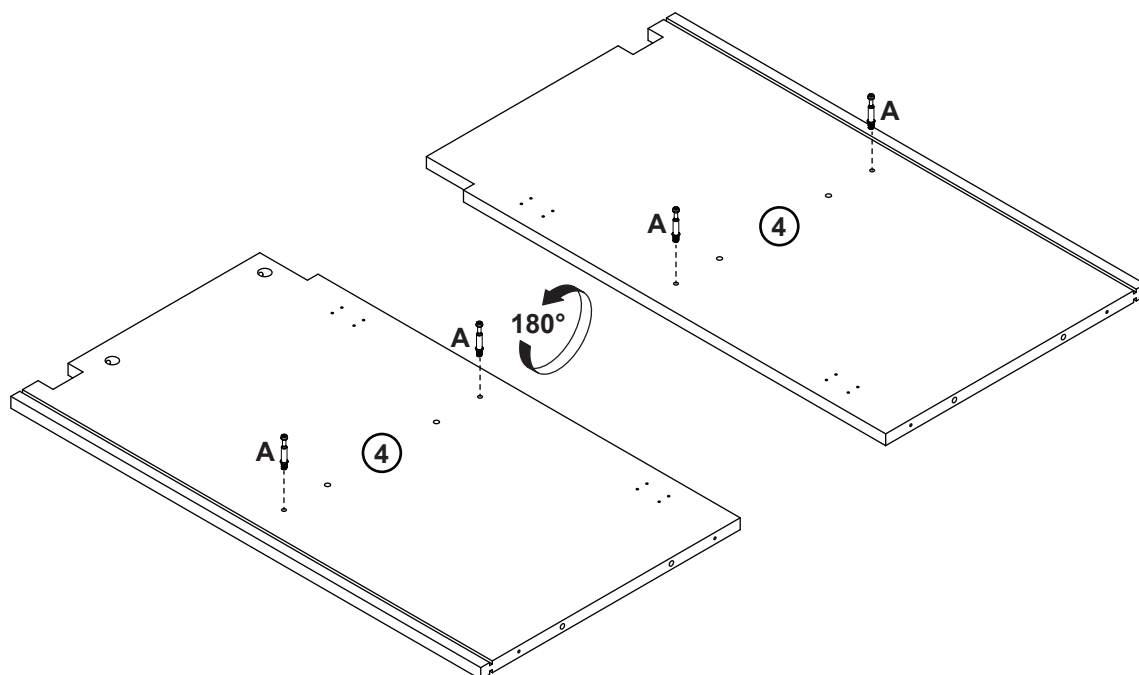

  
 
Step 2

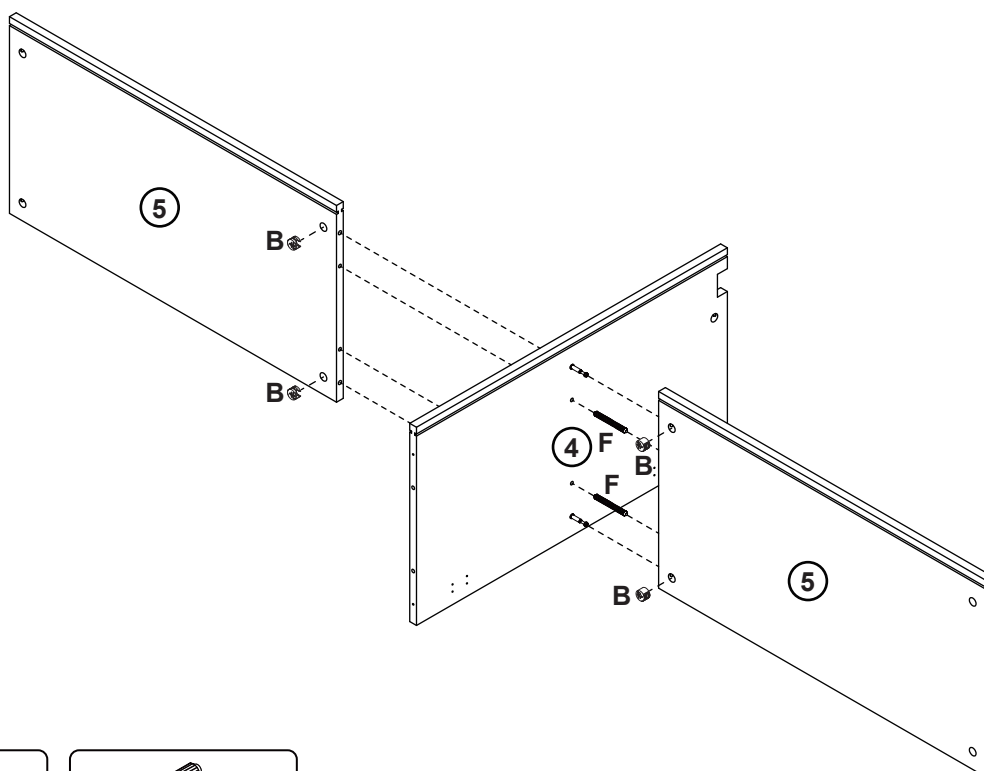

 
 
Step 3

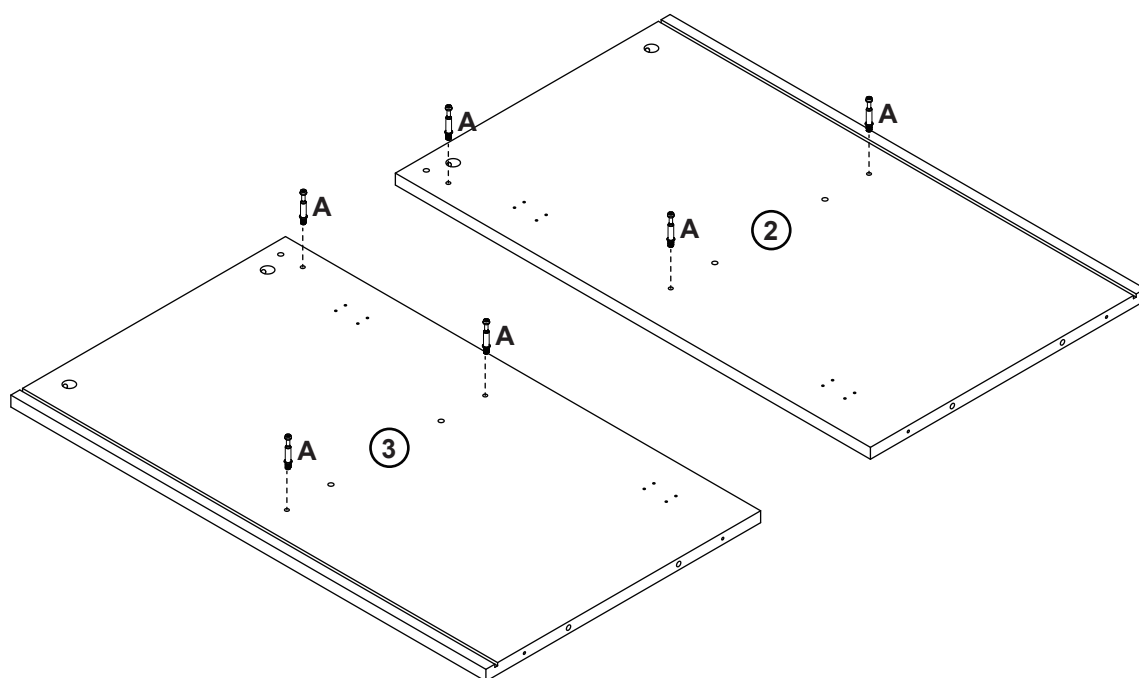

 
 
Step 4

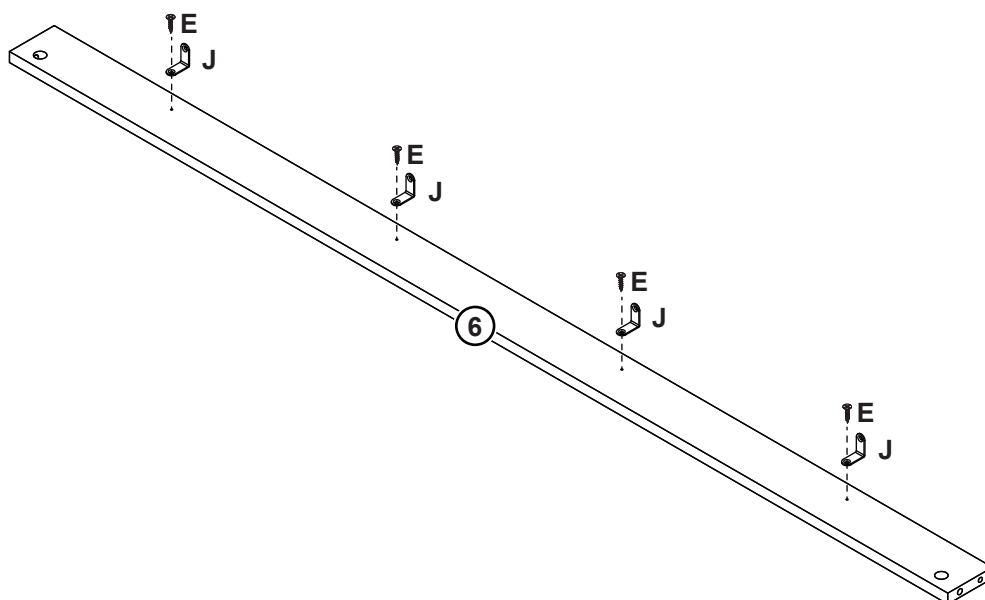

  
Step 5

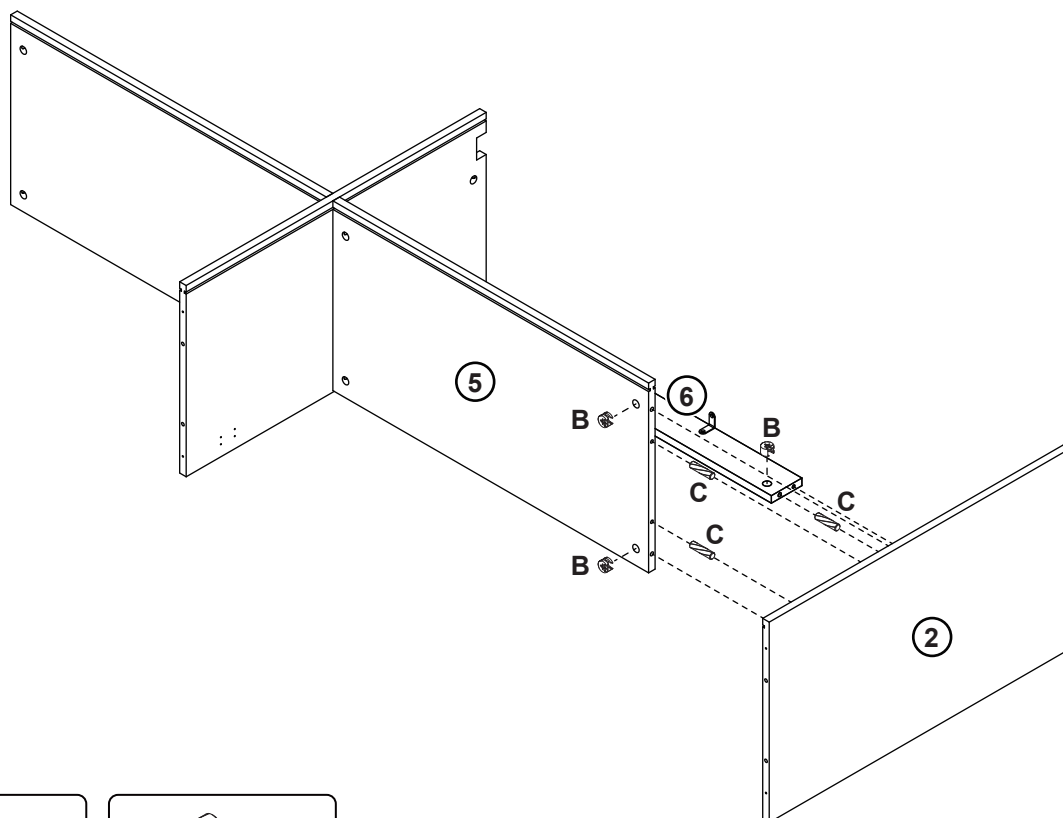

  
Step 6

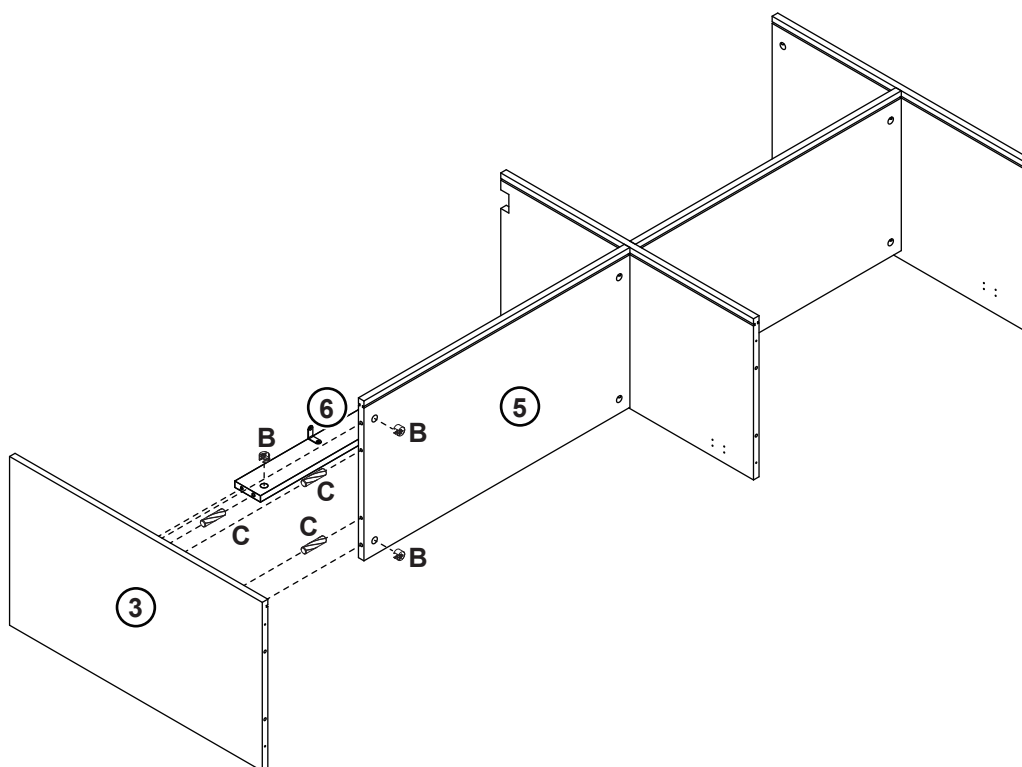



 
Step 7

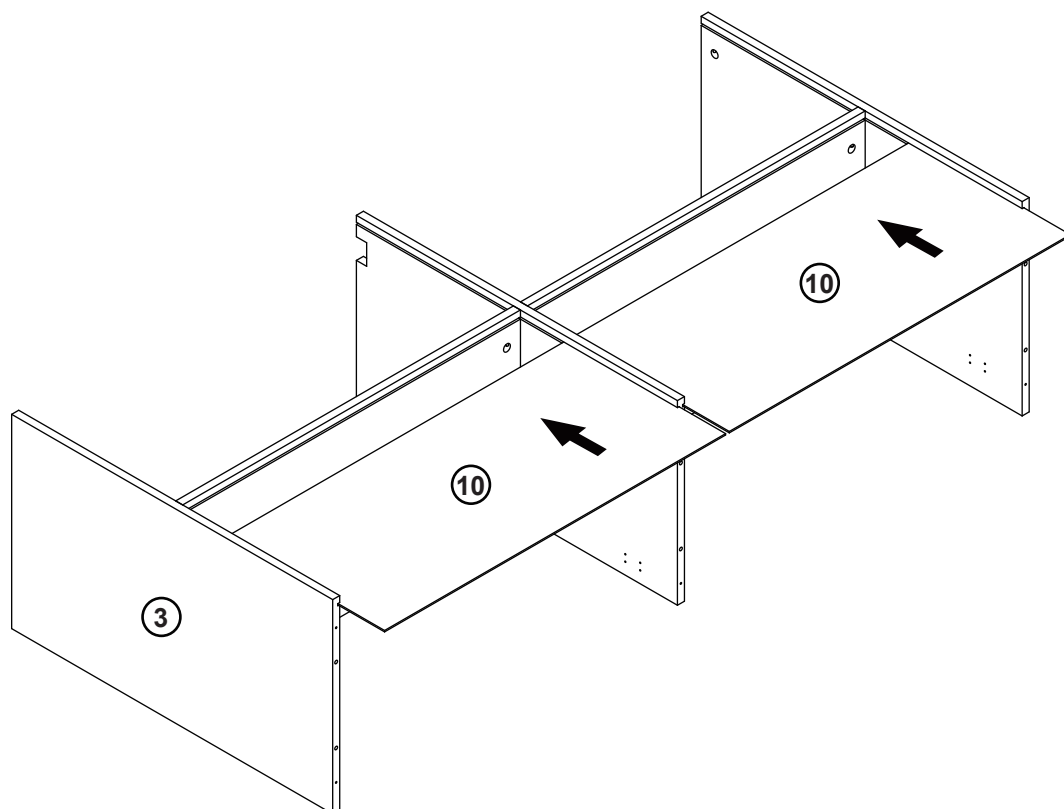


 
Step 8

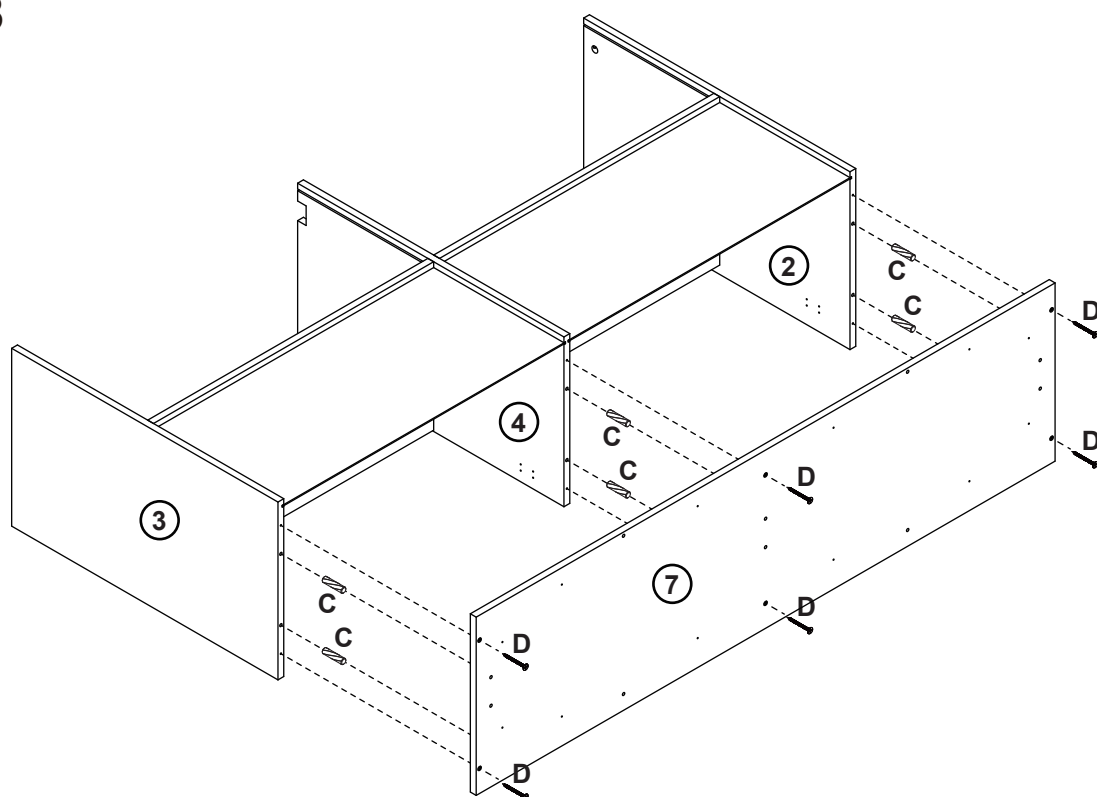

   
Step 9

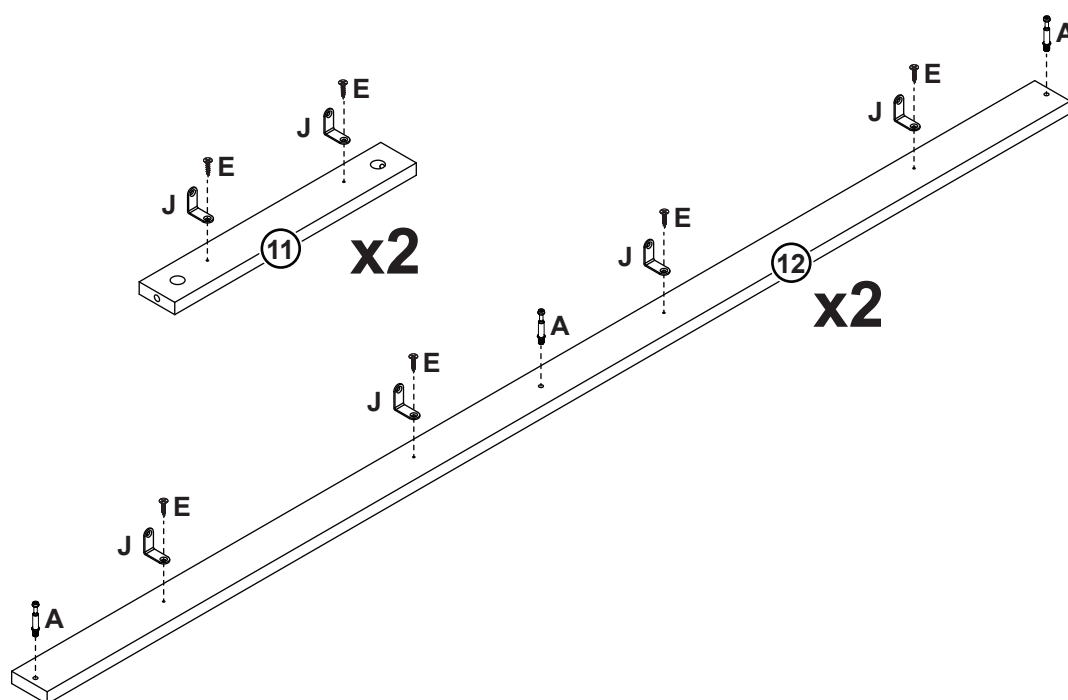

  
Step 10

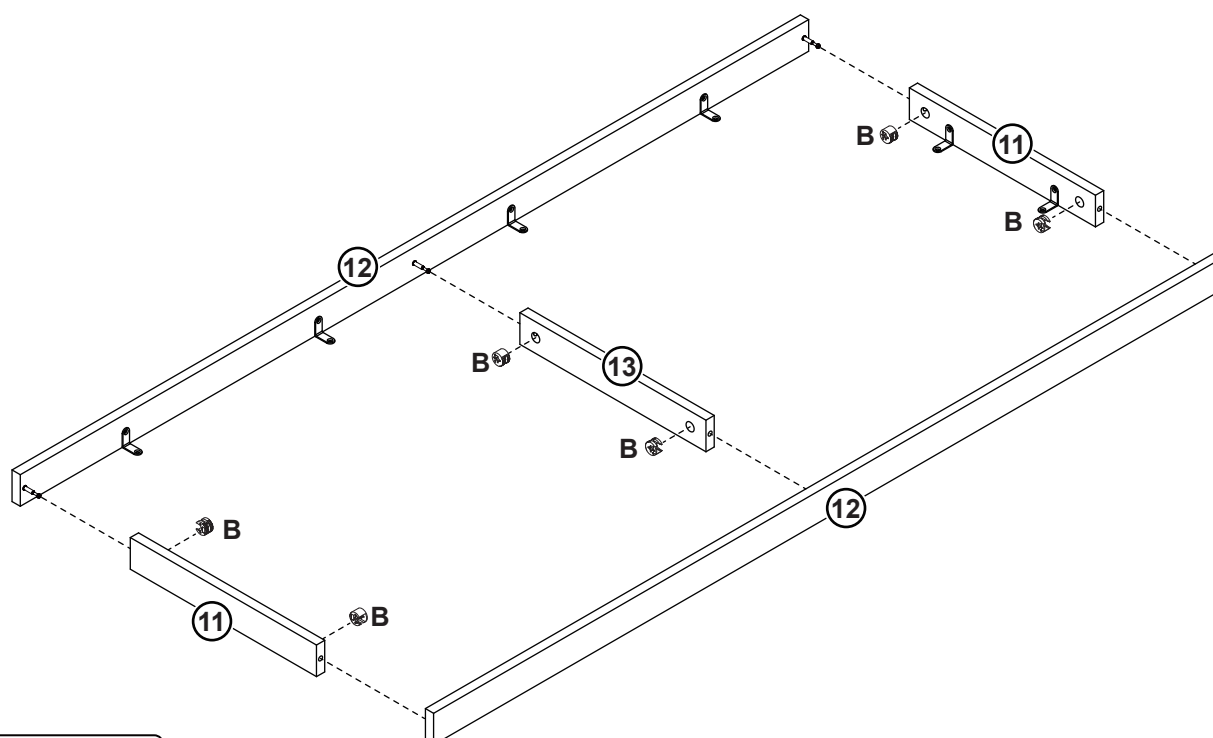

 
Step 11

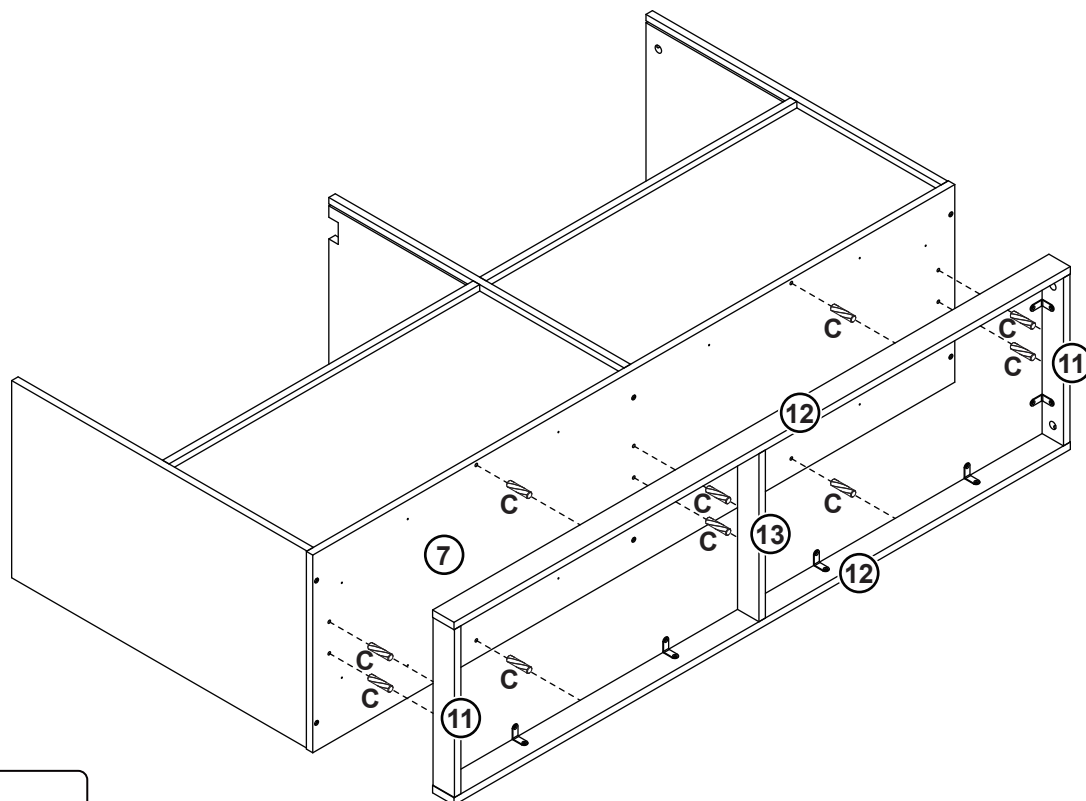


 
Step 12

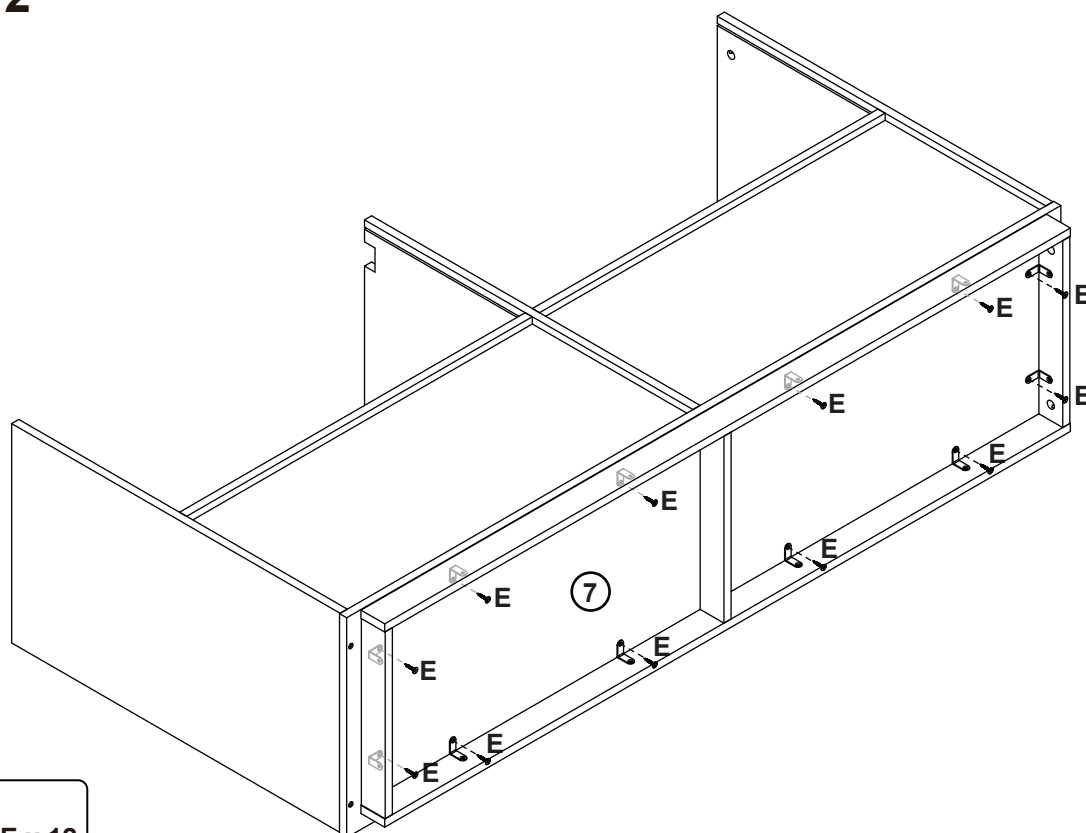

 
Step 13

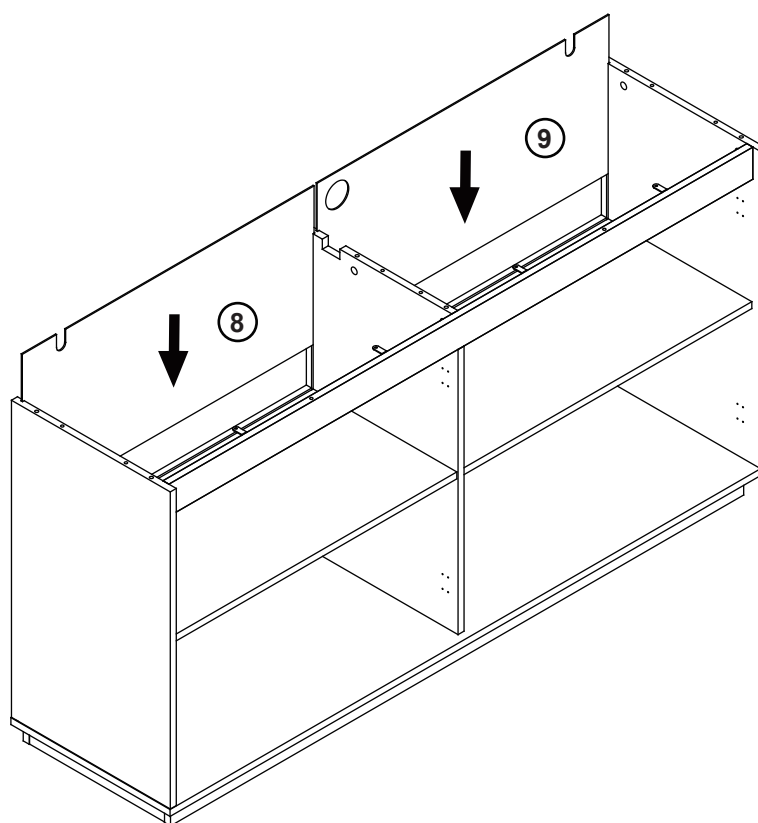

  Step 14

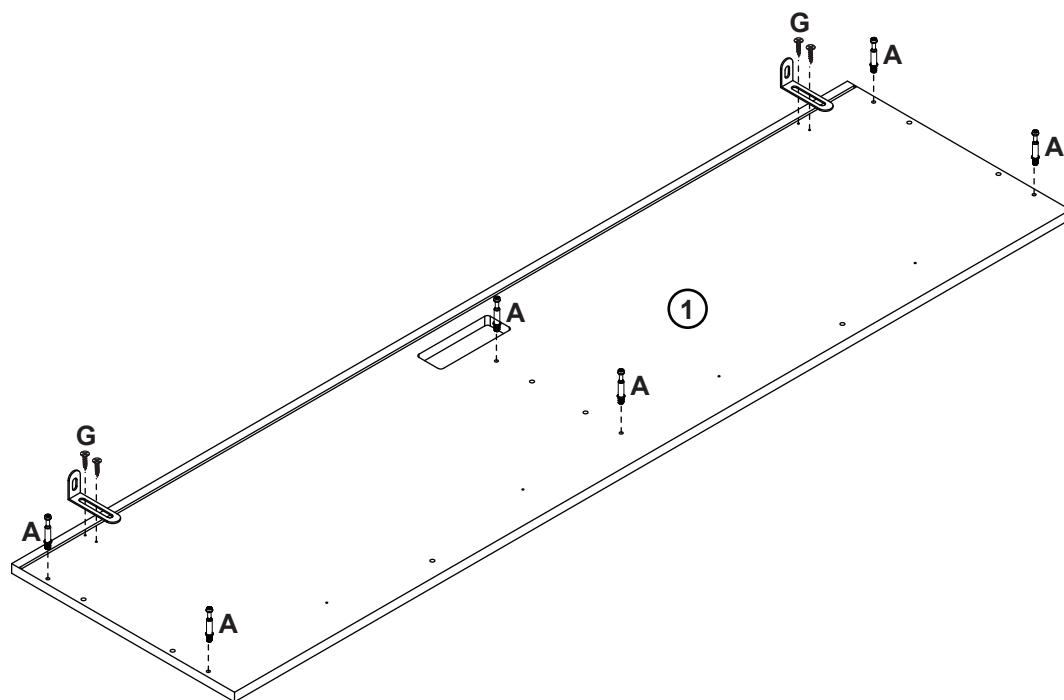

 Step 15

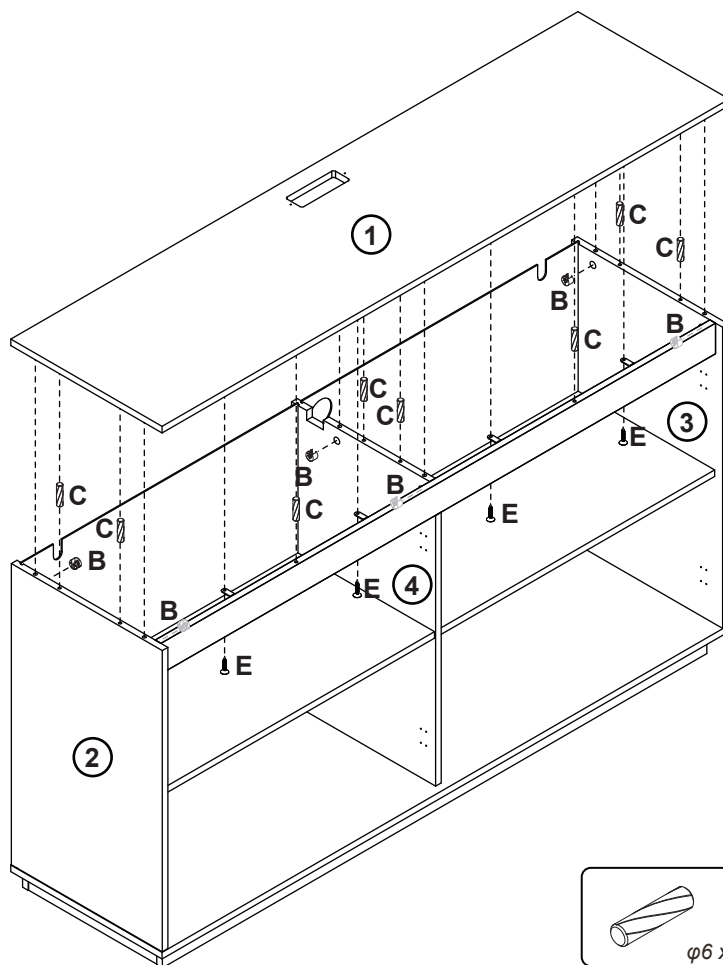

B x 6
 $\varnothing 15 \times 9.5 \text{ mm}$

 


C x 8
 $\varnothing 6 \times 30 \text{ mm}$





E x 4
 $\varnothing 3 \times 12 \text{ mm}$

Step 16


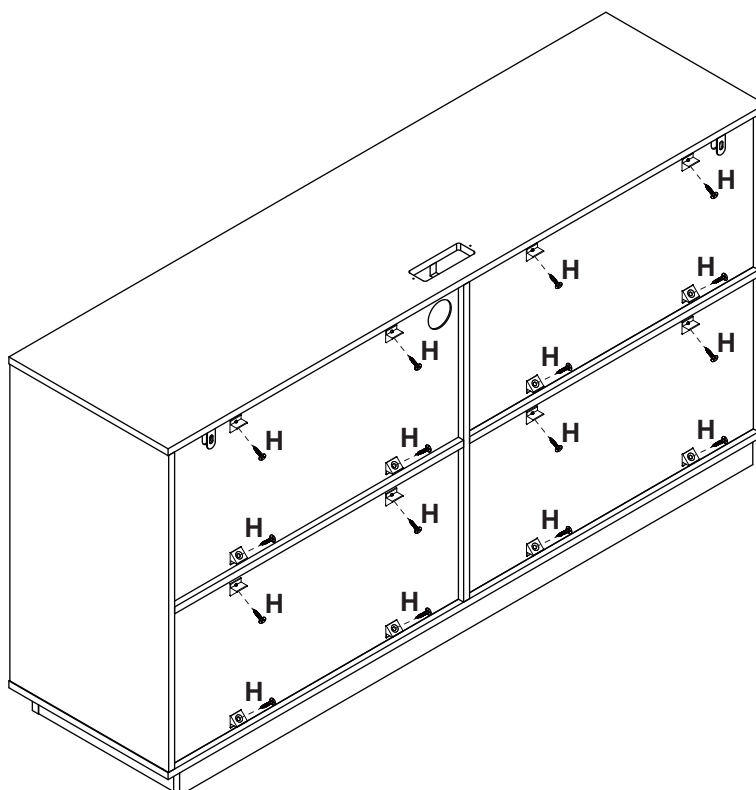


H x 16
 $\varnothing 3 \times 14 \text{ mm}$


 
 
Step 17

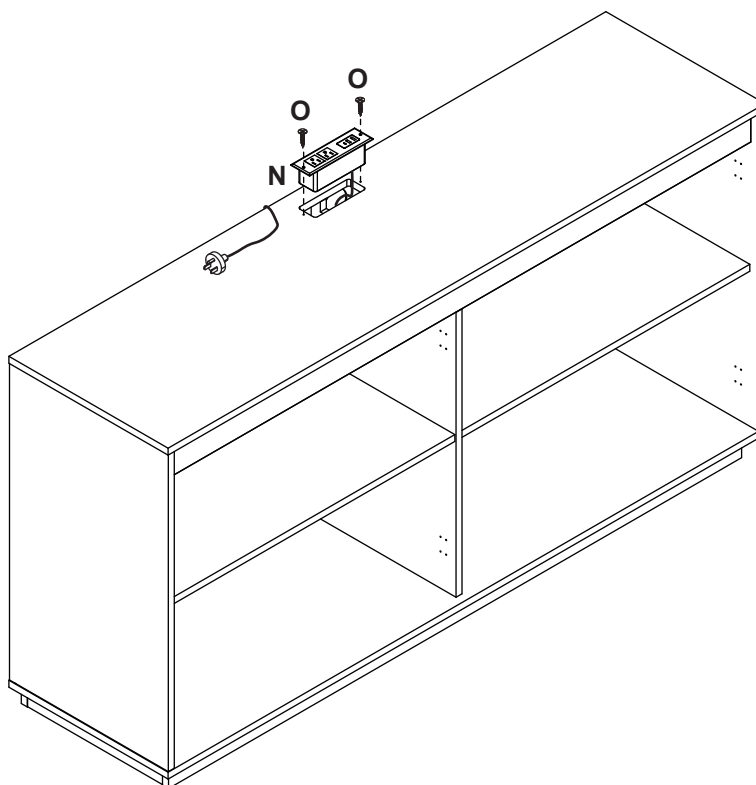

  
Step 18

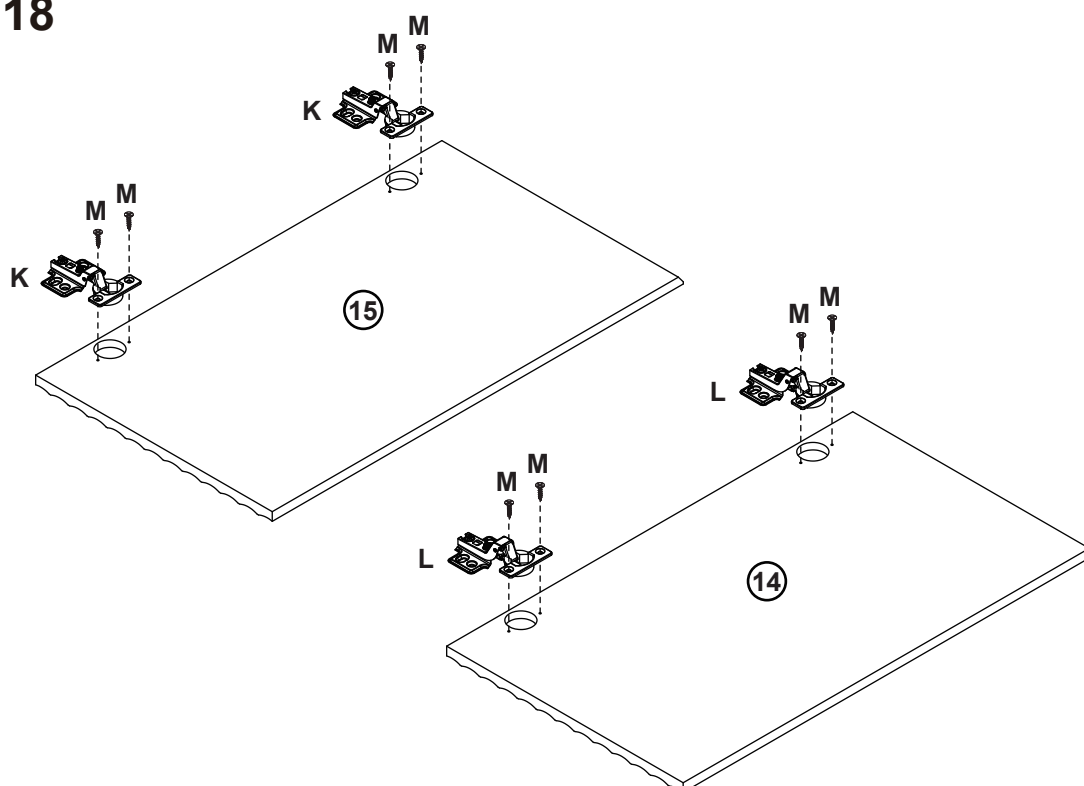

   Step 19

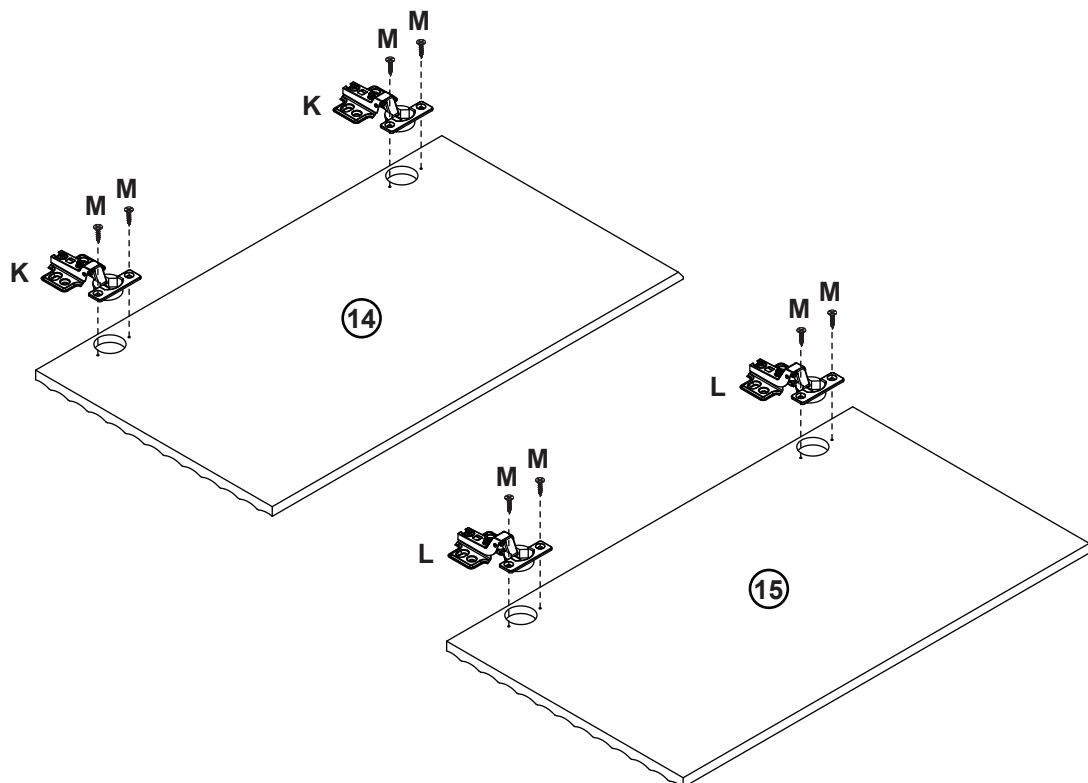

 Step 20


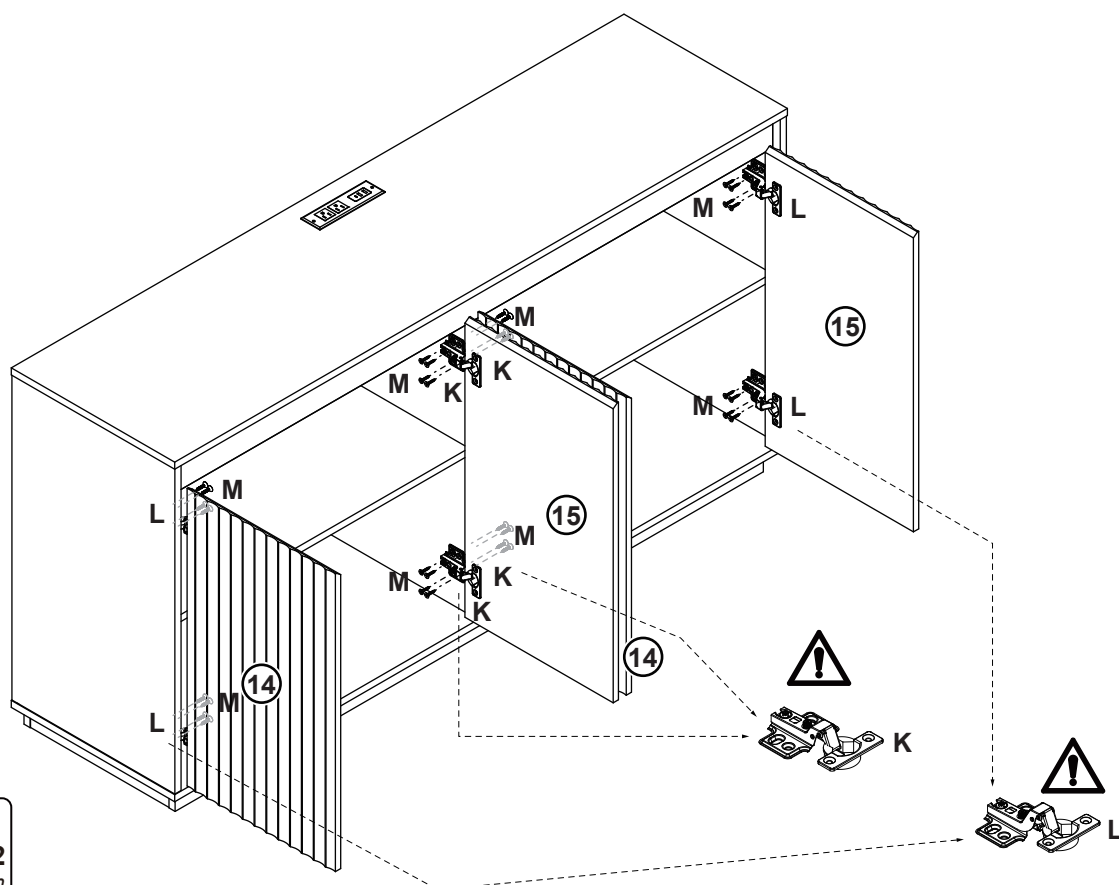


Step 21





Customer Attention:

  To align doors and control gap in between doors. Product doors may need adjusting during and after assembly. This can be done by adjusting appropriate screws. See below illustration.

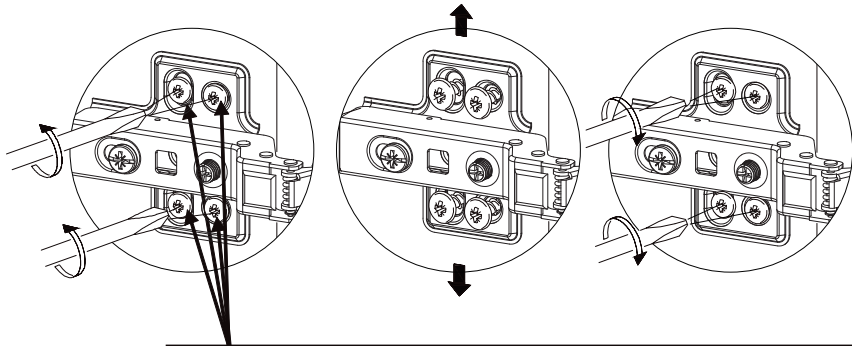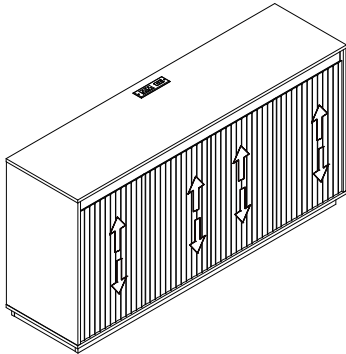



Vertical Door Adjustment:

  Loosen both screws on all hinges and lift the door to the desired height. This allows an even space at the top and bottom between the door and frame.

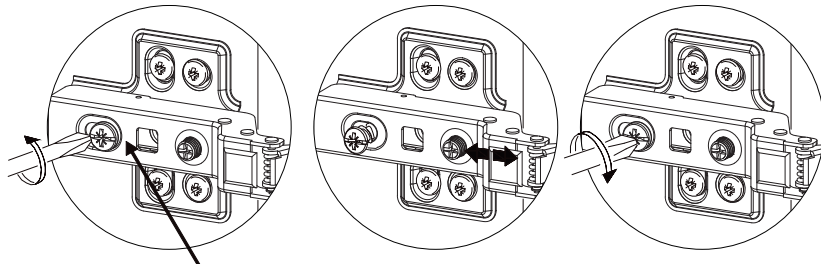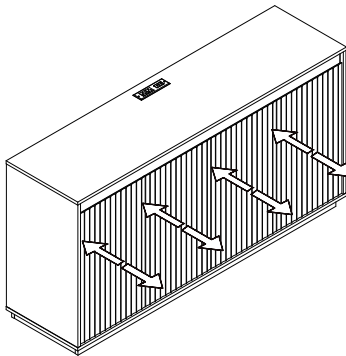

Lateral Door Adjustment:

  
If door is hinge bound, (rubbing on frame as you close or open door) loosening screw shown and move the door in appropriate direction. (In or out)

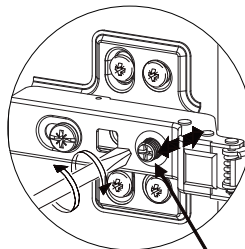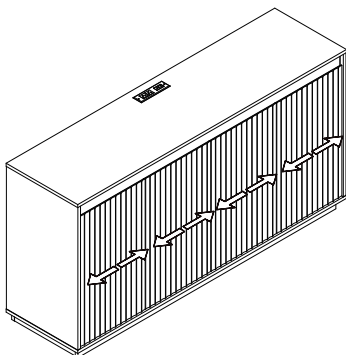

Horizontal Door Adjustment:

Rotate Screw clockwise or anticlockwise. This will produce an even gap between doors and frame.

 Step 22

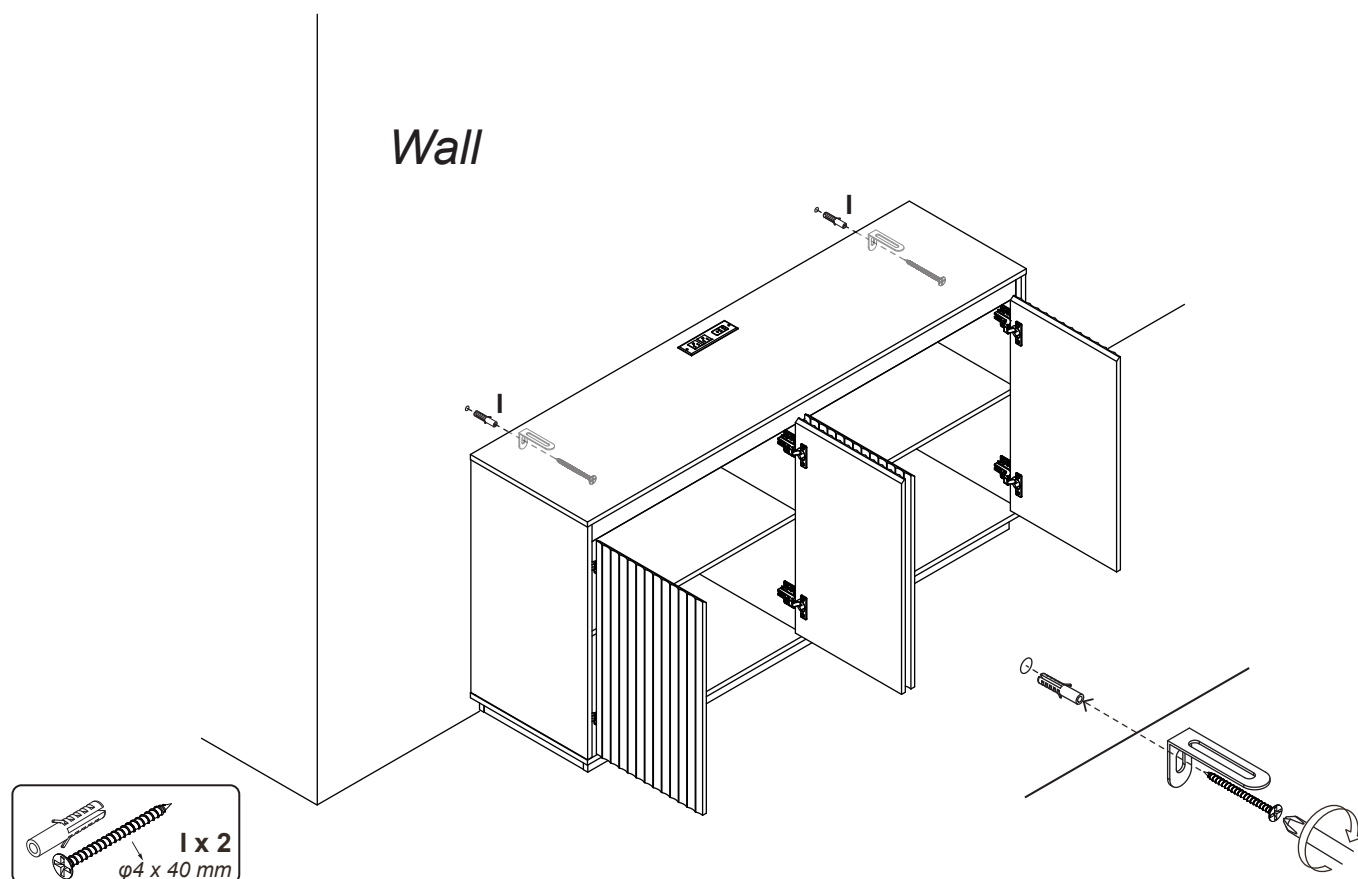

Step 23

