 




DISPLAY CABINET

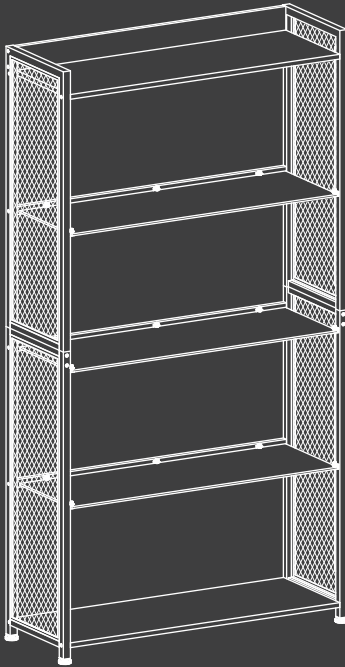

 
USER MANUAL

Safety Instructions

Thank You For Choosing Our Product

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included. Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!


Precautions

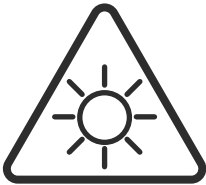


- Avoid long-term direct sunlight exposure.



- Keep away from sharp objects.

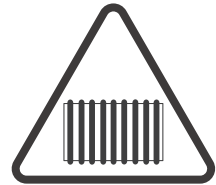


- Keep away from heat.

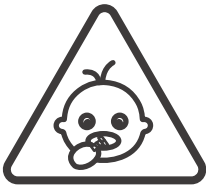

- Keep infants/children away from assembly parts to avoid choking and suffocation.




- Keep away from corrosive substances.

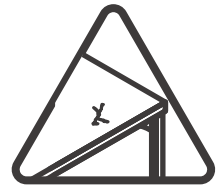

- Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.

 
 
 
 
 
 
 
 

 
Disassembly Diagram

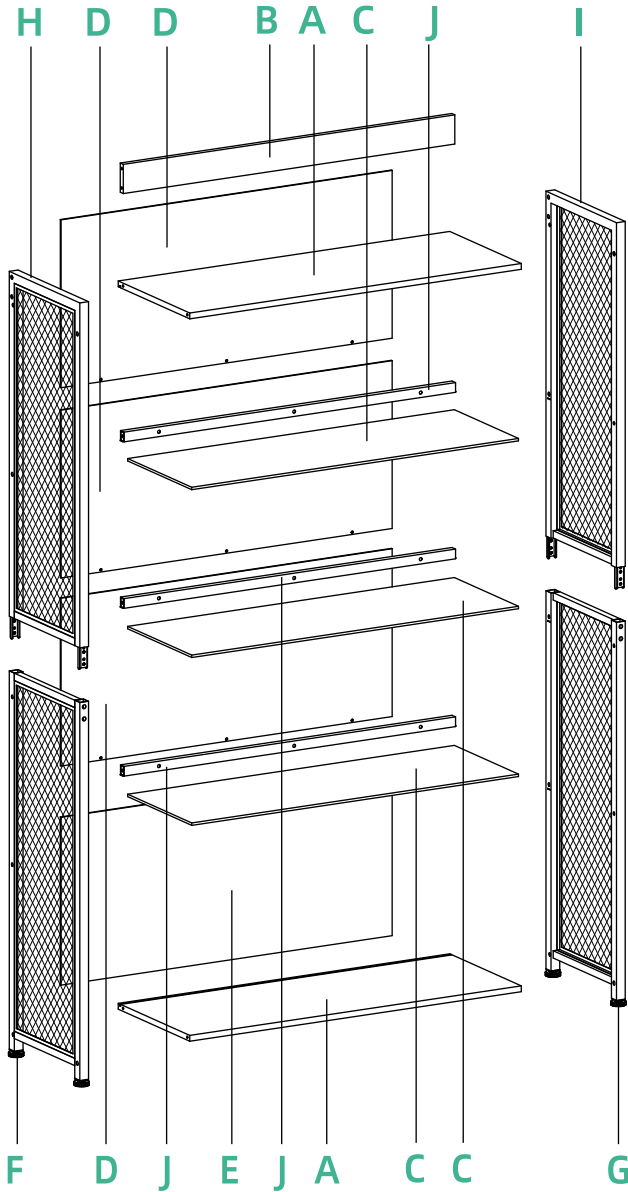



 

 

 
 
 
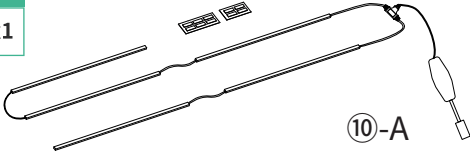 
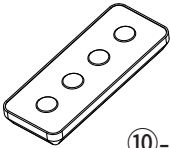 

 
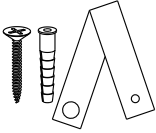 
Parts List

For ease and safety, we recommend two people for assembly.





A x2 	B x1 	C x3 	D x3 
E x1 	F x1 	G x1 	H x1 
I x1 	J x3 		

Parts List

<p>① x5</p>  <p>1 Spare</p>	<p>② x12</p>  <p>M6x10 2 Spares</p>	<p>③ x7</p>  <p>M6x28 1 Spare</p>	<p>④ x17</p>  <p>ST4x8 2 Spares</p>
<p>⑤ x14</p>  <p>ST4x12 2 Spares</p>	<p>⑥ x14</p>  <p>ST6x50 2 Spares</p>	<p>⑦ x14</p>  <p>2 Spares</p>	<p>⑧ x17</p>  <p>2 Spares</p>
<p>⑨ x3</p>  <p>1 Spare</p>	<p>⑩ x1</p>  <p>⑩-A</p> <hr/>  <p>⑩-C</p>		<p>⑪ x2</p>  <p>1 Spare</p>
<p>⑫ x1</p> 			<p>⑬ x2</p> 

Assembly Instructions

  
1

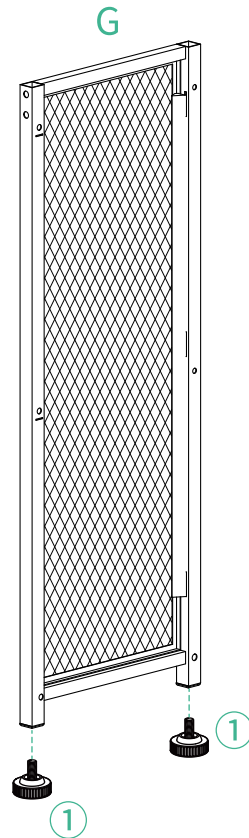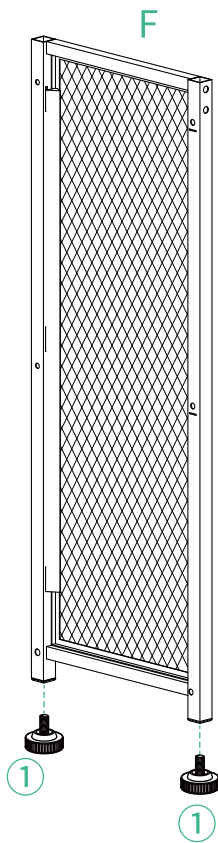


Assembly Instructions

2

 Insert parts H and I into parts F and G respectively.
Secure 80% with screws ② and tighten 100% when all screws ② are installed.




Please note: Ensure that the holes indicated by the arrows face the same side; otherwise, the subsequent installation will be affected.

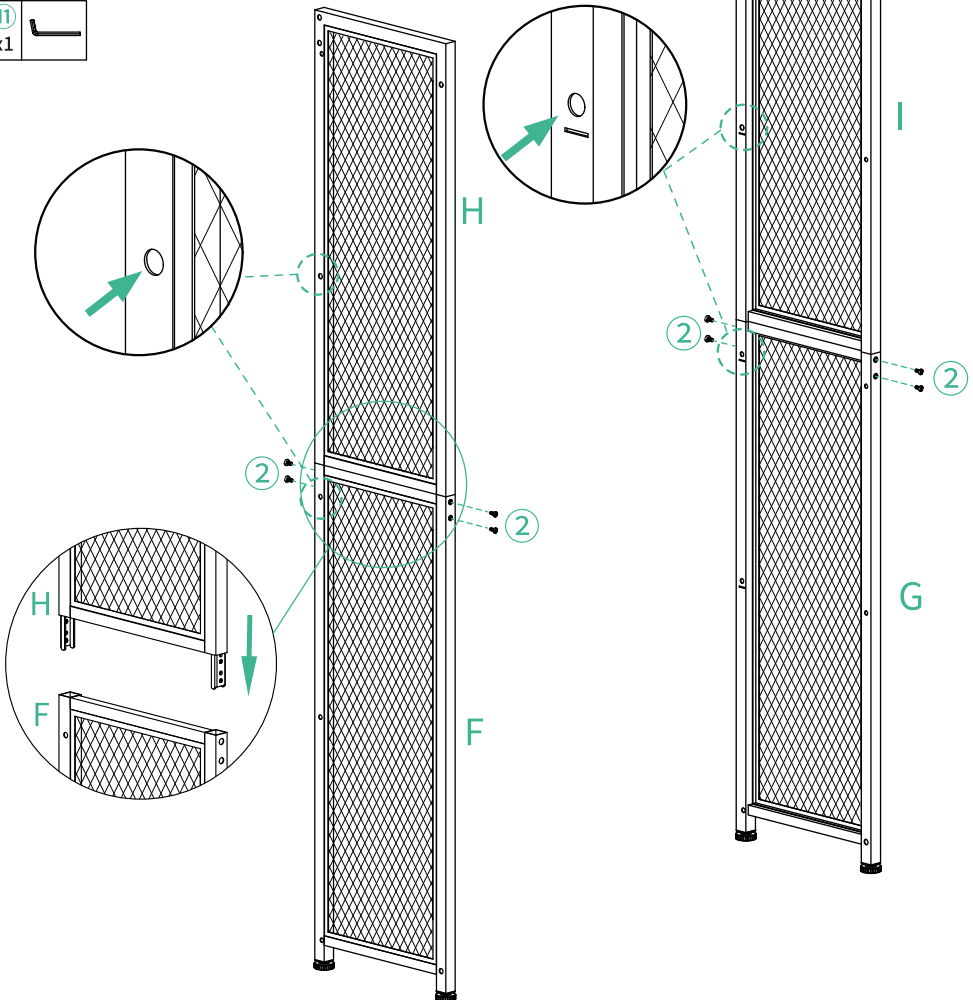



Assembly Instructions

3

 Install parts J with screws ③. Only need to tighten 80%.



Please note: The raised iron pieces of both ends on parts J need to be inserted into the groove on parts H, F, I, G. when installing parts J (as shown in the figure).

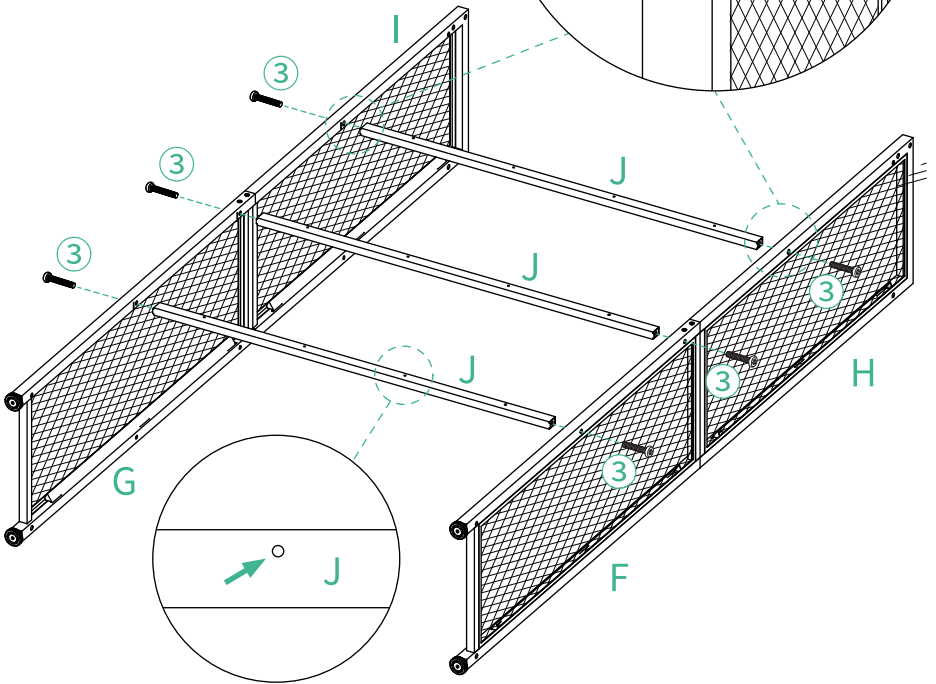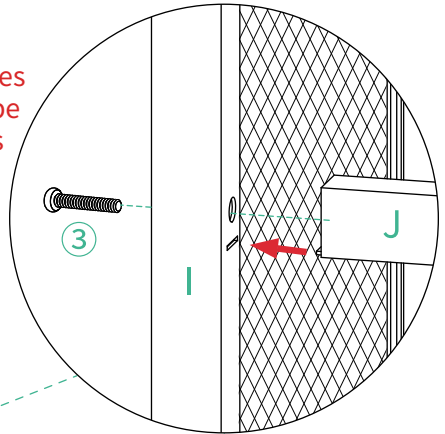


Please note: Orient Part J with the 4 screw holes facing outward to secure the backplate. Incorrect orientation will hinder installation.


Assembly Instructions

4

Attach the 3M adhesive in part ⑩-A to the ends of the iron pieces as shown in the picture.

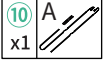


Remove release paper before use.

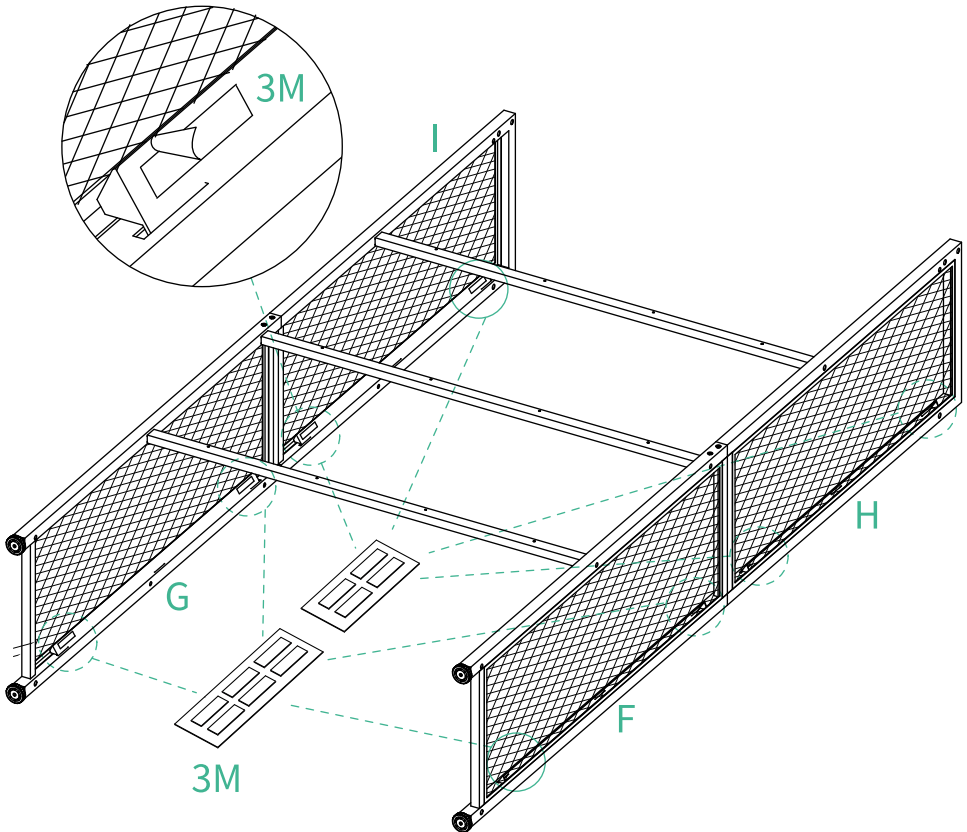


Assembly Instructions

5

 Attach the part ⑩-A mounted on both sides of the frame at the 3M adhesive as shown in the picture.



Please note: Part ⑩-A mounted on the top section which is indicated by the arrow needs to be attached in the next step.

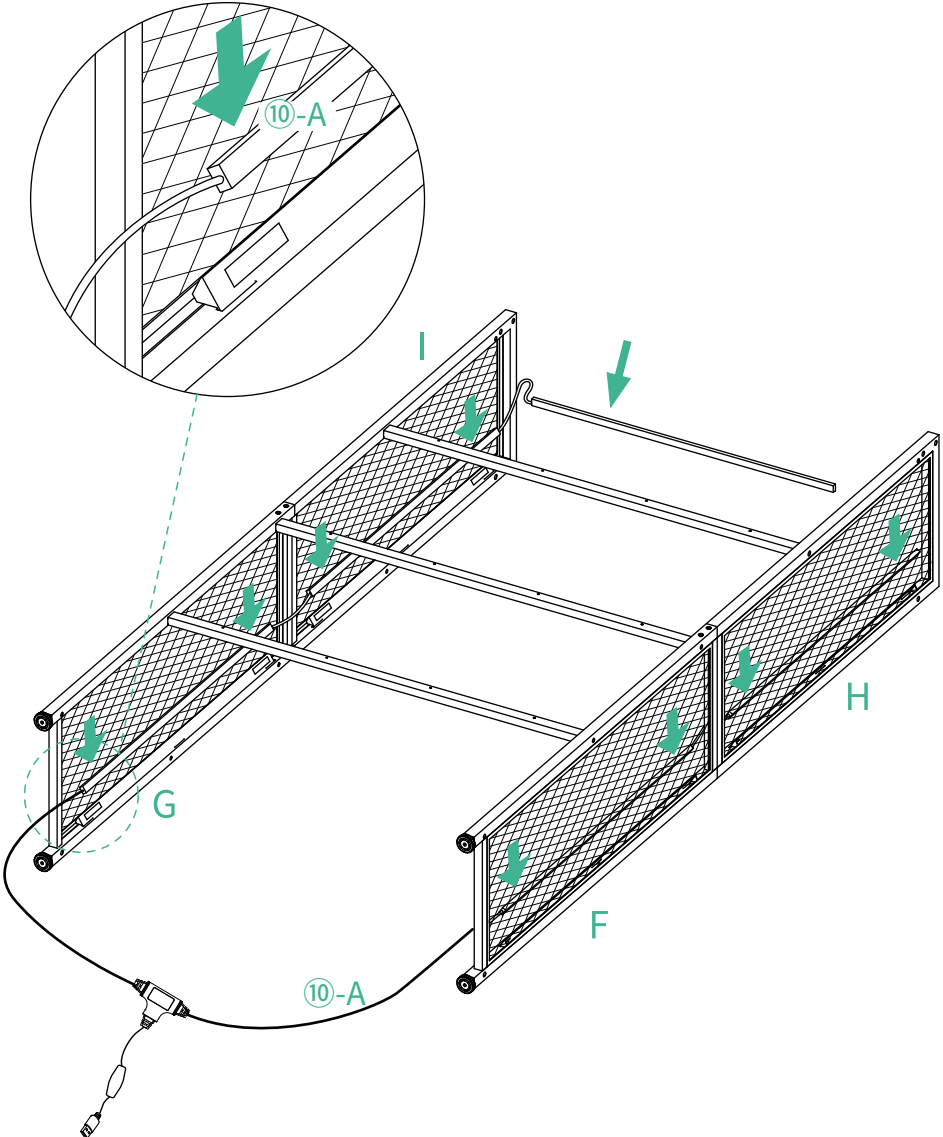

Assembly Instructions



6

Use screws ⑥ to secure parts A, and fix the light strip ⑩-A (uninstalled part of the light strip) underneath the part A on the top floor.

Please note: Screws ⑥ only need to be tightened 80%.



Remove release paper before use.

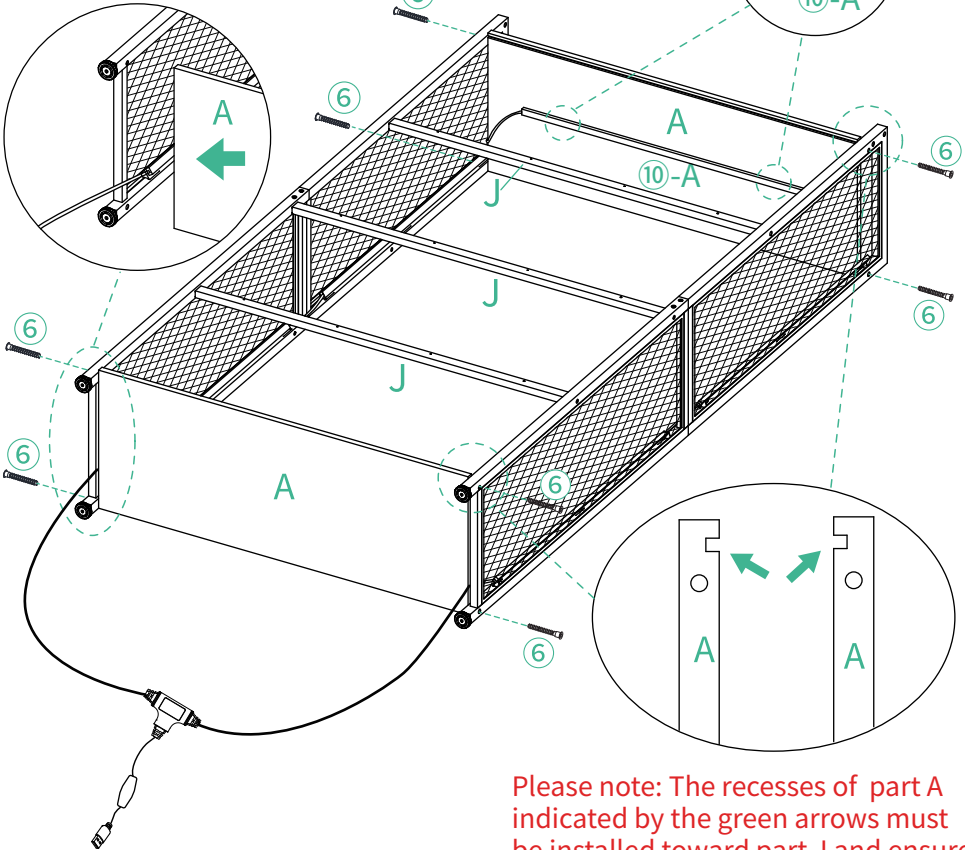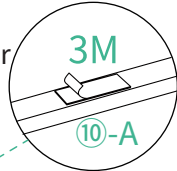

Please note: Before installing part A, thread the USB wire of light strip ⑩-A underneath part A, otherwise it will affect the use of the light strip.


Please note: The recesses of part A indicated by the green arrows must be installed toward part J and ensure that the recesses at both ends are embedded at the same level.

Assembly Instructions

7

Use screws ⑥ to secure part B.







Please note: The side of part B with the hole needs to face outward and 100% tighten all screws in steps 3 and 6.

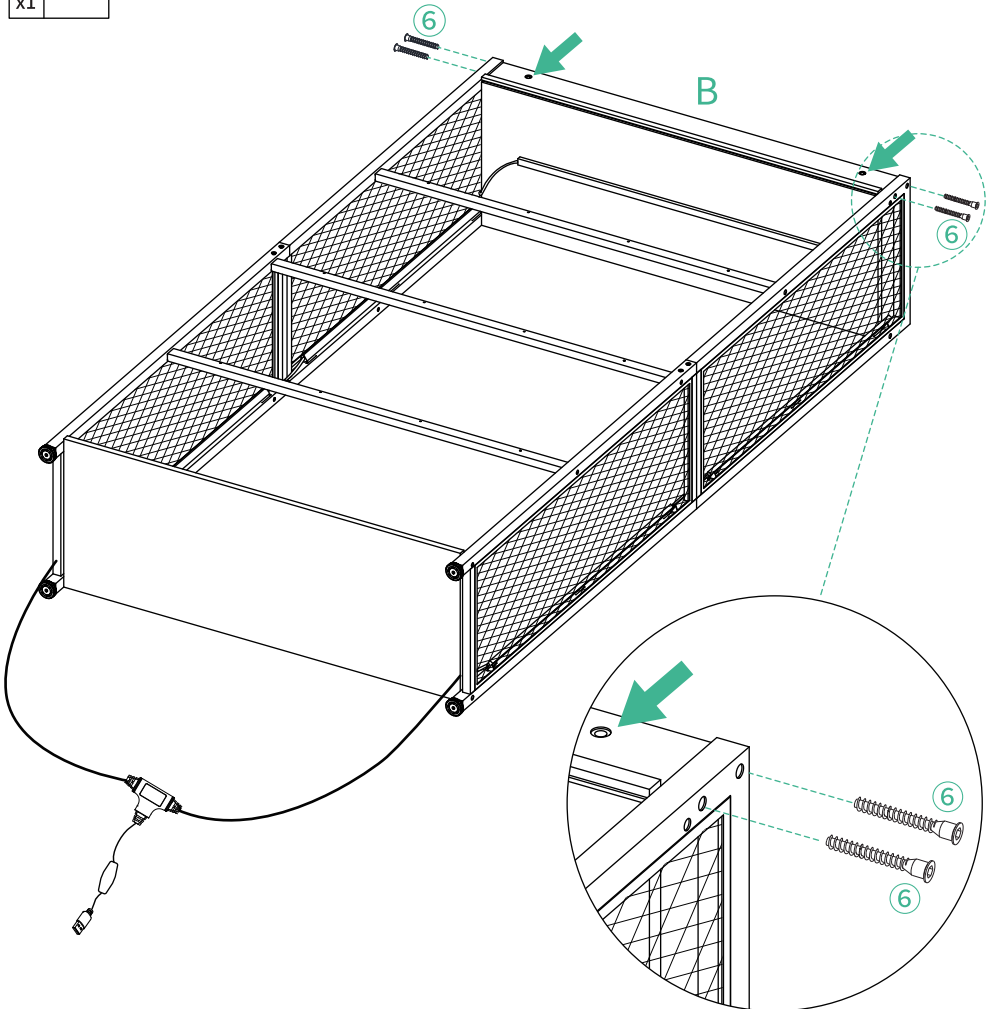

Assembly Instructions

8

  

1. Insert part D of the top layer and part E of the bottom layer into the grooves of part A respectively;
2. Then fix the middle two layers of parts D with screws ⑤ and washers ⑦ to ensure that D and E are stable.

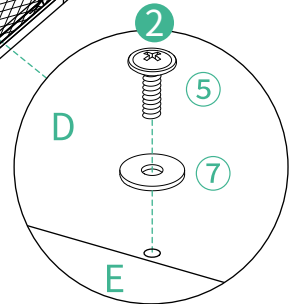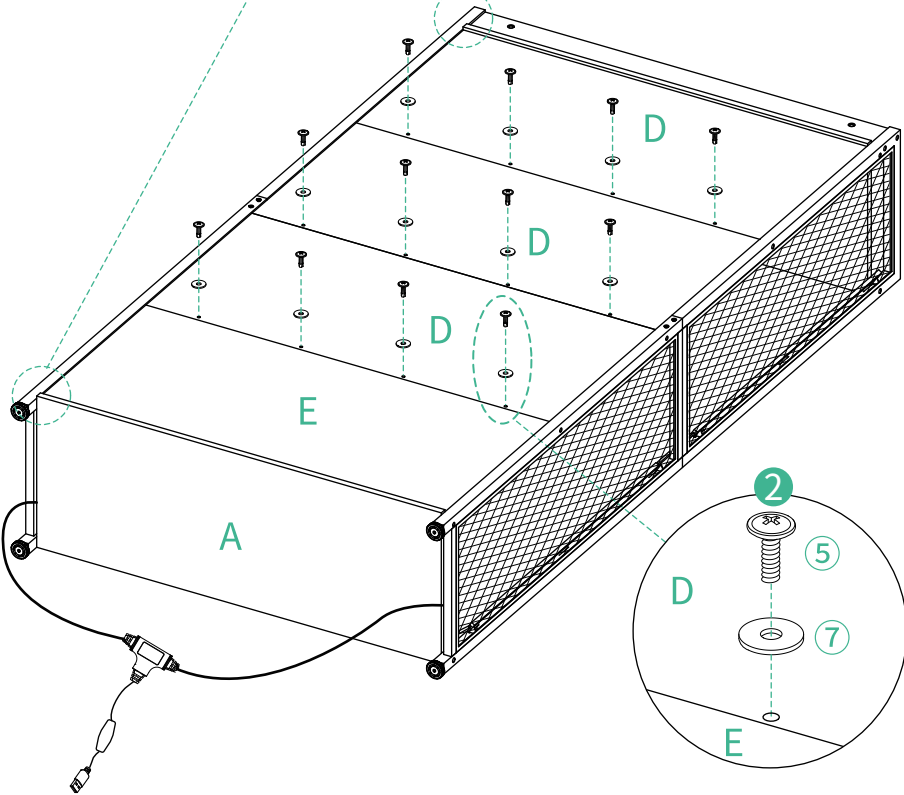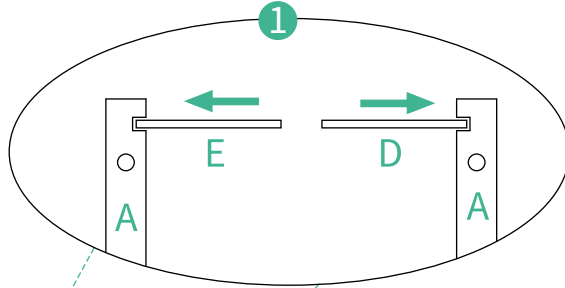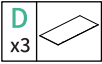

Assembly Instructions

9




 
Secure the light strip ⑩-A with parts ⑨.

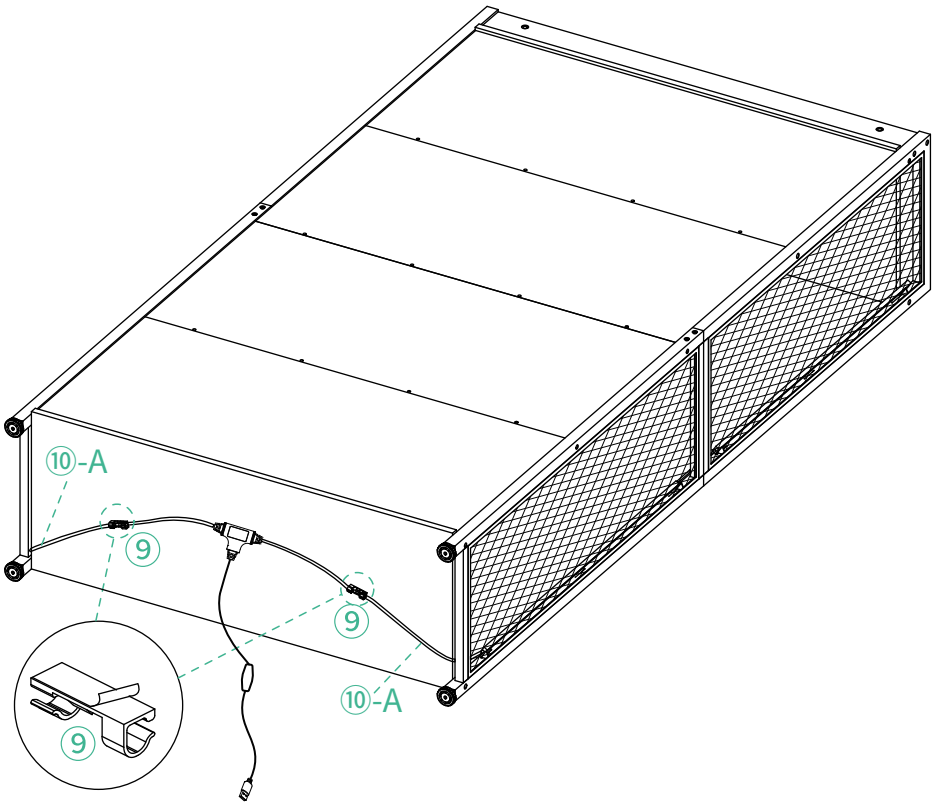

Assembly Instructions

10

 
 
Install parts ⑧ on parts J with screws ④, and make sure that the bolt of parts ⑧ are facing upwards.

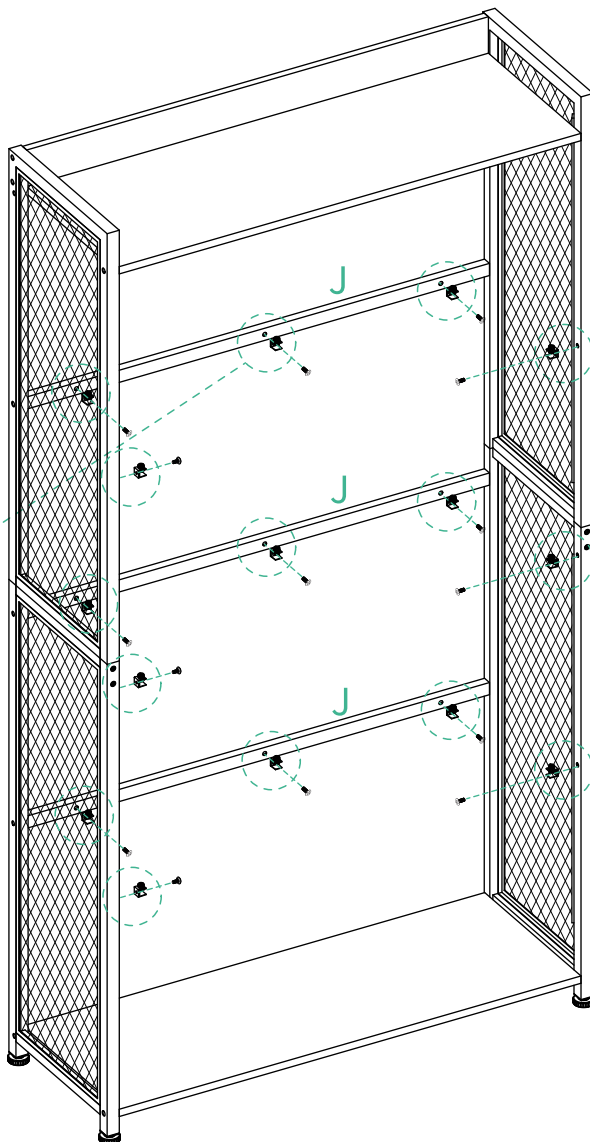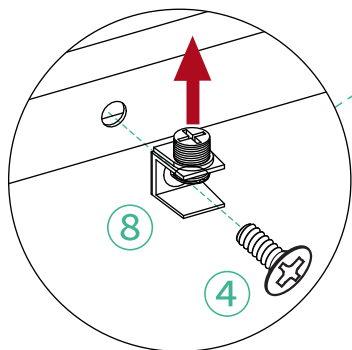



Assembly Instructions

11

 Insert parts C into parts ⑧, and then tighten ⑧. Installation is complete.

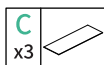




Please note: In the process of installing the glass, if it appears that neither end can be embedded, please wrench one side of the iron mesh frame until the glass fitting can be embedded smoothly.

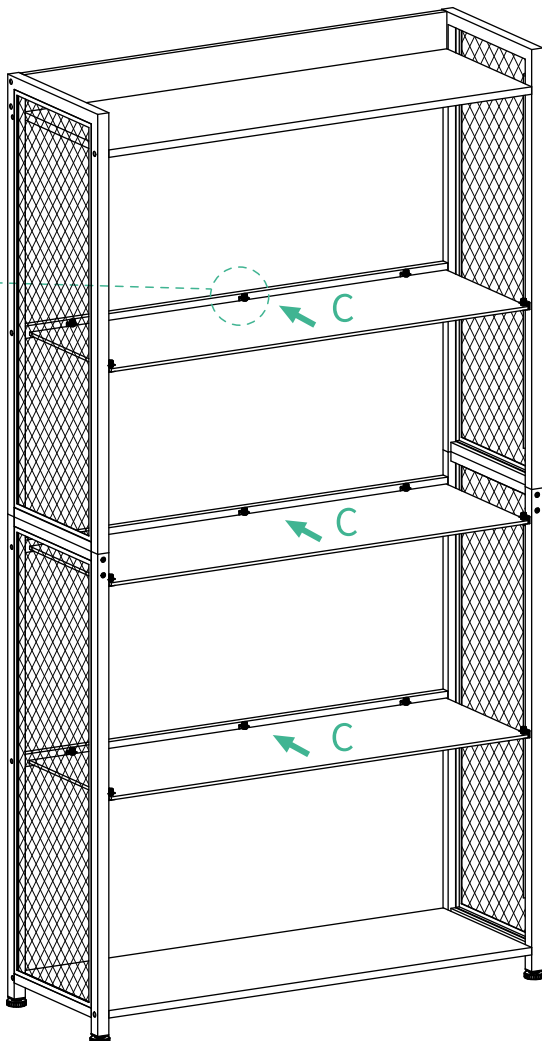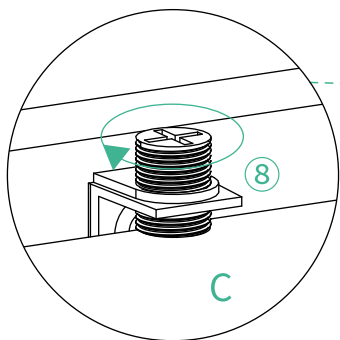






Assembly Instructions

12

   
Install parts ⑬ as shown in the picture and ensure it is tightened to prevent the display case from tipping over if accidentally touched. Installation is complete, powered on, and ready to use.



Installation steps

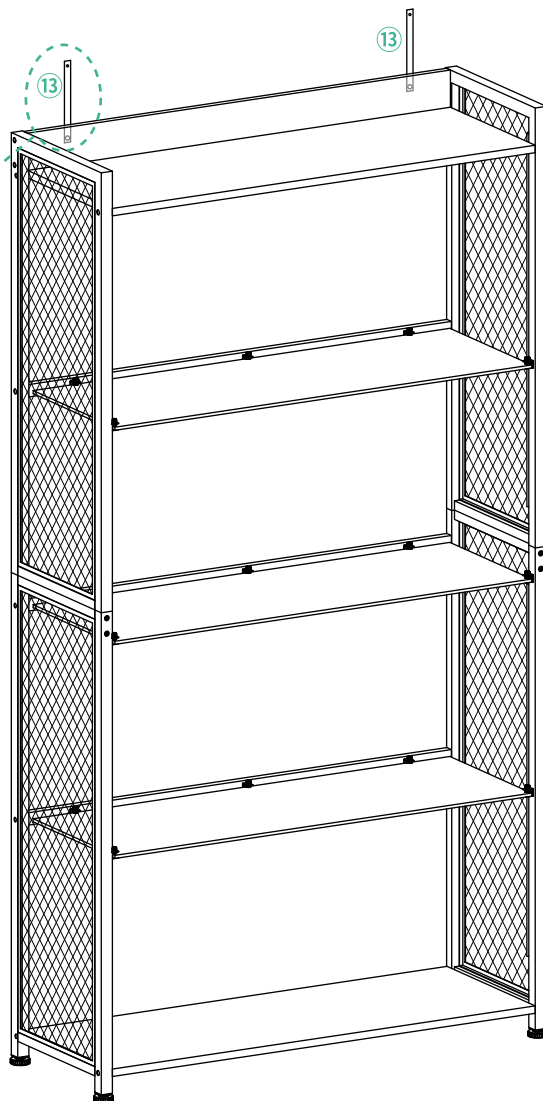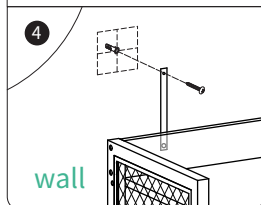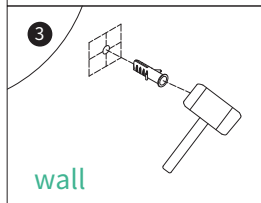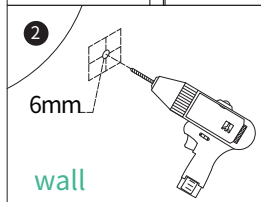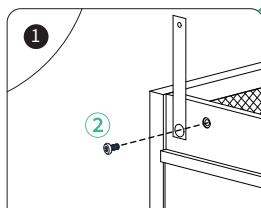

Note: Please install two AAA batteries before use.

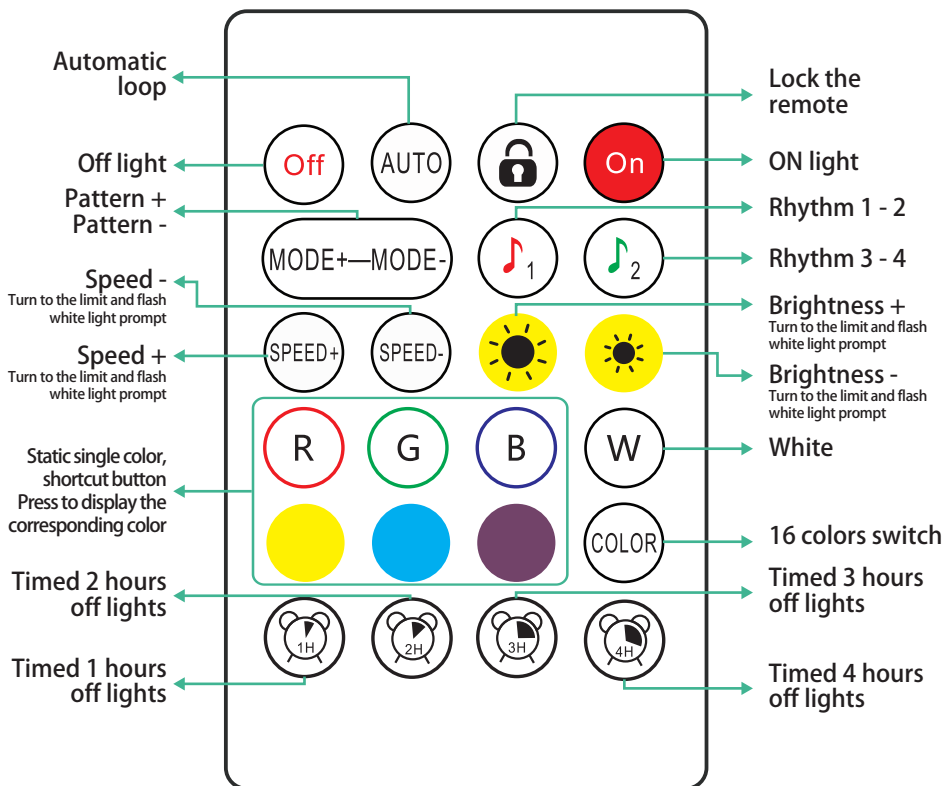

- Rhythm 1-2: Single click to switch to 1-2 rhythm mode
- Rhythm 3-4: Click to cycle through the 3-4 rhythm mode


Code matching function: Within 10 seconds of power on, press the lock button on the remote control, and the light will flash white three times, indicating that the code matching is complete. After the code matching is completed, only the remote control that has passed the code can remotely control the controller. Press the lock button again after the code matching is completed to decode the complex code function.

Welcome to our App! Here are some guidelines to help you better use the App, including features:

First, authorization of the relevant cell phone system permissions is required to use the App functions, and you need to agree to enable the permissions to use the App functions normally.

Attention:

- In the process of installing the App, click “Allowed” in all pop-up windows.
- If you can't use it normally after installing the App, please restart your phone or remove the App and reinstall it.

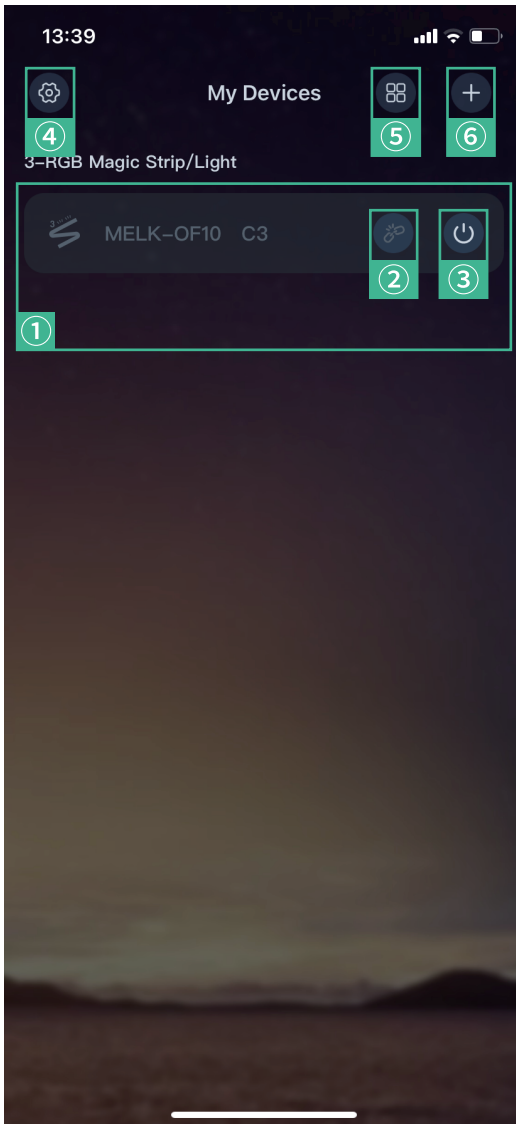

1.My Device

- ① Device list. Display searched devices and highlight when a device is available for connection.
- ② Connection status. Click to connect/ disconnect the device.
- ③ Light switch button. Click to turn on/off the light when it is connected.
- ④ Setup button. Click to jump to the settings page.
- ⑤ Switch the presentation of the device list.
- ⑥ Add the device/ group/ virtual device entry.



30 DAY Return Policy

If you're not completely satisfied with your purchase, please return the merchandise via our Official Customer Support. Unused merchandise can be refunded or exchanged within 30 days of purchase.



1-Year Warranty

We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one. Replacement is free and all shipping costs are covered.



Quick Response within 24 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	Having issue(s) while reading the instruction or completing the assembly.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Table Surface	Board Surface is broken, scratched or lack of somescrew holes.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	The screw holes that on the board and the steel frame don't line up.	1. Please tighten the screws on the board by 70%, do not tighten completely. 2. Adjusting board and steel frame until the screw holes are lined up, then tighten all the screws.
	The desk board is uneven or not tight that has gaps after being assembled.	1. Loosen the screws in the uneven or gap positions; adjust until the desktops are flat and tight, and then tighten the screws. 2. If your problem still can't be solved, please feel free to contact us.
Steel Frame	The steel frame is bent, broken, painted, rusted or damaged.	You can contact us and we will get back to you within 24 hours. Or, you can reach us via after-sales email.
	The table is unstable after being assembled.	1. Check if the screws are tightened. 2. Read throughout the manual, check are there any parts installed incorrectly or missing assembled. 3. If your problem still can't be solved, please feel free to contact us.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.