


Bounce House Manual

⚠ DANGER

Electrocution Risk:




Keep all electrical lines, radios, speakers and other electrical devices away from the Constant Air Inflatable.

Do not place the Constant Air Inflatable near or under overhead electrical lines.

Setup

This product must be set up and supervised by an adult. Use only on grass or soft surfaces. Do not install inflatable devices over concrete, asphalt, packed earth, carpet or any other hard surface. A fall onto a hard surface can result in serious injury to the user. Always make sure the ground is debris-free before setup, and never drag across rough surfaces.

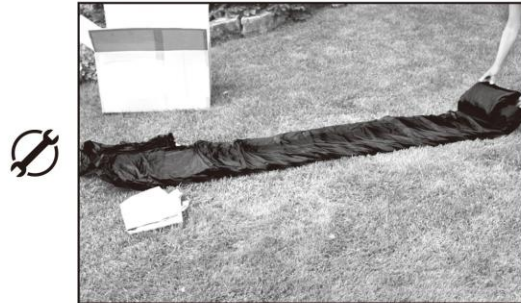


Inflatable is designed to be used **ONLY** on level surfaces. Keep a distance of no less than 1.8m (6ft) in any direction from any structure or obstruction such as fence, garage, house, overhanging branches, laundry lines, or electrical wires. Unroll product on a suitable, dry, soft and debris-free surface. Do not allow any players into the inflatable before it is fully inflated and anchored.



Connect blower(s) to the long inlet, and tie securely. (If your inflatable has an outlet tube, tie this shut before inflating). Use only the blower supplied with your inflatable, or a manufacturer specified replacement blower to avoid damage and potential injury. Anchor the blower to the ground using the stakes provided. Do not use the blower near water or in wet conditions (position the blower so it is away from any over spray, puddles, wet players, etc). If the blower becomes wet, discontinue use until it is dry.



A GFCI device needs to be used (if your blower is not already equipped with one). Do not use an extension cord to power the blower. Keep the blower and power cord away from water. Plug in and start the blower; your unit will inflate within a couple minutes. You must leave the blower running the entire time the inflatable is being used. You will hear air "breathing" out of seams and fabric. This is intentional to allow air to escape.

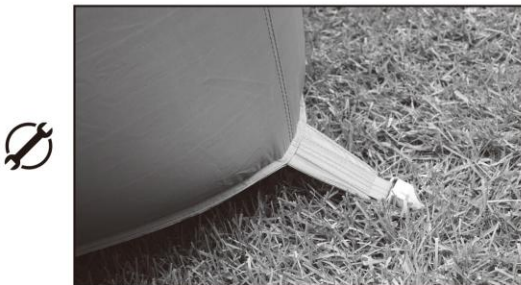

Once fully inflated, anchor the inflatable product to the ground using the stakes provided - your inflatable includes at least 2 anchoring stakes per side, for use in normal soil conditions. For loose soil, or areas that may require additional anchoring, larger stakes may be required (sold in local hardware stores) or optional sand bag achors (sold separately) may be added. Stakes must be installed flush with the ground to avoid tripping hazards. Never use the inflatable without anchoring it to the ground.