

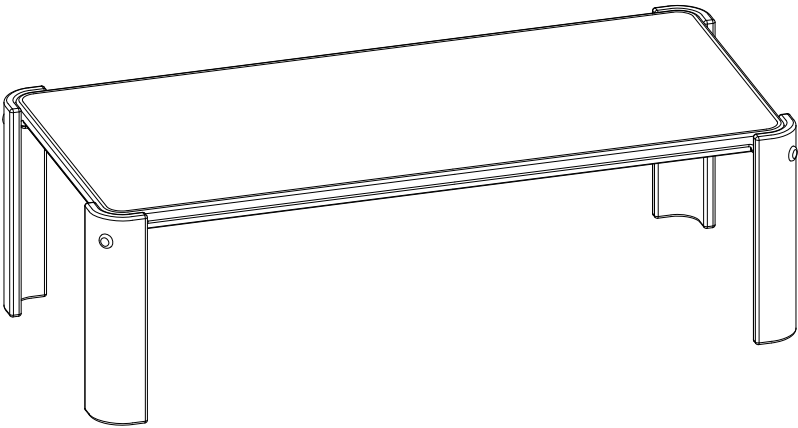


ASSEMBLY INSTRUCTION FOR


Sono Dining Table-98"

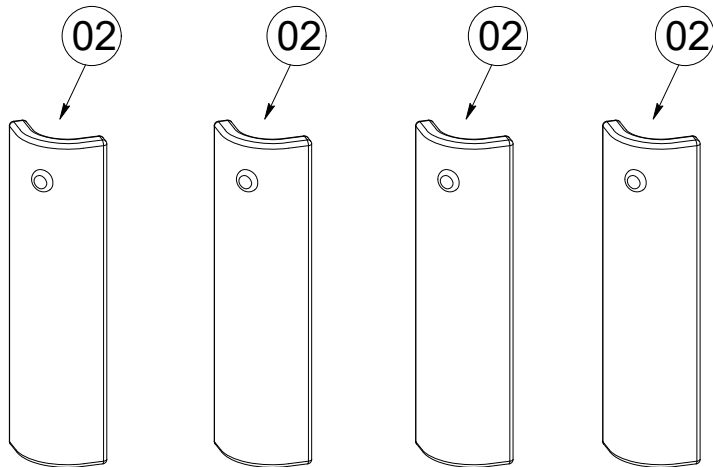


Hardware List				
A		Socket Head Bolt	75XØ8 mm	8
B		Socket Head Bolt	30XØ8 mm	4
C		Allen Key	6mm	1
D		Washer	20XØ8 mm	12

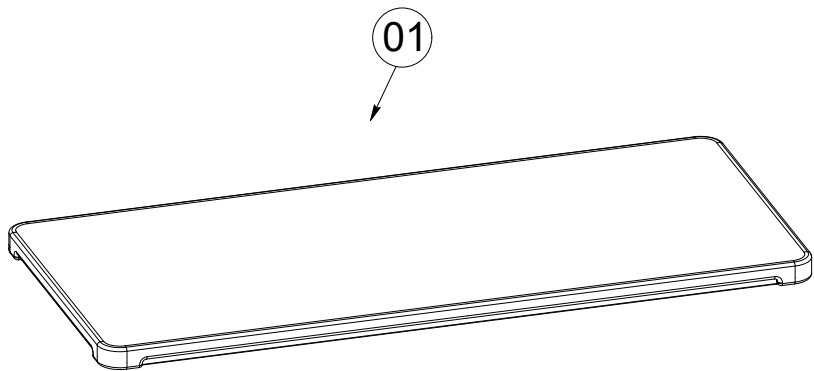


Step 1

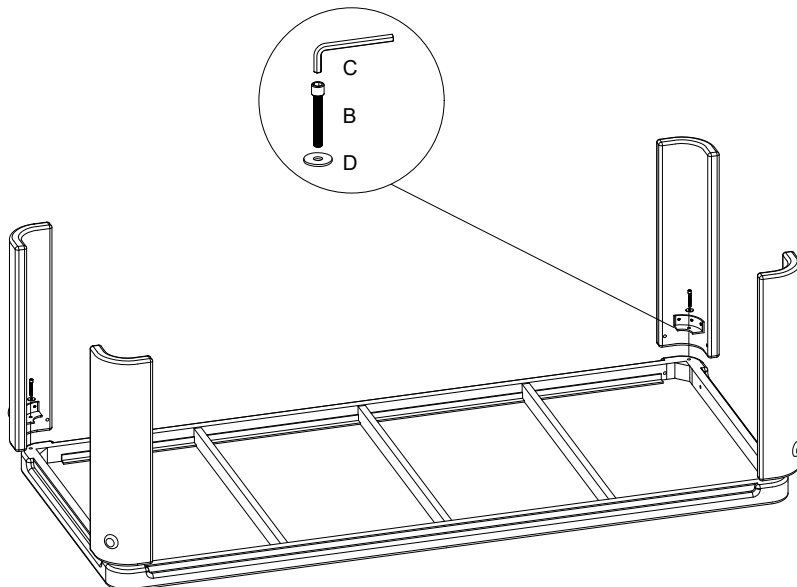

Step 2

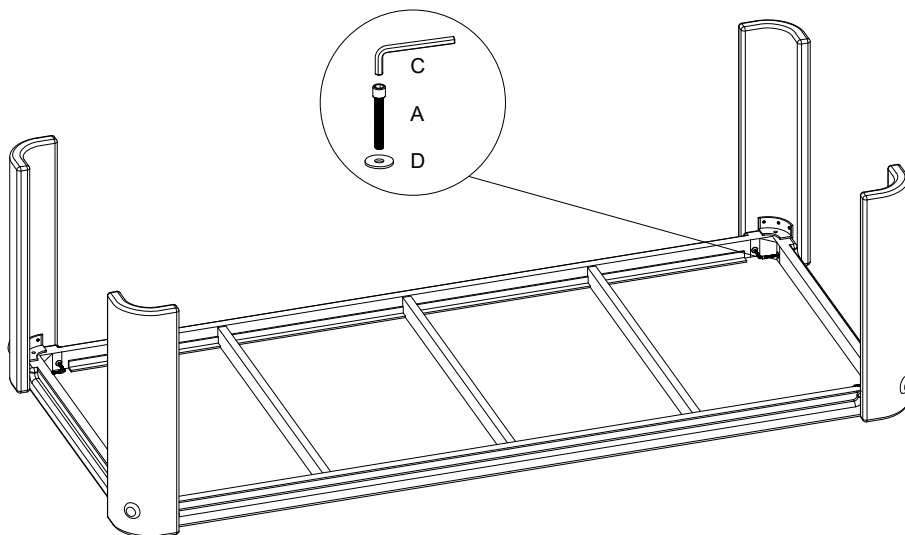

FINISH

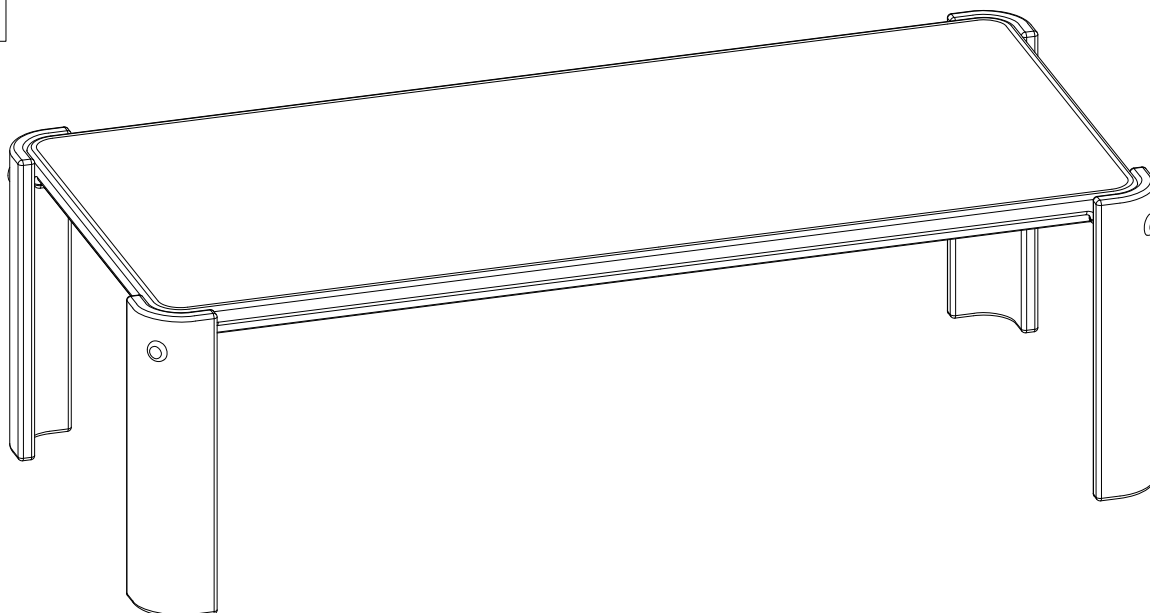

ADJUSTING FLOOR LEVELERS


Sono Dining Table-98"

Step 1: Adjust the Floor Levelers

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

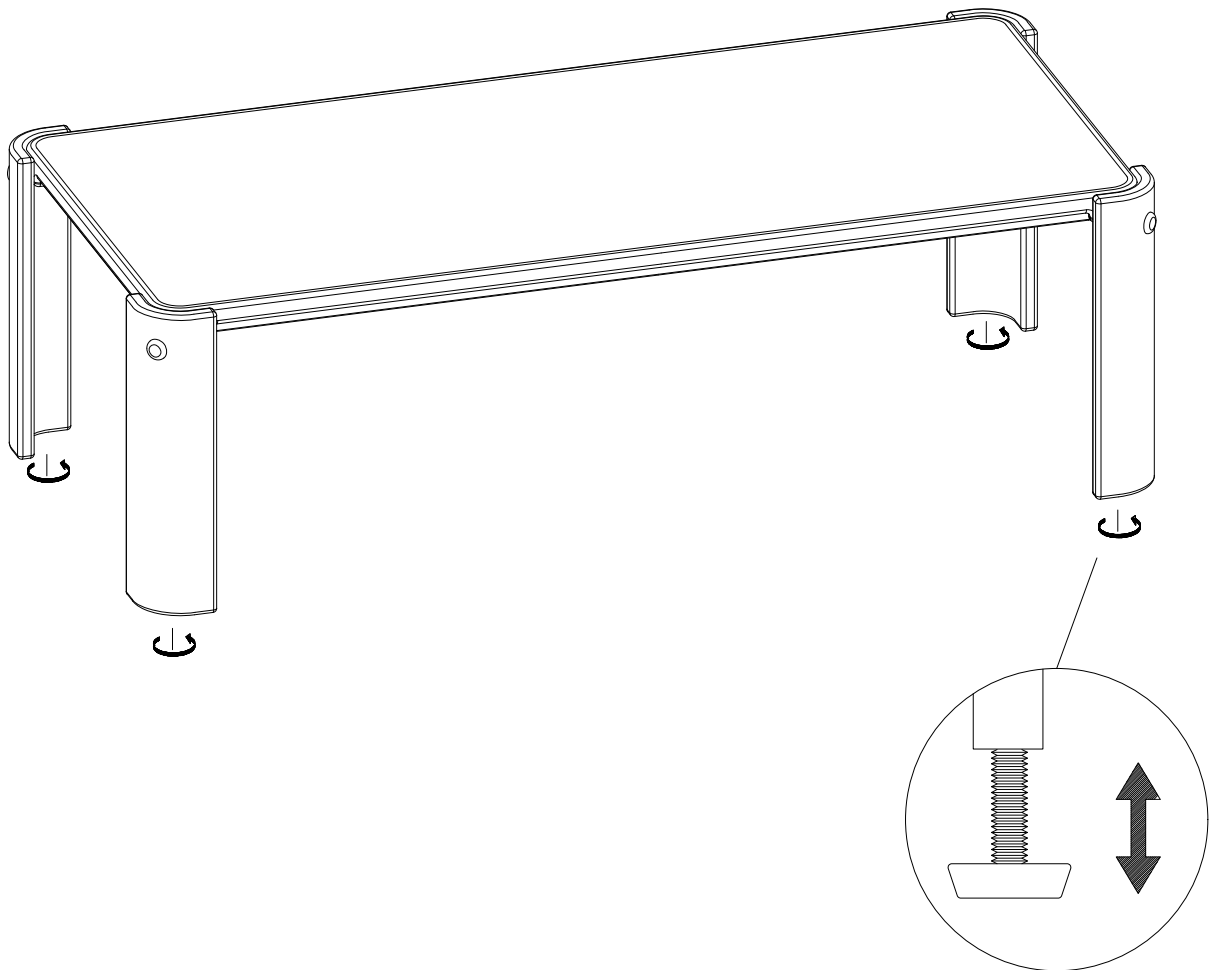

Adjustable Leveler