



Panasonic®



NN-SD78LS

### Specifications


- Dimensions: 21 7/8" W x 11 15/16" H x 19 7/16" D (555 x 304 x 493 mm)
- Weight: 31.0 lbs (14.1 kg)

### How to open/unlock door

With the door closed, press:

1. The [ **Door Open** ] button\*
2. Door release button

NOTE: The locked door will disengage when unit is unplugged.  
\*The "Door Open" button will vary by model.

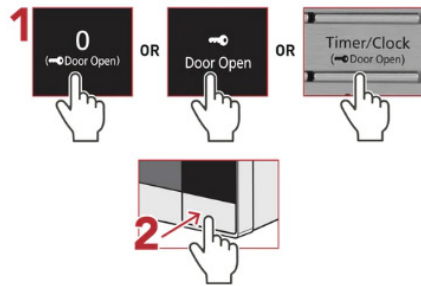

### How to deactivate safety lock

Press:

1. [ **Turbo Defrost** ] or [ **Auto Defrost** ]
2. [ **Timer** ]
3. [ **Popcorn** ]

To re-activate the safety door lock, repeat the above steps.

